

# Lattice Diamond 3.12 Installation Notice for Linux



December 3, 2020

---

## Copyright

Copyright © 2020 Lattice Semiconductor Corporation. All rights reserved. This document may not, in whole or part, be reproduced, modified, distributed, or publicly displayed without prior written consent from Lattice Semiconductor Corporation (“Lattice”).

## Trademarks

All Lattice trademarks are as listed at [www.latticesemi.com/legal](http://www.latticesemi.com/legal). Synopsys and Synplify Pro are trademarks of Synopsys, Inc. Aldec and Active-HDL are trademarks of Aldec, Inc. Modelsim and Questa are trademarks or registered trademarks of Siemens Industry Software Inc. or its subsidiaries in the United States or other countries. All other trademarks are the property of their respective owners.

## Disclaimers

NO WARRANTIES: THE INFORMATION PROVIDED IN THIS DOCUMENT IS “AS IS” WITHOUT ANY EXPRESS OR IMPLIED WARRANTY OF ANY KIND INCLUDING WARRANTIES OF ACCURACY, COMPLETENESS, MERCHANTABILITY, NONINFRINGEMENT OF INTELLECTUAL PROPERTY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL LATTICE OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THE INFORMATION PROVIDED IN THIS DOCUMENT, EVEN IF LATTICE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS PROHIBIT THE EXCLUSION OR LIMITATION OF CERTAIN LIABILITY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Lattice may make changes to these materials, specifications, or information, or to the products described herein, at any time without notice. Lattice makes no commitment to update this documentation. Lattice reserves the right to discontinue any product or service without notice and assumes no obligation to correct any errors contained herein or to advise any user of this document of any correction if such be made. Lattice recommends its customers obtain the latest version of the relevant information to establish that the information being relied upon is current and before ordering any products.

---

## Type Conventions Used in This Document

Convention	Meaning or Use
<b>Bold</b>	Items in the user interface that you select or click. Text that you type into the user interface.
<i>&lt;Italic&gt;</i>	Variables in commands, code syntax, and path names.
<b>Ctrl+L</b>	Press the two keys at the same time.
<code>Courier</code>	Code examples. Messages, reports, and prompts from the software.
<code>...</code>	Omitted material in a line of code.
<code>.</code> <code>.</code> <code>.</code>	Omitted lines in code and report examples.
[ ]	Optional items in syntax descriptions. In bus specifications, the brackets are required.
( )	Grouped items in syntax descriptions.
{ }	Repeatable items in syntax descriptions.
	A choice between items in syntax descriptions.

---

## Installing Diamond Tools 6

System Requirements	6
<i>Memory Requirements</i>	7
Contacting Technical Support	8
Installer Contents	8
Diamond Installed Directory Structure	9
Installing Lattice Diamond on 64-Bit Platforms	10
Diamond 3.12 Release System Library Dependencies	11
<i>Installing 32-bit System Library Packages for ModelSim</i>	13
<i>Using an Automatic Package Installer for RPM Systems</i>	14
Installing Diamond Tools from RPM Without Root Access	15
<i>Red Hat 6 and 7 Users</i>	15
<i>Installing Stand-Alone Reveal Analyzer</i>	15
<i>Installing Stand-Alone Programmer</i>	16
<i>Installing Stand-Alone Power Estimator</i>	17
<i>Installing and Configuring USB Cable and Parallel Cable</i>	18
Licensing Lattice Diamond and Stand-Alone Power Estimator	25
<i>License Management Versions</i>	25
<i>Obtaining a License</i>	25
<i>Editing the License File</i>	26
<i>Starting the License Manager</i>	27
<i>Stopping the License Manager</i>	27
<i>Installing and Running the License Manager on a Remote Server</i>	27
<i>Setting Up a Floating License on Linux</i>	28
<i>Troubleshooting a Floating License</i>	29
Running the Lattice Diamond GUI	29
<i>Using the Examples Directory</i>	30
<i>Finding the Installation History</i>	30
Running Lattice Diamond from the Command Line	31
<i>Running Stand-Alone Tcl Console</i>	31
<i>Running Using CSH or Bash Interpreters</i>	31
Running Synplify Pro for Lattice	31
Running Stand-Alone Reveal Analyzer	32
Running Stand-Alone Programmer	32
Running Stand-Alone Deployment Tool	32
Running Stand-Alone Debugger	32
Running Stand-Alone Programming File Utility	32
Running Stand-Alone Model 300 Programmer	32
Running Stand-Alone Power Estimator	33
Running Multiple Versions of Lattice Software	33
Updating Lattice Diamond	33
<i>Running the UPDATE Tool</i>	33
<i>Changing the Network Setting</i>	34
<i>Downloading and Installing Software Updates</i>	35

## Installing LatticeMico Development Tools 36

System and Software Requirements	36
<i>System Requirements</i>	36
<i>Software Requirements</i>	36

---

Additional Notes for Linux	37
Installing LatticeMico Within Diamond Software	37
Installing LatticeMico as a Stand-Alone Tool	38
LatticeMico System Library Dependencies	39
<i>Installing System Library Packages Manually on Red Hat 6 64-bit Operating Systems</i>	41
<i>Using an Automatic Package Installer to Install LatticeMico RPM Package</i>	43
Running LatticeMico System	43

## Installing Diamond Tools

This document provides installation instructions for the Lattice Diamond<sup>®</sup> Linux software.

Diamond supports ECP5UM<sup>™</sup>, ECP5UM5G<sup>™</sup>, LatticeEC<sup>™</sup>, LatticeECP<sup>™</sup>, LatticeECP2<sup>™</sup>, LatticeECP2M<sup>™</sup>, LatticeECP2S<sup>™</sup>, LatticeECP2MS<sup>™</sup>, LatticeECP3<sup>™</sup>, LatticeSC<sup>™</sup>, LatticeSCM<sup>™</sup>, LatticeXP<sup>™</sup>, LatticeXP2<sup>™</sup>, LIFMD (CrossLink<sup>™</sup>), LIFMDF (CrossLinkPlus<sup>™</sup>), LFMNX (Mach-NX<sup>™</sup>), MachXO<sup>™</sup>, MachXO2<sup>™</sup>, MachXO3D<sup>™</sup>, MachXO3L<sup>™</sup>, MachXO3LF<sup>™</sup>, Platform Manager<sup>™</sup>, and Platform Manager 2 designs.

### Note

---

The available devices vary depending on the type of license.

---

## System Requirements

The following are the basic system requirements for Lattice Diamond on Linux:

- ▶ Intel Pentium or Pentium-compatible PC, or AMD Opteron system support:  
For Programmer:
  - ▶ The Lattice Diamond 64-bit release contains a 64-bit driver to support the 64-bit system.
- ▶ Red Hat Enterprise Linux version 6.9 or 7.4 operating system.  
The host operating system can only be 64-bit.
  - ▶ The Lattice Diamond software has 64-bit specific application programs to run on Red Hat 64 platforms.

- ▶ The Lattice Diamond software is available in 64-bit versions. The 64-bit version of Lattice Diamond can only be installed on 64-bit systems.
- ▶ Approximately 5.75 GB free disk space
- ▶ Network adapter and network connectivity

#### Note

A floating license requires access to the license server, so both a network adapter and connectivity are required.

- ▶ 1024 x 768 graphics display
- ▶ JavaScript-capable Web browser
- ▶ Adobe Acrobat Reader, or equivalent PDF reader

## Memory Requirements

Table 1 lists the minimum memory requirements and recommended memory for all the Lattice Semiconductor FPGA families.

**Table 1: Recommended Memory for Linux**

Device	Size	64-Bit Operating Systems	
		Minimum	Recommended
ECP5U/UM/UM5G	All	4 GB	6 GB
LatticeEC, LatticeECP	Up to 20K LUT	1 GB	1.5 GB
	Up to 50K LUT	1.5 GB	2 GB
LatticeECP2/M	Up to 20K LUT	1.5 GB	2 GB
	Up to 50K LUT	2 GB	3 GB
	Up to 100K LUT	2 GB	4 GB
LatticeECP3	Up to 95K LUT	4 GB	6 GB
	Up to 150K LUT	6 GB	8 GB
LatticeSC/M	Up to 40K LUT	1.5 GB	2 GB
	Up to 115K LUT	2 GB	5 GB
LatticeXP, LatticeXP2	Up to 20K LUT	1 GB	1.5 GB
	Up to 50K LUT	1.5 GB	2 GB
LIFMD (CrossLink), LIFMDF (CrossLinkPlus)	All	512 MB	1 GB

**Table 1: Recommended Memory for Linux (Continued)**

Device	Size	64-Bit Operating Systems	
		Minimum	Recommended
MachXO, MachXO2, MachXO3D, MachXO3L, MachXO3LF, Mach-NX	All	512 MB	1 GB
Platform Manager, Platform Manager 2	All	512 MB	1 GB

## Contacting Technical Support

**FAQs** The first place to look. The [Answer Database](#) provides solutions to questions that many of our customers have already asked. Lattice Applications Engineers are continuously adding to the Database.

To access the Answer Database, go to [www.latticesemi.com](http://www.latticesemi.com) > **Support** > **Answer Database**.

**Telephone Support Hotline** Receive direct technical support for all Lattice products by calling Lattice Applications from 5:30 a.m. to 6 p.m. Pacific Time.

- ▶ For USA & Canada: 1-800-LATTICE (528-8423)
- ▶ For other locations: +1 503 268 8001

In Asia, call Lattice Applications from 8:30 a.m. to 5:30 p.m. Beijing Time (CST), +0800 UTC. Chinese and English language only.

- ▶ For Asia: +86 21 52989090

### E-mail Support

- ▶ [techsupport@latticesemi.com](mailto:techsupport@latticesemi.com)

**For Local Support** Contact your nearest [Lattice Sales Office](#).

## Installer Contents

The Lattice Diamond RPM installation packages are available for download from <http://www.latticesemi.com/latticediamond>. Click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account. Follow the product download instructions and uncompress the software.

The following describes the contents of the Lattice Diamond installer.

- ▶ The Lattice Diamond, Reveal, Programmer, and Power Estimator Linux installer rpm files have the following convention for 64-bit platforms.
  - ▶ `[product]_[version]-x86_64-linux.rpm` - 64-bit platform



- ▶ The Lattice Diamond, Reveal, Programmer, and Power Estimator rpm file names are as follows:
  - ▶ diamond\_3\_12-base-240-2-x86\_64-linux.rpm
  - ▶ powerestimator\_3\_12-240-2-x86\_64-linux.rpm
  - ▶ programmer\_3\_12-240-2-x86\_64-linux.rpm
  - ▶ reveal\_3\_12-240-2-x86\_64-linux.rpm
- ▶ The Lattice Diamond “base” installation file (.rpm) installs Lattice Diamond and Synplify Pro for Lattice. See “Diamond 3.12 Release System Library Dependencies” on page 11 for more information.
- ▶ The Reveal installation file (.rpm) installs the stand-alone Reveal Analyzer. It is not necessary to install this package if the Diamond Base RPM is installed. See “Installing Stand-Alone Reveal Analyzer” on page 15 for more information.
- ▶ The Programmer installation file (.rpm) installs the stand-alone Diamond Programmer. It is not necessary to install this package if the Diamond Base RPM is installed. See “Installing Stand-Alone Programmer” on page 16 for more information.
- ▶ The Power Estimator (.rpm) file installs the stand-alone Diamond Power Estimator. It is not necessary to install this package if the Diamond Base RPM is installed. See “Installing Stand-Alone Power Estimator” on page 17 for more information.
- ▶ The LatticeMico installation file (.rpm) installs LatticeMico Development Tools and GNU-based Compiler Tools. See “Installing LatticeMico Development Tools” on page 36 for more information.
- ▶ The Installation Notice contains installation and licensing information.

## Diamond Installed Directory Structure

Table 2 shows the Lattice Diamond software directory structure after installation:

**Table 2: The Diamond Software Directory Structure**

File or Directory	Description
bin/lin64/	This directory contains files for running the Lattice Diamond 64-bit GUI.
cae_library/	This directory contains synthesis header libraries for Synplify Pro in both Verilog and VHDL formats. It also contains the libraries for interface kits (ispLSI <sup>®</sup> design and simulation libraries).
data/	This directory contains files for the Lattice Diamond software.
docs/	This directory contains Lattice Diamond documentation, including manuals, tutorials, and the online Help.

**Table 2: The Diamond Software Directory Structure (Continued)**

File or Directory	Description
embedded_source/	This directory contains source code files for the JTAG Full VME, JTAG Slim VME, Slave SPI, I2C, and sysCONFIG embedded systems for Lattice FPGA devices.
examples/	This directory contains Lattice design examples.
ispfpga/	This directory contains files for the Lattice Diamond software.
license/	This directory contains the license agreement.
modeltech/	This directory contains files for the ModelSim for the Lattice Diamond software.
module/	This directory contains Lattice module files.
synpbase/	This directory contains files for the Synplify Pro for Lattice software.
tcltk/	This directory contains tcl/tk related files.

## Installing Lattice Diamond on 64-Bit Platforms

Before installing the Lattice Diamond software, download the installation files from the Lattice Semiconductor Web site. For more information on how to download the Diamond software, go to <http://www.latticesemi.com/latticediamond>. Click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account. Follow the product download instructions and uncompress the software.

### Note

Platform Manager 2 devices require the Diamond Platform Designer tool. The LatticeMico Development Tools must be installed along with Diamond in order to use Platform Designer. Refer to “Installing LatticeMico Development Tools” on page 36.

RPM installation files are provided to simplify the installation process. The RPM file has a companion MD5 checksum file. The MD5 file permits you to validate the integrity of the RPM file.

### Note

- ▶ You need root privilege to install an RPM package.
- ▶ In the Diamond installation, blank space characters are not allowed in the installation directory path name.

Lattice Diamond for 64-bit systems is installed with the **diamond\_3\_12-base-240-2-x86\_64-linux.rpm** installation file. The file installs all Lattice Semiconductor FPGA devices on your 64-bit system. It also

installs the Synplify Pro for Lattice software. The following section guides you through the installation procedure step by step.

### To install the Diamond software on 64-bit systems:

1. Verify the integrity of the first RPM file. Make sure the companion MD5 file is located in the same directory as the RPM file.

```
% cd <directory_with_RPM>
% rpm -K diamond_3_12-base-240-2-x86_64-linux.rpm
```

2. Install the Diamond software. The default installation directory for Diamond is /usr/local/diamond. You have the option of changing the installation directory.

- ▶ To install to the default location (/usr/local/diamond):

```
% sudo rpm -Uvh <path_to_package>/diamond_3_12-base-240-2-x86_64-linux.rpm
```

- ▶ To override the default location:

```
% sudo rpm -Uvh --prefix <install_path>
<path_to_package>/diamond_3_12-base-240-2-x86_64-
linux.rpm
```

---

#### Note

The `--prefix` can not be used to install directly to Network Attached Storage. The `--prefix` must point to a location writable by the `sudo` command.

If networked installation is desired, install Diamond locally, and then transfer the file structure to your Network Attached Storage system.

---

---

#### Note

The RPM installation process for Diamond verifies the Linux operating system has all of the required support libraries installed. If library files required for running Diamond are not installed on the system Diamond will not be installed.

If you want to force the installation to continue, you can use “`--nodeps`” on the `rpm` command to ignore the dependency information. Diamond may not function correctly if the “`--nodeps`” switch is used to force installation of Diamond to proceed.

---

## Diamond 3.12 Release System Library Dependencies

The Diamond RPM package depends on a set of packages that provide 64-bit system libraries. Some of these packages may depend on lower level packages, the indirect dependencies. To fulfill this dependency, these packages must be installed before Diamond 3.12 can be installed. Check which ones are already present on your system by entering the command `rpm -qa | grep <package name>` and confirming that the named package appears in the results.

The following packages are the packages `diamond_3_12-base-240-2-x86_64-linux.rpm` depends on. This list does not include packages that are included with Diamond 3.12. Indirect dependencies are listed with indented levels.

- ▶ glibc
  - ▶ nss-softokn-freebl
- ▶ libjpeg
- ▶ libtiff
  - ▶ zlib
- ▶ glib2
  - ▶ libseltlinux
  - ▶ gamin
- ▶ libusb
- ▶ freetype
- ▶ fontconfig
  - ▶ expat
- ▶ libX11
  - ▶ libxcb
    - ▶ libXau
- ▶ libICE
  - ▶ libSM
- ▶ libuuid
- ▶ libXt
- ▶ libXext
- ▶ libXrender
- ▶ libXi
- ▶ libXft

Installing the packages one by one requires the parent package to be installed last. The package deepest in the tree must be installed first. For example, `libICE` package depends on `libSM`. The `libSM` package must be installed prior to `libICE`.

Two cyclic dependencies are found with Diamond, `glibc` and `nss-softokn-freebl`, and `glib2` and `gamin`. Installing these packages requires the two RPM's to be specified on the same `rpm` command line.

### Note

---

User needs to make sure `libusb-0.1.so.4` and `libXss.so.1` are installed in Red Hat 7.4, and they are default installed in Red Hat 6.9 or earlier.

---

# Installing 32-bit System Library Packages for ModelSim

These 32-bit system libraries are required to run ModelSim.

## 32-bit system libraries:

```

bzip2
fontconfig
  |---- expat
freetype
ncurses
nss-softokn-freebl
zlib
libXft
libXrender
libpng
libuuid
libX11
  |---- libxcb
          |----- libXau
libXext

```

## Manually install system library packages on Red Hat 7.4 64-bit Operating System:

```

bzip2-libs-1.0.6-13.el7.i686.rpm
expat-2.1.0-11.el7.i686.rpm
fontconfig-2.13.0-4.3.el7.i686.rpm
freetype-2.8-14.el7.i686.rpm
ncurses-libs-5.9-14.20130511.el7_4.i686.rpm
nss-softokn-freebl-3.44.0-8.el7_7.i686.rpm
zlib-1.2.7-18.el7.i686.rpm
libXft-2.3.2-2.el7.i686.rpm
libXrender-0.9.10-1.el7.i686.rpm
libpng-1.5.13-7.el7_2.i686.rpm
libuuid-2.23.2-63.el7.i686.rpm
libX11-1.6.7-2.el7.i686.rpm
libXau-1.0.8-2.1.el7.i686.rpm
libxcb-1.13-1.el7.i686.rpm
libXext-1.3.3-3.el7.i686.rpm

```

## Manually install system library packages on Red Hat 6.9 64-bit Operating System:

```

fontconfig-2.8.0-5.el6.i686.rpm
freetype-2.3.11-17.el6.i686.rpm
libXft-2.3.2-1.el6.i686.rpm
ncurses-libs-5.7-4.20090207.el6.i686.rpm

```

## Using an Automatic Package Installer for RPM Systems

If you have an officially licensed Red Hat release and register at Red Hat support site with an RHN (Red Hat Network) serial number, you can use the YUM installation mechanism.

YUM is an automatic updater and package installer/remover for rpm systems. It automatically computes dependencies and determines the order of installation for the dependent packages. It makes it easier to install necessary support libraries.

If you register with an RHN, Red Hat automatically sets up the YUM repository information on your machine. You only need to run the following command, assuming root privileges, to install diamond\_3\_12-base without going through the manual rpm installation process described in section 3.

```
# yum install diamond_3_12-base-240-2-x86_64-linux.rpm
```

If you do not register your operating system installation with Red Hat RHN, you still can setup a locally mounted DVD as a YUM repository. You must perform the following steps.

1. Create a yum repository file at /etc/yum.repos.d/iso.repo. Note that the baseurl must reflect your actual DVD mounted path.

```
% My-ISO-Repository]
% baseurl="file:///media/RHEL_6.0 x86_64 Disc 1"
% enabled=1
% gpgcheck=0
% gpgkey="file:///media/RHEL_6.0 x86_64 Disc 1"
```

2. Copy the "media.repo" in DVD into /etc/yum.repos.d/ package\_media.repo. Note that "media.repo" on the DVD may differ depending on release version. For example, for CentOS it is CentOS-Base.repo.

3. Import the GPG key files associated with the release package files.

```
% cd /media/RHEL_6.2\ x86_64\ Disc
% rpm --import *GPG*
```

4. Change the value of etc/yum.conf as follows:

```
% Change gpgcheck=1 to gpgcheck=0
```

5. Restart computer.

You can consult the following two web sites for further information about YUM.

<http://yum.baseurl.org/>

[http://docs.redhat.com/docs/en-US/Red\\_Hat\\_Enterprise\\_Linux/6/html/Deployment\\_Guide/ch-yum.html](http://docs.redhat.com/docs/en-US/Red_Hat_Enterprise_Linux/6/html/Deployment_Guide/ch-yum.html)

# Installing Diamond Tools from RPM Without Root Access

The Diamond tools can be installed from RPM without requiring root access. One application of this is installing directly to a remote filesystem, allowing one installation to serve multiple Linux client machines. In order to install directly to the network the RPM installation must be performed without elevated permissions. Use the following procedures to install all of the Diamond tools to a remote filesystem.

The commands shown should be run from a system that is similar/identical to the one to be used by the Diamond users.

## Red Hat 6 and 7 Users

```
% cd ~
% mkdir -p myrpmdb/var/lock/rpm
```

Create a temporary RPM database

```
% /usr/bin/rpmbuild --initdb --root $HOME/myrpmdb --dbpath $HOME/
myrpmdb
```

Check to see if the Linux installation is missing any support libraries.

```
% /bin/rpm --test -Uvh <diamond_package>.rpm
```

Install the software

```
% /bin/rpm --dbpath $HOME/myrpmdb --nodeps --prefix
<path_to_remote_filesystem> -Uvh <diamond_package>.rpm
```

Once all packages are installed the temporary RPM database can be removed.

### Note

---

This process can also be used for local filesystem installations by a non-privileged user.

---

## Installing Stand-Alone Reveal Analyzer

Reveal Analyzer is included in the Diamond installation. If you want to use the tool without installing Lattice Diamond, use one of the following files to install the stand-alone Reveal Analyzer:

▶ **reveal\_3\_12-240-2-x86\_64-linux.rpm** for 64-bit systems.

**To install the stand-alone Reveal Analyzer:**

1. Verify the integrity of the RPM file. Make sure the companion MD5 file is located in the same directory as the RPM file.

```
% cd <directory_with_RPM>
% rpm -K reveal_3_12-240-2-x86_64-linux.rpm
```

2. Install the Reveal Analyzer software. The default installation directory for Reveal Analyzer is **/usr/local/reveal**. You have the option of changing the installation directory.

- ▶ To install to the default location (**/usr/local/reveal**):

```
% sudo rpm -Uvh <path_to_package>/reveal_3_12-240-2-x86_64-linux.rpm
```

- ▶ To override the default location:

```
% sudo rpm -Uvh --prefix <install_path>
<path_to_package>/reveal_3_12-240-2-x86_64-linux.rpm
```

---

**Note**

The `--prefix` can not be used to install directly to Network Attached Storage. The `--prefix` must point to a location writable by the `sudo` command.

If networked installation is desired, install Diamond locally, and then transfer the file structure to your Network Attached Storage system.

---

## Installing Stand-Alone Programmer

Programmer is included in the Diamond installation and consists of five tools:

- ▶ Programmer
- ▶ Deployment Tool
- ▶ Download Debugger
- ▶ Programming File Utility
- ▶ Model 300 Programmer

If you want to use Programmer, Deployment Tool, Download Debugger, Programming File Utility, or Model 300 Programmer without installing Lattice Diamond, use one of the following files to install the stand-alone Programmer:

- ▶ **programmer\_3\_12-240-2-x86\_64-linux .rpm** for 64-bit systems.

**To install the stand-alone Programmer:**

1. Verify the integrity of the RPM file.

```
% cd <directory_with_RPM>
% rpm -K programmer_3_12-240-2-x86_64-linux.rpm
```

2. Install the Programmer software. The default installation directory for Programmer is **/usr/local/programmer**. You have the option of changing the installation directory.

- ▶ To install to the default location (**/usr/local/programmer**):

```
% sudo rpm -Uvh <path_to_package>/programmer_3_12-240-2-x86_64-linux.rpm
```



- ▶ To override the default location:

```
% sudo rpm -Uvh --prefix <install_path>
<path_to_package>/rogrammar_3_12-240-2-x86_64-linux.rpm
```

---

**Note**

The `--prefix` can not be used to install directly to Network Attached Storage. The `--prefix` must point to a location writable by the `sudo` command.

If networked installation is desired, install Diamond locally, and then transfer the file structure to your Network Attached Storage system.

---

## Installing Stand-Alone Power Estimator

Power Estimator is included in the Diamond installation. If you want to use the tool without installing Lattice Diamond, use one of the following files to install the stand-alone Power Estimator:

- ▶ **powerestimator\_3\_12-240-2-x86\_64-linux.rpm.**

Stand-alone Power Estimator requires a license. Refer to “Licensing Lattice Diamond and Stand-Alone Power Estimator” on page 25.

**To install the stand-alone Power Estimator:**

1. Verify the integrity of the RPM file.

```
% cd <directory_with_RPM>
% rpm -K powerestimator_3_12-240-2-x86_64-linux.rpm
```

2. Install the Power Estimator software. The default installation directory for Power Estimator is **/usr/local/powerestimator**. You have the option of changing the installation directory.

- ▶ To install to the default location (`/usr/local/powerestimator`):

```
% sudo rpm -Uvh <path_to_package>/powerestimator_3_12-
240-2-x86_64-linux.rpm
```

- ▶ To override the default location:

```
% sudo rpm -Uvh --prefix <install_path>
<path_to_package>/powerestimator_3_12-240-2-x86_64-
linux.rpm
```

---

**Note**

The `--prefix` can not be used to install directly to Network Attached Storage. The `--prefix` must point to a location writable by the `sudo` command.

If networked installation is desired, install Diamond locally, and then transfer the file structure to your Network Attached Storage system.

---

# Installing and Configuring USB Cable and Parallel Cable

This section provides information on USB cable and parallel cable installation and configuration. These instructions are applicable for 64-bit Linux systems.

## Parallel Programming Cable Configuration

Before using the Lattice parallel programming cable, the computer's parallel port must be enabled and have the correct read/write permission. Contact the system administrator if the parallel port is not enabled or does not have the correct read/write permission.

You can check the current permissions of the parallel port by navigating to the `/dev` directory and doing a lookup on the port, as follows

```
% cd /dev ls -l parport0
```

There are two main ways to give read/write permission to the parallel port. The first is to give read/write permission to the parallel port to anyone that has access to that machine. The second is more secure, where only selected individuals will have read/write permission to the parallel port that has access to that machine. Below are the descriptions on how to setup parallel port zero to have read/write permission.

### Giving Parallel Port Zero Read/Write Permission to All Users

1. Log in as root.
2. Change directory to the `/dev` directory as follows:  

```
% cd /dev <return>
```
3. Give read/write permission to parallel port zero (`parport0`) as follows:  

```
% chmod 666 parport0 <return>
```

### Giving Parallel Port Zero Read/Write Permission to Selected Individuals

There are two files to change on the machine to give selected individuals read/write permission to parallel port zero. Both files are located in the `/etc` directory. The two files are "group" and "nsswitch.conf".

1. Log in as root.
2. Change directory to the `/dev` directory as follows:  

```
% cd /dev <return>
```
3. Give read/write permission to parallel port zero (`parport0`) to owner and group as follows:  

```
% chmod 666 parport0 <return>
```
4. Change directory to the `/etc` directory as follows:  

```
% cd /etc <return>
```
5. Using your favorite text editor, edit the file "group" as follows:

Add the login name for all the users you want to give read/write permission for parallel port zero by adding the login names to the “lp:x:7:” line. This line may vary from system to system. Two examples are shown below.

Example 1: Change:

```
lp:x:7:
to:
lp:x:7:user_name1,user_name2,etc
```

Example 2: Change:

```
lp:x:7:daemon,lp
to:
lp:x:7:daemon,lp,user_name1,user_name2,etc
```

where `user_name1`, `etc.`, are the login names for all the users you want to give read/write permission for parallel port zero. Save the changes and close the “group” file.

6. Using your favorite text editor, edit the file “nsswitch.conf” as follows:

Look at the group line. Ensure “files” is there.

For example:

```
group: files nis
```

7. Reboot for the changes to take effect.

## Lattice USB2A USB Download Cable Configuration

Programmer software can directly access USB devices using `libusb`, which accesses the USB file system. To verify that you have the USB library installed, do the following:

1. Plug in the USB cable.
2. On the command line, type:

```
% /sbin/lusb
```

You should see an entry similar to the following:

```
> Bus 002 Device 002: ID 1134:8001
```

3. If you receive an error when you type `/sbin/lusb`, you probably do not have `libusb` installed. To install the `libusb`, go to:

<http://libusb.sourceforge.net/>

4. Unplug the cable.

### Note

---

The USB cable must be disconnected from the PC when performing the installations. You must have root access and be able to log in as a super user.

---

## Driver Setup for Lattice USB2A and HW-USBN-2B (FTDI) USB Download Cable on Red Hat Linux Enterprise 7.4

### Note

User needs to download and install libusb-0.1.4-3.el7.x86\_64.rpm first in Red Hat 7.4.

### Manual UDEV Method Configuration:

1. Find your username which is given in /etc/group file. Log out if required. For example :

```
username:x:1000:username
```

2. Create a working file called 10-local.rules.
3. Add the following information to the 10-local.rules file:

```
#Lattice
SUBSYSTEM=="usb",ACTION=="add",ATTRS{idVendor}=="1134",ATTRS{idProduct}=="8001",MODE=="0660",GROUP=="username",SYMLINK+="lattice-%n"
#FTDI
SUBSYSTEM=="usb",ACTION=="add",ATTRS{idVendor}=="0403",ATTRS{idProduct}=="6010",MODE=="0666",GROUP=="username",SYMLINK+="ftdi-%n"
SUBSYSTEM=="usb",ATTRS{idVendor}=="0403",ATTRS{idProduct}=="6010",RUN+="/bin/sh -c 'basename %p > /sys/bus/usb/drivers/ftdi_sio/unbind'"
```

### Note

Replace the username with your username in above rules.

4. Copy the file into the /etc/udev/rules.d/10-local.rules directory. If a file by this name already exists, simply append the working file to it. For example:

```
% sudo cp 10-local.rules /etc/udev/rules.d/ .
```

Or, if the file already exists:

```
% sudo cat 10-local.rules >>/etc/udev/rules.d/10-local.rules
```

5. Give permission to 10-local.rules as follows :

```
% sudo chmod 755 10-local.rules
```

6. Now reload the udev rules by

```
% sudo udevadm control -reload-rules
```

7. Plug in the usb cable.

## Driver Setup for Lattice USB2A and HW-USBN-2B (FTDI) USB Download Cable on Red Hat Linux Enterprise 6

### Automated UDEV Method Configuration

1. Create an entry called “plugdev” in the /etc/group file, and then add anyone logging into the system into that group. Make sure /usr/bin/id shows you as a member of the plugdev group. Log out if required.

Example:

```
plugdev:x:501:username
```

2. Type the following command to execute the script:

```
% sudo <install_path>/data/vmdata/udevsetup_rh6
```

The script should terminate with a “Setup successful” output.

### Manual UDEV Method Configuration

1. Create an entry called “plugdev” in the /etc/group file, and then add anyone logging into the system into that group. Make sure /usr/bin/id shows you as a member of the plugdev group. Log out if required. For example:

```
plugdev:x:501:username
```

2. Create a working file called 10-local.rules.
3. Add the following information to the 10-local.rules file:

```
#Lattice
BUS=="usb",ACTION=="add",SYSFS{idVendor}=="1134",SYSFS{idProduct}=="8001",MODE=="0660",GROUP=="plugdev",SYMLINK+="lattice-%n"
#FTDI
BUS=="usb",ACTION=="add",SYSFS{idVendor}=="0403",SYSFS{idProduct}=="6010",MODE=="0660",GROUP=="plugdev",SYMLINK+="ftdi-%n"
SUBSYSTEM=="usb",DRIVER=="ftdi_sio",ATTRS{idVendor}=="0403",SYSFS{idProduct}=="6010",ATTR{bInterfaceNumber}=="00",RUN+="/bin/sh -c 'basename %p >/sys/bus/usb/drivers/ftdi_sio/unbind'"
```

### Note

Each BUS and SUBSYSTEM entry must be a single line, or split using the “\” line continuation character.

4. Copy the file into the /etc/udev/rules.d/10-local.rules directory. If a file by this name already exists, simply append the working file to it. For example:

```
% sudo cp 10-local.rules /etc/udev/rules.d/.
```

Or, if the file already exists:

```
% sudo cat 10-local.rules >>/etc/udev/rules.d/10-local.rules
```

5. Make the new UDEV settings active, as follows:

```
% sudo /usr/bin/skill -HUP udevd
```

6. Plug in the USB cable.

## Driver Setup for Lattice USB2A and HW-USBN-2B (FTDI) USB Download Cable on Red Hat Linux Enterprise 5

### Automated UDEV Method Configuration

1. Execute the script as follows:

```
% sudo <install_path>/data/vmdata/udevsetup
```

The script should terminate with a “Setup successful” output.

### Manual UDEV Method Configuration

1. Create a working file called 10-local.rules.
2. Add the following information to the 10-local.rules file:

```
#Lattice
BUS=="usb",ACTION=="add",SYSFS{idVendor}=="1134",SYSFS{idProduct}=="8001",MODE=="0660",OWNER=="root",SYMLINK+="lattice-%n"
#FTDI
BUS=="usb",ACTION=="add",SYSFS{idVendor}=="0403",SYSFS{idProduct}=="6010",MODE=="0660",OWNER=="root",SYMLINK+="ftdi-%n"
BUS=="usb",DRIVER=="ftdi_sio",SYSFS{bInterfaceNumber}=="00",RUN+="/bin/sh -c 'basename `dirname %p` >/sys/bus/usb/drivers/ftdi_sio/unbind'"
```

### Note

Each BUS and SUBSYSTEM entry must be a single line, or split using the “\” line continuation character.

3. Copy the file into the /etc/udev/rules.d/10-local.rules directory. If a file by this name already exists, simply append the working file to it. For example:

```
% sudo cp 10-local.rules /etc/udev/rules.d/.
```

Or, if the file already exists:

```
% sudo cat 10-local.rules >>/etc/udev/rules.d/10-local.rules
% sudo chmod 755 /etc/udev/rules.d/10-local.rules
```

4. Create a working file called “lattice.perms”.
5. Add the following information to the lattice.perms file:

```
<lattice>=/dev/lattice*
<console>0660 <lattice>0660 root
<ftdi>=/dev/ftdi*
<console>0660 <ftdi>0660 root
```

6. Copy the file into /etc/security/console.perms.d directory as follows:

```
% sudo cp lattice.perms /etc/security/console.perms.d/.
```

Or, if the file already exists:

```
% sudo cat lattice.perms >>/etc/security/console.perms.d/
lattice.perms
% sudo chmod 755 /etc/security/console.perms.d/lattice.perms
```

7. Make the new UDEV settings active as follows:

```
% sudo /usr/bin/skill -HUP udevd
```

## Driver Setup for Lattice USB2A Download Cable on Red Hat Linux Enterprise 4 and Older

### Automated Hot Plug Method Configuration:

The automated configuration script adds a line in the file `/etc/hotplug/usb.usermap` and creates the file `/etc/hotplug/usb/usbccable`.

1. Navigate to the directory where you installed Diamond. The default directory is `<install_path>/lsc/diamond/3.12`. Change directory to `<install_path>/lsc/diamond/3.12/data/vmdata`. Inside the directory is the file `usbsetup`.

2. Grant execute permissions to the `usbsetup` script by typing the following command:

```
% sudo chmod 755 usbsetup
```

3. Make sure that you are in the directory where the `usbsetup` file is located.

4. Type the following command to execute the script:

```
% sudo ./usbsetup
```

The script should terminate with a “Setup successful” output.

### Manual Hot Plug Method Configuration

Use the following manual configuration instructions. You can also use this method for a customized setup.

1. Edit the `/etc/hotplug/usb.usermap` file as follows:

```
% sudo vi /etc/hotplug/usb.usermap
```

2. Append the following line to the end of the file:

```
usbccable 0x0003 0x1134 0x8001 0x0000 0x0000 0x00 0x00 0x00
0x00 0x00 0x00 0x00000000
```

3. Use one of the following methods to create the script that will be executed each time the USB device is inserted:

► Manually create the `/etc/hotplug/usb/usbccable` file.

In the following example, the device is owned by “root,” the group is assigned to “usbusers,” and the device is readable and writable by both “root” and “usbusers.”

```
#!/bin/bash if [ "${ACTION}" = "add" ] && [ -f
"${DEVICE}" ] then
chown root "${DEVICE}" chgrp usbusers "${DEVICE}" chmod
660 "${DEVICE}"
```

```
fi
```

When you create the `usbcable` file, pay attention to the spacing since some statements are sensitive to the omission of spaces.

- ▶ Copy the Linux `usbcam` file and save it as `usbcable`.

On most versions of Linux, a `usbcam` script is available that changes the device ownership to the user who inserts the cable and logs into the console. The `usbcam` script is located in the same `/etc/hotplug/` directory.

If you prefer to use this script, copy the `usbcam` file and save it as `usbcable` as follows:

```
% sudo cp /etc/hotplug/usbcam /etc/hotplug/usbcable
```

4. Grant the script execute permission as follows:

```
% sudo chmod 755 /etc/hotplug/usbcable
```

#### Note

The USB cable must be removed and reinserted whenever one user logs out and another user logs in. Otherwise, the system will still recognize the previous user as the owner of the cable, and an error message will be generated.

## HW-USBN-2B (FTDI) USB Download Cable Configuration on Red Hat Linux Enterprise 4 and Older

For Linux Enterprise 4 and older, only manual installation is available.

### Manual Installation

1. Add the following line to `/etc/fstab`:

```
none /proc/bus/usb usbdevfs defaults,devmode=0666 0 0
```

There have been reports that you may need to use the following command for some distributors:

```
none /proc/bus/usb usbdevfs defaults,mode=0666 0 0 (use
usbfs in 2.6 kernels)
```

2. Remount all in the `fstab` file

```
% mount -a
```

3. Plug in the cable.
4. Unload the `ftdi_sio` driver if it is attached to your device.

```
% sudo /sbin/rmmod ftdi_sio
```

5. Unload the `usbserial` driver if it is attached to your device.

```
% sudo /sbin/rmmod usbserial
```

If you have problems with these procedures, check with `usbview` (search on the internet for application or it can be sent to you by FTDI) to check the USB file system is mounted properly.



# Licensing Lattice Diamond and Stand-Alone Power Estimator

The Lattice Diamond development tool and stand-alone Power Estimator are licensed software. In order for you to launch the tools you have to configure a FLEXlm license. The license can be either node-locked to the local machine, or acquired from a license server accessible from a LAN connection.

## Note

Diamond permits the creation of configuration bitstreams for all of Lattice Semiconductor's FPGAs and CPLDs. However, a license is required for some devices.

The default location of the license file is

`<install_path>/diamond/3.12/license/license.dat`. If this location is changed, you must set the `LM_LICENSE_FILE` environment variable to include the new path name.

## Note

In order to change the `LM_LICENSE_FILE` variable, you may need to edit the `.cshrc` or `.bashrc` configuration file located in your home directory.

## License Management Versions

Table 3 lists the version numbers of the FLEXlm `lmutil` utility, the FLEXlm `lmgrd` utility, and the Lattice daemon used for license management for 64-bit systems.

**Table 3: License Management Utility Versions**

Filename	Version	Description
<code>lmutil</code>	11.16.4.0	FLEXlm license server utility
<code>lmgrd</code>	11.16.4.0	FLEXlm end-user utility
<code>lattice</code>	11.16.4.0	The Lattice Semiconductor licensing daemon

## Obtaining a License

To register and license your Diamond software:

1. Obtain the host ID of your license server with the following command:

```
% <install_path>/diamond/3.12/ispfpga/bin/lin64/lmutil
lmhostid
```

2. Go to the Licensing section of the Lattice Semiconductor Web site ([www.latticesemi.com/license](http://www.latticesemi.com/license)) and follow the on-screen instructions.

**Note**

---

Lattice Semiconductor supports licensing for a single server or three redundant servers. If you are using three redundant servers, enter all three server host IDs on the License File/Registration Form.

---

Lattice Semiconductor will send your Diamond license file (license.dat) to you by e-mail within one working day. After you receive the license file from Lattice Semiconductor, copy the license.dat file to the Diamond license directory as follows:

```
% <install_path>/diamond/3.12/license/license.dat
```

## Editing the License File

You must edit a floating license file to specify the server name and the path to the Lattice daemon.

The following example shows part of a floating license file:

```
SERVER nodename 1234abcd 1710
DAEMON lattice daemon_path
FEATURE LSC_DIAMOND_A lattice 10.0 01-jan-9999 100 \
85B686493C86
VENDOR_STRING=LSC_DIAMOND_A
```

Edit the SERVER line by replacing the *nodename* with the host name and the port ID (1710). The port ID, 1710 in this example, must be assigned a TCP/IP port number that is not already in use on the server, so you might need to change it.

Edit the Lattice DAEMON line, replacing *daemon\_path* with the path to Lattice Diamond. For Imgrd V11, the path is:

```
% <install_path>/diamond/3.12/ispfpga/bin64/lin
```

Edit the ModelSim DAEMON line, replacing *daemon\_path* with the path to ModelSim Lattice Edition. For ModelSim, the path is:

```
% <install_path>/diamond/3.12/modeltech/win32loem/mgclcd
```

When editing these lines, type them exactly as you received them. All entries are case-sensitive.

**Note**

---

The encryption codes are in hexadecimal format (digits 0-9, and lower-case letters a-f or upper-case letters A-F).

---

## Starting the License Manager

Type the following command on one line to start the license manager daemon:

```
% <install_path>/diamond/3.12/ispfpga/bin/lin64/lmgrd
-l <install_path>/diamond/3.12/license/license.log
-c <install_path>/diamond/3.12/license/license.dat
```

Redirecting output to a log file is helpful when you debug licensing problems. The -l switch tells the license manager to send its output to a log file (license.log), and -c tells it which license to serve. The log file contains information on the status of the server and the daemon and TCP port in use. It also shows which users have checked out the license and the checkout time.

## Stopping the License Manager

If it is necessary to stop the FLEXlm license manager, follow this procedure:

1. Confirm that the daemon is running by typing the following command:

```
% ps -ef | grep lmgrd
```

2. If lmgrd.exe is running, type the following command on one line to stop the daemon:

For 64-bit systems:

```
% <install_path>/diamond/3.12/ispfpga/bin/lin64/lmutil
lmdown -c <install_path>/diamond/3.12/license/license.dat
```

The following prompt appears:

```
Shutting down FLEXlm on nodes: <hostname>
Are you sure? [y/n]:
```

3. Type **Y** and press **Enter** to shut down the license daemon.

## Installing and Running the License Manager on a Remote Server

You can install and run the License Manager from a location other than the default directory.

To install the License Manager to a different location, copy the files lattice, lmgrd, and lmutil from the following directory:

```
% <install_path>/diamond/3.12/ispfpga/bin/lin/
```

to the desired location. For example:

```
% <remote_server_install_path>/my_machine/lattice_license/
```

## Starting the License Manager from a Remote Server

Type the following command on one line to start the license manager daemon:

```
% <remote_server_install_path>/lmgrd  
-l <install_path>/diamond/3.12/license/license.log  
-c <install_path>/diamond/3.12/license/license.dat
```

## Stopping the License Manager on a Remote Server

If it is necessary to stop the FLEXlm license manager running on a remote server, follow this procedure:

1. Confirm that the daemon is running by typing the following command:

```
% ps -ef | grep lmgrd
```

2. If lmgrd.exe is running, type the following command on one line to stop the daemon:

```
% <remote_server_install_path>/lmutil lmdown -c  
<install_path>/diamond/3.12/license/license.dat
```

The following prompt appears:

```
Shutting down FLEXlm on nodes: <hostname>  
Are you sure? [y/n]:
```

3. Type **Y** and press **Enter** to shut down the license daemon.

## Setting Up a Floating License on Linux

The licensing steps just outlined can be performed on a centralized license server. Then each client points to the license file on that machine.

To gain access to the licenses on the remote license server, you need to set the environment variable LM\_LICENSE\_FILE value to *license\_port\_number@linux\_host\_name*.

### Note

---

Lattice Diamond software uses the following network communication ports (TCP/IP socket ports):

- ▶ Port 80 – This is the standard HTTP web access port. Diamond uses this port in the following cases:
    - ▶ When the Diamond software has updates from the Lattice web site:
    - ▶ IP or reference designs are downloaded from the Lattice web site:
    - ▶ When message ID's are sent.
  - ▶ Port 7788 – This is the port used by the Diamond software to check the floating license between the software and license server. This port is configurable by changing the license files.
-

## Troubleshooting a Floating License

The following procedures can be useful in troubleshooting common floating license issues.

### Check the Network

Use the ping command to check network status. For example, type:

```
% ping <license_server>
```

If the license server is running, you can expect a return as follows:

```
64 bytes from <license_server> <IP_address>
```

To end, type CTRL+C.

### Check License File with Imutil

Use the Imutil tool to troubleshoot the status of your license file. The Imutil tool is located in the following location:

```
<install_path>/diamond/3.12/ispfpga/bin/linux64
```

The Imstat command determines the features of your license file.

- ▶ The -a argument displays all information.
- ▶ The -c argument uses the specified license files.

The following is an example of using the Imutil Imstat command to check the license file status:

```
% ./lmutil lmstat -a -c <license_port>@<license_server>
```

The license status is returned, including feature lines, number of licenses issued, and licenses in use.

## Running the Lattice Diamond GUI

The Lattice Diamond software has a graphical user interface (GUI). When you run the diamond 3.12 executable file, the software automatically performs the environment setup.

### To start the Lattice Diamond GUI:

1. Set up the license as follows:

If your license file (license.dat) is not under `<install_path>/3.12/license`, you must set the `LM_LICENSE_FILE` variable to the location of your license file. For example:

For CSH users:

```
% setenv LM_LICENSE_FILE (/<license_directory>/license.dat
$LM_LICENSE_FILE)
```

For BASH users:

```
% export LM_LICENSE_FILE=$LM_LICENSE_FILE:/
<license_directory>/license.dat
```

2. Run the diamond executable file in the command line as follows:

```
% <install_path>/diamond/3.12/bin/linux64/diamond &
```

With the `diamond` script, you can also run the following tools in stand-alone mode.

To invoke stand-alone Power Calculator, run:

```
% diamond -pwc
```

To invoke stand-alone Reveal Analyzer, run:

```
% diamond -rva
```

To invoke stand-alone IPexpress, run:

```
% diamond -ipx
```

To invoke stand-alone Epic, run:

```
% diamond -epic
```

Refer to the online Help for more information about the Diamond GUI.

## Using the Examples Directory

In order to use the design examples directory, you must copy the files from the server to your local system and change the write permissions. Copy the files from the server examples directory (`<install_path>/diamond/3.12/examples`) to the equivalent path and directory on your local system.

## Finding the Installation History

The Diamond software records a log of your installation history. You can find the history in the Diamond main window.

**To view the installation history:**

1. Open the Diamond GUI.
2. Choose **Help > About Lattice Diamond**.

## Running Lattice Diamond from the Command Line

There are two ways to run from the command line: through Diamond's Tcl Console or by running executable files directly.

### Running Stand-Alone Tcl Console

The Lattice Diamond development environment includes Tcl Console, which allows you to run scripts for automating common tasks. Tcl Console is also available outside of the user interface in order to run custom scripts. To launch the stand-alone Tcl Console, enter the following on a command line:

```
% <install_path>/diamond/3.12/bin/linux64/diamondc
```

These commands configure the environment allowing all of the underlying design tools to be run. Refer to the online Help for more information about the command line.

### Running Using CSH or Bash Interpreters

Before running any other commands, you need to run the following command:

```
% cd <install_path>/diamond/3.12/bin/linux64  
% source setupenv
```

BASH users must run the following commands:

```
% export bindir=<install_path>/diamond/3.12/bin/linux64  
% source $bindir/diamond_env
```

After that, you can run the executable files directly. For example, you can invoke the Diamond GUI by:

```
% pnmain &
```

Or, you can run Power Calculator by running:

```
% pwcmain &
```

## Running Synplify Pro for Lattice

To run Synplify Pro for Lattice, do the following:

1. Open the Diamond GUI.
2. Open any project to enable the commands on the Tools menu.
3. Choose **Tools > Synplify Pro for Lattice**.

## Running Stand-Alone Reveal Analyzer

After the installation, you can invoke the stand-alone Reveal Analyzer in the command line:

```
% <install_path>/reveal/3.12/bin/linux64/revealrva &
```

## Running Stand-Alone Programmer

After the installation, you can invoke the stand-alone Programmer in the command line:

```
% <install_path>/programmer/3.12/bin/linux64/programmer &
```

## Running Stand-Alone Deployment Tool

After the installation, you can invoke the stand-alone Deployment Tool in the command line:

```
% <install_path>/programmer/3.12/bin/linux64/deployment &
```

## Running Stand-Alone Debugger

After the installation, you can invoke the stand-alone Debugger in the command line:

Running Download Debugger on 64-bit systems:

```
% <install_path>/programmer/3.12/bin/linux64/debugger &
```

## Running Stand-Alone Programming File Utility

After the installation, you can invoke the stand-alone Programming File Utility in the command line:

```
% <install_path>/programmer/3.12/bin/linux64/fileutility &
```

## Running Stand-Alone Model 300 Programmer

After the installation, you can invoke the stand-alone Model 300 Programmer in the command line:

```
% <install_path>/programmer/3.12/bin/linux64/model300 &
```



## Running Stand-Alone Power Estimator

After the installation, you can invoke the stand-alone Power Estimator in the command line:

### Note

The stand-alone Power Estimator requires a license. See “Licensing Lattice Diamond and Stand-Alone Power Estimator” on page 25.

```
% set ROOT="<install_path>/powerestimator/3.12"
% set platform=lin64
% setenv LD_LIBRARY_PATH ${ROOT}/ispfpga/bin/
${platform}:${ROOT}/bin/${platform}
% set path=(${ROOT}/ispfpga/bin/${platform} ${ROOT}/bin/
${platform} $path)
% ${ROOT}/bin/${platform}/pwcwrap est &
```

## Running Multiple Versions of Lattice Software

You can run multiple versions of ispLEVER and Lattice Diamond at the same time from either the command line or the graphical user interface. You can run current and previous versions.

## Updating Lattice Diamond

After you have registered and licensed your installation, check the Lattice Semiconductor Web site for new software updates, device support, and enhancements. Make sure that you have the latest software by checking for updates regularly.


## Running the UPDATE Tool

To run the UPDATE tool:

- ▶ Run the update executable file in the command line:

```
% update
```

The UPDATE window appears, as shown below.

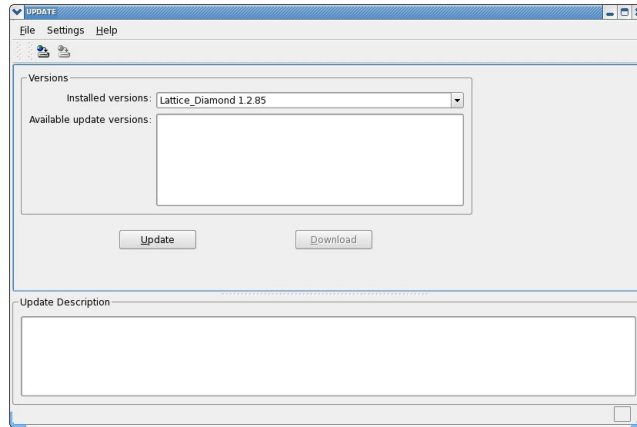


## Changing the Network Setting

To enable online checking for software updates, you must indicate how your computer accesses the Internet.

### To change the Internet connection settings:

1. In the UPDATE window, choose **Settings > Update Settings**.
2. In the Update Settings dialog box, select the **Network Setting** tab.

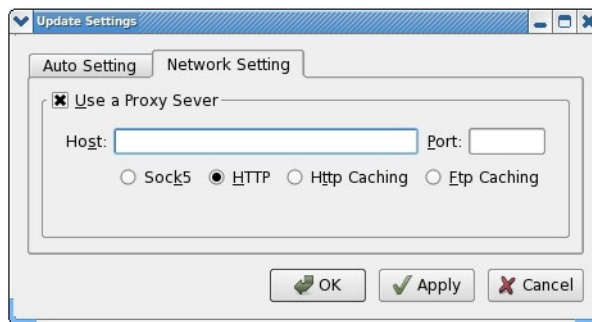

3. In the Network Setting tab, do either of the following:
  - ▶ If you must go through a proxy server before connecting to the Internet, select **Use a Proxy Server** (it is selected by default). The proxy server prevents outsiders from breaking into your organization's private network. Ask your system administrator for the URL address and port assignment.
  - ▶ If you use direct Internet access, clear the **Use a Proxy Server** option.
4. Click **OK**.

## Downloading and Installing Software Updates

When you use the automatic checking feature, the Diamond software notifies you whenever an update version becomes available.

You can also manually check for software updates.

### To manually check for and download a Diamond update version:

1. In the UPDATE window, click **Update**.

The software goes online to check for updates, and lists the available Diamond update versions (if any) in the Available update versions box.

2. Select the update version that you want to download, and click **Download**.

The software starts downloading the installer of the update version to your computer. You may install it later.

### Note

---

You can also use the **Help > Check for Updates** command in the Diamond window to check for and download software update.

---

### To install a downloaded Diamond update version:

1. Close all Diamond tools.
2. Uncompress the downloaded installer.
3. Go to the location where you put the uncompressed installer.
4. From the command line, execute the RPM installation file.

### Note

---

You need the root privilege to install an RPM package.

---

# Installing LatticeMico Development Tools

This document explains how to install LatticeMico Development Tools on the Linux operating system.

## System and Software Requirements

Your system must meet the following minimum system and software requirements to run LatticeMico Development Tools on Linux.

### System Requirements

- ▶ Intel Pentium or Pentium-compatible PC with USB port
- ▶ 64-bit Red Hat Enterprise Linux version 4, 5, 6, 7 operating system
- ▶ 2 GB memory recommended for FPGAs
- ▶ Approximately 436 megabytes of free disk space
- ▶ 1024 x 768 graphics display

### Software Requirements

- ▶ Perl version 5.8.0 or later. The following Perl modules are required:
  - ▶ XML::DOM
  - ▶ XML::Parser
  - ▶ XML::RegExp
  - ▶ Getop::Std

- ▶ Scalar::Util
- ▶ FindBin::Bin

These modules are normally found in the native version of Perl that comes with Red Hat Linux.

- ▶ PDF browser, such as Adobe Acrobat
- ▶ Mozilla or Netscape browser (optional)

## Additional Notes for Linux

You may need the following information to run LatticeMico on Linux:

- ▶ If you want to configure your system to use an external browser instead of the Eclipse help browser, you can change this in the LatticeMico main window by choosing the **Window > Preferences** command.
- ▶ Eclipse requires shared libraries from the Mozilla (also known as Seamonkey) Web browser. The Eclipse software expects to find a set of IA32 shared libraries. It may be necessary for you to manually configure the MOZILLA\_FIVE\_HOME environment variable to point to a valid Mozilla browser library installation.
- ▶ If you cannot access the PDF files referenced in the LatticeMico online Help, you can configure LatticeMico to use an external browser by following these steps:
  - a. In the LatticeMico software, choose **Window > Preferences**.
  - b. Click on **Help**.
  - c. Select **Use external browser**.
  - d. Click on **Web Browser**.
  - e. Select **Use external Web browser**.
  - f. Select **Firefox** or **Netscape**.
  - g. Click **OK**.

## Installing LatticeMico Within Diamond Software

To take advantage of the full features and functionality of the LatticeMico Development Tools, Lattice Semiconductor recommends that you install the 3.12 version of Diamond before installing the LatticeMico Development Tools.

Users designing with Platform Manager 2 devices must install LatticeMico System with Diamond in order to make the Diamond Platform Designer software functional.

The LatticeMico software is available for download from the Lattice Semiconductor Web site. For more information on how to download the LatticeMico software, go to <http://www.latticesemi.com/latticediamond> and click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account.

This section describes how to install the LatticeMico Development Tools on top of the Diamond software. These procedures assume that you have already installed Diamond 3.12.

---

**Note**

You need the root privilege to install an RPM package.

---

**To install LatticeMico Development Tools:**

1. Install Lattice Diamond 3.12 first, for example, in *<install\_path>/diamond*.
2. Verify the integrity of the RPM file.

```
% cd <directory_with_RPM>
% rpm -K lms_1_1_for_diamond3_12
```

3. Execute the RPM installation file as follows:

To install to the default location (*/usr/local/diamond*), use:

```
% sudo rpm -Uvh <path_to_package>/
lms_1_1_for_diamond3_12.rpm
```

To override the default location use:

```
% sudo rpm -Uvh --prefix=<install_path> <path_to_package>/
diamond/3.12/micosystem
```

4. After the installation is completed, verify that the */micosystem* directory is created in the *<install\_path>/diamond/3.12* directory, for example, */usr/local/diamond/3.12/micosystem*.
5. You can then run LatticeMico System as follows:

```
% <install_path>/diamond/3.12/micosystem/LatticeMicoLauncher
&
```

## Installing LatticeMico as a Stand-Alone Tool

If you do not have the current version of Diamond installed, you can still install the LatticeMico Development Tools, but their functionality will be limited. Mico System Builder (MSB) will not be fully functional. You can create platforms, but the platform generator will not be fully functional because of missing Diamond executables and functions. The design-rule checker will also not be fully functional. However, the graphical user interfaces of the C/C++ Software Project Environment (C/C++ SPE) and the debug environment will be fully functional.

---

**Note**

You need the root privilege to install an RPM package.

---

**To install LatticeMico Development Tools:**

1. Verify the integrity of the RPM file.

```
% cd <directory_with_RPM>
```

2. Execute the RPM installation file as follows:

To install to the default location, use:

```
% sudo rpm -Uvh <path_to_package>/
lms_1_1_for_diamond3_12.rpm
```

To override the default location use:

```
% sudo rpm -Uvh --prefix=<install_path> <path_to_package>/
diamond/3.12/micosystem
```

3. After the installation is completed, verify that the /micosystem directory is created in the <install\_path>/laticemicosystem/3.12 directory, for example, /usr/local/laticemicosystem/3.12/micosystem.

## LatticeMico System Library Dependencies

LatticeMico System for Linux depends on a set of system libraries that are different from the Diamond base release package.

The following packages are the packages on which lms\_1\_1\_for\_diamond3\_12.rpm are dependent. Indirect dependencies are listed with indented levels.

- ▶ glibc
  - ▶ nss-softokn-freebl
- ▶ libjpeg
- ▶ glib2
  - ▶ libselinux
  - ▶ gamin
- ▶ libusb
- ▶ freetype
- ▶ fontconfig
  - ▶ expat
- ▶ libX11
  - ▶ libxcb
    - ▶ libXau
- ▶ libICE
  - ▶ libSM
- ▶ libuuid
- ▶ libXt

- ▶ libXext
- ▶ libXrender
- ▶ libXi
- ▶ libXft
- ▶ libXtst
- ▶ alsa-lib
- ▶ atk
- ▶ nss
  - ▶ nss-util
    - ▶ nspr-devel
      - ▶ nspr
  - ▶ nss-softokn
    - ▶ sqlite
      - ▶ readline
        - ▶ ncurses-libs
- ▶ gmp
- ▶ pango
  - ▶ cairo
  - ▶ libthai
  - ▶ libpng
    - ▶ pixman
  - ▶ libXcomposite
  - ▶ libXfixes
  - ▶ libXdamage
  - ▶ libXinerama
  - ▶ libXrandr
- ▶ compat-expat1
- ▶ compat-libstdc++-33
- ▶ cups-libs
  - ▶ avahi
    - ▶ audit-libs
    - ▶ avahi-libs
      - ▶ dbus-libs
  - ▶ libcap
    - ▶ libattr
  - ▶ libdaemon



- ▶ libtiff
- ▶ gnutls
- ▶ keyutils-libs
- ▶ krb5-libs
- ▶ libgcrypt
- ▶ libpgp-error
- ▶ libtasn1
- ▶ gtk2
  - ▶ jasper-libs
- ▶ perl-XML-DOM
- ▶ perl-XML-RegExp

## Installing System Library Packages Manually on Red Hat 6 64-bit Operating Systems

The following sequence shows how the system libraries must be installed before the diamond\_3\_12-lm LMS package can be installed. The example assumes the Red Hat Enterprises 6 64-bit installation DVD is mounted in the following path:

```
/media/RHEL_6.2\ x86_64\ Disc
```

There are 64 packages that must be installed manually before installing the LatticeMico package. Some of the commands below install more than one package. These packages have cyclic dependencies.

```
# cd /media/RHEL_6.2\ x86_64\ Disc/Packages/
# rpm -i glibc-2.12-1.47.el6.i686.rpm \
    nss-softokn-freebl-3.12.9-11.el6.i686.rpm
# rpm -i libjpeg-6b-46.el6.i686.rpm
# rpm -i zlib-1.2.3-27.el6.i686.rpm
# rpm -i glib2-2.22.5-6.el6.i686.rpm \
    libselinux-2.1.94-5.2.el6.i686.rpm \
    gamin-0.1.10-9.el6.i686.rpm
# rpm -i libgcc-4.4.6-3.el6.i686.rpm
# rpm -i libstdc++-4.4.6-3.el6.i686.rpm
# rpm -i libusb-0.1.12-23.el6.i686.rpm
# rpm -i freetype-2.3.11-6.el6_1.7.i686.rpm
# rpm -I expat-2.1.1-9.1.el6.i686.rpm
# rpm -i fontconfig-2.8.0-3.el6.i686.rpm
# rpm -i libSM-1.1.0-7.1.el6.i686.rpm \
    libuuid-2.17.2-12.4.el6.i686.rpm
# rpm -i libXt-1.0.7-1.el6.i686.rpm
# rpm -i libXext-1.1-3.el6.i686.rpm
# rpm -i libXrender-0.9.5-1.el6.i686.rpm
# rpm -i libXi-1.3-3.el6.i686.rpm
```

```
# rpm -i libXft-2.1.13-4.1.el6.i686.rpm
# rpm -i libXtst-1.0.99.2-3.el6.i686.rpm
# rpm -i alsa-lib-1.0.22-3.el6.i686.rpm
# rpm -i atk-1.28.0-2.el6.i686.rpm
# rpm -i nspr-4.8.8-3.el6.i686.rpm
# rpm -i nspr-devel-4.8.8-3.el6.i686.rpm
# rpm -i nss-util-3.12.10-2.el6.i686.rpm
# rpm -i ncurses-libs-5.7-3.20090208.el6.i686.rpm
# rpm -i readline-6.0-3.el6.i686.rpm
# rpm -i sqlite-3.6.20-1.el6.i686.rpm
# rpm -i nss-softokn-3.12.9-11.el6.i686.rpm
# rpm -i nss-3.12.10-16.el6.i686.rpm
# rpm -i gmp-4.3.1-7.el6.i686.rpm
# rpm -i pixman-0.18.4-1.el6_0.1.i686.rpm
# rpm -i libpng-1.2.46-1.el6_1.i686.rpm
# rpm -i cairo-1.8.8-3.1.el6.i686.rpm
# rpm -i libthai-0.1.12-3.el6.i686.rpm
# rpm -i pango-1.28.1-3.el6_0.5.i686.rpm
# rpm -i libXfixes-4.0.4-1.el6.i686.rpm
# rpm -i libXcomposite-0.4.1-2.el6.i686.rpm
# rpm -i libXdamage-1.1.2-1.el6.i686.rpm
# rpm -i libXinerama-1.1-1.el6.i686.rpm
# rpm -i libXrandr-1.3.0-4.el6.i686.rpm
# rpm -i audit-libs-2.1.3-3.el6.i686.rpm
# rpm -i dbus-libs-1.2.24-5.el6_1.i686.rpm
# rpm -i avahi-libs-0.6.25-11.el6.i686.rpm
# rpm -i libattr-2.4.44-7.el6.i686.rpm
# rpm -i libcap-2.16-5.5.el6.i686.rpm
# rpm -i libdaemon-0.14-1.el6.i686.rpm
# rpm -i avahi-0.6.25-11.el6.i686.rpm
# rpm -i libtiff-3.10.4-1.el6_0.3.i686.rpm
# rpm -i compat-expat1-1.95.8-8.el6.i686.rpm
# rpm -i compat-libstdc++-33-3.2.3-69.el6.i686.rpm
# rpm -i gnutls-2.8.5-4.el6.i686.rpm
# rpm -i keyutils-libs-1.4-3.el6.i686.rpm
# rpm -i krb5-libs-1.9-22.el6.i686.rpm
# rpm -i libgcrypt-1.4.5-9.el6.i686.rpm
# rpm -i libgpg-error-1.7-4.el6.i686.rpm
# rpm -i libtasn1-2.3-3.el6.i686.rpm
# rpm -i cups-libs-1.4.2-44.el6.i686.rpm
# rpm -i jasper-libs-1.900.1-15.el6.i686.rpm
# rpm -i gtk2-2.18.9-6.el6.i686.rpm
# rpm -i perl-XML-RegExp-0.03-7.el6.noarch.rpm
# rpm -i perl-XML-DOM-1.44-7.el6.noarch.rpm
# rpm -i lms_1_1_for_diamond3_12.rpm
```

After you install the above system library packages, the following LatticeMico package can be installed.

```
# rpm -i lms_1_1_for_diamond3_12.rpm
```

Note that this example is based on Red Hat Enterprises 6 64 Update 2 release. If you have a different Red Hat Enterprises 6 64 update release, the version number may be different on your installation DVD image.

## Using an Automatic Package Installer to Install LatticeMico RPM Package

If you have a YUM repository setup as described in “Using an Automatic Package Installer for RPM Systems” on page 14 you only need to run the following command to install diamond\_3\_12-lm without going through the manual RPM installation process described in “Installing System Library Packages Manually on Red Hat 6 64-bit Operating Systems” on page 41.

```
% yum install lms_1_1_for_diamond3_12.rpm
```

## Running LatticeMico System

After LatticeMico System is installed, enter the following command to run the software:

```
% <install_path>/latticemicosystem/3.12/LatticeMicoLauncher &
```