



RISC-V RX CPU IP Core

User Guide

FPGA-IPUG-02241-1.0

October 2023

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS, with all faults, and all associated risk is the responsibility entirely of the Buyer. The information provided herein is for informational purposes only and may contain technical inaccuracies or omissions, and may be otherwise rendered inaccurate for many reasons, and Lattice assumes no obligation to update or otherwise correct or revise this information. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. LATTICE PRODUCTS AND SERVICES ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS, OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING ANY APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, BUYER MUST TAKE PRUDENT STEPS TO PROTECT AGAINST PRODUCT AND SERVICE FAILURES, INCLUDING PROVIDING APPROPRIATE REDUNDANCIES, FAIL-SAFE FEATURES, AND/OR SHUT-DOWN MECHANISMS. LATTICE EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Inclusive Language

This document was created consistent with Lattice Semiconductor's inclusive language policy. In some cases, the language in underlying tools and other items may not yet have been updated. Please refer to Lattice's inclusive language [FAQ 6878](#) for a cross reference of terms. Note in some cases such as register names and state names it has been necessary to continue to utilize older terminology for compatibility.

Contents

Contents	3
Acronyms in This Document	5
1. Introduction	6
1.1. Quick Facts	6
1.2. Features	6
1.3. Conventions	6
2. Functional Descriptions	7
2.1. Overview	7
2.2. Modules Description	8
2.2.1. RISC-V Processor Core	8
2.2.2. Submodule	17
2.3. Signal Description	23
2.3.1. sysClock and Reset	23
2.3.2. Data Interface	23
2.3.3. Interrupt Interface	27
2.4. Attribute Summary	27
2.5. Memory Map	29
3. RISC-V RX CPU IP Generation	30
Appendix A. Resource Utilization	33
Appendix B. Debug with Soft JTAG	34
References	36
Technical Support Assistance	37
Revision History	38

Figures

Figure 2.1. RISC-V RX Soft IP Diagram (with All Features Enabled).....	7
Figure 2.2. RISC-V RX Processor Core Block Diagram	8
Figure 2.3. Various Forms of Privileged Execution	10
Figure 2.4. Machine Trap-vector Base-address Register (mtvec)	11
Figure 2.5. RV32 PMP Configuration CSR Layout.....	12
Figure 2.6. PMP Address Register Format, RV32	12
Figure 2.7. mcfu_selector CSR 0xBC0	14
Figure 2.8. CFU R-type Instruction Encoding	14
Figure 2.9. CFU I-type Instruction Encoding	14
Figure 2.10. CFU Flex-type Instruction Encoding	15
Figure 2.11. CFU Flex-type Instruction Alternate Encoding	15
Figure 2.12. Execution of a Custom Function Instruction.....	16
Figure 2.13. PLIC Operation Parameter Block Diagram	17
Figure 3.1. Entering Component Name	30
Figure 3.2. Configuring Parameters	31
Figure 3.3. Verifying Results	32
Figure 3.4. Specifying Instance Name	32
Figure 3.5. Generated Instance.....	32

Tables

Table 1.1 RISC-V RX Soft IP Quick Facts	6
Table 2.1. Soft JTAG Ports.....	9
Table 2.2. RISC-V Processor Core Control and Status Registers	10
Table 2.3. mtvec Register	11
Table 2.4. pmp#cfg Register Format.....	12
Table 2.5. PMP Access Logic	13
Table 2.6. PLIC Registers	19
Table 2.7. CLINT Registers.....	21
Table 2.8. WDT Registers	22
Table 2.9. Clock and Reset Ports.....	23
Table 2.10. CFU-LI Ports (Optional).....	23
Table 2.11. Local Data Ports (Optional)	24
Table 2.12. Local Instruction Ports (Optional)	24
Table 2.13. AXI Data Ports (Constant).....	25
Table 2.14. AXI Instruction Ports (Optional)	26
Table 2.15. Interrupt Ports	27
Table 2.16. Configurable Attributes.....	27
Table 2.17. Attributes Description	28
Table 2.18. SoC Memory Map	29
Table A.1. Resource Utilization in CertusPro-NX Device.....	33
Table A.2. Resource Utilization in Lattice Avant Device	33

Acronyms in This Document

A list of acronyms used in this document.

Acronyms	Definition
ABI	Application Binary Interface
AEE	Application Execution Environment
AXI	Advanced eXtensible Interface
CF	Custom Function
CFU	Custom Function Unit
CFU-LI	Custom Function Unit Logic Interface
CLINT	Core Local Interrupter
CPU	Central Processing Unit
CSR	Control and Status Register
DDR	Double Data Rate
DMIPS	Dhrystone MIPS (Million Instructions per Second)
DTCM	Data TCM
IP	Intellectual Property
EIP	External Interrupt Pending
FPGA	Field Programmable Gate Array
GDB	Gnu Debugger
GPIO	General Purpose Input/Output
GUI	Graphical User Interface
HDL	Hardware Description Language
IE	Interrupt Enable
IRQ	Interrupt Request
ISA	Instruction Set Architecture
JTAG	Joint Test Action Group
ITCM	Instruction TCM
LUT	Lookup-Table
NMI	Non-Maskable Interrupt
OpenOCD	Open On-Chip Debugger
OS	Operating System
PC	Personal Computer
PLIC	Platform-Level Interrupt Controller
PMP	Physical Memory Protection
RISC-V	Reduced Instruction Set Computer-V (five)
RV32IMC	RISC-V Integer, M & Compressed Instruction Sets
RX	Real Time OS (RISC-V for RTOS applications)
SDRAM	Synchronous Dynamic Random-Access Memory
SEE	Supervisor Execution Environment
SoC	System-on-Chip
TCM	Tightly Coupled Memory
UART	Universal Asynchronous Receiver Transmitter
WARL	Write Any Values, Reads Legal Values
WDT	Watchdog Timer Device

1. Introduction

The Lattice Semiconductor RISC-V RX soft IP contains a 32-bit RISC-V processor core and several submodules – Platform Level Interrupt Controller (PLIC), Core Local Interrupter (CLINT), and Watchdog. The CPU core supports the RV32IMC instruction set and debug feature which is JTAG – IEEE 1149.1 compliant. The modules outside are accessed by the processor core using AXI or Local Bus Interface.

The design is implemented in Verilog HDL. It can be configured and generated using the Lattice Propel™ Builder software. It is targeted for Lattice Avant™, MachXO5™-NX, CrossLink™-NX, Certus™-NX, and CertusPro™-NX FPGA devices. The design is implemented using Lattice Radiant™ software Place and Route tool integrated with the Synplify Pro® synthesis tool.

1.1. Quick Facts

Table 1.1 presents a summary of the RISC-V RX CPU IP Core.

Table 1.1 RISC-V RX Soft IP Quick Facts

IP Requirements	Supported FPGA Families	Lattice Avant, MachXO5-NX, CrossLink-NX, Certus-NX, CertusPro-NX
Resource Utilization	Targeted Devices	LAV-AT, LFMXO5, LIFCL, LFD2NX, LFCPNX
	Supported User Interfaces	AXI Interface, Local Bus Interface
	Resources	See Table A.1 and Table A.2 .
Design Tool Support	Lattice Implementation	Lattice Propel Builder 2023.2, Lattice Radiant 2023.2
	Simulation	For a list of supported simulators, see the Lattice Radiant and Lattice Diamond™ software user guide.

1.2. Features

- The RISC-V RX soft IP has the following features:
 - RV32IMC instruction set
 - Five stage pipeline
 - All three privilege modes supported: Machine mode, Supervisor mode, and User mode
 - Instruction Cache and Data Cache
 - Support for the AXI4 bus standard for data port
 - Debug through Gnu Debugger (GDB) and Open On-Chip Debugger (OpenOCD)
 - PLIC module
 - CLINT module
 - Watchdog module
 - Benchmark and Frequency:
 - Balanced mode: 1.01 DMIPS/MHz performance; 130 MHz (sp9)/110 MHz (sp7) on CertusPro-NX device
- Note:** f_{max} is based on:
- Standalone processor core
 - Radiant 2023.1 production build, with 9_High-Performance_1.0V (sp9) and 7_High[1]Performance_1.0V (sp7)

1.3. Conventions

The nomenclature used in this document is based on Verilog HDL.

2. Functional Descriptions

2.1. Overview

The RISC-V RX IP processes data and instructions while monitoring external interrupts. As shown in [Figure 2.1](#), the CPU IP has a 32-bit processor core and submodules. Among submodules, PLIC and CLINT/Watchdog are required, while Local UART is optional. The AXI Instruction Port and both TCM ports are also optional.

The 32-bit processor can use the AXI Instruction Port or the local instruction port to fetch instructions from an external AXI device or a TCM, respectively. The processor can use the AXI Data Port or the local data port to access data. Among these AXI and local bus ports, the AXI Instruction Port and both TCM local bus ports, as shown in [Figure 2.1](#), are optional in the RX configuration dialog. But either the AXI Instruction Port or both of the TCM ports must be enabled to make the RX core perform normally.

The CPU core, bridges, MUX, PLIC, and UART run in the fast system clock domain. The CLINT and the Watchdog run in both the fast system clock domain and the slow real time clock domain. The Debug module runs in both the system clock domain and the JTAG clock domain.

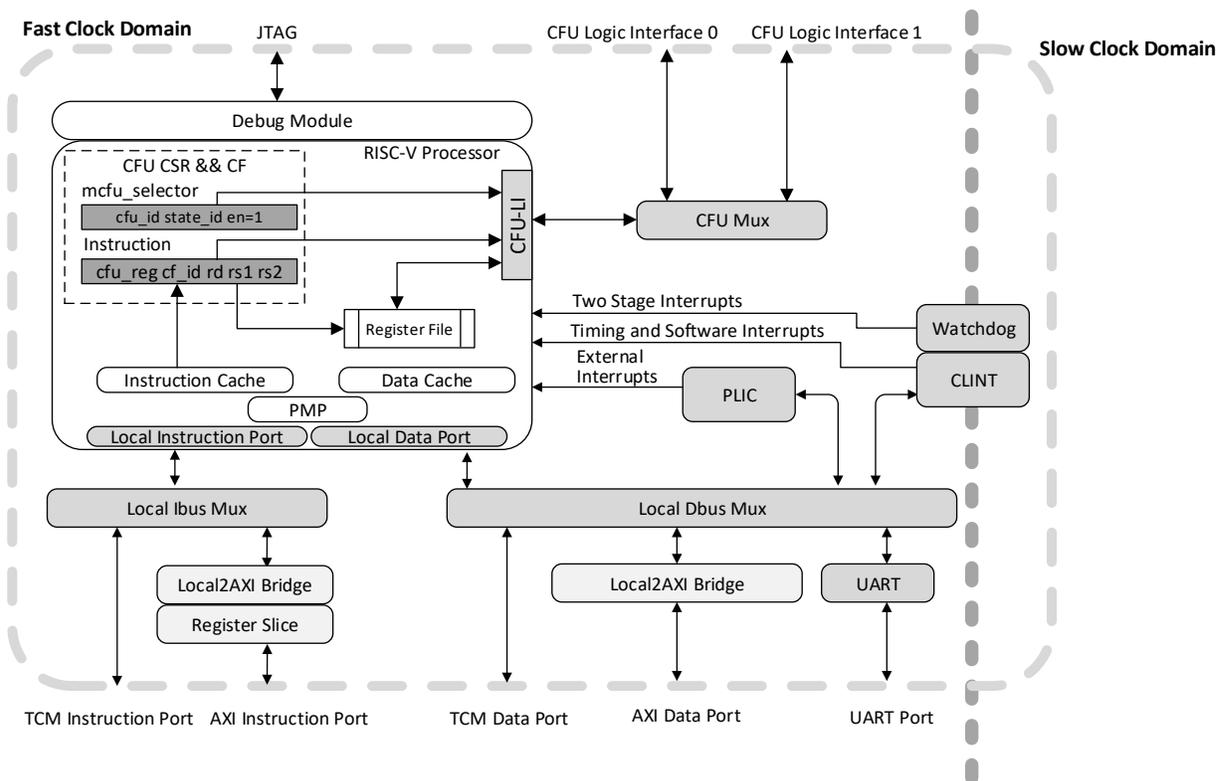


Figure 2.1. RISC-V RX Soft IP Diagram (with All Features Enabled)

2.2. Modules Description

2.2.1. RISC-V Processor Core

Figure 2.2 shows the processor core block diagram.

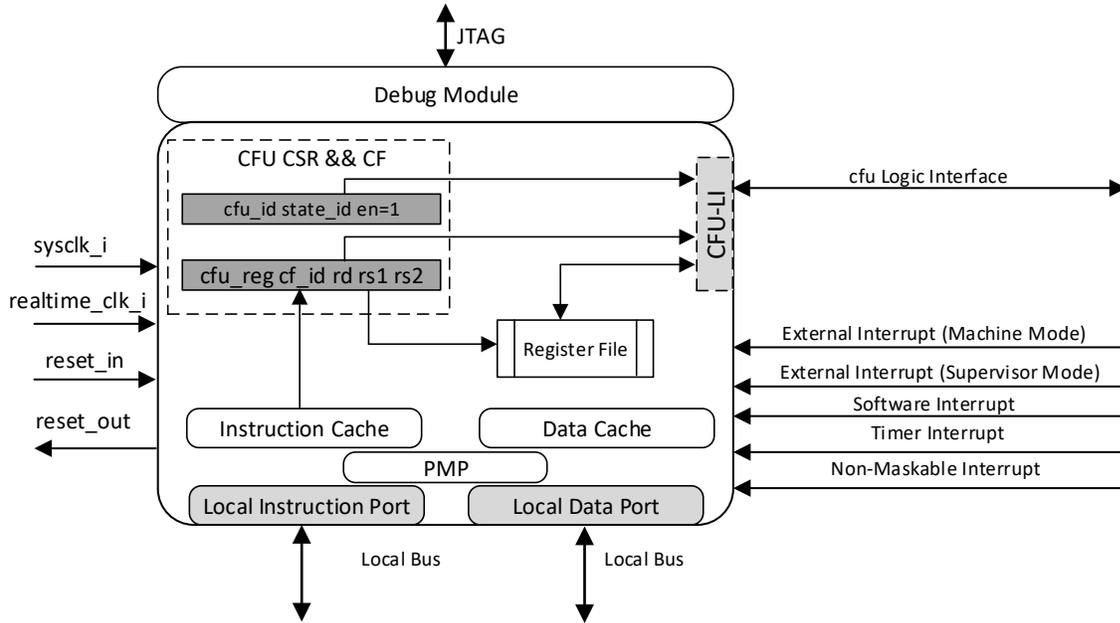


Figure 2.2. RISC-V RX Processor Core Block Diagram

2.2.1.1. F Extension Support

Version 2.3 of the RX core supports the F Extension. For more details, refer to the related chapter of RISC-V Privileged Specification (Version 20211203).

2.2.1.2. Interrupt

There are four types of interrupts, External Interrupt from PLIC in Machine mode or Supervisor mode, Software Interrupt, Timer Interrupt from CLINT, and Non-Maskable Interrupt from outside.

- **External Interrupt**
 - In this version, the RX processor core expands the number of external interrupts to 32 in total, and 30 of them are available to you.
- **NMI**
 - A basic non-maskable interrupt (NMI) is supported in this version of RX. There is a new Control and Status Register (CSR) named `mnvec` for you to set specific trap entry for NMI routine. Its CSR address is `0x7C0`.
 - There is a new input port `nmiInterrupt` for the incoming interrupt. When there is an asserted input, the PC jumps to the address stored in `mnvec`. For other types of interrupts, it jumps to `mtvec`. Below is an example asm code:

```
#define CSR_MNVEC          0x7C0
...
la t0, trap_entry_nmi
csw CSR_MNVEC, t0
```

- The current NMI implementation is non-recoverable. It is expected for the processor to jump into the correct interrupt service, but there is no guarantee for how it gets returned. General interrupt has the `mepc` CSR register to store the PC address before jumping to the interrupt, so that when the processor returns from it,

mepc is used to restore the previous PC address. NMI does not have such a register. When the processor comes back from NMI, it may go out of control.

Note: there is a task group aiming to define the recoverable NMI, which is still on track, with no stable draft specification yet.

By default, interrupts are handled in Machine mode. Considering Supervisor mode is supported, it is possible to delegate certain interrupts to Supervisor mode.

2.2.1.3. Exception

If an exception occurs, the processor core stops the corresponding instruction, flushes all previous instructions, and waits until the terminated instruction reaches the writeback stage before jumping to the exception service routine.

2.2.1.4. Low Power Mode

The processor core enters low power mode when it executes the WFI instruction. The PC halts during the low power mode. The processor wakes up if there is an external/timer interrupt.

2.2.1.5. Reset Vector

The reset vector is set to 0x0000_0000 and it is fixed.

2.2.1.6. Branch Prediction

The RX core uses dynamic target prediction for branches.

2.2.1.7. Debug

The processor core supports the IEEE-1149.1 JTAG debug logic with two hardware breakpoints.

To use the debug module, it is required to allow writes from data port to instruction memory in the SoC. Single-port instruction memory is not allowed to debug.

The soft JTAG is available in Lattice Avant, MachXO5-NX, CrossLink-NX, CertusPro-NX, and Certus-NX devices. For more information, refer to [Appendix B](#).

Table 2.1. Soft JTAG Ports

Name	Direction	Width	Description
TDI	In	1	Test data input pin.
TCK	In	1	Test data output pin.
TMS	In	1	Test clock pin.
TDO	Out	1	Test mode select pin for controlling the TAP state machine.

2.2.1.8. Cache

Both Instruction Cache and Data Cache have the following configurations:

- cache size: 4096 bytes
- 32 bytes per cache line
- 2-way set associative

The cache strategy for data cache is write through. The cache eviction policy of both caches is round robin. To flush the caches, refer to annotations of cache.h in the driver codes. There are three APIs to be used to flush either the instruction or data cache at the run time.

2.2.1.9. Privilege Mode

The processor supports User, Supervisor, and Machine mode. Along with corresponding CSR registers, [Figure 2.3](#) shows two typical software stacks:

- A simple system that supports only a single application running on an application execution environment (AEE). The application is coded to run with a particular application binary interface (ABI). ABI includes the supported user-level Instruction Set Architecture (ISA) plus a set of ABI calls to interact with the AEE. The ABI hides details of the AEE from the application to allow greater flexibility in implementing the AEE.

- Meanwhile, a conventional operating system (OS) can provide AEE and ABI. The OS interfaces with a supervisor execution environment (SEE) via a supervisor binary interface (SBI). An SBI comprises the user-level and supervisor-level ISA together with a set of SBI function calls.

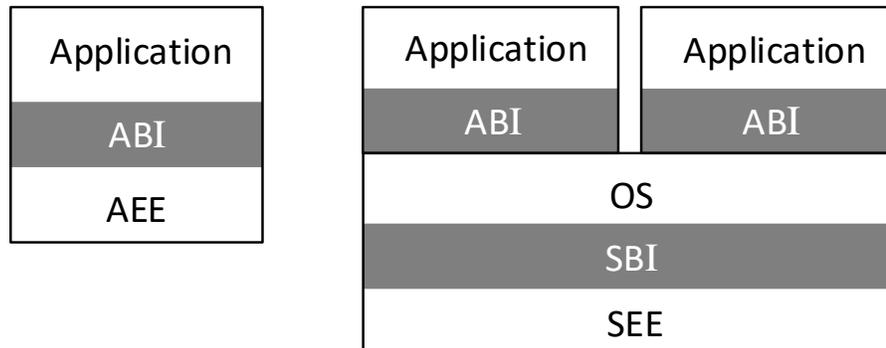


Figure 2.3. Various Forms of Privileged Execution

2.2.1.10. Control and Status Registers

The processor core supports three privilege modes. All supported Control and Status Registers (CSRs) are listed in [Table 2.2](#).

Table 2.2. RISC-V Processor Core Control and Status Registers

Number	Privilege	Name	Description
Supervisor Trap Setup			
0x100	SRW	sstatus	Supervisor status register.
0x104	SRW	sie	Supervisor interrupt enable register.
0x105	SRW	stvec	Supervisor trap handler base address.
0x106	SRW	scounter	Supervisor counter-enable register.
Supervisor Trap Handling			
0x140	SRW	sscratch	Scratch register for supervisor trap handlers.
0x141	SRW	sepc	Supervisor exception program counter.
0x142	SRW	scause	Supervisor trap cause.
0x143	SRW	stval	Supervisor bad address or instruction.
0x144	SRW	sip	Supervisor interrupt pending.
Machine Information Registers			
0xF11	MRO	mvendorid	Vendor ID.
0xF12	MRO	marchid	Architecture ID.
0xF13	MRO	mimpid	Implementation ID.
0xF14	MRO	mhartid	Hardware thread ID.
Machine Trap Setup			
0x300	MRW	mstatus	Machine status register.
0x301	MRO	misa	ISA and extensions.
0x302	MRW	medeleg	Machine exception delegation register.
0x303	MRW	mideleg	Machine interrupt delegation register.
0x304	MRW	mie	Machine interrupt enable register.
0x305	MRW	mtvec	Machine trap handler base address.
0x306	MRW	mcounteren	Machine counter-enable Register.
Machine Trap Handling			
0x340	MRW	mscratch	Scratch register for machine trap handlers.
0x341	MRW	mepc	Machine exception program counter.

Number	Privilege	Name	Description
0x342	MRO	mcause	Machine trap cause.
0x343	MRO	mtval	Machine bad address or instruction.
0x344	MRW	mip	Machine interrupt pending.
Machine Counter/Timers			
0xB00	MRW	mcycle	Machine cycle counter.
0xB02	MRW	minstret	Machine instructions-retired counter.
0xB80	MRW	mcycleh	Upper 32 bits of mcycle.
0xB82	MRW	minstreth	Upper 32 bits of minstret.
Unprivileged Floating-Point CSRs			
0x001	URW	fflags	Floating-point accrued exceptions.
0x002	URW	frm	Floating-point dynamic rounding mode.
0x003	URW	fcsr	Floating-point control and status register (frm + fflags).

2.2.1.11. Machine Trap-vector Base-address Register (mtvec) Vectored Mode

Version 2.2 of the RX processor core starts to support the vectored mode of the register mtvec and meets the demand of MODE field WARL (Write Any Values, Reads Legal Values) behavior, as shown in [Figure 2.4](#).

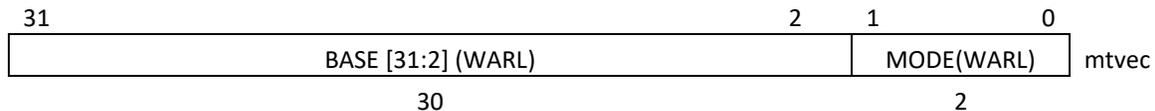


Figure 2.4. Machine Trap-vector Base-address Register (mtvec)

According to the RISC-V Privileged Specification (Version 20211203), the mtvec mode decides the address where PC is to be set. You can change the vectored mode of the core by writing the MODE field of mtvec. The encoding of the MODE field is shown in [Table 2.3](#).

Table 2.3. mtvec Register

Field	Name	Behavior	Width	Description												
[31:2]	BASE	WARL	29	Vector base address.												
[1:0]	MODE	WARL	3	Encoding of mtvec MODE field. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Value</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Direct</td> <td>All exceptions set PC to BASE.</td> </tr> <tr> <td>1</td> <td>Vectored</td> <td>Asynchronous interrupts set PC to BASE+4×cause.</td> </tr> <tr> <td>2</td> <td>—</td> <td>Reserved.</td> </tr> </tbody> </table>	Value	Name	Description	0	Direct	All exceptions set PC to BASE.	1	Vectored	Asynchronous interrupts set PC to BASE+4×cause.	2	—	Reserved.
Value	Name	Description														
0	Direct	All exceptions set PC to BASE.														
1	Vectored	Asynchronous interrupts set PC to BASE+4×cause.														
2	—	Reserved.														

When MODE=Direct, all traps into Machine mode cause the PC to be set to the address in the BASE field. When MODE=Vectored, all synchronous exceptions into Machine mode cause the PC to be set to the address in the BASE field, whereas interrupts cause the PC to be set to the address in the BASE field plus four times the interrupt cause number.

2.2.1.12. PMP

The Physical Memory Protection (PMP) unit provides Machine mode control registers to limit the access of different regions of physical memory with different privileges, including read, write, and execute, for RV32 systems. To support Lattice RISC-V products, the PMP structure only supports the top boundary of an arbitrary range (TOR) mode with up to four entries and the granularity is 0. Our design follows the RISC-V Privileged Specification (Version 1.12).

PMP entries are described by an 8-bit configuration register and one 32-bit address register. These two kinds of registers are packed into CSRs to minimize context-switch time. The PMP configuration registers named pmpcfg#

determine the permission and addressing mode for protection regions. The PMP address registers named `pmpaddr#` contain the address for corresponding regions. # indicates the serial number of register.

This PMP unit partitions the memory range to four pages. There are only four entries for this unit instead of sixteen or sixty-four entries as in the RISC-V Specification. In other words, in this PMP unit, there is only one PMP configuration register, `pmpcfg0`, and four PMP address registers, `pmpaddr0`–`pmpaddr3`. All the registers fields are WARL registers.

- PMP Configuration Registers

Each `pmpcfg#` register contains four, 8-bits `pmp#cfg` register fields to describe the access privileges corresponding to four `pmpaddr#` for the RV32 system. As mentioned above, only `pmpcfg0` is used in this unit and its associated number in CSRs is `0x3a0`, as shown in [Figure 2.5](#).

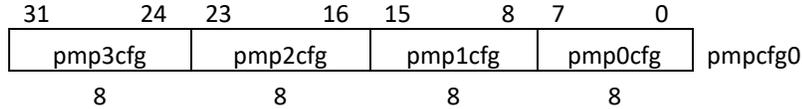


Figure 2.5. RV32 PMP Configuration CSR Layout

[Table 2.4](#) shows the layout of one `pmp#cfg` register inside `pmpcfg0`.

Table 2.4. pmp#cfg Register Format

Field	Name	Access	Width	Description									
[7]	L	WARL	1	The PMP entry is locked.									
[6:5]	0	WARL	2	—									
[4:3]	A	WARL	2	Encoding the address-matching mode of the associate PMP address register.									
				<table border="1"> <thead> <tr> <th>Value</th> <th>Mode</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OFF</td> <td>Null region (disabled)</td> </tr> <tr> <td>1</td> <td>TOR</td> <td>Top of range</td> </tr> </tbody> </table>	Value	Mode	Description	0	OFF	Null region (disabled)	1	TOR	Top of range
				Value	Mode	Description							
0	OFF	Null region (disabled)											
1	TOR	Top of range											
[2]	X	WARL	2	When set, PMP entry permits instruction execution. When clear, instruction execution is denied.									
[1]	W	WARL	2	When set, PMP entry permits write. When clear, write is denied.									
[0]	R	WARL	2	When set, PMP entry permits read. When clear, read is denied.									

The R, W, and X bits determine whether this entry allows read, write, or execute respectively.

The A bits encode the address-matching mode. Unlike described in RISC-V Privileged Specification (Version 20211203), this field can only be in two modes, OFF or TOR. The NA4 and NAPOT modes are reserved for future requirements. The L bit indicates whether the entry is locked. When the L bit is set, writes to configuration register and related address registers are ignored. Locked PMP entries are unlocked when the hart is reset. For instance, if the entry *i* is locked, writes to `pmpicfg` and `pmpaddri` are ignored. Additionally, in TOR mode, writing to `pmpaddri-1` is also ignored.

- PMP Address Registers

Each `pmpaddr#` indicates the bits [33:2] of a 34-bits physical address for RV32 systems, as shown in [Figure 2.6](#). Four `pmpaddr#` are initialized in this unit and its associated number in CSRs are `0x3b0` to `0x3b3`.

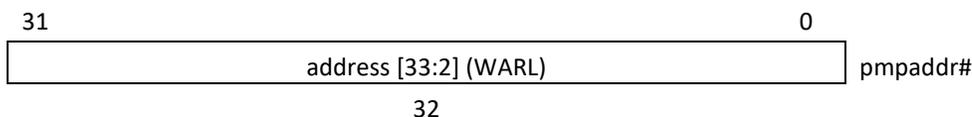


Figure 2.6. PMP Address Register Format, RV32

- Priority and Matching Logics

As shown in [Table 2.5](#), this section describes the logic to verify the access to some region in physical memory. A PMP entry needs to fully match all bytes of an access and then the L, R, W, and X bits determine whether the access passes or fails. If L is clear and the privilege mode is M-Mode, the access succeeds. If L is set, or L is clear with the privilege mode in U-Mode or S-Mode, the access is determined by R, W, X bits. If no PMP entry matches an M-Mode access, the access succeeds. If no PMP entry matches an S-Mode or U-Mode access, but at least one entry is implemented, the access fails. If at least one access fails, an access-fault exception is generated. The L bit cannot be clear until system resets.

Table 2.5. PMP Access Logic

Access Mode	Privilege Mode	Read	Write	Execute
Access in protected range	L = 0 & (M-Mode)	Succeeds		
	L = 0 & (U-Mode S-Mode)	R bit	W bit	X bit
	L = 1	R bit	W bit	X bit
Access not in protected range	M-Mode	Succeeds		
	U-Mode S-Mode	Fails		
Access cross protected and not protected range	Any Mode	Fails		
All entries are off	M-Mode	Succeeds		
All entries are off	U-Mode S-Mode	Fails		

2.2.1.13. Configurable I/D Local Bus Interface Register Wrapper

Version 2.3 of the RX core allows you to configure if the I/D Local Bus interface register wrapper is enabled. You can configure this register wrapper enabling option in Lattice Propel Builder GUI to balance the RX core fmax and DMIPS. When enabling the register wrapper, fmax increases while DMIPS decreases. Conversely, when disabling the I/D register wrapper, fmax decreases while DMIPS increases.

2.2.1.14. Write Response

Version 2.2 of the RX core starts to support the write response. This means a write error on the local and AXI bus on the processor causes the Store/AMO access fault exception of the core, exception ID: 7.

It makes sure write response is honored for both cache range and I/O range that have separate logic for dealing with write operations.

2.2.1.15. CFU-LI

Custom Function Unit Logic Interface (CFU-LI) defines a set of hardware logic signal interfaces which enable you to connect CPUs and CFUs easily. Custom Function Unit (CFU) is a kind of light-weight and customized arithmetic accelerator. With the support of CFU-LI, you can integrate CFUs into your SoC and insert Custom Functions (CF) to deploy CFU hardware, according to actual solution demand.

In the CFU-LI system, the CPU is the controller and the CFU is the responder. The CPU sends the CFU a request and eventually receives the CFU response. For each request, there is exactly one response.

The CFU-LI is stratified into separate feature levels: -L0: combinational; -L1: fixed latency; -L2: variable latency; and -L3: reordering. You can choose an appropriate interface level and design the responder interface of the CFU. For user-friendliness and in compliance with the [official spec](#), the RX core only supports one kind of interface level, L2. It has downward compatibility to support L0 or L1 as well. You can set some signal constant '0' or '1' to degrade L2 to L1 or L0.

The RX core is a -Zicfu compatible core, with a mcfu_selector CSR added and can repurpose three custom function instruction formats. To deploy the resource of CFU, you only need two steps: interface multiplexing and executing CF instructions.

1. The first step is interface multiplexing, which requires writing a specific selector value to mcfu_selector CSR 0xBC0 to select the active CFU and state context.

The mcfu_selector CSR 0xBC0 has the following fields:

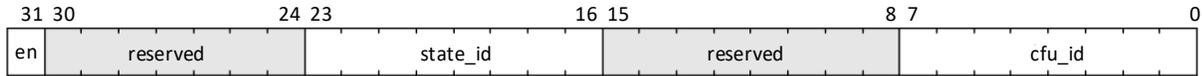


Figure 2.7. mcfu_selector CSR 0xBC0

- en: enable custom interface multiplexing.
 - When en=0, disable custom interface multiplexing. The cfu_id and state_id fields are ignored. No CFU is selected. The execution of custom-0, custom-1, or custom-2 instructions triggers Exception 2, illegal instruction.
 - When en=1, enable custom interface multiplexing. The cfu_id field selects the current CFU. Custom-0/-1/-2 instructions issue CFU requests to the CFU identified by cfu_id.
 - state_id: select the corresponding state context of the hart’s current CFU.
 - This step prepares the CPU for the next step, issuing custom instruction. According to the configuration of selector, the CPU routes the corresponding CFU and its state context to execute subsequent sequences of custom instructions.
 - cfu_id: cfu index.
 - In the scope of a system, cfu index identifies a configured interface implemented by a CFU. When one CFU implements multiple configured interfaces, different CFU_IDs identify which CFU must process the request.
2. The second step is the CPU issuing custom function instructions. The specific function of a CF is defined by customers and identified by custom function identifier (CF_ID). Each CFU packages a set of relevant custom functions. Each CF needs to be implemented by the hardware logic in CFU. You can design the CFU, according to specific scenarios.

In terms of CF instruction format, we reuse three CF formats/major opcodes: custom-0, custom-1, custom-2. These correspond to three different instructions encoding types: R-type, I-type, and flex-type.

- Custom-0 R-type encoding
 - Assembly instruction: cfu_reg cf_id, rd, rs1, rs2
 - An R-type CF instruction issues a CFU request for a zero-extended 10-bit CF_ID cf_id with two source register operands identified by rs1 and rs2. The CFU response data is written to destination register rd.

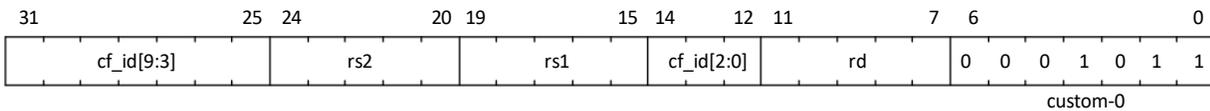


Figure 2.8. CFU R-type Instruction Encoding

- Custom-1 I-type encoding
 - Assembly instruction: cfu_imm cf_id, rd, rs1, imm
 - An I-type CF instruction issues a CFU request for a zero-extended 4-bit CF_ID cf_id with one source register operand identified by rs1 and a signed-extended 8-bit immediate value imm. The CFU response is written to destination register rd.

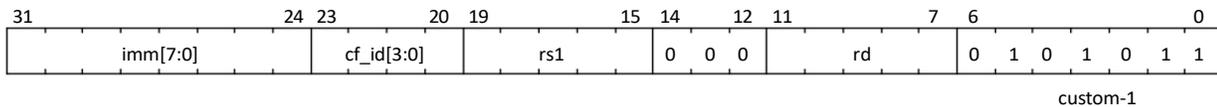


Figure 2.9. CFU I-type Instruction Encoding

- Custom-2 flex-type encoding
 - Assembly instruction: `cfu_flex cf_id, rs1, rs2`
 - A flex-type CF instruction issues a CFU request for a zero-extended 10-bit CF_ID `cf_id` with two source register operands identified by `rs1` and `rs2`. There is no destination register and CFU response data is discarded. The instruction is executed purely for its effect upon the selected state context of the selected CFU.

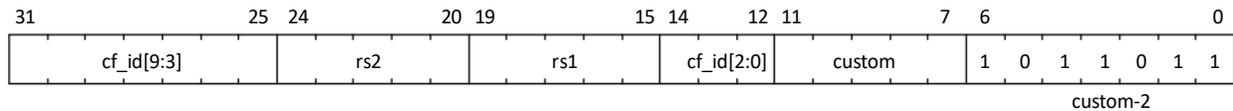


Figure 2.10. CFU Flex-type Instruction Encoding

Alternatively, the `cfu_flex25` form of instruction issues an arbitrary 25-bit custom instruction.

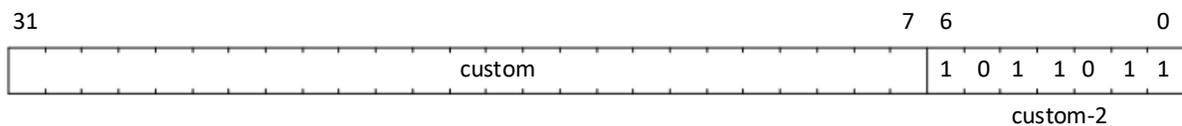


Figure 2.11. CFU Flex-type Instruction Alternate Encoding

A flex-type CF instruction may be used with a CFU-L2 request raw instruction field `req_insn` to provide an arbitrary 32-7=25-bit custom request to a CFU. The absence of an (integer) destination register field is a feature that provides added, CPU-uninterpreted, custom instruction bits to a CFU.

When the CPU issues a custom instruction, it produces a CFU request which has three sources: the fields of instruction, two source operands from the register file and/or an immediate field of instruction, and the `cfu_id` and state-id fields of `mcfu_selector` (Figure 2.12). The CFU request may include the CFU_ID, STATE_ID, raw instruction, CF_ID, and operands. The CFU_ID identifies which CFU must process the request. The CFU includes state context(s) and a data path. The STATE_ID selects the state context to use for this request. The CFU processes the request, possibly updating this state context, and produces a CFU response, which may include the response data. The CPU commits the custom function instruction by writing the response data to the destination register.

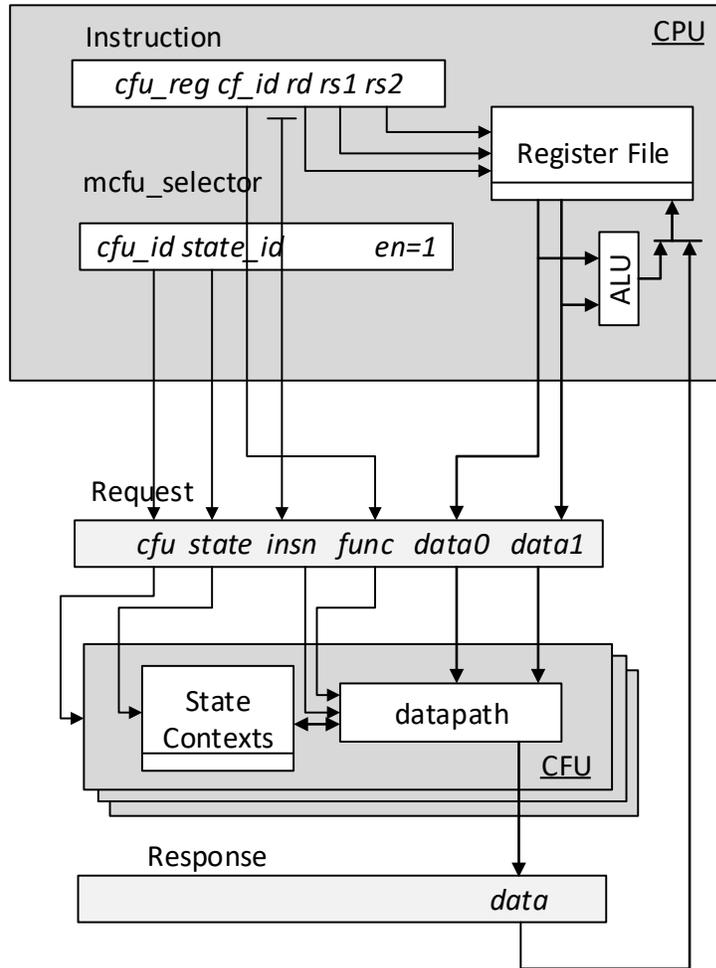


Figure 2.12. Execution of a Custom Function Instruction

Following is a code example illustrating CPU issuing stateful CF instructions f0 and f1 to CFU0, f2 and f3 to CFU1, and f4 to CFU0 again.

```

csrw mcfu_selector,x20 ; select CFU_ID=0 and STATE_ID=HART_ID
cfu_reg 0,x3,x1,x2 ; u0.f0
cfu_reg 1,x6,x5,x4 ; u0.f1
csrw mcfu_selector,x21 ; select CFU_ID=1 and STATE_ID=HART_ID
cfu_reg 2,x9,x7,x8 ; u1.f2
cfu_reg 3,x12,x11,x10 ; u1.f3
  csrw mcfu_selector,x20 ; select CFU_ID=0 and STATE_ID=HART_ID
again cfu_reg 4,x15,x13,x14 ; u0.f4

```

1. Write *mcfu_selector* for *CFU_ID=0* and *STATE_ID=HART_ID*, issue two CF instructions to CFU0;
2. Write *mcfu_selector* for *CFU_ID=1* and *STATE_ID=HART_ID*, issue two CF instructions to CFU1;
3. Write *mcfu_selector* for *CFU_ID=0* and *STATE_ID=HART_ID*, issue one CF instruction to CFU0.

2.2.2. Submodule

All the submodules are covered here. Every submodule has a fixed base address. See [Table 2.18](#).

2.2.2.1. PLIC

The Platform Level Interrupt Controller (PLIC) module is compliant with the RISC-V Platform-Level Interrupt Controller Specification (Version 1.0).

The PLIC multiplexes various device interrupts onto the external interrupt lines of Hart contexts, with hardware support for interrupt priorities. Note: The context refers to the specific privilege mode in the specific Hart of specific RISC-V processor instance. PLIC supports up to 31 external interrupts (0 is reserved) with seven priority levels, and each one has a corresponding interrupt ID, starting from 1. The first input interrupt (#1) is fixed to Watchdog Timer device.

The PLIC has two interrupt output signals connected to external interrupt inputs of the CPU – one for Machine mode, the other for Supervisor mode.

[Figure 2.13](#) shows the block diagram of PLIC operation parameter. An example for how it works: interrupt input 1 gets asserted, it goes through the Gateway and sets Interrupt Pending bit of the Source. If its Interrupt Enable (IE) is set, the priority value can be passed and compared to other inputs all the way through the chain. The interrupt ID is similarly forwarded. So, if the Max Priority is larger than the threshold, External Interrupt Pending (EIP) can be asserted and sent to the processor. Meanwhile, the Gateway blocks subsequent interrupts from being forwarded until the current interrupt has been completed. Target 0 goes to Machine mode external interrupt, and Target 1 goes to Supervisor mode external interrupt.

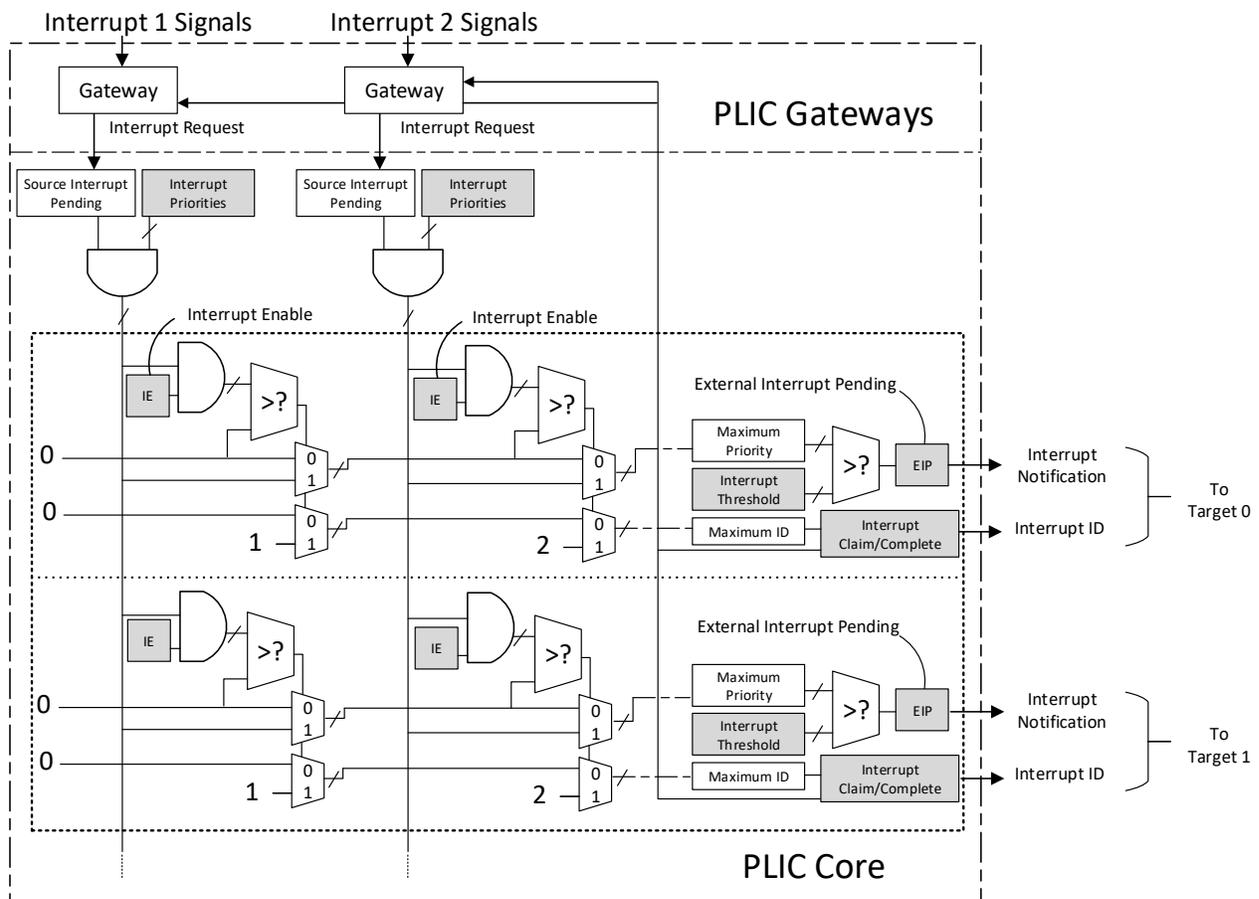


Figure 2.13. PLIC Operation Parameter Block Diagram

The following register blocks are defined in PLIC:

- Interrupt Priorities Registers

Each PLIC interrupt source can be assigned a priority by writing to its 32-bit memory-mapped priority register. A priority value of 0 is reserved to mean never interrupt and effectively disables the interrupt. Priority 1 is the lowest active priority while the maximum level of priority depends on user settings. For example, the highest priority is 3 if the width of PLIC Priority Register is set to two. Ties between global interrupts of the same priority are broken by the Interrupt ID. Interrupts with the lowest ID have the highest effective priority.

The base address of Interrupt Source Priority block within PLIC Memory Map region is fixed at 0x000000.

- Interrupt Pending Bits Registers

The current status of the interrupt source pending bits in the PLIC core can be read from the pending array, organized as 32-bit register. The pending bit for interrupt ID N is stored in bit N. Bit 0 of word 0, which represents the non-existent interrupt source 0, is hardwired to zero.

A pending bit in the PLIC core can be cleared by setting the associated enable bit then performing a claim.

The base address of Interrupt Pending Bits block within PLIC Memory Map region is fixed at 0x001000.

- Interrupt Enables Registers

Each global interrupt can be enabled by setting the corresponding bit in the enables registers. The enables registers are accessed as a contiguous array of 32-bit registers, packed the same way as the pending bits. Bit 0 of enable register 0 represents the non-existent interrupt ID 0 and is hardwired to 0. PLIC has two Interrupt Enable blocks, one for each context.

The context refers to the specific privilege mode in the specific Hart of specific RISC-V processor instance.

For the current IP, context 0 refers to hart 0 Machine mode and context 1 refers to hart 0 Supervisor mode.

The base address of Interrupt Enable Bits block within PLIC Memory Map region is fixed at 0x002000.

- Priority Thresholds Registers

PLIC provides context-based threshold register for the settings of an interrupt priority threshold of each context. The threshold register is a WARL field. The PLIC masks all PLIC interrupts of a priority less than or equal to threshold. For example, a threshold value of zero permits all interrupts with non-zero priority.

The base address of the Priority Thresholds Registers block is located at 4K alignment starting from offset 0x200000.

- Interrupt Claim Registers

The PLIC can perform an interrupt claim by reading the Claim/Complete Registers, which return the ID of the highest priority pending interrupt or zero if there is no pending interrupt. A successful claim also atomically clears the corresponding pending bit on the interrupt source.

The PLIC can perform a claim at any time and the claim operation is not affected by the setting of the Priority Thresholds Registers.

The Interrupt Claim Process Register is context-based and is located at 4K alignment + 4 starting from offset 0x200000.

- Interrupt Completion Registers

The PLIC signals the completion of executing an interrupt handler by host signaling the PLIC and writing the interrupt ID received from the claim to the Claim/Complete Register. The PLIC does not check whether or not the completion ID is the same as the last claim ID for that target. If the completion ID does not match an interrupt source that is currently enabled for the target, the completion is silently ignored.

The Interrupt Completion Registers are context-based and located at the same address as the Interrupt Claim Process Register, which is at 4K alignment + 4 starting from offset 0x200000.

[Table 2.6](#) provides the description of PLIC registers.

Table 2.6. PLIC Registers

Offset	Name	Description															
0x00_0000	—	Reserved Interrupt source 0 does not exist.															
0x00_0004	PLIC_PRIORITY_SRC1	<p>Interrupt source 1 priority</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:3]</td> <td>Reserved</td> <td>RO</td> <td>29</td> <td>0x0</td> </tr> <tr> <td>[2:0]</td> <td>Priority</td> <td>RW</td> <td>3</td> <td>0x0</td> </tr> </tbody> </table> <p>Priority: Sets the priority for a given global interrupt.</p>	Field	Name	Access	Width	Reset	[31:3]	Reserved	RO	29	0x0	[2:0]	Priority	RW	3	0x0
Field	Name	Access	Width	Reset													
[31:3]	Reserved	RO	29	0x0													
[2:0]	Priority	RW	3	0x0													
0x00_0008 0x00_007C	PLIC_PRIORITY_SRC2 ... PLIC_PRIORITY_SRC31	Same as PLIC_PRIORITY_SRC1.															
...	—	—															
0x00_1000	PLIC_PENDING1	<p>PLIC Interrupt Pending Register 1 (pending1)</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:1]</td> <td>PendingN</td> <td>RO</td> <td>31</td> <td>0x0</td> </tr> <tr> <td>[0]</td> <td>Pending0</td> <td>RO</td> <td>1</td> <td>0x0</td> </tr> </tbody> </table> <p>Pending0: Non-existent global interrupt 0 is hardwired to zero. PendingN: Equal to PLIC_PENDING1[N], Pending bit for global interrupt N.</p>	Field	Name	Access	Width	Reset	[31:1]	PendingN	RO	31	0x0	[0]	Pending0	RO	1	0x0
Field	Name	Access	Width	Reset													
[31:1]	PendingN	RO	31	0x0													
[0]	Pending0	RO	1	0x0													
...	—	—															
0x00_2000	PLIC_ENABLE1_M	<p>PLIC Interrupt Enable Register 1 (enable1) for Hart 0 M-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:1]</td> <td>EnableN</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> <tr> <td>[0]</td> <td>Enable0</td> <td>RO</td> <td>1</td> <td>0x0</td> </tr> </tbody> </table> <p>Enable0: Non-existent global interrupt 0 is hardwired to zero. EnableN: Equal to PLIC_ENABLE1_M[N], enable bit for global interrupt N.</p>	Field	Name	Access	Width	Reset	[31:1]	EnableN	RW	1	0x0	[0]	Enable0	RO	1	0x0
Field	Name	Access	Width	Reset													
[31:1]	EnableN	RW	1	0x0													
[0]	Enable0	RO	1	0x0													
...	—	—															
0x00_2080	PLIC_ENABLE1_S	<p>PLIC Interrupt Enable Register 1 (enable1) for Hart 0 S-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:1]</td> <td>EnableN</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> <tr> <td>[0]</td> <td>Enable0</td> <td>RO</td> <td>1</td> <td>0x0</td> </tr> </tbody> </table> <p>Enable0: Non-existent global interrupt 0 is hardwired to zero. EnableN: Equal to PLIC_ENABLE1_S[N], enable bit for global interrupt N.</p>	Field	Name	Access	Width	Reset	[31:1]	EnableN	RW	1	0x0	[0]	Enable0	RO	1	0x0
Field	Name	Access	Width	Reset													
[31:1]	EnableN	RW	1	0x0													
[0]	Enable0	RO	1	0x0													
...	—	—															

Offset	Name	Description															
0x20_0000	PLIC_THRESHOLD1_M	<p>PLIC Interrupt Priority Threshold Register (threshold) for Hart 0 M-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:3]</td> <td>Reserved</td> <td>RO</td> <td>29</td> <td>0x0</td> </tr> <tr> <td>[2:0]</td> <td>Threshold</td> <td>RW</td> <td>3</td> <td>0x0</td> </tr> </tbody> </table> <p>Threshold: Sets the priority threshold.</p>	Field	Name	Access	Width	Reset	[31:3]	Reserved	RO	29	0x0	[2:0]	Threshold	RW	3	0x0
Field	Name	Access	Width	Reset													
[31:3]	Reserved	RO	29	0x0													
[2:0]	Threshold	RW	3	0x0													
0x20_0004	PLIC_CLAIM_1_M	<p>PLIC Claim Register (claim) for Hart 0 M-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>Claim</td> <td>RO</td> <td>32</td> <td>0x0</td> </tr> </tbody> </table> <p>Claim: Read only field, which returns the ID of the highest priority pending interrupt or zero if there is no pending interrupt. A successful claim also atomically clears the corresponding pending bit on the interrupt source.</p>	Field	Name	Access	Width	Reset	[31:0]	Claim	RO	32	0x0					
Field	Name	Access	Width	Reset													
[31:0]	Claim	RO	32	0x0													
0x20_0004	PLIC_COMPLETE_1_M	<p>PLIC Complete Register (complete) for Hart 0 M-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>Completion</td> <td>WO</td> <td>32</td> <td>0x0</td> </tr> </tbody> </table> <p>Completion: Write only field, write to it to complete interrupt process.</p>	Field	Name	Access	Width	Reset	[31:0]	Completion	WO	32	0x0					
Field	Name	Access	Width	Reset													
[31:0]	Completion	WO	32	0x0													
...	—	—															
0x20_1000	PLIC_THRESHOLD1_S	<p>PLIC Interrupt Priority Threshold Register (threshold) for Hart 0 S-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:3]</td> <td>Reserved</td> <td>RO</td> <td>29</td> <td>0x0</td> </tr> <tr> <td>[2:0]</td> <td>Threshold</td> <td>RW</td> <td>3</td> <td>0x0</td> </tr> </tbody> </table> <p>Threshold: Sets the priority threshold.</p>	Field	Name	Access	Width	Reset	[31:3]	Reserved	RO	29	0x0	[2:0]	Threshold	RW	3	0x0
Field	Name	Access	Width	Reset													
[31:3]	Reserved	RO	29	0x0													
[2:0]	Threshold	RW	3	0x0													
0x20_1004	PLIC_CLAIM_1_S	<p>PLIC Claim Register (claim) for Hart 0 S-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>Claim</td> <td>RO</td> <td>32</td> <td>0x0</td> </tr> </tbody> </table> <p>Claim: Read only field, which returns the ID of the highest priority pending interrupt or zero if there is no pending interrupt. A successful claim also atomically clears the corresponding pending bit on the interrupt source.</p>	Field	Name	Access	Width	Reset	[31:0]	Claim	RO	32	0x0					
Field	Name	Access	Width	Reset													
[31:0]	Claim	RO	32	0x0													
0x20_1004	PLIC_COMPLETE_1_S	<p>PLIC Complete Register (complete) for Hart 0 S-Mode</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>Completion</td> <td>WO</td> <td>32</td> <td>0x0</td> </tr> </tbody> </table> <p>Completion: Write only field, write to it to complete interrupt process.</p>	Field	Name	Access	Width	Reset	[31:0]	Completion	WO	32	0x0					
Field	Name	Access	Width	Reset													
[31:0]	Completion	WO	32	0x0													

2.2.2.2. CLINT

The CLINT module implements mtime, mtimecmp, and some other memory-mapped CSR registers that are associated with timer and software interrupts.

There are two clocks for CLINT. The msip register is clocked by the system clock, while the mtimecmp and mtime are clocked by a real time clock which is typically 32 kHz for Lattice FPGA.

For Lattice Avant family devices, you cannot directly get the 32 kHz output from OSC and PLL. Thus, a 512 clock divider is designed for the real time clock port of the RX core, clk_realtime_i. It is recommended the input of the real time clock port be a 16.384 MHz clock signal, and it can later provide the 32 kHz clock signal to mtimecmp and mtime registers.

For other family devices, you can directly configure a 32 kHz output on OSC. Then, you can connect this low frequency clock to the real time clock port.

Table 2.7 provides the descriptions of CLINT registers.

Table 2.7. CLINT Registers

Offset	Name	Description															
0x00_0000	CLINT_MSIP	<p>MSIP Register for hart 0</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:1]</td> <td>Reserved</td> <td>RO</td> <td>31</td> <td>0x0</td> </tr> <tr> <td>[0]</td> <td>msip</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> </tbody> </table> <p>msip: Reflects the memory-mapped MSIP bit of the mip CSR Register. Writing a 1 in msip field results in the generation of software interrupt.</p>	Field	Name	Access	Width	Reset	[31:1]	Reserved	RO	31	0x0	[0]	msip	RW	1	0x0
Field	Name	Access	Width	Reset													
[31:1]	Reserved	RO	31	0x0													
[0]	msip	RW	1	0x0													
...	—	—															
0x00_4000	CLINT_MTIMECMP_L	<p>Machine Timer Register – mtimecmp</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>mtimecmp_l</td> <td>RW</td> <td>32</td> <td>Unchanged</td> </tr> </tbody> </table> <p>mtimecmp_l: Lower 32 bits of mtimecmp CSR Register. The first reset value is 0xFFFF_FFFF, after first write, the reset does not change the value of this field.</p>	Field	Name	Access	Width	Reset	[31:0]	mtimecmp_l	RW	32	Unchanged					
Field	Name	Access	Width	Reset													
[31:0]	mtimecmp_l	RW	32	Unchanged													
0x00_4004	CLINT_MTIMECMP_H	<p>Machine Timer Register – mtimecmp</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>mtimecmp_h</td> <td>RW</td> <td>32</td> <td>Unchanged</td> </tr> </tbody> </table> <p>mtimecmp_h: Higher 32 bits of mtimecmp CSR Register. The first reset value is 0xFFFF_FFFF, after first write, the reset does not change the value of this field.</p>	Field	Name	Access	Width	Reset	[31:0]	mtimecmp_h	RW	32	Unchanged					
Field	Name	Access	Width	Reset													
[31:0]	mtimecmp_h	RW	32	Unchanged													
...	—	—															
0x00_BFF8	CLINT_MTIME_L	<p>Machine Timer Register - mtime</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>mtime_l</td> <td>RW</td> <td>32</td> <td>0x0</td> </tr> </tbody> </table> <p>mtime_l: Lower 32 bits of mtime CSR Register.</p>	Field	Name	Access	Width	Reset	[31:0]	mtime_l	RW	32	0x0					
Field	Name	Access	Width	Reset													
[31:0]	mtime_l	RW	32	0x0													

Offset	Name	Description										
0x00_BFFC	CLINT_MTIME_H	<p>Machine Timer Register - mtime</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:0]</td> <td>mtime_h</td> <td>RW</td> <td>32</td> <td>0x0</td> </tr> </tbody> </table> <p>mtime_h: Higher 32 bits of mtime CSR Register.</p>	Field	Name	Access	Width	Reset	[31:0]	mtime_h	RW	32	0x0
Field	Name	Access	Width	Reset								
[31:0]	mtime_h	RW	32	0x0								

2.2.2.3. Watchdog Timer

The watchdog timer device (WDT) provides a simple two-stage timer controlled through one memory-mapped CSR register, WDCSR.

WDT waits a software-configured period of time with the expectation that system software re-initializes the watchdog state within this period of time. If this time period elapses without software re-init occurring, then a first-stage timeout register bit S1WTO is set within WDCSR that asserts an interrupt request output signal to notify the system of a stage 1 watchdog timeout. If a second period of time elapses without software re-init of the watchdog, then a second-stage timeout register bit S2WTO is set within WDCSR that generates a separate interrupt request output signal to notify the system of a stage 2 watchdog timeout.

For current IP, the stage 1 watchdog timeout is connected to PLIC input channel 1 (fixed) and stage 2 watchdog timeout is connected to system reset.

The mtime CSR Register provides the time base for the watchdog timeout period. The timeout period itself – in units of watchdog clock tick – is specified by the WTOCNT field of the WDCSR CSR Register. When WDCSR is written, the WTOCNT value initializes a down counter that decrements with each watchdog tick.

The watchdog tick occurs when bit 14 of mtime transitions from 0 to 1. So the watchdog timeout period is 0.512 second, based on real time clock of 32 kHz. Meanwhile, the maximum timeout period (WTOCNT = 0x3FF) is about 524 seconds.

WDT is included in the CLINT module. WDT shares the same base address (0xF200_0000) with CLINT. [Table 2.8](#) provides the description of WDT registers.

Table 2.8. WDT Registers

Offset	Name	Description																																			
0x00_D000	WDT_WDCSR	<p>Watchdog Register</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Name</th> <th>Access</th> <th>Width</th> <th>Reset</th> </tr> </thead> <tbody> <tr> <td>[31:14]</td> <td>Reserved</td> <td>RO</td> <td>18</td> <td>0x0</td> </tr> <tr> <td>[13:4]</td> <td>WTOCNT</td> <td>RW</td> <td>10</td> <td>0x0</td> </tr> <tr> <td>[3]</td> <td>S2WTO</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> <tr> <td>[2]</td> <td>S1WTO</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> <tr> <td>[1]</td> <td>Reserved</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> <tr> <td>[0]</td> <td>WDEN</td> <td>RW</td> <td>1</td> <td>0x0</td> </tr> </tbody> </table> <p>WDEN: When set, enables the WDT. When clear, the WDT is disabled and S1WTO and S2WTO output signals are forced to be zero (de-asserted). When system reset is asserted, WDT is disabled accordingly by setting WDEN to 0.</p> <p>S1WTO: Stage 1 watchdog timeout, active high.</p> <p>S2WTO: Stage 2 watchdog timeout, active high.</p> <p>WTOCNT: 10-bit timeout counter. If it is non-zero and WDEN is set, it decrements every timeout period.</p>	Field	Name	Access	Width	Reset	[31:14]	Reserved	RO	18	0x0	[13:4]	WTOCNT	RW	10	0x0	[3]	S2WTO	RW	1	0x0	[2]	S1WTO	RW	1	0x0	[1]	Reserved	RW	1	0x0	[0]	WDEN	RW	1	0x0
Field	Name	Access	Width	Reset																																	
[31:14]	Reserved	RO	18	0x0																																	
[13:4]	WTOCNT	RW	10	0x0																																	
[3]	S2WTO	RW	1	0x0																																	
[2]	S1WTO	RW	1	0x0																																	
[1]	Reserved	RW	1	0x0																																	
[0]	WDEN	RW	1	0x0																																	

2.2.2.4. UART

There is an optional local UART. This UART has fixed memory assignment.

2.3. Signal Description

Table 2.9 to Table 2.15 list the ports of the RX CPU soft IP in different categories.

2.3.1. sysClock and Reset

Table 2.9. Clock and Reset Ports

Name	Direction	Width	Description
clk_system_i	In	1	High speed system clock input.
clk_realtime_i	In	1	Low speed real time clock input.
rstn_i	In	1	System reset, active low.
system_resestn_o	Out	1	Combined system reset and Debug Reset from JTAG.
uart_rxd_i	In	1	Input rxd for local UART. Only available when UART_EN enabled.
uart_txd_o	Out	1	Output txd for local UART. Only available when UART_EN enabled.

2.3.2. Data Interface

The RX first release includes a local TCM and it is connected to the instruction port of the RISC-V core directly. So, there is no exported instruction interface. In certain scenarios, there is a need to have an exported instruction port. For example, the instruction may come from an external flash through a flash controller.

To support this, we provide an optional local bus port to connect TCM, while an extra optional AXI Interface for instruction port is available for accessing other memory mapped components such as a flash controller or DDR controller.

So, there are options for you to enable either Local Bus Interface for TCM or AXI Interface for external memory, or both Local Bus and AXI Interface.

Meanwhile, to remove potential dependency on other components at SoC level, there is an option for you to enable register slice for AXI-based instruction or data port, as shown in Figure 2.1.

Version 2.2 of the RX core starts to add CFU-LI support for you to connect a CFU accelerator.

Table 2.10. CFU-LI Ports (Optional)

Port	Direction	Width	Group	Description
req_valid	out	1	Request	Request valid
req_ready	in	1		Request ready
req_cfu	out	4		Request CFU_ID
req_state	out	3		Request STATE_ID
req_func	out	3		Request CF_ID
req_insn	out	32		Request raw instruction
req_data0	out	32		Request operand data 0
req_data1	out	32		Request operand data 1
resp_valid	in	1	Response	Response valid
resp_ready	out	1		Response ready
resp_status	in	3		Response status
resp_data	in	32		Response data

Table 2.11. Local Data Ports (Optional)

Name	Direction	Width	Group	Description
LOCAL_BUS_M_DATA_cmd_valid	Out	1	Local Bus Command	—
LOCAL_BUS_M_DATA_cmd_ready	In	1		—
LOCAL_BUS_M_DATA_cmd_payload_wr	Out	1		—
LOCAL_BUS_M_DATA_cmd_payload_uncached	Out	1		Fixed 1'b0.
LOCAL_BUS_M_DATA_cmd_payload_address	Out	32		—
LOCAL_BUS_M_DATA_cmd_payload_data	Out	32		—
LOCAL_BUS_M_DATA_cmd_payload_mask	Out	4		The width field of load or store instruction.
LOCAL_BUS_M_DATA_cmd_payload_size	Out	3		3'b101: an 8-words read burst transfer. 3'b010: a single burst transfer.
LOCAL_BUS_M_DATA_cmd_payload_last	Out	1		—
LOCAL_BUS_M_DATA_rsp_valid	In	1		Local Bus Read Response
LOCAL_BUS_M_DATA_rsp_payload_last	In	1	—	
LOCAL_BUS_M_DATA_rsp_payload_data[31:0]	In	32	—	
LOCAL_BUS_M_DATA_rsp_payload_error	In	1	—	

Table 2.12. Local Instruction Ports (Optional)

Name	Direction	Width	Group	Description
LOCAL_BUS_M_INSTR_cmd_valid	Out	1	Local Bus Command	—
LOCAL_BUS_M_INSTR_cmd_ready	In	1		—
LOCAL_BUS_M_INSTR_cmd_payload_wr	Out	1		Fixed 1'b0.
LOCAL_BUS_M_INSTR_cmd_payload_uncached	Out	1		Fixed 1'b0.
LOCAL_BUS_M_INSTR_cmd_payload_address	Out	32		—
LOCAL_BUS_M_INSTR_cmd_payload_data	Out	32		Fixed 32'b0.
LOCAL_BUS_M_INSTR_cmd_payload_mask	Out	4		Fixed 4'b0.
LOCAL_BUS_M_INSTR_cmd_payload_size	Out	3		3'b101: an 8-words read burst transfer. 3'b010: a single burst transfer.
LOCAL_BUS_M_INSTR_cmd_payload_last	Out	1		Fixed 4'b0.
LOCAL_BUS_M_INSTR_rsp_valid	In	1		Local Bus Read Response
LOCAL_BUS_M_INSTR_rsp_payload_last	In	1	—	
LOCAL_BUS_M_INSTR_rsp_payload_data[31:0]	In	32	—	
LOCAL_BUS_M_INSTR_rsp_payload_error	In	1	—	

Table 2.13. AXI Data Ports (Fixed)¹

Name	Direction	Width	Group	Description	
AXI_M_DATA_AWREADY	In	1	AXI4 Manager Write Address Channel	—	
AXI_M_DATA_AWVALID	Out	1		—	
AXI_M_DATA_AWADDR	Out	32		—	
AXI_M_DATA_AWLEN	Out	8		—	
AXI_M_DATA_AWSIZE	Out	3		—	
AXI_M_DATA_AWBURST	Out	2		Not implemented.	
AXI_M_DATA_AWLOCK	Out	1		Not implemented.	
AXI_M_DATA_AWCACHE	Out	4		Not implemented.	
AXI_M_DATA_AWPROT	Out	3		Not implemented.	
AXI_M_DATA_AWQOS	Out	4		Not implemented.	
AXI_M_DATA_AWREGION	Out	4		Not implemented.	
AXI_M_DATA_AWID	Out	1		Not implemented.	
AXI_M_DATA_WREADY	In	1	AXI4 Manager Write Data Channel	—	
AXI_M_DATA_WVALID	Out	1		—	
AXI_M_DATA_WDATA	Out	32		—	
AXI_M_DATA_WLAST	Out	1		Not implemented.	
AXI_M_DATA_WSTRB	Out	4		—	
AXI_M_DATA_BVALID	In	1		—	
AXI_M_DATA_BRESP	In	2	AXI4 Manager Write Response Channel	b'00: OKAY. b'10: SLVERR. b'11: DECERR.	
AXI_M_DATA_BID	In	1		Not implemented.	
AXI_M_DATA_BREADY	Out	1		—	
AXI_M_DATA_ARVALID	In	1	AXI4 Manager Read Address Channel	—	
AXI_M_DATA_ARREADY	Out	1		—	
AXI_M_DATA_ARCACHE	Out	4		Not implemented.	
AXI_M_DATA_ARPROT	Out	3		Not implemented.	
AXI_M_DATA_ARQOS	Out	4		Not implemented.	
AXI_M_DATA_ARREGION	Out	4		Not implemented.	
AXI_M_DATA_ARID	Out	1		Not implemented.	
AXI_M_DATA_ARADDR	Out	32		—	
AXI_M_DATA_ARLEN	Out	8		—	
AXI_M_DATA_ARSIZE	Out	3		—	
AXI_M_DATA_ARBURST	Out	2		Fixed 2'b01.	
AXI_M_DATA_ARLOCK	Out	1		Not implemented.	
AXI_M_DATA_RID	In	1		AXI4 Manager Read Data Channel	Not implemented.
AXI_M_DATA_RDATA	In	32			—
AXI_M_DATA_RRESP	In	2	b'00: OKAY. b'10: SLVERR. b'11: DECERR.		
AXI_M_DATA_RLAST	In	1	—		
AXI_M_DATA_RVALID	In	1	—		
AXI_M_DATA_RREADY	Out	1	—		

Note:

- Optional interfaces can be configured through the RX IP block wizard GUI upon your need. Meanwhile, the fixed interface is necessary for the RX core and cannot be configured through the GUI.

Table 2.14. AXI Instruction Ports (Optional)

Name	Direction	Width	Group	Description
AXI_M_INSTR_AWREADY	In	1	AXI4 Manager Write Address Channel	Not used.
AXI_M_INSTR_AWVALID	Out	1		Not used.
AXI_M_INSTR_AWADDR	Out	32		Not used.
AXI_M_INSTR_AWLEN	Out	8		Not used.
AXI_M_INSTR_AWSIZE	Out	3		Not used.
AXI_M_INSTR_AWBURST	Out	2		Not used.
AXI_M_INSTR_AWLOCK	Out	1		Not used.
AXI_M_INSTR_AWCACHE	Out	4		Not used.
AXI_M_INSTR_AWPROT	Out	3		Not used.
AXI_M_INSTR_AWQOS	Out	4		Not used.
AXI_M_INSTR_AWREGION	Out	4		Not used.
AXI_M_INSTR_AWID	Out	1		Not used.
AXI_M_INSTR_WREADY	In	1	AXI4 Manager Write Data Channel	Not used.
AXI_M_INSTR_WVALID	Out	1		Not used.
AXI_M_INSTR_WDATA	Out	32		Not used.
AXI_M_INSTR_WLAST	Out	1		Not used.
AXI_M_INSTR_WSTRB	Out	4		Not used.
AXI_M_INSTR_BVALID	In	1	AXI4 Manager Write Response Channel	Not used.
AXI_M_INSTR_BRESP	In	2		Not used.
AXI_M_INSTR_BID	In	1		Not used.
AXI_M_INSTR_BREADY	Out	1		Not used.
AXI_M_INSTR_ARVALID	In	1	AXI4 Manager Read Address Channel	—
AXI_M_INSTR_ARREADY	Out	1		—
AXI_M_INSTR_ARCACHE	Out	4		Not implemented.
AXI_M_INSTR_ARPROT	Out	3		Not implemented.
AXI_M_INSTR_ARQOS	Out	4		Not implemented.
AXI_M_INSTR_ARREGION	Out	4		Not implemented.
AXI_M_INSTR_ARID	Out	1		Not implemented.
AXI_M_INSTR_ARADDR	Out	32		—
AXI_M_INSTR_ARLEN	Out	8		—
AXI_M_INSTR_ARSIZE	Out	3		Fixed 2'b10.
AXI_M_INSTR_ARBURST	Out	2		Fixed 2'b01.
AXI_M_INSTR_ARLOCK	Out	1		Not implemented.
AXI_M_INSTR_RID	In	1	AXI4 Manager Read Data Channel	Not implemented.
AXI_M_INSTR_RDATA	In	32		—
AXI_M_INSTR_RRESP	In	2		b'00: OKAY. b'10: SLVERR. b'11: DECERR.
AXI_M_INSTR_RLAST	In	1		—
AXI_M_INSTR_RVALID	In	1		—
AXI_M_INSTR_RREADY	Out	1		—

2.3.3. Interrupt Interface

Table 2.15. Interrupt Ports

Name	Type	Width	Description
EXT_IRQ_Sx	In	2 ~ 14	Peripheral interrupts.

2.4. Attribute Summary

The configurable attributes are shown in [Table 2.16](#) and are described in [Table 2.17](#).

The attributes can be configured through the Propel Builder software.

Table 2.16. Configurable Attributes

Attribute	Selectable Values	Default	Dependency on Other Attributes/Device Family
General			
Processor Mode	Balanced	Balanced	—
Debug configuration			
Debug Enable	Disabled, Enabled	Enabled	—
Soft JTAG Enable	Disabled, Enabled	Enabled (for Lattice Avant family devices) Disabled (for other family devices)	Debug Enable
JTAG Channel Selection	14, 15, 16	14	Debug Enable
TCM Local Bus Ports Configuration¹			
TCM Enable	Disabled, Enabled (with AXI Instruction Ports Enabled) Enabled (with AXI Instruction Ports Disabled)	Enabled	AXI Instruction Ports Enable
AXI Instruction Ports Configuration¹			
AXI Instruction Ports Enable	Disabled, Enabled (with TCM Enabled) Enabled (with TCM Disabled)	Enabled	TCM Enable
AXI Register Slice Type	0, 1, 2	0	AXI Instruction Ports Enable
CFU Configuration			
Enable CFU Ports	Disabled, Enabled	Disabled	—
Number of CFU	1, 2	1	Enable CFU Ports
PLIC Configuration			
Number of User Interrupt Requests	2 ~ 14	8	—
Interrupt for Supervisor Mode	Disabled, Enabled	Disabled	—
Width of PLIC priority register	2, 3	3	—
NMI Configuration			
Non-maskable interrupt enable	Disabled, Enabled	Disabled	—
Local UART			
Enable UART instance	Disabled, Enabled	Disabled	—
System Clock Frequency (MHz)	2 - 200	100	Enable UART Instance
Serial Data Width	5, 6, 7, 8	8	Enable UART Instance

Attribute	Selectable Values	Default	Dependency on Other Attributes/Device Family
Stop Bits	0, 1	1	Enable UART Instance
Parity Enable	Disabled, Enabled	Disabled	Enable UART Instance
UART Standard Baud Rate	2400, 4800, 9600, 14400, 19200, 28800, 38400, 56000, 57600, 115200	115200	Enable UART Instance

Note:

1. Either the AXI Instruction Port or both of the TCM ports must be enabled to make the RX core perform normally.

Table 2.17. Attributes Description

Attribute	Description		
General			
Processor Mode	Balanced Mode offers RV32IMC with some other feature sets not accessible to users to get the most comprehensive performance.		
Debug configuration			
Debug Enable	Whether to enable Debug module or not.		
Soft JTAG Enable	Whether to enable Soft JTAG or not.		
JTAG Channel Selection	Select the channel of harden JTAG block.		
TCM Local Bus Ports Configuration			
TCM Enable	Whether to enable TCM Local Bus Ports or not.		
AXI Instruction Ports Configuration			
AXI Instruction Ports enable	Whether to enable AXI Instruction Ports or not.		
AXI Register Slice Type	Type of AXI Instruction Ports channel Register Slice.	0	Bypass register slice
		1	Simple buffer
		2	Skid buffer
CFU Configuration			
Enable CFU Ports	Whether to enable CFU Ports or not.		
Number of CFU	Number of CFU Ports.		
PLIC Configuration			
Number of User Interrupt Requests	Number of Interrupt for peripherals.		
Interrupt for Supervisor Mode	Whether or not to enable interrupt for Supervisor mode. If not, then all external interrupts go to Machine mode only.		
Width of PLIC priority register	Data width of PLIC priority register. Default to 3 bits, so 8 priority levels in total.		
Non-maskable interrupt enable	Configure the reset mode to be either sync or async.		
Local UART			
Enable UART instance	Disabled, Enabled		
System Clock Frequency (MHz)	Specifies the target frequency of the system clock. This is used for baud rate calculation.		
Serial Data Width	Specifies the default data bit width of UART transactions.		
Stop Bits	Specifies the default number of stop bits to be transmitted and received.		
Parity Enable	Specifies the absence/presence of parity.		
UART Standard Baud Rate	Selects between Standard Baud Rate and Custom Baud Rate for the reset value of Divisor Latch Register. The selected baud rate is used to set the reset value of Divisor Latch Register as follows: {DLR_MSB, DLR_LSB} = System Clock Frequency (MHz) x 1000000 / Selected Baud Rate.		

2.5. Memory Map

To achieve better overall performance, this IP separates the whole 4G memory range into several sections with some usage convention (Table 2.18). The region #0 is mandatory because it is a cacheable range. Other regions are optional.

Table 2.18. SoC Memory Map

Base Address	Range	End Address	Description
Region #0 (0x0000_0000 - 0x0FFF_FFFF) - RISC-V RX IP			
0x0000_0000	128KB	0x0001_FFFF	TCM (enable TCM)/ User Memory extension (disable TCM).
0x0002_0000	— ¹	0x0FFF_FFFF	User Memory extension.
Region #15 (0xF000_0000 - 0xFFFF_FFFF) - RISC-V RX IP			
0xF000_0000	1KB	0xF000_03FF	Local UART when UART_EN asserted; otherwise, reserved.
0xF000_0400	32767KB	0xF1FF_FFFF	Reserved.
0xF200_0000	1024KB	0xF20F_FFFF	CLINT & Watchdog Timer.
0xF210_0000	NA	0xFBFF_FFFF	Reserved.
0xFC00_0000	4096KB	0xFC3F_FFFF	PLIC.
0xFC40_0000	NA	0xFFFF_FFFF	Reserved.
Region #1 (0x1000_0000 - 0x1FFF_FFFF)			
...	— ¹	— ¹	— ¹
Region #2 (0x2000_0000 - 0x2FFF_FFFF)			
...	— ¹	— ¹	— ¹

Note:

1. The actual valid base address/range/end address is determined by the user SoC design.

The total 4G memory space is divided into 16 256 MB regions to ease potential future PMP settings.

Processor cache range is 0x0000_0000 to 0x0FFF_FFFF, so region #0 is the only region for cacheable components. The first 128 KB (0x0000_0000 to 0x0001_FFFF) are reserved for TCM. The remaining spaces are for user external memory extension, either on-chip EBR-based memory or off-chip memory like flash and SDRAM.

Region #15 is reserved for RISC-V RX IP – local UART, CLINT, Watchdog Timer, and PLIC are assigned to this region.

All the other regions are for user extension.

3. RISC-V RX CPU IP Generation

This section provides information on how to generate the CPU IP Core module using Lattice Propel Builder.

To generate the RX IP Core module:

1. In Lattice Propel Builder, create a new design. Select the CPU package.
2. Enter the component name, as shown in [Figure 3.1](#). Click **Next**.

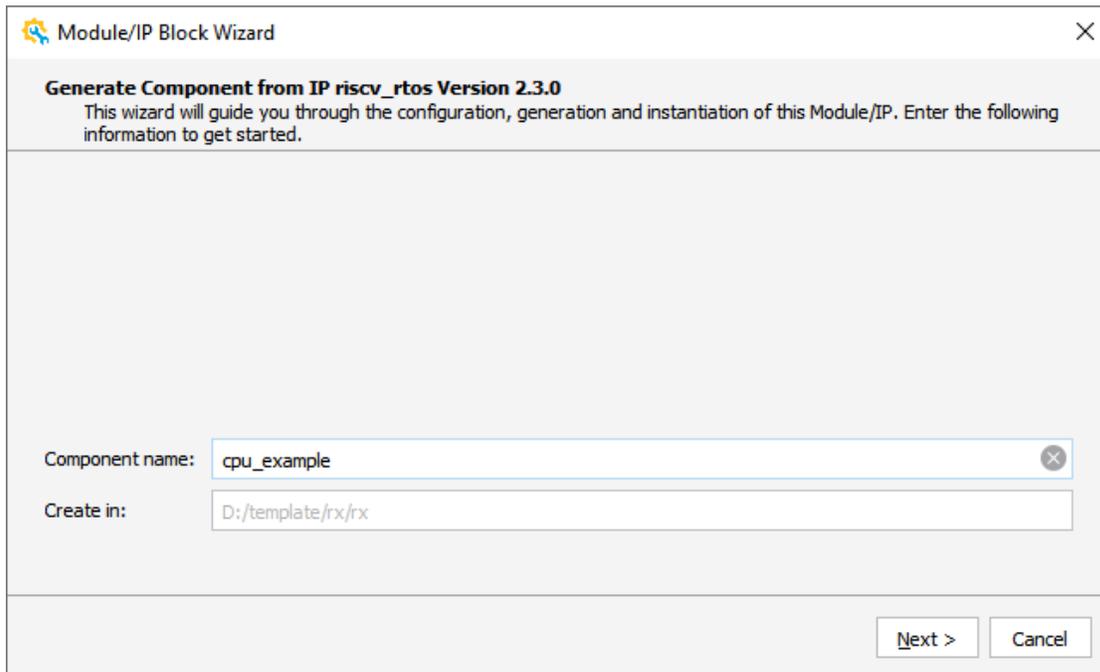


Figure 3.1. Entering Component Name

3. Configure the parameters, as shown in [Figure 3.2](#). Click **Generate**.

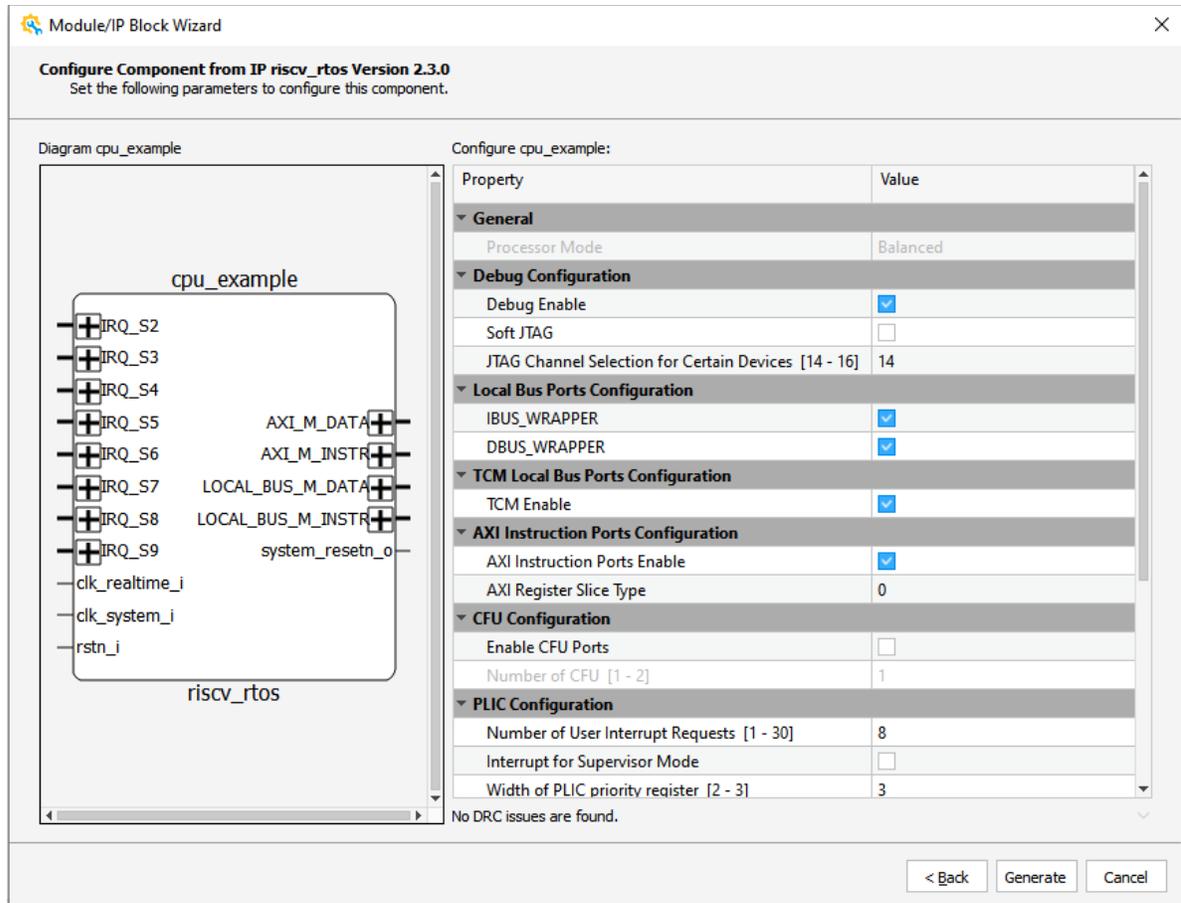


Figure 3.2. Configuring Parameters

4. Verify the information, as shown in [Figure 3.3](#). Click **Finish**.

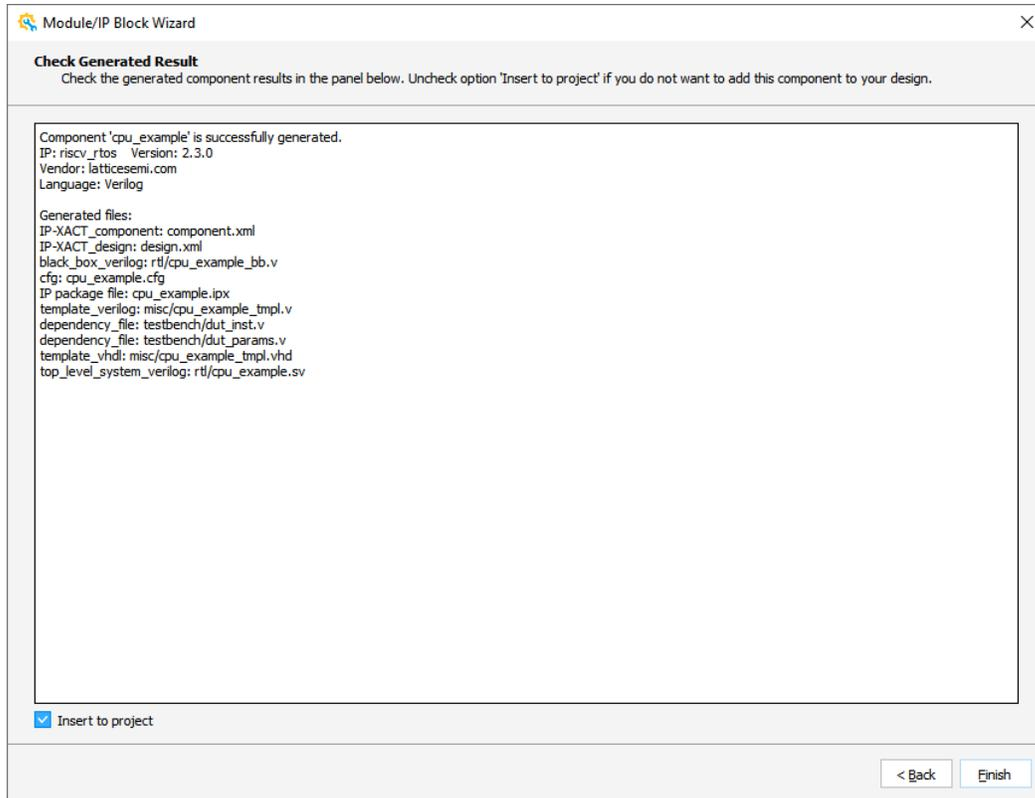


Figure 3.3. Verifying Results

- Confirm or modify the module instance name, as shown in [Figure 3.4](#). Click **OK**.

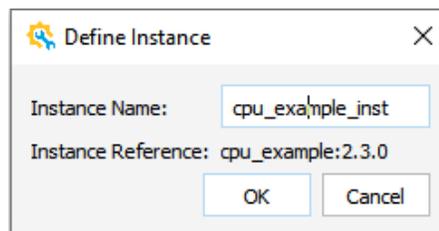


Figure 3.4. Specifying Instance Name

- The CPU IP instance is successfully generated, as shown in [Figure 3.5](#).

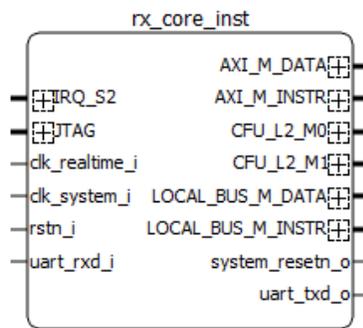


Figure 3.5. Generated Instance

Appendix A. Resource Utilization

Table A.1. Resource Utilization in CertusPro-NX Device

Configuration	LUTs	Registers	sysMEM EBRs
Processor core	8846	4813	21
Processor core + PLIC + CLINT + UART + CFU-LI + Debug	9827	5718	21

Note: Resource utilization characteristics are generated using Lattice Radiant 2022.1 software.

Table A.2. Resource Utilization in Lattice Avant Device

Configuration	LUTs	Registers	sysMEM EBRs
Processor core	8673	4537	20
Processor core + PLIC + CLINT + UART + CFU-LI + Debug	9570	5441	20

Note: Resource utilization characteristics are generated using Lattice Radiant 2022.1 software.

Appendix B. Debug with Soft JTAG

To debug with Soft JTAG:

1. In Propel Builder, enable **Soft JTAG** in the IP block Wizard GUI (Figure 3.2) when generating the IP.
2. After the IP is generated, right-click on the **JTAG** port and select **Export** (Figure B.1).

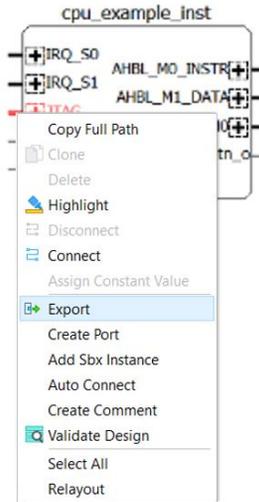


Figure B.1. Exporting Pins

3. Assign the normal I/O as JTAG I/O using the Device Constraint Editor in Lattice Radiant software.
 - a. Synthesize the design SoC in Lattice Radiant software by clicking **Synthesis Design** from the process toolbar.
 - b. Open **Device Constraint Editor** from the **Tools** tab in Lattice Radiant software and assign the pins. For different devices, refer to the user guide of each board. The following assignment is for LFCPNX-100-9LF672C (Figure B.2).

Name	Group By	Pin	BANK	IO_TYPE	DIFFDR
All Port	N/A	N/A	N/A	N/A	N/A
Input	N/A	N/A	N/A	N/A	N/A
rstn_i	N/A	J5	0	LVCMOS18	NA
cpu0_inst_JTAG_interface_TDI_port	N/A	J24	7	LVCMOS33	NA
cpu0_inst_JTAG_interface_TMS_port	N/A	J26	7	LVCMOS33	NA
s1_uart_rxd_i	N/A	L2	1	LVCMOS33	NA
Clock	N/A	N/A	N/A	N/A	N/A
cpu0_inst_JTAG_interface_TCK_port	N/A	H20	7	LVCMOS33	NA
Output	N/A	N/A	N/A	N/A	N/A
cpu0_inst_JTAG_interface_TDO_port	N/A	H26	7	LVCMOS33	NA

Figure B.2. Assigning Pins

- c. Double-click on the targeted strategy in the **File List** view to open the **Strategies** dialog box.
- d. In the **Strategies** dialog box, set the environment variable for **Place & Route Design**. Enter “-exp WARNING_ON_PCLKPLC1=1” to the Value of **Command Line Options** if TCK connects to normal I/O (Figure B.3).

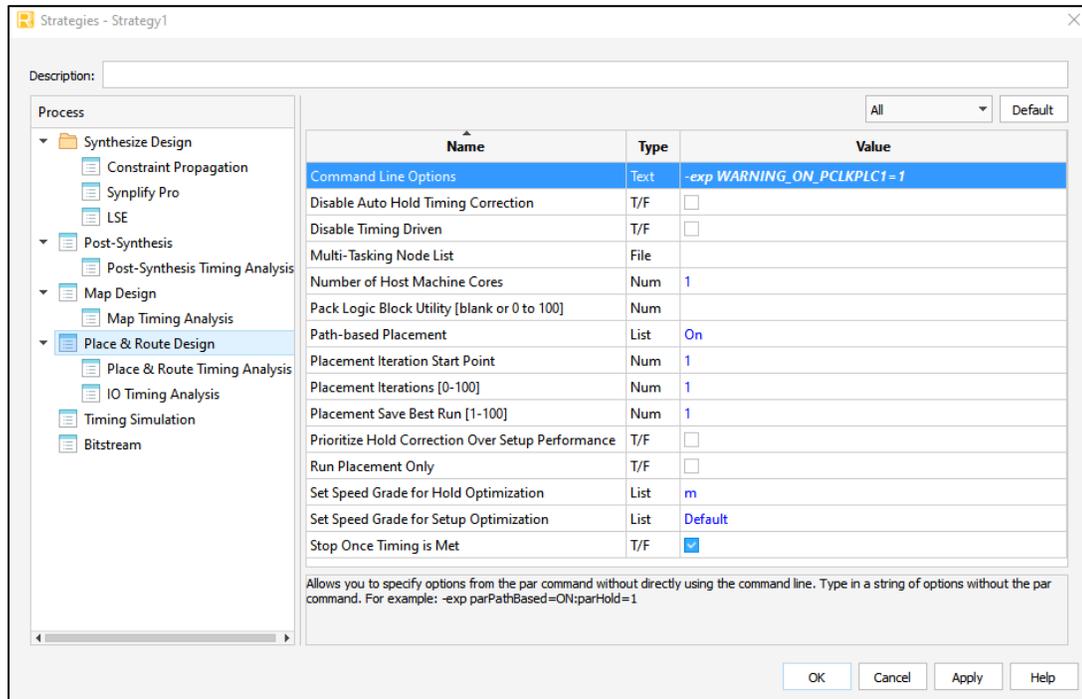


Figure B.3. Setting Environment Variables

- e. Generate the bitstream and load it to the board.
 - f. Connect the pins on cable to the board according to your assignments. Connect VCC and GND. Scan the cable in Propel SDK and ignore the scanning of the device.
- Note:** C projects generated for Lattice Avant family devices cannot use Soft JTAG to debug on MachXO5-NX, Certus-NX, CertusPro-NX, and CrossLink-NX boards and vice versa.

References

- [RISC-V Composable Custom Extensions Specification \(Draft\)](#)
- [RISC-V Instruction Set Manual Volume I: Unprivileged ISA \(20191213\)](#)
- [RISC-V Instruction Set Manual Volume II: Privileged Architecture \(20211203\)](#)
- RISC-V Privileged Specification Version 1.12
- RISC-V Platform Specification Version 0.2
- RISC-V Platform-Level Interrupt Controller Specification Version 1.0
- SiFive Interrupt Cookbook v1.2
- RISC-V Watchdog Timer Specification Version 1.0-draft-0.5
- [AMBA 3 AHB-Lite Protocol v1.0](#)
- AMBA AXI and ACE Protocol Specification vF.b
- Local Bus Specification
- [Lattice Propel Builder 2023.2 User Guide \(FPGA-UG-02196\)](#)

For more information, refer to:

- [Lattice Propel Web Page](#)
- [Lattice Avant-E Family Devices Web Page](#)
- [MachXO5-NX Family Devices Web Page](#)
- [Certus-NX Family Devices Web Page](#)
- [CertusPro-NX Family Devices Web Page](#)
- [CrossLink-NX Family Devices Web Page](#)
- [Lattice Insights for Training Series and Learning Plans](#)

Technical Support Assistance

Submit a technical support case through www.latticesemi.com/techsupport.

For frequently asked questions, refer to the Lattice Answer Database at www.latticesemi.com/Support/AnswerDatabase.

Revision History

Revision 1.0, October 2023

Section	Change Summary
All	Production release.



www.latticesemi.com