

# Lattice Radiant Software 2025.2.1 Help



April 6, 2026

---

## Copyright

Copyright © 2026 Lattice Semiconductor Corporation. All rights reserved. This document may not, in whole or part, be reproduced, modified, distributed, or publicly displayed without prior written consent from Lattice Semiconductor Corporation (“Lattice”).

## Trademarks

All Lattice trademarks are as listed at [www.latticesemi.com/legal](http://www.latticesemi.com/legal). Synopsys and Synplify Pro are trademarks of Synopsys, Inc. Aldec and Active-HDL are trademarks of Aldec, Inc. QuestaSim is a trademark or registered trademark of Siemens Industry Software Inc. or its subsidiaries in the United States or other countries. All other trademarks are the property of their respective owners.

## Disclaimers

NO WARRANTIES: THE INFORMATION PROVIDED IN THIS DOCUMENT IS “AS IS” WITHOUT ANY EXPRESS OR IMPLIED WARRANTY OF ANY KIND INCLUDING WARRANTIES OF ACCURACY, COMPLETENESS, MERCHANTABILITY, NONINFRINGEMENT OF INTELLECTUAL PROPERTY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL LATTICE OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THE INFORMATION PROVIDED IN THIS DOCUMENT, EVEN IF LATTICE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS PROHIBIT THE EXCLUSION OR LIMITATION OF CERTAIN LIABILITY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Lattice may make changes to these materials, specifications, or information, or to the products described herein, at any time without notice. Lattice makes no commitment to update this documentation. Lattice reserves the right to discontinue any product or service without notice and assumes no obligation to correct any errors contained herein or to advise any user of this document of any correction if such be made. Lattice recommends its customers obtain the latest version of the relevant information to establish that the information being relied upon is current and before ordering any products.

---

## Type Conventions Used in This Document

| Convention                                         | Meaning or Use                                                                                    |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>Bold</b>                                        | Items in the user interface that you select or click. Text that you type into the user interface. |
| <i>&lt;Italic&gt;</i>                              | Variables in commands, code syntax, and path names.                                               |
| <b>Ctrl+L</b>                                      | Press the two keys at the same time.                                                              |
| <code>Courier</code>                               | Code examples. Messages, reports, and prompts from the software.                                  |
| <code>...</code>                                   | Omitted material in a line of code.                                                               |
| <code>.</code><br><code>.</code><br><code>.</code> | Omitted lines in code and report examples.                                                        |
| <code>[ ]</code>                                   | Optional items in syntax descriptions. In bus specifications, the brackets are required.          |
| <code>( )</code>                                   | Grouped items in syntax descriptions.                                                             |
| <code>{ }</code>                                   | Repeatable items in syntax descriptions.                                                          |
| <code> </code>                                     | A choice between items in syntax descriptions.                                                    |

# Contents

|                  |                                                      |           |
|------------------|------------------------------------------------------|-----------|
| <b>Chapter 1</b> | <b>Getting Started with Lattice Radiant Software</b> | <b>9</b>  |
|                  | Tutorials                                            | 9         |
|                  | User Guides                                          | 10        |
|                  | Other Resources                                      | 10        |
|                  | Getting Help                                         | 11        |
|                  | Debugging the Software License                       | 14        |
|                  | Copyright, Trademarks, and Disclaimers               | 15        |
| <b>Chapter 2</b> | <b>Managing Projects</b>                             | <b>17</b> |
|                  | Running the Radiant Software                         | 18        |
|                  | Creating a New Project                               | 19        |
|                  | Modifying a Project                                  | 21        |
|                  | Importing Lattice Diamond Projects                   | 22        |
|                  | Targeting a Device                                   | 22        |
|                  | Viewing Project Properties                           | 23        |
|                  | Saving Project Files                                 | 23        |
|                  | Managing Project Sources                             | 25        |
|                  | Working with Implementations                         | 41        |
|                  | Using Strategies                                     | 43        |
|                  | Analyzing a Design                                   | 49        |
|                  | Running Processes                                    | 64        |
|                  | Clearing Tool Memory                                 | 68        |
|                  | Setting Options for Synthesis and Simulation         | 69        |
|                  | Working with Run Manager                             | 79        |
|                  | Finding Results                                      | 85        |
|                  | Viewing Logs and Reports                             | 86        |
|                  | Setting Tool and Environment Options                 | 94        |



---

|                  |                                                                 |            |
|------------------|-----------------------------------------------------------------|------------|
|                  | Block-Based Design - Using Macro Blocks                         | 96         |
| <b>Chapter 3</b> | <b>Entering the Design</b>                                      | <b>113</b> |
|                  | HDL Design Entry                                                | 114        |
|                  | Packaging IP Using IP Packager                                  | 147        |
|                  | Designing with Soft IP, Modules, and PMI                        | 149        |
| <b>Chapter 4</b> | <b>Securing the Design</b>                                      | <b>160</b> |
|                  | HDL File Encryption Steps                                       | 162        |
|                  | Synthesizing Encrypted IP                                       | 166        |
|                  | Cross-probing in Encrypted Design                               | 167        |
|                  | Secure Objects in the Design                                    | 167        |
|                  | Securing the Bitstream                                          | 178        |
| <b>Chapter 5</b> | <b>Simulating the Design</b>                                    | <b>193</b> |
|                  | Simulation in the Radiant Software                              | 193        |
|                  | Timing Simulation                                               | 199        |
|                  | Third-Party Simulators                                          | 200        |
| <b>Chapter 6</b> | <b>Applying Design Constraints</b>                              | <b>209</b> |
|                  | Unified Constraints Flow                                        | 209        |
|                  | Understanding Implications of Radiant Software Constraint Flows | 212        |
|                  | Applying Differential Signal Design Constraints                 | 214        |
|                  | Timing and Physical Constraints                                 | 215        |
|                  | Checking Constraint Coverage                                    | 216        |
|                  | Migrating from Former Lattice Diamond Preferences               | 218        |
|                  | Migrating Pin Assignments                                       | 220        |
|                  | Using Radiant Software Pre-Synthesis Constraints                | 224        |
|                  | Constraint Propagation                                          | 230        |
|                  | Applying Radiant Software Physical Constraints                  | 306        |
|                  | Constraint Conflict Resolution                                  | 317        |
|                  | Checking Design Rules                                           | 321        |
|                  | Analyzing SSO                                                   | 326        |
|                  | Exporting Pin Files                                             | 331        |
| <b>Chapter 7</b> | <b>Implementing the Design</b>                                  | <b>334</b> |
|                  | Synthesizing the Design                                         | 334        |
|                  | Mapping                                                         | 343        |
|                  | Place and Route                                                 | 350        |
|                  | Bit Generation                                                  | 368        |
| <b>Chapter 8</b> | <b>Analyzing Static Timing</b>                                  | <b>377</b> |
|                  | Options for Timing Analysis Reports                             | 378        |
|                  | Running Post-Synthesis Constraint Scenario Timing Reports       | 378        |
|                  | Reading Timing Analysis Reports                                 | 379        |

|                   |                                                                                                                                                                 |            |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
|                   | Understanding I/O Timing Analysis                                                                                                                               | 384        |
|                   | Using Timing Analyzer                                                                                                                                           | 390        |
|                   | Using Standalone Timing Analyzer                                                                                                                                | 393        |
| <b>Chapter 9</b>  | <b>Analyzing Power Consumption</b>                                                                                                                              | <b>398</b> |
|                   | Starting Power Calculator from the Radiant Software                                                                                                             | 399        |
|                   | Starting Power Calculator as a Stand-Alone Tool                                                                                                                 | 400        |
|                   | Running Power Calculator from the Tcl Console                                                                                                                   | 401        |
|                   | Power Analysis Design Flow                                                                                                                                      | 401        |
|                   | Inputs                                                                                                                                                          | 402        |
|                   | Outputs                                                                                                                                                         | 403        |
|                   | Static and Dynamic Power Consumption                                                                                                                            | 403        |
|                   | Activity Factor Calculation                                                                                                                                     | 403        |
|                   | Enable Factor Calculation                                                                                                                                       | 404        |
|                   | Power Calculator Window Features                                                                                                                                | 404        |
|                   | Working with Power Calculator Files                                                                                                                             | 415        |
|                   | Entering Data                                                                                                                                                   | 422        |
|                   | Reverting to Calculation Mode                                                                                                                                   | 427        |
|                   | Changing the Global Default Activity Factor                                                                                                                     | 427        |
|                   | Importing a Value Change Dump (.vcd) File                                                                                                                       | 428        |
|                   | Changing the Global Default Frequency Setting                                                                                                                   | 428        |
|                   | Estimating Resource Usage                                                                                                                                       | 430        |
|                   | Estimating Routing Resource Usage                                                                                                                               | 430        |
|                   | Running Immediate Calculation                                                                                                                                   | 431        |
|                   | Controlling Operating Temperature                                                                                                                               | 432        |
|                   | Generating Power Consumption Reports                                                                                                                            | 437        |
| <b>Chapter 10</b> | <b>Using IBIS Model Files</b>                                                                                                                                   | <b>440</b> |
|                   | IBIS Overview                                                                                                                                                   | 440        |
|                   | Lattice Semiconductor IBIS Model Files                                                                                                                          | 441        |
|                   | Generating Design-Specific IBIS Models in the Radiant Software                                                                                                  | 441        |
|                   | Copying General-Purpose IBIS Models from Radiant Installation Folder                                                                                            | 444        |
|                   | Downloading General-Purpose IBIS Models from the Lattice Website                                                                                                | 446        |
| <b>Chapter 11</b> | <b>Programming the FPGA</b>                                                                                                                                     | <b>447</b> |
|                   | About the Programmer Window                                                                                                                                     | 448        |
|                   | File Formats                                                                                                                                                    | 449        |
|                   | SPI Flash Support                                                                                                                                               | 450        |
|                   | Using the Radiant Programmer                                                                                                                                    | 465        |
|                   | Programmer Options                                                                                                                                              | 514        |
|                   | Programming and Configuring iCE40 Devices with Programmer                                                                                                       | 533        |
|                   | Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX,<br>LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF,<br>UT24C or UT24CP Devices with Programmer | 539        |
|                   | Deploying the Design with the Deployment Tool                                                                                                                   | 567        |

|                   |                                                                      |            |
|-------------------|----------------------------------------------------------------------|------------|
|                   | Debugging SVF, STAPL, and VME Files                                  | 623        |
|                   | Download Debugger Options                                            | 633        |
|                   | Using Programming File Utility                                       | 638        |
|                   | Programming File Utility Options                                     | 643        |
| <b>Chapter 12</b> | <b>Testing and Debugging On-Chip</b>                                 | <b>647</b> |
|                   | About Reveal Logic Analysis                                          | 648        |
|                   | Creating Reveal Modules                                              | 664        |
|                   | Using JTAGhub                                                        | 699        |
|                   | Using JTAGMON                                                        | 710        |
|                   | Performing Logic Analysis with Reveal Analyzer                       | 715        |
|                   | Analyzing Trace Data in Waveform Format                              | 749        |
|                   | Using the Memory Controller Debug                                    | 762        |
| <b>Chapter 13</b> | <b>Applying Engineering Change Orders</b>                            | <b>766</b> |
|                   | Editing sysIO Settings in ECO Editor                                 | 767        |
|                   | Setting Memory Initialization Values in ECO Editor                   | 767        |
|                   | Running Design Rule Check                                            | 770        |
| <b>Chapter 14</b> | <b>Strategy Reference Guide</b>                                      | <b>771</b> |
|                   | Constraint Propagation Options                                       | 777        |
|                   | Synplify Pro Options                                                 | 777        |
|                   | LSE Options                                                          | 783        |
|                   | Post-Synthesis Options                                               | 790        |
|                   | Post-Synthesis Timing Analysis Options                               | 791        |
|                   | Map Design Options                                                   | 792        |
|                   | Map Timing Analysis Options                                          | 793        |
|                   | Place & Route Design Options                                         | 794        |
|                   | Place & Route Timing Analysis Options                                | 798        |
|                   | IO Timing Analysis Options                                           | 799        |
|                   | Timing Simulation Options                                            | 799        |
|                   | Bitstream Options                                                    | 800        |
| <b>Chapter 15</b> | <b>Constraints Reference Guide</b>                                   | <b>804</b> |
|                   | HDL Attributes                                                       | 805        |
|                   | Lattice Synthesis Engine Constraints                                 | 824        |
| <b>Chapter 16</b> | <b>Lattice Module Reference Guide</b>                                | <b>901</b> |
|                   | Finding Modules in This Guide                                        | 901        |
| <b>Chapter 17</b> | <b>FPGA Libraries Reference Guide</b>                                | <b>904</b> |
|                   | Primitive Library - LAV-AT (Lattice Avant)                           | 906        |
|                   | Primitive Library - LFCPNX (CertusPro-NX) / UT24CP (CertusPro-NX-RT) | 915        |
|                   | Primitive Library - LFD2NX (Certus-NX) / UT24C (Certus-NX-RT)        | 921        |
|                   | Primitive Library - LFMXO4 (MachXO4)                                 | 927        |

|                   |                                                               |             |
|-------------------|---------------------------------------------------------------|-------------|
|                   | Primitive Library - LFMXO5 (MachXO5-NX)                       | 933         |
|                   | Primitive Library - LIFCL (CrossLink-NX)                      | 939         |
|                   | Primitive Library - iCE40UP (iCE40 UltraPlus)                 | 945         |
|                   | Alphanumeric Primitives List                                  | 949         |
|                   | DSP Inference Guide                                           | 1665        |
|                   | Synthesis Attributes                                          | 1667        |
| <b>Chapter 18</b> | <b>Command Line Reference Guide</b>                           | <b>1668</b> |
|                   | Command Line Program Overview                                 | 1668        |
|                   | Command Line Basics                                           | 1670        |
|                   | Command Line Tool Usage                                       | 1675        |
| <b>Chapter 19</b> | <b>Tcl Command Reference Guide</b>                            | <b>1762</b> |
|                   | Launching the Tcl Console                                     | 1765        |
|                   | Running Radiant Tcl                                           | 1768        |
|                   | Accessing Command Help and Command Options in the Tcl Console | 1781        |
|                   | Creating and Running Custom Tcl Scripts                       | 1782        |
|                   | Running Tcl Scripts When Launching the Radiant Software       | 1785        |
|                   | Radiant Software Tool Tcl Command Syntax                      | 1786        |
|                   | General Radiant Commands                                      | 1787        |
|                   | Project Flow Commands                                         | 1804        |
|                   | Non-project Commands                                          | 1827        |
|                   | Reveal Commands                                               | 1831        |
|                   | Timing and Physical Constraints Commands                      | 1879        |
|                   | Radiantc TCL Commands                                         | 1906        |
|                   | Other Commands                                                | 1934        |
|                   | <b>Revision History</b>                                       | <b>1946</b> |

# Getting Started with Lattice Radiant Software

Lattice Radiant™ software is the complete design environment for Lattice Semiconductor Field Programmable Gate Arrays (FPGAs). The software includes a comprehensive set of tools for all design tasks, including project management, design entry, simulation, synthesis, place and route, in-system logic analysis, and more.

To help you experiment further, example projects are available. These examples are designed to illustrate different aspects of designing with Radiant software. To see the examples, click the  (Open Example) button, or choose **File > Open > Design Example**. In the Open Example dialog box, choose an example you wish to open, and click **OK**.

The rest of the Help system provides complete instructions for the different stages of the Radiant design flow and extensive reference material.

## See Also

### Lattice on the Web

- ▶ [Lattice Semiconductor](#)
- ▶ [Answer Database](#)
- ▶ [Lattice Solutions](#)
- ▶ [Intellectual Property](#)

## Tutorials

To quickly get some hands-on experience, try the following:

- ▶ [Lattice Radiant Block-Based Design Tutorial](#)
- ▶ [Lattice Radiant Post-Synthesis Reveal Debug Flow Tutorial](#)

- ▶ [Lattice Radiant Tutorial with CrossLink-NX \(LIFCL\)](#)
- ▶ [Lattice Power Calculator Tutorial](#)

## User Guides

To learn more about Radiant software, see the following User Guides and Reference Manuals:

- ▶ [Lattice Radiant 2025.2.1 Release Notes](#)
- ▶ [Lattice Radiant Software 2025.2 User Guide](#)
- ▶ [Lattice Radiant Software Guide for Lattice Diamond Users](#)
- ▶ [Migrating iCEcube2 iCE40 UltraPlus Designs to Lattice Radiant Software](#)
- ▶ [Lattice Radiant Software IP User Guide](#)
- ▶ [Programming Tools User Guide for Radiant Software](#)
- ▶ [Reveal User Guide for Radiant Software](#)
- ▶ [Reveal Troubleshooting Guide for Lattice Radiant Software](#)
- ▶ [Lattice Radiant Software 2025.2.1 Help \(HTML\)](#)
- ▶ [Lattice Radiant Software 2025.2.1 Help \(PDF\)](#)
- ▶ [Lattice Radiant Software 2025.2.1 Installation Guide for Windows](#)
- ▶ [Lattice Radiant Software 2025.2.1 Installation Guide for Linux/Ubuntu](#)
- ▶ [Lattice Radiant TCL Scripting User Guide](#)
- ▶ [Lattice Radiant Constraint Reference Guide](#)
- ▶ [Lattice Radiant Software Guide for Diamond MachXO3LF to Radiant MachXO4 Device](#)
- ▶ [QuestaSim User Manual](#)
- ▶ [QuestaSim GUI Reference Manual](#)
- ▶ [QuestaSim Command Reference Manual](#)
- ▶ [QuestaSim Tutorial](#)
- ▶ [QuestaSim Release Notes](#)
- ▶ [Synopsys Synplify Pro for Lattice User Guide](#)
- ▶ [Synopsys Synplify Pro for Lattice Reference Manual](#)
- ▶ [Synopsys Synplify Pro for Lattice Language Support Reference Manual](#)

## Other Resources

For additional information, please refer to the following Application Notes:

- ▶ [FPGA-AN-02091: Interactive Timing Analysis using TCL](#)
- ▶ [FPGA-AN-02059: Timing Constraints Methodology Guide](#)

# Getting Help

For almost all questions, the place to start is this Help. It describes the FPGA design flow using the Radiant software, the libraries of logic design elements, and the details of the Radiant design tools. The Help also provides easy access to many other information sources.

To make the most effective use of the Help, please review this section.

## Opening the Help

The Help can be opened in several ways:

- ▶ In Windows, choose **Start > Programs > Lattice Radiant Software > Accessories > Radiant Software Help**.
- ▶ In the main window, choose **Help > Lattice Radiant Software Help**.
- ▶ To go directly to the Help for the tool that you're using, choose **Help > <Tool Name> Help**.

JavaScript must be enabled in your default browser. If you are having trouble opening the Help, see ["Troubleshooting the Help" on page 12](#).

## Using the Help

The Help has several features to help you find information.

**Contents** The Contents pane organizes the information in the Help. Look here to see what subjects are covered or to begin in-depth study of a subject.

Click the  (Menu) button to hide or show the Contents pane.

**Search** The Search function locates all topics that contain specific text. This can be the fastest way to find information once you are familiar with the contents of the Help.

Just start typing in the Search field. The Search page opens after three characters with a list of topics. Keep typing to shorten the list.

Search results are ordered by the number and types of hits found. The first few topics are most likely to have substantial information on the search terms. Topics at the end of the list may have just a casual mention of the terms.

Some tips:

- ▶ To find plurals and different verb tenses, just type the beginning of the word. For example, "search" finds search, searches, searching, and searched.
- ▶ Capitalization does not matter.
- ▶ Enter phrases between a pair of double-quote marks. For example: "block module". Sometimes you may see search hits that do not exactly match

your phrase. This is because the search ignores certain common words like “for” and “the.” So the example would also find “block the module.”

- ▶ Click **All** next to the Search field and select **User Guides** or **Reference Guides** to limit the scope of the search.

### Search Navigation Tip

Internet Explorer's forward and back buttons may not always work the way you expect with the Search page. To go back to the Search page, type in the toolbar. Just add a letter or space, or backspace. If you are on the Search page and want to go back to the topic you were looking at, click the  next to the Search field.

## Type Conventions Used in This Document

| Convention            | Meaning or Use                                                                                    |
|-----------------------|---------------------------------------------------------------------------------------------------|
| <b>Bold</b>           | Items in the user interface that you select or click. Text that you type into the user interface. |
| <i>&lt;Italic&gt;</i> | Variables in commands, code syntax, and path names.                                               |
| <b>Ctrl+L</b>         | Press the two keys at the same time.                                                              |
| Courier               | Code examples. Messages, reports, and prompts from the software.                                  |
| ...                   | Omitted material in a line of code.                                                               |
| .                     | Omitted lines in code and report examples.                                                        |
| [ ]                   | Optional items in syntax descriptions. In bus specifications, the brackets are required.          |
| ( )                   | Grouped items in syntax descriptions.                                                             |
| { }                   | Repeatable items in syntax descriptions.                                                          |
|                       | A choice between items in syntax descriptions.                                                    |

## Troubleshooting the Help

If you are having trouble with the Help, check for the following situations:

**Active Content or Scripts Are Blocked** Opening the Help may be interrupted by one of the following messages on the Internet Explorer Information Bar:

- ▶ “To help protect your security, Internet Explorer has restricted this file from showing active content that could access your computer. Click here for options...”



- “To help protect your security, Internet Explorer has restricted this file from running scripts or ActiveX controls that could access your computer. Click here for options...”

To see the Help, click on the Information Bar and choose **Allow Blocked Content**. A dialog box with an expanded warning opens. Click **Yes**.

To avoid these warnings, either use a different browser or turn off the warning for active content in Internet Explorer.

---

### Note

Doing either of these means that when you open any Web page that is resident on your computer—not just Radiant Help—the page will automatically run any active content that it has. While active content is common and can be very useful, malicious content can damage your files. Be sure you trust the software on your computer.

---

### To turn off the warning:

1. In Internet Explorer, choose **Tools > Internet Options**.
2. Click the **Advanced** tab.
3. Under Security, select **Allow active content to run in files on My Computer**.
4. Click **OK**.

**Back and Forward Buttons Do Not Work with the Search Page** Internet Explorer’s back and forward buttons may not always work the way you expect with the Search page. Instead of returning to the Search page, you go to the previous or next topic. Instead of returning from the Search page to the previous or next topic, you stay on the Search page.

To go back to the Search page, type in the toolbar. Just add a letter or space, or backspace. If you’re on the Search page and want to go back to the topic you were looking at, click the  next to the Search field.

## Contacting Technical Support

**FAQs** The first place to look. The [Answer Database](#) provides solutions to questions that many of our customers have already asked. Lattice Applications Engineers are continuously adding to the Database.

**Technical Support Request** Submit a Technical Support Request through [www.latticesemi.com/techsupport](http://www.latticesemi.com/techsupport).

**For Local Support** Contact your nearest [Lattice Sales Office](#).

# Debugging the Software License

The License Debug tool can help you debug license problems you may encounter when setting up a license for the Radiant software.

If the Radiant software closes after starting due to a license issue, the License Debug tool will automatically launch. The missing license feature which caused the Radiant software to exit will be displayed in a text box to help with debugging.

You can also launch the tool manually using the **Help > License Debug** command.

## Using the License Information Tab

1. Click **Help > License Debug** to launch the License Debug tool. The License Information tab is displayed by default. The License File text box displays one or more license file(s) or license server(s), separated by semicolon(s).
2. Click the  button to browse to the location of the license file (license.dat).
3. Click **Start** to display the feature list based on the specified license file(s). The **Feature List** box displays Feature(s) and file **Location**.

The **Local System Information** box at the bottom displays the Hostname and Network Feature Card (NIC) ID. If multiple cards are available, all the NIC IDs are displayed.

4. If you need to administer the license server, click **LmTools...** to launch LMTOOLS Utility by Flexera.

The LMTOOLS Utility is a graphical user interface that enables you to administer the license server.

Some of the functions LMTOOLS performs include:

- ▶ Starting, stopping, and configuring license servers.
- ▶ Getting system information, including HostID's.
- ▶ Getting server status.

LMTOOLS has two modes in which to configure a license server:

- ▶ Configuration using a license file.
- ▶ Configuration using services.

You must run LMTOOLS as an administrator. If you do not run this executable as an administrator, the User Account Control (UAC) dialog will be displayed when it is launched, if the UAC prompt is not disabled on the system.

For more information about LMTOOLS, please refer to the *FlexNet Publisher License Administration Guide* at <https://www.revenera.com>.

## Using the License Debug Tab

1. Choose **Help > License Debug** to launch the License Debug tool.

2. Click the License Debug tab.
3. In the **Search License Feature** box, type in the license feature text string you wish to find.  
  
Click the **Match Whole String** box if you wish to match the entire string. If you uncheck the Match Whole String box, you can search for partial string.
4. Click the  button to browse to the location of the license file (license.dat)  
  
or
5. Click the **Use Default License Search Path** button.
6. Click **Start** to display the feature list based on the specified license file(s). The Feature List box displays Feature(s) and file Location.

To know more about licensing, visit the [Software Licensing](#) page.

## Copyright, Trademarks, and Disclaimers

**Copyright** Copyright © 2025 Lattice Semiconductor Corporation. All rights reserved. This document may not, in whole or part, be reproduced, modified, distributed, or publicly displayed without prior written consent from Lattice Semiconductor Corporation (“Lattice”).

**Trademarks** All Lattice trademarks are as listed at [www.latticesemi.com/legal](http://www.latticesemi.com/legal). Synopsys and Synplify Pro are trademarks of Synopsys, Inc. QuestaSim and Questa are trademarks or registered trademarks of Siemens Industry Software Inc. or its subsidiaries in the United States or other countries. All other trademarks are the property of their respective owners.

**Disclaimers** NO WARRANTIES: THE INFORMATION PROVIDED IN THIS DOCUMENT IS “AS IS” WITHOUT ANY EXPRESS OR IMPLIED WARRANTY OF ANY KIND INCLUDING WARRANTIES OF ACCURACY, COMPLETENESS, MERCHANTABILITY, NONINFRINGEMENT OF INTELLECTUAL PROPERTY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL LATTICE OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THE INFORMATION PROVIDED IN THIS DOCUMENT, EVEN IF LATTICE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS PROHIBIT THE EXCLUSION OR LIMITATION OF CERTAIN LIABILITY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Lattice may make changes to these materials, specifications, or information, or to the products described herein, at any time without notice. Lattice makes no commitment to update this documentation. Lattice reserves the right to discontinue any product or service without notice and assumes no obligation

to correct any errors contained herein or to advise any user of this document of any correction if such be made. Lattice recommends its customers obtain the latest version of the relevant information to establish that the information being relied upon is current and before ordering any products.

## Managing Projects

You can create a project using the Lattice Radiant software with the New Project wizard. Launch the New Project Wizard by clicking the **New Project**  button, or choose **File > New >  Project**. The Radiant software creates a folder with a project file (.rdf) containing basic information about the project, such as the Radiant version number; the beginning of a physical design constraints (.pdc) file, which controls how the design is implemented in the map and place-and-route stages, and a default strategy (Strategy1.sty).

A “strategy” is a collection of settings for controlling the different stages of the implementation process (synthesis, map, place & route, and so on). Strategies can control whether the design is optimized for area or speed, how long place-and-route takes, and many other factors. The Radiant software provides a default strategy, which may be a good collection to start with, and some variations that you can try. You can modify Strategy1 and create other strategies to experiment with or to use in different circumstances.

The project folder contains a source folder, which contains project source files.

The project folder also contains an implementation folder. Implementation folders contain process reports and other information for different implementations, or versions, of a design. Having different project implementations helps you to experiment and compare different designs. You can check the details of each implementation in a set of process reports (choose **View > Reports**).

As you develop your design, routine tasks can be controlled through the Radiant software graphical user interface or through scripts. The Radiant software comes with command-line and Tcl commands for many of its functions.

### See Also

- ▶ [“Running the Radiant Software” on page 18](#)
- ▶ [“Creating a New Project” on page 19](#)

- ▶ [“Modifying a Project” on page 21](#)
- ▶ [“Importing Lattice Diamond Projects” on page 22](#)
- ▶ [“Targeting a Device” on page 22](#)
- ▶ [“Viewing Project Properties” on page 23](#)
- ▶ [“Saving Project Files” on page 23](#)
- ▶ [“Managing Project Sources” on page 25](#)
- ▶ [“Working with Implementations” on page 41](#)
- ▶ [“Using Strategies” on page 43](#)
- ▶ [“Analyzing a Design” on page 49](#)
- ▶ [“Running Processes” on page 64](#)
- ▶ [“Clearing Tool Memory” on page 68](#)
- ▶ [“Setting Options for Synthesis and Simulation” on page 69](#)
- ▶ [“Finding Results” on page 85](#)
- ▶ [“Viewing Logs and Reports” on page 86](#)

## Running the Radiant Software

The Radiant software main window is the primary interface and provides an integrated environment for managing the project elements and processes, as well as accessing all Radiant software tools and views.

### To run the Radiant software main window:

- ▶ From your Windows desktop, choose **Start > All Programs > Lattice Radiant Software <version number> >  Radiant Software**.

#### Notes

---

- ▶ **Lattice Radiant Software** is the default Programs folder name when you install the Radiant software. Change this name accordingly if you have chosen another folder name during installation.
  - ▶ You can run current and previous versions of Radiant by selecting the **Lattice Radiant Software <version number>** from the Start menu.
- 
- ▶ From your Linux platform shell window or C-shell window, execute the following (case-sensitive):

```
<install_path>/bin/lin64/radiant
```

**See Also** ▶ [“Managing Projects” on page 17](#)

## Pin the Radiant Software to Start Menu or Taskbar

You can pin the Radiant software to your Windows Start menu or taskbar, so you can open it quickly and conveniently, rather than looking for the Radiant software in the Start menu.

### To pin the Radiant software to the Start menu or Taskbar:

1. Choose the Windows **Start** menu and find the **Lattice Software** icon.
2. Right-click the **Lattice Software** icon.
3. Click **Pin to Start Menu** or **Pin to Taskbar**.

### Note

You should not pin the Radiant software to the Taskbar through the minimized icon on the taskbar while the Radiant software is running.

If you want to remove the pinned Radiant Software from the Start menu or the taskbar, right-click on a pinned **Radiant Software** icon from the Start menu or the taskbar, choose **Unpin from Start Menu** or **Unpin this program from taskbar**.

**See Also** ▶ [“Managing Projects” on page 17](#)

## Creating a New Project

A project is a collection of all files necessary to create and download your design to the selected device. The New Project wizard guides you through the steps of specifying project name and location, selecting a target device, and adding existing sources to the new project.

### Note

Do not place more than one project in the same directory.

### To create a new project:

1. From the Radiant software main window, click the **New Project**  button, or choose **File > New >  Project**.

The New Project wizard opens.

2. Click **Next**.
3. In the Project Name dialog box, do the following:

- ▶ Under Project, specify the name for the new project.

File names for Radiant software projects and project source files must start with a letter (A-Z, a-z) and must contain only alphanumeric characters (A-Z, a-z, 0-9) and underscores (\_). Spaces are allowed.

- ▶ To specify a location for your project, click **Browse**. In the Project Location dialog box, you can specify a desired location.
  - ▶ Under Implementation, specify the name for the first version of the project. You can have more than one version, or “implementation,” of the project to experiment with. For more information on implementations, refer to [“Working with Implementations” on page 41](#).
  - ▶ When you finish, click **Next**.
4. In the Add Source dialog box, do the following if you have an existing source file that you want to add to the project. If there are no existing source files, click **Next**.
- Click **Add Source**. You can import HDL files at this time.
- a. In the Import File dialog box, browse for the source file you want to add, select it, and click **Open**.  
The source file is then displayed in the Source files field.
  - b. Repeat the above to add more files.
  - c. To copy the added source files to the implementation directory, select **Copy source to implementation source directory**. If you prefer to reference these files, clear this option.
  - d. To create empty Lattice Design Constraint (.ldc) file and Post-Synthesis Constraint File (.pdc) files that can be edited at a later time, select **Create empty constraint files**. Refer to [“Timing and Physical Constraints” on page 215](#) for more information about constraints files.
  - e. When you finish, click **Next**.
5. In the Select Device dialog box, select a device family and a specific device within that family.
- a. Choose the options you want for that device.
  - b. Click **Next**.
6. In the Select Synthesis Tool dialog box, the default synthesis tool is Synplify Pro. This choice can be changed at any time. See [“Selecting a Synthesis Tool” on page 71](#) for more information. When you finish, click **Next**.
7. In the Project Information dialog box, make sure the project settings are correct and then click **Finish**.

---

**Note**


If you want to change some of the settings, click **Back** to modify them in the previous dialog boxes of the New Project wizard.

---

Once a project has been created, the Radiant software workspace opens in the main window and displays the following:



Figure 1: Radiant Software Main Window Workspace

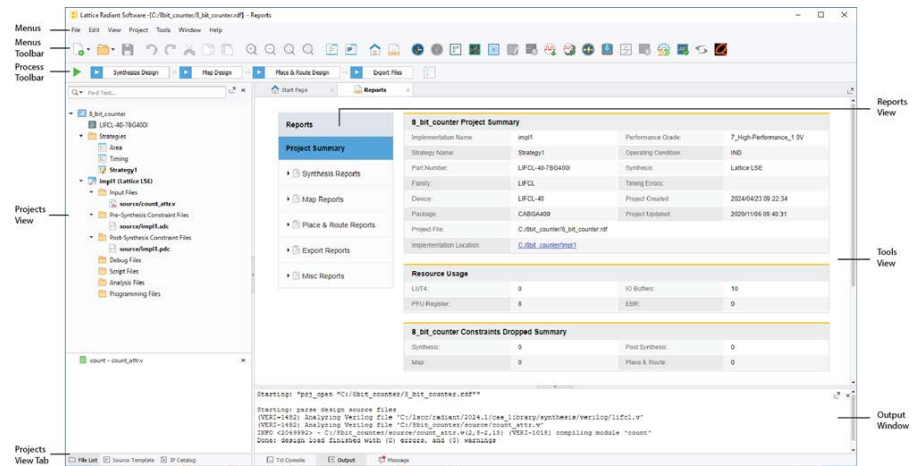

See Also ► [“Managing Projects” on page 17](#)

## Modifying a Project

After creating a project, you can modify the project by using the right-click menu.

### To modify a project:

1. Click on the File List tab at the bottom left side of the screen to display the File List view.
2. Right-click on any part of the project in the File List view.

The right-click menu varies upon the different part of the project you have chosen.

- You can choose to edit a device in the Device Selector, add source files, implementations, or strategies as needed to the project, clone a strategy, set the current highlighted strategy as active strategy, exclude certain source files from an implementation or remove a file.
- You can also edit properties of the project in the Project Properties dialog box. You can set the top-level unit, specify the VHSIC Hardware Description Language (VHDL) Library name, and Verilog Include Search path in the Project Properties dialog box.

### See Also

► [“Managing Projects” on page 17](#)

# Importing Lattice Diamond Projects

Design projects created in Lattice Diamond software can be imported into the Radiant software using the Import Diamond Project wizard. Imported Lattice Diamond projects are targeted to devices supported in the Radiant software. Lattice Diamond design preferences will be converted into Radiant software design constraints.

## To import a Diamond software project into the Radiant software:

1. In the Radiant software, choose **File > Open > Import Diamond Project**.
2. In the **Select Diamond Project** dialog box, browse to the Diamond Project file (.ldf) and select it.

The Import Diamond Project wizard appears. Click **Next**.

3. In the Select Device dialog box, choose Device Family, Device, Operating Condition, Package, Performance Grade, and Part Number. Click **Next**.
4. In the Project Name dialog box, specify the Name and Location of your project. Lists of files to be imported, and files not to be imported, appear.
5. Click **Copy to Radiant project folder** if you wish to copy the imported files into your new Radiant software project.
6. Click **Finish**.

## See Also

► [“Managing Projects” on page 17](#)

# Targeting a Device

The Radiant software lets you re-target a design to a different device any time during the design process.

## To target a device:

1. In the File List view, double-click the device name.  
The Device Selector dialog box opens. It contains all available devices and their options.
2. Under Select Device, select a device family and a specific device within that family. Then choose the options you want for that device.
3. When you finish, click **OK**.

The specified target device appears in the File List view.

## See Also

► [“Managing Projects” on page 17](#)

## Viewing Project Properties

After creating a project, you can view the project-related information in the Project Properties dialog box.

### To view project properties:

1. Right-click on any part of the project in the File List view, and choose **Properties**.

The Project Properties dialog box opens.

2. In the dialog box, you can see the name, category, and location of the selected file. You can enter values for some of the selected sections of the project in the Value field.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Saving Project Files

You can save changes to source files and to project properties. You can also save copies of individual files and whole design projects.

**Saving Changes** As you are making changes to source files or to the project properties you should frequently save the files. The Radiant software offers three save commands for this:

- ▶ **File > Save:** Saves the currently active item.
- ▶ **File > Save All:** Saves all the content changes.
- ▶ **File > Save Project:** Saves project properties such as the target device, implementation file lists, and strategy setting.
- ▶ **File > Save Project As:** Opens the Save Project As dialog to save the active project.
- ▶ Click the **Save** icon (.

Also, if there are any unsaved changes when you close a project, a dialog box will open offering a chance to specify which files you want to save.

**Copying a Project** You can make a copy of a design project to use as the beginning of another project. (If you want the copy to backup or move the project, see [“Archiving a Project” on page 24](#) instead.) This process saves all source and other project files that are within the project folder to another folder. Referenced files are not included.

### To copy a design project:

1. Choose **File > Save Project As**.

The Save Project As dialog box opens.

2. In the dialog box, browse to where you want to save the copy.

3. Click the **Create New Folder** button to create a new project folder.
4. Type a new name for the folder and press **Enter**.
5. Double-click the new folder to open it.
6. If desired, give the project a new name in the “File name” box.
7. Click **Save**.

If there are open files, the Save Modified Files dialog box may open. Select files to be saved before copying and click **OK**.

The current design project closes and the new one opens.

Check references to files outside of the project folder. These may need adjustment.

### Archiving a Project

The Radiant software offers you an easy way to archive the current project. A project archive is a single compressed file (.zip) containing the information for the entire project. After archiving a project, you can reload it in the main window at any time.

When you archive a project that contains source files stored outside the project folder, the remote files are compressed under the `remote_files` subdirectory in the archive.

#### To archive the current project:

1. In the main window, make sure the project you want to archive is open.
2. Choose **File > Archive Project**.
3. In the Archive Project dialog box, specify the file name and location.
4. Click **Save**.

The archive file is created and stored in the specified location.

#### To reload the archived project:

1. In the Radiant software main window, choose **File > Open > Archived Project**.
2. In the Select Archived Project File dialog box, browse to the archive file.
3. Click **Open**.
4. In the Open Archived Project dialog box, check the destination directory. If this is not where you want to place the project files, click the **Browse (...)** button.
5. In the Browse for Folder dialog box, browse to where you want to place the project files.
6. Click **OK**.
7. In the Open Archived Project dialog box, click **OK**.

The project files are extracted to the specified folder and the project is opened in the Radiant software.

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Copying a Project” on page 23](#)

## Managing Project Sources

The Radiant software combines design sources into different categories and lists them in the File List view, as well as any folders associated with them. The source files are classified and listed under these folders, which include Strategies, Input Files, Synthesis Constraint Files, Debug Files, Script Files, Analysis Files, and Programming Files.

The following files can be found in their respective folder, as shown in Figure 1

**Table 1: Source File Locations**

| Files                               | Folder                          |
|-------------------------------------|---------------------------------|
| HDL/IP Module                       | Input Files                     |
| Logic Constraint                    | Post-Synthesis Constraint Files |
| Reveal Project                      | Debug Files                     |
| Power Calculator/Timing Constraints | Analysis Files                  |

You can also see implementations listed in the File List view. For details about implementations, see [“Working with Implementations” on page 41](#).

**File List View** The File List view of the Radiant software main window lists all the design sources. The sources are categorized by different types and are identified with different icons. Bold items are active and will be used when processing the design project. Grayed out items will not be used.

**Table 2: Files Listed in the File List View**

| File Type                                                    | File Extension           |
|--------------------------------------------------------------|--------------------------|
| Project Title                                                | None                     |
| Target Device                                                | None                     |
| Predefined Strategy (Area, I/O Assistant, Quick, and Timing) | .sty                     |
| Strategy1 (that can be customized)                           | .sty                     |
| Implementation                                               | None                     |
| Verilog Files                                                | .v, .veri, .ver, .vo, .h |
| Structural Verilog                                           | .vm                      |
| SystemVerilog                                                | .sv                      |

**Table 2: Files Listed in the File List View**

| File Type                  | File Extension       |
|----------------------------|----------------------|
| IP Module Config Files     | .ipx                 |
| Undefined or incorrect     | Any source reference |
| Synthesis Constraint Files | .sdc, .fdc, .ldc     |
| Reveal Project File        | .rvl                 |
| Simulation Project File    | .spf                 |
| Reveal Analyzer Files      | .rva                 |
| Power Calculator Files     | .pcf                 |
| Programmer Project File    | .xcf                 |

**Note for Linux**

In the Linux version of the Radiant software, when you save or export a file, the dialog box does not automatically append an extension to the file name you specify. That is the standard way Linux handles the Save As dialog box. You need to manually add the relevant file extension.

**Figure 2: File List****See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Running Processes” on page 64](#)

## Creating a New Source File

You can create a new source from within the Radiant software or external to the Radiant software.

**To create a new source file:**

1. In the Radiant software main window, choose **File > New > File**.

The New File dialog box opens.

2. In the dialog box, select the type of file you want to create under **Categories and Source Files**.
  - a. Fill in the file name.
  - b. Browse to choose a location for the file.
  - c. Check the **Add to Implementation** option.
  - d. Choose the Implementation you want the file to be part of.
3. Click **New**.

The Radiant software starts an editor that you can use to enter the information for your new source file.
4. In the editor, create a source file.

---

**Note**

- ▶ File names for Radiant software projects and project source files must start with a letter (A-Z, a-z) and must contain only alphanumeric characters (A-Z, a-z, 0-9) and underscores (\_).
  - ▶ In the Linux version of the Radiant software, when you save or export a file, the dialog box does not automatically append an extension to the file name you specify. That is the standard way Linux handles the Save As dialog box. You need to manually add the relevant file extension.
- 

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Analyzing a Design” on page 49](#)

## Importing an Existing Source File into a Project

You can easily import existing source files into your project. Source files for a project can be stored in different locations.

The files added to the project appear in the Input Files folder. You can adjust the file order by drag-and-drop. If several modules are detected as being uninstantiated, the last one will be automatically treated as the top-level module. You can also set the top-level module from the implementation property dialog box.

**To import an existing source file:**

1. Choose **File > Add > Existing File** from the Radiant software. Or, with a project opened in the Radiant software, right-click the current implementation and choose **Add > Existing File**.

The Add Existing File dialog box opens.
2. Browse for the source file you want to import.

3. In the **Files of type** drop down, choose the type of file you wish to import. If **All Files (\*.\*)** is selected, the **Force File Type** drop down is activated in the lower left.

If you wish to specify the language type of the file to either Verilog or VHDL, select either **Verilog** or **VHDL** in the drop down. **Default** will not force file type.

4. Select the file and click **Add**.

The selected file is added to the Input Files folder of the File List view. If the source file is stored outside the project folder, the path of the file is displayed.

5. Double-click the imported file. The file can be opened in the associated editor (this is a Windows-only feature).

---

**Tip**

- ▶ Radiant software project creation supports mixed language source files, allowing you to freely mix Verilog HDL and VHDL design. The Radiant software will figure out the hierarchy structure that is associated with the module names. You need to pay special attention to the module names and the case, as Verilog is case-sensitive and VHDL is case-insensitive.
- 

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Analyzing a Design” on page 49](#)
- ▶ [“Setting the Top-Level Unit for Your Project” on page 38](#)

## Adding Reveal Debug Information

Reveal Inserter manages the addition of Reveal debug information into the Radiant software source file. By default, the Reveal Inserter project file (.rvl) will be automatically added to the File List view once Reveal Inserter has successfully merged trigger and trace signal features into your design. The procedure below describes how to manually import a .rvl file.

**To import a Reveal project file (.rvl):**

1. In the Radiant software main window, choose **File > Add > Existing File**.

The Add Existing File dialog box opens.

2. Browse for the .rvl file you generated and select it.
3. Click **Add**.

The selected .rvl file is listed in the File List view.

You can have multiple Reveal project files for your project. However, you can only set only one .rvl file active at one time.

For more information, refer to [“Testing and Debugging On-Chip” on page 647](#).

**See Also**



► [“Managing Projects” on page 17](#)

## Importing Test Stimulus Files Using Simulation Wizard

If your design needs Verilog test fixture (.v) or VHDL test bench (.vhd), use the **Simulation Wizard**.

If multiple hierarchical test stimulus files are to be used, you should first import the top-level test file, and then add lower-level test stimulus as dependency files. The Radiant software will run all these test files in a hierarchical order during the simulation process.

### To import a test stimulus file:

1. In the Radiant software, choose **Tools >  Simulation Wizard**.  
The Preparing the Simulator Interface page opens.
2. Click **Next**.
3. In the Simulator Project Name and Stage page:
  - a. Enter a name for your simulation project in the Project name field.
  - b. Browse to find a desired location for your project.
  - c. Under Simulator, choose either QuestaSim.
  - d. Under Process Stage, all the available process stages of the FPGA implementation strategy are automatically displayed. Choose the stage in which to run simulation.
4. Click **Next**.
5. In the Add and Reorder Source page, browse for your desired Verilog test fixture (.v) or VHDL test bench (.vhd) and select it. Check the **Automatically set simulation compilation file order** option if needed.
6. Click **Next**.
7. In the Parse HDL Files for Simulation page, the HDL files are listed. The top level module is also indicated.
8. Click **Next**.
9. In the Summary page, all your simulation project information is listed, including simulator name, project name, project location, simulation stage, simulation files, and simulation libraries.  
  
Check the **Run Simulation** option if you want to run the simulation right away.

10. Click **Finish** to exit the Simulation Wizard. Your simulation project (.spf) is added to the Script Files folder of the File List view.

### Note

The simulation flow in the Radiant software supports source files that can be set in the File List view to be used for the following purposes:

- ▶ Simulation & Synthesis (default)
- ▶ Simulation only
- ▶ Synthesis only

This allows the use of test benches, including multiple file test benches. Additionally, multiple representations of the same module can be supported, such as one for simulation only and one for synthesis only.

Refer to [“Simulating the Design” on page 178](#) for more details on how to use the Simulation Wizard.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Using Revision Control for Radiant Projects

Radiant supports revision control for your projects. When changes are logged into the revision control system, you can get all the change logs and switch to previous milestones if necessary. Compile times can be reduced when using revision control with Radiant design. The compilation will only start when inputs are changed.

### Recommended Revision Control System

Radiant recommends the following revision control systems:

- ▶ GIT
- ▶ SVN
- ▶ Perforce

## Radiant Revision Control Strategies

You can select different revision control systems to work with Radiant, the software does not directly integrate a specific revision control into the system. Radiant recommends two strategies:

- ▶ **Minimum Files Strategy (Radiant Recommendation)** -- The revision control system only manages the necessary files of the project. Other files -- including some intermediate and configuration files, are only used in your project and will not be submitted to the version management system.


The following files are recommended to commit to revision control systems:

- ▶ .rdf project file and .sty strategy file
- ▶ All source files under source directory
- ▶ All files under ip\_directory
- ▶ **Complete Strategy** -- You can also add some intermediate files on the project to the revision control system.

For this strategy, the files under implementation can be committed to the revision control system. You can select files to submit to the system under each implementation, which mainly includes intermediate and analysis files.

It is recommended to use the following strategy directory structure to manage source code and designs:

- ▶ Radiant design can use one source directory to put all source or design files. The software can automatically identify various types of files and display them in categories in the **File List View**.

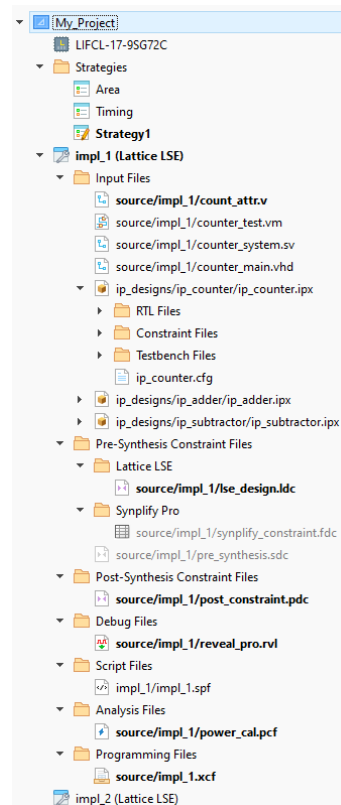

- ▶ Use a source directory to place all source and design files for every implementation. Under the source folder, each implementation has its own file directory (e.g. impl\_1, impl\_2).

Name

- impl\_1
- impl\_2
- ip\_designs
- source**
- My\_Project.rdf
- My\_Project1.sty

- ▶ Create an IP directory (e.g. ip\_designs) under the source directory of the project to store all IP designs of Radiant. Each IP design has a subdirectory under the source directory to store IP source code and design files.

Name

- ip\_adder
- ip\_counter
- ip\_subtractor

- ▶ Use one implementation directory (e.g. impl\_1, impl\_2) to compile the relative implementation of the project. All intermediate files will be generated under this folder (.udb, status, report, and other intermediate type files are all here).

Name

- .vdfs
- IBIS
- My\_Project\_impl\_1\_par.dir
- .build\_status
- .synthesis\_touch
- automake.log
- message\_log.xml
- My\_Project\_impl\_1\_arearep
- My\_Project\_impl\_1.bgn
- My\_Project\_impl\_1.bit
- My\_Project\_impl\_1.drc
- My\_Project\_impl\_1.fea
- My\_Project\_impl\_1.mrp
- My\_Project\_impl\_1.pad
- My\_Project\_impl\_1.par
- My\_Project\_impl\_1.pwrprd
- My\_Project\_impl\_1.twr
- My\_Project\_impl\_1.twr.html
- My\_Project\_impl\_1.udb
- My\_Project\_impl\_1.vm
- My\_Project\_impl\_1\_bgn.html
- My\_Project\_impl\_1\_css.twr.html
- My\_Project\_impl\_1\_lattice.synproj
- My\_Project\_impl\_1\_kseries.html
- My\_Project\_impl\_1\_map.hrr
- My\_Project\_impl\_1\_map.udb
- My\_Project\_impl\_1\_map\_mapres.html
- My\_Project\_impl\_1\_mrp.html
- My\_Project\_impl\_1\_pad.html
- My\_Project\_impl\_1\_par.html
- My\_Project\_impl\_1\_rtl.isedata
- My\_Project\_impl\_1\_rtl.udb
- My\_Project\_impl\_1\_summary.html
- My\_Project\_impl\_1\_syn.psn

## Radiant File Types

The Radiant project directory contains the following file types:

- ▶ .rdf file -- Radiant project file
- ▶ .sty file -- Radiant strategy file

Common source or design file types under the source directory:

- ▶ .v file -- Verilog file
- ▶ .vhdl file -- VHDL file
- ▶ .sv file -- SystemVerilog file
- ▶ .ldc file -- LSE Design Constraints file
- ▶ .pdc file -- Post-Synthesis Constraint file
- ▶ .pcf file -- Power Calculator file
- ▶ .sdc file -- Pre-Synthesis Constraint file
- ▶ .rvl file -- Reveal Project file
- ▶ .rva file -- Reveal Analyzer file
- ▶ .vm file -- Structural Verilog file
- ▶ .fdc file -- Synplify Pro Constraint file
- ▶ IP\_ folder -- One IP instance file under the folder

Other intermedia file types:

- ▶ .ini file -- Initialization file
- ▶ .log file -- Log file
- ▶ .build\_status file -- Status file
- ▶ .xml file -- XML configuration file
- ▶ .html file -- HTML file
- ▶ .ibs file -- Input/Output Buffer Information Specification file
- ▶ .udb file -- User design Database file
- ▶ .bit file -- Bitstream
- ▶ synthesis.log -- LSE synthesis report
- ▶ .mrp -- Radiant map report
- ▶ .twr -- Radiant timing report

---

### Note:

Intermedia files might be re-generated if you rerun the flow.


---

## Radiant Revision Control Workflow

The following diagrams show the revision control workflow of Radiant.


### Revision Control Normal Workflow

You can get the latest code from the Radiant version server and develop in your own environment and working directory. Later on, you can submit the modified code or new design to the radiant version server as needed.

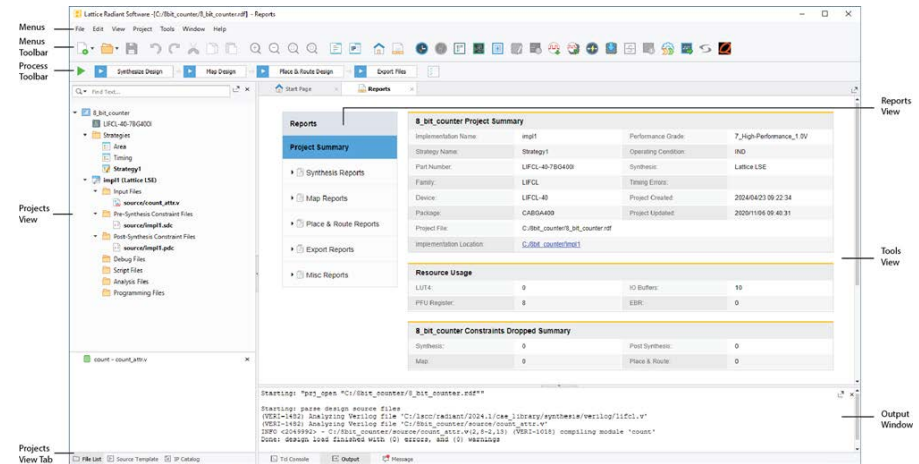

### Multiple developers working on the same file


You may have your code changes and modify the same source file or design. For example, if you submit a file and another user updates it, you will get an error. At this time, you need to update the latest code locally from the server, integrate it with your modifications, and submit it again. This is the collaborative operation of multiple users for the revision control system.

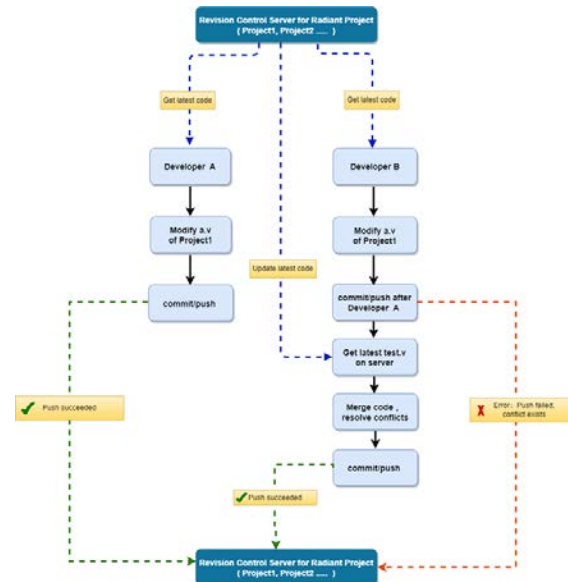

## Multiple developers adding files

If you add a new a.v file in the design, and submit this file and the Radiant project file to the revision control server, another user can do the following:

- ▶ Get the latest code from the server
- ▶ Merge the local code
- ▶ Resolve the conflict
- ▶ Continue the subsequent development

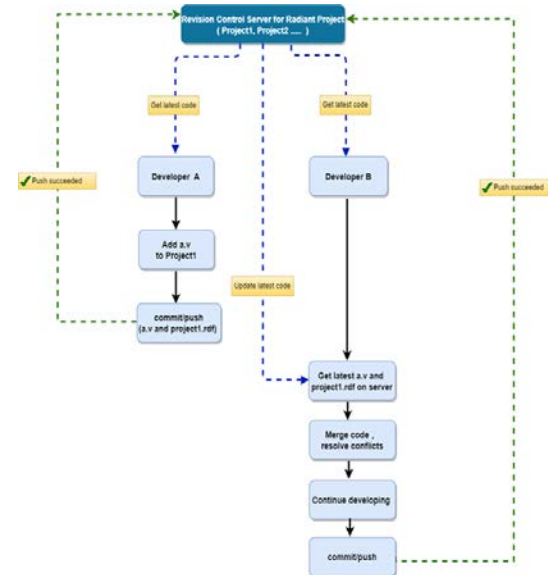


## Managing Constraint Files

The following are the different types of constraint files available in the Radiant software.

- ▶ .ldc (via Lattice Synthesis Engine (LSE))
- ▶ .sdc (via Synplify Pro and LSE)
- ▶ .fdc (via Synplify Pro)
- ▶ .pdc constraint files

### About Synthesis Constraint Files

You can add .fdc files for Synplify Pro or .ldc files for LSE, depending on the synthesis tool you choose. If the selected synthesis tool is LSE or Synplify Pro, the constraint files can be added as an .sdc file. The files are listed in the Synthesis Constraint Files folder in the File List view.

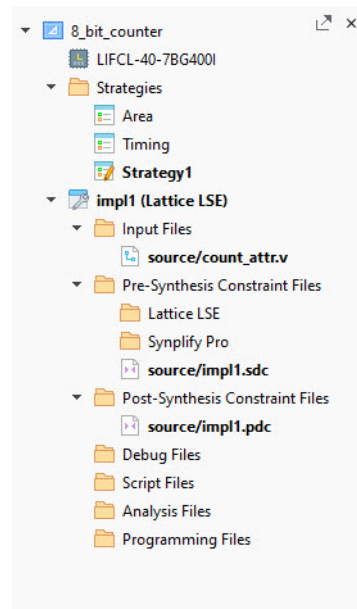**Figure 3:**

### Adding, Activating, Editing, and Removing Synthesis Constraint Files

You can add, activate, edit, or remove synthesis constraint files in your project.

#### To add a pre-synthesis constraint file:

1. Right-click the **Pre-Synthesis Constraint Files** folder in the File List view, and choose **Add**.
2. Choose **New File** if you want to add a new pre-synthesis constraint file.
  - a. Select the source files to add.
  - b. Enter a file name and select a location.
  - c. Click **New**.
3. Choose **Existing File** if you want to add an existing pre-synthesis constraint file.
  - a. Browse to the location of the pre-synthesis constraint file to add and select it.
  - b. Click **Add**. The selected file is added to your project.

#### To activate a pre-synthesis constraint file:

- ▶ Right-click the pre-synthesis constraint file in the File List view of the Radiant software, and choose **Set as Active**.



The selected pre-synthesis constraint file is now activated.

---

**Note**

- ▶ For LSE, you can make zero or one (.sdc or .ldc) constraint file active in your project.
  - ▶ For Synplify Pro, you can make multiple (.sdc or .fdc) constraint files active in your project.
- 

**To edit a pre-synthesis constraint file:**

- ▶ Double-click the pre-synthesis constraint file you want to edit from the File List view of the Radiant software. Or, right-click the pre-synthesis constraint file you want to edit from the File List view of the Radiant software and click **Open**.

The selected pre-synthesis constraint file is opened in the Source Editor. You can edit the selected file in the editor. See [“Using Templates” on page 118](#) for more information.

**To remove a pre-synthesis constraint file:**

- ▶ Right-click the pre-synthesis constraint file in the File List view of the Radiant software, and choose **Remove**.

The selected file is removed from your project.

**About Post-Synthesis Constraint Files**

You can add one or more Physical Constraint files (.pdc) to your project. They are listed in the Post-Synthesis Constraint File folder of the File List view.

---

**Note**

You can set only one .pdc file active in your project at one time.

---

**Adding, Activating, Editing, and Removing Post-Synthesis Constraint Files** You can add, activate, edit, or remove post-synthesis constraint files (.pdc) of your project.

**To add a Post-Synthesis Constraint file:**

1. Right-click the **Post-Synthesis Constraint Files** folder in the File List view of the Radiant software, and choose **Add**.
2. Choose **New File** if you want to add a new post-synthesis constraint file.
  - a. Select the source files to add.
  - b. Enter a file name and select a location.
  - c. Click **New**.
3. Choose **Existing File** if you want to add an existing post-synthesis constraint file.

- a. Browse to the location of the post-synthesis constraint file to add and select it.
- b. Click **Add**. The selected file is added to your project.

#### To activate a Post-Synthesis Constraint file:

- ▶ Right-click the post-synthesis constraint file in the File List view of the Radiant software, and choose **Set as Active**.

The selected file is activated.

#### Note

You can set only one .pdc file active in your project at one time.

#### To edit a Post-Synthesis Constraint file:

- ▶ Double-click the post-synthesis constraint file you want to edit from the File List view of the Radiant software. Or, right-click the post-synthesis constraint file you want to edit from the File List view of the Radiant software.

The selected post-synthesis constraint file is opened in Source Editor. You can edit the selected file in the editor. See [“Using Templates” on page 118](#) for more information.

#### To remove a Post-Synthesis Constraint file:

- ▶ Right-click the post-synthesis constraint file in the File List view of the Radiant software, and choose **Remove**.

The selected file is removed from your project.

See [“Applying Design Constraints” on page 209](#) for more information.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Setting the Top-Level Unit for Your Project

The top-level unit (or module) of the design must be specified. If it's not, the Radiant software will attempt to determine the top-level unit on its own.

Since the possibility exists that the Radiant software could choose the incorrect unit, it is recommended that you manually set the top-level unit.

#### To set the top-level unit for your project:

1. In the File List view, right-click the active implementation folder .
2. From the drop-down menu, choose **Set Top-Level Unit**.

The Project Properties dialog box opens with the cursor in the **Top-Level Unit** Value cell.

3. Type the name of the top-level unit.

The Value cell also shows an arrow for a drop-down menu. Usually the menu shows one name or just "<Edit>." But if the Radiant software found multiple possible top-level units, the menu will show those names. If the correct top-level unit is in the menu, you can choose it.

4. Click **OK**.

If the hierarchy is up-to-date, the source file that contains the top-level unit is displayed in bold.

Another way to set the top-level unit for your project is to right-click any source file in File List view and choose **Set Top-Level Unit** from the drop-down menu.

You can also change the top-level unit when experimenting with different designs or switching between simulation and synthesis.

#### See Also

- ▶ ["Managing Projects" on page 17](#)

## Modifying a Source File

Double-click on a source file to edit it using the Source Editor.

#### Note

For Windows file associations to work properly with the Radiant software, choose **Tools > Options > File Associations** and assign default programs for any of the programs listed.

You can use the Source Editor to enter or edit VHDL (.vhd), Verilog HDL (.v), or constraints (.sdc/.ldc/.pdc) files.

**Modifying a Source File using a Different Text Editor** Alternatively, you can use the text editor of your choice to edit your source files, and then import them into your project using **File > Add > Existing File** from the Radiant software main window.

#### Note

- ▶ A .sdc or .ldc file can also be created or edited in Pre-Synthesis Constraint Editor.
- ▶ A .pdc file can also be created or edited in Post-Synthesis Timing Constraint Editor, Device Constraint Editor, or Physical Designer.

Do the following to open a source file using a different text editor:

1. In the File List view, right-click the text file and choose **Open with** from the pop-up menu.

2. Click **Add** if you want to add your favorite text editor.

---

**Note**

If you have already added a new text editor, click **Edit** to open the source file in that editor.

---

3. Specify command arguments for the external editor. The mapping between the argument substitution values and the value which replaces them are:

%F = File Name; %L = Line Number

For example, to configure the gVim text editor, use the following command line: `<path>/gvim +%L %F`

- a. In the Options dialog box, choose **File Associations**. From the File Associations table, choose the file type you want to open/edit in the new text editor.
- b. Click **Add**, and use the **External Program** field to add the text editor, then click **OK**.
- c. Use the **Edit** or **Remove** button to manage your file and associated editor list.
- d. After adding or editing the external text editor, you can save it as your default text editor by clicking **OK**.

**See Also**

► [“Managing Projects” on page 17](#)

## Excluding a Source File

You can exclude specific source files from logic synthesis and simulation. The source files do remain in your design project, but will not be synthesized or simulated by the software.

**To exclude a source file:**

1. In the File List view, right-click the target source file and choose **Exclude from Implementation**.

The selected file is excluded from the implementation and the target file is grayed out.

---

**Note**

To include the source file again, right-click the target source file and choose **Include in Implementation**.

---

**See Also**

► [“Managing Projects” on page 17](#)

## Removing a Source File

You can remove a source file from a project by using the Radiant software **Remove** command or the Windows' **Delete** command.

Removed source files are no longer part of your project. To simply exclude a file from logic synthesis and simulation, see [“Excluding a Source File” on page 40](#).

### To remove a source file from a project:

1. In the File List view, select the file that you want to remove.
2. Right-click the filename and choose **Remove**, or press the **Delete** key on your keyboard.

The Radiant software removes the source from the project.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Working with Implementations

Implementations define the design structural elements of a project. An implementation contains the structure of a design and can be thought of as the source and constraints to create the design. For example, one implementation may use inferred memory and another instantiated memory. There can be multiple implementations in a project, but only one implementation can be active at a time and there must be at least one implementation.

An implementation is automatically created whenever you create a new project. You can create new implementations using the source files of an existing implementation. You can also clone (copy) an existing implementation, which includes all related files and settings.

Implementations consist of the following folders/files.

- ▶ Gate-Level Simulation File
- ▶ Input Files
- ▶ Pre-Synthesis Constraint Files
- ▶ Post-Synthesis Constraint Files
- ▶ Debug Files
- ▶ Script Files
- ▶ Analysis Files
- ▶ Programming Files

### Creating New Implementations

To create a new implementation:

1. With the project opened in the Radiant software, choose **File > New > Implementation**.
2. In the New Implementation dialog box, enter a name for the new implementation.  
  
This name also becomes the default name for the folder of the implementation.
3. Change the name of the implementation's folder in the Directory text box, if desired.
4. Choose the synthesis tool from the drop-down menu.
5. Choose the default strategy from the drop-down menu.
6. Add sources files by clicking **Add Source** and choosing either:
  - ▶ **Browser** to select individual files.
  - ▶ **From Existing Implementation > <implementation name>** to use the source files of an implementation that already exists in this design project.  
Remove unwanted files by selecting the files and clicking **Remove Source**.
7. If you want to copy all of the source files into the new implementation folder, giving you the freedom to change the files without affecting other implementations, select the **Copy source to implementation source directory** option.
8. To view or set properties of the source files, select a file and click **Properties**. The Properties dialog box opens.
  - a. To change a property, click in its **Value** cell and enter or choose the new setting.
  - b. Click **OK** to close the Properties dialog box.
9. Click **OK** to close the New Implementation dialog box.

### Cloning Implementations

To clone an implementation:

1. In File List view, right-click on the name of the implementation that you want to copy and choose **Clone Implementation**.  
  
The Clone Implementation dialog box opens.
2. In the dialog box, enter a name for the new implementation. This name also becomes the default name for the folder of the implementation.
3. Choose the synthesis tool from the drop-down menu.
4. Decide how you want to handle files that are outside of the original implementation directory. Select one of the following options:
  - ▶ **Continue to use the existing references**  
  
The same files will be used by both implementations.

► **Copy files into new implementation source directory**

The new implementation will have its own copies that can be changed without effecting the original implementation. The Location and the Default Strategy text boxes are not editable.

5. Click **OK**.

**Customizing Files in an Implementation** After creating an implementation, you can choose to include or exclude source files to or from the implementation folders in File List view.

**Customizing Input Files** You can choose to:

- Add a new source file or add an existing file.
- Include the file for Synthesis, Simulation, or Synthesis and Simulation.
- Exclude the file from the current implementation.
- Remove the file from the project.

**Activate or Deactivate Files** You can have multiple files under each of the implementation folders in File List view. Except for Synplify Pro constraints files, only one file can be active in each of the folders. To change a file's status to active or inactive, right-click the file and choose **Set as Active** or **Set as Inactive**.

#### Note

- For LSE, you can make zero or one (.sdc or .ldc) constraint file active in your project.
- For Synplify Pro, you can make multiple (.sdc or .fdc) constraint files active in your project.

**Saving an Implementation** If you want to save an implementation to the project, choose **File > Save Project** from the Radiant software main window.

#### See Also

- [“Managing Projects” on page 17](#)
- [“Using Strategies” on page 43](#)

## Using Strategies

A **strategy** provides a unified view of all settings related to the optimization controls of an implementation tool, such as logic synthesis, mapping, and place-and-route. There are two different kinds of strategies: predefined strategy and customized strategy.

Any number of strategies can be applied to your project to find the best solution to meet your design objectives. For example, you might have one strategy with fast placement and routing attempt to take a quick look at the design, and another that's higher level and more thorough that takes longer to

meet timing constraints. Although you can create an unlimited number of strategies, only one can be active at a time for each implementation, and each implementation must have an active strategy.

If you have several strategies in your project, the settings and values in the active strategy take effect. See [“Setting Active Strategy” on page 47](#).

Strategy settings are listed in the Strategies dialog box. Open the dialog box by double-clicking a strategy name in the File List view. Each strategy is stored as an .sty file.

### Predefined Strategy

Several strategies are predefined and supplied by Lattice: Area, I/O Assistant, Quick, and Timing. They are designed to solve particular types of designs.

#### ▶ Area

Use this strategy to achieve area requirements. Applying this strategy to large and dense designs may cause some difficulties in the place-and-route process with longer run time or not completing routing. However, when it works, you will see an area reduction.

#### ▶ Timing

The Timing strategy attempts to achieve timing closure. The Timing strategy uses a very high effort level in place-and-route. Use this strategy if you are trying to reach the maximum frequency on your design. If you cannot meet timing requirement with this strategy, try to customize a strategy with individual settings.

This strategy may increase your runtime on place-and-route compared to the Quick and Area strategies. However, you will get improved time performance results when it works.

**Customized Strategy** Excluding the predefined strategies, all other strategies can be customized in the Strategies dialog box. Edit the settings of a strategy by:

- ▶ Double-clicking the strategy name in the File List view and opening the Strategies dialog box.
- ▶ Right-clicking the strategy in the File List view and choosing **Edit** to open the Strategies dialog box.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Creating a Strategy” on page 45](#)
- ▶ [“Cloning a Strategy” on page 45](#)
- ▶ [“Adding an Existing Strategy” on page 46](#)
- ▶ [“Specifying Strategy Options” on page 46](#)
- ▶ [“Saving a Strategy” on page 47](#)
- ▶ [“Removing a Strategy” on page 48](#)
- ▶ [“Strategy Reference Guide” on page 771](#)



## Creating a Strategy

New strategies can be created for your design.

### To create a new strategy in the Radiant software:

1. Choose **File > New > Strategy**.  
The New Strategy dialog box opens.
2. Enter a name for the new strategy.
3. Specify a file name for the new strategy
4. Choose a directory to save the strategy file (.sty) to.

The new strategy is created with all the default settings of the current design. You can modify its settings in the Strategies dialog box.

To save the strategy changes to your current project, choose **File > Save Project** from the Radiant software main window.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Cloning a Strategy

Clone any previously created strategy or any of the Lattice predefined strategies from the File List view. The new cloned file contains all settings of the strategy being cloned. You can then modify the settings for the cloned strategy from within the Strategies dialog box.

### To clone a strategy:

1. In the File List view, right-click on the strategy you want to clone and choose **Clone Strategy**.  
The Clone Strategy dialog box opens.
2. Enter a name for the new strategy in the Strategy ID field. Note that the name used automatically appears as the file name.
3. Change the file name, if desired.
4. Choose a directory to save the strategy file (.sty) to.

The cloned strategy contains all the settings of the base strategy. You can modify the settings for the cloned strategy in the Strategies dialog box.

To save the strategy changes to your current project, choose **File > Save Project** from the Radiant software main window.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Adding an Existing Strategy

A previously created strategy can be added to your design.

### Note

A strategy copied from another design project may include incorrect settings, such as path names, that could cause problems. If you copy a strategy from another project, review its settings carefully and adjust them as needed.

### To add existing strategy to your design:

1. In the Radiant software, choose **File > Add > Existing Strategy**.
2. In the Select Existing Strategy dialog box, browse to the desired strategy file (.sty) and click **Open**.
3. In the Add Existing Strategy dialog box, enter the name for the new strategy. The name chosen appears in the File List view.

### Note

If the selected strategy file is not in the current project directory, you may want to select the **Copy strategy file to project directory** option to avoid using a file being used by another project.

4. Click **OK**.  
The new strategy appears in the File List view.
5. Double-click the new strategy to open the Strategies dialog box.
6. Review the settings to ensure they are appropriate for your current project. Be sure to check the following:
  - ▶ Under Synthesize Design > LSE:
    - ▶ Macro Search Path
    - ▶ Memory Initial Value File Search Path
  - ▶ Under Post-Synthesis:
    - ▶ External Module Files (.udb)
7. After completing your review, click **OK**.

To save the strategy to your current project, choose **File > Save Project** from the Radiant software main window.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Specifying Strategy Options

Use the Strategy dialog box to specify settings for a specific design strategy process.

**To specify strategy settings:**

1. In the File List view, double-click the active strategy.  
The Strategies dialog box opens.
2. In the left-hand pane, select a process. The left-hand pane shows a list of processes. Each process has its own settings.
3. In the right pane, double-click the Value column for the setting to be changed. A pulldown menu is displayed with a choice of settings. You can also enter filenames or directory paths into the field shown.
4. Select the value from the drop-down list, or type in the text value, and click **Apply**.
5. Repeat steps 2-4 to specify more settings.
6. When you finish, click **OK** to close the dialog box.  
All of your changes are saved to your strategy (.sty) file.

**Tip**

---

When a setting is highlighted, a definition of it is displayed at the bottom of the dialog box. You can also press **F1** to view additional information for the highlighted option.

---

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Strategy Reference Guide” on page 771](#)

## Saving a Strategy

To save a new or cloned strategy, or any change of a strategy setting to your project, click **File > Save Project** from the Radiant software main window.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Setting Active Strategy

Set an active strategy if you have more than one strategy in a project.

**To set an active strategy:**

- ▶ Right-click the target strategy and choose **Set as Active Strategy**.

To view the settings of the active Strategy, choose **Project > Active Strategy**. From the submenu, choose the settings to view. The Strategies dialog box opens with the settings you have chosen. You can view or edit the values of the settings.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Removing a Strategy

You can remove an inactive user strategy from your design.

### To remove an inactive user strategy:

Right-click on the target strategy and choose **Remove**.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Getting Help on Strategies

To find the Help description of strategy settings, do one of the following:

- ▶ Open the “Strategy Reference Guide” in the Contents pane of the Radiant software Help to display all process options in the order they appear in the Strategies dialog box. See [“Strategy Reference Guide” on page 771](#).
  - ▶ Choose the desired process option. Strategies associated with this process are displayed.
  - ▶ Use the scroll bar to select a setting and view its description.
- ▶ In the Radiant software File List view, double-click a strategy name to open the Strategies dialog box.
  - ▶ Highlight a setting to display its brief definition at the bottom of the dialog box, or press **F1** to view additional information for the highlighted option.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Strategy Reference Guide” on page 771](#)
- ▶ [“Creating a Strategy” on page 45](#)
- ▶ [“Cloning a Strategy” on page 45](#)
- ▶ [“Adding an Existing Strategy” on page 46](#)
- ▶ [“Specifying Strategy Options” on page 46](#)
- ▶ [“Saving a Strategy” on page 47](#)
- ▶ [“Setting Active Strategy” on page 47](#)
- ▶ [“Removing a Strategy” on page 48](#)

## Analyzing a Design

You can analyze your design in the following ways while it is being implemented.

Before synthesis:

- ▶ The Hierarchy view provides a nested list of all modules and commands to access the source code for individual modules, set up test benches, and more. See [“Hierarchy View” on page 49](#).
- ▶ The Netlist Analyzer provides the schematic view to analyze user RTL in schematic form. The Netlist Analyzer RTL view is only available when LSE is used.

After synthesis, schematic views are also available. These views depend on which synthesis tool you are using:

- ▶ LSE: you can use the Radiant software’s Netlist Analyzer to see and analyze the synthesized and mapped design.
- ▶ Synplify Pro: you can use Netlist Analyzer to see and analyze the synthesized design or you can use its HDL Analyst. See *Synplify Pro for Lattice User Guide*.

If you are using LSE, Netlist Analyzer shows how the design is mapped to the device’s architecture.

You can view the order of cells representing the sequential flow of signals through a circuit. Netlist Analyzer follows the path of the net and displays the cells along that path, maintaining the proper sequence from the source (start point) to the destination (end point).

You can cross-probe from the Critical Paths Summary tab or the Query tab of Timing Analyzer to Netlist Analyzer. Refer to [“Path Details in Timing Analyzer” on page 392](#).

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Hierarchy View

The Hierarchy view appears in the left pane below the project file list view and shows the design hierarchy as a nested list of modules, and launches automatically when you open a project. If the Hierarchy view is not open, choose **View > Show Views > Hierarchy** from the Radiant software main window.

The Hierarchy view also shows the full path name of the files that define each module.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Commands in the Hierarchy View

Right-click in the Hierarchy view to get several useful commands described below.

### Goto Source Definition

This command opens the source editor with the source code that contains the definition for that object, and automatically scrolls the view to the position in the code where the object is defined. For objects that include multi-line definitions, the entire definition is highlighted.

### Goto Source Instantiation

This command brings you directly to the source file where the module is instantiated, making it easy to see and fix errors.

### Goto Netlist Analyzer

After synthesis has been run with LSE, this command opens Netlist Analyzer with a schematic view of the design element.

### Verilog Test Fixture Declarations

This command creates the Verilog test fixture declarations include file (.tfi) based on the Verilog unit selected from the Hierarchy view. This include file should be referenced by your test fixture using: 'include "<file\_name>.tfi". By including the.tfi file in your simulation test fixtures, you ensure that the design and the test fixtures stay synchronized.

### Verilog Test Fixture Template

This command creates a Verilog test fixture template file ("*<module\_name>\_tf.v*") based on the Verilog unit selected from the Hierarchy view. The template file includes a Verilog design unit with a module declaration. Use the procedure below to create a Verilog test fixture from the "*<module\_name>\_tf.v*" file.

#### To create a Verilog test fixture from a Verilog Test Fixture Template ("*<module\_name>\_tf.v*") file:

1. Open the "*<module\_name>\_tf.v*" file from the project directory.
2. Import the new .v file into the project as a Verilog test fixture. Then add codes to the user defined section to complete the stimulus for your design.

### VHDL Test Bench Template

This command creates a VHDL template file ("*<entity\_name>\_tb.vhd*") based on the VHDL unit selected from the Hierarchy view. The template file includes a VHDL design unit with a component declaration and an instantiation based on the entity interface of the first VHDL design unit encountered.

Use the following procedure to create a VHDL Test Bench from the "*<entity\_name>\_tb.vhd*" file.

**To create a VHDL test bench from a VHDL Test Bench Template (“<entity\_name>\_tb.v”) file:**

1. Open the “<entity\_name>\_tb.vhd” file from the project directory.
2. Import the new .vhd file into the project as a VHDL Test Bench. Then add codes to the user defined section to complete the stimulus for your design.

**Note**

---

Avoid using user-defined record type array in your design. Try to use standard data type such as std\_logic\_vector. Using your own defined record type array may cause the signal width to be incorrect in the VHDL test bench template file generated.

---

**Set as Top-Level Unit**

You can directly set the selected module as the top-level unit by using this command.

**See Also**

- [“Managing Projects” on page 17](#)

## About Netlist Analyzer

Netlist Analyzer works with LSE and Synplify Pro to produce schematic views of your design while it is being implemented. Use the schematic views to better understand the hierarchy of the design and how the design is being implemented.

**To start Netlist Analyzer:**

1. Synthesize the design with LSE or Synplify Pro.
2. Choose **Tools** >  **Netlist Analyzer**.

The Netlist Analyzer window opens with the RTL netlist showing.

3. In the window’s tool bar, click one of the following buttons:

 RTL View to see the design’s logic (gates and registers) after LSE has optimized it.

**Notes:**

- 
- RTL view is not supported in Synplify Pro. To view the netlist generated by Synplify Pro, please use the standalone Synplify Pro GUI.
  - Due to translation into Lattice primitive modules, some logic elements may appear differently across views. For example, a tri-state enable signal may be shown as inverted. This visual difference does not affect the design’s functionality, it only translates the design to Lattice-specific primitives.
-

 Technology View to see the design after synthesis and translated into Lattice primitive modules.

 Open External File to browse to a desired netlist database (.vdb) file.

A new tab opens and is filled as described below.

### About Netlist Analyzer Views

The Netlist Analyzer window consists of four parts:

- ▶ Tool bar provides buttons for various functions.
- ▶ Netlist browser provides nested lists of module instances, ports, nets, and clocks.
- ▶ Schematic view shows a schematic of the design. Depending on the size of the design, the schematic may consist of multiple sheets.
- ▶ Mini-map, which is a miniature view of the sheet, helps you pan and zoom in the schematic view.

Netlist Analyzer can have multiple schematics open. The open schematics are shown on tabs along the bottom of the window.

Bold lines are buses. Green lines are clock signals.

Note that you can adjust the view of a schematic and navigate through the hierarchy in multiple ways.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Setting Netlist Analyzer Options

With Netlist Analyzer you can specify the following:

- ▶ Labels in the schematics
- ▶ How the hierarchy gets expanded
- ▶ Highlight color
- ▶ Size of the sheets

### To change tool options:

1. Choose **Tools > Options**.  
The Options dialog box opens.
2. In the left-hand list, click **Tools**.
3. Click the **Netlist Analyzer** tab.
4. Set the options.
5. Click **OK**.



Refer to the following instructions for specific options.

#### To specify labels:

In the **Netlist Analyzer** tab, under **Text**, select the labels that you want to see in the schematics.

#### To control how the hierarchy gets expanded:

In the **Netlist Analyzer** tab, under **Schematic**, adjust the values of the following items:

- ▶ Hierarchy Depth: The number of levels to show when using the Dissolve Instances command. The default, 0, displays all levels.
- ▶ Levels of Logic to expand: The number of additional levels to show with the Expand To/From command.
- ▶ Search depth to expand: The number of additional levels to show with the Expand to FF/IO and Expand to Primitive commands. The default, 0, displays all levels.

#### To change the sheet size:

In the **Netlist Analyzer** tab, under **Sheet**, type the preferred width and height values.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Adjusting the Schematic View

Netlist Analyzer schematics are usually displayed on several sheets, depending on the size of the design. More than one schematic view can be open at the same time.

#### To change the sheet being displayed:

- ▶ Do one of the following:
  - ▶ Click the Next Sheet  button.
  - ▶ Click the Previous Sheet  button.
  - ▶ Click the arrow in the Goto Sheet  ▼ button. In the drop-down menu, choose a sheet number.
  - ▶ Click the name at the end of a net on the left or right side of a schematic (but not a port). This takes you to the continuation of the net on another sheet.

#### To change the layout in a sheet:

- ▶ Right-click in the schematic and choose **Regenerate**.

## See Also

- ▶ [“Managing Projects” on page 17](#)

## Zooming and Panning

You can zoom and pan within the Netlist Analyzer schematics using a variety of methods, including toolbar commands, dragging with the schematic, and Netlist Analyzer’s mini-map.

### Toolbar Commands

The following commands are available on the Radiant software toolbar.

-  Zoom In – enlarges the view of the entire layout.
-  Zoom Out – reduces the view of the entire layout.
-  Zoom Fit – reduces or enlarges the entire layout so that it fits inside the window.
-  Zoom To – enlarges the size of one or more selected objects on the layout and fills the window with the selection.
-  Pan – enables you to use the mouse pointer to drag the layout in any direction. This command is useful for viewing a hidden area on the layout after zooming in.

### Zooming with Function Key Shortcuts

The following key combinations enable you to instantly zoom in or out from your keyboard.

- ▶ Zoom In – Ctrl++
- ▶ Zoom Out – Ctrl+-

### Zooming with the Mouse Wheel

The mouse wheel gives you finer zoom control, enabling you to zoom in or out in small increments.

- ▶ While pressing the **Ctrl** key, move the mouse wheel forward to zoom in and backward to zoom out.

### Zooming by Dragging

Zoom by holding the left mouse button and dragging:

- ▶ To zoom to fit the window, drag up and to the left. The image adjusts to fill the window.
- ▶ To zoom out, drag up and to the right. The distance you drag determines the amount of zoom. 1 means half as big, 2 means  $\frac{1}{4}$  as big, and so on. The image is reduced and centered in the window.

- ▶ To zoom in, drag down and to the left. The distance you drag determines the amount of zoom. 1 means twice as big, 2 means four times as big, and so on. The image is enlarged and centered in the window.
- ▶ To zoom in on a specific area, start at the upper-left corner of the area that you want to see better and drag to the lower-right corner of the area. The area that you drag across is adjusted to fill the window.

## Zooming and Panning with World View

The World View is a small display representation of a schematic that appears in the lower-left corner of the Netlist Analyzer window. The World View shows the entire sheet with a purple rectangle marking the area that is actually showing in the schematic view.

If the World View is not shown, click the World View  button at the lower-left corner of the schematic view.

To enlarge the World View, click on one of the control tabs on the edge of the mini-map and drag.

To zoom, click on one of the control tabs of the purple rectangle and drag. As the rectangle changes size, the schematic view zooms in or out.

To pan, click in the purple rectangle and drag it so that it covers the area that you want to see. As you drag, the schematic view shifts.

Click on the spot that you want to see. The schematic view jumps to that spot and centers the view.

### See Also

► [“Managing Projects” on page 17](#)

## Saving Schematics

You can save a schematic as either a PDF or SVG file. As a PDF file, the whole schematic is a single file with each sheet an 8.5-inch by 11-inch page. As an SVG file, only the currently displayed sheet is saved.

### To save a schematic:

1. If saving as an SVG file, select the desired sheet.
2. Choose **File** >  **Export**.  
The Export Schematic dialog box opens.
3. Browse to where you want to save the file.
4. Enter a file name.
5. Click the **Save as type** drop-down menu and choose PDF or SVG.
6. Click **Save**.

### See Also

► [“Managing Projects” on page 17](#)

## Printing Schematics

Use the print functions of the Radiant software to print the schematics.

**To print a schematic:**

1. Choose **File > Print Preview**.

The Print Preview window opens.

2. Expand the Print Preview window to the desired size.
3. To maximize the printout, click  for landscape mode.
4. Click the Page setup  button and adjust the paper size and margins, if necessary.
5. Click the Print  button.
6. Adjust the printer settings if necessary and click **Print**.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Navigating the Design with Netlist Analyzer

Explore a design by selecting one or more objects and then right-clicking in the schematic view and choosing a command from the drop-down menu. These commands help you to:

- ▶ Focus on one part of the design.
- ▶ Flatten the layers of a hierarchy.
- ▶ Trace the paths between objects.
- ▶ Expand selected parts of the schematic.

Most commands can be reversed by clicking the Back  button. They can be repeated by clicking the Forward  button. To jump back to the original view after using one or more commands, right-click in the schematic view and choose **Restore Current Schematic**.

While exploring a design, you may see a need to set a synthesis constraint. If so, drag the port, net, or register to the relevant tab of LDC Editor. See [“Handling Device Constraints” on page 225](#).

**To select objects:**

- ▶ Click the Select  button and do one of the following:
  - ▶ Click on the object in the schematic view. Ctrl-click to select more objects.
  - ▶ Click on the object in the netlist browser. Ctrl-click to select more objects.
  - ▶ Click and drag to draw a selection rectangle around one or more modules in the schematic view. This method only selects modules, not ports or nets.

- ▶ Right-click in the schematic view and choose **Select All Schematic > Instances**. This command selects all module instances showing on all sheets of the schematic.
- ▶ Right-click in the schematic view and choose **Select All Schematic > Ports**. This command selects all ports displayed on all sheets of the schematic.
- ▶ Right-click in the schematic view and choose **Select All Sheet > Instances**. This command selects all module instances displayed on the current sheet of the schematic.
- ▶ Right-click in the schematic view and choose **Select All Sheet > Ports**. This command selects all ports displayed on the current sheet of the schematic.

You can keep an object highlighted, but not actively selected, by right-clicking in the schematic view and choosing **Highlight**. This highlights the selected objects using the selected color while you continue to explore the design. Highlighted objects are not “selected” for commands. Highlighting can be erased by using the Back button.

To erase highlighting and return an object to normal display, select the object and then right-click and choose **Unhighlight**.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Focusing on Part of the Design

You can focus on a specific part of a design in one of several ways:

- ▶ Filter the schematic.
- ▶ Reduce it to selected modules.
- ▶ Trim away objects that are in the way.
- ▶ Request more details of a single module.

#### To filter the schematic:

1. Select one or more modules from either the netlist browser or schematic view.
2. Click the Filter Schematic  button.

The schematic is replaced with the selected modules. Only nets connecting the selected modules are included. Use the commands described below to expand the schematic.

#### To filter with signal paths:

1. Select one or more modules.
2. Right-click anywhere in the schematic view and choose **Isolate Path**.

The schematic is replaced with the selected modules *and* modules connected to the selected modules. Only nets connecting the modules are included.

#### To trim the schematic:

1. Select one or more objects to hide.
2. Right-click anywhere in the schematic view and choose **Less**.

The selected objects disappear. If the objects include a branch of a net, the remaining branches become dotted lines to show that part of the net is hidden.

#### To see the structure inside a module:

1. Click the Push down/Pop up  button.
2. Drag the cursor to the module.

If there is further hierarchy to see (that is, if the module is not already a primitive), the cursor changes to a blue down arrow .

3. Click in the module with the blue down arrow.

The schematic changes to show just the structure of the module at the next lower level of hierarchy. To go further down the hierarchy, continue to click in a module with a down arrow.

To go back up the hierarchy, click a green up arrow  when it is not over a module.

To perform other commands in the schematic, click the Select  button.

#### To quickly push down or pop up in a module:

Do the following to push down into a module while staying in select mode:

- ▶ Right-click the module and drag straight down until the words “push down” appear. Then release the mouse button.
- ▶ To go back up the hierarchy, right-click anywhere in the schematic view and drag straight up until the words “pop up” appear. Then release the mouse button.

#### To work on one module in RTL view:

1. Go to the Hierarchy view. If it is not showing, choose **View > Show Views > Hierarchy**.
2. Right-click on the desired module and choose **Goto Netlist Analyzer**.

This opens Netlist Analyzer with a schematic view of the design element. The rest of the design is not available in this schematic.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Flattening the Design

An alternative to viewing a hierarchy is to flatten the design, which displays all the layers together in a larger, more detailed schematic. By doing so, you do not have to keep track of where you are in the hierarchy. You can flatten the entire schematic or just selected modules.

### To flatten the entire schematic:

- ▶ Right-click anywhere in the schematic view and choose **Flatten Schematic**.

The entire design is shown in terms of primitives.

To return to the original schematic, right-click and choose **Unflatten Schematic**.

### To flatten a module:

1. Select the module.
2. Right-click and choose **Dissolve Instances**.

The schematic expands to include the selected module's primitives. Boundaries, ports, labels of the module, and all submodules are included to help identify and select the modules and their ports.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Tracing Paths between Objects

Use Netlist Analyzer to trace a signal within a complex schematic.

### To trace a signal path:

1. Select two or more objects on the same or different sheets.
2. Right-click and choose **Expand > Expand Paths**.

Nets and modules between the selected objects are highlighted. Modules along the paths are expanded to show primitives.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Expanding from a Module

After focusing a schematic on one or more modules, do the following to see what the modules are connected to.

### To see all the nets attached to a module:

1. Select the module.



2. Right-click and choose one of the following:

- ▶ **Show Connectivity**

Highlights all nets attached to the selected module, expanding the schematic as necessary.

- ▶ **Expand > Expand To/From**

Highlights all nets attached to the selected module and all primitives attached to those nets, expanding the schematic as necessary.

#### To see the next higher level of the hierarchy:

1. Select a module, right-click and choose **Show Context**.
2. If nothing happens, click the Push down/Pop up  button. Move the cursor to the schematic view, and click the green up-pointing arrow  when it appears.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Expanding from a Port

Instead of expanding all the nets from a module, you can expand the net from a single port. If the module is not a primitive, you have the choice of expanding outward or inward to a lower level of the module’s hierarchy. Make this choice by selecting a port pointing out or in.

#### To see what a single port is attached to:

1. Double-click the port.  
The schematic expands to show the port’s net and one other object that is on the net.
2. If the net appears as a dashed line, only part of the net is being shown. Double-click the port again to see another branch of the net.  
If the net shows as solid line, the full net is being displayed.  
If the net is fully visible, nothing else can be done.

#### To see a fuller signal path from a single port:

1. Select the port. If the port is on a module, take care whether it is pointing out or in.
2. Right-click and choose **Expand**.  
A sub-menu drops down.
3. Choose one of the following from the sub-menu:
  - ▶ **Expand to FF/IO**

Highlights the net until it finds a flip-flop or an I/O pin, expanding the schematic as necessary. Modules along the path are expanded to show primitives.

▶ **Current Level > Expand to FF/IO**

Same as above except that modules are *not* expanded.

▶ **Expand to Primitive**

Highlights the net and all attached primitives, expanding the schematic as necessary.

▶ **Current Level > Expand to Primitive**

Same as above except that modules are *not* expanded.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Expanding from a Net

You can expand a net to show all connected primitives and ports or to show just the primitive or port driving it.

**To see all modules on a net:**

1. Select the net.
2. Right-click and choose **Go to Connected Instances**.

Highlights the selected net and all connected primitives and ports, expanding the schematic as necessary.

**To see just the driver of a net:**

1. Select the net.
2. Right-click and choose **Go to Driver**.

Highlights the selected net and the driving primitive or port, expanding the schematic as necessary.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Searching in Netlist Analyzer

With larger designs, finding objects may be easier with a text search. The Find function in Netlist Analyzer allows you to search for objects in the schematic using instance, symbol, port, and net names. Found objects can be selected in the netlist browser and schematic view.

**To search the design in Netlist Analyzer:**

1. Choose **Edit >  Find**.

The Find dialog box opens.

2. Select the type of object that you want to search for by clicking one of the tabs at the top of the dialog box.
3. Select the part of the design to search for by selecting a level in the Search box.
4. At the bottom-left of the dialog box is the Un-Highlight Search box. Click in this box and type in your search term. You can use the following wildcards:
  - ▶ \* for any number of characters
  - ▶ ? for a single character

Or, click the arrow at the end of the box and choose from a previously used search term.

5. Click either **Find 200** or **Find All**.

The found objects are listed in the UnHighlight box.

6. If you clicked Find 200 and want to see more results, click either **Next 200** or **Find All**.
7. To highlight found objects in the schematic view, do one of the following:
  - ▶ Select the desired objects in the UnHighlight box and then click the → (right arrow) button.
  - ▶ For all found objects, click the **All →** button.

The selected objects move to the Highlight box and are highlighted in the netlist browser and schematic view. The schematic view does not expand to show objects in other layers or on other pages.

8. To reduce the number of objects in the Highlight box, select unwanted objects and then click the ← (left arrow) button. You can find objects in the Highlight list using the Highlight Search box. Anything entered in the Highlight Search box is automatically searched for and selected.
9. When you have the Highlight list the way you want, click **Close**.

Highlighted objects in the schematic view stay highlighted after the Find dialog box closes.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Getting More Information about an Object

Additional information about an object in a schematic view is available, including names, number of fanouts, source code, and pins that the nets connect to.

#### To get more information about an object:

1. Select one or more objects.

2. In the schematic view, right-click the object of interest and choose **Properties**.
  - ▶ The Properties dialog box opens showing a list of properties for the object.
  - ▶ If the object is a module, the dialog box also has a drop-down menu listing all the ports of the module. Choosing a port shows the properties for that port.
  - ▶ If the object is a bus, the dialog box has a drop-down menu listing all the nets that make up the bus. Choosing a net shows the properties for that net.
3. Click **Close** when finished.

#### To get the hierarchy name of an object:

1. Select one or more objects.
2. In the schematic view, right-click and choose **Copy**.
3. Paste into any text editor.

The format of the name will be similar to this example:

```
{i:UART_INST/u_txmitt/add_24}
```

The first letter is i for instance, n for net, or p for port.

#### To get the source code for an object:

1. Select one or more objects.
2. In the schematic view, right-click the object of interest and choose **Jump to > Jump to HDL File**.

The Source Editor opens with the code highlighted.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Running Processes

A process is a specific task in the overall processing of a source or project. Typical processing tasks include synthesizing, mapping, placing, and routing. You can view the available processes for a design in the Process Toolbar.

#### Process Toolbar



Click the Task Detail View  to see detailed information of the processes.

Processes are grouped into categories according to their functions.

- ▶ **Synthesize Design**

Click on this process to have LSE synthesize the design. By default, this process runs the LSE tool. For details, see [“Synthesizing the Design” on page 334](#).

If you are using Synplify Pro, choose Synplify Pro as the synthesis tool (**Project > Active Implementation > Select Synthesis Tool**). See [“Selecting a Synthesis Tool” on page 71](#) for details).

▶ **Post-Synthesis Timing Analysis**

Runs timing analysis after the Synthesize Design process.

▶ **Post-Synthesis Simulation File**

Generates a netlist file <file\_name>\_syn.vo used for functional verification.

▶ **Map Design**

This process maps a design to an FPGA. Map Design is the process of converting a design represented as a network of device-independent components (such as gates and flip-flops) into a network of device-specific components (configurable logic blocks, for example). For details, see the **Implementing the Design > “Mapping” on page 343**.

▶ **Map Timing Analysis**

Runs Map timing analysis.

▶ **Place & Route Design**

After a design has been translated into the Native Circuit Description (.ncd) format, you can run the Place & Route Design process. This process takes a mapped physical design .ncd file, places and routes the design, and outputs a file that can be processed by the design implementation tools. For details, see [“Place and Route” on page 350](#).

▶ **Place & Route Timing Analysis**

Runs Place & Route timing analysis.

▶ **I/O Timing Analysis**

Runs I/O timing analysis.

▶ **Export Files**

You can check the desired file you want to export and run this process.

▶ **Bitstream File**

This process takes a fully routed physical design or .ncd file as input and produces a configuration bitstream (bit images). The bitstream file contains all of the configuration information from the physical design defining the internal logic and interconnections of the FPGA, as well as device-specific information from other files associated with the target device.

To confirm that your production bitstream does not include debuggers, you can check the bitstream report under Export Report. Refer to [“Viewing Logs and Reports” on page 86](#).

For other details on generating bitstreams, refer to [“Bit Generation” on page 368](#).

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Managing Project Sources” on page 25](#)
- ▶ [“Process State” on page 66](#)
- ▶ [“Starting a Process” on page 67](#)
- ▶ [“Forcing a Process to Run” on page 67](#)
- ▶ [“Stopping a Process” on page 68](#)
- ▶ [“Cleaning Up Processes” on page 68](#)

## Process State

The Process Toolbar shows the state of the processes in the active implementation. Each state is identified with different icons, as shown in the table below.

| Process State | Process Toolbar Icon                                                                | Description                                                                                         |
|---------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| Initial       |    | The process has never been run or an input dependency time stamp has changed since it was last run. |
| Completed     |  | The process has been run successfully.                                                              |
| Completed     |  | Process has been completed with unprocessed subtask(s)                                              |
| Error         |  | The process did not complete successfully.                                                          |

### Conditions that Re-initialize Process State

A process or report is re-initialized under the following conditions:

- ▶ A process state earlier in the sequence has changed.
- ▶ An input file of the process or report has changed since the last run. For example, changing the .pdc file will cause the map process to be rerun.

#### Note

Input file changes are only detected if done by the Radiant software Source Editor or a process or report triggered by the Radiant software main window. Changes applied by third-party text editors will NOT be detected.

- ▶ Process settings have changed.
- ▶ Target device has changed. All processes will be re-initialized.
- ▶ A **Force Run** function is run.

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Running Processes” on page 64](#)
- ▶ [“Starting a Process” on page 67](#)
- ▶ [“Forcing a Process to Run” on page 67](#)
- ▶ [“Stopping a Process” on page 68](#)
- ▶ [“Cleaning Up Processes” on page 68](#)

## Starting a Process

You can start a process on a single source file or on an entire project.

**To start a process, do one of the following:**

- ▶ In the Process Toolbar, click the desired process.
- ▶ Right-click the process in the Process Toolbar and choose  **Run**.

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Running Processes” on page 64](#)
- ▶ [“Process State” on page 66](#)
- ▶ [“Forcing a Process to Run” on page 67](#)
- ▶ [“Stopping a Process” on page 68](#)
- ▶ [“Cleaning Up Processes” on page 68](#)

## Forcing a Process to Run

If the process is up-to-date (indicated by a check mark to the left of the process), it will not run again. However, you can force a process to run by doing the following:

- ▶ Right-click the process in the Process Toolbar and choose  **Force Run**.

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Running Processes” on page 64](#)
- ▶ [“Process State” on page 66](#)
- ▶ [“Starting a Process” on page 67](#)
- ▶ [“Stopping a Process” on page 68](#)
- ▶ [“Cleaning Up Processes” on page 68](#)

## Stopping a Process

Do the following to stop running a certain process:

- ▶ Right-click the process in the Process Toolbar and choose  **Stop**.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Running Processes” on page 64](#)
- ▶ [“Process State” on page 66](#)
- ▶ [“Starting a Process” on page 67](#)
- ▶ [“Forcing a Process to Run” on page 67](#)
- ▶ [“Cleaning Up Processes” on page 68](#)

## Cleaning Up Processes

Reset all processes by right-clicking a process in the Process Toolbar and choosing the **Clean Up Process** command. This command returns the status of all of the processes back to their initial  state.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Clearing Tool Memory

The Clear Tool Memory command, available from the Tools menu, clears the device, design, and preference information from system memory. Clearing the tool memory can speed up memory-intensive processes such as place-and-route. When your design is very large, it is good practice to clear memory prior to running place-and-route.

If you have open tool views that are affected by clearing the tool memory, a confirmation dialog box opens to give you the opportunity to cancel the memory clear.

### To clear tool memory:

1. In the Radiant software main window, choose **Tools > Clear Tool Memory**.
2. In the dialog box, choose the tool you wish to clear memory information from.
3. Click **OK**.

For more information about shared memory, refer to Chapter 10 of the *Lattice Radiant Software User Guide*.



# Setting Options for Synthesis and Simulation

The Radiant software is integrated with LSE, the Synplify Pro synthesis tool, and the QuestaSim simulation tool. Besides the OEM tools, you can also let the Radiant software use LSE or Synplify Pro as the synthesis tool, and full-featured versions of QuestaSim as the simulation tool.

This section covers steps on how to do the following:

- ▶ Selecting synthesis and simulation tools
- ▶ Defining file order for synthesis and simulation
- ▶ Customizing synthesis tool processes
- ▶ Specifying VHDL library name
- ▶ Specifying the search path for Verilog include files

Performing interactive synthesis is also discussed in this section.

## See Also

- ▶ [“Managing Projects” on page 17](#)

## About Lattice Synthesis Engine

For most devices, LSE can be used as your synthesis tool instead of Synplify Pro for Lattice or any other third-party synthesis tool.

LSE is a synthesis tool custom-built for Lattice products and fully integrated with the Radiant software. Depending on the design, LSE may lead to a more compact or faster placement of the design than another synthesis tool. LSE can be run from the Radiant software main window or through the command line, similar to the other integrated synthesis tools.

In addition, LSE offers the following advantages:

- ▶ Enhanced RAM and ROM inference and mapping, including:
  - ▶ Multiple reads
  - ▶ Dual-port RAM in write-through, normal, and read-before-write modes mapped to EBR
  - ▶ Clock enable and read enable packing
  - ▶ Mapping for the minimal number of EBR blocks
  - ▶ EBR mapping for minimal power
  - ▶ Better support for wide-mode mapping
- ▶ Comprehensive GSR inference for area and timing.
- ▶ Post-synthesis Verilog netlist suitable for simulation.

When considering LSE, note the following limitations:

- ▶ IP must be generated with a synthesis tool other than LSE. So the synthesis of IP won't be affected by a change to LSE.

- ▶ Design code may need to be modified. Modifications may involve some VHDL requirements and inferring RAM, ROM, and I/O.
- ▶ Does not include interclock domain paths in timing analysis.

**See Also**

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Selecting a Synthesis Tool” on page 71](#)

## Switching to Lattice Synthesis Engine

When changing to LSE from another synthesis tool, the following must be done:

- ▶ Consider creating a new design implementation. You can experiment with different settings without losing your previous work. See [“Working with Implementations” on page 41](#).
- ▶ Modify the Synopsys Design Constraint (.sdc) file into an .ldc or create a new .ldc file. See [“Lattice Synthesis Engine Constraints” on page 824](#) and [“Handling Device Constraints” on page 225](#).
- ▶ Adjust the LSE strategy settings. See [“LSE Options” on page 783](#) and [“Optimizing LSE for Area and Timing” on page 337](#).
- ▶ Review the LSE coding tips and consider applying them to your design. See [“Coding Tips for LSE” on page 123](#).
- ▶ Review the instructions for integrated synthesis. There are some differences with LSE. See [“Integrated Synthesis” on page 340](#).

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Bus Naming in LSE Output

In the LSE output files, bus names are converted to individual signal names (sometimes known as “bit blasting”) and “\_c\_” is added. For example, the bus name sum[0:3] becomes:

```
sum_c_0  
sum_c_1  
sum_c_2  
sum_c_3
```

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Selecting a Synthesis Tool

The Radiant software supports Verilog HDL and VHDL designs using LSE or Synplify Pro as the synthesis tool.

- ▶ The Radiant software is fully integrated with LSE and Synplify Pro. “Fully integrated” means that you can set options and run synthesis entirely from within the Radiant software. When you create a new project for any device, the default synthesis tool is Synplify Pro.
- ▶ If you prefer, you can use other synthesis tools by running them independently of the Radiant software.

You can specify one of them as the synthesis tool for the currently active implementation of your project. Different implementations can have different synthesis tools specified.

### To select a synthesis tool:

1. Make sure you have successfully installed LSE or Synplify Pro.
2. From the Radiant software main window, choose **Project > Active Implementation > Select Synthesis Tool**.

The Project Properties dialog box appears with the active implementation selected.

3. In the Project Properties dialog box, double-click the synthesis tool in the Value column.
4. From the drop-down menu, select a tool.
5. Click **OK**.

You can also select a default synthesis tool by doing the following:

1. From the Radiant software main window, choose **Tools > Options > Tools > Synthesis**.

The Options dialog box opens.

2. In the **Synthesis** tab, you can choose LSE or Synplify Pro as the default synthesis tool.
3. Click **OK**.

When you create a new project, you can see the chosen synthesis tool in the Select Synthesis Tool dialog box.

If you have chosen **Synplify Pro**, you can either use Synplify Pro for Lattice or your own full-featured Synplify Pro. By default, the Radiant software uses the Lattice version. If you want to use Synplify Pro for Lattice, you can use the main window to start running processes. If you want to use your own full-featured Synplify Pro, you need to specify the directory it is in by doing the following:

1. Choose **Tools > Options > General**.

The Options dialog box opens.

2. In the **Directories** tab, clear the **use OEM** option.

3. Specify the installation path for Synplify Pro in the Synplify Pro field.
4. Click **OK** to save your settings.

If you have a different synthesis tool, you need to specify the directory in the Options dialog:

1. Choose **Tools > Options > General**. The Options dialog box opens.
2. In the **Directories** tab, specify the installation path for the Synthesis field.
3. Click **OK** to save your settings.

#### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Customizing Synthesis” on page 79](#)

## Specifying VHDL Library Name

The Radiant software supports VHDL design synthesis using LSE Synplify Pro. You can specify the library name for synthesizing individual VHDL sources and modules. By default, all project-related design sources are compiled into the “work” library.

The VHDL library name can also be specified in the Synplify Pro tool. See Synplify Pro Help for details.

#### To specify the VHDL library target in the main window:

1. In the File List view, right-click the VHDL source for which you want to specify a library name and choose **Properties**.
2. In the Project Properties dialog box, type in the library name you want in the Value field and click **OK**.

The LSE Synplify Pro tool uses the specified library name to synthesize the selected VHDL source file or module.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Specifying Search Path for Verilog Include Files

The Radiant software supports Verilog design synthesis using LSE, or Synplify Pro. If a Verilog file is added to your design and additional files are referenced using the include directive, you can specify the search path in the Radiant software for searching include files.

### Note

If the include file in your Verilog file changed after you opened the relevant project in the Radiant software, you need to use the **Rerun All** or **Rerun** command to force the process to rerun so that the Radiant software can reflect the changes of the include file.

You can also specify a Verilog include file search path directly in LSE, or Synplify Pro. See [“Running Synthesis from the Command Line” on page 1686](#), and the Synplify Pro Help for details.

**Synplify Pro and LSE Search Path** If you select Synplify Pro or LSE as the synthesis tool, you can only specify the search path for the entire project. Synplify Pro or LSE searches for the include file in the following order, and stops at the first occurrence of the include file it finds.

1. The directory of the file that specifies the 'include' directive.
2. The directories that are specified in the “Search Path” option for the entire project.
3. The current project path is added automatically by the Radiant software if you do not specify either the 'include' directive or the directories specified in the “Search Path” option for the entire project. Therefore, you do not need to specify the project path in the Radiant software. The path will be added automatically.

### Specifying Search Path in the Radiant software

#### To specify the search path in the Radiant software:

1. In the File List view, right-click the implementation name if you want to specify the search path for the entire project.
2. Choose **Properties** from the right-click menu.  
The Project Properties dialog box opens.
3. In the dialog box, select **Verilog Include Search Path**, and do either of the following:
  - ▶ To add a single search path, click the Value field to enter a path.
  - ▶ To add multiple paths, click the ... button from the Value field to get the Verilog Include Search Path dialog box. Next, click the **+** icon to browse for a new path and click **OK**. The new path is displayed in the Verilog Include Search Path dialog box. Repeat to add more paths.

You can use the  and  button to arrange the order of the paths, or use the  button to delete a path. Click **OK** when finished.

4. Click **OK** to exit the Project Properties dialog box.

The search paths you added are applied. The Synplify Pro tool uses the specified search paths to search for the include files referenced in your design other than the directory of the file that specifies the include directive.

#### See Also

- ▶ [“Managing Projects” on page 17](#)

## Setting Top-Level HDL Parameter

- ▶ Top-level parameters can be passed on the command line or in the .synproj file with the **-hdl\_param <PARAM> <value>** option.
- ▶ Numeric values should be entered directly, and string values should be surrounded by double quotes. For example:
  - ▶ -hdl\_param EXP 3.5e5
  - ▶ -hdl\_param LOG \$clog2(512)
  - ▶ -hdl\_param REG "BYPASSED"
- ▶ This setting can also be configured in the GUI via Project Properties in the HDL Parameters field: **<PARAM>=<value>**.

#### To configure HDL parameters using Project Properties:

1. In the File List view, right-click on the implementation's name and choose **Properties**.

The Project Properties dialog box opens.

2. In the **HDL Parameters** row, click the cell under **Value**.

When entering values using Project Properties, you should ensure that the values are kept as you entered them and correctly interpreted as either a number or a string.

Type the modified statements as a single line of text, with each statement separated by semi-colons.

3. When done, click **OK**.

#### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Modifying Verilog and VHDL Parameters” on page 75](#)

## Modifying Verilog and VHDL Parameters

You can modify Verilog parameters or VHDL generics by doing one of the following:

- ▶ Parameters can be configured in RTL code for both top and sub modules.
- ▶ Project Properties can set HDL Parameters exclusively in the top module.

You may find the following method an easier way to experiment with these settings.

### To modify Verilog parameters or VHDL generics:

1. In the File List view, right-click the implementation's name and choose **Properties**.  
The Project Properties dialog box opens showing the implementation's properties.
2. In the HDL Parameters row, click under **Value**.
3. Type the modified statements as a single text line with different statements separated by semi-colons (;).
4. When done, click **OK**.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Setting Top-Level HDL Parameter” on page 74](#)

## Specifying Verilog Directives

Verilog directives are instructions to the Verilog compiler. They control how the compiler processes the code. A directive in one file can control compilation behavior in multiple files.

Verilog compiler directives begin with the grave accent ` and do not end with a semi-colon. The macro\_name must also be preceded by the grave accent. A directive is implemented from the point it appears in the code and remains in effect through all the file until it is superseded by another directive or the last file to be processed has ended.

Here are some Verilog compiler directives. For complete details, refer to the IEEE Standard for Verilog Hardware Description Language.

| Directive               | Description                                                                                                                                                                                                                                                                                                                                |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>`include</code>   | Copies all the contents of one Verilog source file and includes them in the current file during compilation.<br>Syntax: <code>`include "file_name"</code>                                                                                                                                                                                  |
| <code>`define</code>    | Declares a macro or defines a custom data type.<br>Syntax: <code>`define macro_name [ (argument, ...) ] text</code>                                                                                                                                                                                                                        |
| <code>`undef</code>     | Removes a defined macro.<br>Syntax: <code>`undef macro name</code>                                                                                                                                                                                                                                                                         |
| <code>`ifdef</code>     | Compiles the underlying code only when the macro is defined. It is similar to an if-else conditional statement but is processed during compilation. The <code>`ifdef</code> directive is always closed by an <code>`endif</code> directive to mark the end of the condition.<br>Syntax: <code>`ifdef macro_name &lt;code&gt; `endif</code> |
| <code>`ifndef</code>    | Compiles the underlying code only when the macro is not defined. It is the opposite of the <code>`ifdef</code> directive.<br>Syntax: <code>`ifndef macro_name &lt;code&gt; `endif</code>                                                                                                                                                   |
| <code>`elseif</code>    | Provides other options when used with <code>`ifdef</code> or <code>`ifndef</code> . This is similar to if-else-if statements.                                                                                                                                                                                                              |
| <code>`else</code>      | Defines a default case. It is not required to include this directive with <code>`ifdef</code> or <code>`ifndef</code> .                                                                                                                                                                                                                    |
| <code>`timescale</code> | Defines the time scale of the simulation. The time scale is divided into unit and precision.<br>Syntax: <code>`timescale unit base/precision base</code>                                                                                                                                                                                   |

#### To add Verilog directives:

1. In the File List view, right-click the implementation's name and choose **Properties**.

The Project Properties dialog box opens showing the implementation's properties.

2. In the Verilog Directives row, click under **Value**.
3. Type the statements as a single text line with different statements separated by semi-colons (;).

For example:

```
directive1=value1;directive2=value2;directive3=value3
```

The '=value' part is optional and the ';' is a separator character.



**Note**

Do not leave spaces around the '='. The ';' is not allowed to exist in your directive name or value.

The Tcl command to set this option is:

```
'prj_set_impl_opt VERILOG_DIRECTIVES <value>'
```

The <value> should be recognized by the Tcl interpreter as a Tcl list with each element in 'key=value' format. If you want to define a directive value containing space, the value Tcl format should use '{}' to surround the 'key=value' element in your Tcl command.

For example:

```
prj_set_impl_opt -impl impl_1 VERILOG_DIRECTIVES  
{USRACCESS_DATA=32'h1234_5678 ANOTHER_DATA=32'h5678_1234}
```

For prj\_set\_impl\_opt -append, you can append one key=value element.

Keep in mind that PN does not check if the definition is correct in the Verilog syntax. PN only passes the directive name and its value to the synthesis engine or to the simulator. The user has the responsibility to make sure the directive name and value are accepted in the Verilog parser.

**See Also**

▶ [“Managing Projects” on page 17](#)

## Selecting a Simulation Tool

The Radiant software supports functional and timing simulation for Lattice FPGA devices using QuestaSim. You can specify either one as the simulation tool for your project in the Simulation Wizard (**Tools** >  **Simulation Wizard** from main window). For more details on how to use Simulation Wizard, see [“Simulating the Design” on page 178](#).

**See Also**

▶ [“Managing Projects” on page 17](#)

## Specifying Input Files for Simulation

If your design includes one or more test bench files to use in your simulation but you don't want to synthesize them, you can specify this in the properties for each input file. New files are automatically marked for both synthesis and simulation.

**To change the synthesis/simulation property of a file:**

1. In the File List view, right-click the filename.
2. In the drop-down menu, choose **Include for** and then the desired property:
  - ▶ Synthesis and Simulation
  - ▶ Synthesis
  - ▶ Simulation

You can also set the synthesis/simulation property in the Project Properties dialog box. You can open the dialog box by choosing **Project >  Property Pages**.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Defining File Order for Synthesis and Simulation

The File List view lists design input files in a specific order. The synthesis or simulation tool uses that order to sequentially synthesize or simulate each input file. You can adjust the file order by the “drag and drop” operations. The file list can include a combination of VHDL and Verilog files. If you have not manually set a top-level module (in the Project Properties dialog box of the main window), the last file on the file list is normally treated as the top-level module.

File order is especially important for VHDL files. Package files must be first on the list because they are compiled before they are used. If design blocks are spread over several files, specify them in the following file order:

1. The file containing the entity,
2. The architecture file.
3. The file with the configuration.

Verilog file order is important when define statements are dedicated to a single file. This file should be compiled prior to any files that refer to the variables.

**To define the file order for logic synthesis and simulation:**

- ▶ In the Input Files section of the File List view, change the file order as you like by dragging the file name and dropping it to the desired location.

The new file order takes effect immediately. However, the order will only be saved once you save the design project.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Customizing Synthesis

The Radiant software supports Verilog and VHDL synthesizing using LSE, and Synplify Pro.

You can adjust synthesis tool options and perform the logic synthesis process for your Verilog or VHDL design within the Radiant software.

### To adjust synthesis tool options and perform the synthesis process:

1. Choose **Project > Active Strategy > <synthesis tool> Settings**.
2. The option settings of the selected process, LSE, or Synplify Pro are listed by default in the Strategies dialog box.
3. Double-click the Value field of the option. You can specify the option using the drop-down menu of the Value field.
4. Click **OK** to accept the new synthesis tool options and exit the Strategies dialog box.
5. In the Process view, double-click the Synthesize Design process to execute the selected synthesis tool.

If you prefer leveraging all the interactive features available in the synthesis tool while maintaining HDL source in the main window, see [“Synthesizing the Design” on page 334](#) for more details.

### See Also

- ▶ [“Managing Projects” on page 17](#)

## Working with Run Manager

Large designs can quickly get complicated, and the best approach is not always obvious or definite. There may be many ways to get optimal performance out of your design—the key is to find one option that works.

In Radiant software, each project can contain multiple source files, strategies, and implementations. Implementations are comprised of selected source files and only one strategy. You can create multiple implementations to bind different strategies.

After creating implementations, use Run Manager to run multiple synthesis and place and route passes, compare the results of multiple implementations for further analysis to get best solutions. Run Manager helps you to manage running the design implementation process with multiple project implementations (versions) and to compare the results. You can monitor progress, view reports, and quickly identify the best implementation.

### See Also

- ▶ [“Using Strategies” on page 43](#)
- ▶ [“Working with Implementations” on page 41](#)

## Setting Up Run Manager

Before using Run Manager, consider if you want to do multiple place-and-route runs on individual implementations to get different timing and area results.

If you have a lot of implementations and don't want to run them all, you may want to hide some of them in Run Manager.

Also, consider your system's ability to run multiple processes. If you have several implementations running simultaneously in Run Manager, you may see performance problems because of RAM resource conflicts.

### Setting Up Multiple Runs on an Implementation

You can get multiple place-and-route runs, using different seed values, on a single implementation. The different values can produce significantly different timing and area results.

#### To set up multiple place-and-route runs on an implementation:

1. In the File List view, right-click on the strategy of the implementation and choose **Edit**. Strategies are listed in the Strategies folder. If you are not sure which strategy is being used, you can check the Implementation column in Run Manager. It includes the strategy name for each implementation.

The Strategies dialog box opens.

2. In the Process box, on the left, choose **Place & Route Design**.
3. Find Placement Iterations and double-click the Value box. Enter the number of place-and-route runs you want to make. (For more on this option, see ["Placement Iterations" on page 796](#).)
4. Find Placement Save Best Run and double-click the Value box. Enter the number of place-and-route runs you want to see. Run Manager will show you this many of the best results. (For more on this option, see ["Placement Save Best Run" on page 796](#).)
5. Click **OK**.

### Hiding Implementations

Run Manager normally shows all the implementations of the project. But you can choose to hide any of the implementations from Run Manager except for the active implementation.

#### To change which implementations are showing:

1. Choose **Tools >  Run Manager**.  
Run Manager opens with a table listing the implementations available. The row in bold font indicates the active implementation.
2. If you want to hide the active implementation, right-click an implementation that you will continue to show and choose **Set As Active**.

This implementation becomes the active one for the project. The row changes to bold type and, in File List view, the implementation is expanded. The previously active implementation becomes inactive and can be hidden.

3. Highlight the implementation, right-click, and choose **Show/Hide Implementation**.

The Show/Hide Implementation dialog box opens.

4. In one of the columns, select one or more implementations that you want to move to the other column.
5. Click the arrow button pointing to the other column.
6. When you have the Hidden and Show lists as you want them, click **OK**.

### Improving System Performance

You can improve your system's performance while running Run Manager by limiting the number of processes sharing the memory. Allowing fewer processes means your computer spends less time swapping data in and out of the hard drive. But fewer processes than the number of available processors could mean processors sitting idle. You will need to find a balance based on your computer and the way you tend to use Run Manager.

## Running Run Manager

After setting up Run Manager (see [“Setting Up Run Manager” on page 80](#)), you are ready to run your implementations.

### To process multiple implementations using Run Manager:

1. Choose **Tools >  Run Manager**.

Run Manager opens with a table listing the implementations available. The row in bold font indicates the active implementation.

2. Select the implementations that you want to run by setting the check boxes. Select them all by clicking the check box in the heading row.
3. In Run Manager's tool bar, click the Run  button. You can force implementations that have already been run (the Status column says Completed) by clicking the Rerun  button.

While running, you can pause or stop the runs. Select a running item by clicking anywhere in its row. Then click either the Pause  or Stop  button. Run Manager may take a few moments to respond.

To continue a paused run, select it and click the Run  button.

### Note

The Process menu commands also control Run Manager, but they only affect the active implementation. This is true whether you choose the command from the Process menu in the menu bar or the right-click menu in the Process view.

---

4. When the runs are complete, compare the statistics that appear. These statistics provide a quick comparison of the quality of results. See [“Reading the Run Manager Results” on page 82](#).

If you set up an implementation to do multiple place-and-route runs, click the arrow ► sign to show the individual results. The top scoring result for each implementation is shown in italics and will be used in any further processing with that implementation.

5. If you want to save the results, go to Run Manager’s tool bar and click the Export ► button. In the Export Run Manager File dialog box, browse to where you want to save the results and enter a file name. Then click **Save**.

All the data showing in Run Manager are saved in a comma-separated values (.csv) file that can be opened with a spreadsheet tool such as Excel.

6. For more details, go to the Reports view. The Reports view shows a tab with a set of reports for each implementation. See [“Viewing Logs and Reports” on page 86](#).

Also, examine the Output view, including checking for any warning or error messages.

7. After studying the results, you can select one of the implementations and one of its runs for further development. See [“Selecting an Implementation and Run” on page 85](#).

## Reading the Run Manager Results

Run Manager displays results with a table. Every implementation in the project gets a row. If an implementation did multiple place-and-route runs, each run has a row under its implementation. If you don’t see the separate place-and-route runs, expand the hierarchy tree under the implementation row.

Bold text shows the active implementation. Italic text shows the active run out of multiple place-and-route runs. This is the run that will be used in further processing of that implementation.

There are several columns showing the results for the implementations and the place-and-route runs. The columns are described below. Compare the results across rows to see which run worked best.

For the active implementation, you can see the status of the different processes by looking at the Process view. To see the status of another implementation, right-click the implementation in Run Manager and choose **Set As Active**.

For more details, check the Reports view. The Reports view shows a tab with a set of reports for each implementation run. See [“Viewing Logs and Reports” on page 86](#).

### Changing the Display

You can adjust the display by re-arranging the columns and sorting the runs. By default, many of the columns are hidden but you can choose which ones you want to see.

**To change which columns are displayed:**

- ▶ Right-click in any column heading and choose the column that you want to hide or show. Columns that are showing have a check mark. The Implementation<Strategy> column cannot be hidden.

**To re-arrange columns:**

- ▶ Click on the heading of the column that you want to move and drag it to where you want it.

**To change the width of columns:**

- ▶ Do one of the following:
  - ▶ Right-click in any column heading and choose Adjust Column Width to Contents.  
All columns are adjusted based on their contents.
  - ▶ Click on the right-hand border of a column and drag to make that column narrower or wider.

**To sort the runs:**

1. Click in the heading of the desired column.  
The rows are sorted according to the contents of that column.
2. To reverse the order of the rows, click in the same column again.

**Column Descriptions**

There are many columns of data available. Most of these apply only to the implementation rows, not the individual place-and-route runs.

- ▶ Implementation<Strategy>: The name of the implementation followed by the strategy (in angle brackets) that implementation is using. Use the check boxes to select which implementations to run. This column cannot be hidden.
- ▶ Current Step: The implementation process, such as Synthesis and Map, that is currently running.
- ▶ Status: The status of the implementation, such as Running, Pause, and Completed.
- ▶ Next Step: The next implementation process that will run after the current process finishes.
- ▶ Worst Slack: The worst timing slack for all timing constraints. Negative values indicate timing violations.

- ▶ **Timing Score:** The time, in picoseconds, by which the design is failing to meet the timing constraints. Zero means the run fully met the timing constraints.

If an implementation has multiple place-and-route runs, the implementation row shows the value of the active place-and-route run.

- ▶ **Worst Slack (Hold):** The worst timing slack for all timing constraints based on hold time. Negative values indicate timing violations.
- ▶ **Timing Score (Hold):** The time, in picoseconds, by which the design is failing to meet the timing constraints based on hold time. Zero means the run fully met the timing constraints.

- ▶ **Slice:** The number of slices used versus the total number available.

- ▶ **Unrouted Nets:** The number of unrouted nets. Anything larger than zero means that place-and-route did not finish.

If an implementation has multiple place-and-route runs, the implementation row shows the value of the active place-and-route run.

- ▶ **Run Time:** The total run time for the synthesis, map, and place-and-route processes, including multiple place-and-route runs. Times for translate, trace, and exporting files are not included. The format is `<hours>:<minutes>:<seconds>`.

- ▶ **Level/Cost:** The first number is the Placement Effort Level specified in the Place & Route Design section of the strategy, not necessarily the effort used.

The second number is the number of placement iterations that were run to get a solution. If an implementation has multiple place-and-route runs, the second number is cumulative of preceding runs. That is, if the design only needs one iteration, the list of place-and-route runs shows 1, 2, 3, ....

The implementation row shows the value of the active place-and-route run.

- ▶ **Location:** The full pathname for the implementation.
- ▶ **Start:** When synthesis started. Not applicable for EDIF projects.
- ▶ **Level/Cost:** The first number is the Placement Effort Level specified in the Place & Route Design section of the strategy, not necessarily the effort used.

The second number is the number of placement iterations that were run to get a solution. If an implementation has multiple place-and-route runs, the second number is cumulative of preceding runs. That is, if the design only needs one iteration, the list of place-and-route runs shows 1, 2, 3, ....

The implementation row shows the value of the active place-and-route run.

- ▶ **Description:** An editable text box. Initially it just has the implementation name but you can change it.

To change the description of an implementation, double-click the Description cell. Then enter any text you want.

- ▶ **GSR:** The number of GSR used versus the total number available.



- ▶ PIO: The number of PIO used versus the total number available.
- ▶ EBR: The number of EBR used versus the total number available.
- ▶ PCS: The number of PCS used versus the total number available.
- ▶ Number Of Signals: The number of signals in the design.
- ▶ Number Of Connections: The number of connections in the design.

## Selecting an Implementation and Run

After studying the results, you can select one of the implementations and one of its runs for further development.

### To select an implementation and run:

1. Right-click on the implementation's row and choose **Set As Active**.

This implementation becomes the active one for the project. The row changes to bold type and, in File List view, the implementation is expanded. The previously active implementation becomes inactive.

2. If the implementation has multiple runs, right-click the preferred run and choose **Set As Active**.

The results of this run will be used in further development such as exporting files. The row changes to italic type.

## Finding Results

After you load a design in the Radiant software, you can find the information you need by doing the following.

1. Choose **Edit > Find in Files** from the Radiant software main window.
2. Type the text to find in the pop-up Find In Files dialog box.
3. Specify the search path and search filters.
4. Select the search parameters desired: **Search subdir**, **Include hidden files**, **Match case**, **Match whole word**, and **Regular expressions**.
5. Press **Find**. The results are displayed in the Find Results frame. Double-click any of the findings from the Find Results frame to open the associated source file in the associated editor. For example, if the finding is in a log file, the log file will be opened in the Reports view with the first finding appears on the first line.

You can search the Output log by clicking in the Output View (in the text, not on the tab) and then pressing **Ctrl-F**. This opens a basic text search dialog box at the top of the Output View. You can type the text in the Find text field and start a search.

### Find Results View

If the Find Results are not automatically displayed in your Radiant software main window, select **View > Show Views > Find Results** to display them.

The Find Results view can be detached from the main window by clicking the detach icon on the upper-right corner of the view. After detaching, you can double-click on the title bar of the view to re-attach it back to the main window.

**See Also** ▶ [“Managing Projects” on page 17](#)

▶ [“Viewing Logs and Reports” on page 86](#)

▶ [“Navigating Errors and Warnings” on page 91](#)

▶ [“Finding Text in Logs and Reports” on page 91](#)

## Viewing Logs and Reports

The Radiant software automatically generates log files for all project activities. The log files contain processing information, as well as error and warning messages. If you run processes, reports are generated.

### Viewing Logs

A log file is displayed in the Output frame as a process is running. A scroll bar can be used to scroll up and down to view all log information.

Errors are displayed in red, while warnings are displayed in orange. A check mark indicates the view is displayed.

### Viewing Reports

The Reports view displays reports for the major processes.

There are two panes in the Reports view. The left pane lists the report types.

- ▶ Project Summary
- ▶ Synthesis Reports
- ▶ Map Reports
- ▶ Place & Route Reports
- ▶ Export Reports
- ▶ Misc Reports

The reports in detail are displayed in the right pane.

| Type of Report                   | Description                                  |
|----------------------------------|----------------------------------------------|
| <b>Project Summary</b>           |                                              |
| ▶ <Project Name> Project Summary | Lists the summary information of the project |

| Type of Report                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ▶ Resource Usage               | Provides information about the resources utilized by your design out of the total available resources, along with the percentages of used resources. It includes logic elements (LUT4), memory blocks (EBR), PFU registers, and IO Buffers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| ▶ Constraints Dropped Summary  | The number of constraints dropped in Synthesis, Post-Synthesis, Map, and Place & Route.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| ▶ IP Summary                   | <p>Generates a summary report in the implementation folder. The IP Summary report provides the following list of information:</p> <ul style="list-style-type: none"> <li>▶ IP Name – displays the name of the latest generated IP or, by default, displays the IP internal name.</li> <li>▶ Vendor – displays the IP vendor name, or by default displays the IP internal vendor.</li> <li>▶ IP Module Name – shows the top module name</li> <li>▶ Version – specifies the current IP version.</li> <li>▶ License Feature – indicates the license feature and starts with “LSC_IP_” in hdl files of IP. This “-” denotes that there is no license feature in IP.</li> <li>▶ License Status – indicates if the license check is successful or failed. This “-” denotes that there is no license feature in IP.</li> </ul>                                    |
| ▶ Stage Execution Time Summary | <p>Measures and reports both CPU and real-time usage across different phases of the compilation workflow, including Synthesis, Mapping (Map), Place and Route (PAR), and Bitstream Generation (BitGen).</p> <ul style="list-style-type: none"> <li>▶ CPU Time – amount of time the CPU spends executing a particular stage.</li> <li>▶ Real Time – actual elapsed time to complete a particular stage.</li> </ul> <p><b>Note:</b> Static Timing Analysis (STA) CPU Time and Real Time features are not supported in this version of Radiant.</p>                                                                                                                                                                                                                                                                                                           |
| ▶ DSP Register Summary         | <p>Displays a summary of Digital Signal Processing (DSP) registers, including input, output, and pipeline registers.</p> <p>Input registers temporarily hold incoming data before processing. This reduces setup time and ensures data stability and synchronization.</p> <p>Output registers store results of DSP computations before sending to the next stage or output. This helps maintain data integrity and timing and ensure that the processed data is synchronized with the system.</p> <p>Pipeline registers hold intermediate results during multi-stage computations. This improves throughput and efficiency by allowing parallel processing of different computation stages.</p> <ul style="list-style-type: none"> <li>▶ BYPASSED – DSP block exists but is not active in signal path, allowing data to pass through unchanged.</li> </ul> |

| Type of Report                                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ▶ EBR Register Summary                         | <p>Details the usage of Embedded Block RAM (EBR) also known as Block RAM (BRAM) registers, including input and output registers.</p> <p>Input registers temporarily hold incoming data before storing to BRAM. This reduces setup time and ensures data stability and synchronization.</p> <p>Output registers store data read from BRAM before it is sent to the next stage or output. This helps maintain data integrity and timing while ensuring that the processed data is synchronized with the system.</p> <ul style="list-style-type: none"> <li>▶ BYPASSED – EBR exists but is not active in signal path, allowing data to pass through unchanged.</li> <li>▶ USED – EBR is active in the signal path.</li> </ul> |
| <b>Synthesis Reports</b>                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ▶ RTL Design Check                             | Shows potential issues in the design.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| ▶ Constraint Propagation                       | Shows the result of the Constraint Propagation Engine.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| ▶ Synthesis Tool (Lattice LSE or Synplify Pro) | Lists actions taken by the synthesis tool, warnings, and errors. The report also provides a list of FPGA resources used and a timing report based on estimated place-and-route data.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| ▶ Synthesis Resource Usage                     | Categorizes resource usage of an instance.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| ▶ Parameter Settings (LSE only)                | When the design features entities with parameters, the Parameter Settings will show these parameters for each entity or instance. Each instance has an expandable section that includes the module name and a table listing parameter names and values. If there are no entities with parameters, the Parameter Settings will be empty.                                                                                                                                                                                                                                                                                                                                                                                    |
| ▶ Constraint Checker Report                    | The Constraint Checker Report is part of the Synthesis Report section when Synplify Pro is used. Information about invalid timing constraint syntax, constraint applicability, and any errors or warnings are displayed in this report.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| ▶ Post-Synthesis Report                        | This report has a Constraints Summary section that lists the total number of constraints and the number of constraints dropped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ▶ Post-Synthesis Timing Report                 | <p>Describes the Design Checking, Clock Summary, Timing Analysis Summary, and Detailed Report sections.</p> <p>For more information about Timing Reports, see <a href="#">“Reading Timing Analysis Reports” on page 379</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Map Reports (in HTML)</b>                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ▶ Map                                          | <p>Lists various sections that show information about the device. MAP Report also lists the total number of constraints and the number of constraints dropped.</p> <p>For a detailed information about Map Report, see <a href="#">“MAP Report File” on page 345</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| ▶ Map Resource Usage                           | Categorizes the LUT usage to logic, distributed RAM, and carry chain ripple logic.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| ▶ Map Timing Analysis                          | <p>Describes the Design Checking, Clock Summary, Timing Analysis Summary, and Detailed Report sections.</p> <p>For more information about Timing Reports, see <a href="#">“Reading Timing Analysis Reports” on page 379</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Place &amp; Route Reports</b>               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

| Type of Report                  | Description                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ▶ Place & Route                 | Contains execution information and shows the steps taken as the process converges on a placement and routing solution.<br><br>For a detailed information about Place & Route Report, see <a href="#">“PAR Report File” on page 354</a> |
| ▶ Signal/Pad                    | Lists all Programmable I/O Cells (PICs) used in the design and their associated primary pins.<br><br>For a detailed information about PAD Report, see <a href="#">“PAD Specification File” on page 358</a>                             |
| ▶ Place & Route Timing Analysis | Describes the Design Checking, Clock Summary, Timing Analysis Summary, and Detailed Report sections.<br><br>For more information about Timing Reports, see <a href="#">“PAR Report File” on page 354</a> .                             |
| ▶ I/O Timing Analysis           | Describes the worst-case I/O timing across available performance grades of the device.<br><br>For more information about Timing Reports, see <a href="#">“PAR Report File” on page 354</a> .                                           |
| <b>Export Reports</b> (in HTML) |                                                                                                                                                                                                                                        |
| ▶ Bitstream                     | Shows output information of the bitstream process.                                                                                                                                                                                     |
| ▶ IBIS Model                    | Shows information about the generated design-specific model file.                                                                                                                                                                      |
| <b>Misc Reports</b> (in HTML)   |                                                                                                                                                                                                                                        |
| ▶ Last Build Log                | Lists information about the project and shows error/warning messages.                                                                                                                                                                  |
| ▶ TCL Command Log               | Shows output information performed by the Tcl Console Pane.                                                                                                                                                                            |
| ▶ I/O SSO Analysis              | Shows information produced by the Device Constraint Editor.<br><br>For more information about I/O SSO Analysis, see <a href="#">“Viewing SSO Analysis Results” on page 329</a>                                                         |
| ▶ Constraint DRC                | Shows output information performed by Constraint DRC.                                                                                                                                                                                  |

**Cross probing Reports** Between the different tool views in Radiant, a user can click on a hyper-link icon to cross probe into that tool.

- ▶ Post-Synthesis & Map timing report links to Netlist Analyzer.
- ▶ In the PAR timing report, user can cross probe to Netlist Analyzer, Physical Designer Placement Mode and Routing Mode.

### Note

When the Reports tab is detached from Radiant main GUI, Reports window and Radiant main GUI are same level windows, which means they could be put in different displays, and also be put side by side.

But, If they are both in maximum size mode and displayed in same monitor, you may only see one. In this case If you view Reports window in maximum mode and use cross probing, it will cross probe to Radiant main GUI which is not activated and invisible. To check the cross probing result, please activate Radiant main GUI to make it visible.

**Tracing Signals** If your project uses LSE as the synthesis tool, you can highlight text (such as a pin, or a net, etc.) in any report view or output window; trace the signal; and then display the signal in either the RTL Netlist view of Netlist Analyzer, or the Technology Netlist view of Netlist Analyzer.

---

### Note

The Trace feature is a search engine. The quality of your result will depend upon whether or not the text you highlight (pin, or net, etc.) is searchable.

---

### To trace a signal in Report View or Output Window:

1. Highlight the feature you wish to trace (pin, net, etc.) in the Report View or Output Window.
2. Right-click, and in the pop-up menu choose either:
  - ▶ **Trace to > RTL**
  - ▶ **Trace to > Technology View**

The signal will be highlighted in either the RTL Netlist View of Netlist Analyzer or the Technology Netlist View of Netlist Analyzer.

### Other Reports

The Synthesize Design stage produces reports that do not appear in the Reports view. You can find these reports in the implementation folder by right-clicking the implementation name in the File List view and choosing **Open Containing Folder**. A window will open showing the contents of the folder. All of these reports can be read with a text editor.

One of the reports is a detailed description of the device resources that will be used by the design. This report is much more detailed than the synthesis report in the Reports view, as it includes the resources used by each module of the design. Similar information can also be found in the Hierarchy view. For Synplify Pro, look for `<top_module>.areasrr`; for Lattice Synthesis Engine, `<top_module>.arearep`.

In **Synthesis and MAP Resource Usage Reports**, each row shows the resource usage of an instance. There are two values in one resource type:

1. The first value is the total resource usage of the instance and its sub-instances.
2. The second value in parentheses is the resource usage value of the instance itself.

The values in Resource Usage match according to the following formula:

Value of the instance itself + Value of the sub-instances = Total.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Finding Results” on page 85](#)

## Navigating Errors and Warnings

If an error or a warning results from the specific line in an HDL source file, you can easily go to that line to edit the source file.

### To navigate errors and warnings:

- ▶ In the Output View, located in the lower right of the Start Page, double-click the line describing the error or warning.
- ▶ Right-click the message and choose **Location in > Text Editor**. If the command is dimmed, there is no link to a source file. Depending on the message, more than one tool may be available to view the source.

Your default text editor opens with the appropriate HDL source file at the line number specified in the error or warning message. You can then modify the file to debug your design.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Finding Results” on page 85](#)

## Finding Text in Logs and Reports

You can search for text in the Output View.

### To search for text in the Output View:

1. Right-click in the Output View and choose **Find in Text**.  
The Find toolbar appears.
2. In the **Find** text box, enter the text to search for. Check the **Match Case** or **Match whole word only** options as needed. As you type each character, the window displays any matches found.
3. Use the **Next** and **Previous** buttons in the Find toolbar to find other occurrences of the text.

### To search for text in the Reports view:

1. Choose **Edit > Find**.
2. In the Find text box, enter the text to search for. Check the **Match Case** option if needed.

### See Also

- ▶ [“Managing Projects” on page 17](#)
- ▶ [“Finding Results” on page 85](#)

## Filtering Messages

The number of messages produced by the design implementation process can be very large. There are several ways to filter these messages to find the ones of most interest. Messages can be filtered by:

- ▶ Implementation process
- ▶ Severity (information, warning, and error)
- ▶ ID number
- ▶ Text

### To set filter options:

As filters are added, the message list changes to show the latest results.

1. After running part or all of the implementation process, choose **View >  Show Views > Message**.
2. Select the Messages Tab at the bottom of the screen.
3. Click on one of the following icons: **Error** (  ), **Critical** (  ), **Warning** (  ), or **Information** (  ).
  - ▶ **Error** -- The project cannot be compiled due to an error.
  - ▶ **Critical** -- Severe issue that is not an error but could result in a functional problem.
  - ▶ **Warning** -- An issue that is not an error but could result in a functional problem.
  - ▶ **Information** -- General messages that cannot be changed.
4. Specify any message ID to hide by right-clicking the desired message ID and choosing **Filter > Filter Messages with This ID**.
5. To hide a specific group of messages, right-click on a message and choose **Filter > Filter Messages Exactly Like This, Filter Messages from this Process**, or **Filter Messages with this Severity**. This hides all messages with the same text, process, and severity.
 

To list only messages that have been hidden, right-click in the Message area and choose **Filter > Filter Details List**. The Detailed Filter List dialog box opens showing a list of the hidden messages.
6. To unhide messages, right-click in the Message area and choose **Filter > Filter Details List**. From the Detailed Filter List dialog box, uncheck the box in the Filter Enable column of the message(s) to unhide and click **Apply**.
7. To filter messages by process, in the **Filter Message by Process**  button, click the down arrow to display the pop up menu. By default, all processes are selected with a checkmark. Processes include **Synthesis**, **Map**, **Place & Route**, **Export**, and **Project**. To filter messages to show only messages associated with a specific process or processes, uncheck the processes that you do not wish to view. Leave checked the process or processes for which you wish to view messages.



## Changing Warnings to Errors

There may be warning messages in your design project that you want to place emphasis on. You can do so by changing these warnings to show the error severity level. You can also save these “promotions” to use in other design projects.

Promotions only show for messages with future actions. Promotions do not affect the display of messages from past actions.

---

**Note:**

After changing a warning to an error, the original flow will fail during the rerun process.

---

**To change a warning to an error in the Messages Tab:**

1. Right-click on the message to highlight and choose **Change Severity with This ID to**.

Not all warning messages can be highlighted in this way, so this command may be dimmed.

**To change a warning to an error without the Reports view:**

1. Choose **Project > Message Promotion/Demotion**.

The Message Promotion dialog box opens.

2. In the IDs box, type the ID number of the message(s) that you want to promote. Separate multiple ID numbers with semi-colons (;).
3. Click **Promote**.

Not all warning messages can be promoted, so some ID numbers may be rejected.

4. Click **Close** when finished.

**To restore a message ID to the warning level:**

1. Choose **Project > Message Promotion/Demotion**.

The Message Promotion dialog box opens.

2. Select the message to restore.
3. Click **Remove**.
4. Click **Close** when finished.

**To save the list of promoted messages for another project:**

1. Choose **Project > Message Promotion/Demotion**.

The Message Promotion dialog box opens.

2. Click **Export**.

3. In the Export Promotion dialog box, browse to where you want to save the list.
4. Enter a file name.
5. Click **Save**.  
The list is saved to a file with a “.pmt” extension.
6. Click **Close** when finished.

**To use an existing list of promoted messages:**

1. Choose **Project > Message Promotion/Demotion**.  
The Message Promotion dialog box opens.
2. Click **Import**.
3. In the Import Promotion dialog box, browse to the list you previously saved and want to import.
4. Click **Open**.  
The list of messages appears in the Message Promotion dialog box.
5. Click **Close** when finished.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Getting Help for Messages

Some messages offer a link to the Help that provides additional information. This information may help you better understand an error message or how to fix a specific problem.

**To check for help on a message:**

1. Right-click on the message in the Output View.  
A menu appears. The last item in the menu is Help. If it is dimmed, there is no help link.
2. If the Help command is available, click on it.  
The Help opens with the appropriate topic.

**See Also**

- ▶ [“Managing Projects” on page 17](#)

## Setting Tool and Environment Options

The Radiant software provides many environment control and tool view display options that enable you to customize your settings.

**To access these options:**

Choose **Tools > Options**.

The Options dialog box is organized into functional folders.

Commonly configured items include:

- ▶ General settings -- allows you to set some common options, including.
  - ▶ Startup – enables you to configure the default action at startup and also to control the frequency of checking for software updates.
  - ▶ File Associations – allows you to set the programs to be associated with different file types based on the file extensions.
  - ▶ Directories – Set directory location for Synthesis and Simulation tools.
  - ▶ Network Settings – Apply a proxy server and specify a host and port.
- ▶ Color settings -- allows you to set colors for such GUI features as fonts and backgrounds for various Radiant software tools, including:
  - ▶ General
  - ▶ Device
  - ▶ Design
  - ▶ Group
  - ▶ Reveal Analyzer
  - ▶ Source Editor

You can also change the Theme color of Radiant software (Dark or Light) using the Themes drop-down menu.

- ▶ Tools settings -- allows you to set options for various Radiant software tools, including the Device Constraint Editor, Netlist Analyzer, Pre-Synthesis Constraint Editor, Post-Synthesis Timing Constraint Editor, and Source Editor. You can also check Constraint design rule checking (DRC), prior to saving or when launching a tool.

# Block-Based Design - Using Macro Blocks

A macro block is a portion of an FPGA design that can be preserved for reuse afterwards. Some of the benefits of implementing macros in a design include the ability to reuse blocks in other designs, and the ability to design more effectively as a team.

Macros contain logic or physical netlist (placed or routed) and is packaged as an IPM format for reuse. After a macro has been created, it is no longer parameterizable.

## Macro Types:

There are three types of macro preservation levels:

### 1. Logical (Logic Macro)

- ▶ Logic Macro is defined using Pre-Synthesis Constraint Editor.
- ▶ Placement regions for Logic Macros are not required. However, if you want the macro to be placed at a specific area in both macro creation and reuse, a placement region is required.
- ▶ Placement region is constrained inside Macro block but not fixed.
- ▶ Routing region is constrained inside Macro block or Buffer Zone (if present) but not fixed.
- ▶ Macro logic preserved.
- ▶ Logic Macro can be exported after synthesis.

### 2. Logical & Physical with Place Info (Firm Macro)

- ▶ Firm Macro is defined using Physical Designer and after running Map Design (MAP).
- ▶ Placement regions are constraints for placement. They may not be good for achieving better performance as the macro has connections to I/O ports and other instances placed far away. However, you need to specify the region for the following cases:
  - ▶ Create Firm Macro as IP for other designs.
  - ▶ Create Firm Macro to be reused in other designs.
- ▶ Routing regions for Firm Macros are not required.
- ▶ Firm Macro can only be exported after Place and Route.

### 3. Logic & Physical with Placement & Routing Info (Hard Macro)

- ▶ Hard Macro is defined using Physical Designer and after running Place & Route Design (PAR).
- ▶ Placement region is required for Hard Macros.
- ▶ You need to create routing regions for the following cases:
  - ▶ Create Hard Macro as IP for other designs.
  - ▶ Create Hard Macro to be reused in other designs.

- ▶ Create Hard Macro for functional safety applications.
- ▶ Hard Macro can only be exported after Place and Route.

### Macro Creation:

During macro creation, the macro is implemented as a design block and gets instantiated in the RTL design. The design can be used to contain additional logic to test macro functionality. Unified Design Database (.udb) supports the design block to be a macro.

- ▶ **Macro Module** – Module in the design database which implements macro netlist.
- ▶ **Macro Instance** – An instance in the design database where a macro module is instantiated.

The **Idc\_create\_macro** constraint defines the macro instance during the macro creation phase. It is expected that the instance name provided by the constraint can be found by the potentially hierarchical path specified in the constraint. If found, the module of the instance will be synthesized as macro during the synthesis run.

You can also define regions to guide placement and routing for a macro.

- ▶ **Placement Region** – Physical boundary of placed macro.
- ▶ **Routing Region** – Zone surrounding a macro region for additional resource for routing.

Routing region is always equal to or larger than placement region. It can be defined as extra buffer on left/right/top/bottom sides compared to placement region.

### Export Macro:

Modules representing macros will be extracted from the design and exported as a .ipm file. The macro will be the top module in the .ipm file. The name specified in **Idc\_create\_macro** constraint will be used as the name of the top module.

### Macro Reuse:

During macro reuse, you need to add the IPM files for each of the macros to be reused. These provide black box descriptions for the blocks which can be instantiated in the reuse design. A compatibility check is performed between the macro block and the current design target during import.

This section lists the options available in Block-Based Design.

Topics include:

- ▶ [Creating a Macro Block](#)
- ▶ [Creating a Macro Region](#)
- ▶ [Exporting Macro](#)

- ▶ [Reusing a Macro Block](#)
- ▶ [Macro Usage Guidelines](#)


To get some hands-on experience, try the [Lattice Radiant Block-Based Design Tutorial](#).

## Creating a Macro Block

Macros must be created prior to synthesis because they are defined at logic instances. For macro creation, you can use a new or an existing project.

**To create a macro block:**

- ▶ Click **Tools > Pre-Synthesis Constraint Editor > Macro** tab.

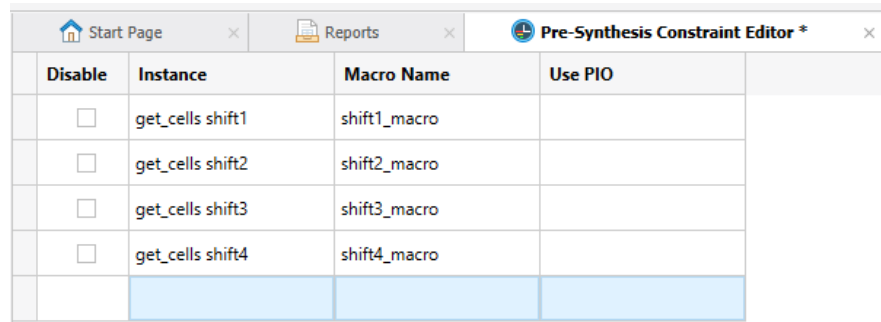


| Disable                  | Instance         | Macro Name   | Use PIO |
|--------------------------|------------------|--------------|---------|
| <input type="checkbox"/> | get_cells shift1 | shift1_macro |         |
| <input type="checkbox"/> | get_cells shift2 | shift2_macro |         |
| <input type="checkbox"/> | get_cells shift3 | shift3_macro |         |
| <input type="checkbox"/> | get_cells shift4 | shift4_macro |         |
|                          |                  |              |         |

The Macro tab contains the following columns:

- ▶ **Instance** – The Instance column specifies the hierarchical path of the instance which is defined as a macro. It specifies only one instance in a constraint. These constraints define the macro blocks.
- ▶ **Macro Name** – The name that is automatically set for the macro instance. The text boxes under the Macro Name column are editable.


When **Instance** and **Macro Name** have been added, the command line will be updated as follows:

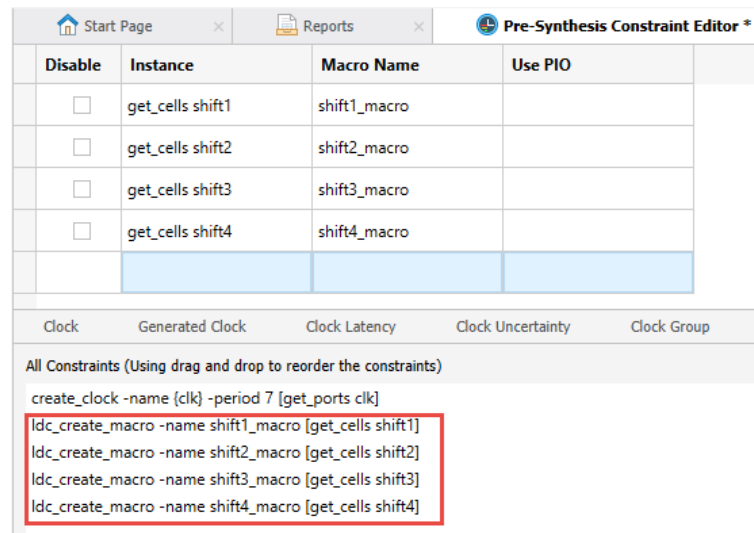


The **Idc\_create\_macro** constraint command tells the logic synthesis tool which instances are macros.

- **Use PIO** – The Use PIO column specifies the ports of the selected instance to define which ports need to use PIO so that it will be included inside the macro. If you do not manually specify ports, the PIO in the macro module will be automatically inferred during reuse.

When you add ports to the Use PIO column, the command line will be updated as follows:

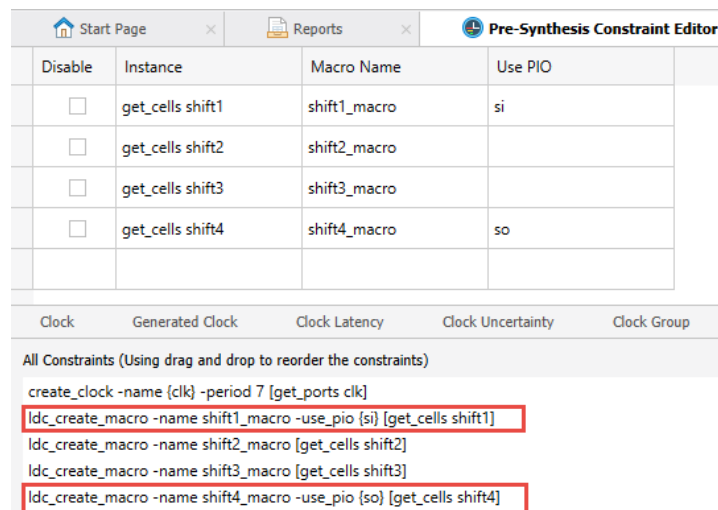

- **Disable** – If you do not want to synthesize macro blocks in a design containing macro constraints, the constraints can be disabled by selecting the checkbox in this column. You will see the #DISABLED# appended in front of Idc\_create\_macro constraint.

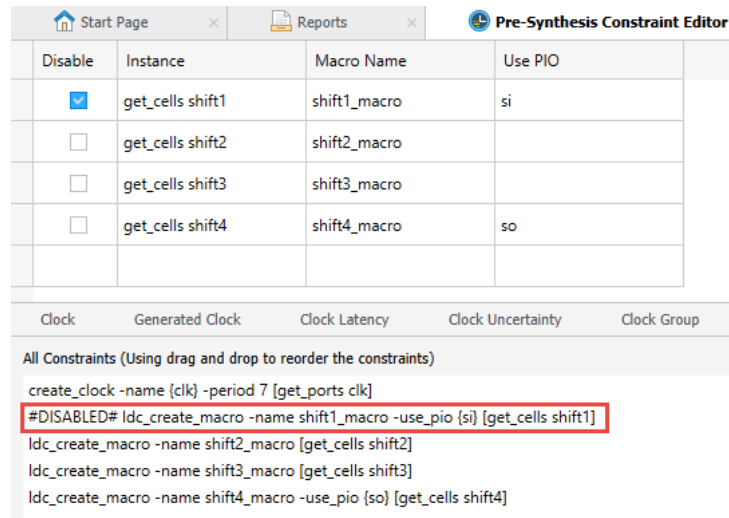

After saving the changes in **Pre-Synthesis Constraint Editor**, the defined macro is stored in pre-synthesis constraints (.sdc) file for logic synthesis.

You can also implement macros to a design by adding the **ldc\_create\_macro** constraint to the active .sdc file.


#### Note:

By default, Radiant tools produce hierarchical paths with a "/" (forward slash) as separator. However, Synplify Pro uses a "." (period). In order for the flow to work, any hierarchical path needs to be adjusted for Synplify by either setting **set\_hierarchy\_separator {/}** to the constraint file or by manually changing any hierarchical path created in Radiant to use "." instead of "/".

#### To check Macro information in Map Report:

- ▶ After running MAP, you can view information about the created macros in the **Design Summary** section of the Map Report. The details in this report during the creation stage are based on the **ldc\_create\_macro** command in the .sdc file.
- ▶ This section displays the total number of resources used by the created macro (e.g., LUT, SLICE Register, PIO Register, and Block RAM).



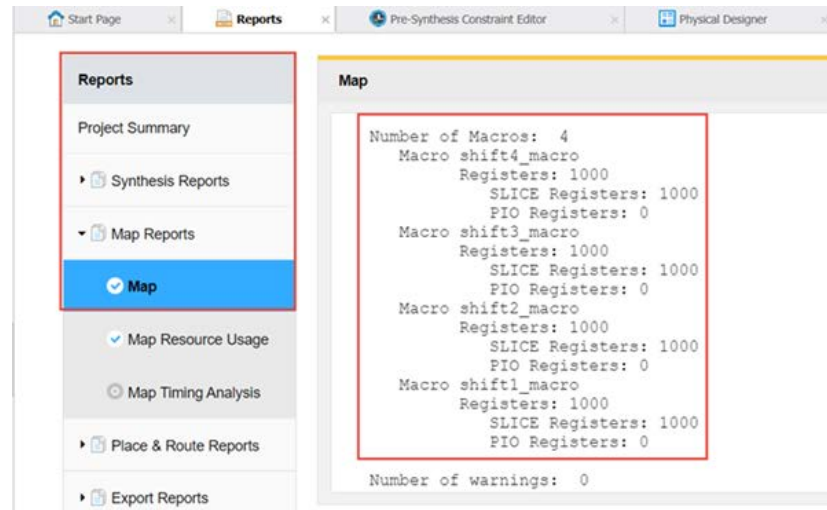

## Creating a Macro Region

Once macro is created, you can create a macro region in **Physical Designer** (optional).

- ▶ If you already know the macro region, you can add the **Idc\_create\_region** constraint to the post-synthesis constraint (.pdc) file, or start **Physical Designer** to create a macro region before running **MAP**.
- ▶ If you want to use the placement result to guide the region creation, you can run **PAR** first. After running **PAR**, open **Physical Designer**, and highlight the macro instance from the netlist.

Based on the macro placement result, you can create a macro region for the selected macro. The regions will be saved to the .pdc file. As a result, you need to rerun **MAP** and **PAR** to use the specified macro regions.

**To create a macro region:**

- ▶ In **Physical Designer**, right-click on the floorplan layout and select the **Create MACRO REGION...** option.



The **Create New MACRO REGION** dialog box opens.

The dialog box contains the following fields:

- ▶ **Macro Region Name** – The name that you set for the macro region.  
When specifying the macro region name, you can use any name you like.  
This option is mandatory. You may encounter the following error if you do not set the macro region name.



- ▶ **Anchor** – Anchor of the placement region used to place the macro.
- ▶ **BBox** – Width and height of the placement region.  
When you enter a value in the Anchor and BBox fields, the range of the following items might also change:
  - ▶ Macro Resource (LUTs, REGs, EBRs, DSPs)
  - ▶ Buffer Size range
  - ▶ BBox range


The range changes depending on the value that you enter in the Anchor and BBox fields.

If you do not enter a value within range in Anchor and BBox fields, you may encounter the following error.




- ▶ **Macro dropdown menu** – You can select the predefined macro instance from the pre-synthesis macro creation.
- ▶ **Buffer size** – Buffer zone of the routing region. It gives PAR an extra room to do the routing. The routing is confined within the macro region and its surrounding ring.
  - ▶ **Buffer left** – Left buffer zone of the routing region.
  - ▶ **Buffer right** – Right buffer zone of the routing region.
  - ▶ **Buffer top** – Top buffer zone of the routing region.
  - ▶ **Buffer bottom** – Bottom buffer zone of the routing region.

If you do not enter a value within range, you may encounter an error. The following example shows a buffer size error.

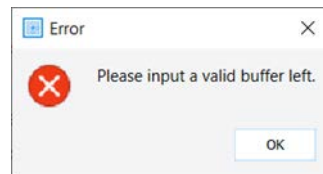

- ▶ **Color option** – Allows you to change the color of the macro region.

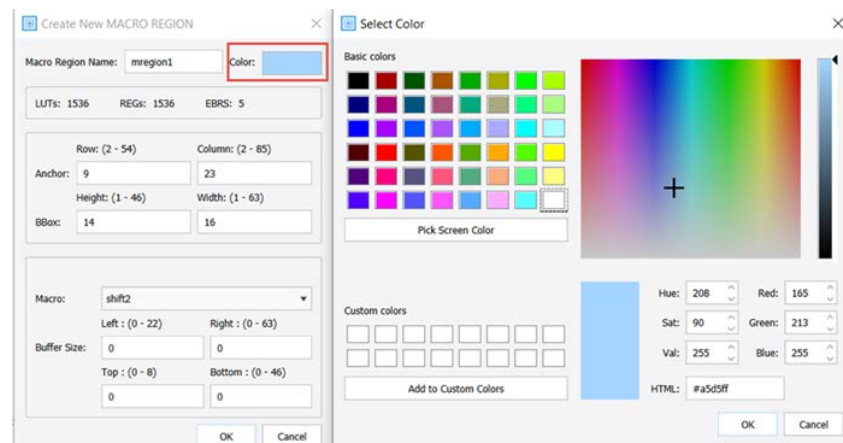

After creating a macro region, click the **Save**  icon in **Physical Designer**. The created macro regions are saved into a post-synthesis constraint (.pdc) file.

```

1 ldc_create_region -name mregion1 -site R4C2D -width 13 -height 13 -buffer_left 1 -buffer_right 1 -buffer_top 1 -buffer_bottom 1
2 ldc_set_location -region mregion1 [get_cells shift1]
3
4 ldc_create_region -name mregion2 -site R22C20D -width 13 -height 13 -buffer_left 1 -buffer_right 1 -buffer_top 1 -buffer_bottom 1
5 ldc_set_location -region mregion2 [get_cells shift2]
6
7 ldc_create_region -name mregion3 -site R39C44D -width 13 -height 13 -buffer_left 1 -buffer_right 1 -buffer_top 1 -buffer_bottom 1
8 ldc_set_location -region mregion3 [get_cells shift3]


```

The **ldc\_create\_region** constraint is designed to define placement region. It supports additional information of routing region. In the example above, -buffer\_left/-buffer\_right/-buffer\_top/-buffer\_bottom (optional) are used to define routing region. Without these options, routing region is identical to placement region.

Once macro regions are defined, you can assign a macro instance to the region by using **ldc\_set\_location** constraint.

#### To create an isolated region:

- ▶ In **Physical Designer**, right-click on the floorplan layout and select the **Create ISOLATION REGION** option.
- ▶ Draw a rectangle around the sites where you want to place the isolated region.

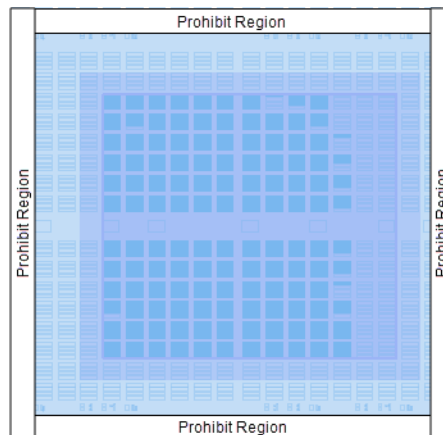

- ▶ Physical Designer automatically creates prohibited regions on each side. Once prohibited regions are created, the content of the macro can only be accessed by approved signals from the main design.
- ▶ The inner macro locks placement and routing. It also excludes any other logic from using the region for placement or routing.
- ▶ The outer macro is set as empty macro, no logic or routing can be used inside of it.
- ▶ If a gap exists between isolation and secure region, some design instances may be placed within it by PAR. The gap will not be considered as an empty/secure region. You need to manually cover the prohibited region by expanding it.
- ▶ You can expand the isolated regions by doing the following:
  - ▶ Double-clicking the region that you want to expand and changing the BBox field values in the Edit Region Property dialog box.


- ▶ Selecting the region that you want to expand and dragging it to the desired size.
- ▶ Editing the height or width of the isolated region in the `ldc_create_region` constraint within the `.pdc` file.

## Exporting Macro

Once synthesis is passed, you can launch the Export Macro dialog box from the Tools menu. The dialog box lists all defined macros on the left-hand pane. You can select them and set their preservation levels. When macro is exported, a `.ipm` file will be generated.

### To export macro:

- ▶ Click **Tools > Export Macro**.
- ▶ In the **Export Macro** dialog box, you can choose the macro preservation levels and specify the default path where the macro package will be exported.

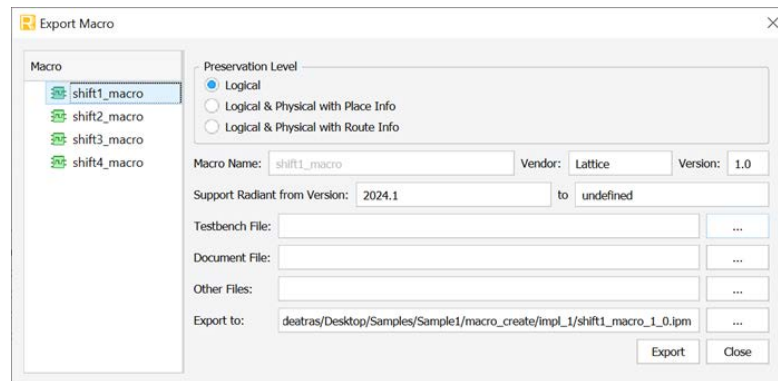

The macro data can be exported according to a specified preservation level. During macro reuse, you can set the preservation levels to a lower value.

### Logical (Logic Macro)

- ▶ After running **Synthesize Design** and **MAP**, you can only export to **Logical** preservation level.

### Logical & Physical with Place Info (Firm Macro)

- ▶ For Firm Macro, you can only export to **Logical** and **Logical & Physical with Place Info** preservation levels after running **Place & Route Design**.

### Logic & Physical with Placement & Routing Info (Hard Macro)

- ▶ After running **PAR**, you can export to **Logical**, **Logical & Physical with Place Info**, and **Logic & Physical with Placement & Routing Info** preservation levels.

The Export Macro dialog box also contains the following fields:

- ▶ **Macro Name** – Displays the name of the selected macro from the Macro column in the left-hand pane.
- ▶ **Vendor** – Displays the vendor name.
- ▶ **Version** – Displays the Macro IP version, the default is always 1.0.
- ▶ **Support Radiant from Version to Version** – Displays the supported maximum and minimum Radiant version. The maximum version could be empty, but the minimum is the same as the current Radiant version.
- ▶ **Testbench File** – Testbenches that allow you to do simulation or evaluate the macro (optional).
- ▶ **Document File** – Contains any document such as help, user guide, or introduction file included in the macro (optional).
- ▶ **Other Files** – Any files such as readme files and other documentation (optional).
- ▶ **Export to** – Default path where the macro package will be saved.

After exporting, a macro .ipm package will be generated. It contains the following files:

- ▶ **<macro\_name>.mac** – Contains general information of the macro project.

The following example shows the information included in the .mac file.

```
"Device": "LIFCL-40",
"Device Package": "CABGA400",
"Family": "LIFCL",
"Files": {
  "Constraints": "",
  "Document": "",
  "LogicDB": "shiftregl_logic.mdb",
  "OtherFiles": "",
  "PlaceDB": "D:\\ut\\shiftregDemo\\jedi_create\\demo\\demo_create\\impl_1\\demo_create_impl_1.udb",
  "RouteDB": "D:\\ut\\shiftregDemo\\jedi_create\\demo\\demo_create\\impl_1\\demo_create_impl_1.udb",
  "Testbench": "",
  "Interface": "shiftregl_bb.v",
  "SimulationModel": "shiftregl_sim.vo"
},
"Name": "shiftregl",
"Preservation": "logic",
"SupportRadiantMax": "undefined",
"SupportRadiantMin": "1.0",
"Vendor": "Lattice",
"Version": "1.0",
"ResourceUsage": {
  "lut": "0",
  "ff": "1000"
}
```

- ▶ **<macro\_name>\_bb.v** – Synthesis header file of the macro project. It is exported to define module interface for synthesis.
- ▶ **<macro\_name>\_bb\_extra.v** – Synthesis header file exported with additional information.

The bb.v and bb\_extra.v files may contain the following information:

- ▶ **TYPE** – Specifies the type of the module. Currently, only the "MACRO" type is supported.
- ▶ **syn\_allowed\_resources** – Allowed resource in the macro region. It is needed to help create a reasonable-sized macro region.
- ▶ **Locked** – The macro with locked attribute is fixed, not movable.

These information are to be propagated to top design by synthesis tools when the macro is reused as a black box. Tools can get the information before the macro is integrated to the top design.

The following example shows the information included in the bb.v file.

```
module example_macro (inp, outp1, outp2)
/* synthesis TYPE = "MACRO"
    syn_black_box
    black_box_pad_pin = "outp1,outp2"
    syn_resources = "luts=500,regs=400"
*/;
```

The following example shows the information included in the bb\_extra.v file.

```
module example_macro (inp, outp1, outp2)
/* synthesis TYPE = "MACRO"
    syn_black_box
    black_box_pad_pin = "outp1,outp2"
    syn_resources = "luts=500,regs=400"
    syn_allowed_resources = "luts=550,regs=450"
    ARCHITECTURE = "je5d00"
    ANCHOR = "R9C25"
    BBOX = "3,7"
    BUFFER_LEFT = "1"
    BUFFER_RIGHT = "1"
    BUFFER_TOP = "1"
    BUFFER_BOTTOM = "2"
    LOCKED
*/;
```

- ▶ **<macro\_name>\_sim.vo** – Exported for macro simulation. The file is generated based on logic macro.
- ▶ **<macro\_name>.mdb** – Exported Macro in unified constraints database (.udb) format. Modules representing macros will be extracted from design and exported to .ipm files. The macro will be the top module in .ipm file. The name specified in ldc\_create\_macro constraint will be used as the name of the top module.

## Reusing a Macro Block


During macro reuse, you need to add the IPM files for each of the macros to be reused. These provide black box descriptions for the blocks which can be instantiated in the reuse design. A compatibility check is performed between the macro block and the current design target during import.

Macros can be reused with different devices of the same family:


- ▶ In general, Logic Macros can be reused in different devices from the same family depending on the preservation level and resources used.
- ▶ Firm and Hard Macros can only be reused with the same device.

### To reuse a macro within another project:

- ▶ For macro reuse, the .ipm file for each respective macro that is exported can be used by importing the existing .ipm files into your project. The imported files will be stored under the **Input Files** folder in the Radiant software.

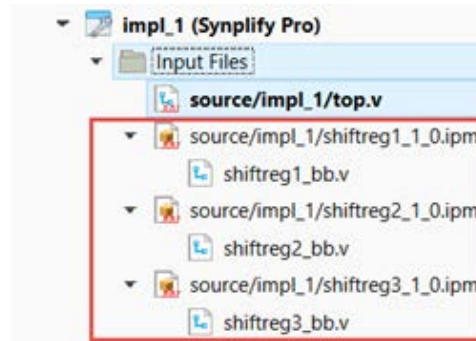


- ▶ After running **Synthesize Design**, the post-synthesis Logic Macro is merged into your design.
- ▶ You can lower the preservation level of the selected .ipm file in **Project Properties** (optional). Preservation levels must be equal or less than the preservation level when macro is exported.
  - ▶ If the imported macro's preservation level is Firm Macro, you can lower it to Logic Macro.
  - ▶ If the imported macro's preservation level is Hard Macro, you can lower it to Logic and Firm Macro.

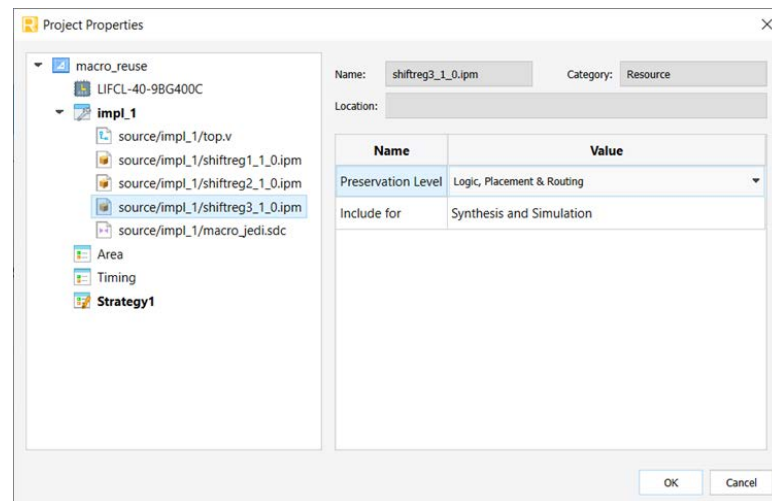


- ▶ When you open **Physical Designer**, the netlist shows the reused macro instances. They contain information of the original region from the create stage.



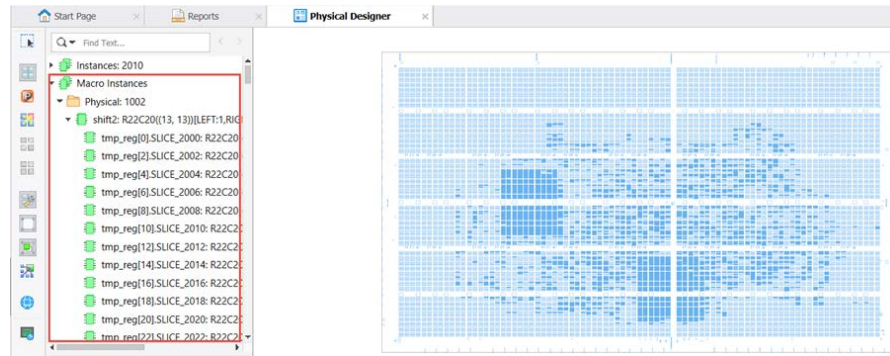



- ▶ Run **MAP** with reused macro.
  - ▶ Firm Macro – The post-MAP macro design with placement constraint is merged into your design.
  - ▶ Hard Macro – The post-MAP macro design with placement and route constraint is merged into your design.
  - ▶ After running MAP, you can view information about the reused macros in the **Design Summary** section of the Map Report.
    - ▶ This section lists Firm and Hard macro information and attributes such as device family, preservation level, anchor, and main resources.
    - ▶ The syn\_resources information generated when exporting macro (e.g., LUT, REG, Block RAM, LRAM) determines the main resources listed in the Map Report.

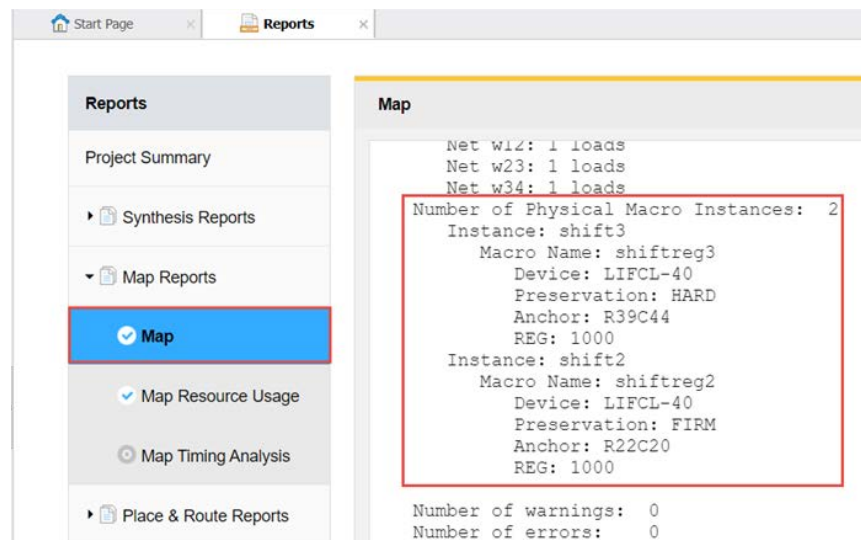

- ▶ You can also create a macro region with the Exclusive options in Physical Designer:
  - ▶ **Exclusive** – This option excludes other logic from the region for placement and routing when reusing the exported Firm and Hard macro.

 
- **Routing Exclusive** – This option excludes other logic routing when reusing the exported Firm and Hard macro.

The **Reuse Macro Region** dialog box opens when you right-click on a macro instance from the netlist and select the **Reuse macro region...** option.

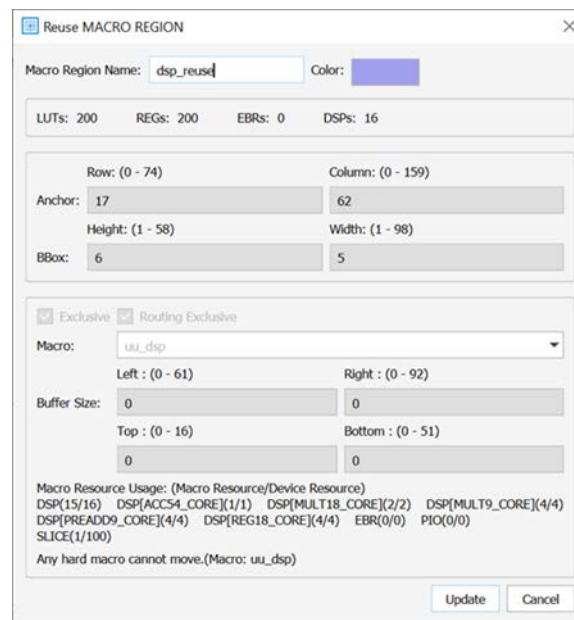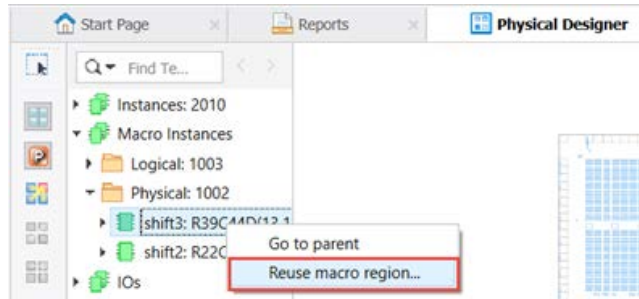


- Once done, click the **Save**  icon in Physical Designer.

The created macro regions are saved into a post-synthesis constraint (.pdc) file. The **-exclusive** option will be added to the **ldc\_create\_region** command line if Exclusive was enabled from the Reuse Macro Region dialog box.




- In **Physical Designer**, you can also right-click on the floorplan layout and select the **Create ISOLATION REGION** option.
- Draw a rectangle around the sites where you want to place the isolated region.

- ▶ Physical Designer automatically creates prohibited regions on each side. Once prohibited regions are created, the content of the macro can only be accessed by approved signals from the main design.
- ▶ The inner macro locks placement and routing. It also excludes any other logic from using the region for placement or routing.
- ▶ The outer macro is set as empty macro, no logic or routing can be used inside of it.
- ▶ If a gap exists between isolation and secure region, some design instances may be placed within it by PAR. The gap will not be considered as an empty/secure region. You need to manually cover the prohibited region by expanding it.
- ▶ You can expand the isolated regions by doing the following:
  - ▶ Double-clicking the region that you want to expand and changing the BBox field values in the Edit Region Property dialog box.
  - ▶ Selecting the region that you want to expand and dragging it to the desired size.
  - ▶ Editing the height or width of the isolated region in the `Idc_create_region` constraint within the `.pdc` file.

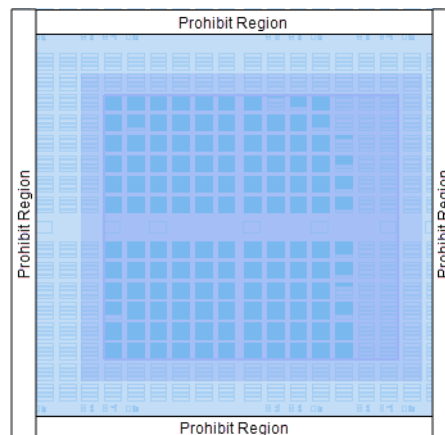

- ▶ Run **PAR** with reused macro.

After running **PAR**, you can open **Physical Designer** and select **Routing Mode** to see the macro instances in the physical netlist.

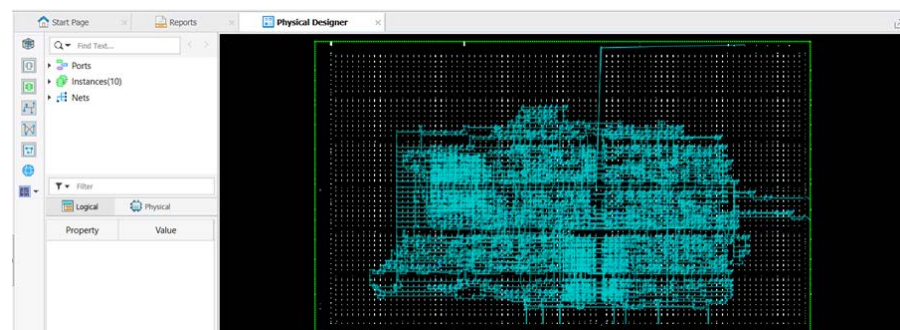

## Macro Usage Guidelines

Macro creation and reuse have the following guidelines:

- ▶ Macro is created from logic instance.
- ▶ For multiple macro instances, you need to create a wrapper on top of them.
- ▶ Macro creation is instance based. If the whole design is a macro, you need to instantiate it in a top design with a wrapper.
- ▶ For macro reuse, macro black box timing model is not supported. Synthesis cannot optimize macro's interface data paths. PAR will need to see full netlist to run timing analysis.
- ▶ Macro cannot contain JTAG and PCS hard-IP, which may require merging with others during reuse.
- ▶ Place/Route region only supports a single rectangular region.
- ▶ A module to be created as a macro block cannot contain black boxes.

## Entering the Design

You can enter your design, or describe the logic of our design, in several different ways, and you can use those ways in almost any combination. Radiant software accepts and helps create Verilog, VHDL, and SystemVerilog files. Design files can be created using Synplify Pro.

Setting specifications for controlling hardware implementation of the design, synthesis, or simulation is treated as a separate topic. You may want to start entering your design before setting the constraints.

### Verilog, SystemVerilog, and VHDL

The hardware design languages (HDL) Verilog, SystemVerilog, and VHSIC Hardware Description Language (VHDL) are the usual ways to describe complex logic designs. You can create HDL files using your preferred HDL editor and then add them to your Radiant software design project, or you can create or edit them within the Radiant software.

### Modules

Modules are functional bits of design that can be re-used wherever that function is needed. To help your design, the Radiant software provides a variety of modules for common functions. They are optimized for Radiant software device architectures and can be customized. Use these modules to speed your design work and to get the most effective results. See [“Designing with Soft IP, Modules, and PMI” on page 149](#).

### Structural Verilog

Lattice Synthesis flow by default generates a netlist which is a Structural Verilog (.vm) file. This .vm file can be used by itself as a whole design, or it can be referenced as an IP module to be used in another design. Any Verilog file -- Structural or Behavioral (.v or .vhd) -- can be used for design entry.

# HDL Design Entry

The Radiant software supports HDL design including pure VHDL design, pure Verilog design, and mixed VHDL and Verilog HDL design. You can use the integrated Source Editor to create and edit your HDL source files and any text-based files.

Source Editor is a text entry tool built into the Radiant software. You can use this tool to create and edit text-based files, such as HDL files, preference files, script files, test files, and project documentation files. Like many other advanced editing tools, it supports multiple file editing, wheel mouse scrolling, as well as popup menus for cut, copy, and paste operations. If a data source changes since the view was initialized, the view will detect this condition and provide you an option to refresh it.

Designed particularly for HDL file editing, Source Editor highlights the `std_logic` keywords and displays different HDL syntax elements with different colors. The color scheme can be customized in the Options dialog (**Tools > Options** from the main window). Also, Source Editor enables you to check correct pairing of parenthesis constructs and offers rich template features.

---

## Note

To avoid errors, observe the following file naming rules:

- ▶ Do not leave blank spaces in file names when you save source files in Source Editor, otherwise the files could fail to generate the database.
  - ▶ Use underscores (\_) instead of leaving blank spaces in file names.
  - ▶ Begin file names with an alpha character (letter) rather than a numeric character (number).
  - ▶ Unicode characters are not supported.
  - ▶ Keep file names, and paths to files, short as possible.
  - ▶ Linux operating system is case-sensitive. Use lower-case letters in file names to avoid issues with case-sensitive operating systems.
- 

If you are going to use Lattice Synthesis Engine (LSE) to synthesize the design, there are helpful Verilog and VHDL coding tips in [“Coding Tips for LSE” on page 123](#).

## See Also

- ▶ [“Running Source Editor” on page 114](#)
- ▶ [“Viewing Logs and Reports” on page 86](#)

# Running Source Editor

You can run Source Editor in several ways.

**To run Source Editor, do one of the following:**

- ▶ From the File List view, double-click a file—for example, filename.vhd

- ▶ From the Radiant software main window, choose **File > New > File**. In the New File dialog, choose a text-based source, for example Verilog Files. Fill in the File name and Location, click **New**.

## Creating HDL Source Files in Source Editor

You can create an HDL source file in Source Editor.

### To create an HDL source in Source Editor:

1. From the Radiant software main window, choose **File > New > File**. In the New File dialog, choose Verilog Files, SystemVerilog, or VHDL Files from the Source Files list.
2. In the pop-up New File dialog, fill in the Name and Location, and choose the file extension in the Ext field.
3. Check the **Add to Implementation** option if you want to add this source to the current project.
4. Click **New**.
5. In the pop-up Source Editor, you can enter the text. When finished editing, click **File > Save** from the Radiant software main window.

### Tip

You can detach Source Editor from the Radiant software main window by clicking the Detach Tool icon on the upper right corner of Source Editor. If you want to attach Source Editor back to the main window, click the Attach Window icon on the upper right corner of Source Editor window, or choose **Window > Attach Window** from Source Editor.

---

## Editing Text Files

This section describes the editing functions in Source Editor.

### Editing a Column of Text

You can cut, copy, and paste a column of selected text in Source Editor. You can also use the Tab key to increase the left indentation of the selected column.

**To cut, copy, and paste a column of text:**

1. Hold down **Alt** and then press and hold the left mouse button. Move the mouse over the text you want to copy. The selected text becomes highlighted in blue.

**IMPORTANT!**

---

This feature does not work on a Linux platform, because the **Alt** key is occupied by the Linux system.

---

2. Use the right-click commands or the commands on the Edit menu to cut, copy, and paste the selected text.

**To indent a column of text:**

1. Place the cursor in front of the text you want to indent.
2. Choose **Edit > Advanced > Indent**. Or, press **Tab**.

Source Editor increases the indent of the selected text column by one tab size. By [“Matching Braces, Parenthesis, and Brackets” on page 117](#), you can change the position of the indent.

**To uppercase a selection:**

1. Highlight the text you want to change to uppercase.
2. Choose **Edit > Advanced > Uppercase Selection**. You will see the highlighted text become uppercase.

**To lowercase a selection:**

1. Highlight the text you want to change to lowercase.
2. Choose **Edit > Advanced > Lowercase Selection**. You will see the highlighted text become lowercase.

**To add comment to text:**

1. Highlight the text on which you want to add a comment, or place the cursor in front of the text.
2. Choose **Edit > Advanced > Comment/Uncomment**. You will see “--” put ahead of the text (VHDL file only). You can add comment after “--” (VHDL file only).

A comment explains the purpose of a line or block of code.

**Example in Verilog:**

```
// Declare a 2D array with 4 rows and 2 columns, each element  
is 8 bits wide  
reg [7:0] array2D [0:3][0:1];
```

**Example in VHDL:**



```
signal temp_data : std_logic_vector(7 downto 0); -- Temporary  
signal for data processing
```

### Matching Braces, Parenthesis, and Brackets

Source Editor monitors brace ( { } ), parenthesis ( ( ) ), and bracket ( [ ] ) constructs. You can match an opening brace (or bracket or parenthesis) with a closing one, and vice versa.

#### To jump to the matching brace, parenthesis, or bracket:

1. In Source Editor, place the editing cursor adjacent to an opening or closing parenthesis (or bracket or brace).
2. Choose **Edit > Advanced > Match Brace**.  
The cursor will move to the corresponding opening or closing parenthesis (or bracket or brace). This allows you the check for the balanced braces around functions and statements.

You can use the **Edit > Advanced > Select to Brace** command to force the matching brace, parenthesis, or brackets to be highlighted along with the text in between the two braces, parenthesis, or brackets,

### Using Bookmarks

You can insert bookmarks into the source file to mark places where you need to enter variables. Afterwards, each time you load the file, you can use the **Edit > Bookmarks** command to jump to those marks to enter or edit your variables.

#### To insert bookmarks in a file:

1. In Source Editor, open the file you want to insert bookmarks into.
2. Click the location in the file you want to insert a bookmark.
3. Choose **Edit > Bookmarks > Toggle Bookmark**.  
A mark is inserted at the beginning of the line where the cursor points.
4. Repeat step 2 and 3 to add more marks, if desired.

#### To find marks in a file:

1. In Source Editor, open the file where the bookmarks you want to find reside.
2. Choose **Edit > Bookmarks > Previous Bookmark**, or **Edit > Bookmarks > Next Bookmark**.  
The cursor jumps to the bookmark in the direction selected. You can start typing from the desired marked place to enter or edit the variable.
3. Repeat step 2 to find, enter, or edit more bookmarks, if desired.

### Using Complete Word

When you type a keyword into Source Editor, choose **Edit > Advanced > Complete Word**. A list of the matching values are presented. You can then:

- ▶ Choose the first matching value by pressing **Enter** directly.
- ▶ Choose an alternate matching value by using the up/down arrow keys and then pressing **Enter**.
- ▶ Continue typing the rest of the value. If no matching value is found, nothing will be entered.

### Searching and Replacing Tips

Use the following tips when searching or replacing text such as signal names:

- ▶ Use **Control + F** to launch the Find and Replace bar with the Find tab enabled. Enter the search term in the **Find** box to find the search term in the Source Editor document.
- ▶ Use **Control + H** to launch the Find and Replace bar with the Replace tab enabled. Enter the search term in the **Find** box and the term you wish to replace it with in the Replace With box. Select desired Find Options, and click either **Replace**, **Replace All**, or **Find Next**.

## Using Templates

The Source Template tab provides templates for creating VHDL, Verilog, and constraint files, or you can create your own template. Templates increase the speed and accuracy of design entry.

### Note:

---


Remember to replace dummy variables in the template with your own logic.

---

To access templates, click the Source Template tab in the lower left of the Radiant software main window to view and access template files. If the Source Template tab is not visible, click  in the tool bar, or choose **View > Show Views > Source Template**.

Templates are available for:

- ▶ Verilog
- ▶ VHDL
- ▶ Constraint

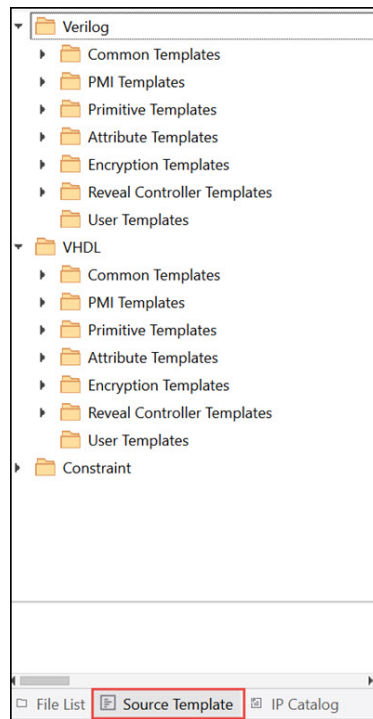**Figure 4:**

The following templates are available for each of the categories:

**Table 3: Templates Available in Source Editor**

| Category     | Template Folders              |
|--------------|-------------------------------|
| Verilog/VHDL | ▶ Common Templates            |
|              | ▶ PMI Templates               |
|              | ▶ Primitive Templates         |
|              | ▶ Attribute Templates         |
|              | ▶ Encryption Templates        |
|              | ▶ Reveal Controller Templates |
|              | ▶ User Templates              |
| Constraint   | ▶ Timing Constraints          |
|              | ▶ Physical Constraints        |
|              | ▶ User Templates              |

For Constraint templates, the Timing Constraints folder and Physical Constraints folder contain templates for the supported constraint statements. User Templates allows you to create your own templates for future use.

**See Also** ▶ [“Lattice Module Reference Guide” on page 901](#)

- [“Lattice Synthesis Engine Constraints” on page 824](#)

## Inserting a Template into Your Source File

You can insert templates into a source file you are editing with Source Editor.

### To insert a template into your source file:

1. Open the source file in Source Editor. See [“Running Source Editor” on page 114](#).
2. Click the Source Template the tab in the lower left of the Radiant software main window to view and access template files. If the Source Template tab is not visible, choose **View > Show Views > Source Template**.  
  
Two panes open in Source Template tab. The upper pane shows the list of template folders. The lower pane is blank.
3. Place the cursor in your source document where you want to insert a template. This should be in a blank line.
4. Select the template you want to use in the template list.  
  
The code of the template appears in the lower pane.
5. Drag and drop to template from the template pane into the Source Editor.  
  
The selected template is inserted into the file after the cursor.
6. Be sure to replace all placeholders with real values. Placeholders are terms between angle brackets such as “<event\_expression>.”
7. If needed, make further changes such as adding code to execute within a case statement.

### See Also

- [“Instantiating a PMI Component” on page 157](#)

## Creating a New Template

You can create new templates for your own use and save them into the User Templates folders. The new templates will be available for all implementations in the design project.

You can also create sub-folders to organize the templates that you create. If you plan on creating many templates, think about how to organize them before you start. There is no easy way to move templates once they have been created.

### To create a new template:

1. Click the Source Template the tab in the lower left of the Radiant software main window to view and access template files. If the Source Template tab is not visible, choose **View > Show Views > Source Template**.

Two panes open in Source Template tab. The upper pane shows the list of template folders. The lower pane is blank.

2. In the Source Template tab, expand the appropriate folder so that its User Templates folder is showing. Every top level folder has a User Templates folder. If the User Templates folder already has contents, expand it so you can see the contents.
3. If you want to create a sub-folder, right-click **User Templates** or one of its sub-folders and choose **New Folder**. Then right-click the new folder and choose **Rename**. Type the desired folder name and press **Enter**.
4. Right-click **User Templates** or one of its sub-folders and choose **New Template**.

A new template icon appears under the folder.

5. Right-click the new template icon and choose **Rename**. Type in the desired template name and press **Enter**.
6. Type the code for your template in the lower pane of Template Editor.  
The new template is automatically saved.

## Deleting a User Template

You can only delete templates from a **User Templates** folder.

There is no undo command, so once a template is deleted it is permanently gone. So ensure you have chosen the correct template before deleting it.

### To delete a template:

1. Click the Source Template tab in the lower left of the Radiant software main window to view and access template files. If the Source Template tab is not visible, choose **View > Show Views > Source Template**.

Two panes open in Source Template tab. The upper pane shows the list of template folders. The lower pane is blank.

2. In Source Template tab, expand the folders so that the desired folder or template is showing.

### Caution

---

Deleting a folder also deletes all templates under the folder.

---

3. Right-click that template or folder and choose **Delete**.


## Using Structural Verilog (.vm) in the Design Flow

The Radiant software supports structural Verilog files (.vm) as an input module source for both LSE and Synplify Pro. Structural Verilog design entry is similar to Electronic Design Interchange Format (EDIF) design entry. Benefits of Structural Verilog over EDIF include:

- ▶ Allows individual module-level constraints.
- ▶ Allows simulation.

The following are Structural Verilog flow requirements:

- ▶ The top module must be HDL.
- ▶ The .vm and its associated .ldc files must have the same name.
- ▶ I/Os cannot be inserted during .vm module synthesis.
- ▶ A Verilog Black Box instantiation module (\_bb.v) is required for each .vm source file.

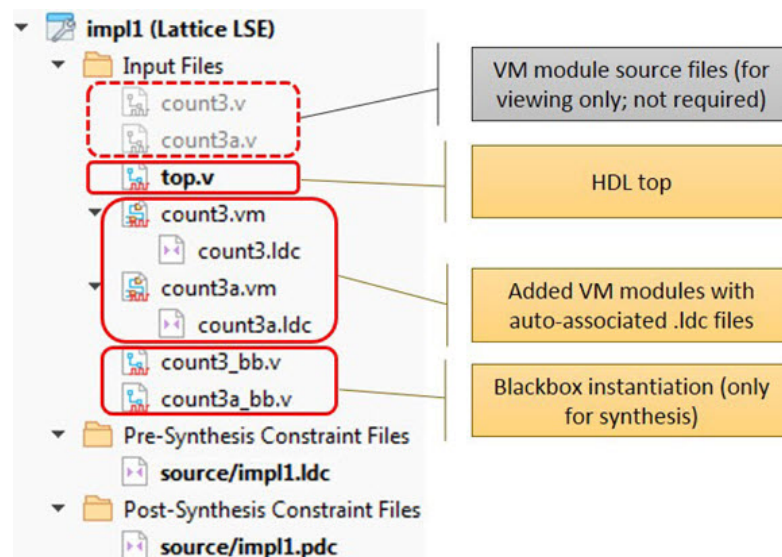

### How VM Flow Works

The following provides an example of creating and using Structural Verilog (.vm) in the design flow.

1. Create a Radiant software project.
2. Add HDL sources.
3. Add timing constraints and save them to an .ldc file.
4. Synthesize the project without I/O insertion to create the .vm file.
5. Rename .vm and .ldc file to the module name. Repeat steps 2 through 5 until all .vm modules and .ldc files are created.
6. Add .vm files to the main project. The .ldc files are auto-associated.

7. Prepare a Verilog Black Box instantiation module for each .vm file.

**Figure 5: Example .vm File**

---

```

module count (clk, rst, count)
/* synthesis syn_black_box
   syn_declare_black_box=1
   black_box_pad_pin="clk,rst,count" */;
```

input clk, rst;  
output [23:0] count;  
endmodule

---

For Synplify Pro, you need to add the **syn\_declare\_black\_box** attribute to the .vm flow. This attribute indicates user-defined black box in Synplify Pro flow.

8. Run the processes as normal after instantiating them from a top level. If processed properly, the Post-Synthesis Timing Constraint Editor will show all constraints for the .vm files.

## Coding Tips for LSE

The following are some recommendations if you choose to use LSE to synthesize your design. Tips include how to write code to infer different types of I/O ports, avoiding conflicts between VHDL packages, using VHDL coding, and preparing Verilog blocking assignments.

### VHDL Coding in LSE

LSE typically applies the VHDL specification strictly, sometimes more strictly than other synthesis tools. The following are some coding practices that can cause problems with LSE:

#### ieee.std\_logic\_signed or unsigned

When preparing VHDL code for LSE, you can include either:

```
USE ieee.std_logic_signed.ALL;
```

or:

```
USE ieee.std_logic_unsigned.ALL;
```

DO NOT include both statements. Code with both signed and unsigned packages may fail to synthesize because operators would have multiple definitions. Some synthesis tools may allow this but LSE does not.

#### Strict Variable Typing

LSE is more strict about variable type requirements than most synthesis tools. A `std_logic_vector` signal cannot be assigned to a `std_logic` signal and an unsigned type cannot be assigned to a `std_logic_vector` signal. For example:

```
din : in  unsigned (data_width - 1 downto 0);
dout : out std_logic_vector (data_width - 1 downto 0));
...
dout <= din; -- Illegal, mismatched assignment.
```

Mismatched assignments like this will generate errors that stop synthesis.

## Inferring Memory

To produce RAM and ROM in a design, you can write code for the design so that the synthesis tool infers the memory.

Inferring memory means that LSE, based on aspects of the code, implements a block of memory using programmable function units (PFU) or embedded block RAM (EBR) instead of registers. PFU is used for small memories and EBR for large. LSE can infer synchronous RAM, that is:

- ▶ Single-port, pseudo dual-port, or true dual-port.
- ▶ With or without asynchronous reset of the output.
- ▶ With or without write enables.
- ▶ With or without clock enables.

LSE can also infer synchronous ROM.

One of the advantages of inferring memory is that the design is portable to almost any FPGA architecture.

The following sections describe how to write code to infer different kinds of memory with LSE.

### See Also

- ▶ [“Inferring RAM” on page 124](#)
- ▶ [“Inferring ROM” on page 134](#)

## Inferring RAM

The basic inferred RAM is synchronous. It can have synchronous or asynchronous reads and can be either single- or dual-port. You can also set initial values. Other features, such as resets and clock enables, can be added when needed. The following lists the rules for coding inferred RAM. [Figure 6 on page 124](#) (Verilog) and [Figure 7 on page 125](#) (VHDL) show the code for a simple, single-port RAM with asynchronous read.

To code RAM to be inferred, do the following:

- ▶ Define the RAM as an indexed array of registers.



- ▶ To control how the RAM is implemented (with distributed or block RAM), consider adding the `syn_ramstyle` attribute. See [“syn\\_ramstyle” on page 875](#).
- ▶ Control the RAM with a clock edge and a write enable signal.
- ▶ For synchronous reads, see [“Inferring RAM with Synchronous Read” on page 126](#).
- ▶ For single-port RAM, use the same address bus for reading and writing.
- ▶ For dual-port RAM, pseudo and true, see [“Inferring Dual-Port RAM” on page 129](#).
- ▶ If desired, assign initial values to the RAM as described in [“Initializing Inferred RAM” on page 133](#).

### Simple, Single-Port RAM in Verilog

```
module ram (din, addr, write_en, clk, dout);
    parameter addr_width = 8;
    parameter data_width = 8;
    input [addr_width-1:0] addr;
    input [data_width-1:0] din;
    input write_en, clk;
    output [data_width-1:0] dout;
    reg [data_width-1:0] dout1; //Register for output.
    reg [data_width-1:0] dout; //Register for output.
    reg [data_width-1:0] mem [(1<<addr_width)-1:0];

    always @(posedge clk)
    begin
        if (write_en) mem[addr] <= din;
        dout1 <= mem[addr]; // Output register controlled by clock.
        dout <= dout1;
    end
endmodule
```

### See Also

- ▶ [“Verilog Blocking Assignments” on page 135](#)

## Inferring RAM with Synchronous Read

For synchronous reads, add a register for the read address or for the data output. Load the register inside the procedure or process that is controlled by the clock. The following examples show the simple RAM for Verilog and VHDL modified for synchronous reads. Changes are in bold text.

### RAM with Registered Output in Verilog

```
module ram (din, addr, write_en, clk, dout);
    parameter addr_width = 8;
    parameter data_width = 8;
    input [addr_width-1:0] addr;
    input [data_width-1:0] din;
    input write_en, clk;
    output [data_width-1:0] dout;
    reg [data_width-1:0] dout1; // Register for output.
    reg [data_width-1:0] dout; // Register for output.
    reg [data_width-1:0] mem [(1<<addr_width)-1:0];

    always @(posedge clk)
    begin
        if (write_en)
            mem[addr] <= din;
        dout1 = mem[addr]; // Output register controlled by clock.
        dout <= dout1;
    end
endmodule
```

### RAM with Registered Read Address in Verilog

```
module ram (din, addr, write_en, clk, dout);
    parameter addr_width = 8;
    parameter data_width = 8;
    input [addr_width-1:0] addr;
    input [data_width-1:0] din;
    input write_en, clk;
    output [data_width-1:0] dout;
    reg [data_width-1:0] raddr; // Register for read address.
    reg [data_width-1:0] mem [(1<<addr_width)-1:0];

    always @(posedge clk)
    begin
        if (write_en)
            begin
                mem[addr] <= din;
            end
        raddr <= addr; // Read addr. register controlled by clock.
        assign dout = mem[raddr];
    end
endmodule
```

**RAM with Registered Output in VHDL**

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;

entity ram is
generic (
    addr_width : natural := 8;
    data_width : natural := 8);
port (
    addr : in  std_logic_vector (addr_width - 1 downto 0);
    write_en : in  std_logic;
    clk : in  std_logic;
    din : in  std_logic_vector (data_width - 1 downto 0);
    dout : out std_logic_vector (data_width - 1 downto 0));
end ram;

architecture rtl of ram is
    type mem_type is array ((2** addr_width) - 1 downto 0) of
        std_logic_vector(data_width - 1 downto 0);
    signal mem : mem_type;
begin
    process (clk)
    begin
        if (clk'event and clk = '1') then
            if (write_en = '1') then
                mem(conv_integer(addr)) <= din;
            end if;
        end if;
        dout <= mem(conv_integer(addr));
        -- Output register controlled by clock.
    end process;
end rtl;

```

**RAM with Registered Read Address in VHDL**

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;

entity ram is
generic (
    addr_width : natural := 8;
    data_width : natural := 8);
port (
    addr : in  std_logic_vector (addr_width - 1 downto 0);
    write_en : in  std_logic;
    clk : in  std_logic;
    din : in  std_logic_vector (data_width - 1 downto 0);
    dout : out std_logic_vector (data_width - 1 downto 0));
end ram;

architecture rtl of ram is
    type mem_type is array ((2** addr_width) - 1 downto 0) of
        std_logic_vector(data_width - 1 downto 0);
    signal mem : mem_type;
    signal raddr : std_logic_vector(addr_width - 1 downto 0);
begin
    process (clk)
    begin
        if (clk'event and clk = '1') then
            if (write_en = '1') then
                mem(conv_integer(addr)) <= din;
            end if;
            raddr <= addr;
            -- Read address register controlled by clock.
        end if;
    end process;
    dout <= mem(conv_integer(raddr));
end rtl;

```

**See Also**

► [“Inferring RAM” on page 124](#)

## Inferring Dual-Port RAM

The following applies for dual-port, pseudo or true RAM.

- ▶ When using two address buses:
  - ▶ If the design does not simultaneously read and write the same address, add the `syn_ramstyle` attribute with the `no_rw_check` value to minimize overhead logic.
  - ▶ If writing in Verilog, use non-blocking assignments as described in [“Verilog Blocking Assignments” on page 135](#).

The examples below are based on the simple RAM for Verilog and for VHDL.

### Pseudo Dual-Port RAM in Verilog

```
module ram (din, write_en, waddr, wclk, raddr, rclk, dout);
  parameter addr_width = 8;
  parameter data_width = 8;
  input [addr_width-1:0] waddr, raddr;
  input [data_width-1:0] din;
  input write_en, wclk, rclk;
  output [data_width-1:0] dout;
  reg [data_width-1:0] dout;
  reg [data_width-1:0] mem [(1<<addr_width)-1:0]
    /* synthesis syn_ramstyle = "no_rw_check" */ ;

  always @(posedge wclk) // Write memory.
  begin
    if (write_en)
      mem[waddr] <= din; // Using write address bus.
    end
  always @(posedge rclk) // Read memory.
  begin
    dout <= mem[raddr]; // Using read address bus.
  end
endmodule
```

## True Dual-Port RAM in Verilog

```
module ram (dina, write_ena, addra, clka, douta,
            dinb, write_enb, addrb, clk, doutb);
    parameter addr_width = 8;
    parameter data_width = 8;
    input [addr_width-1:0] addra, addrb;
    input [data_width-1:0] dina, dinb;
    input write_ena, clka, write_enb, clk;
    output [data_width-1:0] douta, doutb;
    reg [data_width-1:0] douta, doutb;
    reg [data_width-1:0] mem [(1<<addr_width)-1:0]
        /* synthesis syn_ramstyle = "no_rw_check" */ ;

    always @(posedge clka) // Using port a.
    begin
        if (write_ena)
            mem[addra] <= dina; // Using address bus a.
        douta <= mem[addra];
    end
    always @(posedge clk) // Using port b.
    begin
        if (write_enb)
            mem[addrb] <= dinb; // Using address bus b.
        doutb <= mem[addrb];
    end
endmodule
```

**Pseudo Dual-Port RAM in VHDL**

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;

entity ram is
generic (
  addr_width : natural := 8;
  data_width : natural := 8);
port (
  write_en : in  std_logic;
  waddr : in  std_logic_vector (addr_width - 1 downto 0);
  wclk : in  std_logic;
  raddr : in  std_logic_vector (addr_width - 1 downto 0);
  rclk : in  std_logic;
  din : in  std_logic_vector (data_width - 1 downto 0);
  dout : out std_logic_vector (data_width - 1 downto 0));
end ram;

architecture rtl of ram is
  type mem_type is array ((2** addr_width) - 1 downto 0) of
    std_logic_vector(data_width - 1 downto 0);
  signal mem : mem_type;
  attribute syn_ramstyle: string;
  attribute syn_ramstyle of mem: signal is "no_rw_check";
begin
  process (wclk) -- Write memory.
  begin
    if (wclk'event and wclk = '1') then
      if (write_en = '1') then
        mem(conv_integer(waddr)) <= din;
        -- Using write address bus.
      end if;
    end if;
  end process;
  process (rclk) -- Read memory.
  begin
    if (rclk'event and rclk = '1') then
      dout <= mem(conv_integer(raddr));
      -- Using read address bus.
    end if;
  end process;
end rtl;

```

## True Dual-Port RAM in VHDL

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;

entity ram is
generic (
  addr_width : natural := 8;
  data_width : natural := 8);
port (
  addra : in  std_logic_vector (addr_width - 1 downto 0);
  write_ena : in  std_logic;
  clka : in  std_logic;
  dina : in  std_logic_vector (data_width - 1 downto 0);
  douta : out std_logic_vector (data_width - 1 downto 0);
  addrb : in  std_logic_vector (addr_width - 1 downto 0);
  write_enb : in  std_logic;
  clk b : in  std_logic;
  dinb : in  std_logic_vector (data_width - 1 downto 0);
  doutb : out std_logic_vector (data_width - 1 downto 0));
end ram;

architecture rtl of ram is
  type mem_type is array ((2** addr_width) - 1 downto 0) of
    std_logic_vector(data_width - 1 downto 0);
  signal mem : mem_type;
  attribute syn_ramstyle: string;
  attribute syn_ramstyle of mem: signal is "no_rw_check";
begin
  process (clka) -- Using port a.
  begin
    if (clka'event and clka = '1') then
      if (write_ena = '1') then
        mem(conv_integer(addra)) <= dina;
        -- Using address bus a.
      end if;
      douta <= mem(conv_integer(addra));
    end if;
  end process;
  process (clkb) -- Using port b.
  begin
    if (clkb'event and clkb = '1') then
      if (write_enb = '1') then
        mem(conv_integer(addrb)) <= dinb;
        -- Using address bus b.
      end if;
      doutb <= mem(conv_integer(addrb));
    end if;
  end process;
end rtl;

```

## See Also

► [“Inferring RAM” on page 124](#)



## Initializing Inferred RAM

Create initial values for inferred RAM to initialize memory.

### Verilog

Initialize RAM with the standard \$readmemb or \$readmemh tasks in an initial block. Create a separate file with the initial values in either binary or hexadecimal form. For example, to initialize a RAM block named "ram":

```
reg [7:0] ram [0:255];
initial
begin
    $readmemh ("ram.ini", ram);
end
```

The data file has one word of data on each line. The data needs to be in the same order in which the array was defined. That is, for "ram [0:255]" the data starts with address 0; for "ram [255:0]" the data starts with address 255. The ram.ini file might start like this:

```
0A /* Address 0 */
23
5C
...
```

### VHDL

Initialize RAM with either signal declarations or variable declarations. Define an entity with the same ports and architecture as the memory. Use this entity in either a signal or variable statement with the initial values as shown below.

To initialize a RAM block named "ram," define an entity such as:

```
entity ram_init is
port (
    clk : in std_logic;
    addr : in std_logic_vector(7 downto 0);
    din : in std_logic_vector(7 downto 0);
    we : in std_logic;
    dout : out std_logic_vector(7 downto 0));
end;
architecture arch of ram_init is
    type ram_init_arch is array(0 to 255)
    of std_logic_vector (7 downto 0);
```

Then use the entity in a signal statement:

```
signal ram : ram_init_arch := (
    "00001010",
    "00100011",
    "01011100",
    ...
    others => (others => '0'));
```

Or use the entity in a variable statement:

```
variable ram : ram_init_arch := (
  1 => "00001010",
  ...
  others => (1=>'1', others => '0'));
```

### See Also

- ▶ [“Inferring RAM” on page 124](#)

## Inferring ROM

To code the ROM to be inferred, do the following:

- ▶ Define the ROM with a case statement or equivalent IF statements.
- ▶ Assign constant values, all with the same width.
- ▶ Assign values for at least 16 addresses or half of the address space, whichever is greater. For example, if the address has 6 bits, the address space is 64 words, and at least 32 of them must be assigned values.
- ▶ To control how the ROM is implemented (with distributed or block ROM), consider adding the `syn_romstyle` attribute. See [“syn\\_romstyle” on page 879](#).

### ROM Inferred with Case Statement in Verilog

```
module rom(data, addr);
  output [3:0] data;
  input [4:0] addr;
  always @(addr) begin
    case (addr)
      0 : data = 'h4;
      1 : data = 'h9;
      2 : data = 'h1;
      ...
      15 : data = 'h8;
      16 : data = 'h1;
      17 : data = 'h0;
      default : data = 'h0;
    endcase
  end
endmodule
```

## ROM Inferred with If Statement in VHDL

```

entity rom is
port (addr : in std_logic_vector(4 downto 0);
      data : out std_logic_vector(3 downto 0) );
end rom;

architecture behave of rom is
begin
  process(addr)
  begin
    if      addr = 0 then data <= "0100";
    elsif  addr = 1 then data <= "1001";
    elsif  addr = 2 then data <= "0001";
    ...
    elsif  addr = 15 then data <= "1000";
    elsif  addr = 16 then data <= "0001";
    elsif  addr = 17 then data <= "0000";
    else
      data <= "0000";
    end if;
  end process;
end behave;

```

## Verilog Blocking Assignments

LSE support for Verilog blocking assignments to inferred RAM and ROM, such as “ram[(addr)] = data;,” is limited to a single assignment. Multiple blocking assignments, such as you might use for true dual-port RAM (see [Figure 18 on page 134](#)), or a mix of blocking and non-blocking assignments are not supported. Use non-blocking assignments instead (<=).

### Example of RAM with Multiple Blocking Assignments (Wrong)

```

always @(posedge clka)
begin
  if (write_ena)
    ram[addra] = dina; // Blocking assignment A
    douta = ram[addra];
  end
always @(posedge clk b)
begin
  if (write_enb)
    ram[addrb] = dinb; // Blocking assignment B
    doutb = ram[addrb];
  end
end

```

**Example Rewritten with Non-blocking Assignments (Right)**

```

always @(posedge clka)
begin
    if (write_ena)
        ram[addra] <= dina;
        douta <= ram[addra];
    end
always @(posedge clk b)
begin
    if (write_enb)
        ram[addrb] <= dinb;
        doutb <= ram[addrb];
    end
end

```

**Verilog Generate Blocks**

If a module has multiple generate blocks, LSE requires that each block has a different name. Assign names with begin statements.

**Generate Blocks with Assigned Names**

```

generate
begin: R1_gen // Name first generate block.
    genvar i1;
    for (i1=0; i1<=15; i1=i1+1)
        regset R1 (.clk(clk[i1]),.q(q[i1]),.d(d[i1]));
    end
endgenerate

generate
begin: IR0_gen // Name second generate block.
    genvar i;
    for (i=0; i<=7; i=i+1)
        ioreg IR0 (.clk(clk[0]),.reset(rst[i]),.q(q[i]),.d(d[i]));
    end
endgenerate

```

## Inferring I/O

To specify a type of I/O port, follow these models.

### Verilog

#### Open Drain:

```
output <port>;
wire <output_enable>;
assign <port> = <output_enable> ? 1'b0 : 1'bz;
```

#### Bidirectional:

```
inout <port>;
wire <output_enable>;
wire <output_driver>;
wire <input_signal>;
assign <port> = <output_enable> ? <output_driver> : 1'bz;
assign <input_signal> = <port>;
```

### VHDL Example

#### Tristate:

```
library ieee;
use ieee.std_logic_1164.all;
entity <tbuf> is
port (
    <enable> : std_logic;
    <input_sig> : in std_logic_vector (1 downto 0);
    <output_sig> : out std_logic_vector (1 downto 0));
end tbuf2;
architecture <port> of <tbuf> is
begin
    <output_sig> <= <input_sig> when <enable> = '1' else "ZZ";
end;
```

#### Open Drain:

```
library ieee;
use ieee.std_logic_1164.all;
entity <od> is
port (
    <enable> : std_logic;
    <output_sig> : out std_logic_vector (1 downto 0));
end od2;
architecture <port> of <od> is
begin
    <output_sig> <= "00" when <enable> = '1' else "ZZ";
end;
```

**Bidirectional:**

```

library ieee;
use ieee.std_logic_1164.all;
entity <bidir> is
port (
    <direction> : std_logic;
    <input_sig> : in std_logic_vector (1 downto 0);
    <output_sig> : out std_logic_vector (1 downto 0);
    <bidir_sig> : inout std_logic_vector (1 downto 0));
end bidir2;
architecture <port> of <bidir> is
begin
    <bidir_sig> <= <input_sig> when <direction> = '0' else "ZZ";
    <output_sig> <= <bidir_sig>;
end;

```

**General Coding Practices for LSE**

Adhere strictly to VHDL/Verilog specifications since LSE enforces language rules more rigorously than third-party tools:

- ▶ Avoid blocking assignments in Verilog for sequential logic to prevent simulation-synthesis mismatch.
- ▶ Eliminate nested events (such as @(posedge clk) inside always blocks).
- ▶ Prefer `case` over `if-else` for state machines and decoders to avoid unintended priority logic:
- ▶ Control encoding styles using synthesis attributes:

```

vhdl
attribute syn_encoding : string;
attribute syn_encoding of <signal> : signal is "onehot"; --

```

Options: sequential, onehot, gray

This directs FSM implementation for area/speed tradeoffs.

- ▶ Enable resource sharing via the Resource Sharing option in LSE settings to reduce duplicate logic.
- ▶ Register I/O ports using `syn_useioff` attribute to leverage I/O flip-flops:

```

verilog
(* syn_useioff = 1 *) output reg q;

```

This improves timing by embedding registers in I/O blocks.

- ▶ Avoid combinatorial outputs unless necessary to prevent timing uncertainty, routing delays, and difficult time closures.

- ▶ Timing Uncertainty:

Combinatorial logic can introduce variable delays depending on the complexity of the logic path.

If the output of a module is purely combinatorial, it might change multiple times before settling, which can cause glitches or race conditions in downstream logic.

▶ **Routing Delays:**

In large digital systems, signals often need to travel long distances across a chip or board.

Combinatorial outputs that are not synchronized to a clock can cause routing congestion and timing violations, especially if they feed into other combinatorial logic.

▶ **Difficult Timing Closure:**

Tools like synthesis and place-and-route have a harder time optimizing timing paths when outputs are not registered (such as not clocked).

This can lead to longer design cycles and unreliable operation.

## Coding Tips for Synplify Pro

This section provides tips to control synthesis optimizations, preserve design hierarchy and signals, and ensure correct implementation on Lattice FPGAs using Synplify Pro.

### Preserve Input Pins

To prevent Synplify Pro from removing an input pin during optimization, use the `syn_force_pads` synthesis attribute on the input port.

#### Verilog Example

```
input myinput /* synthesis syn_force_pads=1 */;
```

#### VHDL Example

```

--
attribute syn_force_pads: boolean;
attribute syn_force_pads of myinput : signal is true;
--
```

This ensures the pin remains in the netlist.

## Control RAM Inference

Control RAM inference using `syn_ramstyle` to specify implementation style:

### VHDL Example

```
```\nattribute syn_ramstyle : string;\nattribute syn_ramstyle of mem_signal : signal is "registers";\n```\n
```

Options:

- ▶ registers – Implements memory as flip-flops (ideal for resettable small RAMs).
- ▶ distributed – Uses PFU resources.
- ▶ block\_ram – Maps to EBR resources.

This prevents unintended EBR usage and enables reset functionality.

## Preserve Critical Registers

Preserve critical registers with `syn_preserve` to prevent optimization.

### Verilog Example

```
reg myreg /* synthesis syn_preserve=1 */;
```

This retains registers during synthesis.

## Manage Fanout

Manage fanout using `syn_maxfan` to limit net load:

### VHDL Example

```
attribute syn_maxfan: integer;\nattribute syn_maxfan of mysignal : signal is 32;
```

This controls congestion on high-fanout nets.



## Prevent Unused Logic Pruning

Prevent pruning of unused logic with `syn_noprune`:

### Verilog Example

```
module unused_mod /* synthesis syn_noprune=1 */;
```

This retains modules for debugging.

## Prevent Hierarchical Optimization

Use the `syn_hier` attribute set to "fixed" on a module or architecture to stop Synplify Pro from moving logic across module boundaries and to keep the port interfaces intact.

### Verilog Example

```
...
module dp(clk, rst, din, dout) /* synthesis syn_hier = "fixed"
*/;
```

### VHDL Example

```
...
attribute syn_hier : string;
attribute syn_hier of struct: architecture is "fixed";
...
```

This helps keep logic grouped during place and route.

## Preserve Registers or Signals

Use the `syn_preserve` attribute on outputs or internal signals to prevent their removal or optimization, especially for state registers.

### Verilog Example

```
...
/* synthesis syn_preserve=1 */
...
```

### VHDL Example

```
...
attribute syn_preserve of object : objectType is true;
...
```

## Black Box and Pad Pin Directives

To specify pins on black-box components as I/O pads visible externally, use the ``syn_black_box`` and ``black_box_pad_pin`` attributes.

### Verilog Example

```
```\n/* synthesis syn_black_box black_box_pad_pin="portList" */\n```\n
```

## Allow Retiming

Enable register retiming optimizations with the ``syn_allow_retiming`` attribute on registers.

### Verilog Example

```
```\noutput reg [3:0] count_one /* synthesis syn_allow_retiming=1 */\n;\n```\n
```

### VHDL Example

```
```\nattribute syn_allow_retiming of object : objectType is true;\n```\n
```

## General Coding Practices for Synplify Pro

1. Write code to infer memories properly (block RAM or logic cells) by following coding styles compatible with Lattice synthesis tools.
2. Use attributes to guide synthesis and optimization explicitly.
3. Group related attributes at the top of modules for clarity.
4. Avoid constructs that cause synthesis tools to behave unpredictably or optimize away important logic.
5. Verify synthesis reports to confirm resource usage matches expectations (such as EBR versus register counts).
6. Use technology-specific primitives for critical paths when attributes yield inconsistent results.

## Mixed Language Support

### LSE: No Component Declaration Needed

LSE offers more flexibility in mixed-language support. It allows direct instantiation of Verilog modules in VHDL without requiring a component declaration.

LSE can automatically infer the module interface from the Verilog source and match it with the VHDL instantiation. This simplifies the process and reduces boilerplate code.

#### Example

You can directly instantiate the Verilog module in VHDL like this:

```
u1: entity work.my_verilog_module
  port map (
    clk => clk,
    rst => rst,
    data_out => data_out
  );
```

## Synplify Pro: Requires Component Declaration

In Synplify Pro, when you want to instantiate a Verilog module inside a VHDL design, you must follow the VHDL convention of declaring a component before instantiating it. This is because Synplify Pro adheres strictly to VHDL's structural instantiation rules.

1. Declare the Verilog module as a component in the VHDL architecture or package.
2. Map the ports of the component to the actual signals.
3. Instantiate the component in the VHDL architecture.

### Example

```
port (
    clk : in std_logic;
    rst : in std_logic;
    data_out : out std_logic_vector(7 downto 0)
);
end component;

-- Instantiation
u1: my_verilog_module
    port map (
        clk => clk,
        rst => rst,
        data_out => data_out
    );
```

## Customizing Source Editor

The following can be performed in Source Editor:

- ▶ Select a default file language
- ▶ Choose window modes (attached or detached).
- ▶ Set encoding.
- ▶ Configure line number showing.
- ▶ Configure text wrapping.
- ▶ Set printing options.

### Setting File and Window Modes

Source Editor offers you the flexibility to configure file and window modes, such as line number showing, text wrapping, and printing options. The configuration can be applied to the current file, a specified type of file, or any new files created in Source Editor.

**To select a default file language:**

1. In Source Editor, choose **View > Language**. The following options are available: C++, Hypertext, Perl, Python, TCL, Verilog, VHDL, EDIF, SystemVerilog, Timing Constraint, and Physical Constraint.
2. Choose the desired language from the list. The language selected becomes the default language in Source Editor.

**To attach or detach Source Editor from the Radiant software:**

1. To detach Source Editor from the Radiant software main window, click the Detach Tool icon in the upper-right corner of Source Editor.
2. To attach Source Editor to the Radiant software main window, choose **Window > Attach Window**, or click on the Attach Tool icon in the upper-right corner of Source Editor.

**Customizing Source Editor from the Radiant software Main Window****To customize Source Editor settings in the Radiant software main window:**

1. In the Radiant software main window, choose **Tools > Options**.
2. In the Tools window, you can set settings in the each related section.

**General**

Show Line Number: Displays line numbers of the files (on the left side of the Editor).

Show Bookmark Margin: Displays the side bar allowing you to select the whole row.

Show Folder Margin: Displays the side bar (on the left side of the Editor) that is used to fold/unfold the syntax.

Tab Size: Specifies how many spaces are entered when a tab character is pressed.

Restore Returns to the default setting.

**Font**

Lists the current font used in Source Editor. To change the current font, click the drop-down menu next to Font Family and select the desired font. To change the font size, click the drop-down menu next to Font Size and select the desired size. Click **OK** to exit. The selected font name, font type, and font size will be displayed in Source Editor.

Restore Returns all selections to their default settings.

3. In the Color window, you can set the default colors for the text, comments, numbers, keywords, and a variety of other options under the Source Editor tab.

**Colors**

Click in the Themes drop-down menu to select either a light or dark overall color theme for Source Editor.

To select a different color, double-click the color box next to the desired element to open the Select Color window. Click on the new color to use.

Restore  
settings.

Returns all selections to their default

If you want to change to use your own text editor other than Source Editor, you can customize to add your own text editor and associated files to your own text editor program in the Options dialog. Select **Tools > Options** from the Radiant software main window, click on **General**, and then select the **File Associations** tab.

## References

This section includes the following references.

### [Synthesis Tool User Reference](#)

For more details on the Synopsys Synplify Pro for Lattice tool user interface, commands, and features, refer to the [Synopsys Synplify Pro for Lattice Reference Manual](#).

### [HDL Language Reference](#)

For more details on Verilog and VHDL language support, refer to [Synopsys Synplify Pro for Lattice Language Support Reference Manual](#).

If you have installed Synplify Pro for Lattice, these documents are available in the installation directory `\\sccl\\radiant\\2024.2\\synpbase\\doc`.

## Packaging IP Using IP Packager

IP Packager is a tool for you to create an IP package easily. You can edit ports, files, parameters, and memory in the IP Packager, and pack a customized IP directly.

### See Also

- ▶ [“Running IP Packager and Viewing Documentation” on page 147](#)
- ▶ [“Installing IP Created with IP Packager into IP Catalog” on page 147](#)

## Running IP Packager and Viewing Documentation

IP Packager is a stand-alone tool. IP Packager can be run from both Windows and Linux. IP Packager documentation is contained within the IP Packager tool.

### To run IP Packager:

- ▶ In Windows, go to the Windows Start menu and choose **Lattice Radiant Software <Version> > IP Packager**.
- ▶ In Linux: from the `./<Radiant Software Install Path>/bin/linux64` directory, enter the following on a command line:

```
./ippack.sh
```

The IP Packager tool opens.

### To view IP Packager documentation:

- ▶ In the IP Packager main window, choose **Help > Help**.

The IP Packager can also be run from the command line. Refer to [“IP Packager” on page 1754](#).

### See Also

- ▶ [“Packaging IP Using IP Packager” on page 147](#)
- ▶ [“Installing IP Created with IP Packager into IP Catalog” on page 147](#)

## Installing IP Created with IP Packager into IP Catalog

You can download and add IP created with IP Packager into IP Catalog.

### To download and add a User IP:

1. In the Radiant IP Catalog, click on the **Install a User IP**  button.

2. In the **Select user IP package file to install** dialog box, browse to the IP Package (.ipk) file, and click **Open**.
  - ▶ The Soft IP will be installed into a folder in the user's personal directory. For example: C:/Users/<username>/RadiantIPLocal/<IP\_name>.
  - ▶ The Soft IP will be added into the IP Catalog.

**See Also**

- ▶ [“Packaging IP Using IP Packager” on page 147](#)
- ▶ [“Running IP Packager and Viewing Documentation” on page 147](#)



# Designing with Soft IP, Modules, and PMI

Modules are functional bits of design that can be re-used wherever that function is needed. Creating such components with hardware design languages is common practice. To help your design along, the Radiant software provides a variety of components for common functions. They are optimized for Radiant software device architectures and can be customized. Use these components to speed up your design work and to get the most effective results.

Radiant software components come in a variety of forms:

- ▶ **Modules:** These basic, configurable blocks come with IP Catalog. They provide a variety of functions including I/O, arithmetic, memory, and more. Open IP Catalog to see the full list of what's available. Also see the ["Lattice Module Reference Guide" on page 901](#).
- ▶ **IP:** Intellectual property (IP) are more complex, configurable blocks. They are accessible through IP Catalog, but they do not come with the tool. They must first be downloaded and installed as a
- ▶ separate step before they can be accessed from IP Catalog. To see all that's available and to learn about licensing and other vendors of IP, go to the Lattice website: [www.latticesemi.com/ip](http://www.latticesemi.com/ip).

IP Catalog provides a variety of functions ranging from the most basic, such as arithmetic and memory, to much more complex functions. With IP Catalog these components can be extensively customized and created as part of a specific project or as a library for multiple projects. See ["Creating IP Catalog Components" on page 150](#).

However, many of these components can also be used with PMI (see next item). To decide which method to use, see ["PMI or IP Catalog?" on page 150](#).

- ▶ **PMI (Parameterized Module Instantiation)** is an alternate way to use some of the components that come with IP Catalog. Instead of using IP Catalog, PMI can directly instantiate a component into your HDL and customize it by setting parameters in the HDL. You may find this easier than using IP Catalog if your design requires many variations of the same component. To decide which method to use, see ["PMI or IP Catalog?" on page 150](#).
- ▶ **Reference designs** provide you with a starting point on creating your own components. Lattice Reference Designs are available in Verilog and VHDL, and can be downloaded from the Lattice website: [www.latticesemi.com/ip](http://www.latticesemi.com/ip).
- ▶ **Lattice library primitives** are very basic functions, such as logic gates and flip-flops. They can be directly instantiated as HDL into designs. But this is an advanced technique and should usually be avoided. For more information, see ["Designing with Radiant software Library Primitives" on page 159](#).

## PMI or IP Catalog?

Many IP Catalog components are also available as PMI modules, but PMI doesn't offer error checking. This and the next two sections discuss the pros and cons of both options to help you decide which is best for your project.

PMI is a convenient way to use components of the same type but that vary from instance to instance. This eliminates the need to create a separate component for each instance using IP Catalog.

For example, a design might require dozens of FIFOs that are functionally the same but require different address depths. With PMI, you could insert the same FIFO instantiation command wherever it's needed in the HDL and just change the address depth parameter as you go. The alternative would be to use IP Catalog to generate different components for each variation and then insert the instantiation template for each of them. In this situation, you might find the PMI method easier and faster.

Before deciding whether to use a PMI module, compare it to the equivalent IP Catalog module. Often IP Catalog provides more options than PMI does. IP Catalog also assures that all of your option selections and parameter settings are legal. PMI offers no error checking.

### See Also


- ▶ [“Finding Modules in This Guide” on page 901](#)
- ▶ [“Creating IP Catalog Components” on page 150](#)
- ▶ [“Using PMI” on page 156](#)

## Creating IP Catalog Components

IP Catalog is an easy way to use a collection of functional blocks from the Radiant software. There are two types of components available through IP Catalog: modules and IP. IP Catalog enables you to extensively customize these components. They can be created as part of a specific project or as a library for multiple projects.

**Overview of the IP Catalog Process** Below are the basic steps of using IP Catalog modules and IP. For details of performing these steps, see the following topics.

1. Open IP Catalog. IP Catalog is accessed via a tab at the lower left of the Radiant software. Click the tab, or click  in the tool bar, to view the list of available components.

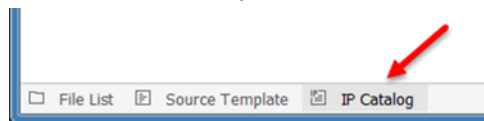

2. Customize the component. These modules and IP can be extensively customized for your design. The options range from setting the width of a data bus to selecting features in a communications protocol.

3. Generate the component and bring its .ipx file into your project. After generating the component, select the option “Insert to project.” This will automatically bring the .ipx file into your project after the generation step completes. If you do not select this option, add the .ipx file to your project as you would with any other source file (such as a Verilog or VHDL file) after the generation is complete.
4. Instantiate the component into the project’s design. An HDL instance template is generated during the generation step to simplify this step.
5. IP Catalog modules and IP can be further modified or updated later. After the .ipx file has been added to the Radiant software project, it is visible in the project’s file list. Double-clicking the .ipx file brings up the component’s configuration dialog box where changes can be made and the generation process repeated.

### See Also

- ▶ “Generating a Component with IP Catalog” on page 153
- ▶ “IP Catalog Output Files for Components” on page 154
- ▶ “Importing an IP Catalog Component into a Project” on page 154
- ▶ “Instantiating an IP Catalog Component” on page 155
- ▶ “PMI Modules” on page 902

## Downloading IP from IP on Server

You can use the IP on Server tab of IP Catalog to download and install the latest IP available from Lattice Semiconductor. Before you can download any IP, ensure that you have an Internet connection. If you haven’t already, choose **Tools > Options > General > Network Settings** and fill in the dialog box.

The website has links to other vendors of IP. To see all available vendor IP and learn about licensing, go to the Lattice Web site: [www.latticesemi.com/ip](http://www.latticesemi.com/ip).

### To download Lattice IP on Server:

1. In IP Catalog, click the **IP on Server** tab, located at the upper-left of the tool. The software connects to the Lattice Semiconductor Web site.
2. Click the refresh icon  to update the list.
3. Expand the folder tree and select the IP you want to download.


Information about the IP appears in the right pane including links for additional information.

IP that are compatible with your selected device have icons highlighted in dark blue . IP that are not compatible with your version of Radiant software have blue icons with a yellow exclamation point .

IP that are not supported by the device used in the current design have gray icons with a red box bearing a cross sign .

Look for device support information in the right pane.

4. To download the IP, click the IP and choose  to the right of the IP name in the list.
5. The downloaded IP is now added to the IP list in the **IP on Local** tab.
6. If you have a third-party IP installed, it will appear under a sub-folder in the **IP on Server** tab.

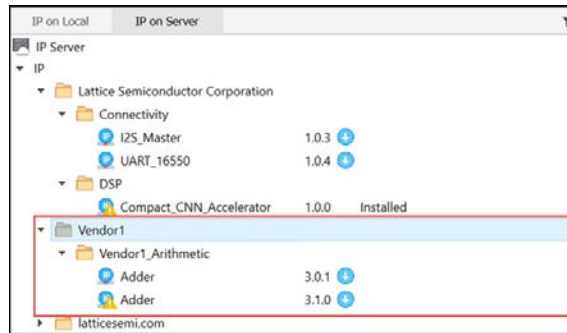

### Note

A new version of an IP that you installed from the server to your local machine may become available.

### See Also

- ▶ [“Lattice Module Reference Guide” on page 901](#)

## Using IP Catalog Search Features

IP Catalog has search features that allow you to search the list of IP and modules by keywords, and also search by type.

### To use the IP Catalog search feature:

1. IP Catalog, click the  icon in the upper right.
2. Search by bus type by clicking one or more of the ABH-Lite, APB, or AS14-Stream boxes. The list of modules and IP will display modules that support these bus types.
3. Search by keyword to display module names or IP that contain the keyword in the name. For example, typing “adder” will display all modules that have adder in the module name.

### See Also

- ▶ [“Lattice Module Reference Guide” on page 901](#)

## Generating a Component with IP Catalog

Use IP Catalog to generate a customized functional block from any module or installed IP.

### To generate a component:

1. In the Module/IP tree, select the component that you want to generate.
2. To get more information about the component, in either the IP on Local tab, or IP on Server tab, click on the module or IP, and then click on the blue question mark . The IP Information page will appear on the right.
3. Double-click the component, or click the Generate Module/IP Instance  button, located at the upper-left of the tool the In the Module/IP Block Wizard, specify general project information and the base file name for the component.
  - ▶ Component Name is the base name for the component's files (that is, with no extension).
  - ▶ Create In is the location for the customized component's files.
4. Click **Next**.  
The component's dialog box opens.
5. In the dialog box, select your desired options. When generating a PLL, click **Calculate** to calculate divider settings and actual output frequencies based on CLKI and desired frequencies.  
  
The IP User Guide is available on the bottom left of the dialog box. You may download the IPUG from the website by clicking this link.
6. Click **Generate**.
7. To automatically import the .ipx file into your project when the component is generated, select **Insert to project** in the Check Generating Result dialog box.
8. Click **Finish**.

### See Also

- ▶ [“IP Catalog Output Files for Components” on page 154](#)
- ▶ [“Lattice Module Reference Guide” on page 901](#)

## Regenerating IPs

The regenerate function is an easy way to update your IP without needing to invoke the IP Catalog tool.

If your design was created in an older version of Radiant software, or if your design was created for a different Lattice device, your IP may need to be regenerated. Regenerating IP will update the IP to the current version.

You can regenerate one or regenerate all IPs to update device information or apply a new version to an existing .ipx file.

**To regenerate as single IP:**

1. In the Radiant software file list, right-click the IP file you wish to regenerate.
2. In the dropdown menu, choose **Regenerate**.

**To regenerate all IP in your design:**

1. In the Radiant software file list, right-click anywhere in the File List.
2. In the dropdown menu, choose **Regenerate All IPs....** A dialog box will pop up to allow you to select one or more IP to regenerate.

**See Also**

► [“Lattice Module Reference Guide” on page 901](#)

**IP Catalog Output Files for Components**

IP Catalog creates the following output files for components under the specified Project Path. The `<file_name>` comes from the File Name specified in the Module/IP Block Wizard.

IP Catalog creates some different files for IP. These are documented in the IP's associated user guide.

**Table 4:**

| File Name                            | Description                                                                                            |
|--------------------------------------|--------------------------------------------------------------------------------------------------------|
| <code>&lt;file_name&gt;.ipx</code>   | Manifest file. This file is loaded into IP Catalog so that modifications can be made to the component. |
| <code>&lt;file_name&gt;.tpl.v</code> | Instantiation template for Verilog netlist.                                                            |
| <code>&lt;file_name&gt;.v</code>     | Verilog HDL file for both synthesis and simulation. Verilog output files declare implicit wire types.  |
| <code>tb_top.v</code>                | Testbench for associated component.                                                                    |

**See Also**

► [“Lattice Module Reference Guide” on page 901](#)

**Importing an IP Catalog Component into a Project**

After generating component source files using IP Catalog, you can import the component by importing the IP Catalog manifest file (.ipx). Components have several files of different types, but you only need to import the .ipx. The .ipx file identifies the components needed to make up the component.

Importing the component may not be necessary if the “Import IPX to project” option was selected when the component was generated.

**To import a component:**

1. In the File List view, right-click the implementation folder () and choose **Add > Existing File**.
2. Browse for the customized component's .ipx file, `<file_name>.ipx`, and select it.
3. Click **Add**.  
The .ipx file is added to the File List view.
4. Check the Output Panel for error messages. If the component is not targeted for the current device, try double-clicking the file to regenerate the component.

After importing the component, you can further customize it for your design project by changing options specific to the component. You can also update older components or IP to the latest version.

**See Also**

- [“Lattice Module Reference Guide” on page 901](#)

**Instantiating an IP Catalog Component**

IP Catalog components are instantiated the same way other components are in your HDL. When you generate components in IP Catalog, the tool also generates Verilog and VHDL reference templates. You can instantiate the reference templates for implementation or simulation flow of any design, as needed.

Before instantiating any IP Catalog component, check that it is compatible with your design project's device. When they were created, the components were optimized for a specific device and may depend on that device's architecture. A component may not work with a different type of device and may need to be regenerated.

Before running any processes on the design, make sure that the IP Catalog component has been imported into the project. See [“Importing an IP Catalog Component into a Project” on page 154](#).

The instantiation file is located in the folder in which the component was created. The file name is based on the component's name: `<component name>_tmpl.v` or `<component name>_tmpl.vhd`.

You can instantiate the IP Catalog Module or IP in one of the following ways:

1. If you selected the option of not inserting the generated IP into your project, browse to the `<component name>_tmpl.v` or `<component name>_tmpl.vhd`, open the file in a text editor, copy the text, and paste into your source file. Then, add an instance and signal names to the component ports.
2. If you selected the option of inserting the generated IP into your project, the IP component configuration file (.ipx) appears in your design

implementation. You can instantiate the generated component or IP as follows:

- ▶ In the File List, right-click the component or IP .ipx file, and choose the instantiation command.
  - ▶ For Verilog, choose **Copy Verilog Instantiation**, and paste it into your source file. Then, add an instance and signal names to the component ports.
  - ▶ For VHDL, choose **Copy VHDL Component**, and paste it into your source file; then choose **Copy VHDL Instantiation**, and paste it into your source file. Then, add an instance and signal names to the component ports.

#### See Also

- ▶ [“Lattice Module Reference Guide” on page 901](#)

## Using PMI

As mentioned earlier, PMI is an alternate way to use some of the components that come with IP Catalog. Instead of using IP Catalog, you directly instantiate a component into your HDL and customize it by setting parameters in the HDL using PMI. You may find this easier than using IP Catalog if your design requires many variations of the same component.

#### See Also

- ▶ [“PMI or IP Catalog?” on page 150](#)
- ▶ [“PMI Process Steps” on page 156](#)
- ▶ [“Instantiating a PMI Component” on page 157](#)
- ▶ [PMI Modules](#)

## PMI Process Steps

This section provides a brief listing of the process steps taken when using PMI.

1. Using Source Template, insert PMI components in the HDL source files. This is the recommended method because it includes the PMI instance templates, which require minimal editing.
2. If using stand-alone synthesis and simulation tools, add the PMI soft IP from the <install\_path>/ip/pmi/ directory.
3. Perform the remaining implementation steps as you would normally.

#### See Also

- ▶ [“Lattice Module Reference Guide” on page 901](#)




## Instantiating a PMI Component

PMI components are instantiated the same way other components are in your HDL. The Radiant software provides a template for the Verilog or VHDL instantiation command that specifies the customized component's ports and parameters. Customize the component by changing its parameters.

### To instantiate a PMI component:

1. Click **Tools > Source Template > Verilog/VHDL > PMI Templates**.
2. With Source Editor, open the source file that will receive the component.
3. Drag and drop the text into your source file.
4. Add an instance name, set parameter values, and add signal names to the corresponding component ports in the instantiation command. Refer to the [PMI Instantiation Command Example](#). For information about allowed parameter values, see the section on the component in the [“Lattice Module Reference Guide” on page 901](#).

**Figure 6: PMI Instantiation Command Example**

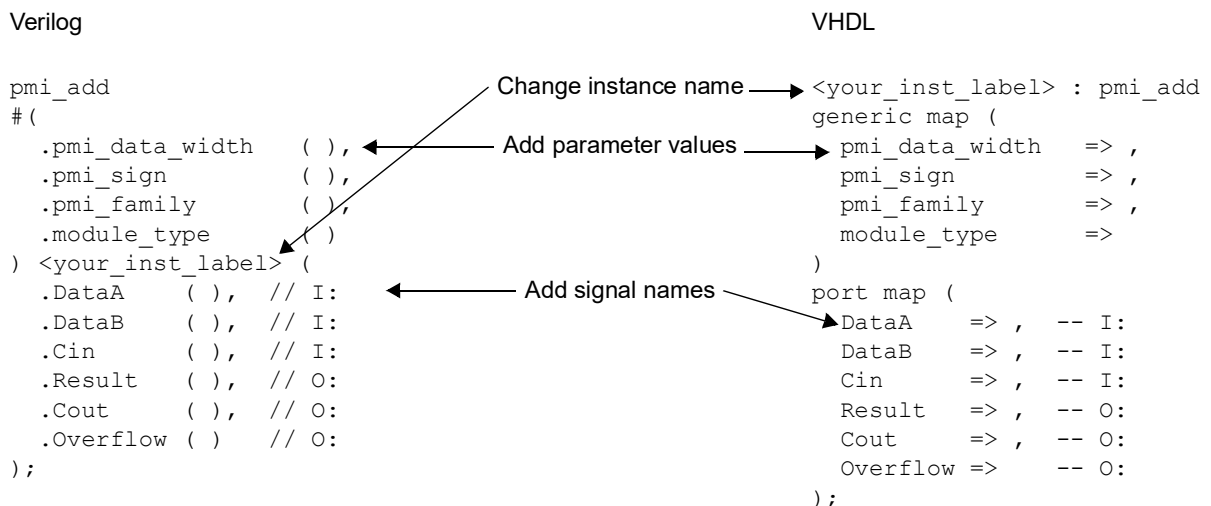

5. Save and close the source file.

### See Also

- ▶ [“Lattice Module Reference Guide” on page 901](#)

## Requirements for Simulation and Synthesis with PMI

The PMI module code is a black box definition of an IP Catalog module. For this reason, simulation models for these blocks must be available to supplement the code for simulation.

VHDL designs have a few additional requirements for both synthesis and simulation.

**PMI Simulation Models** When using ModelSim/QuestaSim, or any other simulator, you must first compile the simulation library (pmi\_work) from the sources, which are in *<install\_dir>/ip/pmi*, where *<install\_dir>* is the installation folder of the Radiant software.

**To compile PMI library, run the following command in ModelSim/QuestaSim TCL console:**

```
vlib pmi_work

vlog -work pmi_work <install_dir>/ip/pmi/pmi.v
```

#### Note

The PMI library name should be “pmi\_work” as it will be used in Simulation Wizard .f file to launch ModelSim/QuestaSim.

**VHDL Requirements** When performing simulation for VHDL PMI, you also need to compile the PMI component declaration file into your work library. The file locations for each device are listed in the following table:

**Table 5: PMI Files**

| Device  | Location                                          |
|---------|---------------------------------------------------|
| iCE40UP | <i>&lt;install_dir&gt;/ip/pmi/pmi_iCE40UP.vhd</i> |
| LAV-AT  | <i>&lt;install_dir&gt;/ip/pmi/pmi_lav-at.vhd</i>  |
| LFCPNX  | <i>&lt;install_dir&gt;/ip/pmi/pmi_lfcpnx.vhd</i>  |
| LFD2NX  | <i>&lt;install_dir&gt;/ip/pmi/pmi_lfd2nx.vhd</i>  |
| LFMXO5  | <i>&lt;install_dir&gt;/ip/pmi/pmi_lfmxo5.vhd</i>  |
| LIFCL   | <i>&lt;install_dir&gt;/ip/pmi/pmi_lifcl.vhd</i>   |
| UT24C   | <i>&lt;install_dir&gt;/ip/pmi/pmi_ut24c.vhd</i>   |
| UT24CP  | <i>&lt;install_dir&gt;/ip/pmi/pmi_ut24cp.vhd</i>  |

Using the PMI header as a library in VHDL is acceptable, but it is not required by the synthesis tools. While the lines below may be added at the top of the source file, these are not required. You can still run synthesis and compile for simulation without these lines.

```
library pmi;
use pmi.components.all;
```

The first line includes the PMI components defined in the header file. The second line is used by some simulators for successful library binding.

#### See Also

► [“Lattice Module Reference Guide” on page 901](#)

## Designing with Radiant software Library Primitives

Any Radiant software library primitive described in the [“FPGA Libraries Reference Guide” on page 904](#) can be instantiated as a Verilog component or VHDL component in your RTL design. This “gate-level” design approach can be error-prone and should be limited to a small number of primitives if attempted at all. In general, Lattice recommends you rely on IP Catalog to generate components that are built with Radiant software library primitives.

To minimize the amount of code overhead required to design using a library primitive, the Radiant software provides a Verilog and VHDL synthesis header library file for each major FPGA device family. Refer to the [“Lattice Synthesis Header Libraries” on page 336](#) topic for details. The component is generally treated as a “black box”, which causes the synthesis tool to pass instances of the library primitive into the target netlist untouched.

The primitive libraries contain descriptions, pin outs, and schematic diagrams of all library primitives for Radiant software FPGA libraries.

## Securing the Design


The Radiant software provides the IP security based on the *Recommended Practice for Encryption and Management of Electronic Design Intellectual Property (IP)* of the IEEE 1735-2014 version 1 standard.

The implementation enables securing IP while ensuring the design flow and the interoperability across different EDA tools. Upon entering the design into Radiant software, IP author selects the desired level of security by encrypting HDL source files. The set security level propagates through the design and impacts the visibility of secured objects in various Radiant software tools. The current version supports encryption of VHDL and Verilog HDL files. Bitstream Security Settings tool generates various encryption key sets. IP Consumer has the flexibility to use the generated key sets during the bitstream generation.

The Radiant software encrypted IP can be processed by other third-party EDA tools including Cadence NCSim, Mentor Graphics ModelSim/ QuestaSim, Synopsys Synplify Pro, and Synopsys VCS simulator.

### IP Encryption Flow

IP encryption flow enables you to protect your IP design. Following the industry standard, the Radiant software, through the IP encryption flow, allows the partnership between the IP Vendor, supported EDA vendor, and Lattice.

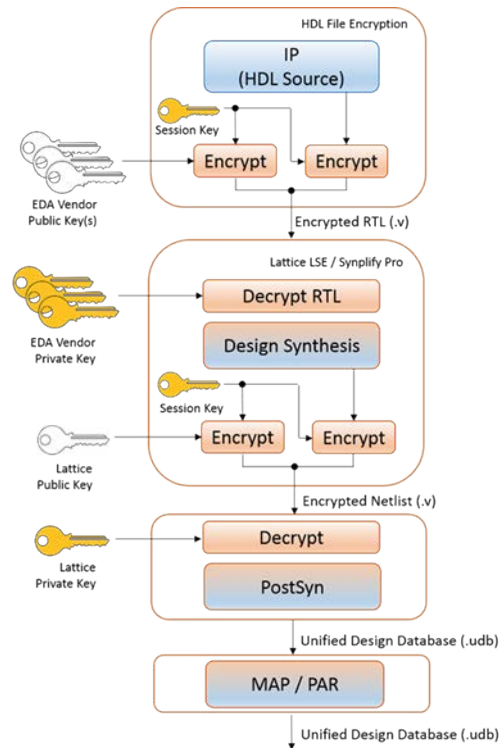

The encryption flow uses symmetric and asymmetric encryption methods to maximize the design security. The symmetric method only involves a single symmetric key for both, encryption and decryption. The asymmetric method involves the public-private key pair. The public key is published by a vendor and is used by the Radiant software. The private key is never revealed to the public.

The Radiant software supports these cryptographic algorithms:

- ▶ AES-128/AES-256: symmetric algorithm used to encrypt the content of the HDL source file.
- ▶ RSA-2048: asymmetric algorithm used to obfuscate a key used in HDL file encryption. The RSA is defined by the public-private key pair. You must be familiar with both keys in order to perform RSA decryption.

### HDL File Encryption Flow

The current software version supports encryption of a single HDL source file per a single command.

The overall HDL file encryption flow is summarized in these steps:

- ▶ The source file of the IP design is AES encrypted using a symmetric Session key. The AES encryption uses CBC-128 or CBC-256 algorithm. In the source files, this section is referred to as a data block.
- ▶ The Session key is RSA encrypted using the vendor's Public Key. In the source files, this section is referred to as a key block. Multiple key blocks may be present in the source file.


- ▶ The encrypted Session key and the encrypted design are merged to file generally named the Encrypted RTL

Each encrypted source file contains one or more data blocks. Each data block is associated with one or more key blocks. The number of key blocks depends on the number of provided vendor's public key.

#### NOTE

To decrypt an encrypted source file, you must perform the IP encryption flow steps in the reverse order.

During the next step in the design flow, typically a synthesis, the Encrypted RTL is decrypted to access the original IP design, as shown in the following figure.

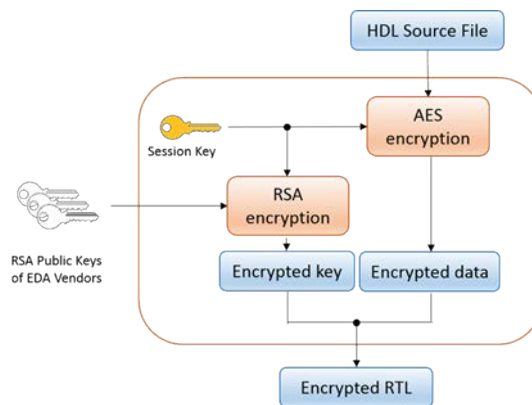

By separating the encryption of data and key, you can use public keys from different vendors to encrypt same HDL file.

For more information on how to perform HDL encryption, refer to [“Running HDL Encryption from the Command Line”](#) on page 1679.

**See Also** ▶ [“HDL File Encryption Steps”](#) on page 162

- ▶ [“Secure Objects in the Design”](#) on page 167

## HDL File Encryption Steps

This section provides step-by-step instructions on how to encrypt an HDL file.

The Radiant software provides the key templates you can simply drag-and-drop into an HDL file. Each key template is specific to an EDA vendor providing the value of a public key.

To view the templates in the Radiant software, choose **Source Template > Verilog > Encryption Templates** and select the EDA specific key template.

Currently, the Radiant software supports these encryption templates:

- ▶ Lattice Semiconductor
- ▶ Synplicity-1
- ▶ Synplicity-2
- ▶ Mentor
- ▶ Synopsys
- ▶ Cadence
- ▶ Combined Sample: provides an example of file holding multiple keys.

### Step 1: Prepare the HDL file

Annotate the HDL source file with protected pragmas. Protected pragmas provide information regarding type of the key used to encrypt the HDL file, the name of the key, and the encryption algorithm.

In this example, HDL source file will be encrypted by the Lattice Public Key.

```
`pragma protect version=1
`pragma protect encoding=(enctype="base64")

// optional information
`pragma protect author="<Your_Name>"
`pragma protect author_info="<Your_Information>"
```

### Step 2: Specify the portion of HDL source file that shall be encrypted

Annotate the HDL file to specify the encryption. Only the portion defined within these protected pragmas is encrypted.

```
`pragma protect begin
// HDL portion that shall be encrypted
`pragma protect end
```

### Step 3: Prepare Key

Define the key with which the HDL file should be encrypted. Each key definition must contain the following information:

- ▶ key\_keyowner: specify the owner of the key
- ▶ key\_keyname: specify the name of the key. Same owner may provide multiple keys.
- ▶ key\_keymethod: specify the used cryptographic algorithm. Current version supports RSA algorithm.
- ▶ key\_public\_key: specify the exact value of the key.

The key definition can be done in two ways:

#### Defining the key in the key.txt file:

The public encryption key or keys can be defined in any .txt file. The key file may contain a single public key or a list of all available public keys. In the

Radiant software, all common EDA vendor public keys are located in `<Radiant_installed_directory>/isfpfga/data/key.txt` file. You can also use the source template to get the encryption templates.

The following is an example of Lattice Public Key defined in key.txt file:

```
`pragma protect key_keyowner= "Lattice Semiconductor"
`pragma protect key_keyname= "LSCC_RADIANT_2"
`pragma protect key_method="rsa"
`pragma protect key_public_key
MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEA0EZKUUhbuB6vSsc70hQJ
iNAWJR5unW/OWp/LFI71eA13s9bOYE2O1Kdxbai+ndIeo8xFt2btzetUzuR6Srvh
xR2Sj9BbW1QT0o2u8JfzD3X7AmRv1wKRX8708DPo4LDHZMA3qh0kfDDWkp2Eausf
LzE2cVxgq7fy/bDhUeN8xKQCSKJ7aguG6kOI6ROoZz211jzDLUQzhm2qYF8SpU1o
tD8/uw53wLfSuhR3MBOB++xcn2imvSLqdgHWuhX6CtZIx5CD4y8inCbcLy/0Qrf6
sdTN5SAg2OZhjeNdzmqSWqhL2JTDw+Ou2fWzhEd0i/HN0y4NM6h9fNn8nqxRyE7
IwIDAQAB
```

### Defining the key directly in the HDL file:

You may define the Public Key directly in the HDL file. You may define one or more keys.

```
`pragma protect key_keyowner= "Lattice Semiconductor"
`pragma protect key_keyname= "LSCC_RADIANT_2"
`pragma protect key_method="rsa"
`pragma protect key_public_key
MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEA0EZKUUhbuB6vSsc70hQJ
iNAWJR5unW/OWp/LFI71eA13s9bOYE2O1Kdxbai+ndIeo8xFt2btzetUzuR6Srvh
xR2Sj9BbW1QT0o2u8JfzD3X7AmRv1wKRX8708DPo4LDHZMA3qh0kfDDWkp2Eausf
LzE2cVxgq7fy/bDhUeN8xKQCSKJ7aguG6kOI6ROoZz211jzDLUQzhm2qYF8SpU1o
tD8/uw53wLfSuhR3MBOB++xcn2imvSLqdgHWuhX6CtZIx5CD4y8inCbcLy/0Qrf6
sdTN5SAg2OZhjeNdzmqSWqhL2JTDw+Ou2fWzhEd0i/HN0y4NM6h9fNn8nqxRyE7
IwIDAQAB
```

If the key is defined directly in the HDL file, you don't need to provide `-k` option in `encrypt_hdl` command.

### Note

The key defined directly in HDL source file has preference over the key defined in the key.txt file.

### Step 4: Select the encryption algorithm for data encryption

The Radiant software supports both, a 128-bit and a 256-bit advanced encryption standard (AES) with CBC mode. Select the type of algorithm by defining one of the two options. The default is set to 256-bit AES with CBC mode.

```
`pragma protect data_method="aes128-cbc"
```

or

```
`pragma protect data_method="aes256-cbc"
```

### Step 5: Run 'encrypt\_hdl' Tcl Command



In the Tcl console window, type in the command to encrypt an HDL file. The option '-k' may or may not be used depending the location of the key file. The language selection '-l' and creation of new output file '-o' are optional; selects Verilog by default. If you don't specify the output file, the tool generates a new output file named <input\_file\_name>\_enc.v.

### Note

If you encounter an error such as 'ERROR - Can't open '<file\_name>.v'', you should point to the correct file path and perform the encrypt\_hdl command.

---

### If key was defined in the key.txt file:

The command will encrypt the HDL file with all keys defined in the key.txt file.

```
encrypt_hdl -k <keyfile> -l <verilog | vhdl> -o <output_file>  
<input_file>
```

### If key was defined directly in the HDL file:

```
encrypt_hdl -l <verilog | vhdl> -o <output_file> <input_file>
```

The encrypted file is located at the path specified in the encrypt\_hdl command.

### Step 6: Activate the encrypted HDL source file in Project File

In the Radiant software File List, add the generated file into the project. Right-click on the encrypted file and select **Include in Implementation**.

To view example of Verilog or VHDL pragma annotated HDL source file, visit ["Defining Pragmas" on page 1681](#).

### See Also

- ▶ ["Running HDL Encryption from the Command Line" on page 1679](#)

# Synthesizing Encrypted IP

The Radiant software supports Lattice Synthesis Engine (LSE) and Synplify Pro synthesis tool. To synthesize an encrypted design, the synthesis tool must decrypt the encrypted design prior the synthesis. Depending on the selected synthesis tool, LSE or Synplify Pro, you must provide the valid vendor's public key to process this step.

You may observe these common issues due to the flow obfuscation:

## The design is encrypted with an incorrect key

The user observes an error message and synthesis process fails.

❌ 1025000 Synthesis ERROR - No supported key informations.

The error appears when there is a mismatch between a key used to encrypt the IP design and the vendor's public key.

## The design is missing an encryption key

The user observes an error message and synthesis process fails.

❌ 1025000 Synthesis ERROR - No supported key informations.

The error appears when the user encrypts the IP with only Synplify Pro Public Key. During the synthesis step, given you have selected the Synplify Pro synthesis tool, the design is decrypted and synthesized as expected.

If source HDL files are encrypted, the Synplify Pro result is also encrypted. To decrypt it in Postsyn, the Synplify Pro result should be encrypted by the Lattice Public Key, such as LSCC\_RADIANT\_3. Otherwise, Postsyn is not able to decrypt.

When running the post-synthesis flow, the Lattice Public Key must be present to properly decrypt the synthesized IP. You must add the missing public key to the key file or directly define it in the HDL source file and rerun the encryption tool.

## Note

It is recommended to always define and encrypt your source files with both, Lattice and Synplify Pro public keys. This ensures that your design is processed through the full Radiant software flow independent of the selection of the synthesis tool.

## See Also

► ["Key File" on page 1685](#)

## Cross-probing in Encrypted Design

The Radiant software supports a path cross-probing between Netlist Analyzer, Placement Mode, and Routing Mode.

In the **Reports** tab, view any analysis report and identify a path to view. If cross-probing is available, the specific icon tools become visible, as shown in the following figure.

**Figure 7: Available tools for Path Cross-probing**

Shown in:  Netlist Analyzer  Floor Planner  Physical View

Click on the icon and the specific tool opens with the selected path view.

Encrypted objects are not visible and you cannot cross-probe them. In the case of an encrypted design, the path cross-probing is unable to view. The message “Cannot open encrypted design.” appears.

### Note:

Cross-probing to Netlist Analyzer is available only if selected synthesis tool is Lattice LSE.

## Secure Objects in the Design

Radiant software protects all aspects of the IP at all times while allowing the tool to work for its intended purpose. The tool also has an option to correct overprotected part of the design if proven to be unusable without certain visibility, such as external ports of the design.

You can choose the level of the design obfuscation.

- ▶ Unsecured design: The design consists of the original HDL source files.
- ▶ Partially-secured design: The design consists of mixture of encrypted HDL source file(s) and original HDL source files.
- ▶ Fully-secured design: The entire design is encrypted.

When a design is encrypted, the Radiant tools reflect the changes in displaying the secured objects. Secured objects include instances, nets, ports, and pins. Clock related objects are typically not encrypted.

In the case of the post-place & route debug flow in Reveal, the previously routed design is not altered when a new post-PAR project is started. The post-PAR debug cores are synthesized, mapped, and place & routed using unused fabric logic.

### Visibility

The input and output names inside of the protected design parts contain no reference to real name and are not recognized as names inside of IP.

### **Messaging**

Design names, RTL identifiers names of IP, and RTL source reference are not referenced in messages.

### **Report files**

Design names, RTL identifiers names of IP, and RTL source reference are not referenced in report files.

### **GUI/Tcl Interface**

Design names, RTL identifiers names of IP, and RTL source reference are not referenced in GUI.

The following tools have been enhanced to support this feature.

- ▶ [“Hierarchical View” on page 168](#)
- ▶ [“Netlist Analyzer” on page 169](#)
- ▶ [“Reveal Inserter” on page 170](#)
- ▶ [“Timing Constraint Editor” on page 171](#)
- ▶ [“Device Constraint Editor” on page 172](#)
- ▶ [“Placement Mode” on page 174](#)
- ▶ [“Routing Mode” on page 175](#)
- ▶ [“Power Calculator” on page 176](#)
- ▶ [“Timing Analyzer” on page 177](#)

### **See Also**

- ▶ [“Running HDL Encryption from the Command Line” on page 1679](#)

## **Hierarchical View**

Hierarchical view allows you to view the overall design structure.

Unencrypted design allows you to view all design instances and expand all instance’s sub-folders. In partially secured designs, only pragma defined section of an HDL file is encrypted. The Hierarchical view shows the design icon  next to the partially encrypted source file. The sub-folders of this file are no longer viewable.

In fully secured design, the entire module is encrypted, and the Hierarchical view shows the secured design icon  next to the encrypted source files. The instance is hidden from viewing its sub folder.

```

▼ top - top_en.v
  serial_reg_custom_uniq_2(U_serial_reg_custom_in_1B) - top_en.v
  serial_reg_custom_uniq_1(U_serial_reg_custom_in_1A) - top_en.v
  ▼ serial_reg_custom_final(U_serial_reg_custom_out_1) - top_en.v
    reg_custom(U_reg_custom_out) - top_en.v
    reg_custom(U_reg_custom_in) - top_en.v
  add_custom(U_add_custom_1) - top_en.v

```

### See Also

► [“Secure Objects in the Design” on page 167](#)

## Netlist Analyzer

Netlist Analyzer produces a schematic view of your design. Once design is partially or fully encrypted, the encrypted objects and in some cases, the entire design, become hidden from the schematic view.


The visibility of secured objects is described below. In unsecured designs, the entire hierarchical structure is visible. In partially secured designs, the ports of encrypted objects are visible; however, you won't be able to view the content and/or sub-structure of a secured object. In fully secured design, the entire design is encrypted; thus, the Netlist Analyzer is unable to produce schematic view and displays an error message instead.

**Table 6: Secured Objects in Netlist Analyzer**

| Object Name  | Unsecured Design                                                                    | Partially Secured Design                                                            | Fully Secured Design                                                                  |
|--------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Instances    |  |  |  |
| ► Name       | Keeps the original name.                                                            | Keeps the original name.                                                            | Keeps the original name.                                                              |
| ► Visibility | Drop-down icon allows to expand and view the sub-directories.                       | Unable to view or expand its sub-hierarchy.                                         | Unable to view or expand its sub-hierarchy.                                           |
| Ports        | Visible                                                                             | Visible                                                                             | Visible                                                                               |
| Nets         | Visible                                                                             | Hidden                                                                              | Hidden                                                                                |

In the following figure, two serial\_reg\_custom modules are fully encrypted and serial\_reg\_custom\_final module is partially encrypted. You are only able to view the peripheral I/O ports.

Be aware of visual representation of secured and unsecured module.

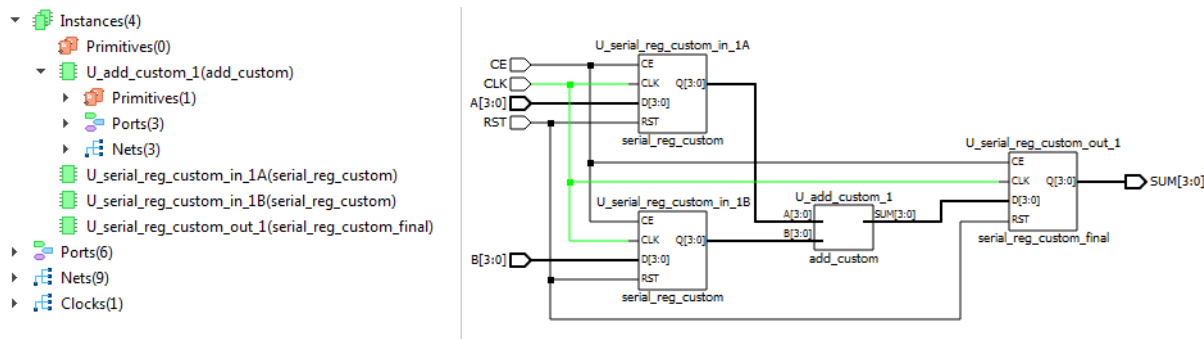

In specific cases when the entire design is encrypted, the Netlist Analyzer is unable to show the design. Instead, an error message appears.



### See Also

► [“Secure Objects in the Design” on page 167](#)

## Reveal Inserter

Reveal Inserter performs the logic analysis on your design. When design is partially or fully encrypted, the secured signals are not available for viewing.


The visibility of secured objects is described below.

**Table 7: Secured Objects in Reveal Inserter**

| Object Name  | Unsecured Design                                              | Partially Secured Design | Fully Secured Design     |
|--------------|---------------------------------------------------------------|--------------------------|--------------------------|
| Instances    |                                                               |                          |                          |
| ► Names      | Keeps the original name.                                      | Keeps the original name. | Keeps the original name. |
| ► Visibility | Drop-down icon allows to expand and view the sub-directories. | Hidden                   | Hidden                   |
| Ports        | Visible                                                       | Visible                  | Visible                  |
| Nets         | Visible                                                       | Hidden                   | Hidden                   |

The visual representation of unsecured and secured objects visible in Design Tree pane of the Reveal Inserter. As shown in the following figure, the

secured modules are hidden from the hierarchical structure of partially encrypted design.

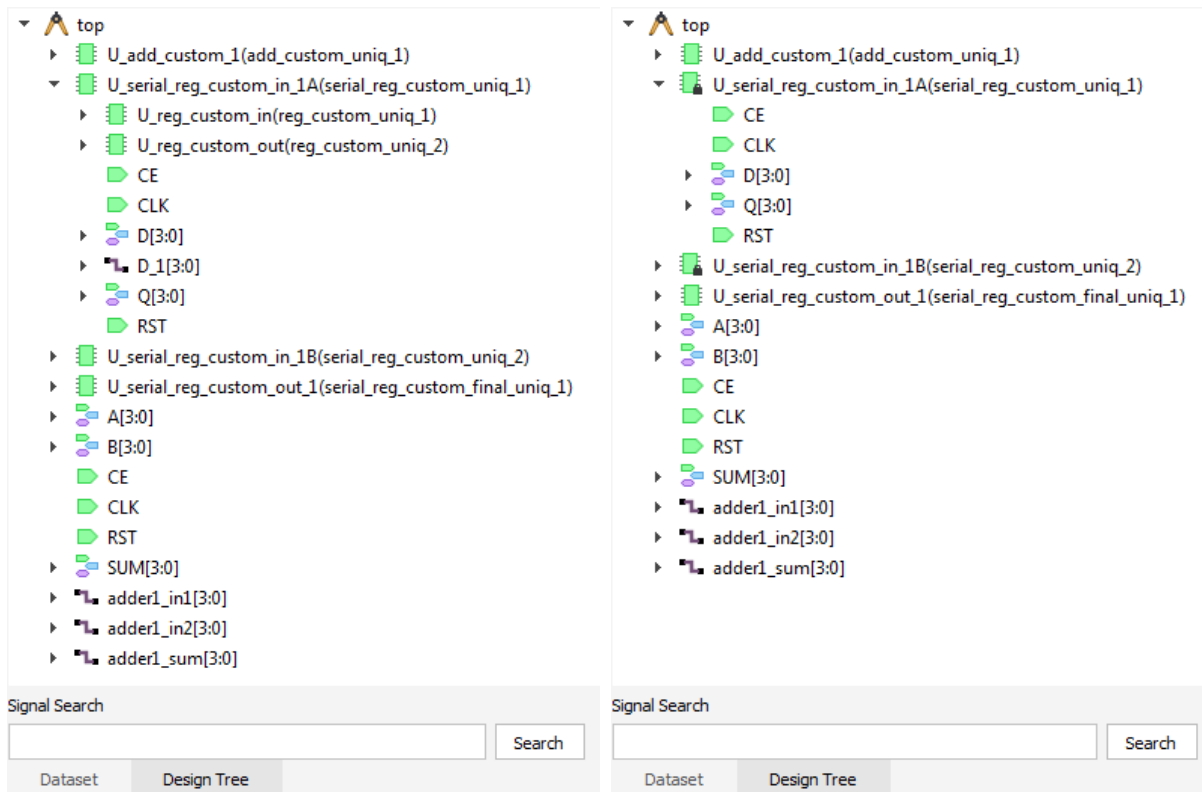

In specific cases when the entire design is encrypted, the Reveal Inserter is unable to show the design. Instead, an error message appears.

2120423 Project ERROR - Cannot load an encrypted design!

When designing for Nexus and Avant, you can use the Post-Place & Route debug flow to insert debug logic after running place and route. Also referred to as non-intrusive debugging, you can add your debug core without having to alter your original design that has previously completed synthesis, mapping and place & route.

### See Also

- ▶ [“Secure Objects in the Design” on page 167](#)
- ▶ [“Post-Place & Route Debug Flow” on page 658](#)

## Timing Constraint Editor

Timing Constraint Editor is updated to support encrypted design.

In both constraint editors, Pre-Synthesis Constraint Editor and Post-Synthesis Timing Constraint Editor, the tool will not write protected design names into constraints.

**Table 8: Secured Objects in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor**

| Object Name                                                   | Unsecured Design | Partially Secured Design | Fully Secured Design |
|---------------------------------------------------------------|------------------|--------------------------|----------------------|
| Instance                                                      | Visible          | Hidden                   | Hidden               |
| Net                                                           | Visible          | Hidden                   | Hidden               |
| Pin                                                           | Visible          | Hidden                   | Hidden               |
| Clock related Pins, Ports, and Nets                           | Visible          | Visible                  | Visible              |
| Memory Instance                                               | Visible          | Visible                  | Visible              |
| Modules and Registers used in synthesis attribute constraints | Visible          | Visible                  | Visible              |

#### IMPORTANT

The user must not encrypt designs that require to set the constraints at the user's top level.

#### See Also

► [“Secure Objects in the Design” on page 167](#)

## Device Constraint Editor

Device Constraint Editor is updated to support encrypted design.

In both constraint editors, Pre-Synthesis Timing Constraint Editor and Post-Synthesis Timing Constraint Editor, the tool will not write protected design names into constraint.

The user must not encrypt designs that require setting the constraints at the top level.

**Table 9: Secured Objects in Device Constraint Editor**


| Object Name | Unsecured Design | Partially Secured Design       | Fully Secured Design           |
|-------------|------------------|--------------------------------|--------------------------------|
| Instance    | Visible          | Hidden                         | Hidden                         |
| Net         | Visible          | Replaced with 'secured_signal' | Replaced with 'secured_signal' |



**Table 9: Secured Objects in Device Constraint Editor**

| Object Name                                                   | Unsecured Design | Partially Secured Design | Fully Secured Design |
|---------------------------------------------------------------|------------------|--------------------------|----------------------|
| Pin                                                           | Visible          | Hidden                   | Hidden               |
| Clock related Pins, Ports, and Nets                           | Visible          | Visible                  | Visible              |
| Memory Instance                                               | Visible          | Visible                  | Visible              |
| Modules and Registers used in synthesis attribute constraints | Visible          | Visible                  | Visible              |

In the following figure, the signal names were replaced by 'secured\_signal' names.

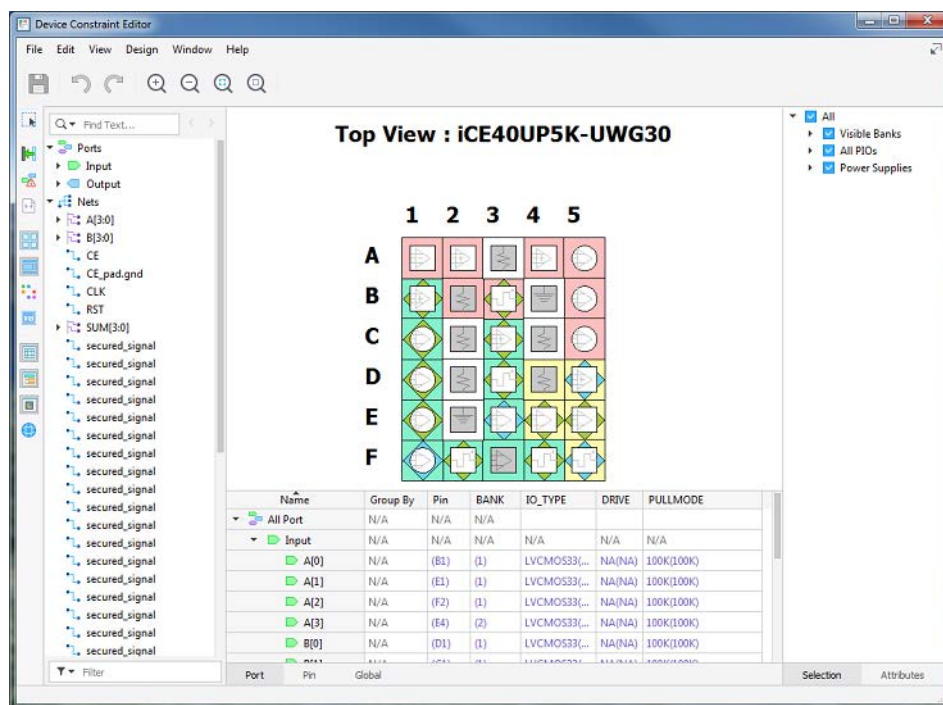

### See Also

- ▶ [“Secure Objects in the Design” on page 167](#)

## Physical Designer

The Physical Designer is a combined GUI interface that features:

- ▶ [“Placement Mode” on page 174](#) – Provides a large-component layout for your design. When design is partially or fully encrypted, the secured signals are not available for viewing.
- ▶ [“Routing Mode” on page 175](#) – Provides a detailed layout of your design. When design is partially or fully encrypted, secure objects are renamed or hidden. The logic block of secured object is not viewable.

The Physical Designer can be accessed through **Tools > Physical Designer** or by clicking on the toolbar icon . Upon opening, the GUI displays the Placement mode.


## Placement Mode

Placement Mode provides a large-component layout for your design. When design is partially or fully encrypted, the secured signals are not available for viewing. Additionally, the secured components and nets cannot be found using the “Find” dialog box.

**Table 10: Secured Objects in Placement Mode**

| Visibility                 | Unsecured Design | Partially Secured Design                                                                             | Fully Secured Design                                                                                 |
|----------------------------|------------------|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Component                  | Visible          | Hidden                                                                                               | Hidden                                                                                               |
| Instance                   | Visible          | Replaced with 'secured_instance'                                                                     | Replaced with 'secured_instance'                                                                     |
| Grouping Secured Instances | Allowed          | Not allowed.<br>Secured instances are hidden in Available Instances list of the Create GROUP window. | Not allowed.<br>Secured instances are hidden in Available Instances list of the Create GROUP window. |
| Logic Block View           | Enabled          | Disabled                                                                                             | Disabled                                                                                             |

In following the figure, the signal and instance names were replaced by 'secured\_instance'.

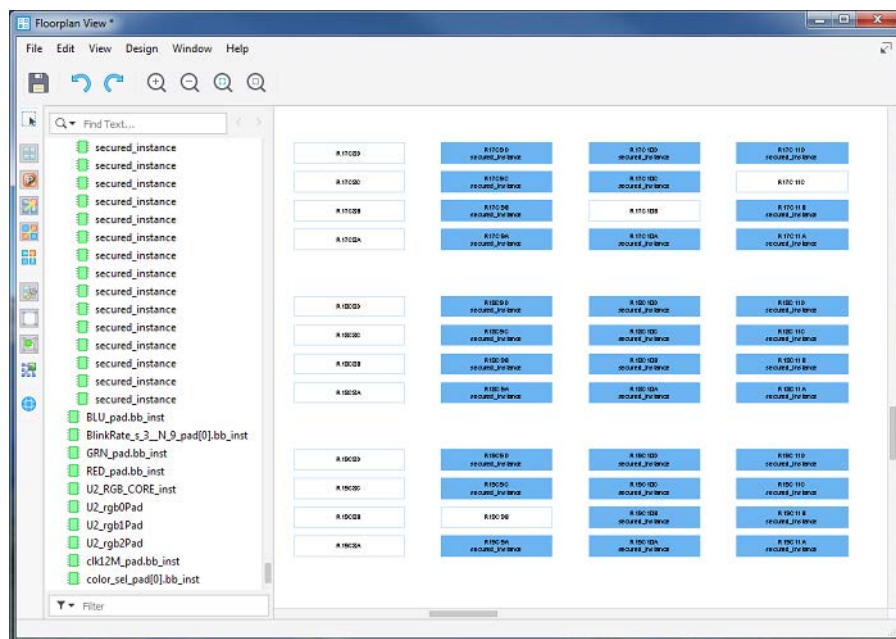

**See Also**

► [“Secure Objects in the Design” on page 167](#)


## Routing Mode

Routing Mode shows a detailed layout of your design. When design is partially or fully encrypted, secure objects are renamed or hidden. The logic block of secured object is not viewable.

**Table 11: Secured Objects in Routing Mode**

| Visibility                 | Unsecured Design | Partially Secured Design         | Fully Secured Design             |
|----------------------------|------------------|----------------------------------|----------------------------------|
| Primitive                  | Visible          | Available with a hidden name     | Available with a hidden name     |
| Component                  | Visible          | Hidden                           | Hidden                           |
| Instance                   | Visible          | Replaced with 'secured_instance' | Replaced with 'secured_instance' |
| Nets                       | Visible          | Replaced with 'secured_signal'   | Replaced with 'secured_signal'   |
| Grouping Secured Instances | Allowed          | Not allowed                      | Not allowed                      |
| Logic Block View           | Enabled          | Disabled                         | Disabled                         |

The following figure shows the Routing Mode figure with SLICES were replaced by 'secured\_instance' due to encrypted design

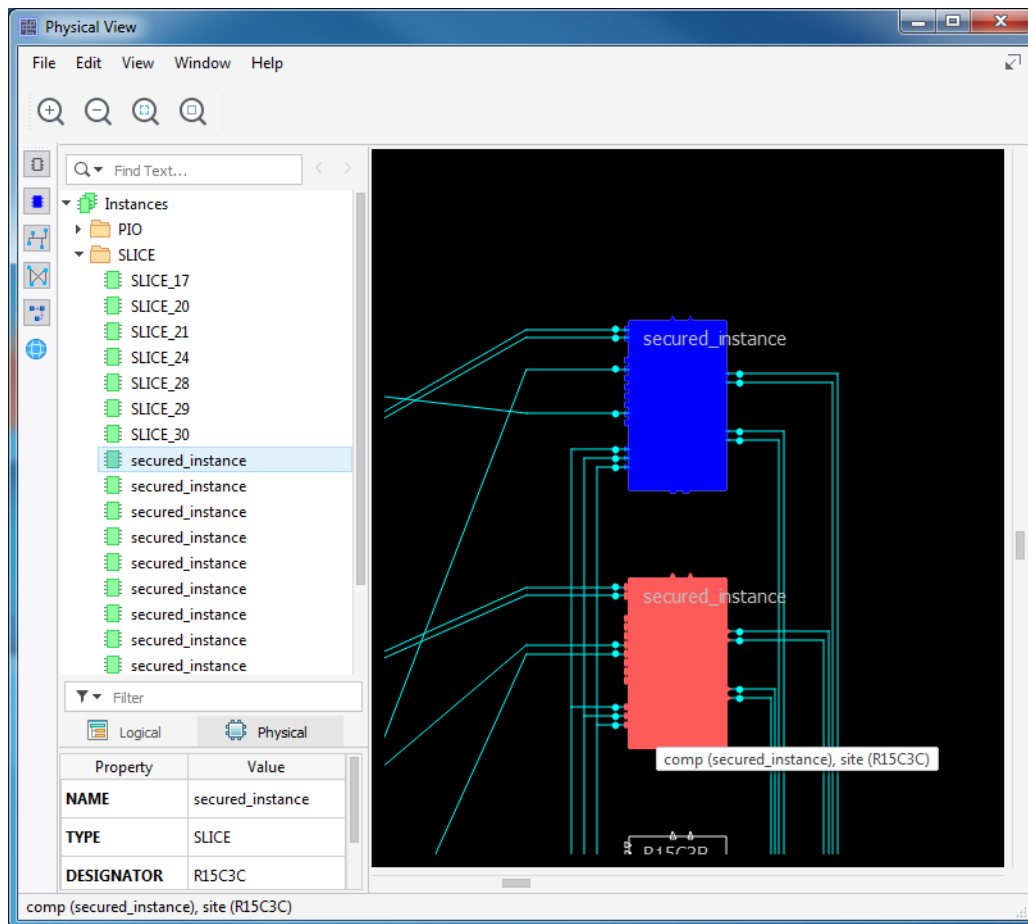

### See Also

- ▶ [“Secure Objects in the Design” on page 167](#)

## Power Calculator

Power Calculator estimates the power dissipation in a design. Typically, Power Calculator displays the design objects relative to clock. When design is partially or fully encrypted, the encrypted signal names are hidden with the exception of clock related nets.

### See Also

- ▶ [“Secure Objects in the Design” on page 167](#)

# Timing Analyzer

The timing report file .twr and .twl used by Timing Analyzer is updated to support secured designs.

**Constraint Table** The secured pin name is replaced with “SECURED\_PIN.”

| Constraint |                                                                                                                   |       |
|------------|-------------------------------------------------------------------------------------------------------------------|-------|
| 1          | create_clock -name {UI/_/lsccl_pll_inst/clk12M} -period 83.33333333333333 [get_nets clk12M_c]                     | setup |
| 2          | create_generated_clock -name {UI/clk24M} -source [get_pins {SECURED_PIN}] -multiply_by 2 [get_pins {SECURED_PIN}] | setup |
| 3          | create_clock -name {UI/_/lsccl_pll_inst/clk12M} -period 83.33333333333333 [get_nets clk12M_c]                     | hold  |
| 4          | create_generated_clock -name {UI/clk24M} -source [get_pins {SECURED_PIN}] -multiply_by 2 [get_pins {SECURED_PIN}] | hold  |

**Paths for All Timing Constraints Table** The secured pin name is replaced with “SECURED\_PIN.”

| Paths summary : 10 timing path(s) |             |             |                       |       |        |              |                   |               |
|-----------------------------------|-------------|-------------|-----------------------|-------|--------|--------------|-------------------|---------------|
|                                   | Start Point | End Point   | Setup/Hold Constraint | Slack | Delay  | Source Clock | Destination Clock | Analysis Type |
| 1                                 | SECURED_PIN | SECURED_PIN | 41.666                | 3.478 | 38.188 | UI/clk24M    | UI/clk24M         | setup         |
| 2                                 | SECURED_PIN | SECURED_PIN | 41.666                | 3.624 | 38.042 | UI/clk24M    | UI/clk24M         | setup         |
| 3                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.020 | 37.646 | UI/clk24M    | UI/clk24M         | setup         |
| 4                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.166 | 37.500 | UI/clk24M    | UI/clk24M         | setup         |
| 5                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.351 | 37.315 | UI/clk24M    | UI/clk24M         | setup         |
| 6                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.378 | 37.288 | UI/clk24M    | UI/clk24M         | setup         |
| 7                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.497 | 37.169 | UI/clk24M    | UI/clk24M         | setup         |
| 8                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.524 | 37.142 | UI/clk24M    | UI/clk24M         | setup         |
| 9                                 | SECURED_PIN | SECURED_PIN | 41.666                | 4.576 | 37.090 | UI/clk24M    | UI/clk24M         | setup         |
| 10                                | SECURED_PIN | SECURED_PIN | 41.666                | 4.722 | 36.944 | UI/clk24M    | UI/clk24M         | setup         |

**Path Detail** The secured pin name is replaced by “SECURED\_PIN.”

| Path Detail                                            |                                |
|--------------------------------------------------------|--------------------------------|
| Report Information                                     |                                |
| Path Begin                                             | : SECURED_PIN                  |
| Path End                                               | : SECURED_PIN                  |
| Source Clock                                           | : UI/clk24M                    |
| Destination Clock                                      | : UI/clk24M                    |
| Logic Level                                            | : 59                           |
| Delay Ratio                                            | : 80.7% (route), 49.3% (logic) |
| Setup Constraint                                       | : 41.666 ns                    |
| Path Slack                                             | : 3.478 ns (Passed)            |
| Destination Clock Arrival Time (UI/clk24M:R#2): 41.666 |                                |
| + Master Clock Source Latency                          | : 0.000                        |
| - Destination Clock Uncertainty                        | : 0.000                        |
| + Destination Clock Path Delay                         | : 5.660                        |
| - Setup Time                                           | : 0.199                        |
| End-of-path required time ( ns )                       | : 47.127                       |
| Source Clock Arrival Time (UI/clk24M:R#1): 0.000       |                                |
| + Master Clock Source Latency                          | : 0.000                        |
| + Source Clock Path Delay                              | : 5.660                        |
| + Data Path Delay                                      | : 37.989                       |
| End-of-path arrival time ( ns )                        | : 43.649                       |

**Data Path Table** The secured pin name is replaced by “SECURED\_PIN”, secured signal name is replaced by “SECURED\_SIGNAL.”

| Data Path |                          | Clock Paths    |                     |       |              |        |
|-----------|--------------------------|----------------|---------------------|-------|--------------|--------|
|           | Name                     | Cell/Site Name | Delay Name          | Delay | Arrival Time | Fanout |
| 1         | SECURED_PIN->SECURED_PIN | SLICE_R25C11C  | CLK_TO_Q1_DELAY     | 1.391 | 7.051        | 3      |
| 2         | SECURED_SIGNAL           |                | NET DELAY           | 2.622 | 9.673        | 1      |
| 3         | SECURED_PIN->SECURED_PIN | SLICE_R24C9C   | C0_TO_F0_DELAY      | 0.450 | 10.123       | 1      |
| 4         | SECURED_SIGNAL           |                | NET DELAY           | 3.033 | 13.156       | 1      |
| 5         | SECURED_PIN->SECURED_PIN | SLICE_R23C7A   | C1_TO_COUT1_DELAY   | 0.344 | 13.500       | 2      |
| 6         | SECURED_SIGNAL           |                | NET DELAY           | 0.000 | 13.500       | 1      |
| 7         | SECURED_PIN->SECURED_PIN | SLICE_R23C7B   | CIN0_TO_COUT0_DELAY | 0.278 | 13.778       | 2      |
| 8         | SECURED_SIGNAL           |                | NET DELAY           | 0.000 | 13.778       | 1      |
| 9         | SECURED_PIN->SECURED_PIN | SLICE_R23C7B   | CIN1_TO_COUT1_DELAY | 0.278 | 14.056       | 2      |
| 10        | SECURED_SIGNAL           |                | NET DELAY           | 0.000 | 14.056       | 1      |
| 11        | SECURED_PIN->SECURED_PIN | SLICE_R23C7C   | CIN0_TO_COUT0_DELAY | 0.278 | 14.334       | 2      |
| 12        | SECURED_SIGNAL           |                | NET DELAY           | 0.000 | 14.334       | 1      |
| 13        | SECURED_PIN->SECURED_PIN | SLICE_R23C7C   | CIN1_TO_COUT1_DELAY | 0.278 | 14.612       | 2      |

### See Also

► [“Secure Objects in the Design” on page 167](#)

## Securing the Bitstream

Bitstream security enables various options of soft and hard IP obfuscations during the bitstream generation. The type of bitstream encryption depends on the key generated in the Bitstream Security Settings tool and the status of your IP license.

If IP license is detected during the Radiant software Bitstream File generation process, the bitstream may be encrypted by user-provided AES key, Bitstream Security Settings tool generated key, or it is not encrypted. Various types of keys for bitstream encryption are generated in [“Bitstream Security Settings Tool for Nexus Devices” on page 179](#).

If IP license is not detected and you wish to perform the IP evaluation only, before generating the bitstream file, you must first set the IP Evaluation strategy. Refer to [“Bitstream Options” on page 800](#). If the IP Evaluation strategy is enabled, Radiant software enables Soft IP timer to allow usage of temporary IP license. During the evaluation period, the bitstream is always encrypted with Lattice Soft IP Evaluation Key, and if necessary, overwrites user-provided AES key. Alternative types of keys for bitstream encryption can be generated in [Bitstream Security Settings Tool for Nexus Devices](#), assuming the Lattice Soft IP Evaluation Key is enforced.

### IMPORTANT

During the IP Evaluation, the bitstream is always encrypted with Lattice Soft IP Evaluation Key. The Lattice Soft IP Evaluation Key has a precedence over user-provided AES key.

### See Also


- ▶ [“Bitstream Security Settings Tool for Nexus Devices” on page 179](#)

## Bitstream Security Settings Tool for Nexus Devices

The Bitstream Security Settings tool (Security GUI) allows you to generate/verify keys that are used for bitstream obfuscation.

Security GUI provides the user entry for Password Protection (128-bit device password), AES-256 Encryption, HMAC Authentication, and ECDSA Authentication.

User login password protection is required in Security GUI. You can either define a new password or use the preset default LATTICESEMI password.

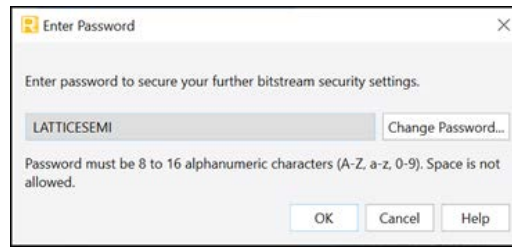


Security GUI generates various output key files that are user login password protected:

- ▶ Security Tool project file (.secproj), which is encrypted by user login password.
- ▶ Password Protection Key file (.key) contains 128-bit device password.
- ▶ Encryption Key file (.bek) contains 256-bit AES key, which is encrypted by user login password.
- ▶ Authentication Private Key file (.prv, .pem, or .der) contains either:
  - ▶ 256-bit Private Key for ECDSA Authentication.
  - ▶ 256-bit Signature for ECDSA Authentication.
  - ▶ 256-bit HMAC Key for HMAC Authentication.
- ▶ Authentication Public Key file (.pub, .pem, or .der) contains 512-bit ECDSA Public Key.

### Note:

- ▶ The .secproj, .key, .bek, .prv, .pem, and .der files should not be edited by user.
- ▶ HMAC Authentication and ECDSA Authentication are mutually exclusive.
- ▶ The Nexus device supports the usage of compression and encryption, provided that these are not simultaneously implemented in a single bitstream. Compressing an encrypted bitstream or encrypting a compressed bitstream is not supported.

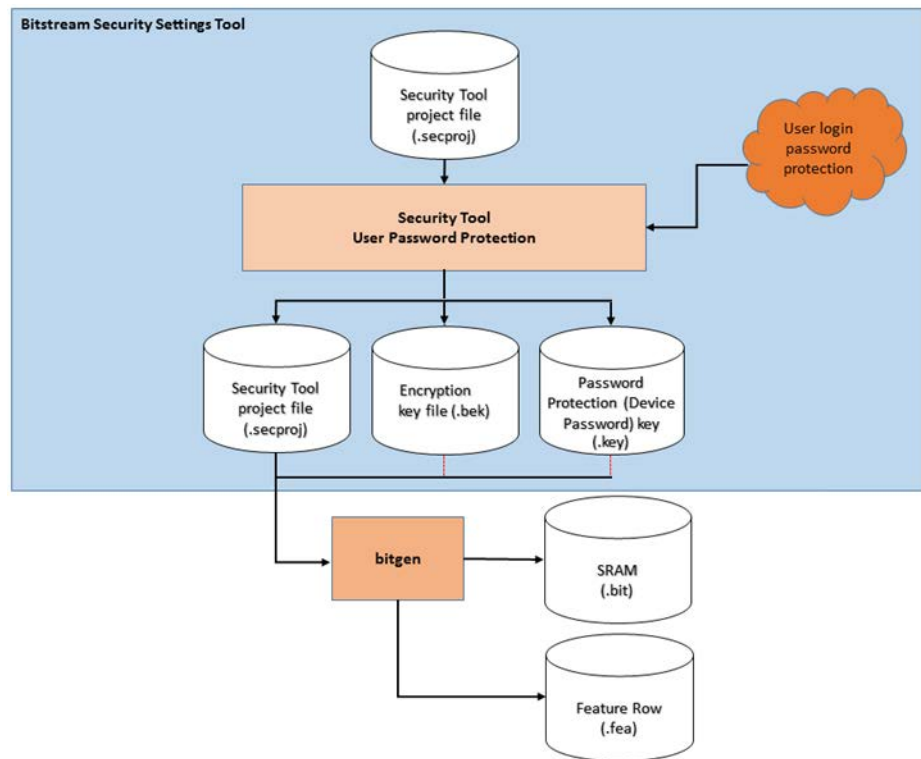

The level of bitstream obfuscation depends on the options selected in Security GUI.

### Password Protection (Device Password)

Password Protection generates a 128-bit device password key.

#### To run the Bitstream Security Settings tool and set security settings:

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.  
The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.
2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.
4. Type the password again in the Verify Password field and click **OK**.  
The Security Settings dialog box opens.
5. To set up device password, check the **Password Protection (Device Password)** option in the Security Settings dialog box.
6. Select a key format from the Key Format drop-down list, Load from file, or Default Key.



- ▶ Select a key from the Key Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
    - ▶ For hex format, type values of 0 through F, using up to 32 characters.
    - ▶ For binary format, type 0 and 1 values, using up to 128 characters.
  - ▶ Select a key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the key file and click Open.
  - ▶ Select a key by clicking on Default Key button.
    - ▶ The tool generates LATTICESEMICONDU key.
7. Click **OK** to apply the settings.

### AES Encryption

The AES-256 encryption can be used without any authentication. Since AES is a symmetric-key algorithm, the same key is used for both encrypting and decrypting the bitstream.

#### To run the Bitstream Security Settings tool and set security settings:

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.  
The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.
2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.
4. Type the password again in the Verify Password field and click **OK**.  
The Security Settings dialog box opens.
5. To set up AES key, check the **AES Encryption** option in the Security Settings dialog box.
6. Select a key format from the Key Format dropdown list, Load from file, or Auto Generated Key.
  - ▶ Select a key from the Key Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
    - ▶ For hex format, type values of 0 through F, using up to 64 characters.
    - ▶ For binary format, type 0 and 1 values, using up to 256 characters.
  - ▶ Select a key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the key file and click Open.
  - ▶ Select a key by clicking on Auto Generated Key button.
    - ▶ The tool generates a random 256-bit AES key in hex format.
7. Click **OK** to apply the settings.

8. Click **OK** to close the Security Setting dialog box.

### HMAC Authentication

A keyed-hash message authentication code (HMAC) is a specific type of message authentication code involving a cryptographic hash function and a secret cryptographic key.

To keep the HMAC Key protected, HMAC Authentication is always used together with AES Encryption. The bitstream, with the HMAC key, is first run through the SHA-2 hash function. The hashed function is then AES encrypted with the 256-bit AES key.

#### To run the Bitstream Security Settings tool and set security settings:

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.  
The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.
2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.
4. Type the password again in the Verify Password field and click **OK**.  
The Security Settings dialog box opens.
5. To set up HMAC key, check the **HMAC Authentication** option in the Security Settings dialog box.
6. Select a key format from the Key Format dropdown list, Load from file, or Auto Generated Key.
  - ▶ Select a key from the Key Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
    - ▶ For hex format, type values of 0 through F, using up to 64 characters.
    - ▶ For binary format, type 0 and 1 values, using up to 256 characters.
  - ▶ Select a key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the key file and click Open.
  - ▶ Select a key by clicking on Auto Generated Key button.
    - ▶ The tool generates a random 256-bit AES key in hex format.
7. To set up HMAC key, check the **HMAC Authentication** option in the Security Settings dialog box.
8. Select a key format from the Key Format dropdown list, Load from file, or Auto Generated Key.
  - ▶ Select a key from the Key Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
    - ▶ For hex format, type values of 0 through F, using up to 64 characters.

- ▶ For binary format, type 0 and 1 values, using up to 256 characters.
  - ▶ Select a key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the key file and click Open.
  - ▶ Select a key by clicking on Auto Generated Key button.
    - ▶ The tool generates a random 256-bit HMAC key in hex format.
9. Click **OK** to apply the settings.
- A Security Setting message informs you that the encrypted files have been produced.
10. Click **OK** to close the Security Setting dialog box.

**Note:**

---

You will see 'AES must be enabled to make HMAC authentication work.' message if you did not enable the AES Encryption.

---

**ECDSA Authentication**

The Elliptical Curve Digital Signature Algorithm (ECDSA) offers a variant of the Digital Signature Algorithm (DSA), which uses the elliptical curve cryptography. The Authentication Private key (or Signature) and Public key are used to encrypt/decrypt the bitstream with ECDSA. The Public key size is 512 bits, the Private key size is 256 bits.

The ECDSA Authentication key pair (Private key and Public key) are verified. Alternatively, the Signature with the Public key can be verified given that you provide SHA-2 Signature and Public key pair. The Signature size is 64 Bytes.

An optional feature allows to verify the SHA-2 Signature against the SHA-2 Digest.

**IMPORTANT**

---

The SHA-2 digest is used to verify Signature and Public key and is **not** saved to Security project file.

---

**To run the Bitstream Security Settings tool and set security settings:**

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.

The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.
2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.

4. Type the password again in the Verify Password field and click **OK**.  
The Security Settings dialog box opens.
5. To set up the key pair, check the **ECDSA Authentication** option in the Security Settings dialog box.
  - a. Select authentication modes from the **Authentication Mode** drop-down list.
  - b. Check the **Public key and private key** option. Public key and Private key dialog boxes are enabled. Select a key format from the Key Format dropdown list, Load from file, or Auto Generated Key Pair.
    - ▶ Select keys from the Key Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
      - ▶ For hex format, type values of 0 through F, using up to 64 characters for Private Key and 128 characters for Public Key.
      - ▶ For binary format, type 0 and 1 values, using up to 256 characters for Private Key and 512 characters for Public Key.
    - ▶ Select Public key and Private key from Load from File.
      - ▶ The Load Key from File dialog box opens, select the Public key file and click Open.
      - ▶ The Load Key from File dialog box opens, select the Private key file and click Open.
    - ▶ Select Public key and Private key by clicking on Auto Generated Key Pair button.
      - ▶ The tool generates random 512-bit Public and 256-bit Private key pair in hex format.
  - c. Check the **Public key and SHA-2 signature** option. Public key and SHA-2 signature dialog boxes are enabled. Both Public key and Signature, has size of 512 bits. Select a key format from the Key Format drop-down list or Load from file.
    - ▶ Select key and signature from the Key Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
      - ▶ For hex format, type values of 0 through F, using up to 128 characters for Public Key and Signature.
      - ▶ For binary format, type 0 and 1 values, using up to 512 characters for Public Key and Signature.
    - ▶ Select Public key and signature from Load from File.
      - ▶ The Load Key from File dialog box opens, select the Public key file and click Open.
      - ▶ The Load Key from File dialog box opens, select the Private key file and click Open.
    - ▶ (Optional) Type in the SHA-2 digest. The digest size is 256 bits. Check **Verify** to verify the SHA-2 signature against the SHA-2 digest; otherwise, Public key and Signature will be saved, but **not** verified as a valid pair.
6. Click **OK** to apply the settings.

If the key pair cannot be verified, the output encrypted files are not generated.

7. Click **OK** to close the Security Setting dialog box.

### ECDSA Authentication with AES Encryption

A merge of AES encryption/decryption with ECDSA authentication allows for additional level of bitstream obfuscation. First, the private/public key pair is used to encrypt/decrypt the bitstream with ECDSA. Second, the bitstream is encrypted/decrypted with the AES-256 key.

To generate or verify appropriate keys, follow sections [“AES Encryption” on page 181](#) and [“ECDSA Authentication” on page 183](#).

#### See Also


- ▶ [“Secure Objects in the Design” on page 167](#)
- ▶ [“Securing the Bitstream” on page 178](#)

## Bitstream Security Settings Tool for Avant Devices

The Bitstream Security Settings tool (Security GUI) allows you to generate/verify keys that are used for bitstream obfuscation.

Security GUI provides the user entry for Password Protection (128-bit device password), AES-256 Encryption, and ECDSA Authentication.

User login password protection is required in Security GUI. You can either define a new password or use the preset default LATTICESEMI password.

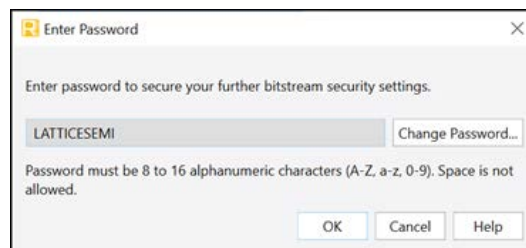


Security GUI generates various output key files that are protected by user login password:

- ▶ Security Tool project file (.secproj), which is encrypted by user login password.
- ▶ Password Protection Key file (.key) contains 128-bit device password.

- ▶ Encryption (.bek) includes AES256-GCM key and encrypted by user login password. It is only generated with security control pack with user password.
- ▶ Authentication private key file (.prv) and public key file (.pub). The .prv file contains either private key or signature.
- ▶ The feature row file (.fea) will be generated by bitgen using sysCONFIG settings in the spreadsheet view.
- ▶ Authentication Public Key file (.pub, .pem, or .der) contains 512-bit ECDSA Public Key.

#### Note:

- ▶ You should not modify the .secproj, .key, .bek, .prv, .pem, and .der files.
- ▶ ECDSA Authentication is mutually exclusive.

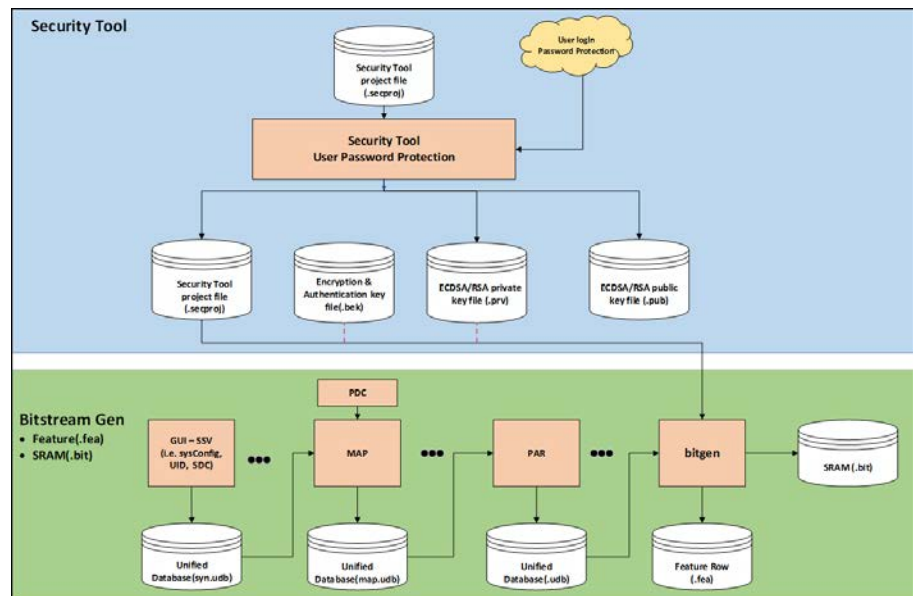

Security Tool provides the user entry for AES256-GCM encryption key, ECDSA, and RSA Authentication private key (signature) and public key. The signature with the public key can be verified, but you need to provide the SHA-2 256/384/512 for signature and public key verification. The SHA-2 256/384/512 will not be saved in the Security Tool project file.

You can enter or upload the ECDSA or RSA keys/signature with optional SHA 256/384/512, which is used for signature and public pair verification. Key/Signature will be stored internally using the Lattice format. The option to store keys with external file format is not available.

The following options are available:

- ▶ The software auto-generates the private/public key pair and fills out the keys and digest fields automatically. These fields are not editable.

Toggling between **Auto Gen Key Pair** and the other options will generate a new key pair (random) every time.


- ▶ When you choose to input a Signature, the private key field will be disabled. However, you must still supply the public key and the signature. Optionally, you can include an SHA 256/384/512 digest if the verify button is enabled for verifying the public key, signature, and SHA 256/384/512 digest.

### Password Protection (Device Password)

Password Protection generates a 128-bit device password key.

#### To run the Bitstream Security Settings tool and set security settings:

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.  
The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.
2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.
4. Type the password again in the Verify Password field and click **OK**.  
The Security Settings dialog box opens.
5. To set up device password, check the **Password Protection (Device Password)** option in the Security Settings dialog box.
6. Select a key format from **Load from File** or **Default Password**.

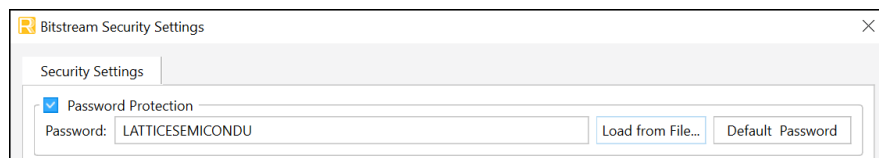

- ▶ Select a key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the key file and click Open.
  - ▶ Select a key by clicking on the **Default Password** button.
    - ▶ The tool generates LATTICESEMICOND key.
7. Click **OK** to apply the settings.

### AES Encryption

The AES-256 encryption can be used without any authentication. Since AES is a symmetric-key algorithm, the same key is used for both encrypting and decrypting the bitstream.

**To run the Bitstream Security Settings tool and set security settings:**

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.

The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.

2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.

4. Type the password again in the Verify Password field and click **OK**.

The Security Settings dialog box opens.

5. To set up AES key, check the **AES Encryption (GCM)** option in the Security Settings dialog box.

6. Select a key format from the **Format** dropdown list, **Load from File**, or **Auto Generated Key**.
  - ▶ Select a key from the Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
    - ▶ For hex format, type values of 0 through F, using up to 64 characters.
    - ▶ For binary format, type 0 and 1 values, using up to 256 characters.
  - ▶ Select a key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the key file and click Open.
  - ▶ Select a key by clicking on Auto Generated Key button.
    - ▶ The tool generates a random 256-bit AES key in hex format.
  - ▶ In the Encryption Init Vector (IV) field, you can do the following:
    - ▶ Select a key from the Format dropdown list, and then type a key in the text box.
    - ▶ Select a key by clicking on the Auto Generated Key button.
    - ▶ The Initialization Vector (IV) is a unique, randomly generated 12-byte value that guarantees the same plaintext will produce different ciphertexts with each encryption.
7. Click **OK** to apply the settings.
8. Click **OK** to close the Security Setting dialog box.

**ECDSA Authentication**

The Elliptical Curve Digital Signature Algorithm (ECDSA) offers a variant of the Digital Signature Algorithm (DSA), which uses the elliptical curve



cryptography. The Authentication Private key (or Signature) and Public key are used to encrypt/decrypt the bitstream with ECDSA. The Public key size is 1056 bits, the Private key size is 528 bits.

The ECDSA Authentication key pair (Private key and Public key) are verified. Alternatively, the Signature with the Public key can be verified given that you provide SHA-2 Signature and Public key pair. The Signature size is 132 Bytes.

An optional feature allows to verify the SHA-2 Signature against the SHA-2 Digest.

### IMPORTANT

The SHA-2 digest is used to verify Signature and Public key and is **not** saved to Security project file.

#### To run the Bitstream Security Settings tool and set security settings:

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.

The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.

2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.
4. Type the password again in the Verify Password field and click **OK**.

The Security Settings dialog box opens.

5. To set up the key pair, check the **ECDSA Authentication** option in the Security Settings dialog box.
  - a. Select authentication modes from the **Authentication Mode** drop-down list.
    - ▶ ECDSA-256
    - ▶ ECDSA-384
    - ▶ ECDSA-521
  - b. Check the **Public key and Private key** option. Public key and Private key dialog boxes are enabled. Select a key format from the **Format** dropdown list, **Load from File**, or **Auto Generated Key Pair**.

- ▶ Select keys from the Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
    - ▶ For hex format, type values of 0 through F, using up to 64 characters for Private Key and 128 characters for Public Key.
    - ▶ For binary format, type 0 and 1 values, using up to 256 characters for Private Key and 512 characters for Public Key.
  - ▶ Select Public key and Private key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the Public key file and click Open.
    - ▶ The Load Key from File dialog box opens, select the Private key file and click Open.
  - ▶ Select Public key and Private key by clicking on Auto Generated Key Pair button.
    - ▶ The tool generates random 1056-bit Public and 528-bit Private key pair in hex format.
6. Click **OK** to apply the settings.

If the key pair cannot be verified, the output encrypted files are not generated.
  7. Click **OK** to close the Security Setting dialog box.

### **RSA Authentication**

The Rivest-Shamir-Adleman Algorithm (RSA) is an asymmetric cryptographic algorithm based on the math of the modular exponentiations. The private/public key pair is used to encrypt/decrypt the bitstream stream with RSA.

The Avant family supports three different formats of RSA, which are RSA 2048, RSA 3072 and RSA 4096. Each of the RSA format supports unique signature size and public key and private key size.

#### **To run the Bitstream Security Settings tool and set security settings:**

1. In Lattice Radiant, choose **Tools > Bitstream Security Settings**.

The Enter Password dialog box opens. Because the project does not yet contain a .key file, the dialog box shows LATTICESEMI as the default password.
2. To change the password, click **Change Password** to open the Change Password dialog box.
3. In the Enter Password field, type in a password of at least eight but no more than sixteen characters.
4. Type the password again in the Verify Password field and click **OK**.

The Security Settings dialog box opens.
5. To set up the key pair, check the **RSA Authentication** option in the Security Settings dialog box.

- a. Select authentication modes from the **Authentication Mode** drop-down list.
  - ▶ RSA-2048
  - ▶ RSA-3072
  - ▶ RSA-4096
- b. Check the **Public key and private key** option. Public key and Private key dialog boxes are enabled. Select a key format from the **Format** dropdown list, **Load from File**, or **Auto Generated Key Pair**.
- ▶ Select keys from the Format dropdown list, and then type a key in the text boxes as follows, depending on the format selected:
  - ▶ For hex format, type values of 0 through F, using up to 64 characters for Private Key and 128 characters for Public Key.
  - ▶ For binary format, type 0 and 1 values, using up to 256 characters for Private Key and 512 characters for Public Key.
- ▶ You can also do one of the following:
  - ▶ Select Public key and Private key from Load from File.
    - ▶ The Load Key from File dialog box opens, select the Public key file and click Open.
    - ▶ The Load Key from File dialog box opens, select the Private key file and click Open.
  - ▶ Click on the Auto Generated Key Pair button.
    - ▶ The Public Key section contains the Exponent (e) and the Modulus (n).
    - ▶ The Private Key section Private contains the Private Exponent (d), Prime 1 (p), and Prime 2 (q), among other values.

☐ ECDSA Authentication ☒ RSA Authentication

RSA  
 Authentication Mode: RSA-2048

☒ Public key and private Key Format: Hex

**Public Key**  
 Modulus:  Enter public key for RSA-4096/3072/2048 (512/384/256 bytes)   
 Exponent:  010001

**Private Key**  
 Private Exponent (D):  Enter private key exponent for RSA-4096/3072/2048 (512/384/256 bytes)   
 Prime 1 (P):  Enter private key P for RSA-4096/3072/2048 (256/192/128 bytes)  
 Prime 2 (Q):  Enter private key Q for RSA-4096/3072/2048 (256/192/128 bytes)

6. Click **OK** to apply the settings.

If the key pair cannot be verified, the output encrypted files are not generated.

7. Click OK to close the Security Setting dialog box.

## Early-IO Frame Encryption

For designs with an Early-IO frame to perform bitstream authentication or encryption and authentication, the Early-IO Frame should be authenticated using an AES key. This section is disabled and grayed out by default. To activate, select the radio button for “Encrypt Early-IO Frame” option. You can either auto-generate the AES256-GCM key or use your own key.

- ▶ Select a key from the Format dropdown list, and type a key in the text boxes as follows, depending on the format selected:
  - ▶ For hex format, type values of 0 through F, using up to 64 characters.
  - ▶ For binary format, type 0 and 1 values, using up to 256 characters.
- ▶ Select a key from Load from File.
  - ▶ The Load Key from File dialog box opens, select the key file and click Open.
- ▶ Select a key by clicking on the Auto Generated Key button.
  - ▶ The tool generates a random 256-bit AES key in hex format.

The following restrictions apply:

- ▶ If you choose the AES-Encryption option (for encryption or encryption and authentication), the “Encrypt Early-IO Frame” section must be grayed out and non-responsive.
- ▶ If you select the authentication operation and “Encrypt Early-IO Frame”, the AES-Encryption option must be grayed out and non-responsive.



The screenshot shows a user interface for the 'Encrypt Early-IO Frame' option. At the top, there is a checked checkbox labeled 'Encrypt Early-IO Frame'. Below this, there is a 'Key:' label followed by a text input field containing the placeholder text 'Enter AES key'. To the right of the input field is a 'Format:' label followed by a dropdown menu currently set to 'Hex'. Further right are two buttons: 'Load from File...' and 'Auto Generated Key'.

## Simulating the Design

This topic explains how to perform functional and timing simulation by using the Radiant software tools and third-party simulators.

### See Also

- ▶ [“Functional Simulation” on page 194](#)
- ▶ [“Simulation Environment” on page 194](#)
- ▶ [“Creating a New Simulation Wizard Project in the Radiant Software” on page 195](#)
- ▶ [“Exporting Gate-Level Simulation Files” on page 199](#)
- ▶ [“Verifying Designs with Timing Simulation” on page 200](#)
- ▶ [“Third-Party Simulators” on page 200](#)

## Simulation in the Radiant Software

The Radiant software provides you with a wizard to create a new simulation project file (.spf) that you can use to launch a simulation in a standalone simulator. Radiant supports launching the QuestaSim™ simulator through generated scripts by the Simulation Wizard.

### See Also

- ▶ [“Functional Simulation” on page 194](#)
- ▶ [“Simulation Environment” on page 194](#)
- ▶ [“Creating a New Simulation Wizard Project in the Radiant Software” on page 195](#)
- ▶ [“Exporting Gate-Level Simulation Files” on page 199](#)

## Functional Simulation

Functional simulation is the process of verifying that the model of the design matches the functional specification, and helps identify logic errors in a design before it is programmed into a device.

### To perform functional simulation on designs modeled with Verilog HDL in the Radiant software design flow:

- ▶ Perform pre-synthesis functional simulation on your source HDL or netlist using a third party simulator.
- ▶ In Radiant, use the subprocesses **Post-Synthesis Simulation File** or **Gate-Level Simulation File** in the **Task Detail View**  to produce a simulation file for functional simulation of primitive gate-level logic during that stage in the flow.

For more information about these subprocesses, refer to [“Creating a New Simulation Wizard Project in the Radiant Software” on page 195](#).

### HDL Simulators

The Radiant software and model libraries are qualified with a variety of popular HDL simulators, including Cadence® Xcelium™, Siemens QuestaSim, and Synopsys® VCS®.

### See Also

- ▶ [“Simulation in the Radiant Software” on page 193](#)

## Simulation Environment

In Radiant, you can simulate your projects using one of the following methods:

1. **Simulation Wizard** – Generates simulation scripts for you. You can also use the **sim\_generate\_script** Tcl command to generate template files from the current Radiant project settings.
2. **QuestaSim** – Radiant includes a stand-alone version of QuestaSim for project simulation. To simulate successfully with QuestaSim, you must be familiar with scripting or the tool's graphical user interface.

For more information about scripting and commands using QuestaSim, see the QuestaSim User Manual located in the [User Guides](#) section of the Radiant Help.

3. **Third-party simulation tools** – Simulation using third-party tools require you to create your own simulation libraries using the `cmpl_libs` script. To simulate successfully with third-party tools, you must be familiar with scripting or the tool's graphical user interface.

### See Also

- ▶ [“Creating a New Simulation Wizard Project in the Radiant Software” on page 195](#)

- ▶ [“Simulation Libraries Compilation Tcl Commands” on page 1682](#)
- ▶ [“Performing Simulation with QuestaSim” on page 204](#)
- ▶ [“Third-Party Simulators” on page 200](#)

## Creating a New Simulation Wizard Project in the Radiant Software

By generating simulation scripts, Simulation Wizard simplifies the process of setting up a project for simulation. This section describes how to use the Simulation Wizard to create a simulation project (.spf) file.

---

### Note:

If your project is created with ModelSim, it will be configured as a legacy project. A dialog box will appear indicating that legacy simulation projects will be replaced by QuestaSim projects.

---

1. In the Radiant software, click **Tools > Simulation Wizard** or click the  button in the toolbar. The Simulation Wizard opens.
2. In the **Preparing the Simulator Interface** page, click **Next**.
3. In the **Simulator Project Name and Stage** page, enter the name of your project in the **Project name** text box.

In the **Project location** box, browse to the file path location where you want to save your simulation project.

When you designate a project name in this wizard page, a corresponding folder will be created in the file path you choose. If you add a subdirectory to the default file path the wizard will prompt you to create a new directory.

Click **Yes** in the dialog box that appears.

4. In the Simulation Wizard dialog box, select the **QuestaSim** simulator.

### QuestaSim Qrun Option


- ▶ If QuestaSim is selected, the **Invoke QuestaSim Qrun** can be toggled to determine if the simulation wizard project generates an argument file (<Project Name>.f) for Qrun or a do script (<Project Name>.mdo) to compile and launch the simulation.
- ▶ If you invoke Qrun for simulation, Questa will not use a project based flow to compile your design and launch the simulation. You will not be able to use the compile all button in the QuestaSim GUI to recompile your design as this GUI button is only available when you have an open project.

To recompile your design and launch simulation in a single step with Qrun, invoke Qrun with the generated argument file in the transcript window with ``qrun -f <Project Name>.f`` and Qrun will recompile files

that have been edited since the last Qrun invocation and launch the simulation.

To only perform a single step of a simulation flow, invoke Qrun with one of the -compile, -optimize, or -simulation arguments described in the Qrun user manual.

- ▶ If you do not invoke Qrun for the simulation, the Simulation Wizard will generate a do script that sets up a QuestaSim project, similar to how it did for ModelSim in previous versions of Radiant. The simulation script is different from Qrun; with project mode, the compile all button can be used in the simulator GUI.
- ▶ For more information, see the [QuestaSim GUI Reference Manual](#).

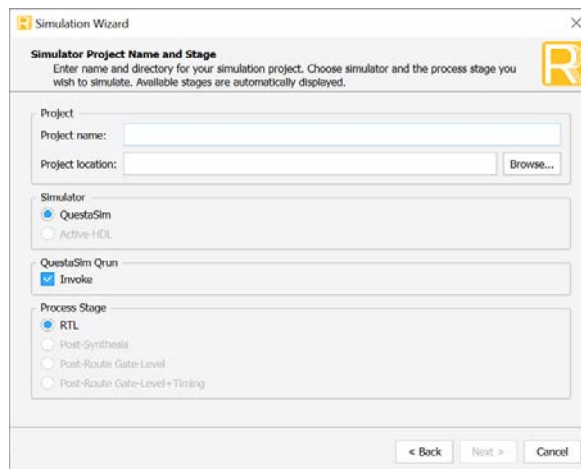

#### Note:

- ▶ If you change simulation tool, project name will not change. Any previous Simulation Wizard results will be deleted, and a new simulation will be started using new simulation files.
- ▶ Qrun is a utility to simplify the use of Questa to compile, optimize, and simulate designs by taking all input files and options and automatically executing the correct tools and command-line arguments to start a simulation. Refer to the Qrun User Manual for more information about Qrun's supported options.

5. In the **Process Stage** box, choose the stage where you want to start creating the simulation project.

The following options are valid types:

- ▶ **RTL** – The RTL option allows you to run simulation before synthesis. This option is always selectable.
- ▶ **Post-Synthesis**
  - ▶ To enable this option, you must first generate a post-synthesis simulation file (<file\_name>\_syn.vo) as follows:



In the Process Toolbar, click Task Detail View  and select **Post-Synthesis Simulation File**.

Run **Synthesize Design**.

► **Post-Route Gate-Level and Post-Route Gate-Level+Timing**

- To enable these options, you must first generate a post-routed, back-annotated simulation file (<file\_name>\_vo.vo) and a timing constraint file (<file\_name>\_vo.sdf) as follows:

In the Process Toolbar, ensure that **Gate-Level Simulation File** is selected in Task Detail View and click **Export Files**.

6. Click **Next**.

7. In the **Add and Reorder Source** page, the files included in the simulation are listed in the main **Source Files** window.


- Files will be compiled in the order they appear here, with the top file being the first to be compiled.
- You can also manually add and remove files using the   buttons at the top of the window.

By default, the **Automatically set simulation compilation file order** option is enabled.

- If this option is enabled, Radiant automatically detects the order of the simulation files. Otherwise, you have to manually specify the order of the files for your simulation using the   buttons.

8. Click **Next**.

The **Parse HDL files for simulation** page appears.

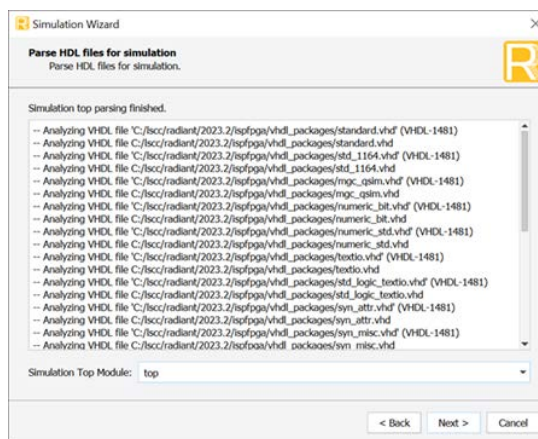

Radiant automatically infers the **Simulation Top Module**.

If you want to select a different testbench for your project, use the **Simulation Top Module** dropdown menu.

Click **Next** after choosing the correct testbench module.

9. A **Summary** page appears that provides information on the project selections, including the simulation libraries.

Review all of the information on this page to ensure everything is correct.

10. By default, the **Launch Simulator GUI**, **Add top-level signals to waveform display**, **Design Optimization - Full Debug**, **Run simulation**, and **Simulator Resolution** options are enabled in the Summary page. Their functionality is as follows:

- ▶ The **Launch Simulator GUI** option runs the generated script and launches the simulation tool you chose earlier in the Simulation Wizard setup page.
- ▶ The **Add top-level signals to waveform display** option adds top-level signals to the waveform in the simulation tool.
- ▶ The **Design Optimization - Full Debug** option sets the option for disabling QuestaSim's optimizer to preserve full visibility of the design in the simulator. If this option is not selected, QuestaSim's optimizations will take place, which will improve the runtime of the simulation at the expense of design visibility, so signals in the design may not be able to be added to the waveform when the Full Debug option is not selected.
- ▶ The **Run simulation** option runs the simulation for the specified amount of time. If the option is set to 0, the **run -all** command will be executed, meaning the simulation will be run forever or until it hits a breakpoint or break event.
- ▶ The **Simulator Resolution** option sets the simulator's time resolution. If you select a different value from the dropdown menu instead of default, the Resolution setting adds `-t <value>` to the vsim invocation.

11. Click **Finish**.

- ▶ After completing the Simulation Wizard setup:
  - ▶ A **Simulation Wizard Project (.spf)** file and a **qrun argument (.f)** file are generated.

The qrun argument file contains generated commands and arguments. For example:

To compile all of the Verilog modules in your design, the Simulation Wizard adds the path to your Verilog files in the argument file, and generates a run command to run the simulation in the duration specified in step 11.

The generation of this file is triggered by Simulation Wizard or the **sim\_generate\_script** command.
- ▶ The simulation is launched and displayed in the QuestaSim GUI.

### See Also

- ▶ [“Simulation in the Radiant Software” on page 193](#)
- ▶ [“Simulation Libraries Compilation Tcl Commands” on page 1682](#)

## Exporting Gate-Level Simulation Files

In the Radiant software, you can export gate-level project simulation source files into your third-party vendor simulation tool for timing simulation.

### To export a Gate-Level simulation files in the Radiant software:

1. From the Quick Run Toolbar, click Task Detail View  and select the **Gate-Level Simulation File** subprocess under **Export Files**.
2. Double click **Export Files** to run the export feature. This will generate a back-annotated version of your design file in a Verilog netlist (.vo) simulation file and an SDF timing file.

### Note:

You can also use Tcl Radiant commands in the Tcl Console to accomplish this task, as shown below:

```
prj_run Export -task TimingSimFileVlg
```

### See Also

- ▶ [“Simulation in the Radiant Software” on page 193](#)

## Timing Simulation

The Radiant software supports two types of timing verification:

- ▶ Dynamic timing simulation
- ▶ Static timing analysis

See the Static Timing Analysis topic and related information for more information on that type of design verification.

To facilitate timing simulation, Radiant allows you to export simulation files that you can import into a simulator for design verification using dynamic timing simulation.

In the Process view under **Export Files**, use **Gate-Level Simulation File** to export a simulation project file to a standalone hardware design language (HDL) simulator. Some simulators allow a combination of both languages to be simulated concurrently. This scenario is common when mixing IP cores.

### See Also

- ▶ [“Verifying Designs with Timing Simulation” on page 200](#)

## Verifying Designs with Timing Simulation

Timing simulation is based on an event-driven simulator and requires you to specify a test vector (waveform). Where timing analysis returns partial timing information, dynamic timing simulation (timing simulation) gives you detailed information about gate delays and worst-case circuit conditions. Because the total delay of a complete circuit depends on the number of gates the signal sees and on the way the gates have been placed in the device, you can only perform timing simulation after you have implemented the design. Timing simulation also requires several input files to run.

Radiant simulation files can be imported into HDL simulators like QuestaSim for dynamic timing simulation. You can simulate FPGA devices by using any popular third-party HDL simulator. Dynamic simulation analyzers have considerably longer run times than a static timing analysis tool like the Radiant software TRACE program.

---

### Note

You cannot generate text fixtures in the Radiant software. All simulation must be done outside of the Radiant software using simulation files in a supported simulator. For guidelines using third-party EDA simulators with Radiant software, see your vendor documentation or the following references.

---

### See Also

► [“Timing Simulation” on page 199](#)

## Third-Party Simulators

This section explains how to use Cadence Xcelium, QuestaSim, and Synopsys VCS software to simulate designs that target Lattice Semiconductor FPGAs. It shows you how to use these simulators to perform functional register-transfer-level (RTL) simulation and place-and-route gate-level simulation with and without timing simulation.

Before simulating with third party simulators, you must compile the device library for use with your chosen simulator using the `cmpl_libs.tcl` script.

For details on how to run `cmpl_libs.tcl`, refer to [“Running cmpl\\_libs.tcl from the Command Line” on page 1676](#).

---

### Note

Lattice Semiconductor does not supply the Cadence Xcelium, Synopsys VCS, or QuestaSim simulators. You must obtain them independently.

---

### See Also

- ▶ [“Simulation Library Files” on page 201](#)
- ▶ [“Performing Simulation with Cadence Xcelium” on page 202](#)
- ▶ [“Performing Simulation with Synopsys VCS” on page 203](#)
- ▶ [“Performing Simulation with QuestaSim” on page 204](#)

## Simulation Library Files

This section describes where to find the source simulation library files for FPGA device families.

There are pre-compiled library files available for QuestaSim located at:  
`<install_folder>/cae_library/simulation/libs.`

Verilog library source files are also installed in the `cae_library` directory. A tcl script to compile the libraries from the source files is available at `<install_dir>/cae_library/simulation/scripts/cmpl_libs.tcl`. You can refer to `<install_dir>/cae_library/simulation/scripts/pkg/cmpl_vlg-pkg.tclproc` to view compile options and order for the device libraries.

### Verilog Source Library Files

The Verilog functional and behavioral simulation library files are installed with the Radiant software in the locations shown in the following table.

**Table 12: Verilog Functional and Behavioral Simulation Library File Locations**

| FPGA Family | Library Location                                                                                                                                                  |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ICE40UP     | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/ICE40UP</code>                                                                                           |
| LFCPNX      | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/lfcpx</code>               |
| LFD2NX      | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/lfd2nx</code>              |
| LFD2NX1     | <code>&lt;install directory&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install directory&gt;/cae_library/simulation/verilog/lfd2nx1</code> |
| LFD2NX2     | <code>&lt;install directory&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install directory&gt;/cae_library/simulation/verilog/lfd2nx2</code> |
| LIFCL       | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/lifcl</code>               |
| LFMXO5      | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/lfmxo5</code>              |
| LFMXO5T     | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uaplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/lfmxo5t</code>             |

**Table 12: Verilog Functional and Behavioral Simulation Library File Locations**

| FPGA Family | Library Location                                                                                                                                                                                                                                                                                           |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT      | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/applatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ap6a00</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ap6a00b</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ap6a00c</code> |
| LAV-AT-ES   | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/applatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ap6a00</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ap6a00b</code>                                                                            |
| UT24C       | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uapplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ut24c</code>                                                                                                                                                       |
| UT24CP      | <code>&lt;install_dir&gt;/cae_library/simulation/verilog/uapplatform</code><br><code>&lt;install_dir&gt;/cae_library/simulation/verilog/ut24cp</code>                                                                                                                                                      |

**See Also**

- ▶ [“Third-Party Simulators” on page 200](#)

## Performing Simulation with Cadence Xcelium

This section explains how to perform simulation with the Cadence Xcelium simulator.

**To provide the compiled library from the `cmpl_libs.tcl` script:**

- ▶ An example of compiling the libraries for Xcelium for Avant devices to a directory set to the variable `LIBPATH` from the Radiant tcl shell:

```
cmpl_libs -sim_path /tools/dist/cadence/XCELIUM/
XCELIUM23.03.003/Linux/tools/bin -device lavat -sim_vendor
cadence -target_path $LIBPATH
```

- ▶ When specifying your top-level design, pass the path to the compiled library to **xrun** with the **-reflib** argument.

For example, if you compiled the lav-at library to a path specified in the `LIBPATH` variable, run the following commands when creating a top-level design with the name **top**:

```
xrun -reflib $LIBPATH/lav_at-elaborate -top top
```

**To run Xcelium:**

- ▶ If the process is successful, a simulation snapshot that can be implemented will be the result. Run the following commands to launch the most recent snapshot that has been created.

```
xrun -R
```

- ▶ For more simulation options, refer to the Xcelium User Guide.

## Performing Simulation with Synopsys VCS

This section explains how to perform simulation with the Synopsys VCS simulator. This is supported in designs using the Avant device.

1. Run the **cmpl\_libs.tcl** script to compile the device library to be used with the VCS simulator.

For example, you can compile an Avant device library to a directory set to the variable LIBPATH from the Radiant tcl shell by running the following commands.

```
cmpl_libs -sim_path /tools/dist/synopsys/VCS/U-2023.03-SP2/
bin/ -device lavat -sim_vendor synopsys -target_path
$LIBPATH
```

- ▶ For details on how to run **cmpl\_libs.tcl**, refer to [“Running cmpl\\_libs.tcl from the Command Line” on page 1676](#).

### Note:

When compiling library using VCS, the library that you compiled must be consistent with the device you are using. You can also add PMI library for compilation if you are using PMI primitives.

2. The **synopsys\_sim.setup** file is created. Set up the **synopsys\_sim.setup** file to map the design library to the host directories, indicate search paths, and assign values to simulation control variables.

- ▶ For details on how to set up the **synopsys\_sim.setup** file, refer to the *Creating a synopsys\_sim.setup File* section of the VCS User Guide.

3. Copy the configured **synopsys\_sim.setup** file to the design directory from where you invoke and run VCS. The mapping tells VCS what libraries to look for. The libraries are compiled to the database format of the VCS.

For example, after copying the **synopsys\_sim.setup** file to the current working directory, you can run the following command to process a design with the top module "top":

```
vcs top
```

4. Analyze and elaborate your design. See the *VCS Workflow* section of the VCS User Guide.

Successful elaboration means that VCS was able to resolve all of the device primitives. During elaboration, using the intermediate files generated, VCS creates a binary executable **simv** file. You can use the **simv** to run the simulation.

5. To simulate your design, run the generated **simv** executable either in interactive mode with the **-ucli** parameter or without any arguments.

```
./simv -ucli
```

VCS also has a utility called `l1ib` that you can use to print the library information. By default, it will only print the modules in the WORK library. However, you can use the `-lib` argument to get the information for a specific library.

For more simulation options, refer to the VCS User Guide and for more advanced usage, contact Synopsys user support.

## Performing Simulation with QuestaSim

This section explains how to perform simulation with QuestaSim.


### To set Lattice Semiconductor libraries:

Before simulating Lattice Semiconductor FPGA designs in Siemens' QuestaSim, you must have the compiled Lattice device and PMI libraries, which are included in Radiant or the libraries you compiled manually using the `cmpl_libs` script that Radiant provides.

- ▶ For details on how to run `cmpl_libs.tcl`, refer to [“Running cmpl\\_libs.tcl from the Command Line” on page 1676](#).
- ▶ For details on PMI simulation library compilation, refer to [“Requirements for Simulation and Synthesis with PMI” on page 157](#).

**To enable the Radiant software's batch interface to QuestaSim, change the default simulation tool setup and directory reference as follows:**

1. Choose **Tools > Options**.
2. Click on the **Directories** tab.
3. Change the path setting to the new version of the QuestaSim executable.

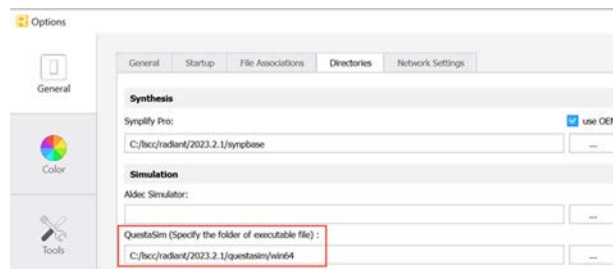


The following are default paths of QuestaSim:

- ▶ **Windows:** `<install_directory>/questasim /win64`
- ▶ **Linux:** `<install_directory>/questasim /linux_x86_64`

If there is no available executable file under a specified path, an error message will be issued.



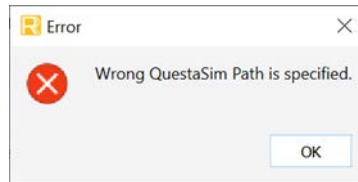

4. Click **OK**.

#### To map QuestaSim libraries:

The simulator looks for referenced library names by doing the following:

1. Search the **modelsim.ini** file for library mappings.
2. Search the current working directory for a subdirectory that matches the library name.

The library compilation target folder should also be your simulation working directory. You must do one of the following procedures if the library does not exist in either the modelsim.ini or the simulation directory:

- ▶ Copy the library directory to the simulation directory.
- ▶ Use the **vmap** command to add a mapping to the library directory in the modelsim.ini.
- ▶ You can also manually add the mapping to the modelsim.ini file either in the simulation directory or the installation directory of QuestaSim.

#### Library mapping example using the LIFCL device:

```
vmap lifcl D:/radiant_lib/lifcl  
vmap pmi_work D:/radiant_lib/pmi_work
```

or

1. Open the modelsim.ini in the simulation or installation directory
2. Go to the **Library** section.
3. Add **lifcl = D:/radiant\_lib/lifcl**
4. Add **pmi\_work = D:/radiant\_lib/pmi\_work**

#### Note

Open the Questasim and execute the command in Questasim console. The console can be found in [Creating a New Simulation Wizard Project in the Radiant Software](#).

---

### Performing Verilog Simulation

Use the procedures described in this section to perform a Verilog standalone simulation with QuestaSim.

### Functional RTL Simulation

Use the following commands to perform a functional RTL simulation with one of the libraries shown in the [Verilog Functional and Behavioral Simulation Library File Locations](#) table:

```
vlib work
vlog -work work <design_name>.v <test_bench>.v
vsim work.<test_bench>
```

---

**Note**

If you have a pre-existing work library, you can clear its contents by using the following command:

```
vdel -lib work -all
```

---

**See Also**

► [“Third-Party Simulators” on page 200](#)

**Single-Step Simulation Using qrun Command**

The qrun command simplifies the QuestaSim verification flow by combining the compile, optimize, and simulate functions into a single step. With the qrun command, you do not need to explicitly invoke vlog, vopt/vcom, and vsim and you can eliminate the manual command line construction and linking associated with the three-step flow.

Here is the basic syntax of the qrun command.

```
qrun <myfiles> <optional arguments>
```

qrun arguments are optional. When run, the command compiles, optimizes, and simulates "<myfiles>" with or without explicit direction or arguments from the user.

Here is an example of a Hello World System Verilog module with the file name hello.sv.

```
module IP;
initial begin
$display("Hello world");
end
endmodule
```

To compile, optimize, and simulate the **hello.sv** file, use the qrun command.

```
qrun hello.sv
```

**Comparing ModelSim and QuestaSim**

The following table highlights the differences between ModelSim and QuestaSim.

**Table 13: Major differences between ModelSim and QuestaSim**

|                  | <b>License</b>                                           | <b>Optimization Modes<sup>1</sup></b> | <b>Instantiation limit<sup>2</sup></b>                                                                                         | <b>Simulation library files</b>                                                                                  |
|------------------|----------------------------------------------------------|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| <b>ModelSim</b>  | Requires a license with the <b>latticecemsim</b> feature | No optimization                       | ModelSim issues a warning when going over the 5000 instantiation limit with no further action needed to launch the simulation. | ModelSim pre-compiled library files are located at: <b>&lt;install_folder&gt;/modeltech/lib</b> .                |
| <b>QuestaSim</b> | Requires a license with the <b>latticeqsim</b> feature   | Optimized and Debug                   | QuestaSim issues a suppressible error when simulating a design that goes over the 5000 instantiation limit.                    | QuestaSim pre-compiled library files are located at: <b>&lt;install_folder&gt;/cae_library/simulation/libs</b> . |


**Notes:**

1. QuestaSim performs built-in optimizations on your design to maximize simulator performance, while ModelSim does not perform these optimizations. The optimizations limit the visibility of design objects, but you can increase visibility of any objects for debugging purposes. For more details on options regarding optimization and preserving visibility, refer to the [QuestaSim User Manual](#)

It is recommended to use the **+acc** option to vopt to preserve design visibility so that the resulting waveform database can be viewed in the Questa Classic GUI provided with Questa Lattice OEM.

You can enable the +acc and +noacc options by selecting the **Design Optimization - Full Debug** option from the Simulation Wizard dialog box. The +acc option can slow down design performance, whereas the +noacc option improves performance by re-enabling optimizations on specified design objects, negating the disabling of optimizations that had been specified through previous +acc arguments.

For details on the negation of arguments to QuestaSim's optimization engine, refer to the “Negation Arguments and Resolution with vopt” section in the [QuestaSim User Manual](#).

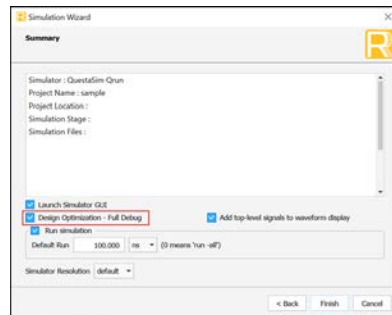

2. In both Questa Lattice OEM and ModelSim Lattice OEM, running the simulation with a design that goes over the instantiation limit will result in severely degraded simulation performance.

## Applying Design Constraints

Constraints are instructions applied to design elements that guide the design toward desired results and performance goals. They are critical to achieving timing closure or managing reusable intellectual property (IP). The most common constraints are those for timing and pin assignments, but constraints are also available for placement, routing, and many other functions.

Constraints can include timing or physical constraints defined in Constraint Files (.ldc/.pdc/.sdc/.fdc) or HDL attributes (for physical pin locking) using the Radiant software and third party synthesis tools. Files .ldc/.fdc/.sdc are used for the synthesis tool and specify design goals. Synthesis, map, and place-and-route work to meet these goals. Post-synthesis constraints (.pdc) can also be specified. The flow combines these based on different entry points within the Radiant software design flow. The timing analysis tool reports whether or not the goals were met.

### See Also

- ▶ [“Constraints Reference Guide” on page 804](#)
- ▶ [“Unified Constraints Flow” on page 209](#)
- ▶ [“Integrated Synthesis” on page 340](#)
- ▶ [“Handling Device Constraints” on page 225](#)

## Unified Constraints Flow

The goal of the unified constraints flow is to have one constraint file that can be used by both the synthesis tools (LSE & Synplify Pro). From Radiant 3.0 onwards, pre-synthesis constraint editor can be launched with Synplify Pro, and constraints can be saved into an .sdc file, which can be used by both LSE and Synplify Pro, along with .ldc (for LSE) and .fdc (Synplify Pro).


**Table 14: Supported Constraints File Type**

| Constraint Type | Synthesis Tool   | Constraint Editor Support |
|-----------------|------------------|---------------------------|
| .ldc            | LSE              | Yes                       |
| .sdc            | LSE/Synplify Pro | Yes                       |
| .fdc            | Synplify Pro     | No                        |

**Table 15: Difference between Radiant 3.0 (or later) and previous versions**

|           | Radiant 1.x/2.x       | Radiant 3.0 or later          |
|-----------|-----------------------|-------------------------------|
| .sdc file | For Synplify Pro only | For both LSE and Synplify Pro |

The following figure shows the Radiant folder structure. The .ldc constraints are stored under the Lattice LSE folder, the .fdc constraints are stored under Synplify Pro, and the newly created .sdc constraints are stored outside these two folders, which can be commonly used by both synthesis tools.

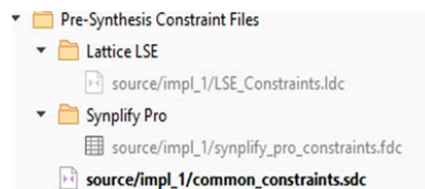**Notes:**

1. If the previous project includes an .sdc file, Radiant 3.0 or later will use it in the LSE flow, but it can cause unexpected syntax errors.
2. If the previous project includes both .ldc and .sdc files, Radiant 3.0 or later will force one of them to be inactive. Only one constraint file can be active. The Pre-Synthesis Constraint Editor can only be launched with the active constraints file.

## Known Limitations

- ▶ Constraints on internal objects from Synplify Pro may not be fully compatible. The pre-synthesis constraint editor uses Verific parser for compilation whereas Synplify Pro uses their own parser. This may cause some name changes on the internal objects when Synplify Pro is used.
- ▶ Pre-Synthesis Constraint Editor "Attribute" tab is only supported by LSE. The attributes are passed using a Lattice Proprietary constraint "ldc\_define\_attribute," which is not supported by Synplify Pro. For Synplify Pro, users can apply the attribute at HDL level. Refer to the [Synopsys Synplify Pro for Lattice User Guide](#) (Chapter 4: Setting Up a Logic Synthesis Project > Specifying Attributes and Directives) for details.

### See Also

- ▶ ["Constraints Reference Guide" on page 804](#)
- ▶ ["Using Radiant Software Pre-Synthesis Constraints" on page 224](#)
- ▶ ["Device Constraint Editor" on page 242](#)

## Constraint Implementation

The following steps illustrate how you might assign constraints and implement them at each stage of the design flow, using synthesis constraints and timing analysis.

1. Define the constraints in the pre-synthesis stage using one or both of the following methods:

- ▶ Define constraints as attributes within the HDL.

For example, the constraint below defines a CLAMP constraint that can be turned ON or OFF.

```
module rtl_top #(parameter width = 8) (DA, DB, CLK, Q);
output [width-1:0]Q/* synthesis CLAMP="ON"
```

See ["HDL Attributes" on page 805](#) for complete descriptions of each attribute, including conventions and examples.

- ▶ Define timing constraints using Synplify Pro or LSE. Constraints are saved in .ldc file.

For example, the constraint below specifies that the maximum delay allowed for the output signal (data\_out) is 5 nanoseconds.

```
attribute MAXDELAY : time;
attribute MAXDELAY of data_out : signal is 5
```

See ["Lattice Synthesis Engine Constraints" on page 824](#) for complete descriptions of constraints that are directly interpreted by the synthesis engine.

2. Synthesize the design.

When synthesis is performed, the synthesis process synthesizes the design and stores it in a unified database.

The timing constraints will be displayed in Radiant software Design Constraint Editor View and color-coded as synthesis values.

3. Open one or more of the following views in the Pre-Synthesis Constraint Editor or Device Constraint Editor to define new constraints:

**(Pre/post-synthesis) Pre-Synthesis Constraint Editor**– Timing constraints, exceptions, delays and synthesis attributes including physical pin locations can be defined in these two tools.

**Device Constraint Editor**– Define signaling standards and make pin assignments. Assign clocks to primary or secondary routing resources. Define groups of ports only with current release. Other global settings such as temperature and voltage can be set. Run Constraint design rule checking.

**Placement Mode** – View the device layout. Draw bounding boxes for GROUPs. Draw REGIONs for the assignment of groups or to reserve areas. Reserve sites and REGIONs that should be excluded from placement and routing. Run Constraint design rule checking.

4. Save the constraints to the .pdc file.
5. Run the **Map Design** process (map).  
This process reads all data from the unified design database and processes from there.

6. Run the **Place & Route Design** process (par).
7. Open one of the following views, as desired, to examine timing and placement.

**Timing Analyzer** – Examine details of timing paths. Cross-probe selected paths to Placement Mode and Routing Mode.

8. Modify constraints or create new ones using any of the design / timing constraint editing views. Save the changes and rerun the **Place & Route Design** process.
9. Repeat Steps 3 through 8 until design performance objectives are met.

#### See Also


- ▶ [“Analyzing Static Timing” on page 377](#)

## Understanding Implications of Radiant Software Constraint Flows

In order to help understand the Radiant software constraints flow process, the figure below details the entry mechanism for input files and its data flow through the constraints process. The blue boxes indicate design entry mechanism in the form of HDL and synthesized via our internal LSE or third party Synplify Pro synthesis tools. Other yellow boxes also indicate processes run by Radiant software. Green boxes are used to indicate input or output



constraints files or related output report files such as Static Timing Analysis reports out of Map and PAR. Note that Radiant software also generates a post-synthesis timing report just for LSE.

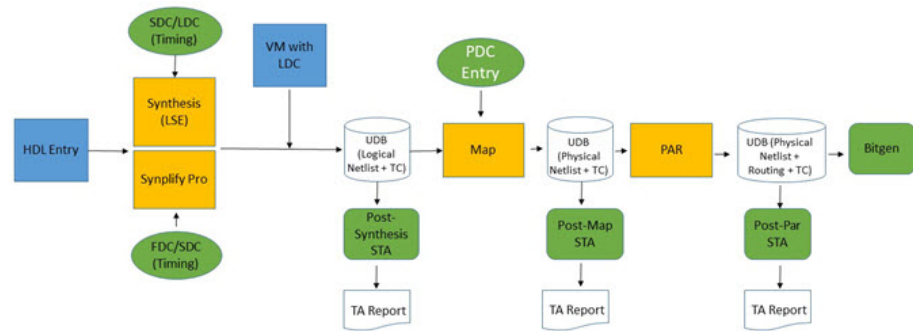

The important process to note is that the Unified Database (.udb) used to store the processed data dictates that certain stages of the constraints need not be re-run in the tool saving processing time. For example, physical constraints on RTL entered as attributes in the HDL, or pre-synthesis constraints entered using the Pre-Synthesis Constraint Editor/Synplify Pro SCOPE (or text editor) including .ldc/.fdc (.sdc converted to .fdc) timing constraints would initially run through synthesis and the data stored is in the .udb file. Subsequent timing and physical constraints entered using tools such as the Post-Synthesis Timing Constraint Editor, Placement Mode or Device Constraint Editor and stored in the .pdc file are processed via the mapping run without the need to re-synthesize the design since the pre-synthesis data resides in the .udb database. As the constraints flow proceeds with each process (i.e. synthesis, Map, PAR) the .udb successively stores a physical netlist, routing and timing constraint.

Transparent to the user, the storage of accumulating data throughout the constraints flow in the .udb and reduction in re-running processes is one reason for the improved speed and efficiency for Radiant software users.

In terms of the necessity of pre versus post-synthesis timing constraints, usage depends on the complexity and desired performance of the design results. A simple design requiring few timing constraints with a relaxed  $f_{MAX}$  may require only pre-synthesis timing constraints and runs through the flow from synthesis to place and route. A complex design requiring a higher  $f_{MAX}$  performance may have initial pre-synthesis timing constraints entered for synthesis. Later in the flow, a user may then want to override or fine tune these timing constraints in addition to adding physical constraints to reach the desired performance by driving the place and route process. One example would be a user who initially specifies a higher  $f_{MAX}$  to reduce logic levels, then later in the post-synthesis flow lowers the  $f_{MAX}$  constraint so that the place and route process is not strained when routing the design.

## Managing Constraints: .ldc/.sdc/.fdc vs .pdc

The pre-synthesis constraints .ldc/.sdc/.fdc are passed to the .udb and shown in the Post-Synthesis Timing Constraint Editor as read only. If a user attempts to further re-constrain these constraints, the constraints are saved to the .pdc file.

If two identical constraints exist in the .ldc and .pdc files respectively, the constraint in the .pdc file takes precedence.

## Constraints Precedence

Regarding physical/timing constraints, constraints entered via any GUI tool such as Device Constraint Editor or Pre-Synthesis Constraint Editor will take precedence over the constraints that were entered via an HDL attribute in the RTL or .ldc and .sdc TCL commands.

Constraints entered later in the design flow such as Post-Synthesis Timing Constraint (.pdc) will override a constraint entered in the Pre-Synthesis Constraint (.ldc) editor tool.

If there are conflicts in the constraint file such as a ldc\_set\_location TCL command conflicting with a ldc\_prohibit on the same location, then the Radiant software will issue an error message in the design flow.

## Applying Differential Signal Design Constraints

Lattice software treats all signals as single ended in RTL all the way to the Top Module port list. Differential buffer primitives are not instantiated in RTL.

Instead, I/O constraints are used to set the I/O type to differential.

The RTL signal should be assigned to the P side of a differential pin pair, and the software will set the N side to the matching differential pin pair's compliment pin.

The differential pin assignment for both true and compliment can then be seen in Reports > Place & Route > Signal/Pad > Pinout by Pin Number.

The true pin is shown with a "+" after the RTL signal name and the compliment pin with a "-" after the RTL signal name.

Since there is no primitive for differential buffers, the post-route netlist also treats the net as single ended.

You can also find the pad locations of the differential pair from the generated .pad file under "Pinout by Pin Number" with "+" and "-" signs after the RTL signal name.

## Timing and Physical Constraints

There are three types of constraints that are supported in Radiant software for constraining your design for maximum performance: Lattice Design Constraints, Post-Synthesis Design Constraints, and Synopsys Design Constraints.

**Lattice Design Constraints (.ldc):** A combination of both Synopsys Design Constraints (.sdc version 2.0) and the Radiant software's synthesis attributes. Files have .ldc suffix.

Refer to [“Synopsys Design Constraints” on page 824](#) in the Help for more details.

**Post-Synthesis Design Constraints (.pdc):** The Radiant software design constraints contain both physical constraints and any post-synthesis timing constraints. These files have .pdc suffix.

Below is a supported list:

- ▶ [“ldc\\_create\\_group” on page 895](#)
- ▶ [“ldc\\_create\\_region” on page 895](#)
- ▶ [“ldc\\_create\\_macro” on page 896](#)
- ▶ [“ldc\\_create\\_vref” on page 896](#)
- ▶ [“ldc\\_set\\_location” on page 897](#)
- ▶ [“ldc\\_set\\_vcc” on page 897](#)
- ▶ [“ldc\\_set\\_port” on page 898](#)
- ▶ [“ldc\\_set\\_sysconfig” on page 898](#)
- ▶ [“ldc\\_set\\_attribute” on page 899](#)
- ▶ [“ldc\\_prohibit” on page 900](#)

### See Also

- ▶ [“Synopsys Design Constraints” on page 824](#)

**Synopsys Design Constraints (.sdc):** Synopsys design constraints are industry standard timing constraints. Files with .sdc suffix. Its currently in its version 2.0 iteration.

Below is a supported list:

- ▶ [“create\\_clock” on page 830](#)
- ▶ [“create\\_generated\\_clock” on page 832](#)
- ▶ [“set\\_clock\\_groups” on page 834](#)

- ▶ [“set\\_clock\\_latency” on page 836](#)
- ▶ [“set\\_clock\\_uncertainty” on page 836](#)
- ▶ [“set\\_false\\_path” on page 845](#)
- ▶ [“set\\_input\\_delay” on page 837](#)
- ▶ [“set\\_load” on page 840](#)
- ▶ [“set\\_max\\_delay” on page 840](#)
- ▶ [“set\\_max\\_skew” on page 842](#)
- ▶ [“set\\_min\\_delay” on page 842](#)
- ▶ [“set\\_multicycle\\_path” on page 843](#)
- ▶ [“set\\_output\\_delay” on page 839](#)

**See Also**

- ▶ [“Lattice Synthesis Engine-Supported HDL Attributes” on page 846](#)


## Checking Constraint Coverage

Timing Constraints are important in FPGA design because they tell the tools what to optimize and what to report on. A design that is unconstrained will go unoptimized and unreported because no timing constraints have been set to tell it how fast it needs to run, and there is no instruction about the required information.

To check if the applied timing constraints on the design is sufficient, you can check the constraint coverage on the **Timing Analysis Summary** of the Place and Route Timing Analysis report. Constraint coverage refers to the percentage of paths covered by the constraints for timing analysis.

You must aim for a constraint coverage ranging from 90% to 100%. At a minimum, you must do the following:

1. Ensure all clocks are defined with the required frequencies (create\_clock, create\_generated\_clock).
2. Ensure all input and output ports are defined with the required delay requirements (set\_input\_delay and set\_output\_delay).

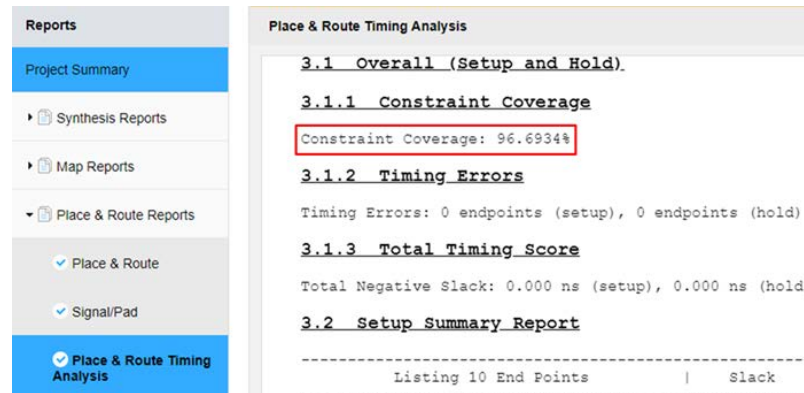

You can use a variety of timing constraints depending both on their preference and the requirements of the design. Depending on the design, some timing constraints may have a higher effect on the constraint coverage than others. There are timing constraints that do not affect constraint coverage. Refer to the following table for more details.

**Table 16: Constraint Coverage**

| Constraint Category | Constraint             | Affects Constraint Coverage? |
|---------------------|------------------------|------------------------------|
| Clock               | create_clock           | Yes                          |
| Generated Clock     | create_generated_clock | Yes                          |
| Clock Latency       | set_clock_latency      | Yes                          |
| Clock Uncertainty   | set_clock_uncertainty  | Yes                          |
| Clock Group         | set_clock_groups       | No                           |
| Input/Output delay  | set_input_delay        | Yes                          |
|                     | set_output_delay       | Yes                          |
| Timing Exception    | set_min_delay          | No                           |
|                     | set_max_delay          | Yes                          |
|                     | set_false_path         | Yes                          |
|                     | set_multicycle_path    | No                           |
|                     | set_max_skew           | No                           |

## Coverage

When extracting a timing graph from the design netlist, the engine removes netlist components that are not part of a complete path. The connections

(driver to load section of a net) associated are classified as ignored connections.

The timing engine does the following:

- ▶ Indicates how many connections are ignored. The remaining connections are classified as counted connections.
- ▶ Checks each of the counted connections to identify which of the connections are part of a path that is properly constrained. These connections are considered as covered connections.

The engine prints the following message to the standard output:

```
Connections ignored 9 counted 34 covered 19.
```

The **Constraint Coverage** section expresses the ration of the covered connections to the counted connections as a percentage.

Most of the timing constraints that are supported affect the constraint coverage percentage. There are a few constraints that affect the behavior of the various applications (synthesis, place and route) but do not affect the coverage of the connections.

## Migrating from Former Lattice Diamond Preferences

New to the Radiant software flow are Lattice Design Constraints (.ldc/.pdc). These are a combination of both Synopsys Design Constraints (.sdc version 2.0) and the Radiant software proprietary physical constraints.

All Lattice Diamond constraints were known as Preferences and were defined as .ldc or .pdc files written as .sdc constraints. Lattice Diamond uses a combination of “preferences” and constraints, while Radiant software uses only .ldc constraints. Lattice Diamond preferences that can be supported as constraints in the Radiant software are listed below.

These are the .sdc timing commands that are supported in the Radiant software:

The following Synopsis Design Constraints can be set in the .sdc:

- ▶ [“create\\_clock” on page 830](#)
- ▶ [“create\\_generated\\_clock” on page 832](#)
- ▶ [“set\\_clock\\_groups” on page 834](#)
- ▶ [“set\\_input\\_delay” on page 837](#)
- ▶ [“set\\_output\\_delay” on page 839](#)
- ▶ [“set\\_false\\_path” on page 845](#)
- ▶ [“set\\_max\\_delay” on page 840](#)
- ▶ [“set\\_max\\_skew” on page 842](#)
- ▶ [“set\\_min\\_delay” on page 842](#)

- ▶ [“set\\_multicycle\\_path” on page 843](#)
- ▶ [“set\\_clock\\_uncertainty” on page 836](#)
- ▶ [“set\\_clock\\_latency” on page 836](#)

The use of .sdc constraints involve some object access commands as indicated below:

- ▶ get\_cells
- ▶ get\_pins
- ▶ get\_nets
- ▶ get\_ports
- ▶ all\_inputs
- ▶ all\_outputs
- ▶ get\_clocks
- ▶ all\_clocks

The following table shows the most commonly used Lattice Diamond preferences for applying physical constraints and how to apply them with the new Radiant software.sdc commands. Listed in alphabetical order, examples are also shown on how to convert Lattice Diamond preferences to a Radiant software .ldc constraint.

**Table 17: Lattice Diamond Preferences Compared to Radiant Software Constraints**

| Lattice Diamond Preference Usage                                                                                 | Radiant Software .ldc Constraint Usage                                                                                                                  |
|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| BANK 1 VCCIO 3.3 V                                                                                               | ldc_set_vcc -bank 1 3.3                                                                                                                                 |
| BLOCK PATH FROM PORT “LOCAL_CMD0” TO PORT “RAM_RD”;                                                              | set_false_path -from [get_ports LOCAL_CMD0] -to [get_ports RAM_RD]                                                                                      |
| CLOCK_TO_OUT ALLPORTS OUTPUT_DELAY 10 ns<br>MIN -2.5 ns CLKPORT CKIN1;                                           | set_output_delay-clock [get_clocks CKIN1] -max 10 [get_ports all_outputs]<br>set_output_delay-clock [get_clocks CKIN1] -min 2.5 [get_ports all_outputs] |
| DEFINE BUS “busA” NET “pen0” NET “pen1” NET “pen2”<br>NET “pen3” NET “pen4” NET “pen5” NET “pen6” NET<br>“pen7”; | ldc_create_group -name busA [get_nets pen0 pen1 pen2<br>pen3 pen4 pen5 pen6 pen7]                                                                       |
| DEFINE PORT GROUP “grp1” “a1” “a2” “a3”;                                                                         | ldc_create_group -name grp1 [get_ports a1 a2 a3]                                                                                                        |
| FREQUENCY NET “clk1” 100 Mhz                                                                                     | create_clock -period 10 -name clk1 [get_nets clk1]                                                                                                      |
| GROUP “rot_grp” BBOX 8 3 BLKNAME rotate_1;                                                                       | ldc_create_group -name rot_grp -bbox 8 3_cells<br>{rotate_1}                                                                                            |
| GSR_NET NET “rst_pcie”;                                                                                          | ldc_set_attribute {GSR_NET = TRUE} [get_nets rst_pcie]                                                                                                  |
| INPUT_SETUP PORT “in1” INPUT_DELAY 10 ns MIN -<br>2.5 ns CLKPORT “clk”;                                          | set_input_delay 2 -clock [get_clocks clk] -max 10 [get_ports in1]<br>set_input_delay 2 -clock [get_clocks clk] -min 2.5 [get_ports in1]                 |

**Table 17: Lattice Diamond Preferences Compared to Radiant Software Constraints (Continued)**

| Lattice Diamond Preference Usage                                   | Radiant Software .ldc Constraint Usage                                     |
|--------------------------------------------------------------------|----------------------------------------------------------------------------|
| IOBUF PORT bchk IO_TYPE=LVC MOS33;                                 | ldc_set_port -iobuf {IO_TYPE=LVC MOS33} [get_ports bchk]                   |
| LOCATE COMP "A" SITE "11";                                         | ldc_set_location -site 11 [get_ports A]                                    |
| LOCATE GROUP "GROUP_0" SITE "R2C2D";                               | ldc_set_location -site R2C2D [ldc_get_groups GROUP_0]                      |
| LOCATE GROUP "xyz_GROUP" REGION "my_region"                        | ldc_set_location -region my_region [ldc_get_groups GROUP_0]                |
| LOCATE VREF "VREF1_BANK_3" SITE "n21";                             | ldc_create_vref -name VREF1_BANK_3 -site N21                               |
| MAXDELAY FROM PORT "LOCAL_CMD0" TO PORT "RAM_RD" 18 NS             | set_max_delay 18 -from [get_ports LOCAL_CMD0] -to [get_ports RAM_RD]       |
| MAXDELAY -MIN FROM CELL "state_reg4" TO CELL "RAM_OE_N_reg" 15 NS; | set_min_delay 15 -from [get_cells state_reg4] -to [get_cells RAM_OE_N_reg] |
| MULTICYCLE FROM CLKNET "clk1" TO CLKNET "clk2" 2 X;                | set_multicycle_path 2 -from [get_clocks clk1] -to [get_clocks clk2]        |
| OUTPUT PRT "A" LOAD 10 pF;                                         | set_load 10 [get_ports A]                                                  |
| PERIOD NET "NetA" 150 NS HIGH 75 NS;                               | create_clock -period 100 -name clk0 -waveform {0.75 1.50} [get_nets NetA]  |
| PERIOD PRT "Clk1" 30 NS;                                           | create_clock -period 30 -name clk1 [get_ports Clk1]                        |
| PROHIBIT PRIMARY NET "bf_clk";                                     | ldc_set_attribute USE_PRIMARY=FALSE [get_nets bf_clk]                      |
| PROHIBIT SITE "AB"                                                 | ldc_prohibit -site AB                                                      |
| REGION "Region_0" R16C2D" 11 30;                                   | ldc_create_region -name Region_0 -site R16C2D -width 11 -height 30         |
| SYSCONFIG DONE_OD=ON;                                              | ldc_set_sysconfig {JTAG_PORT=ENABLE MCCLK_FREQ=56.2 DONE_OD=ON}            |
| TEMPERATURE 45C;                                                   | ldc_set_attribute {TEMPERATURE=45C}                                        |
| USERCODE HEX "53656D69";                                           | ldc_set_attribute {FORMAT=HEX CODE=53656D69}                               |
| VCC_DERATE PERCENT 5                                               | ldc_set_vcc -core -derate 5                                                |
| VCC_NOMINAL 1.2V;                                                  | ldc_set_vcc -core 1.2                                                      |
| VCCIO_DERATE BANK 0 PERCENT 5;                                     | ldc_set_vcc -bank 0 -derate 5                                              |
| VOLTAGE 1.5V;                                                      | ldc_set_vcc -core 1.5                                                      |

## Migrating Pin Assignments

The Radiant software provides pin compatibility information that helps you migrate pin assignments to a different device of the same family and package as the currently targeted device. This information enables you to save your current pinout while you explore other devices. It shows you which pins in



your current device will be unavailable or have different functions when you switch devices, and it allows you to export the pin migration information to a pin layout file.

You use the Incompatible Pins tab of the Device Constraint Editor to select one or more devices that are of the same family and package as your current device. Afterwards, you can view all incompatible pins in Spreadsheet View and Package View. The rows for incompatible pins are dimmed on the Pin Assignments sheet of Spreadsheet View. In Package View, a dark gray circle appears behind each incompatible pin square.

Pin compatibility information is available for LIFCL, LFD2NX, LAV-AT, LFCPNX, UT24C and UT24CP.

### See Also

- ▶ [“Selecting a Device for Possible Pin Migration” on page 221](#)
- ▶ [“Viewing Incompatible Pins” on page 222](#)
- ▶ [“Prohibiting Incompatible Pins” on page 223](#)

## Selecting a Device for Possible Pin Migration

The Incompatible Pins tab of Device Constraint Editor allows you to select one or more devices for possible pin migration. Afterwards you can view the incompatible pins—those that would not be available or that would have a different function if you were to switch from the current device.

To select one or more devices for pin migration:

1. Open Device Constraint Editor by choosing **Tools > Device Constraint Editor**.
2. Open the Incompatible Pin tab. The Incompatible Pins tab lists all the devices that are of the same device family and package as the current device.
3. Select one or more of the devices from the Compatible Devices list, or select All.

If you select one device from the list, the incompatible pins will include those between the current device and the selected device.

If you select more than one device or All, the incompatible pins will include those between the current device and the combination of all selected devices.

4. In the Check Areas tab, select the types of incompatibility that you want included for the selected devices: pin type, configuration, LVDS/highspeed, and bank number differ between the current device and the selected devices.

All of the pins that are incompatible will be displayed in a dim font and with a dark gray circle in the Package View.

5. To unlock any previously assigned pins that would now be incompatible, choose **Design > Disable Incompatible Pin Assignment**.

If you selected the “Disable Incompatible Pin Assignments” option and your design includes pin assignments that are incompatible with the selected devices, a dialog box will warn you that all assignments to incompatible pins will be released. Do one of the following:

- ▶ Click Yes to continue.

This releases the pin assignments that are now incompatible but retains all other pin assignments. All incompatible pins will be displayed in a dim font and marked as “[Incomaptible]” in the “Signal Name” column on the Pin Assignments sheet and with a dark circle in Package View. Names of previously assigned signals whose pins are now incompatible will not be displayed.

There is no Undo for this operation. If the design has already been mapped, it will be initialized back to pre-map status when you save the change.

- ▶ Click No if you decide that you do not want to release the previously assigned pins.

This maintains all of your current assignments but the incompatible pin assignments will not be disabled.

#### See Also

- ▶ [“Migrating Pin Assignments” on page 220](#)
- ▶ [“Viewing Incompatible Pins” on page 222](#)
- ▶ [“Prohibiting Incompatible Pins” on page 223](#)
- ▶ [“Exporting Pin Migration Information” on page 224](#)

## Viewing Incompatible Pins

An incompatible pin is one that would not be available or would have a different function if you were to switch your design from the current device to a different device. After selecting one or more devices of the same family and package for possible pin migration, you can view the incompatible pins in Spreadsheet View and Package View. In Package View, you can also view the tool tip that explains why a device pin is incompatible.

#### Note

None of the pin sites that are marked as incompatible can be assigned, if you checked the “Disable Incompatible Pin Assignments”. If you need to use any of these sites for your design, you must uncheck the menu or adjust the incompatible device/type selections.

---

**To view incompatible pins in Spreadsheet View:**

- ▶ Select the Pin Assignments sheet and scroll through the list of pins.  
The rows for pins that are incompatible are dimmed.

**Note**

---

When you use the Assign Ports dialog box from the Port Assignments sheet, all incompatible pins in the dialog box are dimmed.

---

**To view incompatible pins in Package View:**

- ▶ In Package View, maximize the view or choose View > Zoom Fit.  
On the Package View layout, each incompatible pin is displayed with a dark gray circle behind the pin square.
- ▶ Hold your mouse pointer over an incompatible pin to view the tool tip.  
The explanation of why the pin is incompatible is listed at the end of the tool tip and will include one of the following:
  - “[TYPE] is not compatible”
  - “[HIGHSPEED] is not compatible”
  - “[CFG] is not compatible”
  - “[Bank Number] is not compatible”

**See Also**

- ▶ [“Migrating Pin Assignments” on page 220](#)
- ▶ [“Selecting a Device for Possible Pin Migration” on page 221](#)
- ▶ [“Prohibiting Incompatible Pins” on page 223](#)
- ▶ [“Exporting Pin Migration Information” on page 224](#)

## Prohibiting Incompatible Pins

Package View enables you to create a PROHIBIT preference for selected incompatible pins or all incompatible pins. Prohibiting incompatible pins will prevent you from assigning signals to them. It will also prevent the Map and Place & Route processes from using these incompatible pins. When you prohibit incompatible pins, none of the pins that have already been assigned will become unlocked.

**To prohibit all incompatible pins:**

1. In the Incompatible Pins tab, select the devices for possible pin migration.
2. Click **Design > Prohibit Incompatible Pins**.

On the Pin Assignments sheet of Spreadsheet View, “Prohibit” appears in the signal name column for all prohibited incompatible pins.

In Package View, all prohibited incompatible pins are highlighted in dark blue.

**To release all prohibited incompatible pins:**

- ▶ Click **Design > Release Incompatible Pins**.

**To prohibit one or several incompatible pins:**

- ▶ In Package View, select the incompatible pins that you want to prohibit. Right-click, and choose Prohibit.

**To release one or several incompatible pins:**

- ▶ On the Pin Assignment sheet of Spreadsheet View or in Package View, select the prohibited pins that you want to release. Right-click and choose Release.

**See Also**

- ▶ [“Migrating Pin Assignments” on page 220](#)
- ▶ [“Selecting a Device for Possible Pin Migration” on page 221](#)
- ▶ [“Viewing Incompatible Pins” on page 222](#)
- ▶ [“Exporting Pin Migration Information” on page 224](#)

## Exporting Pin Migration Information

The Radiant software allows you to include pin migration information in an exported pin layout file of your design. The exported pin layout file uses a delimiter-separator format, such as comma-separator value (.csv), which allows you to view the report in an external spreadsheet application. In addition to pin migration information, the pin layout file provides a report of available device pins, pin assignments, and IOBUF attributes. You can include pin migration information in the report by selecting the options in the Incompatible Pins tab, then selecting **Pin Migration** in the Export Pin Layout File dialog box.

**See Also**

- ▶ [“Exporting a Pin Layout File” on page 331](#)

## Using Radiant Software Pre-Synthesis Constraints

Enter constraints in the synthesis design constraints .sdc file using one of the following three synthesis tools:

- ▶ Pre-Synthesis Constraint Editor/Post-Synthesis Timing Constraint Editor  
For more information about entering constraints with Pre-Synthesis Constraint Editor/Post-Synthesis Timing Constraint Editor, refer to [“Handling Device Constraints” on page 225](#).
- ▶ Synplify Pro SCOPE Constraints Editor

For more information about entering constraints with Synplify Pro SCOPE Constraints Editor, refer to “SCOPE Constraints Editor” help in the Synplify Pro Help.

- ▶ Lattice Synthesis Engine (LSE).

The following Synopsis Design Constraints can be set in the .sdc:

- ▶ [“create\\_clock” on page 830](#)
- ▶ [“create\\_generated\\_clock” on page 832](#)
- ▶ [“set\\_clock\\_groups” on page 834](#)
- ▶ [“set\\_clock\\_latency” on page 836](#)
- ▶ [“set\\_false\\_path” on page 845](#)
- ▶ [“set\\_input\\_delay” on page 837](#)
- ▶ [“set\\_load” on page 840](#)
- ▶ [“set\\_max\\_delay” on page 840](#)
- ▶ [“set\\_max\\_skew” on page 842](#)
- ▶ [“set\\_min\\_delay” on page 842](#)
- ▶ [“set\\_multicycle\\_path” on page 843](#)
- ▶ [“set\\_output\\_delay” on page 839](#)
- ▶ [“set\\_clock\\_uncertainty” on page 836](#)
- ▶ [“Lattice Synthesis Engine-Supported HDL Attributes” on page 846](#)

### Note

---

Some IPs such as PLL requires the user to only supply the input reference clock and the Radiant software tool will automatically write out the associated generated clock constraints based on the supplied PLL parameter division ratios.

---

### See Also

- ▶ [“Handling Device Constraints” on page 225](#)
- ▶ [“Device Constraint Editor” on page 242](#)

## Handling Device Constraints

Here are some general tips for when applying device IP constraints or any primitives that generates or modifies clocking frequencies (i.e. PLL, I2C, SPI etc.). Note this does not include IP primitives from the .GBB timing files.

1. The precedence of device IP constraints supersedes user constraints.
2. User constraints will override device IP constraints.

3. TCL commands for all\_XXX and get\_XXX with wild-cards are only allowed on top level designs. When an IP is being processed as a top level design, it could contain these commands.
4. If the IPs are using all\_XXX and get\_XXX with wild cards, the commands have to be converted to get\_XXX with a list when the final SDC of the IP is written out for consumption into the top level design.
5. Any device constraints in the IP will be converted to user constraints.
6. The device constraints will be placed before the user constraints in the .SDC file.

## Applying Lattice Pre-Synthesis Timing Constraints

Radiant software LSE enables you to set pre-synthesis Synopsys® Design (formatted) Constraints, which are directly interpreted by the synthesis engine. When you use LSE, these .sdc constraints are saved to a Lattice Design Constraints file (.ldc). You can create several .ldc files and select one of them to serve as the active synthesis constraint file for an implementation.

The Source Editor and the Pre-Synthesis Constraint Editor are available for creating and editing .ldc files. Pre-Synthesis Constraint Editor provides a spreadsheet style user interface that enables you to quickly create and edit Synopsys Design Constraints.

Pre-Synthesis Constraint Editor runs a design rule check (DRC) to verify that the constraints you enter are legitimate. These checks are done in real time as you enter them in the GUI.

See [“Synopsys Design Constraints” on page 824](#) for descriptions of the .sdc constraints that are supported by the LSE and Pre-Synthesis Constraint Editor.

### See Also

- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)
- ▶ [“Integrated Synthesis” on page 340](#)
- ▶ [“Optimizing LSE for Area and Timing” on page 337](#)

## Creating a New .sdc Synthesis Constraint File

Before you create a new .sdc file, verify that LSE has been selected as the synthesis tool. In the Processes tab, “Lattice Synthesis Engine” should be listed under “Synthesize Design.” If it is not listed, choose **Project > Active Implementation > Select Synthesis Tool**, and select **Lattice LSE**.

To make sure that the .ldc file opens in Pre-Synthesis Constraint Editor instead of Source Editor, verify that Pre-Synthesis Constraint Editor is

selected as the default program. In **Tools > Options**, to set the programs to be associated with different file types based on the file extensions.

**To create a new .sdc synthesis constraint file:**

1. Choose **File > New > File**.

Alternatively, right-click the **Timing Constraint Files** folder and choose **Add > New File**.

2. In the New File dialog box, select **Source Files** from the Categories list. Select **Pre-Synthesis Constraint Files** from the Source Files list.
3. Type a name for the new .sdc file and specify the directory location.
4. Click in the **Add to Implementation** box if you want to use the file with the currently active implementation.
5. Click **New**.

Pre-Synthesis Constraint Editor opens and displays the spreadsheet and three tabs for creating and editing synthesis constraints. If you selected the **Add to Implementation** option, the new .sdc file will appear in the Pre-Synthesis Constraint Files folder.

Pulldown menus for source elements are provided when you double-click the Clock Source cells or the Inputs/Outputs Ports cells.

6. Enter or edit values for clocks, inputs and outputs, and delay paths:
  - a. Double-click a cell and type a new value, or select a value from the pulldown list.
  - b. Use the arrow keys or the Tab key to move to another cell and select it for editing.
  - c. New rows are inserted automatically. You can delete existing rows with data entered by right clicking and selecting **Remove Row** from the pop-up menu.
7. Choose **File > Save**.

**See Also**

- ▶ [“Defining Clocks Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 284](#)
- ▶ [“Setting Input and Output Delays Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 285](#)
- ▶ [“Defining Timing Exceptions Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 286](#)
- ▶ [“Synopsys Design Constraints” on page 824](#)
- ▶ [“Managing Constraint Files” on page 35](#)
- ▶ [“Integrated Synthesis” on page 340](#)
- ▶ [“Optimizing LSE for Area and Timing” on page 337](#)

## Using Source Editor for .Idc Files

Any .Idc file that you have created using the Pre-Synthesis Constraint Editor can be viewed and edited in Source Editor. Likewise, an .Idc file that you have created in Source Editor can be viewed and edited in the Pre-Synthesis Constraint Editor.

One advantage of using Source Editor is that it allows you to open multiple .Idc files at once, whereas Pre-Synthesis Constraint Editor will load only one .Idc file at a time.

### To open an .Idc file in Source Editor:

1. In the File List view, expand the Pre-Synthesis Constraints Folder.
2. Right-click the name of the .Idc file you want to open and choose **Open With**.
3. In the dialog box, select **Source Editor** and click **OK**.

The .Idc file opens in Source Editor window as an ASCII file.

### See Also

- ▶ [“Changing the Default Editor for .Idc Files” on page 228](#)

## Changing the Default Editor for .Idc Files

The Radiant software gives you the option of setting Source Editor or Pre-Synthesis Constraint Editor as the default program for .Idc files.

### To change the default editor for .Idc files:

1. Choose **Tools > Options**.
2. In the General section of the Options dialog box, select **File Associations**.
3. In the Extensions column of File Associations, scroll down to **Idc** and/or **Idc<active>**.
4. In the Default Programs column, choose **Source Editor** from the pulldown menu. The **Idc** option also allows for Add Program, an option to open with your choice of text editors.

The next time you create or select an .Idc file, it will open in the editor you selected as the default.

### See Also

- ▶ [“Managing Constraint Files” on page 35](#)

## Optimizing for Timing

The pre-synthesis constraints that you set in the .Idc file will drive optimization of the design if you set the optimization goal for timing in the active strategy file.



**To set the optimization goal for timing:**

1. From the File List view, expand the Strategies folder and double-click the name of the active strategy.
2. Select **LSE** from the Synthesis Design folder in the Process pane in the Strategies dialog box.
3. In the LSE pane on the right, scroll down to Optimization Goal and select **Timing** in the Value column.
4. Click **OK**.

**See Also**

- ▶ [“Synopsys Design Constraints” on page 824](#)
- ▶ [“Optimizing LSE for Area and Timing” on page 337](#)

## Adding an .Idc File to an Implementation

You can add multiple .Idc files to an implementation and view each of them in Pre-Synthesis Constraint Editor.

**To add an existing .Idc file to an implementation:**

1. In the File List view, right-click the Pre-Synthesis Constraint Files folder and choose **Add > Existing File**.
2. Browse to the directory that contains the desired .Idc file, select the file, and click **Add**.

The file is added to the implementation and is displayed in the Pre-Synthesis Constraint Files folder list.

**See Also**

- ▶ [“Managing Constraint Files” on page 35](#)

## Activating an .Idc File

To apply the synthesis constraints, you need to identify an .Idc file as the active one for the implementation.

**To activate an .Idc file for an implementation:**

- ▶ Right-click the file name and choose **Set as Active**.

By default, the active .Idc file is compiled when you synthesize the design.

**See Also**

- ▶ [“Managing Constraint Files” on page 35](#)


## Constraint Propagation

Constraints are usually defined for their top level design as well as include many other constraints files for any custom included IP or IPs that are generated via Radiant tools such as IP Catalog. Constraints defined at the module IP level may not contain the correct hierarchical names and hence will not be applied correctly when synthesized. To help the user be able to honor as much of their supplied constraints as possible, a constraint propagation engine will run a DRC on all the input constraints and write out a new constraint file to support hierarchical constraints, such as soft IP constraints and be honored in the top-module as to enable optimization across IP boundaries during logic synthesis.

## Constraint Handling for Multiple IPs

The diagram below gives clear examples of how instantiated IPs in the top level design will unquify ports/pins/net names as it is referenced from the top level.

IP Modules can be instantiated within other hierarchies. This will typically cause implementation tools such as synthesis to rename the design objects within the IP module with hierarchy information. While renaming of design objects is a valid operation that preserves the design functionality it causes the timing/physical constraints to become invalid since the Name/ID of design objects referred in the constraint no longer matches the Name/ID of design objects in the design. This is how constraint propagation can help resolve the issue.

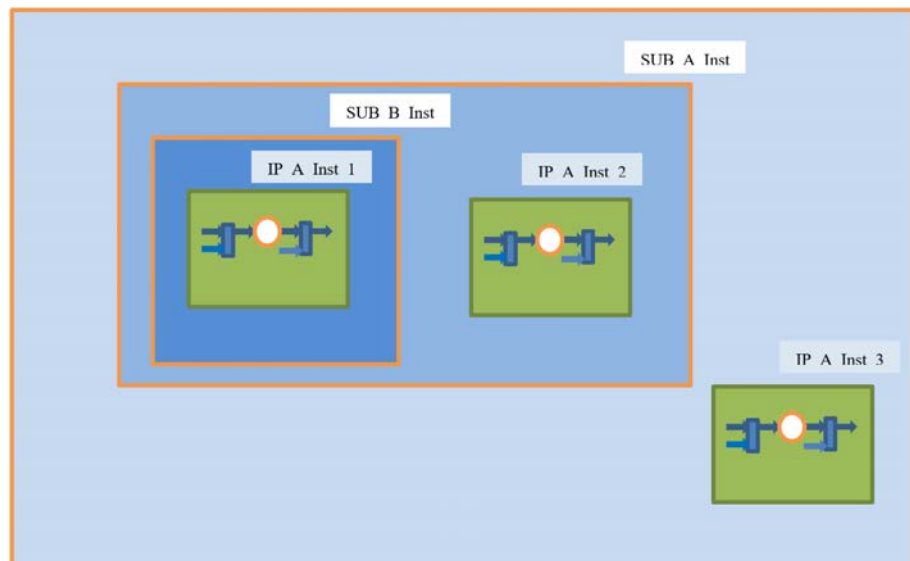

1. `set_max_delay -from IP_A_Inst_3/REG_A -to IP_A_Inst_3/REG_B 5ns`
2. `set_max_delay -from SUB_A_Inst/IP_A_Inst_2/REG_A -to SUB_B_Inst/  
SUB_B_Inst/IP_A_Inst_2/REG_B 5ns`

3. `set_max_delay -from SUB_A_Inst/SUB_B_Inst/IP_A_Inst_1/REG_A -to SUB_A_Inst/SUB_B_Inst/IP_A_Inst_1/REG_B 5ns`

## Types of Constraint Resolution

In a typical IP flow design methodology, IP modules can be instantiated more than once at potentially multiple hierarchies and at different hierarchical depths. This can cause scenarios where there is a conflict in timing constraints especially if the timing constraints applies to design objects that cross IP boundaries. Constraints are either:

1. Resolved
  - ▶ Constraint preserved as written
  - ▶ Propagated and name adjusted
2. Ignored
  - ▶ Conflict with another constraint i.e. same electrical connection  
Constraint may be removed.

After constraint propagation finishes analyzing all the constraints, it outputs two files. A full report file detailing the reasons of each constraint if propagated and preserved or conflicted with another and ignored. The output reports file is generated in the implementations directory and called *CPEReport.txt*.

If constraint propagation decides that there are any constraints that it needs to replace or edit due to conflicts of hierarchical names, it will output an intermediary constraint file with the new constraints written in *<project name>\_<implementation name>.cpe.ldc*. This file will automatically be fed into synthesis so that all the correct constraints can be processed correctly and proceed forward in the software design flow. If a user opens the post-synthesis constraint editor, all the processed constraints (i.e. removed or refined) are already reflected in this tool. A user cannot edit annotated pre-synthesis constraints but can add new post-synthesis constraints.

It should also be noted that:

1. Constraints at the IP-level may conflict with the design as a whole rather than a specific constraint, in which the constraint will be removed even if there is no similar constraint at the top level.

For example, `set_false_path -from [get_clocks clk1] -to [get_port o]` will be removed because it has a clock in it.

2. Constraints that are dropped from the IP-level will now still appear in the output .ldc file, but they will be commented out. This is to allow users to visually understand which constraints were dropped so they can examine them again if needed. The resources on these constraints will be updated top-level constraint names with hierarchy i.e. 'top/ip1/a' rather than just 'a' so they can be copy/pasted and used in the top level if necessary.

From the example above, the output constraint will be: *#set\_false\_path - from [get\_clocks clk1] -to [get\_port o]*. The reasoning for why the constraint was removed will also be as specific as possible for the user in the CPEReport.txt file.


## Processed Constraint Types

Constraint Propagation will only process the following constraint types. All other types will be passed through the flow to our other tools.

- ▶ [create\\_clock](#)
- ▶ [create\\_generated\\_clock](#)
- ▶ [set\\_clock\\_groups](#)
- ▶ [set\\_clock\\_latency](#)
- ▶ [set\\_clock\\_uncertainty](#)
- ▶ [set\\_false\\_path](#)
- ▶ [set\\_input\\_delay](#)
- ▶ [set\\_output\\_delay](#)
- ▶ [set\\_load](#)
- ▶ [set\\_max\\_delay](#)
- ▶ [set\\_max\\_skew](#)
- ▶ [set\\_min\\_delay](#)
- ▶ [set\\_multicycle\\_path](#)
- ▶ [ldc\\_set\\_port](#)
- ▶ [ldc\\_set\\_location](#)

## Timing Constraint Resolution

The diagram depicts a sample design and the example table exhibits the analysis that constraint propagation will perform. constraint propagation will print out a resolution report (aforementioned) including the source constraint, source module of the constraint, resolution status, resolved constraint and the resolution method as shown in the table.

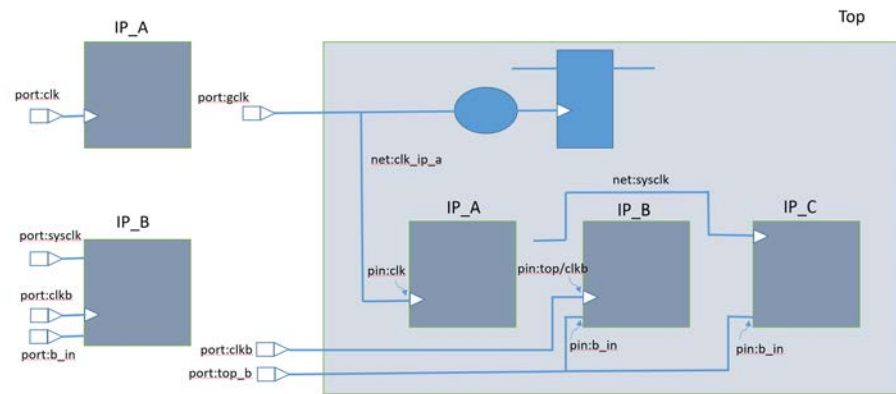

### Note

In the following table, in the “User Action to Keep the Constraint” column, “Redefine” means to assess the IP-level constraint objects, map to top-level hierarchy which can be either simply adding hierarchy to the pin name or choosing a new top-level object, and then creating a new constraint at top-level with those objects.

**Table 18: Timing Constraint Resolution Summary**

|   | Constraint Input                                                              | Source Module | Resolution Status | Constraint Output                                                                      | Resolution Method            | User Action to Keep the Constraint                     |
|---|-------------------------------------------------------------------------------|---------------|-------------------|----------------------------------------------------------------------------------------|------------------------------|--------------------------------------------------------|
| 1 | create_clock -name {clk_top} -period 5<br>[get_ports gclk]                    | Top           | Resolved          | create_clock -name {clk_top} -period 5<br>[get_ports gclk]                             | Constraint preserved         | No action needed.                                      |
| 2 | create_clock -name {clk_ip_a} -period 10<br>[get_ports clk]                   | IP_A          | Ignored           | Constraint #1                                                                          | Conflict with Constraint #1  | Confirm satisfaction with top-level clock.             |
| 3 | create_clock -name {clk_ip_b} -period 10<br>[get_ports clkb]                  | IP_B          | Ignored           | Defined on IP Input Port                                                               | Ignore. Warn user            | Redefine IP-level clock on appropriate top-level port. |
| 4 | create_generated_clock -divide_by 2 -source [get_ports clkb] [get_pins b_out] | IP_B          | Resolved          | create_generated_clock -divide_by 2 -source [get_pins IP_B/clkb] [get_pins IP_B/b_out] | Propagated and name adjusted | No action needed.                                      |

**Table 18: Timing Constraint Resolution Summary**

|   | Constraint Input                                             | Source Module | Resolution Status | Constraint Output                                                    | Resolution Method                   | User Action to Keep the Constraint                                            |
|---|--------------------------------------------------------------|---------------|-------------------|----------------------------------------------------------------------|-------------------------------------|-------------------------------------------------------------------------------|
| 5 | set_input_delay -clock [get_clock sysclk] 9 [get_ports b_in] | IP_B          | Ignored           | Removed                                                              | IP-Level input delay not propagated | Redefine at top-level input port.                                             |
| 6 | set_clock_groups [get_clocks clk] -group [get_clocks clk2]   | IP_B          | Ignored           | Removed                                                              | At least one clock is not internal  | Translate to set_false_path and use appropriate user/custom IP-level objects. |
| 7 | set_max_delay -from [get_ports b_in] -to [get_ports b_out] 5 | IP_B          | Resolved          | set_max_delay -from [get_pins IP_B/b_in] -to [get_pins IP_B/b_out] 5 | Max and Min delay always propagated | No action needed.                                                             |

Constraint propagation processes all timing constraints that are entered in the original user constraint file.

## Physical Constraint Resolution

Constraint propagation will resolve two different physical constraints: [“ldc\\_set\\_location” on page 897](#) and [“ldc\\_set\\_port” on page 898](#). IP modules that can also have physical constraints such as “LOC” specified. All design objects with “LOC” constraint will be resolved with hierarchical names. LOC constraints now check for conflict with top layer, and will accept IP LOC constraints if it is electrically connected to top level port.


All physical attributes ([“HDL Attributes” on page 805](#)) that able to be set by ldc\_set\_port will also be analyzed and processed accordingly.

**Table 19: Physical Constraint Resolution Summary**

|   | Constraint Input                            | Source Module | Resolution Status | Constraint Output                           | Resolution Method           |
|---|---------------------------------------------|---------------|-------------------|---------------------------------------------|-----------------------------|
| 1 | ldc_set_location -site A1 [get_ports top_b] | Top           | Resolved          | ldc_set_location -site A1 [get_ports top_b] | Constraint preserved        |
| 2 | ldc_set_location -site B1 [get_ports b_in]  | IP_B          | Ignored           | Constraint #1                               | Conflict with Constraint #1 |

**Table 19: Physical Constraint Resolution Summary**

|   | Constraint Input                                                                    | Source Module | Resolution Status | Constraint Output                                                   | Resolution Method                          |
|---|-------------------------------------------------------------------------------------|---------------|-------------------|---------------------------------------------------------------------|--------------------------------------------|
| 3 | Attribute example<br>Module instance<br>dsp_a /* synthesis LOC =<br>"MULT_R1C9" */; | IP_B          | Resolved          | ldc_set_location -site<br>MULT_R9C9 [get_cells<br>IP_B/dsp_a]       | Propagated,<br>constraint<br>preserved     |
| 4 | ldc_set_port -iobuf<br>{IO_TYPE=LVTTTL33}<br>[get_ports {top_b[0]}]                 | Top           | Resolved          | ldc_set_port -iobuf<br>{IO_TYPE=LVTTTL33}<br>[get_ports {top_b[0]}] | Constraint<br>preserved                    |
| 5 | ldc_set_port -iobuf<br>{IO_TYPE=LVDS} [get_ports<br>a_in]                           | IP_A          | Ignored           | Constraint #1                                                       | Conflict with<br>Constraint #4             |
| 6 | input [1:0] top_b<br>/* synthesis IO_TYPE=LVDS<br>*/;                               | Top           | Resolved          | ldc_set_port -iobuf<br>{IO_TYPE=LDVDS}<br>[get_ports {top_b[1]}]    | Propagated,<br>conflicting port<br>removed |
| 7 | ldc_set_port -iobuf<br>{IO_TYPE=LVDS<br>PULLMODE=UP} [get_ports<br>b_in]            | IP_B          | Resolved          | ldc_set_port -iobuf<br>{PULLMODE=UP}<br>[get_pins IP_B/b_in]        | Propagated,<br>conflicting type<br>removed |

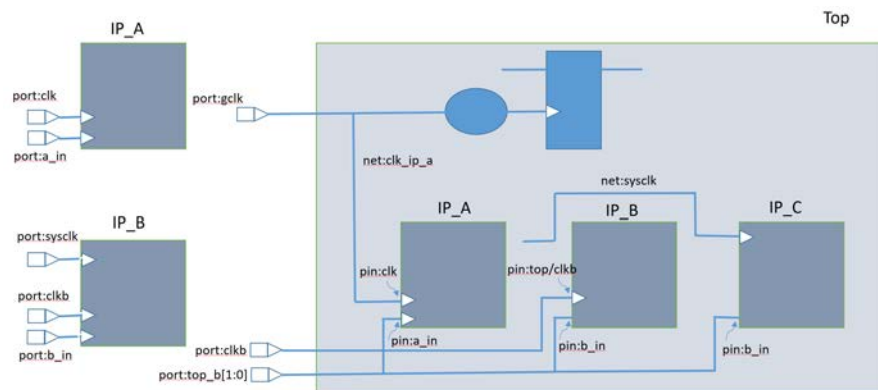

Constraint propagation processes all timing constraints that are entered in the original user constraint file.

## Constraint Resolution Specifics

Timing constraints have different situations and environments which they can be applied in. Sometimes a constraint that is valid on an IP module cannot be accepted even when updated to top-level resources due to restrictions on the

constraint. The following restrictions have been placed on timing constraints which Constraint Propagation needs to follow.

- ▶ **create\_clock:** Two create\_clock constraints cannot exist on the same net. No two create\_clock constraints can have the same -name setting. All IP-level clocks will have their -name changed to be <instanceName>\_<originalName>
- ▶ **create\_generated\_clock:** This is the same as create\_clock rule above.
- ▶ **set\_clock\_latency / set\_clock\_uncertainty:** When some or all of the clocks that these constraints have been applied to have been removed due to conflicts with top or other IP, to avoid constraining incorrect parts of the design, the constraint will be dropped.
- ▶ **set\_input\_delay / set\_output\_delay:** These constraints can only exist when applied to a top-level port. Constraint Propagation will remove all IP-Level set\_input / output\_delay constraints and warn the user.

**Table 20: Constraint Resolution Specific Scenarios**

| Constraint Type (IP Level) | When it is Propagated                                                                                                  | When it is Ignored                                                                                   |
|----------------------------|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| create_clock               | When defined internally to the IP or on an output port.                                                                | When defined on IP-level input port or net driven by input port. Warn user to redefine at top-level. |
| create_generated_clock     | All cases.                                                                                                             | N/A                                                                                                  |
| set_clock_groups           | N/A                                                                                                                    | Always, warning given to user to redefine set_clock_groups at top level.                             |
| set_clock_latency          | N/A                                                                                                                    | Always.                                                                                              |
| set_clock_uncertainty      | Only when clock referenced is internal to IP.                                                                          | When clock referenced is removed or if the clock is on input port.                                   |
| set_input_delay            | N/A                                                                                                                    | All cases.                                                                                           |
| set_output_delay           | N/A                                                                                                                    | All cases.                                                                                           |
| set_max_delay              | All cases.                                                                                                             | N/A                                                                                                  |
| set_max_skew               | All cases.                                                                                                             | N/A                                                                                                  |
| set_min_delay              | All cases.                                                                                                             | N/A                                                                                                  |
| set_false_path             | Only when all clocks referenced are IP-level clocks and those clocks are not removed. A warning will always be issued. | When any of the clocks referenced are removed or when only one clock is referenced.                  |
| set_multicycle_path        | Only if there are no clocks referenced.                                                                                | Whenever clocks are referenced.                                                                      |
| set_load                   | N/A                                                                                                                    | All cases.                                                                                           |



# Attributes and Constraint Propagation

Constraint propagation will not convert attributes from within RTL to find physical constraints. Constraint propagation will act only on physical constraints present in the input .ldc files. These attributes will be processed by Lattice Synthesis engine and post-synthesis engines instead.

## CDC (Clock Domain Crossing) Register

You can constrain CDC registers using the **CDC\_register** attribute.

### Attribute Usage Example

```
/* synthesis syn_preserve=1 CDC_Register=<int>*/
```

---

#### Note:

- ▶ For Avant device, the value of <int> could only be 1, 2,...12.
  - ▶ For other devices, the value of <int> could only be 1, 2,...8.
- 

### Using the CDC\_register attribute

When this attribute is applied on RTL registers, it will be forward annotated on flop primitives in the .vm netlist. The RTL registers with the **CDC\_register** attribute will be preserved during synthesis and will not be used for timing optimization such as re-timing, pipelining, or packing into complex cells such as RAMs and DSP primitives. This attribute is not supported for the iCE40UP device.

---


#### Note

The CDC\_register attribute is converted to a set\_max\_delay constraint by the timing engine. The engine will go through all the CDC\_register attributes and group registers that can be combined into a single set\_max\_delay constraint. The designer can use the set\_max\_delay constraint directly instead of adding the CDC\_register attribute.

---

The following example shows the CDC\_register=1 attribute on the B flip-flop


- ▶ It tells the timing engine to ignore the path between A and B.
- ▶ Synthesis preserves and avoids optimizing the CDC register and implements it using a flip-flop.

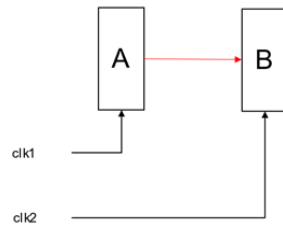

### Using CDC register with multi-flop synchronizers

This option lets you use more than one register for synchronization.

The following shows an example of CDC register with multi-flop synchronizers.

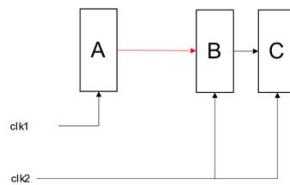

- ▶ If B and C are synchronization registers, and the CDC\_register=2 is on the B flip flop, it can be used to inform Radiant about the two registers.
- ▶ The timing engine ignores the path from A to B.
- ▶ Synthesis preserves and avoids optimizing the CDC registers and implements them using individual flip-flops.
- ▶ The placement engine places B and C close to each other.
- ▶ The routing engine uses a short wire for the path from B to C.
- ▶ The clock domain crossing input pin of the B flop will not be considered for timing analysis. The timing engine will not report the path for A to B.

#### Note:

There must be no components between the CDC registers. The fanout of the nets between the registers B, C,...must be 1.

## Limitations for Constraint Propagation

1. Parameterized module - constraint propagation flow does not support parameterized constraints at the top level.
2. Object Name Compatibility between LSE and Synplify - Internal design object names may be different between LSE and Synplify Pro flows.

Hence, user constraints at the sub-module level for a synthesis tool cannot be guaranteed. This limitation does not apply to Lattice IP.

## Post-Synthesis IP Constraint Propagation

This section describes the components and features of Post-synthesis IP constraint propagation in Radiant.


### Overview

Post-synthesis IP constraint propagation in Radiant enables a single IP constraint file with Tcl statements. This supports multiple constraints files to specify different stages and synthesis tools through pre-defined Radiant variables.

### For more information:

- ▶ [“Understanding Implications of Radiant Software Constraint Flows” on page 212](#)
- ▶ [“Unified Constraints Flow” on page 209](#)


## Post-Synthesis IP Constraint Propagation Process Overview

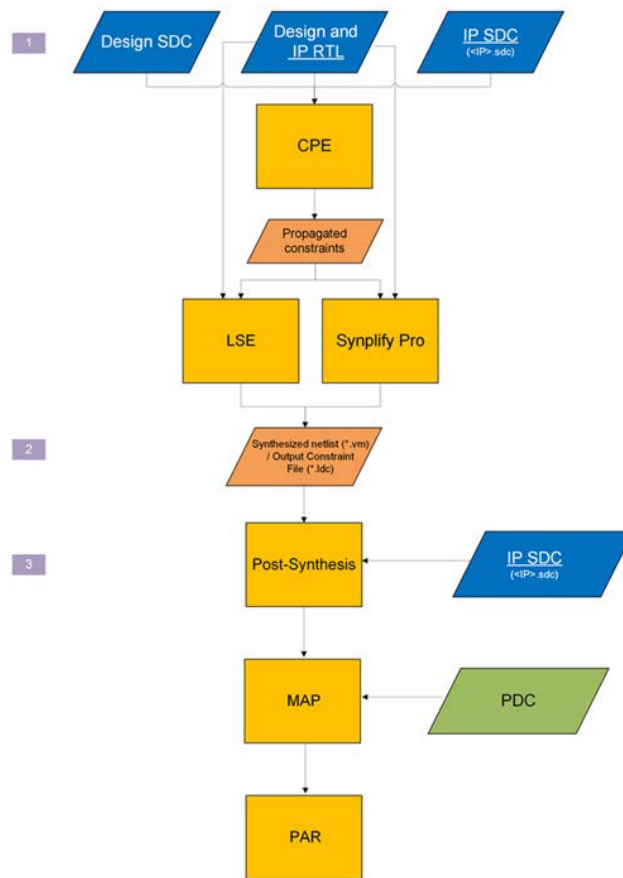

- 1. Constraint File Parsing:** Design SDC, Design and IP RTL, and IP SDC files are parsed through Constraints Propagation Engine (CPE) which compiles all inputs from multiple .sdc files, from IP and user constraints and creates a propagated LDC file which will be consumed by Lattice Synthesis Engine (LSE) and Synplify Pro.
- 2. Synthesis Output:** A synthesized structural Verilog file (\*.vm) will be an outcome of the LSE and Synplify Pro.
- 3. Post-Synthesis Stage:** The synthesized Verilog file (\*.vm) and (\*.ldc) constraints file will be used in the post-synthesis stage. You can also enter post-synthesis constraints using PDC file. Go to **Tools > Design Constraint Editor** and save as PDC (\*.pdc) file, or directly edit PDC file which will be consumed by MAP and PAR.

## Opening the Single Constraint File

To open the single constraint file in GUI, open your project and look for the .sdc file under 'Constraint Files' folder.

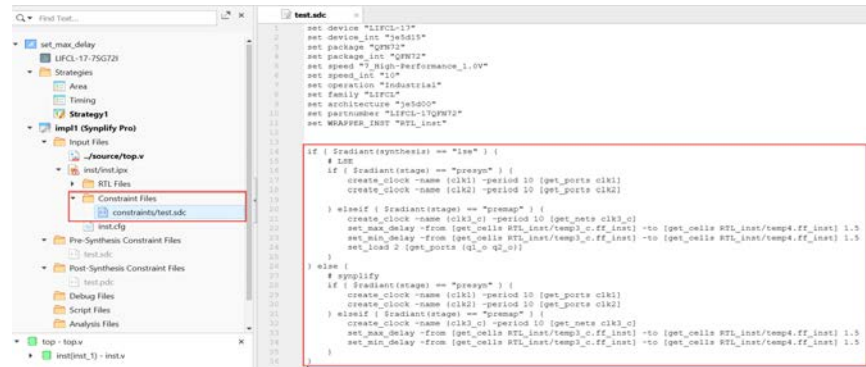

## (\* .sdc) Script Example

A single IP constraint file with Tcl scripting commands covers the synthesis tool for LSE and Synplify Pro, and presyn for pre-synthesis, and premap for post-synthesis design stage as shown in the reference code below.

```
if { $radiant(synthesis) == "lse" } {
    # LSE Configuration
    if { $radiant(stage) == "presyn" } {
        #Pre-synthesis stage constraints
        create_clock -name {clk1} -period 10 [get_ports clk1]
        create_clock -name {clk2} -period 10 [get_ports clk2]
    } elseif { $radiant(stage) == "premap" } {
        #Post-synthesis stage constraints
        create_clock -name {clk3_c} -period 10 [get_nets clk3_c]
        set_max_delay -from [get_cells RTL_inst/temp3_c.ff_inst]
        -to [get_cells RTL_inst/temp4.ff_inst] 1.5
        set_min_delay -from [get_cells RTL_inst/temp3_c.ff_inst]
        -to [get_cells RTL_inst/temp4.ff_inst] 1.5
        set_load 2 [get_ports {q1_o q2_o}]
    }
} else {
    # Synplify Pro Configuration
    if { $radiant(stage) == "presyn" } {
        #Pre-synthesis stage constraints
        create_clock -name {clk1} -period 10 [get_ports clk1]
        create_clock -name {clk2} -period 10 [get_ports clk2]
    } elseif { $radiant(stage) == "premap" } {
        #Post-synthesis stage constraints
        create_clock -name {clk3_c} -period 10 [get_nets clk3_c]
        set_max_delay -from [get_cells RTL_inst/temp3_c.ff_inst]
        -to [get_cells RTL_inst/temp4.ff_inst] 1.5
        set_min_delay -from [get_cells RTL_inst/temp3_c.ff_inst]
        -to [get_cells RTL_inst/temp4.ff_inst] 1.5
    }
}
```

| Constraint                                                             | Usage Instructions                                        |
|------------------------------------------------------------------------|-----------------------------------------------------------|
| <code>\$radiant(synthesis) == "Ise"</code>                             | When the current synthesis tool is 'Ise'.                 |
| <code>\$radiant(stage) == "presyn"</code>                              | When the current stage is 'presyn'.                       |
| <code>create_clock -name {clk1} -period 10 [get_ports clk1]</code>     | Define clock constraint for clk1.                         |
| <code>\$radiant(stage) == "premap"</code>                              | When the current stage is 'premap'.                       |
| <code>set_max_delay -from [get_cells RTL_inst/ temp3_c.ff_inst]</code> | Specify maximum delay for the timing paths.               |
| <code>set_false_path -from [get_ports {q}]</code>                      | Specify paths that must be excluded from timing analysis. |

**See also:**

- ▶ ["Radiant Software Tool Tcl Command Syntax" on page 1786](#)
- ▶ ["Constraints Reference Guide" on page 804](#)

## Using Radiant Software Constraints Tools

The Radiant software provides tools for editing design constraints. These tools, which are available from the Radiant software toolbar and Tools menu, include the following:

- ▶ ["Device Constraint Editor" on page 242](#)
- ▶ ["Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor" on page 281](#)
- ▶ ["Physical Designer" on page 297](#)

The Radiant software constraints tools enable you to develop constraints that shorten turn-around time and achieve a design that conforms to critical circuit performance requirements.

This section describes these Radiant software constraints tools and how to use them.

## Device Constraint Editor


Device Constraint Editor is used to edit .pdc constraints. These constraint editing views are available from the Radiant software toolbar and Tools menu.

All modified constraints will be saved to a .pdc file and the flow will return to Map. The Device Constraint Editor shows the pin layout of the device and displays the assignments of signals to device pins. This view allows the user

to edit these assignments, reserve sites on the layout to exclude from placement and routing. The Device Constraint Editor is also the entry mechanism for physical constraints.

Device Constraint Editor views enable you to develop constraints that will shorten turn-around time and achieve a design that conforms to critical circuit performance requirements.

The following figure shows the Device Constraints Editor.

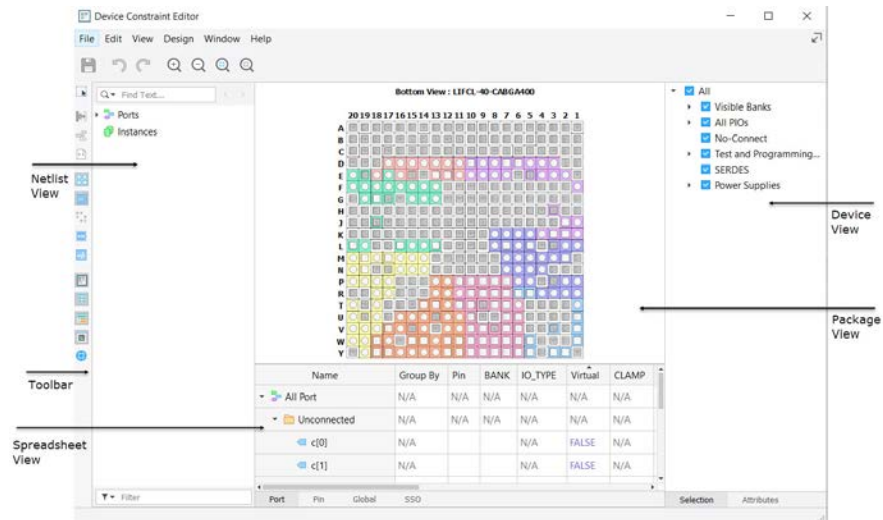

The Device Constraints Editor allows you to do the following tasks:

- ▶ Define physical constraints based on design signals and logic elements.
- ▶ Define sysIO Buffer properties based on design signals.
- ▶ Constrain clock signals to particular routing spines.
- ▶ View, assign, and validate design signals and package pins.
- ▶ Assign voltage reference pins.
- ▶ Perform DRC tests to ensure legal pin assignments or to detect incomplete or illegal conditions within the physical design database.
- ▶ Back annotate post-route pin assignments to a logical constraint file.

## Viewing Port, Pin, Global Assignments, and SSO in Device Constraint Editor

The Device Constraint Editor has a spreadsheet view that provides a tabular format for viewing and assigning logical constraints. It displays all constraints, including those that have been assigned.

As soon as you have specified the target device, you can use this view to set global constraints. After synthesis and translation, you can use all of the following constraint sheets to create and modify constraints:

**Port** The Port tab provides a signal list of the design and shows any pin assignments that have been made.

By default, the ports are grouped by direction—Input, Output, and Bidirectional—plus an “Others” category that includes user-defined port groups. This allows you to quickly focus on Outputs, for example, by closing the display of Input ports or vice versa.

The Port tab enables you to assign or edit pin locations and other attributes by entering them directly on the spreadsheet. It also allows you to assign multiple signals, by right-clicking the selected signals and opening the Assign Ports dialog box.

When the Assign Ports dialogue appears, the pins from the right side of the window can be dragged into the desired port shown in the left hand side of the window.

**Pin** The Pin tab provides a pin list of the device and shows the signal assignments that have been made. In the Dual Function column, pins that can be used for I/O assignments or for another function, such as Vref, are identified.

You can show differential pin pairs by selecting **View > Show Differential Pairs**.

The Pin tab enables you to edit signal assignments or assign new signals by right-clicking selected pins and opening the Assign Pins dialog box.

**Global** The Global tab provides general device information such as junction temperature, voltage, derating, VCCIO (and banks), Global Set/Reset nets and Use Primary Net to select the primary clock or critical nets. When the Global tab is selected, the package view is no longer shown unlike when the Pin or Port tab is selected.

**SSO** The SSO tab allows you to view and edit SSO information for each output pin. See [“Running SSO Analysis” on page 328](#).

See Also

- ▶ [“Assigning Signals” on page 307](#)
- ▶ [“Setting Port, Net, and Cell Attributes” on page 310](#)
- ▶ [“Setting Global Settings” on page 256](#)

## Viewing Package View and Pin Layout in the Device Constraint Editor

The Device Constraint Editor has a Package View that shows the pin layout of the device and displays the assignments of signals to device pins. The Package View interacts with the Netlist View, which is listed on the left side of the screen, to assign pins that enable you to drag selected signals to the desired locations on the pin layout.



Each pin that is assigned with a constraint is color-coded to indicate the port direction of the related signal port. The Package View allows you to edit these assignments, and it allows you to reserve sites on the layout that you want to exclude from placement and routing.

The Netlist view displays the RTL netlist objects including ports, instances and nets from RTL view. It will be docked in the package view for easy signal assignment. Selected signals from this view.

**See Also** ▶ [“Modifying Signal Assignments using the Device Constraint Editor” on page 309](#)

▶ [“Using the Zoom and Pan Tools in Device Constraint Editor” on page 252](#)

## Using the “Show” Commands

When Device Constraint Editor is open, the View menu provides two groups of “Show” commands. The first group consists of commands that are mutually exclusive; when one command is activated, the others become inactive. The second group consists of commands that are not mutually exclusive; they can be activated at the same time that another “Show” command is active.

In addition to the View menu, the “Show” commands are available from the pop-up menu when you right-click a blank space on the Package View layout.

**Mutually Exclusive Commands** Only one command can be used at a time:

- ▶ Show [Bank IO](#)
- ▶ Show [Port Group](#)
- ▶ Show [DQS Group](#)
- ▶ Show [SSO Group](#)

**Non-mutually Exclusive Commands** The following commands can be activated while another “Show” command is active:

- ▶ [Displaying I/O Placement Assignments in Device Constraint Editor Package View](#)
- ▶ Show [Differential Pairs](#)

## Displaying Bank I/O Assignments

By default, Package View displays any assigned I/Os within each color-coded bank. However, the bank I/O display is turned off when the display for Port groups or DQS groups is turned on.

**To display bank I/Os:**

- ▶ In Device Constraint Editor, choose **View > Show Bank IO**.

The I/O assignments are displayed within each bank. Port groups and DQS groups, and SSO groups are hidden.

## Displaying Port Groups in Device Constraint Editor

Device Constraint Editor enables you to view the placement of assigned port groups on the pin layout. Each port group is color-highlighted with the same distinctive color that is displayed in the Group sheet of the Spreadsheet View.

### To display port groups:

- ▶ In Device Constraint Editor, choose **View > Show Port Group**.

The color-coded port groups are displayed. Bank I/O assignments, DQS groups, and SSO groups are hidden.

## Displaying DQS Groups in Device Constraint Editor

You can view the placement of DQS groups in color-coded format on Device Constraint Editor pin layout by turning on the “Show DQS Groups” command.

### To display DQS Groups:

- ▶ In Device Constraint editor, choose **View > Show DQS Group**.

The color background of each DQS group is displayed. Bank I/O assignments, port groups, and SSO groups are hidden.

## Displaying SSO Groups in Device Constraint Editor

The “Show SSO View” command, available from Device Constraint Editor, displays the output pins that have been selected for SSO analysis. Tool tips for each pin provide SSO details. Output pins that passed SSO analysis are color-coded green; those that failed are color-coded red. This command also opens the SSO report in the Output window.

### To display the SSO View:

- ▶ In Device Constraint Editor, choose **View > Show SSO View**.

The SSO analysis output pins are displayed, color-coded according to pass or fail status. Bank I/O assignments, port groups, and DQS groups are hidden. The tool tip for each SSO pin includes information from the SSO Analysis Report.


## Displaying Differential Pin Pairs in Device Constraint Editor

The “Show Differential Pairs” command enables you to identify all the differential pin pairs on a layout. When this command is activated, fly wires are displayed that connect the differential pin pairs. Each unplaced positive differential pin displays a small magenta-colored cross in the upper right corner. By default, these indicators are hidden.

**To display differential pin pairs:**

- ▶ In Device Constraint Editor, choose **View > Show Differential Pairs**.

The layout displays the fly wires connecting differential pins and the cross indicator for each positive differential pin.

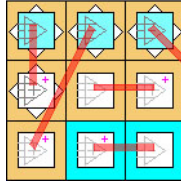

The “Show Differential Pairs” command acts as a toggle key and displays a check mark when the differential pair fly wires are displayed. Select **View > Show Differential Pairs** to turn off the display.

**See Also**

- ▶ [“Prohibiting Incompatible Pins” on page 311](#)

## Displaying I/O Placement Assignments in Device Constraint Editor Package View

After placement and routing, Package View enables you to examine all pin assignments, including those made by Place & Route (PAR). A rotated square in the background of each placed pin serves as a placement indicator when the “Display IO Placement” command is turned on. The pin assignments are displayed with a color fill to distinguish them from PAR-assigned pins.

**To display I/O Placement assignments in Package View:**

- ▶ In Package View, choose **View > Display IO Placement** or click the Display IO Placement button  on the toolbar. The border color around the box indicates the Bank info which is shown in the right hierarchy view. Pin assignments that originated from the .pdc file are displayed with a color fill. Blue is output signal; green is input signal.




The “Display IO Placement” command acts as a toggle key and displays a check mark when the assignments are displayed. Select the command again to turn off the display.

When you edit pin assignments after placement and routing and save them, the placement indicators are cleared from Device Constraint Editor. The “Display IO Placement” command is then unavailable until you rerun Place & Route.

## Specifying Virtual I/O Ports

The Radiant Virtual I/O flow is useful in checking the design timing, resource utilization, or performance of a selected device to determine if your modules exceeded the number of physical pins present in the FPGA (e.g., during an IP design). Without the Virtual I/O flow, the implementation will result in an error due to the number of I/Os exceeding the device capacity. You can use the Virtual I/O flow to specify certain ports as "virtual" ports at the top level.

Refer to the following flow chart.

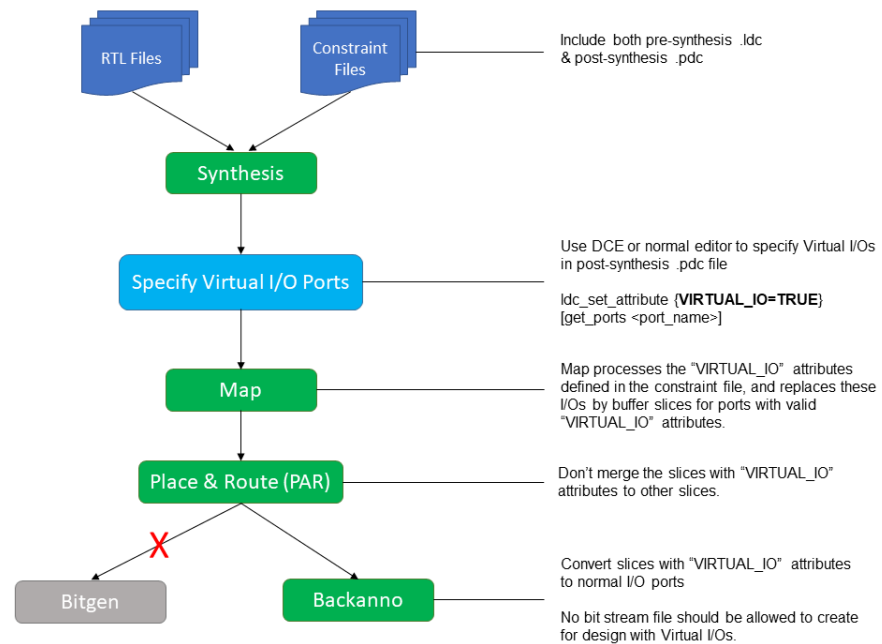

A Virtual I/O is terminated in the LUT instead of a PIO. This is reported as the "Number of feedthrough LUT4s" in the MAP report, and is not included in the number of LUTs in the design implementation.

If the total number of real ports in the design is less than or equal to the total number of I/O ports in the device, you can use the regular Radiant flow for such IP without the Virtual I/O flow.

### To specify the Virtual I/O ports in the selected I/Os:

- ▶ In the .pdc file using `ldc_set_attribute`.

**Syntax:**

```
ldc_set_attribute {VIRTUAL_IO=TRUE} [get_ports
<port_name>]
ldc_set_attribute {VIRTUAL_IO = TRUE} [get_ports ch0_sdrxp]
```

**Notes:**

Wildcard "\*" is supported for the port names:

```
ldc_set_attribute {VIRTUAL_IO = TRUE} [get_ports datain*]
```

---

- ▶ Using the DCE Spreadsheet View Virtual column, set the required ports value to "TRUE." By default, the value is set to "FALSE."

**See Also**

- ▶ ["Checking the Virtual I/O Ports" on page 249](#)
- ▶ ["Verifying Virtual I/O Ports" on page 250](#)

## Checking the Virtual I/O Ports

The Virtual I/O attribute for a port is ignored if one of the following conditions is met:

- ▶ The I/O port is with tristate signal.  
e.g. tristate output or bi-directional I/O. Tristate support is only in I/O port.
- ▶ The I/O port is with LOCATION constraint.  
When user specifies the location (either to pin or bank), it is a real external I/O.
- ▶ The I/O port is with IO\_TYPE attribute in RTL or constraint.  
When user specifies IO\_TYPE, it is a real external I/O. Virtual I/O should not be specified for the ports with IO\_TYPE attribute.
- ▶ The I/O port is connected with DELAY module.
- ▶ The I/O port is not a simple input buffer (IB) or output buffer (OB) but a special I/O buffer, either from an IP or RTL instantiation.  
e.g. MIPI, SEIO18\_CORE, DIFFIO18\_CORE, etc.  
Its special usage means it is a real external I/O.
- ▶ The I/O port drives a clock signal or is driven by a clock signal.
- ▶ The I/O port is connected to an external I/O directly in a hardware device, such as:
  - ▶ APIO pin of a component (e.g. High speed I/O in PCIE)
  - ▶ JTAG ports
  - ▶ Some ports of ADC/PMU/I2C etc. components
  - ▶ IDDR's D input
  - ▶ ODDR's Q output
  - ▶ DQS's DQSI input

**Notes:**

I/O registers are treated differently in the LFCPNX (CertusPro-NX) and UT24CP (CertusPro-NX-RT) device versus the iCE40UP (iCE40 UltraPlus) device. For the LFCPNX and UT24CP device, IOLOGIC is a whitebox cell model. I/O registers are mapped into IOLOGIC. So, when IREG's D input or OREG's Q output is a Virtual I/O port, the I/O REG will be pushed into PLC (SLICE).

However, for the iCE40UP device, I/O register is in IOLOGIC black box. It is packed by the synthesis tool. As a result, the Virtual I/O constraints will be ignored for ports associated with I/O registers.

**See Also**

- ▶ [“Specifying Virtual I/O Ports” on page 248](#)
- ▶ [“Verifying Virtual I/O Ports” on page 250](#)

**Verifying Virtual I/O Ports**

There are several ways to verify Virtual I/Os.

**Viewing Virtual I/Os in DCE** If you have specified the Virtual I/O attributes for some I/O ports in the Post-Synthesis constraint file (.pdc), you can see them in the "Virtual" column. As shown in the following figure, the ports "datain[0]" to "datain[7]" are virtual I/Os.

| Name      | Group By | Pin   | BANK | IO_TYPE          | Virtual | CLAMP  |
|-----------|----------|-------|------|------------------|---------|--------|
| clk       | N/A      | (E12) | (0)  | LVCMOS33(LVCM... | FALSE   | ON(ON) |
| datain[0] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[1] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[2] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[3] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[4] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[5] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[6] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |
| datain[7] | N/A      | N/A   | N/A  | N/A              | TRUE    | N/A    |

**Changing Virtual I/O attributes in DCE** If you save the result, the Radiant software will ask you to rerun the Map Design and Place & Route Design processes, since the .pdc file has been changed.

**Viewing Virtual I/Os in the Map Report file** The number of Virtual I/Os are reported in the Map Report (.mrp) file. Here is an example:

---

Number of LUT4s: 8 out of 32256 (<1%)

---

|                                       |                    |
|---------------------------------------|--------------------|
| Number used as logic LUT4s:           | 0                  |
| Number used as distributed RAM:       | 0 (6 per 16X4 RAM) |
| Number used as ripple logic:          | 0 (2 per CCU2)     |
| Number of inserted feedthrough LUT4s: | 8                  |
| Number for virtual IO:                | 8                  |
| <b>Number of Virtual IOs:</b>         | <b>8</b>           |

---

The report shows that the "Number of Virtual I/Os" is 8, and it used 8 LUTs to replace the specified Virtual I/O ports. These eight LUTs are part of "Number of inserted feedthrough LUT4s."

You can find the individual Virtual I/Os in the "I/O (PIO) Attributes" section in the same .mrp file. If a port is a Virtual I/O, the value is marked as "VIRTUAL" in column "Levelmode IO\_TYPE."

---

| I/O Name  | Direction | Levelmode<br>IO_TYPE | I/O REG | I/O DDR | Special I/O Buffer |
|-----------|-----------|----------------------|---------|---------|--------------------|
| clk       | INPUT     | LVCMOS33             |         |         |                    |
| datain[7] | INPUT     | <b>VIRTUAL</b>       |         |         |                    |
| datain[6] | INPUT     | <b>VIRTUAL</b>       |         |         |                    |
| datain[5] | INPUT     | <b>VIRTUAL</b>       |         |         |                    |

---

#### See Also

- ▶ ["Specifying Virtual I/O Ports" on page 248](#)
- ▶ ["Checking the Virtual I/O Ports" on page 249](#)

## Changing Device Constraint Editor Default Color Coding

The color coding in Package View is used to differentiate each bank and each type of pin. You can easily view the significance of each color by opening the Color Legend by going to **Tool > Options, Color** tab on the left and **Device** tab in the main pain. The Color Legend Tab also enables you to change the default color coding for banks and pin types.

#### To change the default color coding for banks and pins:

1. Go to **Tool > Options, Color** tab on the left and **Device** tab in the main pain.

2. Double-click the color box under the Color column of the desired bank or pin type listed in the Name column that you want to change.
3. In the Select Color dialog box, select a different color and click **OK**.
4. If you want to change more than one color, click **Apply** in the dialog box, and then repeat Steps 3 and 4. To revert to the default colors, click **Restore**.
5. When you have finished color editing, click **Close**.

## Filtering the Display of Banks and Pin Types in Device Constraint Editor

When you open Device Constraint editor, it shows all banks and pin types by default. In the Radiant software, the window to the right of the main device view shows the banks and pin types so that only selected banks and pin types are displayed via the Selection and Attributes tabs.

### To filter the display of banks and pin types in Package View:

1. On the right hand side select Selection tab, you can check or uncheck the different types of IOs.

### See Also

- ▶ [“Using the “Show” Commands” on page 245](#)

## Reversing the Pin Layout View in Device Constraint Editor

You can reverse the view of Package View 's device pin layout from a bottom to top perspective, or vice versa.

### To reverse the pin layout view:

- ▶ From the Device Constraint Editor, choose **View > Top View** or **View > Bottom View**.

The View command acts as a toggle key and changes to its opposite, depending on the current view.

## Using the Zoom and Pan Tools in Device Constraint Editor

The Radiant software toolbar provides zoom tools for the Device Constraint Editor. In addition, the vertical toolbar included with Package View provides commands that work together with the zoom tools to help you navigate to



different objects and areas of the layout. All of the views enable you to zoom in and out using the mouse wheel and function key combinations, and to pan using the arrow keys.

### Note

---

The zoom and pan tools, vertical toolbar, and area selection using the mouse are also available in the Physical Designer tool.

---

**Radiant Software Toolbar Zoom Commands** The following commands are available on the Radiant software toolbar and in the View menu for each layout view.



Zoom In – enlarges the view of the entire layout.



Zoom Out – reduces the view of the entire layout.



Zoom Fit – reduces or enlarges the entire layout so that it fits inside the window.



Zoom To – enlarges the view to only show a selected pin.

**Area Zoom with the Mouse** You can enlarge an area of the layout by holding the left mouse button and dragging to the right and downward. Afterwards, you can zoom out of the area by dragging your mouse upward and to the left.  **Area Selection Mode** – enables you to select objects on the layout by clicking an individual object or by dragging around an area to select multiple objects. It also enables you to move an assignment to a different location by dragging it. After selecting objects, you can zoom in with the Zoom To command. The Select command is activated by default. When Select is active, the Pan and Zoom Area commands are disabled.

**Zooming with Function Key Shortcuts** The following key combinations, available for all the layout views, enable you to instantly zoom in or out from your keyboard:

- ▶ Zoom In – Ctrl++ (numeric keyboard)
- ▶ Zoom Out – Ctrl+- (numeric keyboard)

**Zooming with the Mouse Wheel** The mouse wheel gives you finer zoom control, enabling you to zoom in or out in small increments. While pressing the **Ctrl** key, move the mouse wheel forward to zoom in and backward to zoom out. The mouse wheel zoom is available for all the layout views.

**Panning with the Arrow Keys** After enlarging the layout with the zoom tools, you can use the keyboard arrow keys to pan horizontally or vertically to different areas of the layout. Panning with the arrow keys is available for all the layout views. You can also press the 'Ctrl' key and move your mouse while pressing the left mouse button.

## Searching for Design Elements in Device Constraint Editor

Device Constraint Editor and Physical Designer Placement Mode enable you to search for design elements—either through a Find dialog box or through Find and Filter text boxes within the view.

Each provide Find and Filter text boxes at the top of the window. Radiant software highlights the found objects and enables you to navigate through them and cross-probe to another view. You can right-click the found design element in Package View and choose Show in Physical Designer Placement Mode.

Device Constraint Editor and Physical Designer Placement Mode each provide a Find dialog box. The Find dialog box in Placement Mode enables you to search for components, nets, and sites.

### To search for design elements in Device Constraint Editor:

1. Open the desired view.
2. The Find text box appears at the top of the window.
3. Type the name of the design element in the Find text box.
  - ▶ To narrow the scope of the search, use wildcards in the following ways.
    - ▶ Use the asterisk to match one or more characters.
    - ▶ Use the question mark to match any single character.

The view displays only those items that contain the characters you entered.

- ▶ To locate a single design element from the list, type the name in the Find text box and press **Enter**.

The found element is brought to the top of the view and highlighted.

- ▶ To navigate through a list of elements that contain the same characters, use wildcards in the Find text box, and then press **Enter**.

The first element containing the characters you entered is brought to the top of the view and highlighted. Press **Enter** again to go to the next element in the list.

## Using Drag-and-Drop to Make Assignments

Radiant software constraint-editing views provide a convenient drag-and-drop feature for making assignments or editing them. This feature is available between Device Constraint Editor and Placement Mode. The drag-and-drop feature is also available within Package View and within Placement Mode. This feature allows you to perform the following actions:

- ▶ Drag signals from Netlist View to Package View to assign them to pin locations all within Device Constraint Editor.

- ▶ Drag assigned signals within Device Constraint Editor to reassign them to other locations.
- ▶ In Physical Designer, drag non-SLICE logical components within Placement Mode to reassign them to other locations.
- ▶ In Physical Designer, drag GROUPs and REGIONs within Placement Mode to reassign them to other locations.

## Undoing and Redoing Assignments

Radiant software **Undo** and **Redo** commands allow you to reverse constraint changes that were made in a selected constraint view. You can make multiple assignments, undo them all, and then redo them as desired. When all of your manual assignments have been undone or redone, the Undo or Redo command becomes dim. When you save your constraint changes, the undo and redo commands are disabled.

### Note

---

The **Undo** command will not remove the in-memory constraint change indicators. An asterisk appears in both the Windows title bar and the tool's tab to indicate that there are unsaved changes. To remove these indicators after all assignments are undone, use the **Save** command.

---

The commands are available from the Edit menu and from the Undo  and Redo  buttons on the Radiant software toolbar.

The standard Windows keyword shortcuts are also available:

- ▶ Press **Ctrl+Z** to undo an assignment.
- ▶ Press **Ctrl+Y** to redo an assignment.

## Printing a Constraint View from Device Constraint Editor

You can print any from the Device Constraint Editor and Placement Mode. The Radiant software provides a preview for each view, enabling you to select options before printing.

**Printing a Layout View** You can print a copy of the layout from Placement Mode or Device Constraint Editor.

### To print a layout:

1. Select the layout view that you want to print.
2. Choose **File > Print Preview**.
3. Select from the toolbar options at the top, and then click the **Printer** icon to print.

## Setting Global Settings

In the Device Constraint Editor tool at the bottom of the tool, there are a series of tabs to allow the user to set many of the device settings such as Junction Temperature, Voltage, SysConfig, User Code, Deratings, Bank VCCIO, Global Set/Reset, Use Primary Net and Vref Locate Constraints.

## Junction Temperature Setting

Assigns an operating junction temperature for the part that changes the derating factor for timing. You can use this constraint to override the default temperature, which is 85C (commercial) and 100C (industrial) for all speed grades. If no temperature or voltage preference is specified, the derating factor is 1.0.

### To set Junction Temperature value:

1. After opening the design project, choose **Tools** >  **Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. Enter Junction Temperature value in the text box.

### Device Support

iCE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT

### Syntax

```
ldc_set_attribute {TEMPERATURE=<value>C/F/K}
```

### Note

---

The temperature can be specified in C (Celsius), F (Fahrenheit) or K (Kelvin). Internally it is converted to Celsius. The use of a space between the number and the voltage symbol is optional. See examples.

---

**Example** The following preference sets the operating junction temperature to 65 degrees Celsius.

---

```
ldc_set_attribute {TEMPERATURE=65C}
```

---

## Voltage Setting

Assigns a value for nominal FPGA core voltage. That is the central array and excluding I/Os. If no temperature or voltage preference is specified, the derating factor is 1.0.

**To set voltage value:**

1. After opening the design project, choose **Tools >  Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. Enter a Voltage value in the text box.

**Device Support**

ICE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP

**Syntax** `ldc_set_vcc -core <value>`

A space between the number and the voltage symbol is optional. See example.

**Example** The following constraint command assigns a value for nominal voltage of 0.95 V.

---

```
ldc_set_vcc -core 0.95
```

---

**sysCONFIG Settings**

Defines system configuration option settings for the sysCONFIG feature. If you do not specify these settings in the .pdc file, using the Global tab in Device Constraint Editor or manually, some default sysCONFIG constraints will automatically be generated based on the device selection.

The SYSCONFIG constraint is available for all Lattice FPGA devices that support the sysCONFIG configuration port. The sysCONFIG port can be a single data line or byte-wide (multiple byte) data port that can support serial and parallel configurations streams. The devices also support daisy chaining.

**To set SysConfig parameter values:**

1. After opening the design project, choose **Tools >  Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. In the SysConfig drop-down setting, for each parameter in the value column, double-click to display the drop-down to select a value or enter the actual value.

**SYSCONFIG Keyword Settings**

The following table shows the default settings in bold type and the selectable settings for all of the keyword values for the SYSCONFIG constraint. They are ordered as they appear in the Global tab in the Device Constraint Editor.

**Device Support**

LIFCL, LFCPNX, LFD2NX, LFMXO4, LFMXO5, UT24C, UT24CP, LAV-AT

### Syntax

```
ldc_set_sysconfig <keyword>=<value>+
```

You should set the constraint configuration using the Device Constraint Editor or by editing the .pdc file directly. If you do not set sysCONFIG options, default SYSCONFIG constraints are automatically set.

### Example

The SYSCONFIG constraint allows you to set a series of keyword values in succession after the `ldc_set_sysconfig tcl` command.

**Figure 8: Example of a SYSCONFIG in the .pdc constraint file**

```
ldc_set_sysconfig {JTAG_PORT=ENABLE PROGRAMN_PORT=ENABLE
MCCLK_FREQ=56.2}
```

**Table 21: sysCONFIG Values**

| Keyword         | Default and Selectable Values                                                                                                                             | Supported Devices                                    |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| SLAVE_SPI_PORT  | <b>DISABLE</b> [DISABLE, SERIAL, DUAL, QUAD] for Nexus Devices<br><br><b>DISABLE</b> [DISABLE, SERIAL, DUAL, QUAD, XSPI] for Avant Devices                | LAV-AT, LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP |
| MASTER_SPI_PORT | <b>DISABLE</b> [DISABLE, SERIAL, DUAL, QUAD] for Nexus Devices<br><br><b>DISABLE</b> [DISABLE, SERIAL, DUAL, QUAD, XSPI, XSPI_DIFF_CLK] for Avant Devices | LAV-AT, LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP |
| SLAVE_I2C_PORT  | <b>DISABLE</b> [DISABLE, ENABLE]                                                                                                                          | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| SLAVE_I3C_PORT  | <b>DISABLE</b> [DISABLE, ENABLE]                                                                                                                          | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| JTAG_PORT       | <b>ENABLE</b> [ENABLE, DISABLE]                                                                                                                           | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| DONE_PORT       | <b>ENABLE</b> [ENABLE, DISABLE]                                                                                                                           | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| INITN_PORT      | <b>ENABLE</b> [ENABLE, DISABLE]                                                                                                                           | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| PROGRAMN_PORT   | <b>ENABLE</b> [ENABLE, DISABLE]                                                                                                                           | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |

| Keyword                                      | Default and Selectable Values                                                                                           | Supported Devices                                    |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| <a href="#">BACKGROUND_RECONFIG</a>          | <b>OFF</b> [OFF, ON]                                                                                                    | LAV-AT, LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP |
| <a href="#">DONE_EX</a>                      | <b>OFF</b> [OFF, ON]                                                                                                    | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">DONE_OD</a>                      | <b>ON</b> [OFF, ON]                                                                                                     | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">MCCLK_FREQ</a>                   | See <a href="#">MCCLK_FREQ</a> section below                                                                            | LAV-AT, LFCPNX, LFD2NX, LIFCL, UT24C, UT24CP         |
| <a href="#">FLASH_CLK_FREQ</a>               | <b>3.5</b> [ 3.5, 7.0, 14.1, 28.1, 56.2, 75, 90, 112.5]                                                                 | LFMXO5                                               |
| <a href="#">TRANSFR</a>                      | <b>OFF</b> [OFF, ON] for LAV-AT, LFCPNX, LFMXO5, LIFCL-33U, and UT24CP<br><b>OFF</b> [OFF] for LFD2NX, LIFCL, and UT24C | LAV-AT, LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP |
| <a href="#">CONFIG_IOSLEW</a>                | <b>SLOW</b> [SLOW, MEDIUM, FAST]                                                                                        | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">CONFIGIO_VOLTAGE_BANK0/1</a>     | <b>NOT_SPECIFIED</b> [NOT_SPECIFIED, 2.5, 1.2, 1.5, 1.8, 3.3] for Nexus devices                                         | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">CONFIG_SECURE</a>                | <b>OFF</b> [OFF, ON]                                                                                                    | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">WAKE_UP</a>                      | <b>ENABLE</b> [DISABLE]_DONE_SYNC                                                                                       | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">COMPRESS_CONFIG</a>              | <b>ON</b> [OFF, ON]                                                                                                     | LAV, LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP    |
| <a href="#">EARLY_IO_RELEASE</a>             | <b>OFF</b> [OFF, ON]                                                                                                    | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">BOOTMODE</a>                     | <b>DUAL</b> [DUAL, SINGLE, NONE]                                                                                        | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |
| <a href="#">MASTER_PREAMBLE_TIMER_CYCLES</a> | <b>600000</b> [600000, 400, 2000, 4000, 20000, 40000, 200000, 400000]                                                   | LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP         |

**Table 22: Avant sysCONFIG Values**

| Keyword                               | Default and Selectable Values                  |
|---------------------------------------|------------------------------------------------|
| <a href="#">BOOT_SEL</a>              | <b>DUAL</b> [DUAL, SINGLE]                     |
| <a href="#">MSPI_RESET</a>            | <b>DISABLE</b> [DISABLE, ENABLE]               |
| <a href="#">MSPI_RESET_PORT</a>       | <b>DISABLE</b> [DISABLE, ENABLE]               |
| <a href="#">MULTI_BOOT_MODE</a>       | <b>DISABLE</b> [DISABLE, ENABLE]               |
| <a href="#">DAISY_CHAIN</a>           | <b>DISABLE</b> [DISABLE, BYPASS, FLOW_THROUGH] |
| <a href="#">DAISY_CHAIN_WAIT_DONE</a> | <b>DISABLE</b> [DISABLE, ENABLE]               |

**Table 22: Avant sysCONFIG Values**

| Keyword                       | Default and Selectable Values                                                                                   |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------|
| MSPI_SIGNATURE_TIMER          | <b>200MS</b> [200MS, 100MS, 50MS, 40MS, 20MS, 1MS, 500US, 100US, INFINITE]                                      |
| MSPI_CPOL                     | <b>IDLE_CLOCK_LOW</b> [IDLE_CLOCK_LOW, IDLE_CLOCK_HIGH]                                                         |
| MSPI_RX_EDGE                  | <b>RISING</b> [RISING, FALLING]                                                                                 |
| MSPI_TX_EDGE                  | <b>FALLING</b> [FALLING, RISING]                                                                                |
| MSPI_CPHA                     | <b>FIRST_EDGE</b> [FIRST_EDGE, SECOND_EDGE]                                                                     |
| SSPI_RX_EDGE                  | <b>RISING</b> [RISING, FALLING]                                                                                 |
| SSPI_TX_EDGE                  | <b>FALLING</b> [FALLING, RISING]                                                                                |
| SSPI_CPHA                     | <b>FIRST_EDGE</b> [FIRST_EDGE, SECOND_EDGE]                                                                     |
| SSPI_CPOL                     | <b>IDLE_CLOCK_LOW</b> [IDLE_CLOCK_LOW, IDLE_CLOCK_HIGH]                                                         |
| SSPI_SHIFT_ORDER              | <b>MSB_FIRST</b> [MSB_FIRST, LSB_FIRST]                                                                         |
| SSPI_DAIY_CHAIN_MODE          | <b>DISABLE</b> [DISABLE, SCM, AUTO]                                                                             |
| ERASE_EBR_ON_REFRESH          | <b>ENABLE</b> [ENABLE, DISABLE]                                                                                 |
| SIGNATURE_CHECK               | <b>ENABLE_LSCC_SIGNATURE</b> [ENABLE_LSCC_SIGNATURE, DISABLE, ENABLE_SFDP_SIGNATURE]                            |
| MSPI_ADDRESS_32BIT            | <b>DISABLE</b> [DISABLE, ENABLE]                                                                                |
| MSPI_COMMAND_32BIT            | <b>DISABLE</b> [DISABLE, ENABLE]                                                                                |
| SSPI_IDLE_TIMER               | <b>DISABLE</b> [DISABLE, 200S, 100S, 50S, 25S, 10S, 5S, 1S, 750MS, 500MS, 250MS, 100MS, 75MS, 50MS, 25MS, 10MS] |
| MSPI_PREAMBLE_DETECTION_TIMER | <b>200MS</b> [200MS, 100MS, 50MS, 40MS, 20MS, 1MS, 500US, 100US]                                                |
| MULTI_BOOT_SEL                | <b>STATIC</b> [STATIC, DYNAMIC]                                                                                 |
| CONFIGIO_VOLTAGE_BANK1/2      | <b>NOT_SPECIFIED</b> [NOT_SPECIFIED, 2.5, 1.2, 1.8, 3.3]                                                        |



**Table 23: MachXO4 sysCONFIG Values**

| Keyword                                 | Default and Selectable Values                                                       |
|-----------------------------------------|-------------------------------------------------------------------------------------|
| <a href="#">SDM_PORT</a>                | <b>DISABLE</b> [DISABLE, PROGRAMN, PROGRAMN_DONE, PROGRAMN_DONE_INITN, DONE, INITN] |
| <a href="#">SLAVE_SPI_PORT</a>          | <b>DISABLE</b> [DISABLE, ENABLE]                                                    |
| <a href="#">I2C_PORT</a>                | <b>DISABLE</b> [DISABLE, ENABLE]                                                    |
| <a href="#">MASTER_SPI_PORT</a>         | <b>DISABLE</b> [DISABLE, ENABLE, EFB_USER]                                          |
| <a href="#">COMPRESS_CONFIG</a>         | <b>ON</b> [OFF, ON]                                                                 |
| <a href="#">CONFIGURATION</a>           | <b>CFG</b> [CFG, CFG_EBRUFM, CFGUFM, EXTERNAL]                                      |
| <a href="#">MY_ASSP</a>                 | <b>OFF</b> [OFF, ON]                                                                |
| <a href="#">ONE_TIME_PROGRAM</a>        | <b>OFF</b> [OFF, FLASH, FLASH_UFM, FLASH_UFM_SRAM]                                  |
| <a href="#">CONFIG_SECURE</a>           | <b>OFF</b> [OFF, ON]                                                                |
| <a href="#">MCCLK_FREQ</a>              | See <a href="#">MCCLK_FREQ</a> section below                                        |
| <a href="#">JTAG_PORT</a>               | <b>ENABLE</b> [ENABLE, DISABLE]                                                     |
| <a href="#">ENABLE_TRANSFR</a>          | <b>DISABLE</b> [DISABLE, ENABLE]                                                    |
| <a href="#">SHAREDEBRINIT</a>           | <b>DISABLE</b> [DISABLE, ENABLE]                                                    |
| <a href="#">MUX_CONFIGURATION_PORTS</a> | <b>DISABLE</b> [DISABLE, ENABLE]                                                    |
| <a href="#">DUALBOOTGOLDEN</a>          | <b>INTERNAL</b> [INTERNAL, EXTERNAL]                                                |
| <a href="#">BACKGROUND_RECONFIG</a>     | <b>OFF</b> [OFF, ON]                                                                |
| <a href="#">INBUF</a>                   | <b>ON</b> [ON, OFF]                                                                 |

**SDM\_PORT**

DISABLE (default) | PROGRAMN | PROGRAMN\_DONE |  
PROGRAMN\_DONE\_INITN | DONE | INITN

Used to retain the PROGRAMN, DONE, and INITN pins as dedicated configuration pins for the self-download mode port.

**SLAVE\_SPI\_PORT**

DISABLE (default) | SERIAL | DUAL | QUAD – Nexus Devices

DISABLE (default) | SERIAL | DUAL | QUAD | XSPI – Avant Devices

Specifies if the TARGET\_SPI port should be available after configuration. This option will preserve the dual-purpose pins for PAR.

**I2C\_PORT**

DISABLE (default) | ENABLE

Enabling the I2C\_PORT makes it active for configuration access and prevents the dual-purpose pins from being used as user I/O pins. When disabled, the pins become available for user I/Os.

**CONFIGURATION**

CFG (default) | CFG\_EBRUFM | CFGUFM | EXTERNAL

Configuration settings for storing the configuration bitstream for the MachXO4 device.

**MY\_ASSP**

OFF (default) | ON

When set to ON, changes the JTAG IDCode of the device to the contents of the CUSTOM\_IDCODE field.

**ONE\_TIME\_PROGRAM**

OFF (default) | FLASH | FLASH\_UFM | FLASH\_UFM\_SRAM

When set to ON, uses the One Time Programmable (OTP) fuse to prevent the on-chip Flash configuration memory from being erased or programmed. This does not prevent the Flash Tag Memory or Flash User memory from being programmed; these features are still available.

**ENABLE\_TRANSFR**

DISABLE (default) | ENABLE

When enabled, turns on the Freeze\_IO and Freeze\_MIB fuses to enable the TransFR function. The Freeze\_IO holds the current logic value (data and tristate) on the pins constant. The Freeze\_MIB holds the personalities of the pins constant. When this is enabled, the IOs will not be changed in terms of logic value and all buffer modes of the IOs.

**SHAREDEBRINIT**

DISABLE (default) | ENABLE

When set to ENABLE, this attribute allows sharing of the same init file that was used by multiple EBRs when they were generated in the IP Catalog. This reduces the bitstream size by storing only one copy of the init values.

**MUX\_CONFIGURATION\_PORTS**

DISABLE (default) | ENABLE

Allows all Configuration ports to be disabled in order to provide additional user IOs.

### **DUALBOOTGOLDEN**

INTERNAL (default) | EXTERNAL

If the primary bitstream is found to be corrupt while being downloaded into the SRAM, the device shall then automatically re-boot from the golden bitstream. Defines if the Golden file is Internal (on-chip Flash/NVCM) or External (SPI Flash).

### **INBUF**

ON (default) | OFF

Turns on the input buffers. This attribute must be turned on to perform boundary scan testing. When turned off, all unused input buffers are disabled to save power.

### **MASTER\_SPI\_PORT**

DISABLE (default) | SERIAL | DUAL | QUAD – Nexus Devices

DISABLE (default) | SERIAL | DUAL | QUAD | XSPI | XSPI\_DIFF\_CLK – Avant Devices

Specifies if the CSPI port should be available after configuration. Used for background programming of the connected SPI flash. This option will preserve the dual-purpose pins for PAR. When enabled, it allows the use of the external Controller SPI port for configuring the SRAM fuses using the bitstream.

### **Note**

---

As part of the Lattice inclusive language guidelines, the Avant device's MASTER\_SPI\_PORT has been changed to CONTROLLER\_SPI\_PORT and SLAVE\_SPI\_PORT to TARGET\_SPI\_PORT. If you want to know more about the Lattice Inclusive Language, please visit [Lattice Answer Database](#).

---

### **SLAVE\_I2C\_PORT**

DISABLE (default) | ENABLE

Specifies if the SLAVE I2C port should be available after configuration. This option will preserve the dual-purpose pins for PAR.

### **SLAVE\_I3C\_PORT**

DISABLE (default) | ENABLE

Specifies if the SLAVE I3C port should be available after configuration. This option will preserve the dual-purpose pins for PAR.

#### **JTAG\_PORT**

ENABLE (default) | DISABLE

Specifies if the JTAG port should be available after configuration. This option will preserve the dual-purpose pins for PAR. When ENABLED, it is used for configuration settings only, PAR will prohibit them. When DISABLED, it can be used as GPIOs.

#### **DONE\_PORT**

ENABLE (default) | DISABLE

When set to ENABLE, the pin is not available in user mode.

#### **INITN\_PORT**

ENABLE (default) | DISABLE

When set to ENABLE, the pin is not available in user mode.

#### **PROGRAMN\_PORT**

ENABLE (default) | DISABLE

When set to ENABLE, the pin is not available in user mode.

#### **BACKGROUND\_RECONFIG**

OFF (default) | ON

#### **DONE\_EX**

OFF (default) | ON

You can select if the device should wake up on its own after the DONE bit is set or wait for an external DONE signal to drive the DONE pin high. The DONE\_EX attribute will determine if the wake up sequence is driven by an external DONE signal.

If set to ON, the user wishes to delay wake up until the DONE pin is driven high by an external signal and synchronous to the clock. You can select OFF if you want to synchronously wake up when the DONE bit is set and ignore any external driving of the DONE pin.

#### **DONE\_OD**

ON (default) | OFF

Done Pin Open Drain. Enables you to configure the DONE pin as an open drain pin. By default, the pullup on the DONE pin is active.

The DONE pin used in sysCONFIG to indicate that configuration is done. The DONE pin can be linked to other DONE pins and used to initiate the wake up process. The DONE pin can be open collector or active drive. Default is ON and insures the user needs to make a conscious decision to drive the pin.

### **MCCLK\_FREQ**

3.5 (default) | 7.0 | 14.1 | 28.1 | 56.2 | 75 | 90 | 112.5 | 150 – Nexus devices.

2.08 (default) | 2.46 | 3.17 | 4.29 | 5.54 | 7 | 8.31 | 9.17 | 10.23 | 13.3 | 14.78 | 20.46 | 26.6 | 29.56 | 33.25 | 38 | 44.33 | 53.2 | 66.5 | 88.67 | 133 – MachXO4 device.

3.1 (default) | 7.1 | 14.3 | 28.6 | 57.1 | 66.7 | 80.0 | 100.0 | 106.7 | 133.3 | 160.0 – Avant devices.

Controls the Master Clock frequency. When a master configuration mode is used, MCLK will become an output clock with the frequency set by the user. Until the device is configured, the default Master Clock frequency is the lowest frequency support by the device.

For LFCPNX, LFD2NX, LIFCL, UT24C, and UT24CP devices, a 450 Mhz oscillator is divided and made available for configuration.

For LAV-AT devices, a 400 Mhz oscillator is divided and made available for configuration.

### **FLASH\_CLK\_FREQ**

3.5 (default) | 7.0 | 14.1 | 28.1 | 56.2 | 75 | 90 | 112.5

### **TRANSFR**

OFF (default) | ON

Enables TransFR (Transparent Field Reconfiguration).

### **CONFIG\_IOSLEW**

SLOW (default) | MEDIUM | FAST

Controls config output pin slew rate. Sets CR0[7:6].

### **CONFIGIO\_VOLTAGE\_BANK0/1**

NOT\_SPECIFIED (default) | 2.5 | 1.2 | 1.5 | 1.8 | 3.3 – Nexus Devices

The CONFIGIO\_VOLTAGE\_BANK0/1 attribute supports all devices except LAV-AT and iCE40UP.

Setting this attribute informs the software which voltage is required in Bank0/1 to satisfy the user's sysCONFIG requirements. The sysCONFIG pins used for configuration may or may not be used in the design and hence the user shall be able to declare the voltage interface for this bank.

DRC errors can then be generated based on CONFIG\_IOVOLTAGE and usage of the dual-purpose sysCONFIG pins. BANK0 and 1 values can be different and a combination of the available values including NOT\_SPECIFIED.

### **CONFIGIO\_VOLTAGE\_BANK1/2**

NOT\_SPECIFIED (default) | 2.5 | 1.2 | 1.8 | 3.3

The CONFIGIO\_VOLTAGE\_BANK1/2 attribute only supports the LAV-AT devices.

### **CONFIG\_SECURE**

OFF (default) | ON

Configuration Security. When set to ON, no readback operation is supported through the sysCONFIG port or ispJTAG port of the general contents. The USERCODE area is readable and not considered securable. The OFF setting indicates that readback is enabled through any port. Prevents readback of the configuration memory contents.

### **WAKE\_UP**

ENABLE/DISABLE\_DONE\_SYNC (DONE\_EX = OFF) /(DONE\_EX = ON)

Wake Up. Wake Up is a controlled event after a part has been configured. External control of the DONE pin can be selected to either delay wake up or be ignored. See [DONE\\_EX](#).

The Wake Up sequence controls three internal signals, and the DONE Pin will be driven after configuration and prior to user mode. If DONE\_EX = ON, the WAKE\_UP keyword will take your selected option (1-7), and then the software will set wake-up signal bits accordingly. If you do not select a wake-up sequence, the default wake-up sequence will be 4. If DONE\_EX = OFF (default), the WAKE\_UP keyword will take your selected option (1-25), and then the software will set wake-up signal bits accordingly. If you do not select a wake-up sequence, the default wake-up sequence will be 21.

### **COMPRESS\_CONFIG**

ON (default)

Bitstream Compression. When set to ON, for those devices that support bitstream compression, the software generates a compressed version of the bitstream file.

### **EARLY\_IO\_RELEASE**

OFF (default) | ON [once]

Program and wakeup the left/right I/O banks early, before the rest of the device is programmed.

## BOOTMODE

DUAL (default) | SINGLE | NONE

This setting enables you to select the booting mode at power up.

- ▶ DUAL - Performs the dual boot for the booting event. In case the primary booting image (bitstream) fails, the secondary boot image is invoked to boot the device.
- ▶ SINGLE - Performs a single boot only. If it fails, the device will move to unprogrammed mode directly.
- ▶ NONE - No controller SPI booting at startup, waits for target configuration port to configure the device.

## MASTER\_PREAMBLE\_TIMER\_CYCLES

600000 (default) | 400 | 2000 | 4000 | 20000 | 40000 | 200000 | 400000

This attribute sets the master preamble timer count value.

The preamble\_count value below is the number of clock cycles to get a valid preamble before an error is declared.

000 -> 600000

001 -> 400000

010 -> 200000

011 -> 40000

100 -> 20000

101 -> 4000

110 -> 2000

111 -> 400

## FLASH\_PREAMBLE\_TIMER\_CYCLES

600000 (default)

This attribute sets the flash preamble timer count value.

The preamble\_count value is the number of clock cycles to get a valid preamble before an error is declared.

## BOOT\_SEL

DUAL (default) | SINGLE

The `BOOT_SEL` preference allows you to select the booting mode (DUAL or SINGLE) at power up (POR), PROGRAMN pin toggle or REFRESH command execution with the following available options:

- ▶ DUAL (default) - Performs the dual boot for the booting event. In case the primary booting image (bitstream) failed, the secondary booting image is automatically invoked to boot up the device.
- ▶ SINGLE - Performs the single boot only. If it fails, the device goes directly to unprogrammed mode.

### **MSPI\_RESET**

DISABLE (default) | ENABLE

Enables the hardware reset signal to the flash device.

The `MSPI_RESET` attribute has the following options:

- ▶ DISABLE - Enables reset port to flash device is disabled.
- ▶ ENABLE - Enables reset port to flash device.

### **MSPI\_RESET\_PORT**

DISABLE (default) | ENABLE

Specifies if the `MSPI_RESET` port is available to use for configuration purposes during usermode.

The `MSPI_RESET_PORT` attribute has the following options:

- ▶ DISABLE - Not available for configuration during usermode (user IO).
- ▶ ENABLE - Available for configuration during usermode (persisted as config IO).

### **MULTI\_BOOT\_MODE**

DISABLE (default) | ENABLE

The `MULTI_BOOT_MODE` preference allows you to enable the multi-boot feature. It has the following options:

- ▶ DISABLE - Disables multi-boot feature.
- ▶ ENABLE - Enables the multi-boot feature.

### **DAISY\_CHAIN**

DISABLE (default) | BYPASS | FLOW\_THROUGH

You can select the daisy chain mode for upstream device using `DAISY_CHAIN` preference with the following available options:

- ▶ DISABLE - Daisy Chain is disabled (default).
- ▶ BYPASS - Enables the transparent SRAM access mode.



- ▶ **FLOW\_THROUGH** - Enables the transparent SRAM or/and INIT Registers access mode.

### **DAISY\_CHAIN\_WAIT\_DONE**

DISABLE (default) | ENABLE

The DAISY\_CHAIN\_WAIT\_DONE preference allows you to wait for the done pin before “wakeup” for the daisy chain upstream. It has the following options:

- ▶ **DISABLE** (default) - Does not wait for DONE.
- ▶ **ENABLE** - Waits for DONE.

### **MSPI\_SIGNATURE\_TIMER**

200MS (default) | 100MS | 50MS | 40MS | 20MS | 1MS | 500US | 100US | INFINITE

MSPI\_SIGNATURE\_TIMER allows you to specify the time to get a valid LSCC/SFDP signature.

### **MSPI\_CPOL**

IDLE\_CLOCK\_LOW (default) | IDLE\_CLOCK\_HIGH

MSPI\_CPOL specifies if the clock is low or high in idle state.

- ▶ **IDLE\_CLOCK\_LOW** (default) - Clock is low in idle state.
- ▶ **IDLE\_CLOCK\_HIGH** - Clock is high in idle state.

### **MSPI\_RX\_EDGE**

RISING (default) | FALLING

Enables the selection of rising/falling edge for RX.

### **MSPI\_TX\_EDGE**

FALLING (default) | RISING

Enables the selection of rising/falling edge for TX.

### **MSPI\_CPHA**

FIRST\_EDGE (default) | SECOND\_EDGE

Enables the selection of the clock edge combined with MSPI\_CPOL.

### **SSPI\_RX\_EDGE**

RISING (default) | FALLING

Enables the selection of rising/falling edge for RX.

**SSPI\_TX\_EDGE**

FALLING (default) | RISING

Enables the selection of rising/falling edge for TX.

**SSPI\_CPHA**

FIRST\_EDGE (default) | SECOND\_EDGE

Enables the selection of the clock edge combined with SSPI\_CPOL.

**SSPI\_CPOL**

IDLE\_CLOCK\_LOW (default) | IDLE\_CLOCK\_HIGH

SSPI\_CPOL specifies if the clock is low or high in idle state with the following available options:

- ▶ IDLE\_CLOCK\_LOW (default) - Clock is low in idle state.
- ▶ IDLE\_CLOCK\_HIGH - Clock is high in idle state.

**SSPI\_SHIFT\_ORDER**

MSB\_FIRST (default) | LSB\_FIRST

The SSPI\_SHIFT\_ORDER bit specifies the SSPI shift order with the following available options:

- ▶ MSB\_FIRST (default) - Shifts the most significant bit first.
- ▶ LSB\_FIRST - Shifts the least significant bit first.

**SSPI\_DAISSY\_CHAIN\_MODE**

DISABLE (default) | SCM | AUTO

The SSPI\_DAISSY\_CHAIN\_MODE allows you to enable the SSPI auto function for downstream daisy chain with the following available options:

- ▶ DISABLE (default) - Disables SSPI Auto/SCM mode.
- ▶ SCM - Persists CLK and MOSI.
- ▶ AUTO - SPI Auto mode based on SSPI\_PORT selection for SERAIL, DUAL, QUAD or XSPI.

**ERASE\_EBR\_ON\_REFRESH**

ENABLE (default) | DISABLE

The ERASE\_EBR\_ON\_REFRESH allows you to enable or disable “erase” on refresh.

**SIGNATURE\_CHECK**

ENABLE\_LSCC\_SIGNATURE (default) | DISABLE |  
ENABLE\_SFDP\_SIGNATURE

The SIGNATURE\_CHECK preference allows you to check the signature with the following available options:

- ▶ ENABLE\_LSCC\_SIGNATURE (default) - Checks the LSCC signature.
- ▶ DISABLE - Skips signature checking.
- ▶ ENABLE\_SFDP\_SIGNATURE - Checks SFDP signature.

### **MSPI\_ADDRESS\_32BIT**

DISABLE (default) | ENABLE

The MSPI\_ADDRESS\_32BIT enables you to send the 32-bit command set on MSPI with the following available options:

- ▶ DISABLE (default) - 24-bit command set.
- ▶ ENABLE - 32-bit command set.

### **MSPI\_COMMAND\_32BIT**

DISABLE (default) | ENABLE

The MSPI\_COMMAND\_32BIT enables the 32-bit MSPI addressing mode with the following available options:

- ▶ DISABLE (default) - 24-bit MSPI addressing mode.
- ▶ ENABLE - 32-bit MSPI addressing mode.

### **SSPI\_IDLE\_TIMER**

DISABLE (default) | 200S | 100S | 50S | 25S | 10S | 5S | 1S | 750MS | 500MS | 250MS | 100MS | 75MS | 50MS | 25MS | 10MS

The SSPI\_IDLE\_TIMER allows you to specify the time to get a valid preamble.

### **MSPI\_PREAMBLE\_DETECTION\_TIMER**

200MS (default) | 100MS | 50MS | 40MS | 20MS | 1MS | 500US | 100US

The MSPI\_PREAMBLE\_DETECTION\_TIMER allows you to specify the time to get a valid preamble.

### **MULTI\_BOOT\_SEL**

STATIC (default) | DYNAMIC

The MULTI\_BOOT\_SEL preference allows you to select the multi-boot address. It has the following options:

- ▶ STATIC - Selects the multi-boot address from sysConfig MULTI\_BOOT\_OFFSET preference.

- ▶ **DYNAMIC** - Selects the multi-boot address from the MULTI\_BOOT\_OFFSET parameter setting of CONFIG\_LMMIC primitive.

## User Code Settings

To set User Code parameter values:

1. After opening the design project, choose **Tools** >  **Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. For each parameter in the value column, double-click to display the drop-down to select a value or enter the actual value.

The following table shows the default settings in bold type and the selectable settings for all of the keyword values for the User Code setting. They are ordered as they appear in the Global tab in the Device Constraint Editor.

| Keyword                       | Default and Selectable Values                                           | Supported Devices                                    |
|-------------------------------|-------------------------------------------------------------------------|------------------------------------------------------|
| UserCode Format               | Binary (default) [Binary, Hex, ASCII, Auto]                             | LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP         |
|                               | Binary (default) [Binary, Hex, ASCII]                                   | LAV-AT                                               |
| UserCode                      | <b>32 Binary Zeros</b> [value based on Format]                          | LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT |
| Unique ID (for Nexus Devices) | <b>0000</b> (default) 16-bit user defined code of above USERCODE space. | LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP         |

### UserCode Format

Binary (default) | Hex | ASCII | Auto

The default is Binary but can be any of the above format types.

### UserCode

value

The UserCode formatted into a 32 bit binary code in the bitstream but can be entered by the user based on the UserCode Format selection.

### Unique ID (for Nexus Devices)

0000 (default in HEX)

**Note:**

If the user provides a revision number that is greater or equal the minimum revision number, the bitstream is processed. Otherwise, the bitstream is rejected. This provides protection against bitstream revision rollback attacks.

#### To set Bitstream Revision number:

1. After opening the design project, choose **Tools >  Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. In the Bitstream Revision drop-down section, for each parameter in the Value column, double-click to display the drop-down to select or enter a value.

The following table shows the default settings in bold type and the selectable settings for all of the keyword values for the Bitstream Revision settings. They are ordered as they appear in the Global tab in the Device Constraint Editor.

| Keyword                  | Default and Selectable Values                           | Supported Devices |
|--------------------------|---------------------------------------------------------|-------------------|
| BitstreamRevision Format | <b>Binary</b> (default) [Binary, Hex, ASCII, Timestamp] | LAV-AT            |
| BitstreamRevision        | <b>32 Binary Zeros</b> [value based on Format]          | LAV-AT            |

#### BitstreamRevision Format

Binary (default) | Hex | ASCII | Timestamp

The default is Binary but can be any of the above format types.

#### Syntax

```
ldc_set_attribute {BITSTREAM_REV_FORMAT=<Binary/Hex/ACII/
Timestamp>}
```

**Example** The following sets BitstreamRevision Format to Binary.

```
ldc_set_attribute BITSTREAM_REV_FORMAT=Binary
```

#### BitstreamRevision

value

BitstreamRevision is formatted into a 32-bit binary code in the bitstream but can likewise be entered by the user based on the selected BitstreamRevision Format.

#### Syntax

```
ldc_set_attribute {BITSTREAM_REV=<value>}
```

**Example** The following sets BitstreamRevision number to 00011.

---

```
ldc_set_attribute BITSTREAM_REV=00011
```

---

## Derating Settings

The section under 'Derating' in the Device Constraint editor allows a user to define voltage deratings for core voltage, power supplies and bank voltage deratings.

### To set Derating parameter values:

1. After opening the design project, choose **Tools >  Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. In the Derating drop-down section, for each parameter in the value column, double-click to display the drop-down to select a value.

The following shows the default settings in bold type and the selectable settings for all of the keyword values for the Derating settings. They are ordered as they appear in the Global tab in the Device Constraint Editor.

**Core=NOMINAL (default) | +/- 5% in increments of 1%**

### Device Support

ICE40UP, LIFCL, LFCPNX, LFD2NX, LFMX05, UT24C, UT24CP, LAV-AT

### Syntax

```
ldc_set_vcc -core -derate <% value>
```

This defines the core voltage for derating. Radiant, will automatically generate a UserCode to uniquely identify their design. The upper bits will be defined with the Unique Id setting. The lower 16 bits will sequentially auto increment for every bitstream generation.

Nominal VCC core voltage value as specified in Supported Temperature and Voltage Range for Derating topic.

Nominal VCC value plus <number>% of VCC value or nominal VCC value minus <number>% of VCC value. The legal range is +5 to -5 in increments of 1.

### Example

The following shows how to set the .sdc constraint which is stored in the .pdc file. Core voltage is set at a derating of -3%.

---

```
ldc_set_vcc -core -derate -3
```

---

DPHY0/1=value

### Device Support

iCE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT

This is used to derate the MIPIDPHY power supply. Valid values are from -5% to 5%, starting from a base 1.2V.

NOMINAL: 1.2V

PERCENT: Nominal VCC value plus <number>% of VCC value or nominal VCC value minus <number>% of VCC value. The legal range is +5 to -5 in increments of 1.

### Syntax

```
ldc_set_vcc -dphy <value> -derate <% value>
```

### Example

The following constraint include sets MIPIDPHY voltage derating to -4%.

```
ldc_set_vcc -dphy DPHY0 -derate -4;  
ldc_set_vcc -dphy DPHY1 -derate -4;
```

### VCCIO=value

### Device Support

iCE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT

Defines the VCCIO bank voltage for derating. The value can be set for Bank0, 1, 3, 5.

NOMINAL: Nominal VCCIO value of the buffer type placed in a particular I/O bank. See available data sheets for information on nominal values.

PERCENT (+<number> | -<number>): Nominal VCCIO value plus or minus the <number>% VCCIO value of the buffer type placed in a particular I/O bank. The legal range is +5 to -5 in increments of 1

### Syntax

```
ldc_set_vcc -bank <value> -derate <% value>
```

### Examples

The following constraint sets VCCIO derating of Bank0 to -3% and Bank3 to -5%.



---

```
ldc_set_vcc -bank 0 -derate -3  
ldc_set_vcc -bank 3 -derate -5
```

---

## Bank VCCIO Settings

Sets the VCCIO voltage level of the I/O bank. In cases where design signals are not assigned to a device site or bank (floating), the BANK constraint can be applied to direct the I/O placer algorithm of Place and Route (par) to assign only design I/O signals with compatible signal standards to the bank.

### Device Support

ICE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT

#### To set Bank VCCIO parameter values:

1. After opening the design project, choose **Tools** >  **Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. In the Bank VCCIO drop-down section, for each parameter in the value column, double-click to display the drop-down to select a value.

Bank0, 1 3, 5 can be set and the values range from: 1.0, 1.2, 1.35, 1.50, 1.80, 2.50, 3.30.

### Syntax

```
ldc_set_vcc -bank <value> <voltage>
```

### Example

The following shows how to set the Bank VCCIO for Bank3 to 3.3V and Bank5 to 2.5V.

---

```
ldc_set_vcc -bank 3 3.3  
ldc_set_vcc -bank 5 2.5
```

---

## Global Set/Reset Net Setting

Assigns the specified net as the input to the global set/reset (GSR) buffer inferred by Radiant. The GSR\_NET constraint allows you to specify the net to be applied as the GSR buffer input if more than one net qualifies to serve as the GSR signal.

GSR is a signal that will initialize all registered elements of the design that have the GSR input enabled. If no GSR buffer circuit is included in the input database, the tool will infer one based on the set/reset signal that has the most loads. To be considered a legal candidate, the net assigned using the

GSR\_NET constraint must drive at least one registered element's set/reset input, and the element must be enabled to be sensitive to GSR.

### Device Support

iCE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT

### To set Global Set/Reset Net:

1. After opening the design project, choose **Tools >  Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. Double-click the cell beside the 'Global Set/Reset Net' and a dialogue will appear.
4. Click on the "Available Logic Nets" on the left and click on the right arrow to move to "Selected Logic Nets".

### Syntax

```
ldc_set_attribute {GSR_NET=TRUE/FALSE} {get_nets <net_name>;}
```

where:

<net\_name> is a logical net.

### Example

If your design has multiple set/reset signals, and the automatic detection by logic synthesis or MAP chooses a GSR driver that's not appropriate for your design, you would use the syntax shown in the following example to explicitly assign a net to drive the GSR buffer circuit:

---

```
ldc_set_attribute {GSR_NET=TRUE} [get_nets VCC_net]  
ldc_set_attribute {GSR_NET=TRUE} [get_nets rst_c]
```

---

## Use Primary Net Setting

Uses a primary clock resource to route the specified net. The specified net should be a clock net.

The USE PRIMARY physical constraint is needed when user intervention is required to route nets using primary and secondary clock resources. PAR uses various criteria for selecting the nets, including the number and type of loads, the availability of clock drivers, and the availability of clock trees.

### Device Support

iCE40UP, LIFCL, LFCPNX, LFD2NX, LFMXO5, UT24C, UT24CP, LAV-AT

**To set User Primary Net:**

1. After opening the design project, choose **Tools** >  **Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. Double-click the cell beside the 'Use Primary Net' and a dialogue will appear.
4. For each available clock, click on the "Selection" drop-down box and select either Primary / Prohibit.

**Syntax**

```
ldc_set_attribute {USE_PRIMARY= TRUE/FALSE  
(USE_PRIMARY_REGION=<region_value>)} [get_nets <clock_net>]
```

where:

<clock\_net> = specific clock net name

<region\_value> is a region value of 0/1

**Examples**

The following command specifies that a primary clock resource will be used to route a clock net named **clk\_c**:

---

```
ldc_set_attribute {USE_PRIMARY=TRUE} [get_nets clk_c]
```

---

The following command specifies that a primary clock resource will be used to route the clock net **clk\_c** but with a primary region specified.

---

```
ldc_set_attribute {USE_PRIMARY=TRUE USE_PRIMARY_REGION=1}  
[get_nets clk_c]
```

---

**Prohibit Primary**

Prohibits the use of primary clock resources for routing the net. The specified net should be a clock net. This constraint can be used with all devices that have primary clocking structures.

**Syntax**

```
ldc_set_attribute {USE_PRIMARY=TRUE/FALSE} [get_nets <clk_net>];
```

where:

<clk\_net> = clock name string

**Example**

This command prohibits the use of a primary clock in routing a clock net named `clk_c`.

---

```
ldc_set_attribute {USE_PRIMARY=FALSE} [get_nets clk_c]
```

---

## Vref Locate Setting

Assigns a PIO site that will serve as the input pin for an on-chip voltage reference. Referenced input voltage pins are required when implementing an externally referenced signaling standard such as HSTL or SSTL. After the Vref location has been established, it can be associated with a port group.

### Device Support

LIFCL, LFCPNX, LFD2NX, LFMX05, UT24C, UT24CP, LAV-AT

### To set User Vref Locate:

1. After opening the design project, choose **Tools >  Device Constraint Editor**.
2. Select the Global tab at the bottom of the view.
3. Double-click the cell beside the 'Vref Locate' and a dialogue will appear.
4. For each available sites, click on the desired row and enter a unique name in the text box 'VREF Name'.

### Syntax

```
ldc_create_vref -name <vref_name> -site <site_value>
```

```
ldc_set_port -iobuf -vref <vref_name> {VREF=vref_name} [get_ports <port name>]
```

where:

`<vref_name>` = string

`<site_value>` = already pre-filled by Radiant.

For more details regarding I/O type, see the sysIO Usage Guide for your target device family.

### Example

There are a total of six VREF IOs on the LIFCL device, each bank (3, 4, and 5) has two VREF IOs.

"T6" is VREF1 and "R11" is VREF2, both of them are in bank 4.

The Mapper always assigns "VREF1\_LOAD" by default, if you use VREF2 IO as the VREF input, you need to manually add "VREF = VREF2\_LOAD."

You also need to set these two constraints below:

```
ldc_create_vref -name VREF_BANK -site R11
ldc_set_port -iobuf -vref VREF_BANK {IO_TYPE=HSTL15_I
VREF=VREF2_LOAD} [get_ports clk_third]
```

## Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor tool are used to enter all the timing constraints in the Radiant software tool, as well as to edit .ldc/.pdc and .sdc constraints. There are a total eight tabs to enter different constraint types:

1. Clock - define the clocking scheme of the design.
2. Generated Clock - define generated clocks such as from PLLs.
3. Clock Latency - define the latency in terms of Rise, Fall times.
4. Clock Uncertainty - define From and To constraints.
5. Clock Group - used for complex clocking schemes and groups in terms of being Logically / Physically Exclusive and Asynchronous groups.
6. Load Capacitance - set the capacitive loading for I/Os.
7. Input/Output Delay - set Input and Output delays.
8. Timing Exception - set Min / Max, False and Multicycle path constraints.
9. Attribute - set synthesis attributes.


The above will be described in more detail below.

You will notice under **Tools**, there are there are two selections:

### **1** Pre-Synthesis Constraint Editor

### **2** Post-Synthesis Timing Constraint Editor

The two GUIs are identical and the entry mechanism of the constraints also the same. The key difference as noted in the tool name is that pre-synthesis are (.sdc) constraints are entered pre-synthesis and will be synthesized by the chosen synthesis tools. Post-Synthesis constraints (.pdc) will populate pre-synthesis timing constraints and allow for entering physical as well as post-synthesis timing constraints. The Post-Synthesis Timing Constraint Editor is the same GUI with the varying constraints already synthesized and populated in each of the different constraints tab. A user cannot modify the constraints in the post-synthesis constraints that were populated from pre-synthesis, but a user can supply new constraints to either one, override an existing, or supply totally new constraints to better constrain the design for better performance upon analysis.

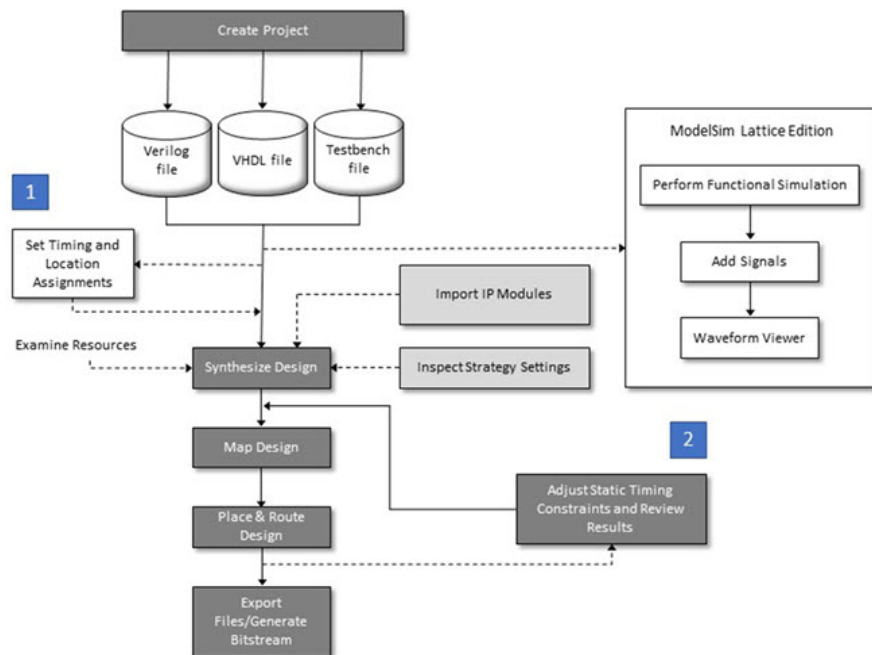

## Defining Synthesis Constraints Using Pre-Synthesis Constraint Editor

Pre-Synthesis Constraint Editor presents the contents of a Lattice Design Constraints File (.ldc) in a spreadsheet style format. You can use Pre-Synthesis Constraint Editor to open and edit a current .ldc file or create a new one. Individual sheets are provided for defining clocks, setting input and output delays, and defining delay paths for multicycle, minimum and maximum delays, and false paths.

Each sheet of Pre-Synthesis Constraint Editor allows you to define synthesis constraints by double-clicking a cell and selecting or typing a value.

Each row includes a Disable check box, which is unchecked by default. If you check this check box, the constraint is ignored by LSE. This can be an easy way to enable / disable the constraint.

You can copy a selected row from the list of constraints by using Ctrl+C and paste to preferred text editor by using Ctrl+V.

### See Also

- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)
- ▶ [“Defining Clocks Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 284](#)
- ▶ [“Setting Input and Output Delays Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 285](#)

- ▶ [“Defining Timing Exceptions Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 286](#)
- ▶ [“Defining Clock Groups in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 287](#)
- ▶ [“Defining Generated Clocks in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 287](#)
- ▶ [“Jitter is the variation in the timing of a signal and it plays a critical role in clock performance within FPGAs. Both the cells that generate clocks and the clock distribution tree can introduce jitter, and the amount of jitter can be influenced by how much of the FPGA is being used.” on page 290](#)
- ▶ [“Adding an .Idc File to an Implementation” on page 229](#)
- ▶ [“Synopsys Design Constraints” on page 824](#)

## Running Pre-Synthesis Constraint Editor

Launch the Pre-Synthesis Constraint Editor by opening or creating an .Idc file for an implementation.

### Note

In order to open or create an .Idc file, LSE must be the selected synthesis tool for the project. Choose **Project > Active Implementation > Select Synthesis Tools** and select **Lattice LSE**.

When a user disables a constraint in GUI of Pre-Synthesis Constraint Editor, you will see the #DISABLED# appended in front of actual constraint.

You can have multiple .Idc files for an implementation, but only one can be opened in Pre-Synthesis Constraint Editor at a time.

### To run Pre-Synthesis Constraint Editor, do one of the following:

- ▶ Double-click an .Idc file name in the Pre-Synthesis Constraint Files folder in the File List view.
- ▶ If you have set Source Editor to be the default program for .Idc files, right-click the .Idc file name in the File List view and choose **Open With**. In the Open With dialog box, choose Pre-Synthesis Constraint Editor and click **OK**.
- ▶ If an .Idc file doesn't yet exist for the active implementation, create an .Idc file as described in [Creating a New .sdc Synthesis Constraint File](#).

### See Also

- ▶ [“Managing Constraint Files” on page 35](#)
- ▶ [“Using Source Editor for .Idc Files” on page 228](#)

## Defining Clocks Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Clock tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to define an alias to be associated with an existing clock port or net from the source file. You can also define clocks by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To define a clock using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:

1. Double-click the **Object Clock** cell to select an existing clock pin, port, or net. A CLOCKPIN is applied on instances and (CLOCKPORT) ports is applied to top level modules. Clocks coming from the outside should ideally be defined on a port.
2. If desired, enter an alias for the clock in the Clock Name cell.
3. Enter a clock period in nanoseconds in the Period(ns) cell.
4. If desired, you can specify the duty cycle. Double-click the Waveform cell and enter the length of the high portion followed by low portion of the cycle in nanosecond. The default duty cycle is 50%. The waveform option is used to control the arrival times of the positive and negative edges and the duty cycle. The waveform edges have to be within the period of the clock. Enter the values with at least one decimal i.e. 5.0;2.0.

### To define a clock in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor using Netlist Analyzer:

1. Start Netlist Analyzer and detach it by clicking the detach tool in the upper right corner. Refer to [“About Netlist Analyzer” on page 51](#).
2. Select desired clock object (port or net) from Netlist Analyzer and drag-and-drop into Clock Object cell of the Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor Clocks tab.
3. If desired, enter an alias for the clock in the Clock Name cell.
4. Enter a clock period in nanoseconds in the Period(ns) cell.
5. If desired, you can specify the duty cycle. Double-click the Waveform cell and enter the length of the high portion followed by low portion of the cycle in nanosecond. The default duty cycle is 50%. The waveform option is used to control the arrival times of the positive and negative edges and the duty cycle. The waveform edges have to be within the period of the clock Enter the values with at least one decimal i.e. 5.0;2.0.

### See Also

- ▶ [“create\\_clock” on page 830](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)
- ▶ [“About Netlist Analyzer” on page 51](#)



## Setting Input and Output Delays Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Inputs/Output Delay tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to specify input and output delays relative to a clock. You can also define input and output delays by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To set an input or output delay using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:

1. Double-click the **Constraint Type** cell to select the type of delay (input or output).
2. Select from the input or output ports in the Port cell.
3. In the Clock cell, select an existing clock or an alias name that has been defined for a clock.
4. Select the Clock Fall check box if you want to clock on negative edge.
5. Select either Max or Min or neither. Do not select both. You can also select Add Delay.
  - ▶ Max means that the delay value refers to the longest path.
  - ▶ Min means that the delay value refers to the shortest path.
  - ▶ Neither means that the maximum and minimum delays are assumed to be equal.
  - ▶ Add Delay is used to define more than one input delay on a given port.
6. Enter a delay value in nanoseconds in the Value (ns) cell.

### To set an input or output delay in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor using Netlist Analyzer:

1. Start Netlist Analyzer and detach it by clicking the detach tool in the upper right corner. Refer to [“About Netlist Analyzer” on page 51](#).
2. Select from the input or output ports from Netlist Analyzer and drag-and-drop into the Port cell of the Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor Input/Outputs tab.
3. In the Clock cell, select an existing clock or an alias name that has been defined for a clock.
4. Select the Clock Fall check box if you want to clock on negative edge.
5. Select either Max or Min or neither. Do not select both. You can also select Add Delay.
6. Enter a delay value in nanoseconds in the Value(ns) cell.

**See Also**

- ▶ [“Defining Clocks Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 284](#)
- ▶ [“set\\_input\\_delay” on page 837](#)
- ▶ [“set\\_output\\_delay” on page 839](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)
- ▶ [“About Netlist Analyzer” on page 51](#)

## Defining Timing Exceptions Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Timing Exception tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to define a Multicycle path, specify a Max\_Delay or a Min\_Delay for a timing path, and identify a False path that is to be excluded from timing analysis. You can also perform the same functions by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To define a timing exception using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:

1. Double-click the **Constraint Type** cell and select the type of delay.
2. Specify the path information, delay, and cycles as appropriate for the selected delay type.

### To define a delay path in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor using Netlist Analyzer:

1. Start Netlist Analyzer and detach it by clicking the detach tool in the upper right corner. Refer to [“About Netlist Analyzer” on page 51](#).
2. Select object (port, net, or register) from Netlist Analyzer and drag-and-drop into the From or To cell of the Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor timing exception tab.
3. Specify the path information, delay, and cycles as appropriate for the selected delay type.

For detailed information on the types of constraints and other available options in the tab, refer to [“Constraints Reference Guide” on page 804](#).

**See Also**

- ▶ [“set\\_multicycle\\_path” on page 843](#)
- ▶ [“set\\_load” on page 840](#)

- ▶ [“set\\_min\\_delay” on page 842](#)
- ▶ [“set\\_false\\_path” on page 845](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)
- ▶ [“About Netlist Analyzer” on page 51](#)

## Defining Clock Groups in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Clock Group tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to define clock groups that are logically / physically exclusive or asynchronous with each other in a design so that the paths between these clocks are not considered during timing analysis.

For detailed information on the options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To define clock groups using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:

1. Double-click the **Group** cell and select the appropriate clock group.
2. Now you will be able to select logically / physically or asynchronous type.

### See Also

- ▶ [“set\\_clock\\_groups” on page 834](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)

## Defining Generated Clocks in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Generated Clock tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to define internally generated clocks. You can also perform the same functions by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To define generated clocks using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:

1. In the **Source** cell, select the source clock for the generated clock.
2. Specify the other values as appropriate for the generated clock.

**To define generated clocks in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor using Netlist Analyzer:**

1. Start Netlist Analyzer and detach it by clicking the detach tool in the upper right corner. Refer to [“About Netlist Analyzer” on page 51](#).
2. Select the source clock from Netlist Analyzer and drag-and-drop into the Source cell of the Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor Generated Clocks tab.
3. Specify the other values as appropriate for the generated clock. You can also specify the Master Clock and Object values by dragging from Netlist Analyzer.

**See Also**

- ▶ [“create\\_generated\\_clock” on page 832](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)

**Defining Clock Latency in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor**

The Clock Latency tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to define the behavior of the clock outside the FPGA. You can also perform the same functions by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

**To define clock latency using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:**

1. In the **Clock** cell, double-click and select the three dots for the list of source clock for latency reference.
2. Specify the latency value.
3. Check off the check boxes for Rise, Fall, Early, Late and Source check boxes.

**See Also**

- ▶ [“set\\_clock\\_latency” on page 836](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)

## Defining Load Capacitance in Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

The Load Capacitance tab of Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor enables you to define load capacitance of ports in the design. You can also perform the same functions by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To define load capacitance using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor:

1. In the **Port** cell, double-click and select the three dots for the list of ports available for setting load capacitance.
2. Enter the value of the load.


### See Also

- ▶ [“set\\_load” on page 840](#)
- ▶ [“Creating a New .sdc Synthesis Constraint File” on page 226](#)

Note that using Radiant STA only provides an estimate. For accuracy, it is recommended to use the IBIS simulation with board model.

When defining load capacitance in post-synthesis, Radiant software timing analysis (STA) estimates rise time as shown in the figure below. The rise time is calculated based on the user supplied capacitance value (through the set\_load constraint).


### Load Model for STA

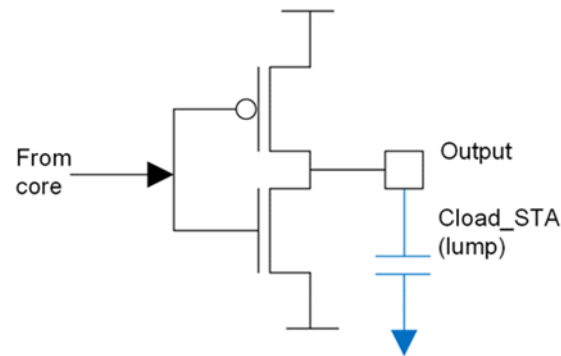

A lumped load assumes a slow ramp time starting from the time of output switching.

IBIS use I/O model TX line extracted from board model and Cload at RX to run simulation as shown in the figure below. This provides more accurate I/O delay at the receiver side.

### Load Model for IBIS/HW

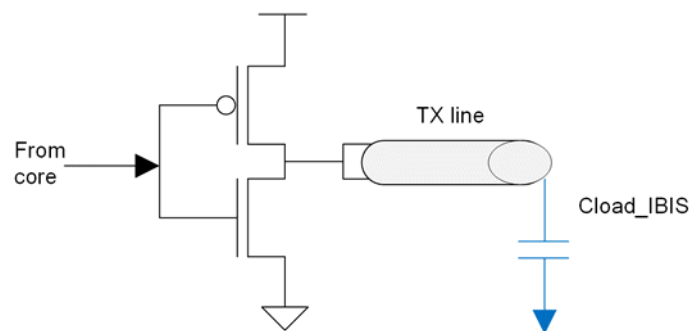

Distributed load with TX line and Cload will only switch after the signal traverses the TX – transmission line.

## Handling Jitter During Timing Performance

Jitter is the variation in the timing of a signal and it plays a critical role in clock performance within FPGAs. Both the cells that generate clocks and the clock distribution tree can introduce jitter, and the amount of jitter can be influenced by how much of the FPGA is being used.

The three main types of jitters are the following:

- ▶ Period Jitter - the deviation in cycle time of a signal with respect to the ideal period over a random sample of cycles.
- ▶ Cycle-to-Cycle Jitter - the variation in cycle time of a signal between adjacent cycles over a random sample of adjacent cycle pairs.
- ▶ Phase Jitter - the deviation in static phase offset for a controlled edge with respect to the mean value in a random sample of cycles.

For clocks that enter the FPGA through input ports (external clocks), the overall uncertainty is determined by the jitter introduced by the clock tree. For clocks generated inside the FPGA, a single jitter value is typically used to represent both period and phase jitter.

### **Clock Definitions in Timing Analysis**

When performing timing analysis in Radiant, it's important to understand how clocks are defined and how their uncertainties are handled:

- ▶ Clock - is defined using the `create_clock` command, it represents the clocks entering the FPGA through a top-level port.
- ▶ Generated Clock - is defined using the `create_generated_clock` command at the output of PLL and clock dividers.

### **Generating Uncertainty Values to the Defined Clocks**

During timing analysis, you can assign an uncertainty value to each clock using the `set_clock_uncertainty` constraint.

- ▶ When auto-jitter is turned on, the timing engine automatically adds the user-defined uncertainty to the jitter uncertainty generated by the timing engine.
- ▶ When auto-jitter is turned on and there is no assign user-defined uncertainty, the timing engine automatically generates the uncertainty constraints based on the jitter data on all clocks.

The uncertainty generated by the timing engine depends on the driver cell jitter, clock tree jitter, device utilization, parent clock uncertainty (for generated clocks), and any user-defined uncertainty.

### **Clock Source Jitter Characteristics**

In a typical Nexus FPGA device, the global clock tree can be driven by several different clock sources. When defining clocks for timing analysis, you must define the input clocks and the timing engine creates a generated clock at the output of specific cells such as PLL. Each clock defined at a cell output have two main sources of jitter:

- ▶ a discrete jitter from the driver cell
- ▶ a clock tree jitter from the clock tree

The source jitter and clock tree jitters are derived from the HW characterized data based on the target device. For reference:

- ▶ OSC (Oscillator) - has a small jitter value, makes it a stable clock source.

- ▶ SGMICLK and PCIE - use internal PLLs and have jitter values similar to OSC.
- ▶ PLL (Phase-Locked Loop) - introduces slightly higher jitters as compared to OSC.

The following table “[Certus-NX Jitter Values Example](#)” on page 292 lists the various jitters associated with the PLL in Lattice Certus-NX Family.

**Table 24: Certus-NX Jitter Values Example**

| Parameter     | Types of Jitter                                   | Frequency                                       | Min | Max | Jitter Values | Units  |
|---------------|---------------------------------------------------|-------------------------------------------------|-----|-----|---------------|--------|
| $t_{OPJIT}^1$ | Output Clock Period Jitter                        | $f_{out} \geq 200 \text{ MHz}$                  | —   | —   | 250           | ps p-p |
|               |                                                   | $f_{out} < 200 \text{ MHz}$                     | —   | —   | 0.05          | UIPP   |
|               | Output Clock Cycle-to-Cycle Jitter                | $f_{out} \geq 200 \text{ MHz}$                  | —   | —   | 250           | ps p-p |
|               |                                                   | $f_{out} < 200 \text{ MHz}$                     | —   | —   | 0.05          | UIPP   |
|               | Output Clock Phase Jitter                         | $f_{PFD} \geq 200 \text{ MHz}$                  | —   | —   | 250           | ps p-p |
|               |                                                   | $60 \text{ MHz} \leq f_{PFD} < 200 \text{ MHz}$ | —   | —   | 350           | ps p-p |
|               |                                                   | $30 \text{ MHz} \leq f_{PFD} < 60 \text{ MHz}$  | —   | —   | 450           | ps p-p |
|               |                                                   | $18 \text{ MHz} \leq f_{PFD} < 30 \text{ MHz}$  | —   | —   | 650           | ps p-p |
|               | Output Clock Period Jitter (Fractional-N)         | $f_{out} \geq 200 \text{ MHz}$                  | —   | —   | 350           | ps p-p |
|               |                                                   | $f_{out} < 200 \text{ MHz}$                     | —   | —   | 0.07          | UIPP   |
|               | Output Clock Cycle-to-Cycle Jitter (Fractional-N) | $f_{out} \geq 200 \text{ MHz}$                  | —   | —   | 400           | ps p-p |
|               |                                                   | $f_{out} < 200 \text{ MHz}$                     | —   | —   | 0.08          | UIPP   |

The types of jitter and the jitter values depend on the various frequencies associated with the PLL.

#### Note

For more information, see Certus-NX Family Data Sheet.

#### Auto-Jitter Computation in Timing Analysis

Auto-jitter computation in Radiant is managed through timing constraints. When you set the constraint command for jitter, the timing engine automatically generates uncertainty values provided the necessary data is available.

If the data is missing, the tool displays a warning message. These uncertainty values appears in the Timing Report > SDC constraints section to track how jitter affects your design’s timing.



By default, automatic uncertainty generation is turned off. To enable the auto-jitter calculation, use the timing constraint command in the sdc/pdc file: **generate\_uncertainty**.

#### Note

The **generate\_uncertainty** command is not available in the future release.

The command activates the timing engine's automatic handling of jitter uncertainties makes your timing analysis more robust and accurate.

#### Note


Before using the **generate\_uncertainty** command, ensure to defined all input clocks in your design. It makes the timing engine correctly compute and apply jitter-related uncertainties to each clock source.

### Clocks Driven by a Clock Divider

When a clock is driven by a clock divider, the uncertainty (jitter) of the output clock is determined by two main factors (see [“Jitter after a Clock Divider” on page 293](#)):

- ▶ The jitter from the clock source (such as a PLL) that feeds into the clock divider.
- ▶ The jitter introduced by the clock tree distributes the output from the clock divider.

**Figure 9: Jitter after a Clock Divider**

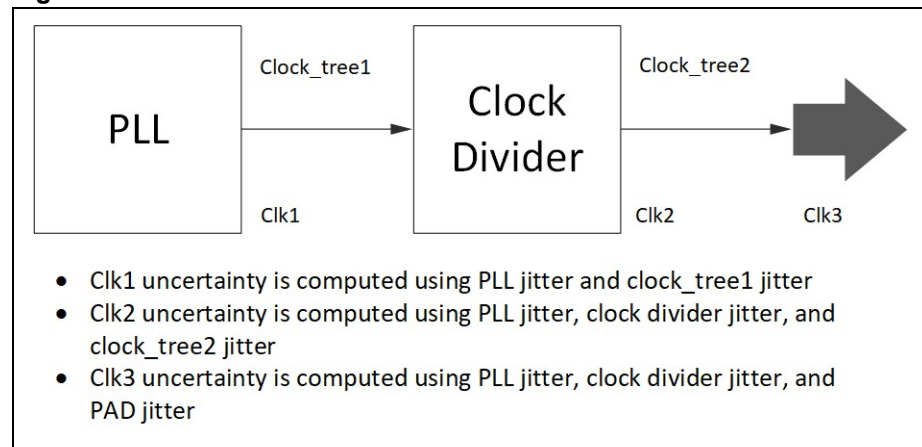

### Considerations for Timing Analysis

When analyzing timing in your FPGA design, consider the following:

- ▶ Single Clock Domain - for paths within a single clock domain, only setup uncertainty is generated. Hold uncertainty is assumed to be zero.
- ▶ Clock Domain Crossing (CDC) - for paths crossing between the different clock domains, the timing engine generates either of the following:

- ▶ A single constraint that covers both setup and hold uncertainties
- ▶ Two separate constraints, one for setup and one for hold.

**Note**

---

Always identify whether your timing paths are within a single clock domain or crossing between clock domains. It ensures that the correct uncertainty constraints are applied to improved accuracy of your timing analysis.

---

## Setting Attributes in Pre-Synthesis Constraint Editor

The Attribute tab of Pre-Synthesis Constraint Editor enables you to specify Synplify Lattice Attributes that are supported by the LSE. You can also define objects by dragging-and-dropping from Netlist Analyzer into Pre-Synthesis Constraint Editor.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

**To set attributes using Pre-Synthesis Constraint Editor:**

1. Double-click the **Type** cell and select the desired attribute.
2. Specify object, value type, and value, as appropriate for the attribute.

**To set attributes in Pre-Synthesis Constraint Editor using Netlist Analyzer:**

1. Start Netlist Analyzer and detach it by clicking the detach tool in the upper right corner. Refer to [“About Netlist Analyzer” on page 51](#).
2. In Pre-Synthesis Constraint Editor Attribute tab, double-click the **Type** cell and select the desired attribute.
3. Specify object type and value, as appropriate for the attribute.
4. Select object (port, net, or register) from Netlist Analyzer and drag-and-drop into the Object cell of the Pre-Synthesis Constraint Editor Attribute tab.

**Note**

---

You can also drag-and-drop an object from Netlist Analyzer to the Object cell of Pre-Synthesis Constraint Editor Attribute tab before you specify the attribute. Object type will then be selected automatically. You can then specify attribute and value.

---

**See Also**

- ▶ [“Lattice Synthesis Engine-Supported HDL Attributes” on page 846](#)
- ▶ [“About Netlist Analyzer” on page 51](#)

## Compiling the Design Using Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor

By default, Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor is set to compile the design automatically. With automatic compilation, Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor automatically performs checks as to whether the design data is outdated. This happens whenever the Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor is launched or activated. If the design data is found to be outdated, the compilation will begin immediately.

## Supporting Multiple Pre-Synthesis Constraint Files Using Constraint Configuration

Constraint Configuration dialog is set to support multiple constraint files within a single design. This supports adding, removing, or reordering constraint files. It also enables you to activate or deactivate individual files. The saved constraint files are restored when the project is re-opened.

For detailed information on the available options in this tab, refer to [“Constraints Reference Guide” on page 804](#).

### To use the Constraint Configuration dialog:

1. Start Radiant and navigate to **File List > Impl\_1 > Context Menu > Constraint Configuration**. The dialog shows added files (Pre-Synthesis Constraint files) as they appear in the File tree.
2. Add existing constraint files to the configuration panel using the + button. To remove existing constraint files from the panel, use the - button.
3. Change the order of constraint files using the up & down arrow buttons.
4. Set any constraint file to active or to inactive by toggling the check box.
5. Search for constraints files by typing the filename in the search box.
6. On clicking OK
  - ▶ The configuration dialog will close and the constraint files are displayed in the File list under Pre-Synthesis Constraints section. The files are displayed in same order as in the dialog.
  - ▶ The active constraint files are visually rendered in bold face.
7. On clicking Cancel all the changes performed in Constraint Configuration dialog are discarded and not saved.

### To set multiple constraint files to Active/Inactive state in File List view:

You can set multiple constraint files to active/inactive state using the context menu command. Setting file/s to active state does not change the current state of other constraint files.

1. Select one or more constraints files in **Pre-Synthesis Constraint** section.

2. Right click. The context menu is displayed.
  - ▶ For all active selected files, the set inactive context menu item is displayed enabled to set all the active selected files to inactive state.
  - ▶ For all inactive selected files, the set active context menu item is displayed enabled to set all the inactive selected files to active state.
  - ▶ For both active and inactive selected files, both set active/set inactive context menu items are disabled. You can select all active or all inactive files to modify their state.

---

**Note**

The active/inactive status and order of constraint files are saved when you saved the Radiant project. These settings are automatically restored when reopening the project.

---

**To add multiple active constraint files as synthesis input for both LSE & Synplify Pro:**

- ▶ For the design that does have IPs with constraint files, all the active constraints files along with IP constraint files are passed to CPE to generate one LDC file and are passed to LSE or Synplify Pro.
- ▶ For the design that does not have IPs with constraint files, all the active constraints files are added in the same order in synthesis tcl file for both LSE & Synplify Pro.

**To display the constraints file using the Pre-Synthesis Constraints Editor:**

1. Open the Pre-Synthesis Constraint Editor. A drop-down menu is displayed with list of available constraint files.
2. If no constraint file is added to the Pre-Synthesis Constraints section:
  - ▶ The drop-down menu is not displayed and Constraint Editor is empty.
  - ▶ Add constraints file in Constraint Editor and save in a new file using Save As. The drop-down menu current selection is the new saved file.
  - ▶ The new saved file is added to the Pre-Synthesis Constraints section and displayed in active state.
3. If one or more constraints files are added in the Pre-Synthesis Constraints section:
  - ▶ The Constraints Editor displayed the contents of the first active constraint file. The drop-down menu current selection is the active file.
  - ▶ You can switch between constraints files by selecting from the drop-down menu files.

Edits made in the current selected file can be saved using Save command. If you select another constraint file without saving the changes for the current file, a confirmation displays to ask save or discard the changes.

## Physical Designer

The Physical Designer is a combined GUI interface of both the Placement Mode and Routing Mode accessible within one Radiant software tool. This provides one central location where a user can do all the floor-planning and be able to view the physical layout of the design.

The tool can be invoked by either: **Tools > Physical Designer** or by clicking on the toolbar icon . Upon opening, the GUI you will be shown is the Placement Mode.

To access the **Routing Mode**, select the Placement/IO  /  view icon on the side tool and within this drop-down select the Routing icon  to start routing view.

### See Also

- ▶ [“Physical Designer: Placement Mode” on page 299](#)
- ▶ [“Physical Designer: Routing Mode” on page 305](#)

## Physical Designer: I/O Planning in IO Mode

Placement Mode is for GROUPS and REGIONs assignment. You can use the IO Mode tool for I/O planning and I/O assignment such as DDR interface, DQS and clock assignments. As you move your mouse pointer slowly over the I/O Abstract layout, details are displayed in tool tips: the number of resources for each items such as ECLCK, DDR, PLL, and IO Banks utilization are displayed.

### Note

---

The Physical Designer IO mode is only supported in CrossLink-NX based device families.

---

### Switching Views: Placement / IO Mode

To toggle between the Placement Model and IO Mode, click the   from the drop-down menu.

### IO Mode Operations

Design elements can be placed are shown in the left data panel and a chip-level view of the FPGA and available resources are shown on the right. The search text box at the top can be used to do searches for instances and IOs deep into the hierarchy.

Assignment is merely dragging elements from the left data panel onto the appropriate resource on the main layout I/O view window to be placed. Design elements (i.e. DDR) can be dragged as a group or individual element.

When clicking on the instance/I/Os on the IO Abstract view main window, the associated instance/I/O in the data pane on the left will be highlighted and vice versa.

-  For regular I/O Banks - I/O already placed.
-  For regular I/O Banks - I/O constrained and locked.
-  For regular I/O Banks – Available for placement.
-  For regular Serdes I/Os - I/O already placed.
-  For regular Serdes I/Os– Available for placement.

Selection and assigning is performed by clicking and dragging of the I/O selected. Once you find the correct site, the site will be shown in green and the tool-tip will show the “+” to place the selected I/O object, you can release the left button. The tool does a final check and does the assignment accordingly.

Once an I/O object has been placed, you can move it again to a different place. If you select a leaf cell, on the cell or its associated “move-together” instances are selected.

You can also select the I/O object at the data panel. Right-click to activate the action menu and then choose Unplace.

Note that you cannot drag-n-drop for an I/O object which has been partially placed. You need to select low-level groups or leaf cells which have not been placed.

By default, a user cannot change user constraints in the IO view. If a component is constrained by a user “locate” constraint, the component is treated as a locked component. A locked component cannot be drag-n-dropped.

To drag-n-drop a locked component. From the Radiant main window, choose **Tools > Options > Tools** tab on the left and then choose **Physical Designer** heading tab, toggle the **Overwrite constraint: true**

### Exporting I/O Planning Results

Once you complete your I/O planning whether pre/post P&R, you can export the I/O constraints to a PDF file. This is done by choosing **File > Export Placement Result**. You can overwrite an existing PDC or save to a new .PDC constraint file.

### See Also

- ▶ [“Displaying Assignments and Connections” on page 300](#)
- ▶ [“Assigning Signals” on page 307](#)
- ▶ [“Creating GROUPs” on page 312](#)

## Physical Designer: Placement Mode

Placement Mode provides a large-component layout of your design. All connections are displayed as fly-lines. Placement Mode allows you to create REGIONS and bounding boxes for GROUPS and specify the types of components and connections to be displayed. As you move your mouse pointer slowly over the floorplan layout, details are displayed in tool tips: the number of resources for each GROUP and REGION; the number of utilized slices for each PLC component; and the name and location of each component, port, net, and site.


Placement Mode is available as soon as the target device has been specified.

### See Also

- ▶ [“Creating GROUPs” on page 312](#)
- ▶ [“Using the Zoom and Pan Tools in Device Constraint Editor” on page 252](#)

## Congestion Timing Mapping Display

The congestion timing display allows you to debug timing congested areas of your design. This congestion timing display gives the timing of the most critical paths within the slack threshold input. Clicking on the timing icon  will bring up Time Setting components dialogue in which once set, will display the congestion map.

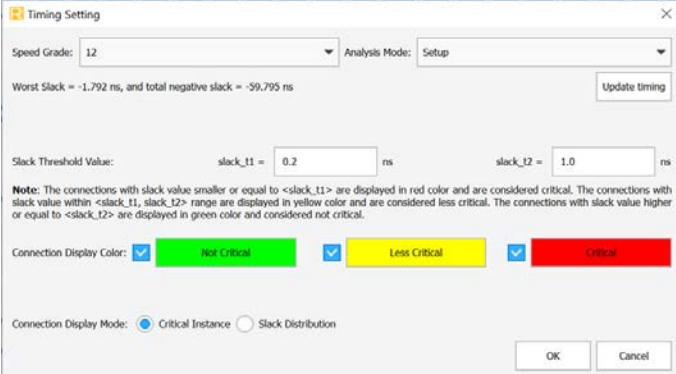

The Timing Setting dialog box contains the following fields and options:


- Speed Grade:** 12
- Analysis Mode:** Setup
- Worst Slack:** -1.792 ns, and total negative slack = -59.795 ns
- Slack Threshold Value:**
  - slack\_t1 = 0.2 ns
  - slack\_t2 = 1.0 ns
- Note:** The connections with slack value smaller or equal to <slack\_t1> are displayed in red color and are considered critical. The connections with slack value within <slack\_t1, slack\_t2> range are displayed in yellow color and are considered less critical. The connections with slack value higher or equal to <slack\_t2> are displayed in green color and considered not critical.
- Connection Display Color:**
  - ☒ Red Critical
  - ☒ Less Critical
  - ☒ Critical
- Connection Display Mode:**
  - ☒ Critical Instance
  - ☐ Slack Distribution
- Buttons:** Update timing, OK, Cancel

1. Speed Grade - Choose the speed grade to perform analysis on.
2. Analysis Mode - Choose Setup/Hold.
3. Enter Slack Threshold Values for t1 and t2. Any value less than t1 will be displayed as red, less than t2 as yellow, and the rest green.
4. Select the Connection Display Mode - Critical Instance or Slack Distribution. (The connection display colors can be changed.)
  - ▶ Critical Instance - Displays all red colored congestion lines connecting to the critical instances.
  - ▶ Slack Distribution - Shows the congestion lines in weighted equal distribution of each of the congestion levels.

5. Click Update Timing. A Worst/Total negative slack is calculated.
6. Click OK. A congestion map is drawn.

## Congestion Display

The congestion display is a read-only view for viewing the most congested regions based on the wire length and pins selected. Clicking on the timing icon  will bring up congestion display view after selecting options.

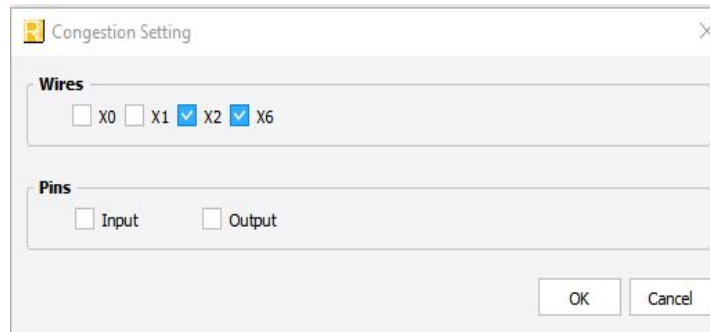

1. Wires - Select the wire connection from switch box. (x0, x1, x2, x6)
2. Pins - Select Input / Output.

## Displaying Assignments and Connections

The Placement Mode toolbar allows you to select the types of elements that will be displayed on the layout, including IOs, DQS GROUPS, placed components, and component connections. These commands are also available from the View menu.



Area Selection Mode - used to drag and select sections of the floorplan.



Display Placement – displays all placed components, including assignments originating from the logical constraint file (.pdc) and those made by Place & Route.



Display Placement Groups – highlights the placed GROUP component sites with the designated color fill.



Display Connections To/From Selection(s) – controls the two Display Connections buttons below it. When active, it enables you to activate one or both of these buttons to view the connections between selected components, outside of selected component, or both.



Display Connections Between Selection(s) - shows the connections between selected components.



Display Connections Outside of Selection(s) - shows the connections that extend outside of the selected components.





Display Placement Constraints - shows placement assignments that originated from the ..pdc file. When this button is active, placed components assigned with a LOC constraint are distinguished with a cross-hatch pattern.



Display Regions – displays any defined REGIONS.



Display Groups – displays any defined GROUPS.



Display Logical Connections - shows the logical connections between GROUPs, including those assigned to REGIONS, and between GROUP and assigned Constraint sites. The connections are based on the logical instances within each GROUP.



Show World View– toggles the World View of DCE to On or Off



Placement/IO Abstract View - Toggles between these two views for GROUPS/REGIONS or I/O Placement.



Congestion Timing Map View - Turns on timing congestion map tool for analysis.



Congestion Display - Turns on congestion display analysis tool.

### See Also

- ▶ [“Using the Zoom and Pan Tools in Device Constraint Editor” on page 252](#)
- ▶ [“Viewing Assignments in Placement Mode” on page 302](#)

## Searching for Design Elements in Placement Mode

The Find Text... dialog box in Placement Mode enables you to search for components, nets, and sites.

### To search for components, nets, or sites in Placement Mode:

1. Choose **Tools > Physical Designer**, and then choose **Edit > Find** or press **Ctrl+F**.
2. In the Find dialog box, type the name of the component, net, or site that you want to find. Use the asterisk and question mark characters to perform wildcard searches.
3. Select the type from the Find Type pulldown menu.
4. Select Match Whole Word and Match Case as desired, to narrow your search to a complete name or to match upper and lower case letters.
5. Click **Find Next** or **Select All**.

The item or items are highlighted on the layout.

Use the **Find Next** and **Find Previous** buttons to navigate from one found item to another. Each will be highlighted on the layout.

## Viewing Assignments in Placement Mode

Placement Mode displays assignments at any stage of the design flow. These can include assigned sites, GROUPS, REGIONS, and reserved resources. After routing, all placements assigned by the Place & Route process are displayed.

The “Display” commands on the toolbar or the View menu control the display of assignments. The types of assignments displayed will depend on whether the commands “Display Placement,” “Display Placement Constraints,” or both are activated.

**Assigned Sites** After placement and routing, the site a component has been assigned appears on the layout with a solid fill.



If the assignment originated from the HDL source, the site will be filled and overlaid with a cross-hatch pattern when both “Display Placement” and “Display Placement Constraints” are activated.



When only “Display Placement Constraints” is activated, an assignment originating from the logical constraint file or HDL source is displayed with the cross-hatch pattern but without the fill.





**Reserved Sites** Sites reserved are displayed with a gray pattern.




**PLC Blocks (PFU and PFF)** After placement and routing, a programmable logic cell (PLC) in which one or more logical components have been placed will appear on the layout with a solid fill. The color fill will be darker or lighter in shade, depending on how many sites are used.

As you zoom in so that individual slices are visible, only the slices that contain placed logical components are displayed with a color fill.

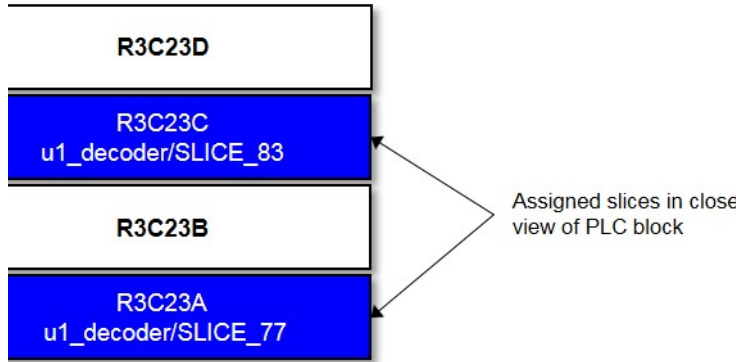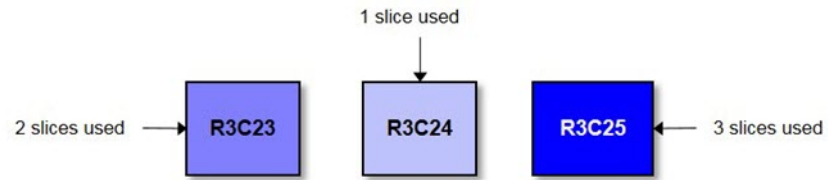

When Display Congestion is turned on, a highlighted rectangle is displayed that represents the amount of congestion for the row and column location. The tool tip shows the precise percentage of congestion.

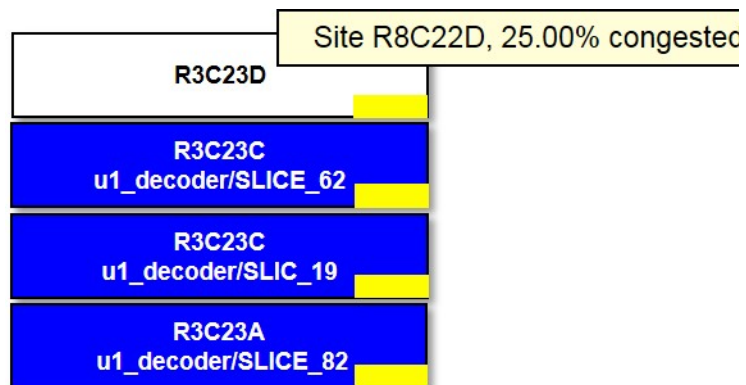


## GROUPS

Anchored GROUPS are displayed when both the "Display Placement Constraints" and "Display GROUPS" commands are activated. An anchored

unbounded GROUP is indicated with a small square icon at the upper left of the assigned anchor location. The icon becomes visible as you zoom in.

A bounded GROUP is displayed with a solid border, corresponding to the assigned width and height, and a dotted pattern between blocks. GROUPS are distinguished from one another by their designated colors. After placement, the sites that contain the member elements of the GROUP are filled with the designated color when the “Display Placement Groups” command is activated.

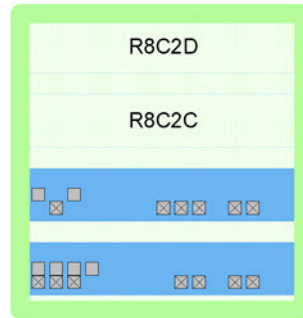

**REGIONS** REGIONS are displayed when both the “Display Placement Constraints” and “Display REGIONS” commands are activated. A REGION bounding box is shown with a solid border and a solid fill between blocks. It is distinguished from other REGIONS by its designated color. When a REGION is reserved with the ‘Prohibit’ command, it is overlaid with a gray dotted pattern.



#### See Also

- ▶ [“Displaying Assignments and Connections” on page 300](#)
- ▶ [“Assigning Signals” on page 307](#)
- ▶ [“Creating GROUPS” on page 312](#)

## Going to a Specific Site

Placement Mode provides a “Go To Location” dialog box for quick navigation to a specific column and row on the layout.

#### To go to a specific site:

1. In Placement Mode, right-click an empty space on the layout and choose **Go to Location**.

2. In the dialog box, enter the desired Row and Column.
3. Click **OK**.  
Placement Mode zooms in to the location you specified.

#### See Also

- ▶ [“Using the Zoom and Pan Tools in Device Constraint Editor” on page 252](#)
- ▶ [“Searching for Design Elements in Device Constraint Editor” on page 254](#)

## Physical Designer: Routing Mode

Routing Mode provides a read-only detailed layout of your design that includes switch boxes and physical wire connections. Routed connections are displayed as Manhattan-style lines, and unrouted connections are displayed as flylines. As you move your mouse slowly over the layout, the name and location of each REGION, group, component, port, net, and site are displayed as tool tips.

On the left hierarchy view in this tool, a user can do design exploration by the Logical tab whereby the netlist is hierarchy and signals exist at the module and instance level, or the Physical tab which displays a flattened netlist showing signals in the sub-module level.

### Displaying Components and Connections

The routing mode toolbar allows you to select the types of elements that will be displayed on the layout.



Displays sites, unused or vacant blocks to which logic can be assigned.



Displays components, blocks that have assigned logic.



Displays routes, physical connections between resources on the chip after the design has been routed.



Displays unrouted nets, those that PAR failed to route or those that could not be routed because a site associated with a net was unlocked by the user.



Displays the latest timing path selected in Timing Analyzer.

### Highlighting Elements

Use the View menu's Highlight / Unhighlight commands to highlight or unhighlight selected nets or sites.

### Viewing Highlighted Items, Prohibited Sites, and Labels

Use the View menu's Layer commands to display highlighted items, prohibited sites, and the textual labels of sites and components.

#### Note

When the text display has been turned on, a label will sometimes overlap the edge of the symbol or even appear aligned with the symbol below it. However, when you hold the mouse pointer over the symbol, the correct label will appear in the tool tip.

#### See Also

► [“Using the Zoom and Pan Tools in Device Constraint Editor” on page 252](#)

## Applying Radiant Software Physical Constraints

Radiant software constraint-editing views allow you to specify FPGA pre-synthesis constraints without having to write out logical constraints syntax manually. These views include Spreadsheet View, Package View, Netlist View of Device Constraint Editor and Placement Mode.

### Setting Global Constraints

The Global tab in Spreadsheet View enables you to set constraints that affect the entire design, such as voltage, temperature, global BLOCK constraints, and configuration constraints. The list of these constraints varies by device family.

#### To set global constraints:

1. In Spreadsheet View, select the **Global** tab.
2. To perform a global edit, do one of the following:
  - Double-click the value and enter a new one.

The table cell changes format. If the cell changes to a text box, type the new value. If it changes to a box with a pulldown menu, choose the value from the list.
  - Right-click the constraint value cell and select the desired value from the pop-up menu. For a text entry, choose **Edit Cell**, and then type the new value.
3. To return to the default value, highlight the value and press the **Delete** key or right-click the value and choose **Clear**.

## Assigning Signals

Radiant software Spreadsheet View and Netlist View enable you to assign signals to pin locations. You can also assign signals by dragging them from Netlist View to pin locations on the Package View layout. Signals can be assigned or reassigned at any stage of the design flow.

### Assigning Signals in Device Constraint Editor Spreadsheet View

Spreadsheet View provides two methods for assigning signals to pin locations:

- ▶ Use the Port Assignments sheet to assign pins to listed signals. The Port Assignments sheet displays signals by port type and signal names.
- ▶ Use the Pin Assignments sheet to assign signals to listed pins. The Pin Assignments sheet lists pins by pin, pad name, bank, dual function, and polarity.

Both views enable you to make single or multiple assignments.

### Assigning Pins Using the Port Assignments Sheet

For a single pin assignment, double-click the pin cell for a given signal and type the desired pin name. For multiple pin assignments, use the Assign Pins dialog box, as explained below.

#### To assign pin locations:

1. From the Pin column, select the pin cells of the signals to assign.

To select multiple pin cells, do one of the following:

- ▶ Drag down the pin column or use the **Ctrl+click** or **Shift+click** combination.
- ▶ For a bus, open Device Constraint Editor View and detach it. Select the bus from the Ports list of Netlist View widget and drag it to the Port Assignments Sheet of Spreadsheet View in the lower half. All the rows for the bus signal names become highlighted.

2. Right-click the selected cells in the Pin column and choose **Assign Pins**.

In the Assign Pins dialog box, the signals you selected are displayed in boldface in the left pane. In the pin list next to it, the same number of pins are displayed in bold at the top of the list. The software automatically interprets the design files and displays the pin filters that should be enabled by default. For example, if you selected an LVDS25 type of port in Spreadsheet View, the polarity section on the right will show the True P-side filter as enabled. If you selected a BLVDS type of port, it shows the Emulated P-side filter as enabled.

3. Clear or select the desired options under Pin Types to narrow or expand the list of available pins, and then select **Auto Sort** or **Manual Sort**.

- ▶ If Auto Sort is selected, select the desired sorting option under “Sort by,” and then select **Ascending** or **Descending** order.
- ▶ If Manual Sort is selected, use one of the following methods to drag pins and place them in the desired order:
  - ▶ Click one pin to select it, and then drag it to the desired location.
  - ▶ Use the **Shift** key to select several pins at once and release the mouse button. Next, drag the highlighted pins to the desired position.
- 4. From the pin list, select the pin location where you would like the assignment to begin.  
The dialog box highlights the selected pin and displays in bold type the sequence of pins following it—one for each signal
- 5. From the Assign Pin pulldown menu at the bottom left, select one of the following Assign Pin options: every, every second, every third, or every fourth pin.
- 6. To check the validity of the selected pin assignments, click **Check Pins**.  
A message box appears that lists any assignment errors. If errors are reported, repeat Steps 4–6 until the pin check is free of errors.
- 7. Click **Assign**.

## Modifying Assignments in Device Constraint Editor Spreadsheet View

You can modify pin assignments in Spreadsheet View before or after placement and routing. After routing, you can also modify assignments that automatically made by the Place & Route Process.

### To modify assignments:

1. From the Port Assignments sheet or Pin Assignments sheet, select the assignments that you want to modify, right-click, and choose **Assign Pins** or **Assign Signals**.
2. Follow the same procedure in [Assigning Pins Using the Port Assignments Sheet](#).

### To modify assignments made automatically by Place & Route:

1. Choose **View > Display IO Placement**.

All placed and routed assignments are displayed in parentheses, including user assignments. User assignments appear twice—once without parentheses and once in parentheses—and they are displayed in black font or the font color that has been designated for “Normal” in the options dialog box. Assignments that were made automatically by Place & Route appear only once. They are displayed in parentheses and are distinguished by blue font or the font color designated for “Default Values.”



2. Select the assignments made by Place & Route that you want to modify, right-click, and choose **Assign Pins** or **Assign Signals**.
3. Follow the same procedure in [Assigning Pins Using the Port Assignments Sheet](#).

The assignments are now displayed in black font. Those that were assigned by Place & Route appear in parentheses, preceded by the new assignments.

**To remove assignments:**

- ▶ Select the assigned pins or signals that you want to delete, and press the **Delete** key. Optionally, right-click the selected assignments and choose **Clear**.

**Note**

---

Only user assignments can be deleted. Assignments made automatically by Place & Route can be modified but not deleted.

---

## Modifying Signal Assignments using the Device Constraint Editor

Device Constraint Editor enables you to use drag-and-drop to move one or more signal assignments to unlocked pins. It also allows you to move a single signal assignment to a pin that is already locked as well as swap the two assignments.

**To modify one or more assignments:**

1. Select the device pins on the layout that contains the assignments you want to modify.

To select only one pin, click it to highlight it. Use the **Ctrl** or **Shift** key or to select more than one pin, or drag your mouse around multiple pins to select them.

2. Move the mouse toward the desired unlocked pin location.

As you begin to drag, the cursor displays a crossed-out circle symbol. The cursor changes to an arrow as you move it over valid pins. Keep dragging until you have reached the targeted location.

3. When the cursor displays the arrow symbol over the targeted location, release the mouse button.

**Note**

---

If you are modifying a single assignment, make sure that the pin is highlighted before dragging it. If you try to drag a pin before it is highlighted, you will activate the multiple selection tool.

---

**To remove assignments:**

1. Select the pins that contain the assignments you want to remove.

2. Right-click the selected pins and choose **Unlock**.

### See Also

- ▶ [“Assigning Signals in Device Constraint Editor Spreadsheet View” on page 307](#)
- ▶ [“Modifying Assignments in Device Constraint Editor Spreadsheet View” on page 308](#)
- ▶ [“Prohibiting Incompatible Pins” on page 311](#)

## Modifying Signal Assignments in Placement Mode

In Placement Mode, you can modify a signal assignment by dragging it from one Constraint to another. You can also modify an assignment that originated from the logical constraint file (.pdc) or one that was made automatically by Place & Route (PAR).

### To modify a signal assignment in Placement Mode:

1. Choose **Tools > Physical Designer**.
2. Make sure that the “Display Placement” button  is turned on if you will be modifying a PAR-assigned I/O.
3. In Placement mode, [zoom in](#) so that you can easily view the placed Constraint component that you want to reassign and the targeted location.

Constraint components that were assigned automatically by PAR are displayed with a solid color fill. Constraint components whose assignments originated from the .pdc file are displayed with a color fill and a cross-hatch overlay.

4. Drag from the assigned site to the targeted location and release the mouse button.

The previous location is now displayed with a fill and no cross-hatch, and the targeted location is displayed with the cross-hatch and no fill.

## Setting Port, Net, and Cell Attributes

Spreadsheet View's Port Assignments Sheet, Clock Resource sheet, Route Priority sheet, Cell Mapping sheet, and Global constraints sheet enable you to set attributes for ports, nets, and cells. They allow you to set I/O port attributes, assign net priorities, specify registers for flip-flops, and set junction temperature and voltage.

## Defining I/O Defaults

The Radiant software allows you to set values for all ports in your design at once. You can do this by using the ALLPORTS selection, which is available in the Spreadsheet view section of Device Constraint Editor.

## Defining I/O Defaults Using ALL PORTS

The ALL PORTS row in Device Constraint Editor's Spreadsheet View's Port Assignments sheet enables you to quickly define a default setting for I/O attributes. It can be especially useful for setting the I/O type default.

### To define default settings Using ALL PORTS:

1. In Spreadsheet View in the Device Constraint Editor, select the Port tab.
2. Double-click the desired attribute cell in the ALL PORTS row and select a value from the pulldown list. Optionally, right-click the cell and select a value from the pop-up list.

The newly selected value is displayed in orange, or the font color designated for "Reference Value," for all of the ports that do not have other values already assigned.

#### Note

---

The range of attribute values available with the ALL PORTS row reflect the intersection of valid values across all port types. To access all available values, use individual ports or port groups.

---

You can return to the original default setting by selecting the attribute cell and pressing the **Delete** key.

## Prohibiting Incompatible Pins

Both Spreadsheet View and Package View of Device Constraint Editor enable you to create a PROHIBIT constraints for selected incompatible pins or all incompatible pins. Prohibiting incompatible pins will prevent you from assigning signals to them. It will also prevent the Map and Place & Route processes from using these incompatible pins. When you prohibit incompatible pins, none of the pins that have already been assigned will become unlocked.

### To prohibit one or several incompatible pins:

- ▶ On the Pin Assignment sheet of Spreadsheet View or in Package View, select the incompatible pins that you want to prohibit. Right-click, and choose **Prohibit**.

### To release one or several incompatible pins:

- ▶ On the Pin Assignment sheet of Spreadsheet View or in Package View, select the prohibited pins that you want to release. Right-click and choose **Release**.

## Creating GROUPs

The GRP constraint consists of logical components that are to be packed close together. GROUPs can include PFU, PFF, EBR, and DSP blocks. You can create GROUPs in Spreadsheet View, Netlist View and Placement Mode. After placement and routing, Placement Mode displays the group member elements with the GROUP color fill.

### Note

A GROUP must be anchored if it includes a DSP block. If such a GROUP is not anchored, the Radiant software will issue a warning and ignore the DSP block. For more information on anchored GROUPs, see [“GROUPs” on page 303](#) and [“GRP” on page 808](#).

### Creating GROUPs in Netlist View in Device Constraint Editor

#### To create a GROUP in Spreadsheet View:

1. Right click on Netlist View on Ports (Input or Output).
2. Click on **Create Port Group**.
3. A new Group dialog appears. You can now move available ports to selected ports.
4. After entering a Group name, this constraint will be saved in the .pdc file as a ldc\_create\_group constraint.

#### Creating GROUPs in Placement Mode

In Placement Mode, you can draw a bounding box for a new GROUP, and then select the instances to be included. For routed designs, you can create a GROUP from selected components displayed on the layout.

#### To create a GROUP bounding box and add instances:

1. Choose **Tools > Physical Designer**.
2. [Zoom in](#), as needed, to the desired area on the floorplan layout.
3. Right-click and choose **Create GROUP BBox**.

The mouse pointer changes from an arrow to a cross symbol.

4. Draw a rectangle around the sites where you want to place the GROUP. Make sure that the bounding box does not overlap the bounding box of another GROUP or REGION.

When you release the mouse button, the Create GROUP dialog box opens. In the Anchor and BBox sections, it shows the anchor site location and the bounding box size, based on the rectangle you drew on the floorplan. Under GROUP name, the resources covered by the bounding box are shown: LUTs, DSPs, registers, and EBRs.

If Synthesis has not been run yet, the following message will appear when the dialog box is opened.

CRITICAL <2471112> - Run synthesis before creating BBOX to update Selected Instance Resource Count.


Tcl Console Output Message

## Note

A GROUP must be anchored in order to be displayed in Placement Mode. For more information on anchored GROUPs, see [“GROUPS” on page 303](#) and [“GRP” on page 808](#).

5. In the boxes at the top of the dialog box, specify a name for the GROUP and select a color.
6. From the list of Available Instances, select those that you want included in the GROUP.
  - ▶ Use a string and wildcards (asterisk or question mark) in the Filter text box to narrow the list.
  - ▶ Use the **Ctrl** or **Shift** key to select multiple instances from the full or filtered list.
7. Click the > button to move the selected instances to the Selected Instances list. Click the >> button to add all instances to the Selected Instances list.

You can further modify the group membership by moving elements between the Available Instances and Selected Instances lists.

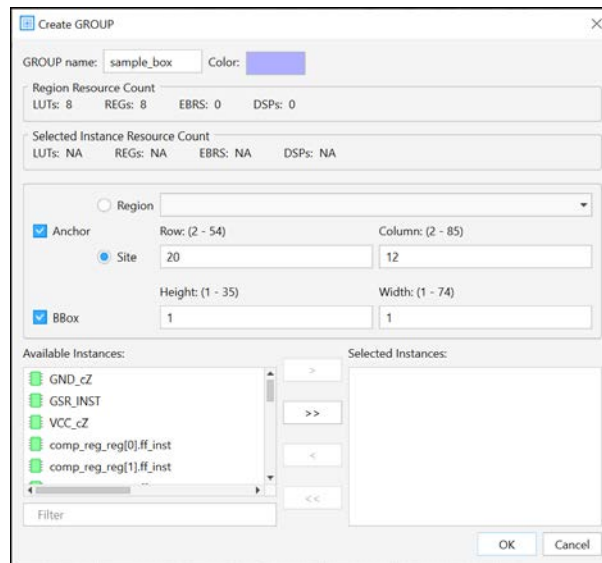

- ▶ Based on the instance chosen from the Available Instances list, the Resource Usage count will be updated and shown in the **Selected Instance Resource Count** section.
- ▶ The Resource Usage Count shown in the **Selected Instance Resource Count** section represents the total resources of all instances listed in the Selected Instances pane.

- ▶ When you choose a region and instances to create a BBOX and click OK, DRC will verify if the total resource count of the selected instances exceeds the region's resource count.
- ▶ If the Total Selected Instance Resource Count surpasses the Region Resource Count, an error message will appear, indicating that the BBOX is too small.

8. Click **OK**.

The new GROUP is displayed in Placement Mode with a bounding box in the color you selected. The new GROUP is added to the Group constraint sheet in Spreadsheet View.

**To create a GROUP from selected placed components in Placement Mode:**

1. In Placement Mode, [zoom in](#) to the desired area as needed.
2. Select the placed components that you want to include in the GROUP. These can include PFU or PFF slices, EBR blocks, or DSP blocks.

**Note**

To view the precise logical identifiers for a PFU or PFF slice, select it on the layout and cross-probe to Netlist View.

3. Right-click the selected components and choose **Create GROUP**.

The Create New GROUP dialog box opens. In the Selected Instances list, the placed components from the blocks you selected in Placement Mode are shown.

4. In the boxes at the top of the dialog box, specify a name for the GROUP and select a color.

5. To select a different anchor location, select either **Region** or **Site**.

- ▶ For Region, select a REGION from the pulldown list. Regions must already be defined in order for them to appear on the list.

When Region is selected, the group will float inside the selected REGION.

- ▶ For Site, specify the column and row for the anchor. The allowable range is shown in parentheses above each box.

When Site is selected, the specified site will serve as the northwest corner anchor location.

6. To define a different size for the group's bounding box, specify the number of columns and rows that the GROUP's bounding box should cover. The allowable range for height and width is shown in parentheses above each box. Make sure that the bounding box does not overlap the bounding box of another GROUP or REGION.

The group's revised resource coverage is now displayed at the top under GROUP Name, including the number of LUTs, registers, and EBRs.

7. Click **Add**.

The new GROUP is displayed in Placement Mode with a bounding box in the color you selected, and it is added to the Group constraint sheet in Spreadsheet View.

## Grouping Components Along an Individual Signal

In Placement Mode, you can group components along an individual signal of a timing path by cross-probing a signal from Timing Analyzer to Placement Mode. From Placement Mode, you can then select the components along the displayed connection to create a new GROUP.

### To group components along an individual signal:

1. After placement and routing, choose **Tools >  Timing Analyzer**.
2. In the timing constraint list in the lower left pane, expand Analysis Results, and then select the desired timing constraint.

The path table opens in the upper right pane.

3. Select a signal from the path table, right-click, and choose **Show in > Placement Mode**.

The connection is highlighted in Placement Mode.

4. While holding the **Ctrl** key, click each component related to the net.
5. Right-click the selected components and choose **Create > GROUP**.

The Create New GROUP dialog box displays the anchor location and bounding box size of the components you selected, and lists the instances in the Selected Instances pane.

6. In the top part of the dialog box, assign a name to the GROUP. Click the color box to assign a different color.
7. Click **Add**.

The new GROUP is displayed in Placement Mode with a bounding box in the color you selected. The new GROUP is added to the Group constraint sheet in Spreadsheet View.

### See Also

- ▶ [“Using Timing Analyzer” on page 390](#)

## Modifying GROUPs

Use the Edit GROUP Property dialog box to quickly modify the name, color, and membership of a group constraint. You can access the dialog box from the Placement Mode. You can also use Placement Mode to delete a GROUP, or you can use the Group constraint sheet to delete a GROUP or GROUP elements.

### To modify a group constraint:

1. To access the Edit GROUP Property dialog box, do one of the following:

- ▶ In the Group sheet of Spreadsheet View, double-click the group you want to modify or right-click the group and choose **Modify**.
  - ▶ In Placement Mode, zoom in to the GROUP and click the border or an empty space inside so that the group's border is highlighted. Right-click and choose **Edit GROUP**.
2. In the dialog box, make the desired changes and click **Update**.

**To remove elements from a group on the Group constraint sheet:**

1. Select the Group constraint sheet and expand the desired GROUP.
2. Select the group elements you want to remove, right-click, and choose **Remove GROUP Elements**.

**To delete a group constraint on the Group sheet:**

- ▶ Right-click the group you want to delete and choose **Delete**, or press **Delete**.

**To delete a GROUP using Placement Mode:**

1. Zoom in to the GROUP and click the border or an empty space inside so that the group's border is highlighted.
2. Right-click and choose **Remove GROUP**.

**See Also**

- ▶ [“Creating GROUPs” on page 312](#)

## Resizing or Moving a GROUP in Placement Mode

You can resize a GROUP or change its anchor location in Placement Mode.

**To resize a GROUP using Placement Mode:**

1. In Placement Mode, zoom in to the GROUP and select it by clicking the border or an empty space inside. The border becomes highlighted, and you should see small circles on the GROUP's border—one in each corner and one on each side.
2. Position your mouse pointer over one of the corner or side circles.  
The cursor symbol changes to a double-headed arrow.
3. Drag the border outward or inward until the bounding box contains the sites you want to include.

Placement Mode displays the new bounding box dimensions. The Group sheet in Spreadsheet View shows the updated dimensions.

**To change the GROUP's anchor location:**

1. Zoom out until you can view the current location on the layout and the targeted location.



2. Click the GROUP's border or an empty space inside it so that the border is highlighted.

The crossed arrows symbol should immediately appear. If it does not, move your mouse pointer very slightly until it does.

3. Hold down the left mouse button, drag the GROUP box to the targeted location, and then release the mouse button.

Placement Mode displays the GROUP in its new location. The Group sheet in Spreadsheet View shows the updated location.

#### See Also

- ▶ [“Creating GROUPs” on page 312](#)

## Constraint Conflict Resolution

When more than one constraint is ascribed to a single design element, some constraints will take precedence over others, depending on the level of specificity, the order of the conflicting preferences, and redundancy between the HDL source and the Lattice design constraints file (.ldc). The software resolves such conflicts by adhering to the following rules of precedence:

- ▶ Timing constraints that have a higher priority than others take precedence when the same design objects are constrained in two or more preferences.

See [“Timing Constraints Priority” on page 318](#)

- ▶ When more than one constraint applies to a net or path, more specific preferences are honored before less specific ones. For example, individual net/path constraints supersede group (bus) constraints, and group constraints supersede global constraints.
- ▶ When more than one constraint at the same specificity level exists for a block/comp/net/path, the constraint that occurs last in the constraint file takes precedence.
- ▶ When an attribute in the HDL conflicts with a constraint in the Lattice design constraint file, the constraint in the .ldc file has precedence. For example, when a given register is included in both a GRP attribute and a logical constraint definition, the logical constraint is honored.

See [“Conflicting HDL Attributes and Constraints” on page 319](#)

- ▶ Attributes in the HDL do not appear in the .ldc unless they have been modified and saved to the .ldc file. Afterwards, the groups in the .ldc file take precedence over those in the HDL. Conversely, logical groups created in the Radiant constraint views are kept in the .ldc file and are not back annotated to the HDL design file.
- ▶ When two or more GRPs are identified with the same name in the .ldc file, the group that appears last is honored.
- ▶ When different GRPs in the .ldc file contain one or more of the same members, the GRP that appears last is honored.

## Timing Constraints Priority

The timer uses the following priorities for timing constraints. The highest priority is given to constraints that completely block a path. Under this category we have the `set_false_path` and the `set_clock_groups` constraints. Next in line are the timing exception commands. These are the `set_max_delay`, `set_min_delay` and `set_multicycle_path` constraints. These constraints are prioritized by their options from highest to lowest as follows:

1. From pin/port/cell, through pin/net/cell and to pin/port/cell
2. From pin/port/cell and to pin/port/cell
3. From pin/port/cell, through pin/net/cell and to clock
4. From pin/port/cell and to clock
5. From pin/port/cell and through pin/net/cell
6. From pin/port/cell
7. From clock, through pin/net/cell and to pin/port/cell
8. From clock and to pin/port/cell
9. Through pin/net/cell and to pin/port/cell
10. To pin/port/cell
11. From clock through pin/net/cell to clock
12. From clock to clock
13. From clock through pin/net/cell
14. From clock
15. Through pin/net/cell to clock
16. To clock
17. Through pin/net/cell

The `set_input_delay` and `set_output_delay` affect the arrival and required times at the design boundaries. The `set_clock_latency` and `set_clock_uncertainty` affect the arrival time and behavior of the edges of the clocks.

When multiple IO constraints with the same clock are used on an output port, the last constraint will take priority. Also, when the `-add_delay` is used, the worst constraint will take precedence. the worst case timing for setup and hold are not the same.

## Physical Constraints Priority

### Conflict Between `ldc_set_location` of `ldc_create_group` and `ldc_set_location`

The following example contains a combination of group and location constraints that conflict:

**Figure 10:**

```
ldc_create_group -name Group_0 -bbox {9,9} [get_cells
{pdp_ram_0 pdp_ram_1}]
ldc_set_location -site {EBR_R36C6} [ldc_get_groups {Group_0}]
ldc_set_location -site {EBR_R36C22} [get_cells {pdp_ram_0}]
```

The Group\_0 contains two RAMs of the design. One RAM (EBR) named pdp\_ram\_0, is placed at a specific EBR device site (EBR\_R36C22) using the ldc\_set\_location constraint.

When the place and route program encounters this condition, it honors the ldc\_set\_location on the specific instance constraint. A warning will be issued to let the user know that the instance is discarded from the ldc\_create\_group constraint.

## Conflicting HDL Attributes and Constraints

Using a combination of HDL attributes and constraints is a powerful technique for constraining the implementation tools. However, it is possible to introduce a combination of HDL attributes and logical constraints that are redundant and in conflict with each other. When such conflicts occur, the constraint in the .ldc file takes precedence.

### Conflicting Pin Assignments:

When there is a conflicting pin assignment between the HDL and the constraint file, the assignment in the constraint file will take precedence. For example, SPI\_PIN\_D has a LOC attribute of W25 in the source file. Later, in the Device Constraint Editor Spreadsheet, the pin is assigned to site U21 and saved to the .ldc file. When the design is placed and routed, the U21 location is honored instead of the W25 assignment. The only way to return to the original W25 site assignment is to delete the ldc\_set\_location constraint from the .ldc file.

The following is an HDL example of conflicting pin assignments:

```
Input SPI_PIN_D /* synthesis LOC = "W25" */;
```

The following is an LPF example of conflicting pin assignments, which overwrites HDL:

```
ldc_set_location -site {U21} [get_cells {SPI_PIN_D}] ; (this is LDC, it over-rides HDL))
```

The same is true for ldc\_set\_port -iobuf attributes. For example, the HDL assigns "my\_signal" to L5 with OPENDRAIN set to ON. Later, OPENDRAIN is changed to OFF in Spreadsheet View. The pin assignment remains at L5, and the OPENDRAIN setting of OFF is honored.

### Redundant GRP Declarations

In the following example, two group constraints with the same name contain different members:

**Figure 11:**

---

```
ldc_create_group -name Group_1 [get_cells {reg6 reg7}]
ldc_create_group -name Group_2 [get_cells {reg6 reg7}]
```

---

During place and route, an error will occur in the place and route report and terminate the process.

### **Conflict between ldc\_create\_group and ldc\_set\_location**

The following example contains a combination of group and location preferences that conflict:

**Figure 12:**

---

```
ldc_create_group -name Group_0 -bbox {9,9} [get_cells
{pdp_ram_0 pdp_ram_1}]
ldc_set_location -site {EBR_R36C6} [ldc_get_groups {Group_0}]
ldc_set_location -site {EBR_R36C22} [get_cells {pdp_ram_0}]
```

---

The Group\_0 contains two RAMs of the design. One RAM (EBR) named pdp\_ram\_0, is placed at a specific EBR device site (EBR\_R36C22) using the ldc\_set\_location constraint.

When the place and route program encounters this condition, it honors the ldc\_set\_location of the ldc\_create group constraint. No warnings or errors are generated.

### **Conflicting I/O Buffer Attributes for the Same Port**

When two ldc\_set\_port constraints appear in the .pdc file for the same port, the one that occurs later will be honored and will override the one that appears earlier. The one exception is IO\_TYPE, which can be maintained unless the constraint that occurs later specifies a different IO\_TYPE.

For example, the following constraints for port A appear in two different places in the .pdc file:

**Figure 13:**

---

```
ldc_set_port -iobuf {SLEWRATE=SLOW PULLMODE=DOWN} [get_ports
{A}]
ldc_set_port -iobuf {SLEWRATE =FAST} [get_ports {A}]
```

---

When the design is mapped, the SLEWRATE=FAST constraint, which appears later, will be honored. The earlier constraint will be completely overridden, which means that PULLMODE will revert to the default setting.

**See Also**

► [“Timing and Physical Constraints” on page 215](#)

## Checking Design Rules

The Radiant software provides DRC, which enables you to validate I/O placement, logic, and routing.

During load time and initialization, the Radiant software constraints views interpret the database and constraint files in a similar manner as the Map and Place & Route processes. Syntax or semantic violations within the .ldc and .pdc files are also treated in a manner similar to the Map and Place & Route processes. Illegal constraints are ignored but retained in the logical and physical constraint files. Radiant loads and applies the legal subset it detects and displays error and warning messages.

After the project is loaded, Radiant provides access to on-demand and real-time Constraint DRC Check. All DRC reports are presented in the Output window for the current session.

**See Also**

► [“Constraint DRC” on page 321](#)

## Constraint DRC

Constraint DRC can catch many common errors and prevent wrong pin usage at the early stage of the design process, and helps you ensure that design I/Os are assigned correctly before the design is mapped, placed, and routed. This can dramatically reduce design errors, help you meet timing requirements, optimize for both the FPGA and printed circuit design, and reduce the number of design iterations.

Constraint DRC performs logical and physical tests to validate I/O placement such as signal standard and VCCIO combinations bank by bank, true and emulated LVDS combinations, VREF requirements, and potential conflicts with user assignments made to multi-function pins like those of the sysCONFIG interface. It is available as real-time and on-demand DRC.

Constraint DRC displays all of its messages in the Radiant software Output window.

**See Also**

► [“Performing On-Demand Constraint Design Rule Check” on page 322](#)

## Performing On-Demand Constraint Design Rule Check

The Constraint DRC feature validates pin assignments to banks based on legal combinations of signal standards, including true and emulated LVDS combinations. The Radiant software performs immediate real-time Constraint DRC on any constraint changes. But you can run Constraint DRC on the entire design after modifying constraints, by running on-demand Constraint DRC.

### To perform Constraint design rule checking:

1. From the Radiant software Tools menu, select **Device Constraint Editor**. The following views are available:
  - ▶ Spreadsheet View
  - ▶ Package View
2. Select **Constraint DRC**  from the Device Constraint Editor toolbar. Radiant checks the I/Os. A message box reports whether errors or warnings were encountered. A log of errors and warnings appears in the Output window.

### See Also

- ▶ [“Constraint DRC” on page 321](#)
- ▶ [“Modifying Assignments in Device Constraint Editor Spreadsheet View” on page 308](#)

## Post-Synthesis DRC Check

DRC runs automatically throughout the LSE synthesis flow. After the synthesis process, a report is generated providing information on any combinational loops or clocks that have been found connected to black box modules.

**Table 25: Supported Design Rules for LSE**

| Design Rule                               | Support |
|-------------------------------------------|---------|
| Combinational loops                       | Yes     |
| ▶ Excludes inferred nets.                 |         |
| Clocks connected to a black box           | Yes     |
| ▶ Excludes Lattice primitive black boxes. |         |
| ▶ Excludes macro black boxes.             |         |

**Figure 14: Example of LSE DRC Report**

```
##### DRC Report #####
-----
Total number of design rule violations: 13
-----
Rule Message ID | Violation Count
-----
<35103000>      | 1
-----
<35103100>      | 1
-----
<35103101>      | 3
-----
<35103301>      | 2
-----
<35103302>      | 1
-----
<35103303>      | 1
-----
<35103400>      | 2
-----
<35103401>      | 2
-----
#####

ERROR <35108000> - Found 13 DRC violations.
Please fix the design before continuing to synthesis.
Alternatively, ignore the violated rules with -drc_off or disable DRC.
```

If any DRC violations are found, an error message will appear at the end of the report.

## LSE Design Rule Check

LSE has an independent design rule verification process to lint user RTL. The synthesis flow checks user RTL designs for any design rule violations.

- ▶ The flow is enabled by directly supplying the argument **-drc** to synthesis. For example: **synthesis -f impl.synproj -drc**.
- ▶ Any design rule can be disabled by message ID via command line argument or .synproj line: **-drc\_off <msg\_id>**.
  - ▶ Multiple message IDs, separated by spaces, can be added to one -drc\_off setting.
  - ▶ All design rules are enabled by default.
- ▶ Certain design rules can be configured by message ID via command line argument or .synproj line: **-drc\_cfg <msg\_id> <value>**
- ▶ When a design rule violation is detected, LSE creates a warning.
  - ▶ You can promote this warning to an error via existing methods in Tcl or GUI (using the message ID).

- ▶ A DRC report will be provided at the end of the flow, and all output will be written to the log file: **synthesis.drc**.

**Note:**

**radiant** and **radiantc** flows will automatically change the log filename to:  
 <prjname>\_<impl>\_lattice.drc.

**Table 26: LSE DRC Rules**


| Design Rule                                                         | Message ID | Configuration                                                                     |
|---------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------|
| Invalid attribute                                                   | 35103000   | N/A                                                                               |
| ▶ Checks all nets                                                   |            |                                                                                   |
| ▶ Validates attribute name (not value)                              |            |                                                                                   |
| Inferred latch                                                      | 35103100   | N/A                                                                               |
| Combinational loop                                                  | 35103101   | N/A                                                                               |
| ▶ Excludes inferred nets                                            |            |                                                                                   |
| Register with high fanout                                           | 35103300   | Fanout limit - values less than or equal to 0 will imply the default value of 20. |
| Register uses both async set and async reset                        | 35103301   | N/A                                                                               |
| Same signal source drives clock port and another port of a register | 35103302   | N/A                                                                               |
| Same signal source drives sync and async ports of same register     | 35103303   | N/A                                                                               |
| Clock connected to a blackbox                                       | 35103400   | N/A                                                                               |
| ▶ Excludes Lattice primitive blackboxes                             |            |                                                                                   |
| ▶ Excludes macro blackboxes                                         |            |                                                                                   |
| Clock with logic on its net                                         | 35103401   | N/A                                                                               |

**Using RTL Design Rule Check**


1. In the File List view, double-click the active strategy, for example **Strategy1**. The Strategies dialog box opens.

Under LSE and Synplify Pro strategies, you can enable the **RTL Design Rule Check Option**. In Synplify flow, Radiant inserts **project -run design\_rule\_check** in the Tcl script.



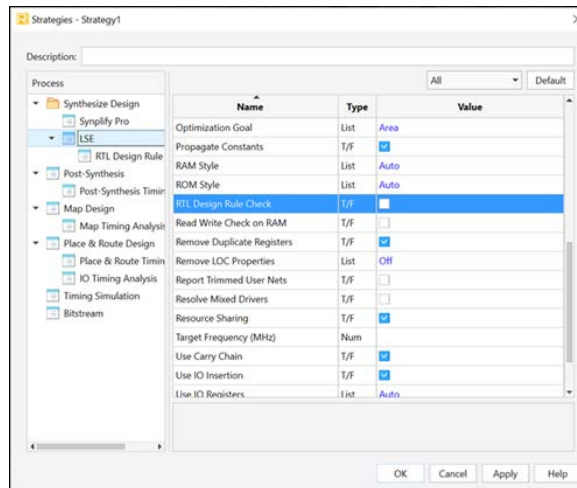


- In the Menu, click **Project > Run RTL Design Rule Check**.

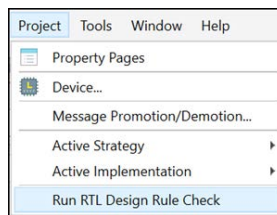

- ▶ LSE lint runs if you are using LSE implementation.
- ▶ Synplify lint runs if you are using Synplify implementation.

- In the Reports tab, you can view the **RTL Design Check** section under Synthesis Reports.

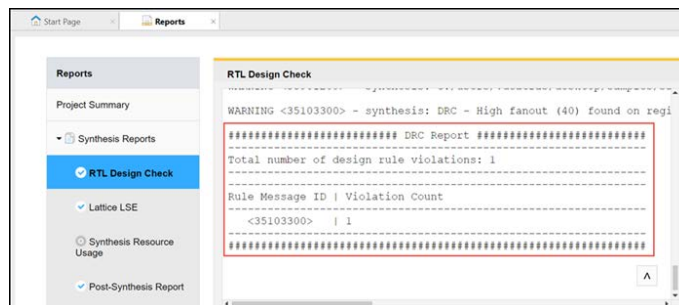

## Post-Map DRC Check

In the post-map stage, DRC performs the following logical and physical tests:

- ▶ Block
- ▶ Net
- ▶ Pad

- ▶ Clock Buffer
- ▶ Name
- ▶ Primitive Pin

Reported errors from DRC indicate conditions where routing or component logic does not operate correctly. Warnings indicate conditions where routing or logic is incomplete or the condition is incorrect but not serious. Some conditions listed as warnings might be reported as errors when DRC is performed by the Generate Bitstream Data (bitgen) process.

For Nexus devices, if the following conditions are met, JTAG pins are not available for GPIO, and DRC will be issued if any GPIO is locked into the JTAG pins:

1. **SLAVE\_I2C\_PORT**, **SLAVE\_I3C\_PORT**, **JTAG\_PORT**, **SLAVE\_SPI\_PORT**, and **MASTER\_SPI\_PORT** sysCONFIG attributes are all set to **DISABLE**.
2. None of the **OSC**, **WDT**, **JTAG**, **MULTIBOOT**, **SEDC**, and **CONFIG\_LMMI** primitives are used in the design.

Post-Map DRC Check is available in the post-map or post-PAR stage in the Spreadsheet View, Package View, Device View in Device Constraint Editor and Placement Mode.

#### See Also

- ▶ [“Performing On-Demand Constraint Design Rule Check” on page 322](#)

## Analyzing SSO

For many FPGA devices, Radiant enables you to run an analysis of simultaneous switching outputs (SSO). SSO analysis describes the noise on signals caused by a large number of out drivers that are switching at the same time. When multiple output drivers change state at the same time, the changing current in the power system induces a voltage that results in power supply disturbances. These disturbances, or noise, can cause undesired transient behavior among output drivers, input receivers, or internal logic. Analysis of simultaneous switching outputs helps ensure that your I/O plan meets the I/O standards and power integrity requirements of the PCB design.

**SSO Calculator** The SSO calculator estimates Simultaneous Switching Noise (SSN) affecting a victim pin according to the switching characteristics of aggressor pins. It does this either on a victim-pin-by-victim-pin basis (Pin Analysis) or on the basis of the worst-case victim pin placement in each bank (Bank Analysis). In many cases, adjusting the location of aggressor pins relative to victims can help mitigate noisy conditions. Noise is characterized by the calculator as ground bounce or voltage drop depending on the type of analysis run. The calculator will produce worst-case bank-based ground bounce results for those banks that have partial signal assignments, and it will produce a more accurate pin-based ground bounce and voltage drop results if all signals of a bank are assigned.

The following calculation is made for a victim pin (in Bank-based Analysis, the worst case victim is used for each bank):

Pass/Fail status: Fails if (Total Noise) > (Pass/Fail criteria) \* ALLOWANCE

where:

Total Noise (mV) = Board Noise + Device Noise

Board PCB Noise can be on the ground plane, for ground bounce calculations; or it can be on the power plane, for Vcc drop calculations. PCB estimated ground plane noise is entered as +X mV. PCB estimated power plane noise is entered as -X mV.

Device noise is the maximum noise imposed on a victim pin by each of the aggressor pin groups. Aggressor groups are specified by using SwitchingID assignments. Reports show which aggressor group is causing the most noise on a victim.

The Pass/Fail criteria is based on the IO\_TYPE of the victim. SSO allowance is a user override that adjusts the pass/fail criteria, where default is no change to the pass/fail criteria (100%)

**SSN Accuracy** SSO calculator estimations are based off of hardware data collected during characterization. The measurements were taken using Lattice test PC boards with signal loading on individual banks. Because the total SSN is a function of PCB ground and board inductance, care must be given to apply accurate SSO preferences based on the parasitic inductances of your system environment.

**About Pin-Based Analysis Reports** Pin-based analysis produces estimates for ground bounce and voltage drop SSN per pin. Pin-based analysis is performed after design signals have been assigned to pins. These pin assignments can be made by setting preferences or by placing and routing the design. The analysis calculates the noise that each pin, as a victim, experiences. It reports the pass/fail status of each pin and where the noise originates—the aggressor group identified by SwitchingID.

**About Bank-Based Analysis Reports** Bank-based analysis produces ground bounce SSN per bank. When at least one signal is assigned only to a bank and not to a pin, bank-based calculation is performed. Compared to pin-based analysis, bank-based analysis assumes worst case placement in the bank for the victim and set of aggressors. Any placement information that does exist is ignored, and worst-case placement is used.

For both Pin-based and Bank-based analysis, pins or banks programmed for signal standards (IO\_TYPE) other than those that the calculator supports are ignored.

**Addressing SSN Problems** The SSO calculator is a good tool for confirming the quality of an I/O plan. After legal signal assignments have been verified and placed using the I/O Assistant strategy, use the SSO calculator to adjust relative placement where SSN margins are exceeded.

The following adjustments to your I/O plan can help avoid SSN problems:

- ▶ Spread aggressors away from victim pins. Use the “Assign Pin” feature of the Assign Pins dialog box in Device Constraint Editor View to stagger package pin assignments.
- ▶ Use slow slew outputs.
- ▶ Use lower drive strengths

#### Note

---

Note when there are multiple SSO constraints defined with `Idc_set_port`, the latest constraint SSO value will always overwrite a previously defined value.

---

#### See Also

- ▶ [“Running SSO Analysis” on page 328](#)
- ▶ [“Viewing SSO Analysis Results” on page 329](#)

## Running SSO Analysis

For bank-based SSO analysis, the SSO calculator requires a SwitchingID that indicates the output drivers that will be switching in parallel, and the banks to which the drivers will be assigned. For pin-based analysis, the SSO calculator also requires detailed signal-to-pin placement. You can specify these parameters in the Port Assignments sheet of Device Constraint Editor View at any stage of the design flow. The more complete your assignments, the more accurate the analysis results will be.

Because the SSO calculator uses the in-memory state of constraints, you are not required to save the SSO parameters in order to run an analysis. This enables you to experiment with placement and other parameters before committing a change to the physical design constraint file (.pdc).

#### To run SSO analysis:

1. In a generic sense, you can edit SSO values in:
  - ▶ The Device Constraint Editor View as indicated from Step 4 onward.
  - ▶ In the [“Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 281](#) you can set values in the Load Capacitance tab. Note that change in SSO values will be saved in the physical design constraint file. (.pdc)
2. In Device Constraint Editor View, select the Port Assignments tab.
3. Assign pin locations or just the bank locations to the output or bidirectional signals that you wish to analyze.
4. Select from the following attributes for each signal to be analyzed:
  - ▶ an appropriate I/O buffer from the IO\_TYPE column
  - ▶ a drive strength for the output buffers from the DRIVE column

- ▶ a slew rate from the SLEWRATE column
5. Specify settings in the following SSO columns for each signal to be analyzed:
    - ▶ Switching ID – Type an alphanumeric value to identify the aggressor output drivers that can switch at the same time.  
If you do not specify a Switching ID, the Default\_ID will be assigned to all output pins.
    - ▶ Ground plane PCB noise – Type a floating point value to specify the millivolt units of estimated board noise for bounce.
    - ▶ Power plane PCB noise – Type a floating point negative value to specify the estimated board noise for drop.
    - ▶ SSO Allowance – Specify an allowable percentage of SSO per bank.  
If any of the settings are estimated to be the same for all output signals, you can use the All Port row to quickly set the values for all outputs.
  6. Once you save entered values from either the Device Constraint Editor (DCE) tool or the Pre-Synthesis Constraint Editor, the constraints are written and saved in the physical design constraint (.pdc) file.
  7. In the Device Constraint Editor toolbar, click the Run and Show SSO View button  to produce SSO analysis and report.
  8. In the Process bar, re-run Map Design and re-open DCE to see new SSO analysis results.

To view the full I/O SSO Analysis Report, select the Reports tab > Misc Reports > I/O SSO Analysis.

If some of the pin or bank assignments failed the analysis, adjust the assignments or parameters to try to reduce the SSO noise. Afterwards, rerun the Map Design.

#### See Also

- ▶ [“Viewing SSO Analysis Results” on page 329](#)
- ▶ [“Analyzing SSO” on page 326](#)

## Viewing SSO Analysis Results

To view results, you can open the I/O SSO Analysis Report in the Reports tab or view it directly in the Device Constraints Editor > SSO tab.

#### To view the SSO Analysis Report:

- ▶ In the Report tab, expand the Misc Reports folder and select **I/O SSO Analysis**.

The SSO Analysis Report is organized by “Bank SSO Results” and “Pin SSO Results.” Each of these sections is further organized according to the type of

change in current—ground bounce or drop—that is caused by the switching aggressor pins.

**Bounce** – When the aggressor pins switch from high to low, the power supply needs to sink current. If a large amount of current needs to be sunk, the ground level will start to rise. This rise in current is the ground bounce.

**Drop** – When the aggressor pins switch from low to high, the power supply needs to source current. If too much current is required, the VCC level will start to drop temporarily as the charge is supplied. This initial drop is the VCC drop. As the charge is supplied, the VCC level starts to go back up to the proper VCC level.

The “Pin SSO Results” section also contains hyperlinks to details organized by pin and bank.

#### To navigate to bank and pin details in the SSO Analysis Report:

- ▶ Click the desired bank number in the “Worst Bounce SSO of each Bank” section or the “Worst Drop SSO of each Bank” section to jump to the appropriate table in “SSO Information of Pins of each Bank”.
- ▶ Click a signal name in one of the tables of “SSO Information of Pins of each Bank” to jump to the detailed SSO Report by pin.

#### To view the SSO information for each output pin in Device Constraint Editor View:

1. In Device Constraint Editor View, choose **SSO tab** at the bottom of the window.

On the pin layout, the SSO pins are highlighted with the status color. Those that failed the analysis are highlighted in red.

2. Hold your mouse pointer over an SSO pin to view the tool tip.

The tool tip for each pin includes information from the SSO Analysis Report.

#### See Also

- ▶ [“Analyzing SSO” on page 326](#)
- ▶ [“Running SSO Analysis” on page 328](#)

## Exporting an SSO Report in CSV Format

After placement and routing, you can use Package View to export an SSO report as a comma-separated value file (.csv).

#### To export an SSO report in CSV format:

1. In Package View, choose **File > Export > SSO Report CSV File**.
2. In the dialog box, browse to the desired directory for the report.

3. Type a name in the file name box and click **Save**.

The SSO report is saved as a .csv file in the location you specified. You can view the report using a spreadsheet program that supports the CSV file format.

#### See Also

- ▶ [“Running SSO Analysis” on page 328](#)

## Exporting Pin Files

The Design Constraint Editor Spreadsheet View supports delimiter-separated text formats, such as comma-separated value (CSV), to ease the viewing and editing of assignments and attributes. The following options are provided for exporting the contents of constraint sheets:

**Pin Layout File** A pin layout file is a customizable report of pin information for your design. You can open the file in an external spreadsheet application for editing, and then import the edited pin layout file back into Spreadsheet View.

#### Pinout File

A pinout file is a comprehensive report, in CSV format, of all available and unbonded pins in the device.

#### See Also

- ▶ [“Exporting a Pin Layout File” on page 331](#)

## Exporting a Pin Layout File

A pin layout file is a customizable report of pin information for your design. Depending on the stage of the design flow, the pin layout file can be as simple as a list of available pins, pad names, functions, and banks. Or it might be a more detailed report that includes differential polarity, type, user assignments, default attributes, and custom column information. Finally, it can be a comprehensive report that also includes PAR assignments. You select the types of information you want included in the file, specify the order of presentation, and select the delimiter to be used as the value separator.

You can obtain a pin layout file from Spreadsheet View at any stage of the design flow. When you later import a pin layout file back into Spreadsheet View, all the information that was saved in the file is displayed.

#### To export a pin layout file:

1. In Spreadsheet View, save any assignments that are still in memory, and then choose **File > Export Pin Layout File**.

The Export Pin Layout File dialog box opens and displays a list of all items that can be included in the report. Any custom columns that have been created are listed last, and you might need to scroll down to view them.

2. Select the items from the list that you want to appear as column headings in the file. Clear those that you do not want included.

---

**Note**

Pin\_Number, Pad\_Name, Function, and IO\_Bank\_Number cannot be cleared. These items will always be included in the pin layout file.

---

If you select Pin Migration, a Migration column for each device that you selected in the Incompatible Pins dialog box will be included in the report. In each of these columns, a Y or N will indicate which pins are compatible or incompatible. The incompatible selection in the tab will affect the export result.

3. Select a value separator that will be used to separate the data into columns: comma, semicolon, space, or tab.
4. If you want the default values to be included for the user-assigned signals in the report, select the **Export Default Value** option. If you do not want the default values included, clear this option.

---

**Note**

If your design has already been placed and routed, the Export Default Value option will be dimmed.

---

5. Do one of the following:
  - ▶ To export the pin layout file to your current project directory, type a name in the File Name box. If you are using the comma as the delimiter, include the .csv extension.
  - ▶ To export the pin layout file to a different directory, click **Browse**, navigate to the desired directory, and type a name in the File name box. If you are using a delimiter other than the comma, choose **All Files** from the “Save as type” drop-down menu; otherwise, keep the default .csv extension. Click **Save**.
6. Click **OK**.

The pin layout file is saved to your project directory or to the directory you specified. When you open the pin layout file in a spreadsheet program, the columns will appear in the order you selected, including any custom columns. You can edit the cell contents of the columns as desired and import the file back into Spreadsheet View.

---

**Note**

For exported pin layout files, the values of Package\_Delay and Trace\_Length are presented in picoseconds (ps) and micrometer/micron (μm), respectively.

---

**See Also**



- ▶ [“Exporting a Pinout File in CSV Format” on page 333](#)
- ▶ [“Migrating Pin Assignments” on page 220](#)

## Exporting a Pinout File in CSV Format

The pinout file is a report of all device pins in the targeted device. It includes information such as pin/ball function, pin number, type, bank, dual function usage, and differential type. Information is included for all available pins and unbonded pins. The file is exported in comma-separated value (.csv) format, which enables you to examine it in an external spreadsheet application. You can export a pinout file from Device Constraint Editor at any stage of the design flow.

### To export a pinout file:

1. In Spreadsheet View, choose **File > Export > Pinout File**.
2. In the “Export Pin Out File” dialog box, specify the file name and location that you want, and then click Save.
3. The information is saved as a .csv file with the name and location you specified. You can view the file using a spreadsheet program that supports the CSV file format.

### Note

---

The pinout file cannot be imported into Spreadsheet View.

---

### See Also

- ▶ [“Exporting a Pin Layout File” on page 331](#)

## Implementing the Design

Design implementation includes the processes of:

- ▶ Synthesizing and translating the design to build the internal database.
- ▶ Mapping the design to device-specific components.
- ▶ Assigning the mapped components to specific locations.
- ▶ Establishing physical connections that will join the components in an electrical network.

The Radiant software environment enables you to set options for each of these processes to help optimize results, including placement effort level. These options are available in the active strategy for the design. For descriptions of all design implementation process options, see the [“Strategy Reference Guide” on page 771](#).

### See Also

- ▶ [“Using Strategies” on page 43](#)
- ▶ [“Synthesizing the Design” on page 334](#)
- ▶ [“Mapping” on page 343](#)
- ▶ [“Place and Route” on page 350](#)
- ▶ [“Applying Design Constraints” on page 209](#)
- ▶ [“Command Line Reference Guide” on page 1668](#)

## Synthesizing the Design

Synthesis is the process of translating a register-transfer-level design into a process-specific, gate-level netlist that is optimized for Lattice Semiconductor FPGAs.

In different ways, Radiant software can be used with almost any synthesis tool. The Radiant software comes with two tools fully integrated: Synopsys Synplify Pro for Lattice and Lattice Synthesis Engine (LSE). “Fully integrated” means that you can set options and run synthesis entirely from within the Radiant software. If you prefer, you can use other synthesis tools by running them independently of the Radiant software.

Synthesis tools can be run three ways with the Radiant software:

- ▶ Integrated synthesis is the simplest way. You work entirely within the Radiant software. See [“Integrated Synthesis” on page 340](#).
- ▶ Interactive synthesis provides much greater control of how synthesis is done. You set up a design project in the Radiant software, but set up and run synthesis directly in the synthesis tool. See [“Interactive Synthesis” on page 341](#).
- ▶ Stand-alone synthesis allows use of other, non-supported synthesis tools. You set up and run synthesis directly in the synthesis tool and then the Radiant software imports the result. See [“Stand-Alone Synthesis” on page 342](#).

LSE can only be run in integrated synthesis.

Whichever method you use, see [“Pre-Synthesis Check List” on page 335](#) to make sure your project is ready to synthesize.

#### See Also

- ▶ [“Selecting a Synthesis Tool” on page 71](#)
- ▶ TN1008, “HDL Synthesis Guidelines for Lattice Semiconductor FPGAs” for how coding style influences performance and area utilization
- ▶ [Synopsys Synplify Pro for Lattice User Guide](#)
- ▶ [Synopsys Synplify Pro for Lattice Reference Manual](#)

## Pre-Synthesis Check List

Following is a list of tasks to be done before running synthesis. Most of these are normally done as parts of other tasks, such as setting up the project and design entry.

In all cases, add or adjust the constraints, attributes, and directives used by the synthesis tool in the source code. See the synthesis tool’s user documentation. For LSE, see [“Lattice Synthesis Engine Constraints” on page 824](#).

Integrated synthesis:

- ▶ Specify a synthesis tool. See [“Selecting a Synthesis Tool” on page 71](#).

- ▶ Specify the top-level unit. See [“Setting the Top-Level Unit for Your Project” on page 38](#). This is not always required but is a good practice. If not specified, you are relying on the defaults of the synthesis tool.

#### Note

In VHDL and mixed-language designs, LSE stops with an error if the top-level unit is not specified. LSE can find the top-level unit in pure Verilog designs.

- ▶ Specify a search path for files referenced by Verilog include directives. See [“Specifying Search Path for Verilog Include Files” on page 73](#).
- ▶ Specify a VHDL library name. The default is “work.” See [“Specifying VHDL Library Name” on page 72](#).
- ▶ Order the source files for synthesis. The synthesis tool processes the files in the order showing in the File List frame.
- ▶ Specify the strategy settings for the synthesis tool. See [“Using Strategies” on page 43](#). If using LSE, also see [“Optimizing LSE for Area and Timing” on page 337](#).

Interactive and stand-alone synthesis:

- ▶ Reference the Lattice synthesis header library in the source code. See [“Lattice Synthesis Header Libraries” on page 336](#).
- ▶ For interactive synthesis, if you want to use the Synplify Pro strategy settings instead of Synplify Pro’s own defaults, change the “Export Radiant Settings to Synplify Pro GUI” option to **Yes** or **Only on First Launch**. See [“Export Radiant Software Settings to Synplify Pro GUI” on page 779](#).

## Lattice Synthesis Header Libraries

The synthesis header libraries define primitives from the FPGA libraries. A separate library is available for each device family and in Verilog and VHDL versions. The header libraries support Synplify Pro. If the design has any primitives from the FPGA libraries instantiated, the appropriate header library is required.

The integrated flow automatically includes the FPGA libraries, but if you are running synthesis outside of the Radiant software with interactive or stand-alone synthesis, you need to manually add a reference to the appropriate library. Look in Table 27 for the device family that you are using and add it to the source file list of your synthesis project. If your design is VHDL-based, add the .vhd file. If your design is Verilog-based, add the .v file.

The files are located at:

```
<install_dir>/cae_library/synthesis/verilog
<install_dir>/cae_library/synthesis/vhdl.
```

**Table 27: Synthesis Header Files**

| Device Family | Header Library File      | Library Name |
|---------------|--------------------------|--------------|
| iCE40UP       | iCE40UP.v<br>iCE40UP.vhd | ice40UP      |
| LAV-AT-E      | lav-ate.v<br>lav-ate.vhd | lav_ate      |
| LAV-AT-G      | lav-atg.v<br>lav-atg.vhd | lav_atg      |
| LAV-AT-X      | lav-atx.v<br>lav-atx.vhd | lav_atx      |
| LFCPNX        | lfcpx.v<br>lfcpx.vhd     | lfcpx        |
| LFD2NX        | lfd2nx.v<br>lfd2nx.vhd   | lfd2nx       |
| LFMXO5        | lfmxo5.v<br>lfmxo5.vhd   | lfmxo5       |
| LIFCL         | lifcl.v<br>lifcl.vhd     | lifcl        |
| UT24C         | ut24c.v<br>ut24c.vhd     | ut24c        |
| UT24CP        | ut24cp.v<br>ut24cp.vhd   | ut24cp       |

## Optimizing LSE for Area and Timing

The following strategy settings for Lattice Synthesis Engine (LSE) can help reduce the amount of FPGA resources that your design requires or increase the speed with which it runs. (For other synthesis tools, see those tools' documentation.) Use these methods along with other generic coding methods to optimize your design. Also, consider using the predefined Area or Timing strategies.

Minimizing area often produces larger delays, making it more difficult to meet timing requirements. Maximizing frequency often produces larger designs, making it more difficult to meet area requirements. Either goal, pushed to an extreme, may cause the place and route process to run longer or not complete routing.

To control the global performance of LSE, modify the strategy settings by choosing **Project > Active Strategy > LSE Settings**. In the Strategy dialog box, set the following options, which are found in **Synthesize Design > LSE**.

The [Optimization Goal] strategy can be used as a global high level guidance to guide LSE.

The individual strategies in the table allow lower level control for specific optimization.

For example, you may set [Optimization Goal] to either Area or Timing, and leave the rest to default by LSE.

Or, for example, you can set the global [Optimization Goal] to Area, then continue to control lower level setting (more granular) such as FSM encoding to one-hot encoding, although one-hot encoding is generally recommended for Timing.

See the following text for explanations and more details.

**Table 28: LSE Strategy Settings for Area and Speed**

| Option                     | Area           | Speed         |
|----------------------------|----------------|---------------|
| FSM Encoding Style         | Binary or Gray | One-Hot       |
| Max Fanout Limit           | <maximum>      | <minimum>     |
| Remove Duplicate Registers | True           | False         |
| Resource Sharing           | True           | False         |
| Target Frequency           | <minimum>      |               |
| Use IO Registers           | Auto or True   | Auto or False |

### FSM Encoding Style

If your design includes large finite state machines, the Binary or Gray style may use fewer resources than One-Hot. Which one is best depends on the design. One-Hot is usually the fastest style. However, if the finite state machine is followed by a large output decoder, the Gray style may be faster.

### Max Fanout Limit

A larger fanout limit means less duplicated logic and fewer buffers. A lower fanout limit may reduce delays. The default is 1000, which is essentially unlimited fanout. Select a balanced fanout constraint. A large constraint creates nets with large fanouts, and a low fanout constraint results in replicated logic. You can use this in conjunction with the `syn_replicate` attribute. See [“syn\\_replicate” on page 877](#). To minimize area, don't lower this value any more than needed to meet other requirements. To minimize speed, try much lower values, such as 50.

You can change the fanout limit for portions of the design by using the `syn_maxfan` attribute. See [“syn\\_maxfan” on page 869](#). Set Max Fanout Limit to meet your most demanding requirement. Then add `syn_maxfan` to help other requirements.

### Optimization Goal

If set to Area, LSE will choose smaller design forms over faster whenever possible.

If set to Timing, LSE will choose faster design forms over smaller whenever possible. If a `create_clock` constraint is available in an .ldc file, LSE ignores the Target Frequency setting and uses the value from the `create_clock` constraint instead.

### Remove Duplicate Registers

Removing duplicate registers reduces area, but keeping duplicate registers may reduce delays.

### Resource Sharing

If set to True (box checked), LSE will share arithmetic components such as adders, multipliers, and counters whenever possible.

If the critical path includes such resources, turning this option off may reduce delays. However, it may also increase delays elsewhere, possibly reducing the overall frequency.

### Target Frequency (MHz)

A lower frequency target means LSE can focus more on area. A higher frequency target may force LSE to increase area. Try setting this value to about 10% higher than your minimum requirement. If Optimization Goal is set to Timing and a `create_clock` constraint is available in an .ldc file, LSE will use the value from the `create_clock` constraint instead.

### Use IO Registers

If set to True, LSE will pack all input and output registers into I/O pad cells. Register packing reduces area but adds delays.

Auto, the default setting, enables this register packing if Optimization Goal is set to Area. If Optimization Goal is Timing or Balanced, Auto disables register packing.

You can also control packing on individual registers. See [“syn\\_useioff” on page 893](#). Set Use IO Registers to meet your most demanding requirement. Then add `syn_useioff` to help other requirements.

### See Also

- ▶ [“Using Strategies” on page 43](#)
- ▶ [“LSE Options” on page 783](#)

# Integrated Synthesis

In integrated synthesis, you create, synthesize, and implement a design completely within the Radiant software environment. This is the simplest method, but it limits your control of synthesis to tools and features directly supported by the Radiant software.

## To synthesize your design in the Radiant software:

If you haven't already, check the [Pre-Synthesis Check List](#) before running synthesis.

1. If desired, change the strategy settings by choosing **Project > Active Strategy > <Synthesis Tool> Settings**. See also [“Using Strategies” on page 43](#).

### Note

If you are switching from interactive synthesis to integrated, you need to reset all the options in the Radiant software. Options set directly in the synthesis tool have no effect in the Radiant software.

2. In the Process Toolbar, click **Synthesize Design**. Alternatively, right-click **Synthesize Design** and choose **Run Synthesis** from the pop-up menu.

If Synthesize Design has already been run and does not recognize any changes in the design, it won't run again. You can force Synthesize Design to run by right-clicking it and choosing **Force Run Synthesis** from the pop-up menu. Otherwise from each of the process bar items, you can force the whole flow to start from synthesis by selecting **Force Run from Start**.

3. When finished, check the icon next to Synthesize Design in the Process frame. A green check mark  indicates success; a red X  indicates failure.
4. For more information on how the synthesis ran, open the **Reports** view in the Tools area (choose **View > Reports**). Under Project Summary, choose **Synthesis Reports > <Synthesis Tool>**. This report lists actions taken by the synthesis tool, warnings, and errors. The report also provides a list of FPGA resources used and a timing report based on estimated place-and-route data. See [“Viewing Logs and Reports” on page 86](#).

You can find a more detailed area report in the folder of the active implementation. The report is named with an .areasrr extension (for Synplify Pro) or with an .arearep extension (for LSE). The report includes the resources used by each module of the design. Similar information can also be found in the Hierarchy view.

If you are using LSE, you can also find a more detailed timing report in the folder of the active implementation. The report is named \*.tws. It is similar to the report described in [“Reading Timing Analysis Reports” on page 379](#).

## See Also

- ▶ [“Optimizing LSE for Area and Timing” on page 337](#)
- ▶ [“Running Processes” on page 64](#)



# Interactive Synthesis

In interactive synthesis, you set up a design project in the Radiant software, but set up and run synthesis directly in the synthesis tool. This gives you more complete control of synthesis than integrated synthesis and allows you to make full use of the synthesis tool's features. Note that LSE cannot be used in interactive synthesis.

## Note

---

If you decide to use interactive synthesis, remember to use it every time you make a design change. If you try to repeat the implementation process by simply double-clicking an item in the Process frame, the Radiant software will synthesize the design with integrated synthesis, which may give unexpected and inferior results.

---

## To synthesize your design using interactive synthesis:

If you haven't already, check the [“Pre-Synthesis Check List” on page 335](#) before running synthesis.

1. Open the synthesis tool from the **Tools** menu.

The synthesis tool opens with the device and source files for your design.


2. Set options in the tool as desired.
3. To re-use the settings, save the synthesis tool's project file as `<project_name>_syn.prj` (Synplify) in the project folder.

Make sure the Radiant software strategy option, “Export Radiant Settings to Synplify Pro GUI” (under Synplify Pro in the Strategies dialog box) is set to **No** or **Only on First Launch**. See [“Export Radiant Software Settings to Synplify Pro GUI” on page 779](#).

 
4. Synthesize the design.
5. Analyze the results in the synthesis tool.

**Note:**


In the device selector, changing the Family or Device requires re-running the synthesis.

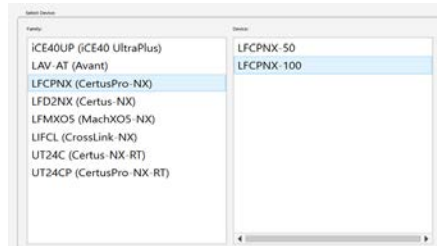

While changing the Package, Operating Condition, or Performance grade, does not require to re-run the synthesis. This rule applies to all devices.



After synthesis, resource usage reports can be triggered to compare selected device usage as the figure shown below.

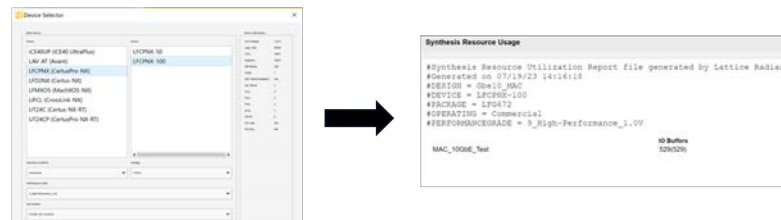

For Avant devices, the synthesis process requires additional time to rerun to ensure a precise report.

## Stand-Alone Synthesis

In stand-alone synthesis, you can use a synthesis tool that is not directly supported by the Radiant software. In this flow you set up and run synthesis directly in the synthesis tool. Then create a design project in the Radiant software using the output of the synthesis tool as the source file. Note that LSE cannot be used in stand-alone synthesis.

If you haven't already, check the [“Pre-Synthesis Check List”](#) on page 335 before running synthesis.

**To set up a project using a stand-alone tool:**

1. Open the synthesis tool directly without using the Radiant software.
2. Using your synthesis tool, create a project, including specifying a device, source files, and options.
3. Synthesize the design.
4. Analyze the results in the synthesis tool.
5. When you are satisfied with the synthesis, create a design project in the Radiant software.

**To re-synthesize your design using the stand-alone tool:**

This procedure assumes that you have already set up the project to use stand-alone synthesis.

1. Open the synthesis tool directly without using the Radiant software.
2. In the synthesis tool, open the project.
3. If desired, change the options.
4. Analyze the results in the synthesis tool.

## Mapping

Mapping is the process of converting a design represented as a network of device-independent components, such as gates and flip-flops, into a network of device-specific components, such as PFUs and EBRs or configurable logic blocks.

You can use the Map Design process in the Radiant software environment or the MAP program from the command line.

The Map Design process generates physical descriptions of the logical configuration within the programmable device elements. These device elements include programmable function units (PFU), programmable I/O cells (PIC), embedded block RAM (EBR). They also include special function blocks: internal oscillator, global set/reset (GSRN), start-up logic, phase locked loop (PLL), delay locked loop (DLL), and physical coding sublayer (PCS) logic.

Depending upon the attributes specified in the input netlist, mapping includes absolute placement, logical partitioning (hierarchical netlists), component group placement, and regional group placement information in the physical description.

**See Also**

- ▶ [“Running MAP from the Command Line” on page 1694](#)
- ▶ [“Setting Map Design Options” on page 344](#)
- ▶ [“Mapping Output Files” on page 344](#)

## Setting Map Design Options

When you run the Map Design process in the Radiant software, the design is mapped based on design options that are in the active strategy. Mapping options can influence the performance and utilization of the design implementation, ease incremental design changes, or allow you to over map in order to review how many resources are required for a particular implementation.

### To set Map Design options:

1. Choose **Project > Active Strategy > Map Design Settings** to open the Strategies dialog.
2. For each option that you want to change, double-click a cell in the Value column. Select the desired value from the pulldown menu, enter text, or click the browse button, as appropriate.
3. Click **OK**.

### See Also

- ▶ [“Map Design Options” on page 792](#)
- ▶ [“Mapping” on page 343](#)
- ▶ [“Mapping Output Files” on page 344](#)

## Mapping Output Files

The following files are created from the Map Design process:

- ▶ **MAP Report File (.mrp)** — The map report file provides details about how the design was mapped to physical elements and reports any errors. Mapping details can include such things as how attributes were interpreted, logic that was removed or added, and how signals and symbols in the logical design were mapped to components in the physical design.

### See Also

- ▶ [“Mapping” on page 343](#)
- ▶ [“Setting Map Design Options” on page 344](#)

## Running Map Design

In the Radiant software environment, the Map Design process automatically maps the design based on the active strategy settings.

### To run Map Design in the Radiant software environment:

- ▶ In the Process Toolbar, click **Map Design**.

### See Also

- ▶ [“Running MAP from the Command Line” on page 1694](#)
- ▶ [“Running Processes” on page 64](#)

## MAP Report File

The MAP Report (.mrp) file supplies statistics about component usage in the mapped design and shows the number and percentages of resources used out of the total resources in the device. The report is produced whether you have run Map in the Radiant software environment or the command line.

### To view the MAP Report file in the Radiant software:

- ▶ Click the **Reports** tab to activate the Report view and select **Map Reports**. The Map report is displayed in the Reports window to the right.
- OR
- ▶ Using a text editor, open the .mrp ASCII file in your project directory.

Although detailed information varies depending on the device, the format of the .mrp file is the same. The report is divided into sections, which can include the following:

- ▶ Design Information – Shows the map command line, the device/performance grade, and the time/date stamp of the run.
- ▶ Design Summary – Shows the number and percentage of resources used out of the total of the resources of the mapped device. The MAP Report lists the number of slice registers, I/O registers, LUT4s, and other logic. The number of SLICES generated from MAP could exceed the device limitation. The Place and Route (PAR) process will determine whether or

not it is necessary to merge two SLICEs into one.

**Note**

---

The total resources reported represents the total resource count in the device and not the total accessible resources. Since the accessibility of resources can change, depending on the design and design revisions, there will sometimes be a gap between the number of resources that are available for use and the total number in the device.

---

## Design Summary

```

-----
Number of slice registers: 2140 out of 5280 (41%)
Number of I/O registers: 0 out of 56 (0%)
Number of LUT4s: 3833 out of 5280 (73%)
    Number of logic LUT4s: 3026
    Number of inserted feedthru LUT4s: 39
    Number of ripple logic: 384 (768 LUT4s)
Number of IO sites used: 22 out of 56 (39%)
    Number of IO sites used for general PIOs: 22
    Number of IO sites used for I3Cs: 0 out of 2 (0%)
    Number of IO sites used for PIOs+I3Cs: 22 out of 53 (42%)
    (note: If I3C is not used, its site can be used as
general PIO)
    Number of IO sites used for OD+RGB IO buffers: 0 out of 3
(0%)
    Number of DSPs: 4 out of 8 (50%)
    Number of I2Cs: 0 out of 2 (0%)
    Number of High Speed OSCs: 0 out of 1 (0%)
    Number of Low Speed OSCs: 0 out of 1 (0%)
    Number of RGB PWM: 0 out of 1 (0%)
    Number of RGB Drivers: 0 out of 1 (0%)
    Number of SCL FILTERs: 0 out of 2 (0%)
    Number of SRAMs: 0 out of 4 (0%)
    Number of WARMBOOTs: 0 out of 1 (0%)
    Number of SPIs: 0 out of 2 (0%)
    Number of EBRs: 0 out of 30 (0%)
    Number of PLLs: 0 out of 1 (0%)
Number of Clocks: 1
    Net clk_c: 2022 loads, 2022 rising, 0 falling (Driver:
Port clk)
Number of Clock Enables: 8
    Net n18836: 38 loads, 38 SLICES
    Net n9306: 128 loads, 128 SLICES
    Net n18680: 36 loads, 36 SLICES
    Net n18773: 36 loads, 36 SLICES
    Net n18139: 36 loads, 36 SLICES
    Net n9301: 128 loads, 128 SLICES
    Net n9296: 128 loads, 128 SLICES
    Net n9311: 128 loads, 128 SLICES
Number of LSRs: 6
    Net maxfan_replicated_net_203: 169 loads, 169 SLICES
    Net data_in_reg_63_N_501: 925 loads, 925 SLICES
    Net mult32_2/n1818: 4 loads, 4 SLICES
    Net n9303: 4 loads, 4 SLICES
    Net n9298: 4 loads, 4 SLICES
    Net mult32_3/n1821: 4 loads, 4 SLICES
Top 10 highest fanout non-clock nets:
    Net reset_n_c: 926 loads
    Net data_in_reg_63_N_501: 925 loads

```

The Number of SLICES information in the Design Summary will vary.

The number and percentage of PIO sites used, out of the total number, is given in the Design Summary. Sometimes this is further broken down into

external and differential PIOs. The Number of external PIOs is based on the number of PIO pads programmed with a single-ended signal standard out of the total number of bonded pads on the chip die. The Number of differential PIOs counts those PIOs programmed with a differential signal standard.

- ▶ **Design Errors/Warnings:**
  - ▶ Shows any warnings or errors encountered by the mapping process. For example, the section will report a pad that is not connected to any logic, or a bidirectional pad that has signals passing only in one direction.
  - ▶ Shows any warnings or errors generated as a result of the design rule tests performed at the beginning of the mapping process. These warnings and errors do not depend on the device to which you are mapping.
  - ▶ Shows errors and warnings associated with problems in assigning components to sites. For example, an attribute on a component specifies that the component must be assigned to site AK, but there is no site AK on the part to which you are mapping. Another example would be a problem in fitting the design to the part where the design maps to 224 logic blocks, but the part only contains 192 logic block sites.
- ▶ **IO (PIO) Attributes** – Provides a table by input/output port of programmed direction, I/O type, and whether the PIO is registered. Shows any attributes (properties) specified on PIO logic elements.
- ▶ **Removed Logic** – Describes any logic that was removed when the design was mapped. Logic may be removed for the following reasons:
  - ▶ A design uses only part of the logic in a library macro.
  - ▶ The design has been mapped even though it is not yet complete.
  - ▶ The mapping process has optimized the design logic.
  - ▶ Unused logic has been created in error during design entry.

This section also indicates which nets were merged when a component separating them was removed.

The Removed Logic section also enumerates how many blocks and signals were removed from the design, including the following kinds of removed logic:

- ▶ **Blocks clipped** – A "clipped" block is removed because it is along a path that has no driver or load. Clipping is recursive; that is, if Block A becomes unnecessary because logic to which it is connected has been clipped, then Block A is also clipped.
- ▶ **Blocks removed** – A removed block is removed because it can be eliminated without changing the operation of the design. Removal is recursive; that is, if Block A becomes unnecessary because logic to which it is connected has been removed, then Block A is also removed.
- ▶ **Blocks optimized** – An "optimized" block is removed because its output remains constant regardless of the state of the inputs—for



example, an AND gate with one input tied to ground. Logic generating an input to this optimized block (and to no other blocks) is also removed, and appears in this section.

- ▶ Signals removed – Signals were removed because they were attached only to removed blocks.
- ▶ Signals merged – Signals were combined because a component separating them was removed.
- ▶ ASIC Components – Lists any ASIC instances in the design by name and specifies the type used for each. These components mostly include IPs, such as Block RAM, DSP, and others.
- ▶ Symbol Cross Reference – Shows where symbols in the logical design were mapped in the physical design. By default, Map will not report symbol cross references unless you specify the `-xref_sym` Map command line option or enable the Report Symbol Cross Reference property for the Map Design process in the Radiant software environment.
- ▶ Signal Cross Reference – Shows where nets in the logical design were mapped in the physical design. By default, Map will not report symbol cross references unless you specify the `-xref_sig` Map command line option or enable the Report Signal Cross Reference property for the Map Design process in the Radiant software environment.
- ▶ PLL/DLL Summary – Provides instance name, type, clock frequency, pin/node values, and a listing of all settings for each PLL or DLL in the design.
- ▶ OSC Summary – Provides the oscillator's instance name, possible oscillator primitive type, output clock, and nominal frequency. This section is only included in the map report if the OSC primitive has been instantiated in the design.
- ▶ Constraint Summary – Lists the total number of constraints and the number of constraints dropped.
  - ▶ Reports the number of constraints before the wildcard expansion.
  - ▶ Constraints with syntax or semantic errors could be dropped by the constraint database before the wildcard expansion.
    - ▶ These erroneous constraints are reported by the constraint database but not counted as they are dropped.
- ▶ Run Time and Memory Usage – Lists total CPU time, real time, and peak memory usage related to the Map run.

## Packing of Duplicate Registers

Designers often duplicate registers in order to reduce fan-out and improve timing. Duplicated registers are registers with the same data and control paths. The software keeps duplicated registers from being mapped into the same PFU.

If the `COMP=` attribute is attached to duplicate registers, it will override duplicate register packing.

# Place and Route

After a design has undergone the necessary translation to bring it into the physical design format during mapping, it is ready for placement and routing. Placement is the process of assigning the device-specific components produced by the mapping process to specific locations on the device floorplan. After placement is complete, the route phase establishes physical connections to join components in an electrical network. The place and route process takes a mapped physical design and places and routes the design. Placement and routing of a design can be cost-based or timing driven.

In most cases, your design will require timing-driven placement and routing, where the timing criteria you specify influences the implementation of the design. Static timing analysis results will show how constrained nets meet or do not meet your timing.

In the Radiant software Task Detail View, there is a Place & Route Timing Analysis process available that runs static timing analysis. This process reports any timing errors and generates a report. The Place & Route Timing Analysis report can be accessed from the Place & Route Reports folder of the Reports window.

For the Avant device, running Place & Route Timing Analysis is required. You cannot skip this process. The timing score reported by PAR only provides an overall indication of the timing quality and not the precise timing at each corner, which is why Avant requires multi-corner timing analysis for timing sign-off.

For other devices, running Place & Route Timing Analysis is optional.

## See Also

- ▶ [“Setting Place & Route Design Options” on page 350](#)
- ▶ [“Options and Processes to Improve PAR Results” on page 351](#)
- ▶ [“Place & Route Output Files” on page 352](#)
- ▶ [“Running Place & Route Design” on page 352](#)
- ▶ [“PAR Report File” on page 354](#)

## Setting Place & Route Design Options

Placement and routing options can influence the performance and utilization of the design implementation and ease incremental design changes. Some options affect the way the results are reported. You can set Place & Route Design options in the Strategies dialog box in the Radiant software or use the par command-line program.

### To set Place & Route Design options in the Radiant software environment:

1. Choose **Project > Active Strategy > Place and Route Design Settings** to open the Strategies dialog.

2. For each option that you want to change, double-click a cell in the Value column.
3. Select the desired value from the pull down menu, enter text, or click the browse button, as appropriate.
4. Click **OK**.

#### See Also

- ▶ [“Place & Route Design Options” on page 794](#)
- ▶ [“Running PAR from the Command Line” on page 1696](#)
- ▶ [“PAR Report File” on page 354](#)

## Options and Processes to Improve PAR Results

Testing and analyzing the place and route settings in the Strategies dialog box can help improve your placement and routing results. Utilizing certain strategy options helps meet your objectives, as in the following scenarios:

**Unrouted Connections** Some connections may remain unrouted due to congestion or resource limitations.

#### Solution:

- ▶ Run multiple PAR iterations with slightly different settings. You can launch multiple jobs to run in parallel to reduce runtime. See [“Running Multiple PAR Jobs in Parallel” on page 361](#).
- ▶ Run multiple seeds or optimize floor planning and placement.
- ▶ Optimize floor planning and placement to reduce unrouted connections.

**Routing Congestion** Routing congestion occurs when too many connections need to be routed through a specific area, leading to delays or unrouteable paths.

#### Solution:

- ▶ Optimize floor planning to spread out logic elements.
- ▶ Use hierarchical design to manage complexity.
- ▶ Increase routing resources.

**Timing Violations** Timing violations occur when signals do not meet the required timing constraints, such as setup and hold times.

#### Solution:

- ▶ Optimize placement of critical paths to reduce delays.
- ▶ Adjust timing constraints to be more realistic.
- ▶ Consider adding "Idc\_set\_false" constraints for timing closure if needed.

- ▶ Define "group/region" constraints to perform floorplanning, which may help in certain situations.

**Hold Time Violation** PAR uses worst-case timing, while STA (Static Timing Analysis) uses multi-corner timing. As a result, you might see negative slack after PAR but still pass STA. If hold time correction was not applied during PAR, STA will still check for hold issues and may report violations.

**Solution:**

- ▶ Enable the "Impose Hold Time Correction" option in Strategy settings.

**Long Compilation Times** Designs that use a large percentage of resources, such as logic cells, block RAMs, and DSP slices, can be more challenging to route efficiently. High utilization of input/output pins can also complicate routing and extend compilation time.

**Solution:**

- ▶ Optimize constraints and settings.

**See Also**

- ▶ ["Running Place & Route Design" on page 352](#)
- ▶ ["Running PAR from the Command Line" on page 1696](#)
- ▶ ["Place & Route Design Options" on page 794](#)
- ▶ ["Place & Route Considerations" on page 360](#)
- ▶ ["Place & Route Output Files" on page 352](#)

## Place & Route Output Files

The following files are the output files generated by the Place & Route Design process:

- ▶ PAR Report File (.par) — a PAR report including summary information of all placement and routing iterations.
- ▶ PAD Specification File (.pad) — a report file containing I/O pin assignments.

**See Also**

- ▶ ["Place and Route" on page 350](#)

## Running Place & Route Design

In the Radiant software environment, the Place & Route Design process automatically assigns device-specific components to locations and connects them.

**To run Place & Route Design in the Radiant software environment:**

- ▶ In the Process Toolbar, click **Place & Route Design**.
- ▶ Alternatively, right-click **Place & Route Design** and choose **Run PAR** from the pop-up menu. You can force run PAR from the pop-up menu as well.

**See Also**

- ▶ [“Setting Place & Route Design Options” on page 350](#)
- ▶ [“Running PAR from the Command Line” on page 1696](#)
- ▶ [“Running Processes” on page 64](#)

## Multiple PAR Iterations

The “Place Iterations” option for Place & Route Design sets the maximum number of placement/routing passes.

If you specify options that produce a single output design file, your output consists of a single par file and .pad file.

If you run multiple placement and routing iterations, you produce a .par and .pad file for each iteration. After each iteration, the program saves the physical design for every instance where the timing core has improved. This means that during long PAR runs, the current minimal timing score is always available. This behavior prevents a few rare cases where timing scores may have gone up rather than down when performing multiple PAR iterations. The timing score is determined as a weighted sum of several parameters including the number of unrouted nets, number of timing constraints not met, amount by which the timing constraints were not met, maximum delay on nets, and maximum delay on the ten highest nets.

As the par command is performed, PAR records one .par file (a summary of all placement and routing iterations) at the same level as the directory you specified. It also places within the directory a .par and .pad file for each individual iteration.

The file names for the output files use the naming convention *<effort-level>\_<cost-table-entry>*; for example, 1\_1.par and 1\_1.pad. In this example, the effort level and cost table entries start at 1 (the default effort level is 5).

---

**Note**

If you wish to further optimize your place-and-route results beyond multiple PAR iterations, a process which uses timing as the sole criteria for optimization, see [“Place & Route Report Files” on page 354](#). In addition to timing score, the MPARTRCE tool's methodology uses a performance score when it determines the best design run for your purposes.

---

**See Also**

- ▶ [“Place and Route” on page 350](#)

## Place & Route Report Files

The Reports view in the Radiant software provides immediate access to reports produced by the Place & Route Design process, including the Place & Route report (.par) and the Pad Specification file (.pad). These reports open in the Report view in HTML format.

When you run multiple iterations of Place & Route, a .par file and .pad file, are included in your project directory for each run. You can open these files with a text editor.

### See Also

- ▶ [“Multiple PAR Iterations” on page 353](#)
- ▶ [“PAR Report File” on page 354](#)

## PAR Report File

The PAR Report (.par) file contains execution information and shows the steps taken as the process converges on a placement and routing solution.

### To view the PAR Report file in the Radiant software:

- ▶ In the Design Summary pane of the Reports window, select **Place & Route Reports** and select one of the three reports:
  - ▶ Place & Route
  - ▶ Signal/Pad
  - ▶ Place & Route Timing Analysis
  - ▶ I/O Timing Analysis

The chosen report will appear in the right pane.

- ▶ Alternatively, use a text editor to open the .par ASCII file from your project directory.

By default, the **Cost Table Summary** is sorted by each seed's Total Negative Slack.

1. Worst slack (setup)
2. Timing score (setup)
3. Worst slack (hold)
4. Timing score (hold)
5. Seed #

### Device Utilization Summary

This section summarizes the number and percentage utilization of device resources, including I/O, logic, and global signals. For PIOs, twice the number of PIO SITE resources are required for differential I/Os. A single differential

PIO COMP uses two PIO SITE resources, whereas non-differential PIO COMPs use one PIO SITE resource.

The PIO report summary counts the number of bonded and unbonded PIOs required to implement single-ended and differential signal standards. PIO utilization reflects the preliminary results reported by the design mapper (map). See the I/O Usage Summary section for details on final results. Utilization reported by Map might be lower, because some SITE resources, such as VREF assignments, are made automatically by PAR.

*Report Syntax:*

SITE TYPE <# sites used> / <# sites of type available on device> <x>% used

Consider the example below. The first column identifies the device type. The second column provides the actual number of available sites versus those used for that device type; and the third column provides the percentage of available sites used. For PIOs, you will see a breakdown of available versus used bonded pads and a percentage:

---

Device utilization summary:

|              |             |            |
|--------------|-------------|------------|
| APIO         | 24/36       | 66% used   |
| GSR          | 1/1         | 100% used  |
| IOLOGIC      | 110/506     | 21% used   |
| PIO (prelim) | 194/504     | 38% used   |
|              | 194/372     | 52% bonded |
| DQSBUF       | 8/16        | 50% used   |
| EBR          | 135/225     | 60% used   |
| DQSDLL       | 1/2         | 50% used   |
| MULT18       | 1/88        | 1% used    |
| PCS          | 2/2         | 100% used  |
| SLICE        | 17827/23832 | 74% used   |
| PLL          | 3/8         | 37% used   |

---

For total PIO resources, a preliminary (prelim) report shows that out of a possible 504 total PIO resources on the device, the design uses 194 of them, or about 38 percent. The following line shows that 194 bonded out pads are being used out of a possible 372 bonded I/Os, or about 52 percent.

The term “used” means that these I/O are in the design and will be programmed on the device. This report is considered preliminary (prelim) because VREF assignments have not yet been placed. The difference in resource utilization is accounted for later in the PAR report in the I/O Usage Summary (final).

An I/O is considered “bonded” when the packaging of the chip connects the bond pad to a pin on the package.

### Note

Bonded pad availability is based on packaging, which varies within a device family from part to part. See the Package Diagrams documentation in addition to the [Product Selector Guide](#) on the Lattice web site for details when selecting a device and package for your application.

The rest of the example report shows IOLOGIC, PLL, SLICE and other various resource type usage. As utilization percentage approaches 100 percent on logic or any specific key resource types reported in this section, you might want to consider a larger device that can accommodate better design performance.

### Placement

This section provides a log of messages produced during the placement phase.

### Clock Report

This section provides a complete listing of all of the clocks used in the design. Aside from the example, the Clock Summary report would reflect a scenario where only global clocking is used as follows:

---

```
Quadrants All (TL, TR, BL, BR) - Global Clocks
PRIMARY   : 1 out of 4 (25%)
DCS       : 1 out of 2 (50%)
SECONDARY : 0 out of 4 (0%)
```

---

### I/O Usage Summary (final)

This section Summarizes the final number and percentage utilization of device resources, including I/O, logic, and global signals.

#### Report Syntax:

---

```
I/O Bank Usage Summary (final):
  <#PIO sites used> out of <#PIO sites of device> (x%) PIO
  sites used.
<#PIO sites used> out of <#PIO sites of device/pkg> (x%) bonded
PIO sites
used.
Number of PIO comps:
Number of Vref pins used: <#VREF pins>
```

---

### Best Par Run



This section shows the Radiant software version and the P&R commands with any non-default options of the run. In addition, the section lists the design name and device information, including family name, device name, package name and performance grade.

**Example:**

---

```
PAR: Place And Route Radiant Software (64-bit) 2.0.t.311.0.
Command Line: par -w -t 1 -cores 1 top_impl1_map.udb
top_impl1_par.dir/5_1.udb
```

```
Design:  dphy
Family:  LIFCL
Device:  LIFCL-40
Package: CSBGA289
Performance Grade:  7_High-Performance_1.0V
```

---

## NBR Summary

This section summarizes the post-routing results, including the number of unrouted connections, number of timing violated connections, worst setup slack and setup timing score for the design.

**NBR Summary Example:**

**Post-Route Summary Example (Positive Setup Slack):**

---

```
PAR_SUMMARY::Run status = Completed
PAR_SUMMARY::Number of unrouted conns = 0
PAR_SUMMARY::Estimated worst slack<setup/<ns>> = 28.700
PAR_SUMMARY::Timing score<setup/<ns>> = 0.000
PAR_SUMMARY::Estimated worst slack<hold/<ns>> = 0.126
PAR_SUMMARY::Timing score<hold/<ns>> = 0.000
PAR_SUMMARY::Number of errors = 0
```

Note: You must run "timing" to get the timed closure signoff  
The design with positive setup slack is also computed for the hold slack.

**Post-Route Summary Example (Negative Setup Slack):**

When setup slack is negative, the router will not execute hold analysis since the design did not meet the constrained frequency and timing.

---

```
PAR_SUMMARY::Run status = Completed
PAR_SUMMARY::Number of unrouted conns = 0
PAR_SUMMARY::Estimated worst slack<setup/<ns>> = -1.514
PAR_SUMMARY::Timing score<setup/<ns>> = 12.218
PAR_SUMMARY::Estimated worst slack<hold/<ns>> = <n/a>
PAR_SUMMARY::Timing score<hold/<ns>> = <n/a>
PAR_SUMMARY::Number of errors = 0
```

Note: You must run "timing" to get the timed closure signoff. Hold slack is not computed for the negative setup slack design.

## I/O Timing Analysis

The I/O timing report identifies the FPGA. Before running I/O timing, the FPGA must be fully constrained.

The tables in the I/O timing report contain the total number of setup and hold times associated with input ports and the clock-to-out delays linked to the output ports. The I/O timing report uses these values when computing the input and output delay constraints of devices connected to the FPGA.

I/O timing runs across all speed grades of interest. When the I/O timing tables are generated, the table displays the worst number for all speed grades.

## See Also

- ▶ ["Place & Route Output Files" on page 352](#)

## PAD Specification File

The PAD specification (.pad) file is an ASCII report file that lists all Programmable I/O Cells (PICs) used in the design and their associated primary pins. The PICs are listed by port name and by pin names.

### To view the PAD Specification Report File in the Radiant software environment:

- ▶ In the Design Summary pane of the Reports window, select **Signal/Pad**. Your report will appear in the pane to the right.
- ▶ Alternatively, use a text editor to open the .pad ASCII file from your project directory.

The .pad file may include the following information:

- ▶ Pinout by Port Name – This section lists the port names with primary pin designations. It also shows the buffer type and any associated attributes. Buffer type indicates the PIO mode. For example, a PIO in LVDS or LVPECL mode needs two bonded pads for differential signals that are both included in the .pad file.

In most designs, the top-level HDL design will not include both true and complement sides of differential port signals. The designer assigns I/Os to pads (via LOCATE) using a single signal, assuming that it will represent the true (+) signal. Based on an IOBUF type of LVDS or LVPECL, the Radiant software will automatically infer the complement (-) signal and assign it to the appropriate site on the device package.

**Figure 15: Example of I/O Timing Analysis Report**

```

Worst FPGA Input Port Results for Performance Grade: 2, 3
-----
Port Name| Setup |Grade|Edge| Hold |Grade|edge|
Clock Port
-----
i[3]      |2.566 ns | 3 | R |-2.088 ns | 2 | R |i_my_pll/
lscc_pll_inst/
gen_ext_outclkdiv.gen_no_clk7.u_pll.PLLC_MODE_inst/
CLKOP(internal clock)
-----

Worst FPGA Output Port Results for Performance Grade: 2, 3
-----
Port Name|Clock To Out (MAX)|Grade|Edge|Clock To Out
(MIN)|Grade|edge|
Clock Port
-----
c[6]      |      8.937 ns | 2 | R |      7.511 ns | 3
| R |i_my_pll/lscc_pll_inst/
gen_ext_outclkdiv.gen_no_clk7.u_pll.PLLC_MODE_inst/
CLKOP(internal clock)
-----

Detailed Analysis of Each Performance Grade:
-----

FPGA Input Port Results for Performance Grade: 2
-----
Port Name| Setup |Edge| Hold |edge|
Clock Port
-----
i[3]      |2.493 ns | R |-2.088 ns | R |i_my_pll/
lscc_pll_inst/
gen_ext_outclkdiv.gen_no_clk7.u_pll.PLLC_MODE_inst/
CLKOP(internal clock)
-----

FPGA Output Port Results for Performance Grade: 2
-----
PortName|ClockToOut (MAX)|Edge|ClockToOut (MIN)|edge|
Clock Port
-----
c[6]      |      8.937 ns | R |      7.943 ns | R
|i_my_pll/lscc_pll_inst/
gen_ext_outclkdiv.gen_no_clk7.u_pll.PLLC_MODE_inst/
CLKOP(internal clock)
-----

```

Port signals are reported using the syntax: <port name>+ for positive differential and <port name>- for negative differential in the Pinout by Pin Number table.

The Properties column of the Pinout by Port Name section shows the list of IO properties for each device. See the following table for details:

**Table 29: Pinout by Port Name IO Properties**

| Device                        | Properties                                                                                                                |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| LAV-AT                        | DRIVE, SLEWRATE, GLITCHFILTER, HYSTERSIS, TERMINATION, OPENDRAIN, IO_TYPE, DIFFRESISTOR, DIFFDRIVE, PULLMODE, VREF        |
| LFCPNX, LFD2NX, LFMXO5, LIFCL | DRIVE, SLEWRATE, GLITCHFILTER, HYSTERSIS, TERMINATION, OPENDRAIN, IO_TYPE, DIFFRESISTOR, DIFFDRIVE, PULLMODE, CLAMP, VREF |
| iCE40UP                       | DRIVE, IO_TYPE, PULLMODE                                                                                                  |

- ▶ Vccio by Bank – This section lists the voltage by bank.
- ▶ Vref by Bank – This section shows the name and location of on-chip voltage references that have been set and the associated port groups or signals.
- ▶ Pinout by Pin Number – This section lists pin numbers, which includes the primary pin number, the component name or reference voltage type, and the buffer type. The Dual Function column identifies pins that can be used for I/O assignments or for another function, such as Vref. In the Pin info column, the status of any "unused" pin is reported as "unused, PULL:UP," because these pins have an internal pull-up.

## Place & Route Considerations

In primary clock placement, if the primary clock is a PIO, the placer will automatically place it into a "sweet site," a site that can be routed easily to the center. However, if the primary clock is driven by a PFU (internally generated primary clock), the placer will attempt to place it on a sweet site or a proximal location. If you locate a primary clock driver on a non-sweet site, the placer will issue a warning. During pre-placement, all PIO constraints are observed, which means that the pre-placement is always legal.

- ▶ The placer prints out a list of selected primary clocks before the constructive placement. You should check that the primary clocks are selected properly.
- ▶ By default, PAR supports high fanout CE and LSR nets to use for the primary clock tree to reduce potential congestion on general routing, which may help  $f_{MAX}$  in certain cases.

However, because the primary clock has dedicated entries that are only located at the edges and the center of the device, the driver of the high fanout CE/LSR net has to be placed at one of these dedicated sites, separating it from its related logics (module).

These high fanout CE nets are on a critical route in some designs, which may result in inconsistent critical path placement.

With the `ldc_set_attribute USE_PRIMARY=FALSE [ get_nets {u1/PCLK_c} ]` constraint, the high fanout CE net will not be able to use the primary clock tree. It should be acceptable to restrict the use of high fanout CE nets, provided that the design is properly routed and `fmax` is unaffected.

## Running Multiple PAR Jobs in Parallel

The PAR Multi-tasking option allows you to use multiple machines (nodes) to run multiple place-and-route jobs at the same time instead of serially. You can run this feature in the Radiant software environment. Use the “Multi-tasking Node List” option in the Place and Route Settings of the Strategies dialog box, or use the PAR -m option from the command line.

The ability to run multiple jobs on different nodes simultaneously can significantly reduce the time it takes to complete these runs. Otherwise, it would take the cumulative time for each job to complete by itself in a consecutive manner, and this could mean the difference between one hour and 10 hours of total time.

The PAR multi-tasking option is supported three ways:

- ▶ Local multi-tasking, where multiple PAR runs are executed on a single machine.
- ▶ Networked multi-tasking, where multiple PAR runs are executed on multiple machines.
- ▶ A combination of local and networked.

### Creating a Node List File

For Windows or Linux, you must first create an ASCII-based node list file input that specifies the candidate machines that allow multiple PAR jobs to be run in parallel.

The node list file contains node description blocks of information on separate lines for each machine in the format shown below:

```
[<node_name>]
```

```
System = <linux | windows>
```

```
Corenum = <number_of_cores>
```

```
Env = <file_name>
```

```
Workdir = <directory_name>
```

```
[<node_name2>]
```

```
System = <linux | windows>
```

```
Corenum = <number_of_cores>
```

Env = <file\_name>

Workdir = <directory\_name>

where:

The [<node\_name>] value contains the machine name in square brackets. For example, if your machine name is *jsmith*, this line would simply show [jsmith] on the first line.

### Note

For Linux, you can use many networked nodes to run the PAR job, so the node list will have a corresponding number of node description blocks in it. For Windows, there will only be one node description block in the node list since you can only employ one windows that has multiple cores. This feature does not currently support a host of networked PCs.

The System node description line lists the platform the machine runs on. This line can only take Linux or Windows as a value.

Corenum specifies how many CPU cores there are on the machine. This line can be omitted when there is only one CPU on the machine. Changing it to zero disables the node from running PAR tasks.

Env specifies an environment setup file to be run before the multiple PAR job is run on the remote machine. If the remote machine environment is ready, then this line can be omitted. To test if a remote machine is ready, run the following command to see if PAR can be run remotely:

```
ssh <remote_machine> <par_cmd_options>
```

Workdir specifies in which working directory on the remote machine the PAR multi-task job should be run. If account permissions allow you to get into that directory automatically after login, this line can also be omitted.

For more details, see the subsection [“PAR Multi-Tasking \(-m\) Option” on page 1699](#) of the topic [“Running PAR from the Command Line” on page 1696](#).

General Node List Rules:

- ▶ You must use the equal sign for each node description line and the same line and character spacing illustrated in the node list format example.
- ▶ Only the names of files and directories are case sensitive on UNIX and Linux. Node description line markers, for example, “Corenum =” can appear in upper, lower, or mixed case.
- ▶ The [<node\_name>] and System lines are required for any node list file.
- ▶ The Corenum, Env, and Workdir node description lines are optional.
- ▶ For Windows, the nodelist file should only include one node description block on the local machine. Remotely networked PCs are not supported. Any entries for remote nodes on a Windows network will be discarded by the PAR multi-tasking feature. If you do not have a nodelist file created,

you can specify the number of cores to be used in your local machine with a `-cores` option in your command line, or use the “Number of Host Machine Cores” strategy in the Strategies dialog box.

- ▶ For UNIX /Linux, the nodelist file can have multiple machine nodes; but it should not include Windows type nodes, which will be discarded. If you do not have a nodelist file created, you can specify the number of cores to be used in your local machine with a `-cores` option in your command line, or use the “Number of Host Machine Cores” strategy in the Strategies dialog box. For cases when the user specifies both `-cores` and `-m` with a valid node list file, PAR should apply both settings (merge). If the user repeats the host machine in the node list file, the settings in the node list file take precedence over the setting in `-cores`.
- ▶ By beginning a line with double forward slashes, “//”, you can place a comment line anywhere in the node list file. The PAR multi-tasking feature will ignore its syntax.

### PAR Multi-Tasking Environment Setup

For Windows, running PAR remotely is not supported, so multiple PAR processes can only run in parallel on one PC. Since the child PAR process takes the environment from the parent, no environment variable setup is necessary.

For Linux, there are two ways to set up the environment:

- ▶ Use the account login profile and source files.
  - ▶ For the account to allow PAR to be run remotely, it should have an `.rc` file (`.bashrc` if the bash shell used) that runs automatically when a secure shell (ssh) call is received.
  - ▶ The following three environment variables have to be set properly for PAR to run: `PATH`, `FOUNDRY`, and `LD_LIBRARY_PATH`. To set the environment variables, see [“Setting Up the Environment to Run Command Line” on page 1673](#). You can test if the remote environment is set up correctly by running the following command locally:
 

```
ssh <remote_machine> par
```
  - ▶ You will see the PAR help page if the environment setup is correct.
- ▶ Use `Env` and `Workdir` node description lines in the node list file.
  - ▶ After it reads the node list, the PAR Multi-tasking option will know which script to run and in which working directory to run the `par` command. The spawned task on the remote machine will run the “`Env`” file, then it will “`cd`” to the working directory before it runs PAR.

There is also Linux environment setup information for this feature in the [“PAR Multi-Tasking \(-m\) Option” on page 1699](#) section of the topic [“Running PAR from the Command Line” on page 1696](#).

### Running Multiple PAR Jobs in Parallel in the Radiant software

When running the multi-tasking option on Windows, you should use a dual processor or multiple processor configuration, or the feature will provide no

benefit. Currently, you cannot run the multi-tasking option using multiple networked PCs.

### To run the PAR Multi-tasking on the Windows with multiple processors:

1. Prepare a node list ASCII text file that identifies your machine (lpass4), system type (Windows), and number of core processors (2). Include any desired comment lines.

```
// This file contains a profile node listing for a multipar
// PC job.
[lpass4]
SYSTEM = PC
CORENUM = 2
```

You must use the format above for the node list file and fill in all required parameters. Parameters are case insensitive. The node or machine names are given in square brackets on a single line.

The System parameter can take the Linux, or Windows values, depending upon your platform. However, the Windows value cannot be used with Linux because it is not possible to create a multiple computer farm with Windows. Corenum refers to the number of CPU cores or processors available on that single PC. Setting it to zero will disable the node from being used. Setting it to a greater number than the actual number of CPUs will cause PAR to run jobs on the same CPU, lengthening the run time. No further parameters are necessary on Windows.

2. Save your node list file and copy it to your top-level project directory. In our example, we named the node list my\_nodelist.txt.
3. In the Radiant software, click **Project > Active Strategy > Place and Route Design Settings**.
4. Double click the **Value** cell for the **Multi-Tasking Node List** option and click the browse (...) button.
5. Navigate to the file name in your project directory. If the file is located elsewhere, you must use an absolute file and path name, for example, C:/my\_projects/my\_nodelist.txt. PAR will issue an error message if it cannot find your node list file, for example:

```
ERROR - par: Node name file does not exist.
```

If it cannot find your node list, PAR will continue in a serial fashion without using the node list file to specify the use of multiple processors.

6. Click **OK**.

In our example, we opted to change the number of placement iterations to 3, set the placement iteration starting point to 3, and limit the number of best saved runs to 2.

7. In the Process view in the Radiant software environment, right click **Place & Route Design** and choose **Run** from the pop-up menu to run the flow through the Place & Route process.

Rerun will run the one process over again and nothing else. Rerun All will rerun the design flow up to the Place and Route process.



In the Output view or Automake Log, the multipar run shows that it ran all jobs and completed successfully.

```
---- Multipar Tool ----
Running par. Please wait . . .
Starting job 5_3 on node lpass4
Starting job 5_4 on node lpass4
Finished job 5_4 on node lpass4
Starting job 5_5 on node lpass4
Finished job 5_3 on node lpass4
Finished job 5_5 on node lpass4
Exiting par with exit code 0
Exiting multipar with exit code 0
Done: completed successfully.
```

Note that we chose the starting point of 3, so the jobs start at 5\_3 instead of 5\_1.

When the job run is successfully completed, PAR creates a <project\_name>.dir directory in your top-level project directory.

To learn more about how to use this feature from the command line, see the subsection [“PAR Multi-Tasking \(-m\) Option” on page 1699](#) of the topic [“Running PAR from the Command Line” on page 1696](#). There is also information there about general usage, environment setup, screen output, interrupting jobs, and requirements.

#### See Also

- ▶ [“Running PAR from the Command Line” on page 1696](#)
- ▶ [“PAR Multi-Tasking \(-m\) Option” on page 1699](#)

# Physical Synthesis

If you are designing for Avant and Certus-N2, post-placement physical synthesis allows you to optimize the physical placement and netlist in your design. This helps resolve timing closure issues.

In Radiant, you can apply the following physical synthesis techniques at the post-placement stage of your design. The effective use of these physical synthesis techniques reduces the need to rewrite RTL code or perform multiple iterations to meet timing specifications.

## ► Device-dependent Optimization

Device-dependent optimization is a physical synthesis strategy that maximizes the available resources of an FPGA such as Look-Up Tables (LUTs), Flip-Flops, Block RAMs, and DSP slices. For example, you can achieve zero delay from LUT output to REG input by packing together LUT and REG pairs. When a REG input pin is timing critical, it is packed together with its LUT driver into a single slice. Radiant automatically identifies possible LUT and REG pairs based on the timing constraints and the target FPGA architecture.

## ► Sweet Spot Relocation

Sweet spot relocation after a slice split is a physical synthesis strategy that finds the best possible positions for relocated elements. By carefully positioning these elements to their "sweet spots", you can significantly enhance the performance and efficiency of your design.

## ► Critical Instance Duplication

Critical instance duplication is a physical synthesis strategy that involves duplicating certain critical instances, such as registers or LUTs, to reduce the fan-out load on the original instance. This addresses timing issues in critical paths to improve the overall performance of the circuit.

The process of duplicating critical instances involves identifying critical instance causing timing violation, duplicating the instance so that it shares the load of the original, and distributing the connections to the original and the duplicate to balance the load.

This leads to higher operating frequencies and improved performance. Duplicating instances, however, can increase the area of the circuit, which could be the trade-off against the timing improvement.

The following options are also associated with post-placement physical synthesis.

## ► Netlist Change Record File

The Netlist Change Record File option physical synthesis allows you to indicate a log file that records all changes made to the netlist. When the design undergoes optimizations to meet timing and other constraints, this file helps you to track down these changes, making it easier to debug and verify the final design.

## ► Timing Effort Level

The timing effort level during Place & Route refers to the intensity with which physical synthesis optimizes the design to meet timing specifications.

The different levels of timing effort are:

- ▶ Low: Minimal computing effort that results in faster PAR process. However, stringent timing constraints may not be met.
- ▶ Medium: Balanced computing effort with moderate PAR process time. This is the default value, which generally meets most timing constraints.
- ▶ High: Maximum computing effort that results in longer PAR process time. The goal is to meet the most stringent timing constraints.

## Running Physical Synthesis using the Radiant GUI

To run post-placement physical synthesis:

1. In the File List view, double-click the active strategy.  
The Strategies dialog box opens. The left-hand pane shows a list of processes. Each process has its own settings.
2. In the left-hand pane, select the Place & Route Design process.
3. In the right pane, under Frequent Options, select **Run Post-Synthesis Physical Synthesis** and set the option to True (enabled) by clicking the checkbox under Value.
4. Under Physical Synthesis Options, select physical synthesis options and double-click the Value column to change the setting. A pulldown menu is displayed with a choice of settings. You can also enter filenames or directory paths into text fields.

### Note

To view only the available physical synthesis strategies, select **Physical Synthesis Options** from the drop-down menu at the upper-right corner of the Strategies dialog box. Selecting **All** displays all strategies for the selected process.

5. Select the value from the drop-down list, or type in the text value, and click **Apply**.
6. Repeat steps 4 and 5 to specify more settings.
7. When completed, click **OK** to close the dialog box.

### Note

Remember to set **Run Post-Synthesis Physical Synthesis** to true for physical synthesis features to take effect.

### See Also

- ▶ [“Place & Route Design Options” on page 794](#)

## Running Physical Synthesis in the TCL Environment

The `plc_opt` command is used to run physical synthesis at post-placement stage.

You can list post-placement physical synthesis options using the `plc_opt_list_option` command. These options are dependent on the current device. After reading in your Avant design, you can set physical synthesis options using the `plc_opt_set_option` command.

For example:

```
% plc_opt_list_option
Placement Optimization Options:
    critical_instance_duplication : -1
    sweet_spot_relocation         : -1
    device_dependent_optimization : -1
    timing_effort_level           : medium
    netlist_change_record_file    : <file_name>
```

A default value of -1 means the option is set to Auto. You can turn off the option by setting the value to "0" using the `plc_opt_set_option` command. You can turn on the option by setting the value to "1" explicitly.

In the example below, `plc_opt_set_option {critical_instance_duplication 0}` turns off "critical\_instance\_duplication".

```
% plc_opt_set_option {critical_instance_duplication 0}
% plc_opt_list_option
Placement Optimization Options:
    critical_instance_duplication : 0
    sweet_spot_relocation         : -1
    device_dependent_optimization : -1
    timing_effort_level           : medium
```

Now use the `plc_opt` command to make physical synthesis perform timing optimization based on the specified options.

```
% plc_opt
```

### See Also

["Physical Synthesis Tcl Commands" on page 1830](#)

## Bit Generation

The **Bitstream File** process in the Process view or bit generation (**bitgen**) program takes a fully routed physical design and produces a configuration bitstream (bit images). The bitstream file contains all of the configuration information from the physical design that define the internal logic and

interconnections of the FPGA, as well as device-specific information from other files associated with the target device.

The data in the bitstream can then be downloaded directly into the FPGA's memory cells or used to generate files for PROM programming. You can run **bitgen** from the Radiant software window by double-clicking the **Export Files** process or from the command line.

### Note

---

To confirm that your production bitstream does not include debuggers, you can check the bitstream report under Export Report. Refer to [“Viewing Logs and Reports” on page 86](#).

---

### See Also

- ▶ [“Generating Bitstream Files” on page 370](#)
- ▶ [“Bit Generation Considerations” on page 371](#)
- ▶ [“Bit Generation Output Files” on page 369](#)
- ▶ [“Bit Generation Options” on page 369](#)
- ▶ [“Running Bit Generation from the Command Line” on page 1708](#)

## Bit Generation Options

Bit generation options provide you with control over the bit generation process. Bit generation options are accessed from the Strategy dialog box or the **bitgen** program from the command line. These options allow you to control the format of the bitstream output.

## Bit Generation Output Files

The following files are possible output to the **Bitstream File** process or the **bitgen** program:

- ▶ **Bit File** (Binary) — binary (.bin) bitstream. Binary bitstream files are the default output of the bitstream process and contain the configuration information in bitstream (zeros and ones) that is represented in the physical design.
- ▶ **Raw Bit File** (ASCII) — ASCII (.rbt) bitstream. The Raw Bit File is a text file containing ASCII ones and zeros representing the bits in the bitstream file. If you are using a microprocessor to configure a single FPGA, you can include the Raw Bit file in the source code as a text file to represent the configuration data. The sequence of characters in the Raw Bit file is the same as the bit sequence that will be written into the FPGA. The .rbt file differs from the .bin file in that it contains design information in the first six lines.

### See Also

- ▶ [“Bit Generation” on page 368](#)

## Generating Bitstream Files

In the Radiant software, bitstream generation is automatically performed when you run the **Export Files** process for either a full or partial design flow. You can set bit generation options before running a design flow by setting a strategy.

### To generate bitstream files from the Radiant software:

1. In the Radiant software File List view, double-click the target strategy.  
The Strategy dialog box opens.
2. Under Process, select **Bitstream**.
3. In the right-hand pane, double-click the Value box for the Bitstream option that you want to edit, enter the new value or select a value from the pulldown list, and click **Apply**.
4. When you finish, click **OK** to close the Strategies dialog box.
5. In the Radiant software Process view, double-click **Bitstream File** to generate the bitstream files.

### See Also

- ▶ [“Bit Generation” on page 368](#)
- ▶ [“Bit Generation Output Files” on page 369](#)
- ▶ [“Bit Generation Considerations” on page 371](#)
- ▶ [“Running Bit Generation from the Command Line” on page 1708](#)

## JTAG Setup

Using the **bitgen** program from the command line, you can generate setup bitstreams (.jbt) files to set JTAG port read and write for the FPGA device using the **-J option**. Downloading these setup bitstreams requires the serial cable with a cable connector.

### See Also

- ▶ [“Running Bit Generation from the Command Line” on page 1708](#)


## JTAG Scan Chains

A scan chain can include any programmable or non-programmable device compliant with IEEE-1149.1. It can also include any programmable devices that are compatible with IEEE-1149.1 but do not have a boundary scan register. This decision should be made on the basis of the test methodology

employed for the board. If the test methodology employed is the traditional bed-of-nails approach used on board test systems, all the devices can be included in the same chain.

All scan chains use the simple four-wire TAP. The TCK and TMS pins are common to all devices included in the chain. TDI and TDO are daisy-chained from one device to the next. The input to the chain is TDI, and the output from the chain is TDO. A diagram demonstrating a simple scan chain is shown in Figure 16.

**Figure 16: Diagram of a JTAG Scan Chain**

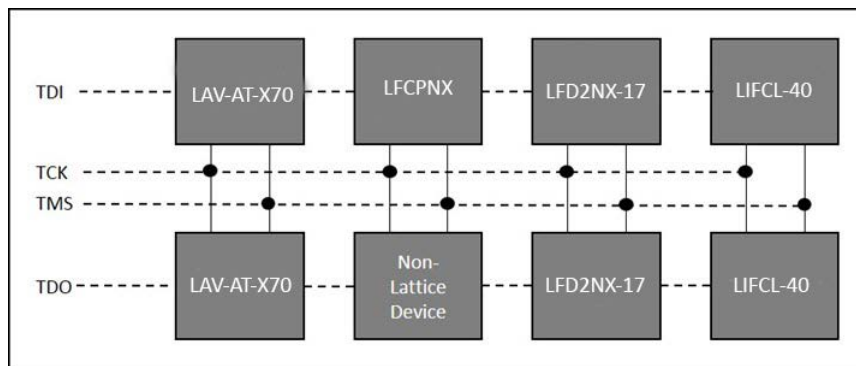

## Bit Generation Considerations

Note the following information that may require additional steps to implement bit generation options properly.

- ▶ If the device is to be configured in other than a serial (master or slave) mode, there are some limitations involving startup options and configuration pins used as outputs after configuration.
- ▶ Some former **-g** options for **bitgen**, which correspond to former strategy settings for **Bitgen** in the Strategies dialog box, are now handled by setting **SYSCONFIG** keyword values.

### See Also

- ▶ [“Bit Generation Options” on page 369](#)

## Analyzing your Design using Soft Error Injection

Ambient radiation occasionally collides with a circuit component in a way that alters its logical state. This effect is strongest at high altitudes, where the Earth's protective electromagnetic field is weaker. SEI (Soft Error Injection) Editor allows you to generate single-bit error or multi-bit errors, insert them

into a bitstream, and detect them for analysis, simulating the effect of radiation damage on the device's configuration memory. SEI Editor currently supports the following devices:

- ▶ LFD2NX
- ▶ LFCPNX
- ▶ LIFCL
- ▶ LIFCL-33
- ▶ LIFCL-33U
- ▶ LFMXO5
- ▶ UT24C
- ▶ UT24CP

SEI Editor is available after you have placed and routed your design and generated a bitstream.

### See Also


- ▶ [“Running SEI Editor” on page 372](#)
- ▶ [“Adding and Configuring a New Error with SEI Editor” on page 375](#)
- ▶ [“Removing an Error with SEI Editor” on page 375](#)
- ▶ [“Inserting an Error into a Device Using SEI Editor” on page 376](#)

## Running SEI Editor

You can run SEI Editor after you have placed and routed your design and generated a bitstream.

### To run SEI Editor:

- ▶ Choose **Tools > SEI Editor**
- SEI Editor appears.

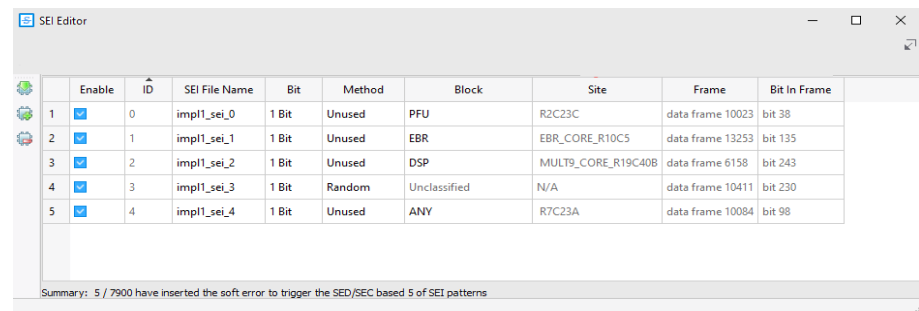

SEI Editor can manage multiple errors with a variety of options. The SEI Editor toolbar has three buttons:

- ▶ **Run** —  Run all selected error insertions.



- ▶ **Add** —  Add a new error for insertion.
- ▶ **Remove** —  Remove the selected error insertion.

SEI Editor has the following columns:


- ▶ **Enable** — Select this option to insert the error described on the current row.
- ▶ **ID** — The error's ID number. This value is read-only.
- ▶ **SEI File name** — The name of the file containing the inserted error. You can modify this filename by double-clicking it and entering a new name.
- ▶ **Bit** — This feature allows you to choose between a single-bit error or multi-bit error injection to add new errors to your design:
  - ▶ 1-bit
  - ▶ 2-bit

### Note

In the same frame, 2-bit only supports the following:

1. DSP to DSP
2. EBR to EBR
3. DSP to PFU
4. EBR to PFU
5. PFU to PFU

For Nexus, when density is <30K, only PFU–PFU, DSP–PFU, EBR–PFU pairing types are supported for 2-bit mode.

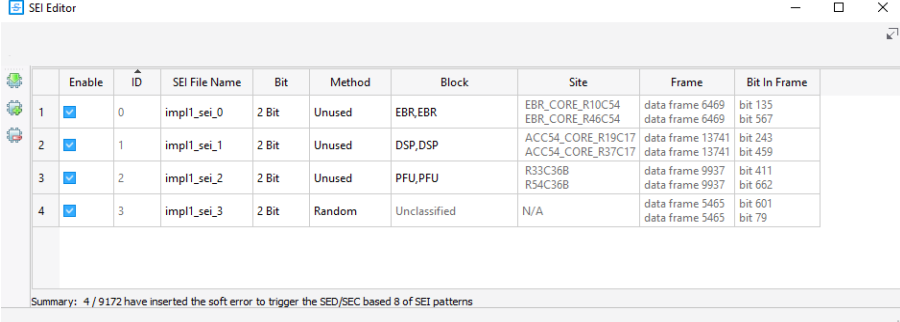

|   | Enable                              | ID | SEI File Name | Bit   | Method | Block        | Site                                   | Frame                                | Bit In Frame       |
|---|-------------------------------------|----|---------------|-------|--------|--------------|----------------------------------------|--------------------------------------|--------------------|
| 1 | <input checked="" type="checkbox"/> | 0  | impl1_sei_0   | 2 Bit | Unused | EBR,EBR      | EBR_CORE_R10C54<br>EBR_CORE_R46C54     | data frame 6469<br>data frame 6469   | bit 135<br>bit 567 |
| 2 | <input checked="" type="checkbox"/> | 1  | impl1_sei_1   | 2 Bit | Unused | DSP,DSP      | ACC54_CORE_R19C17<br>ACC54_CORE_R37C17 | data frame 13741<br>data frame 13741 | bit 243<br>bit 459 |
| 3 | <input checked="" type="checkbox"/> | 2  | impl1_sei_2   | 2 Bit | Unused | PFU,PFU      | R33C36B<br>R54C36B                     | data frame 9937<br>data frame 9937   | bit 411<br>bit 662 |
| 4 | <input checked="" type="checkbox"/> | 3  | impl1_sei_3   | 2 Bit | Random | Unclassified | N/A                                    | data frame 5465<br>data frame 5465   | bit 601<br>bit 79  |

Summary: 4 / 9172 have inserted the soft error to trigger the SED/SEC based 8 of SEI patterns

- ▶ **Method** — This option determines whether the error is inserted into an unused or random block.
  - ▶ **Unused** — inserts the error into an unused block, which do not affect the design logic. When this method is chosen, you need block type input from PFU, DSP, and ANY only. “ANY” means bitgen will randomly choose the block type among PFU, DSP, and Routing Bit. Then bitgen reads UDB, randomly picks one unused site of such type, and flips one random bit in it. The BFD equation of such random bit

has nothing to do with any used sites or any routing mux, i.e., this bit will not impact any used sites in the user logic. The bit flipped in the case of a 2-bit error will be from the same data frame.

Bitgen displays unused site name and random bit location within the frame, including frame row and bit number, and reports flipped frames or bits.

- ▶ Random — inserts the error into a random block, which may or may not affect the design logic. You can change an error's Method by double-clicking it and selecting a new value from the drop-down menu.

Bitgen displays the random bit location and category, including block type, device location, frame row number, and frame bit number, excluding padding bits in the front.

---

**Note:**

There will be no site location when a routing bit or unclassified is encountered.

---

▶ **Block**

If Method option is set to “Unused”, this option specifies the block where the error was inserted, in one of the following categories:

- ▶ PFU
- ▶ DSP
- ▶ EBR
- ▶ ANY (any of PFU or DSP)

You can change the destination Block by double-clicking it and selecting a new value from the drop-down menu.

If Method option is set to “Random”, after you run in SEI Editor, the Block will automatically display either Routing or Unclassified, which indicate errors in Routing or any blocks such as PFU, EBR, DSP or Routing.

- ▶ **Site** — The exact Site of the inserted error. Errors inserted into a Routing block or Unclassified block do not have a Site. This field is read-only.
- ▶ **Frame** — The data frame of the inserted error. This field is read-only.
- ▶ **Bit In Frame** — Displays the address of the SEI frame.

This will generate a data frame with flipped random bits, producing partial bitstream output in binary.bit or ASCII.rbt file formats.

The file name is the same as the bitstream output name, but with .bgn extension and no site will be created when a routing bit or unclassified is encountered.

Currently, we specify the following categories:

- ▶ PFU
- ▶ EBR
- ▶ DSP
- ▶ Routing or Unclassified (if Method is Random)

For more information about Soft Error Injection, refer to [FPGA-TN-02076-2.1 Soft Error Detection \(SED\)/Correction \(SEC\) User Guide for Nexus Platform](#).

### See Also

- ▶ [“Analyzing your Design using Soft Error Injection” on page 371](#)
- ▶ [“Adding and Configuring a New Error with SEI Editor” on page 375](#)
- ▶ [“Removing an Error with SEI Editor” on page 375](#)
- ▶ [“Inserting an Error into a Device Using SEI Editor” on page 376](#)

## Adding and Configuring a New Error with SEI Editor

You can use SEI Editor to add new errors to your design.

### To add and configure a new error:

1. Click **Add** .  
The tool adds a new, unconfigured error to the list.
2. Select the option in the Enable column to enable the new error.
3. Choose a new filename for the inserted error by double-clicking the current filename, typing a new one, and pressing Enter.
4. Choose a method by double-clicking the current method and selecting your preferred method from the drop-down menu.
  - ▶ If this error's method is Unused, you can choose a block by double-clicking the current block and selecting your preferred block from the drop-down menu.

### See Also

- ▶ [“Analyzing your Design using Soft Error Injection” on page 371](#)
- ▶ [“Running SEI Editor” on page 372](#)
- ▶ [“Removing an Error with SEI Editor” on page 375](#)
- ▶ [“Inserting an Error into a Device Using SEI Editor” on page 376](#)

## Removing an Error with SEI Editor

You can remove a previously inserted error from your design using SEI Editor.

### To remove an error:

1. Click a cell in the row of the error you want to remove.
2. Click **Remove** .

### See Also

- ▶ [“Analyzing your Design using Soft Error Injection” on page 371](#)
- ▶ [“Running SEI Editor” on page 372](#)
- ▶ [“Adding and Configuring a New Error with SEI Editor” on page 375](#)
- ▶ [“Inserting an Error into a Device Using SEI Editor” on page 376](#)

## Inserting an Error into a Device Using SEI Editor

Once you have inserted an error into your design, you can insert the error into your device using Radiant Programmer.

### To insert the selected errors into a device:

1. Click **Run** .  
The SEI tool generates a partial bitstream with the selected errors.
2. Program the original bitstream into the device using Radiant Programmer. Refer to [“Programming the FPGA” on page 447](#).
3. In Radiant Programmer, program the partial bitstream into the device using the **Static Random Access Memory (SRAM) > Background Programming > SEI Fast Program** Programmer settings.

### See Also

- ▶ [“Analyzing your Design using Soft Error Injection” on page 371](#)
- ▶ [“Running SEI Editor” on page 372](#)
- ▶ [“Adding and Configuring a New Error with SEI Editor” on page 375](#)
- ▶ [“Removing an Error with SEI Editor” on page 375](#)

## Analyzing Static Timing

Static timing analysis can determine if your circuit design meets timing constraints. Rather than simulation, it employs conservative modeling of gate and interconnect delays that reflect specific operating conditions with a specific FPGA.

You can produce timing analysis reports as part of the synthesize, map, and place-and-route processes. Before running a process, click the Task Detail View in the Process Toolbar and select Timing Analysis for that process.

The reports have similar information shown in the same format. But they are based on information from each process:

- ▶ Post-synthesis timing analysis is based on pre-synthesis constraints and estimates of delays.
- ▶ Map timing analysis is based on post-synthesis constraints, the actual types of components, and estimates of the routing delays.
- ▶ Place-and-route timing analysis is based on post-synthesis constraints, and the actual components and routing.
- ▶ Place-and-route I/O timing analysis reports the setup and hold slack for each port that has a timing constraint.

All the reports can be read in the Reports tab.

An alternative to generating the Place & Route Timing Analysis report is the Timing Analyzer tool. Instead of a text report, Timing Analyzer gives you a spreadsheet view that you might find easier to read. Timing Analyzer also has a search function to help you find different data paths.

## Options for Timing Analysis Reports

There are several options that can be set for each timing analysis. For the post-synthesis, map, and place-and-route reports, you can specify whether you want hold or setup analysis, the device performance grade, and the number of paths and endpoints in the report.

You can also change the style of the report with the Report Format option. The default is the current Lattice Standard, which follows industry standards for timing analysis tools. But if you have been using the Lattice Diamond tool set, you might prefer the older Diamond Style. One of the key differences is that Lattice Standard provides more information in its detailed description of data paths.

I/O timing analysis has an option to analyze the ports for all the speed grades of the FPGA.

Options are set in the implementation strategies. For more information, see:

- ▶ [“Specifying Strategy Options” on page 46](#)
- ▶ [“Post-Synthesis Timing Analysis Options” on page 791](#)
- ▶ [“Map Timing Analysis Options” on page 793](#)
- ▶ [“Place & Route Timing Analysis Options” on page 798](#)
- ▶ [“IO Timing Analysis Options” on page 799](#)

## Running Post-Synthesis Constraint Scenario Timing Reports

You can run different Map and Place & Route Timing Analysis timing reports without needing to re-run the synthesis through the Place & Route Design process. The Radiant software will use the data within its own database to generate real time timing reports. In the Post-Synthesis Constraint File folder, only one .pdc file can be active among any other available .pdc file.

**To run the real time timing reports on post-synthesis .pdc files:**

1. Right-click on one of the inactive .pdc files.
2. Choose **Run > Map Timing Analysis** or **Run > Place & Route Timing Analysis**.

A real-time report is generated and displayed in the Reports view of the main Radiant window.

### Note

In order to run the timing report scenario for Map or Place & Route, the design flow from synthesis through to Place & Route must be run at least once on the active .pdc file.

---


When performing timing analysis that uses a constraint file that is different from the original, such as a second .pdc file, note that the process is different from the normal flow shown in the figure below.

When choosing Run > Map Timing Analysis or Run > Place & Route Timing Analysis using the second PDC file, the standalone STA (Static Timing Analysis) is run, as shown in the figure below.

### Note

The UDB constraints are cleared and you should put all of the constraints (pre-synthesis and post-synthesis) in the second PDC file.

Standalone/Run STA with second PDC

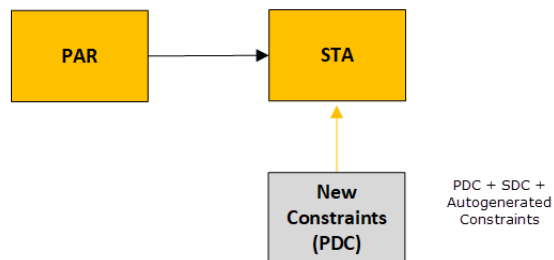

## Reading Timing Analysis Reports

The sections in the timing analysis reports vary depending on the FPGA architecture, timing constraints, design elements, and reporting style.

For example, if the user selects an industrial device with Speed Grade 7\_High-Performance\_1.0V, the following sections may be included in the report:

1. Timing Overview
  - 1.1. SDC Constraints

- 1.2. Constraint Coverage
- 1.3. Overall Summary
- 1.4. Unconstrained Report
- 1.5. Combinational Loop
- 1.6. Error/Warning Messages
- 2. Setup at Speed Grade 7\_High-Performance\_1.0V Corner at 100 Degrees
  - 2.1. Clock Summary
  - 2.2. Endpoint slacks
  - 2.3. Detailed Report
- 3. Setup at Speed Grade 7\_High-Performance\_1.0V Corner at -40 Degrees
  - 3.1. Clock Summary
  - 3.2. Endpoint slacks
  - 3.3. Detailed Report
- 4. Hold at Speed Grade m Corner at -40 Degrees
  - 4.1. Endpoint slacks
  - 4.2. Detailed Report

Each line item in the table of contents is also a hyperlink that will take you directly to that section of the report.

The overall summary may be as follows:

Setup at Speed Grade 7\_High-Performance\_1.0V Corner at 100 Degrees  
Timing Errors: 8 endpoints; Total Negative Slack: 74.116 ns

Setup at Speed Grade 7\_High-Performance\_1.0V Corner at -40 Degrees  
Timing Errors: 8 endpoints; Total Negative Slack: 77.109 ns

Hold at Speed Grade m Corner at -40 Degrees Timing Errors: 0 endpoints;  
Total Negative Slack: 0.000 ns

## Timing Overview

Shows the constraints and operating conditions that guided the analysis. It also shows a list of combinational loops that could not be analyzed.



## SDC Constraints

Lists all the .xdc constraints that you created and also any constraints that are automatically generated from PLL device constraints.

## Constraint Coverage

Displays the percentage of timing constraints used in the design.

## Overall Summary

This section gives an overall roundup of all the Setup and Hold timing results.

- ▶ Timing Errors indicate the number of endpoints which violate setup or hold violations. There is also a sum of the Total Negative Slack in terms of setup and hold.
- ▶ If the MPW requirement is not met for any of the clocks, This section indicates how many MPW errors occurred and where to look for the data.
- ▶ Overall Summary also shows if a set\_max\_skew constraint is not met.

## Unconstrained Report

Reports the paths that are not constrained and shows the start point and end point of each path. Suggested timing constraints are provided to constrain the given paths.

## Combinational Loop

Lists combinational / asynchronous loops in the circuit for which timing paths cannot be analyzed.

## Setup at <selected device speed grade and other characteristics> at <Max Temp> Degrees

This section shows the clock constraint added in the design, Single Clock Domain table, and Clock Domain Crossing table.

If a clock net goes to a pin with a minimum pulse width (MPW) arc, the corresponding clock's report will contain an MPW report immediately after the

constraint. Each clock constraint has a maximum of one MPW report in the Single Clock Domain table.

## Clock Summary

Shows an analysis for each clock domain defined in the constraints. The analysis shows the target frequency versus the actual (or maximum possible) and MPW (minimum pulse width) frequencies.

The “Clock Domain Crossing” section shows the slack with any other clocks that connect with the given domain. That is, a data path that has different clocks for its start and end points.

## Endpoint Slacks

Lists the endpoints, slack, and the total setup number of endpoints with negative slack.

## Detailed Report

Shows details of the worst paths for setup slack and for hold slack. Each path has a section that starts with a summary of the path and the results of the analysis. This is followed by a table calculating the delay step by step through the path, beginning with the clock at the start of the path and ending with the clock at the end of the path. Each step includes the name of the pin within the FPGA and the hierarchical name of the module's port, the type of delay, and the fanout from the pin.

If you want to visualize the path, the reports have links to other tools. Physical Designer Placement Mode shows the sites within the FPGA. Physical Designer Routing Mode shows the route within the FPGA. (Physical Designer is only available after place-and-route.) Netlist Analyzer shows a schematic view of the design. However, Netlist Analyzer often cannot show the detailed path.

The setup time of the IOLOGIC register input is now independent of the DELAY timing. It is constant and unchanging, regardless of the value set for DEL\_VALUE in the DELAY component.

The IOLOGIC had a programmable DELAYB component in it. This delay was modeled as part of the setup and hold timing arcs of the IOLOGIC block.

The DELAYB component has been removed from the IOLOGIC block. As a result, the setup and hold timing arcs of the IOLOGIC block no longer have the DELAYB-related delays added to them. The DELAYB will appear separately.

**Figure 17: Example of Timing Analysis Report Enhancement for Delay Buffer**

```

++++Path 1  ++++++
Destination Clock Arrival Time (clk_i:R#2)      10.000
+ Destination Clock Source Latency                0.000
- Destination Clock Uncertainty                  0.000
+ Destination Clock Path Delay                   4.172
- Setup Time                                   0.215
-----
End-of-path required time( ns )                  13.957

```

**Example:**

If the current DEL\_VALUE is 50, and you changed it to a higher value, the **Setup Time** remains constant at 0.215.

Prior to this enhancement, the value of **Setup Time** keeps changing.

## Setup at <selected device speed grade and other characteristics> at <Min Temp> Degrees

Shows the clock constraint added in the design, Single Clock Domain table, and Clock Domain Crossing table. If a clock net goes to a pin with a minimum pulse width (MPW) arc, the corresponding clock's report will contain an MPW report immediately after the constraint. Each clock constraint has a maximum of one MPW report in the Single Clock Domain table.

This section also describes the [Clock Summary](#), [Endpoint Slacks](#), and [Detailed Report](#).

## Hold at Speed Grade m Corner at <Min Temp> Degrees

Displays the number of endpoints, slacks, and the total hold number of endpoints with negative slack. This section also describes the [Endpoint Slacks](#) and [Detailed Report](#).

Refer to the [Reading Timing Analysis Reports](#) for examples of Timing Analysis Reports.


# Understanding I/O Timing Analysis

I/O Timing Analysis reports on FPGA I/O port timing. The following are descriptions of the I/O models, showing how they are presented in the report file (.ior).


## Synchronous Input Model

The following diagrams show rising edge and falling edge synchronous input timing models. They will be analyzed by I/O Timing Analysis, which will provide the worst-case setup and hold requirements.

Synchronous Input Model (Rising)

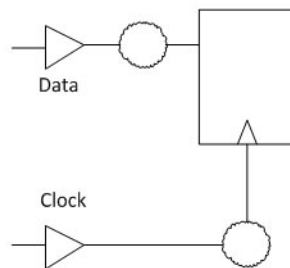

Synchronous Input Model (Falling)

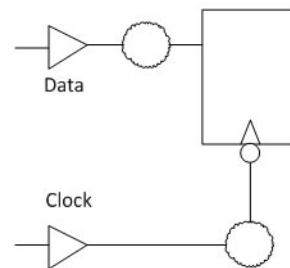

The rising edge and falling edge timing models are shown differently in the .ior report file, as shown in the following example.


| Port  | Clock | Edge | Setup  | Performance_Grade | Hold  | Performance_Grade |
|-------|-------|------|--------|-------------------|-------|-------------------|
| din_f | clkin | F    | -0.855 | M                 | 2.344 | 7                 |
| din_r | clkin | R    | -0.855 | M                 | 2.344 | 7                 |

In the example, port “din\_f” is clocked on the falling edge of clock input port “clkin”. The worst-case setup time for port “din\_f” with reference to clock input “clkin” is -0.855ns. A negative input setup time means that the data will not be latched by the clock until after the clock edge. This type of timing happens often in today’s FPGAs with flip-flops located in or near the I/O. For this worst-case input setup, the device performance grade was the –M. The –M performance grade is the fastest performance grade possible for this device. All other performance grades have an input setup which is less than -0.855ns.

On the hold timing side, input port “din\_f” must hold its data until 2.344ns after the input clock “clkin.” This worst-case hold timing was found in the -7 performance grade. All other performance grades hold timing is less than the 2.344ns requirement.

Synchronous Output Model

The following diagram shows a synchronous output timing model. This model will be analyzed by I/O Timing Analysis and provide the worst-case clock-to-out requirements.

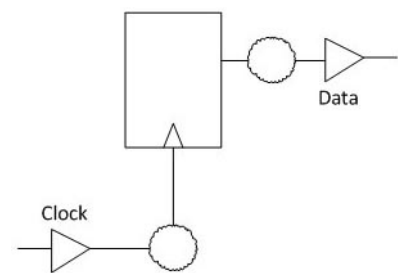

The synchronous output model produces a minimum and maximum clock-to-out line in the .ior report, as shown in the following example:


| Port | Clock | Edge | Max_Delay | Performance_Grade | Min_Delay | Performance_Grade |
|------|-------|------|-----------|-------------------|-----------|-------------------|
| dout | clkin | R    | 7.031     | 7                 | 3.365     | M                 |

In this example, port “dout” is clocked on the rising edge of clock input port “clkin.” The worst-case maximum delay from the clock input to the data out time is 7.031ns using a -7 performance grade. All other performance grades have a faster clock-to-out time.

On the minimum side, using –M performance grade, the clock-to-out is reported as 3.365ns. All other performance grades have a longer clock-to-out time.

Forwarded Clock Output Model

The following diagram shows rising edge and falling edge forwarded clock output models. Forwarded clocks are commonly used in today’s FPGA I/O parallel interfaces.

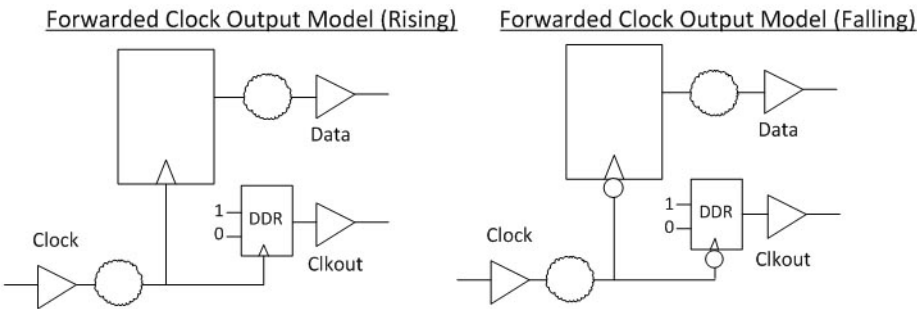

Both of these models use a DDR element as the source of the forwarded output clock. This is the recommended method for using a forwarded clock, because it keeps the clock routing consistent for the data as the clock output. This way, both the data and the clock go through the same logic in the I/O, which results in minimal skew between the clock output and data.

#### Note:


To find out about specific Lattice FPGA architectures and high-speed interface recommendations, visit the Lattice website and search for device-specific application notes.

To understand the relationship between the data output and forwarded clock, it is important to examine both in the .ior report, as shown in the following example. Each output port will show a clock-to-out number with reference to the input clock. The difference in the clock-to-out will be the skew between the data and clock.

| Port   | Clock | Edge | Max_Delay | Performance_Grade | Min_Delay | Performance_Grade |
|--------|-------|------|-----------|-------------------|-----------|-------------------|
| clkout | clkin | R    | 7.031     | 7                 | 3.365     | M                 |
| dout   | clkin | R    | 7.031     | 7                 | 3.365     | M                 |

In this example, the clock output “clkout” takes 7.031ns from the input clock “clkin,” and the data output “dout” takes exactly the same time, resulting in an aligned relationship.

It is important to note that the forwarded clock analysis can only happen using the model shown in “[Forwarded Clock Output Model](#)” on page 385. The following traditional forwarded clock timing model will not be reported properly in the I/O Timing Analysis .ior report file, because there is no clocked element on the forwarded clock output.

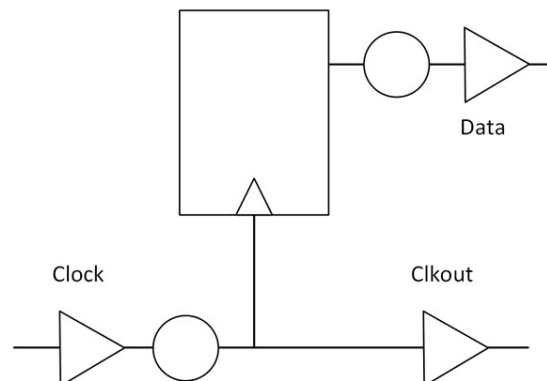


**Not Reported**

This non-supported timing model will always result in a relatively large amount of skew between the output data and the forwarded clock, since different logical paths are used. The data path will add a clock-to-out delay of the output flip-flop. The clock output path will add a routing delay to an output pin. These paths can have a relatively large difference in timing.

### Double-Data-Rate Input Model

The following diagram shows a double-data-rate (DDR) input timing model. This model will be analyzed by the I/O Timing Analysis and provide the worst-case setup and hold requirements.

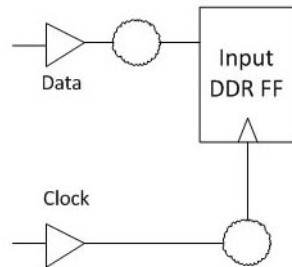

Input DDR interfaces latch data on both the rising and falling edge of the clock. Traditionally, there are two modes of an input DDR interface:

- ▶ **Centered** – A centered interface has the clock edge centered in the middle of the data valid of the data input before entering the device.
- ▶ **Aligned** – An aligned interface has the clock edge and data edge aligned together.

Depending on the interface mode, setup and hold numbers need to be understood differently to apply them to the system design. Each current Lattice FPGA architecture family has an application note on designing high-speed interfaces that explains how to use the setup and hold numbers reported in the I/O analysis report.


The following is an example report line for an input DDR interface.

| Port    | Clock      | Edge | Max_Delay | Performance_Grade | Min_Delay | Performance_Grade |
|---------|------------|------|-----------|-------------------|-----------|-------------------|
| din_dds | clkkin_dds | R    | 0.234     | 8                 | 0.258     | 7                 |

### Double-Data-Rate Output Model

The following diagram shows a double-data-rate (DDR) output timing model. Like the forwarded clock model, a DDR element is used to produce the clock output. This ensures that the same logical path is used for both the data and

the clock output. This model will be analyzed by I/O Timing Analysis and provide the worst-case maximum and minimum delay requirements.

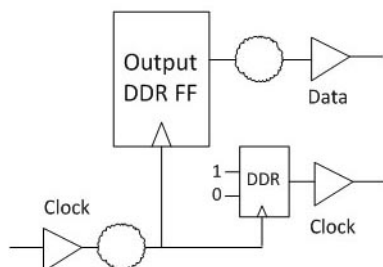

Output DDR interfaces launch data on both the rising and falling edge of the clock. Traditionally, there are two modes of an output DDR interface:

- ▶ **Centered** – A centered interface has the clock edge centered in the middle of the data valid of the data output when leaving the device.
- ▶ **Aligned** – An aligned interface has the clock edge and data edge aligned together.

Using the I/O analysis report, you can identify the relationship of the clock output and the data output to determine the skew of an aligned or centered interface.

Below is an example report line for an output DDR interface.

| Port     | Clock     | Edge | Max_Delay | Performance_Grade | Min_Delay | Performance_Grade |
|----------|-----------|------|-----------|-------------------|-----------|-------------------|
| clkout   | clkin_dds | R    | 7.031     | 7                 | 3.365     | M                 |
| dout_dds | clkin_dds | R    | 7.031     | 7                 | 3.365     | M                 |



## Generating the I/O Timing Analysis Report

There are two options for generating the I/O Timing Report:

- ▶ You can generate a report with only the worst-case I/O timing reported across all performance grades.
- ▶ You can generate a report that includes the worst-case I/O timing at the top followed by the results of each available performance grade of the device.

### All Performance Grade (False)

By default, the I/O Timing Analysis “All Performance Grade” option in the active strategy is set to False. When the False setting is used, the given performance grade and any grade faster than the given performance grade are analyzed for each port of the design, and the worst case across all the analyzed grades is reported. These analyzed performance grades include the minimum (M) grade, which is the virtual performance grade that is the fastest with minimum delay. The generated report includes the summary only.

#### To generate the default I/O Timing Analysis report:

- ▶ In the Process Toolbar, click the Task Detail View and select **I/O Timing Analysis**. Click Place & Route Design to run the whole process.

Radiant computes the data of the given performance grade and any faster performance grades for the device and generates a summary report.

### All Performance Grade (True)

When the I/O Timing Analysis “All Performance Grade” option in the active strategy is set to True, all performance grades (including M) of the target device are analyzed, and the worst case across all the grades is reported. The generated report includes the summary, followed by a detailed report for each grade.

#### To generate the detailed I/O Timing Analysis report:

1. Choose **Project > Active Strategy > IO Timing Analysis Settings**.

The Strategy dialog box opens and displays the IO Timing Analysis settings.

2. In the Value column, select the checkbox and click **OK**.
3. In the Process Toolbar, click the Task Detail View and select **I/O Timing Analysis**. Click Place & Route Design to run the whole process.

Radiant computes the data over all available performance grades and generates a detailed report and summary.

### Viewing the I/O Timing Analysis Report

The I/O Timing Analysis Report becomes available in the Reports tab as soon as the process has finished.

**To view the I/O Timing Analysis report:**

- ▶ In the Reports tab, expand Place & Route Reports and select **I/O Timing Analysis**.

## Using Timing Analyzer

Timing Analyzer is a different way to look at the place-and-route timing analysis that you might find easier to read. Timing Analyzer runs the timing analysis and presents the results on three spreadsheet tabs. Plus, there is a Query tab so you can search through the paths. The information in Timing Analyzer is very similar to that in the Place & Route Timing Analysis report but is presented differently.

Timing Analyzer can be run anytime after completing the place-and-route process. You do not need to select timing analysis in the Task Detail View of the Process Toolbar.

**To use Timing Analyzer:**

- ▶ Choose **Tools >  Timing Analyzer**. You can also click the  button on the toolbar.

A progress indicator opens, showing that the Radiant software is calculating the delays. It takes a moment for the Timing Analyzer to appear in the Tool Area.

## Setting Options in Timing Analyzer

Timing Analyzer has the same options as the Place & Route Timing Analysis Report. But the options are set independently in Timing Analyzer.

The current option settings can be seen on Timing Analyzer's General Information tab.

**To change the timing option settings:**

1. Choose **Edit > Timing Option Setting**.

The Timing Option Setting dialogue box appears.

2. Choose option settings. See below for more information.
3. Click **OK**.

A progress indicator opens, showing that the Radiant software is calculating the delays. It takes a moment for the Timing Analyzer tabs to be updated.

Here are definitions of each option:

- ▶ Run Mode: Choose whether you want setup or hold analysis, or both.

- ▶ Speed for setup: Choose the performance grade of the FPGA. “m” is for the fastest performance grade.
- ▶ Speed for hold: Choose the performance grade of the FPGA. “m” is for the fastest performance grade and is usually the worst case for hold analysis.
- ▶ Report Format: Choose the style of the report. The default is the current Lattice Standard, which follows industry standards for timing analysis tools. But if you have been using the Lattice Diamond tool set, you might prefer the older Diamond Style.
- ▶ Critical endpoints path number limit: Enter the number of data paths you want in the Critical Endpoint Summary tab.
- ▶ Unconstrained endpoints path number limit: Enter the number of data paths you want in the Unconstrained Endpoint Summary tab.
- ▶ Number of paths per constraint: Enter the number of data paths you want for each constraint in the Critical Paths Summary tab.
- ▶ End point number limit: Enter the number of endpoints you want in the Critical Endpoint Summary tab.
- ▶ Maximum slack limit: Enter the maximum delay value for the slack in nanoseconds.

## Reading Timing Analyzer

Timing Analyzer has five tabs arranged along the bottom of the view. These tabs have information similar to some sections of the Place & Route Timing Analysis report. See [“Reading Timing Analysis Reports” on page 379](#).

**General Information** This tab shows basic information about the FPGA and the option settings used in the analysis.

**Critical Paths Summary** This tab shows the same information as the “Detailed Report” section of the text report.

At first you will see introductory information for the paths. You can view the full details on any path by clicking anywhere in the row of that path. See [“Path Details in Timing Analyzer” on page 392](#).

### Note

---

The data in this tab is presented in nanoseconds.

---

### Critical Endpoint Summary

This tab shows the same information as the “Detailed Report” section of the text report.

You can see the full details on any path by clicking anywhere in the row of that path. See [“Path Details in Timing Analyzer” on page 392](#).

### Unconstrained Endpoint Summary

This tab shows the same information as the “Unconstrained Report” section of the text report.

### Query

This tab shows a query form to search for data paths. Select a source clock, destination clock, start point, or end point. You can select one or several items. Click **Search** to find associated data paths.

Any paths found are shown in a spreadsheet view at the bottom of the form. Again, you might want to enlarge the view by detaching the tool as a separate window. You can see the full details on any path by clicking anywhere in the row of that path. See [“Path Details in Timing Analyzer” on page 392](#).

You can also save queries for future use.

## Path Details in Timing Analyzer

In Timing Analyzer, you can see details on any data path listed in the Critical Paths Summary, Critical Endpoint Summary, and Query tabs. These details are similar to what you see in the “Detailed Report” section of the text report.

If you want to visualize the data path, you can cross-probe to Physical Designer.

You can also export the data to a .csv (comma-separated value) file that can be read by other software, such as a spreadsheet tool. See [“Exporting a Path Analysis” on page 393](#).

### To see path details:

1. Click anywhere in the row of the desired path.

The window is divided into three parts. On the right are two new sections with tabs that provide extra information about the selected path. You might want to enlarge the view by detaching the tool as a separate window.

The Path Detail tab shows the same the introduction to the path seen in the text report. There are also some delay calculations for the destination and source clocks.

The third section has three tabs that calculate the delay step by step through the path. The Data Path tab shows the steps. The Clock Paths tab shows the clocks at the start and end of the path. The Waveform tab allows you to visually reference the Data Path data. You can use the tab to easily see how and where the constraints apply.

You can cross-probe from the Critical Paths Summary tab or the Query tab of Timing Analyzer to Netlist Analyzer.

### To cross-probe to Physical Designer:

1. Right-click any row in the Data Path tab or the Clock Paths tab and choose:

- ▶ **Show in Physical Designer Placement Mode**
- ▶ **Show in Physical Designer Routing Mode**

Physical Designer opens showing the path in the desired mode.

If you would like to view multiple paths, click and drag over the required rows and right-click with the rows highlighted. You can also use the Shift and Ctrl keys to select contiguous and non-contiguous rows.

You can cross-probe from the Critical Paths Summary tab or the Query tab of Timing Analyzer to Netlist Analyzer.

#### **To cross-probe to Netlist Analyzer:**

1. Right-click any row in the Data Path tab or the Clock Paths tab and choose **Show in Netlist Analyzer**.

Netlist Analyzer opens and highlights the selected path.

If you would like to view multiple paths, click and drag over the required rows and right-click with the rows highlighted. You can also use the Shift and Ctrl keys to select contiguous and non-contiguous rows.

## **Exporting a Path Analysis**

You can export the analysis from an individual path to a .csv (comma separated file) that can be read by other software, such as a spreadsheet tool. You can do this from any path in the Critical Path Summary, Critical Endpoint Summary, and Query tabs. The Export command saves all the data in the tab plus all the detail data for the selected path.

#### **To export path data:**

1. Right-click anywhere in the row of the desired path and choose **Export**.  
The Export dialog box opens.
2. Browse to where you want to save the .csv file.
3. Enter a file name.
4. Click **Save**.

## **Using Standalone Timing Analyzer**

Standalone Timing Analyzer can be run on designs using post-synthesis, post-map, post-PAR Unified Design Database (.udb), and associated timing constraints specified in the .pdc file of the design. Using these input files, it provides static timing analysis, path tables, and a report of each timing constraint like the Timing Analyzer in Radiant.

## Running Standalone Timing Analyzer from Radiant Timing Analyzer

When you open the Standalone Analyzer tool, it will automatically create the Unified Design Database, which includes logic and physical data (standalone\_tav\_\*.udb). This file is saved to the current project. You can use this database to run tavmain.exe.

### To open and run a timing analysis in Standalone Timing Analyzer:

- ▶ In the Timing Analyzer main window, click the  button at the upper left.

You can also choose **Tools >  Standalone Timing Analyzer**.

### See Also

- ▶ [Standalone Timing Analyzer](#)

## Loading Timing Constraint File and Running Timing Analysis in Standalone Timing Analyzer

### To load a timing constraint file and run timing analysis:

1. In the Timing Analyzer main window, choose **File > Load Timing Constraint File**. This menu can be used after opening the design.
2. After selecting the constraint file, you can load the timing constraint and do the timing analysis based on the selected constraint file.
3. If you select Load Timing Constraint File (Incremental Flow), do the timing analysis based on the constraints in the .udb file and the selected constraint file.

## Exporting Timing Report and Exporting Timing Analysis Reports in Standalone Timing Analyzer

### To export timing report and timing analysis report:

- ▶ In the Timing Analyzer main window, choose **File > Export > Timing Report For Setup/Hold**. This menu can export timing analysis reports for setup or hold (.twr).

## Exporting Timing Constraints to PDC File in Standalone Timing Analyzer

To export timing constraints to PDC file:

- ▶ In the Timing Analyzer main window, choose **File > Export > Export Timing Constraints To PDC file**.  
This menu can be used after opening the design.
- ▶ You can export timing constraints in the current .udb file to a .pdc file.

## Saving Design Files in Standalone Timing Analyzer

To save design files in Standalone Timing Analyzer:

- ▶ You can save changes to design data. In the Timing Analyzer main window, choose **File > Save Design As**.

## Setting Options in Standalone Timing Analyzer

Setting options in Standalone Timing Analyzer is the same as setting options in Radiant Timing Analyzer." Refer to ["Setting Options in Timing Analyzer" on page 390](#).

To set options in Timing Analyzer:

- ▶ In the Timing Analyzer main window, choose **Edit > Timing Option Setting**, or click the  button in the upper left.  
This menu can be used after opening the design.
- ▶ When loading the post-synthesis .udb file, you cannot change the speed in the Timing Option Setting dialog box. This feature is the same as the timing report.
- ▶ The default for the Report Format is Lattice Standard. You can change the Report Format in the Timing Option Setting dialog box.

## Setting Operating Conditions in Standalone Timing Analyzer

**To set operating conditions in Standalone Timing Analyzer:**

1. In the Timing Analyzer main window, choose **Edit > Operating Conditions Setting**.  
You can change the voltage and temperature based on the current design data.
2. When you click the **OK** button, the timing analysis process starts based on the edited design data.
3. When loading the post-synthesis .udb file, you cannot change the settings in the Operating Conditions Setting dialog box. This feature is the same as timing report.

## Running Timing Constraint Editor in Standalone Timing Analyzer

**To run timing constraint editor in Standalone Timing Analyzer:**

1. In the Timing Analyzer main window, choose **Edit > Timing Constraint Editor**. After selecting the Timing Constraint Editor, you can edit the timing constraint design based on the current design data.
2. When you close the Post-Synthesis Timing Constraint Editor window, a dialog box appears. If you click yes, the timing analysis process starts based on the edited design data.

## Refreshing Timing in Standalone Timing Analyzer

**To refresh timing in Standalone Timing Analyzer:**

- ▶ In the Timing Analyzer main window, choose **Edit > Refresh**. Based on the current timing constraint in the .pdc file, you can do the timing analysis to check if the new constraint works as expected.

**To edit the location of the current .pdc file:** ▶ You can add the new constraint in the current .pdc file.

Click the **Refresh** button to start the timing analysis process.

- ▶ To add the new constraint in the .pdc file, you can copy the text from the timing table.



- ▶ If the location of the current .pdc file is not specified, you can also choose **File > Load Timing Constraint File** to specify the .pdc file and start the timing analysis process.

## Analyzing Power Consumption

Included with the Radiant software is Power Calculator, which estimates the power dissipation for a given design. Power Calculator uses parameters such as voltage, temperature, process variations, air flow, heat sink, resource utilization, activity, and frequency to calculate the device power consumption. It reports both static and dynamic estimated power consumption.

Power Calculator allows you to import frequency and activity factors from the post-PAR simulation file (.vcd file). After the design information is added, Power Calculator provides accurate power consumption analysis for the design.

Power Calculator provides two modes for reporting power consumption:

- ▶ Estimation mode: Used before completing the design;
- ▶ Calculation mode: Based on the physical netlist file (.udb) after placement and routing.

Power Calculator also features:

- ▶ User defined Junction temperature
  - ▶ Users can directly enter  $T_j$  now, as opposed to having to use workarounds to modify it indirectly
  - ▶ Modify  $T_j$  for your design
- ▶ General Flow checks using power calculator

You can open Power Calculator from within the Radiant software or as a stand-alone tool from the Windows Start menu. Either method provides both estimation mode and calculation mode functionality. A stand-alone Power Estimator is also available, which allows you to estimate power consumption without having the Radiant software installed.

### Calculation Mode

Within the Radiant software environment, Power Calculator calculates power based on the project's files, including device information. This information is automatically extracted when you open Power Calculator from within the Radiant software. In the stand-alone Power Calculator, power consumption is calculated based on a selected native circuit description (.udb) file or power calculator file (.pcf).

### Estimation Mode

Within the stand-alone Power Calculator or Power Estimator, the Startup Wizard enables you to estimate power based on a selected device, and it gives you the option of including a template of resource settings. Within the Radiant software environment, Power Calculator estimates power for an unrouted design. After the design is routed, it enables you to change the device family or other data and obtain the estimated power consumption.

### See Also

- ▶ [“Software Mode” on page 405](#)
- ▶ [“Starting Power Calculator from the Radiant Software” on page 399](#)
- ▶ [“Starting Power Calculator as a Stand-Alone Tool” on page 400](#)
- ▶ [“Power Analysis Design Flow” on page 401](#)

## Starting Power Calculator from the Radiant Software

Power Calculator is available from the Radiant software as soon as a project is opened.

### To start Power Calculator from the Radiant software Tools menu or toolbar:

1. Open a project or create a new one.
2. Choose **Tools > Power Calculator** or click the  button on the toolbar.  
Power Calculator opens in estimation mode or calculation mode, depending on the design stage, and displays the Power Summary page.

You can also start Power Calculator by creating or opening a new Power Calculator file (.pcf):

- ▶ Use the File menu or the Analysis Files folder to [create a new Power Calculator file](#) (.pcf).  
Power Calculator opens and loads the newly created .pcf file.
- ▶ Use the File menu or the Analysis Files folder to [open an existing .pcf file](#).  
Power Calculator opens in estimation mode or calculation mode, depending on the status of the selected .pcf file.

**See Also**

- ▶ [“Running Power Calculator from the Tcl Console” on page 401](#)
- ▶ [“Saving a Power Calculator File” on page 418](#)
- ▶ [“Adding Power Calculator Files to the Analysis Files Folder” on page 420](#)
- ▶ [“Setting a Power Calculator File as the Active Analysis File” on page 421](#)

## Starting Power Calculator as a Stand-Alone Tool

Power Calculator is available as a stand-alone tool from the Windows Start menu. This allows you to work with a Power Calculator project, in calculation mode or in estimation mode, without opening the Radiant software. The Startup Wizard enables you to create a new Power Calculator project, based on a selected device or a processed design, or to open an existing Power Calculator project file (.pcf).

**To start Power Calculator as a stand-alone tool:**

1. In the Start menu, choose **Lattice Radiant Power Calculator**.
2. After the Power Calculator Startup Wizard appears, do one of the following and click **OK**:

- ▶ To calculate power consumption based on a mapped or placed and routed design, select **Calculate power with design (udb)**.

Click the UDB File Browse button to navigate to the .udb file.

After you select the .udb file, the File Name and File Directory boxes are automatically filled in by the Startup Wizard. If you want to give the Power Calculator project file a different name than the .udb file name, type the name in the File Name text box.

- ▶ To estimate power consumption based on a selected device, select **Estimate power with device selection**.

The device selection menus appear at the bottom of the Startup Wizard.

Type a name for the Power Calculator project file in the File Name box and browse to the desired directory for the project. Make your selections from the device menus.

If you would like to use a template of resource settings, select the **Use Template** option, click **Select**, and do one of the following:

- ▶ Select **Specify Resource by Design Type**, and then select the design type from the drop-down menu and click **OK**.
- ▶ Select **Specify Resource by Component Utilization**, and then select from the options provided and click **OK**.

The Use Template text box displays the resource settings or the design type that you selected.

When you click OK, Power Calculator opens in estimation mode and loads the device settings you specified.

- ▶ To open an existing Power Calculator project, select **Open existing PCF file**.

Click the Browse button to navigate to the .pcf file.

When you click OK, Power Calculator opens in estimation mode or calculation mode, depending on the status of the .pcf file.

#### See Also

- ▶ [“Running Power Calculator from the Tcl Console” on page 401](#)
- ▶ [“Saving a Power Calculator File” on page 418](#)


## Running Power Calculator from the Tcl Console

The Radiant software’s Tcl console window enables you to use Tcl commands to perform many power analysis functions. For a complete list and descriptions of Power Calculator Tcl commands, see [“Power Calculator Tcl Commands” on page 1863](#) in the Tcl Command Reference Guide.

## Power Analysis Design Flow

Power Calculator supports all Lattice FPGA devices. The design flow involved in using Power Calculator in the Radiant software is as follows.

**Figure 18: Power Calculator Design Flow**

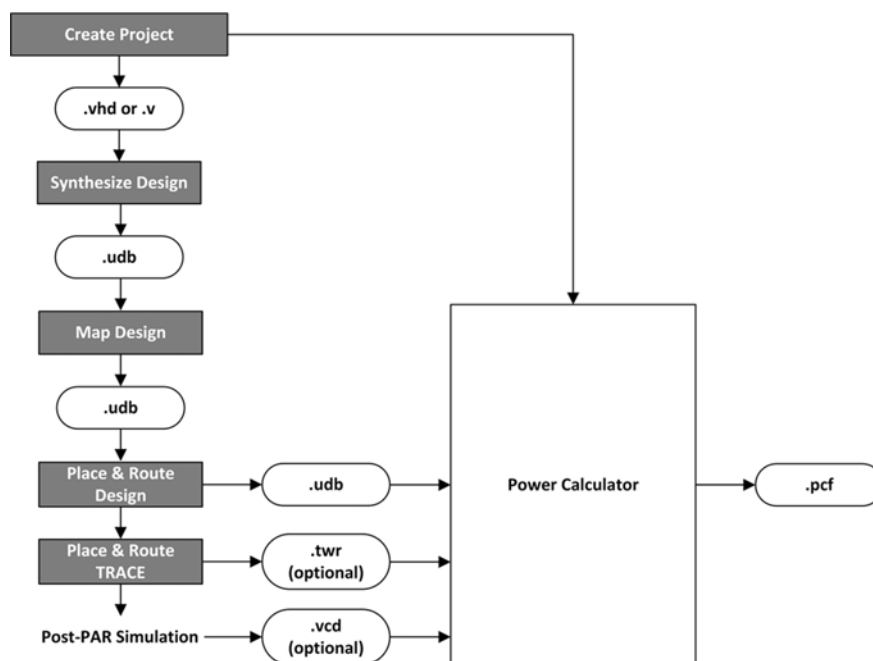

**See Also**

- ▶ [“Inputs” on page 402](#)
- ▶ [“Outputs” on page 403](#)

## Inputs

When you first launch Power Calculator from the Radiant software, it displays information from your design project. For an unrouted design, it shows default resource information based on the targeted device. For a routed design, it extracts information from the placed and routed .udb file.


Additionally, Power Calculator accepts the following as optional input.

- ▶ Value change dump file, *<project\_name>.vcd*, which is an ASCII file containing activity and frequency information. Its format is specified by the IEEE 1364 standard. It should be in the format of gate-level simulation and match the design. The .vcd file preserves waveform information that can be displayed in third-party tools such as QuestaSim.

If you provide a post-routed simulation .vcd file, Power Calculator looks up the clock signals in the .vcd file and compares them to each clock in the Power Calculator pages. If the clock names match, Power Calculator takes the frequency data from the .vcd file and populates the frequency columns, the activity factor (AF(%)) columns, or all, in the pages that contain these columns.

- ▶ Timing report file, *<project\_name>.twr*, is an ASCII file containing activity and frequency information. The type of frequency and setting can be imported from the timing report file as shown in Figure 19. Choose Edit > Frequency Settings to open the Frequency Settings dialog box.

**Figure 19: Frequency Settings**

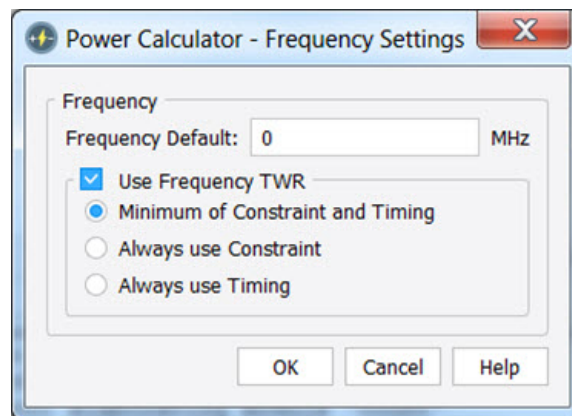**See Also**

- ▶ [“Importing a Value Change Dump \(.vcd\) File” on page 428](#)

- ▶ [“Changing the Global Default Activity Factor” on page 427](#)
- ▶ [“Power Analysis Design Flow” on page 401](#)

## Outputs

Power Calculator generates power calculation results in tabular format from information extracted from the design project. All of this information, when saved, is kept in the project’s Power Calculator file (.pcf).

Power Calculator also generates a power calculation report, which can be viewed in HTML or text format. It also generates power graphs that show how power consumption is affected with varying voltage, temperature, and clock frequency.

### See Also

- ▶ [“Saving a Power Calculator File” on page 418](#)
- ▶ [“Generating Power Graphs” on page 437](#)
- ▶ [“Viewing the Power Calculator Report” on page 439](#)
- ▶ [“Power Analysis Design Flow” on page 401](#)

## Static and Dynamic Power Consumption

Power Calculator reports the dynamic and static portion of the power dissipation. Power refers to the power consumed by the design. It is based on the extracted data from a placed and routed design file (.udb) or on the estimation information that you provide.

The dynamic portion is the power consumed by the used resources while they are switching. The power dissipation of the dynamic portion is directly proportional to the frequency at which the resource is running and the number of resource units used.

The static portion of power consumption is the total power consumed by the used and unused resources.

## Activity Factor Calculation

To calculate the power consumption for the routing interconnect, logic, and the read/write ports in an embedded block, Power Calculator requires a frequency and an activity factor percentage. The activity factor percentage is the percentage of time that a registered output node is active relative to a specified clock. Most of the resources associated with a clock domain run or toggle at a percentage of the frequency at which the clock runs.

The frequency appears as the “Freq. (MHz)” column on most pages. The activity factor percentage appears as the “AF (%)” column.

## Understanding the Default Activity Factor

Power Calculator assigns a default activity factor of 12.5% to most data signals. This means that these signals, on the average, change state once every 8 clock cycles. For example, the AF% of a signal in the Logic Block page is set at 12.5% by default.

Clock-related signals, on the average, change once every cycle. As such, these signals are assigned a default activity factor of 100%. A PLL is an example of such periodic signals that change every cycle.

Some default AF% values are also set at 10%. An example is the default activity factor of some categories on a RAM. This means that these signals, on the average, change every 10 clock cycles.

Most of these default activity factor values are widely accepted in the industry.

### Note

---

MPP data is transferred at very fast rates that a default activity factor of 100% is provided/recommended for MPPHYX4 and MPPCIEX8.

---

### See Also

- ▶ [“Importing a Value Change Dump \(.vcd\) File” on page 428](#)
- ▶ [“Changing the Global Default Activity Factor” on page 427](#)
- ▶ [“Changing the Global Default Frequency Setting” on page 428](#)

## Enable Factor Calculation

To calculate the power consumption in some IP, such as Logic Block, DSP, etc., Power Calculator requires an enable factor (EF) percentage from 0 to 100%. The EF is the percentage of time that the IP is enabled. Enter the enable factor percentage in the "EF (%)" column.

The enable factor percentage appears as the “EF (%)” column.

### See Also

- ▶ [“Importing a Value Change Dump \(.vcd\) File” on page 428](#)

## Power Calculator Window Features

Power Calculator main window displays the software mode being used and the currently selected page of power consumption information. When you first open Power Calculator, the Power Summary page appears by default. All



other pages of information for the device are made available from the tabs arranged at the bottom of the main window. This section describes these features and the color coding of cells.

## Software Mode

The Software Mode in the top right corner of the Power Calculator window indicates whether Power Calculator is running in estimation or calculation mode. This field is read-only.

### Estimation Mode

In estimation mode, Power Calculator provides estimates of power consumption based on the device resources or template that you provide. This mode enables you to estimate the power consumption for your design before the design is complete or even started. It is useful for “what if” analysis. You must supply the frequency, activity factor, and voltage.

### Calculation Mode

In calculation mode, Power Calculator calculates power consumption on the basis of device resources taken from a design's .udb file, or from an external file such as a .vcd file, after placement and routing. This mode is intended for accurate calculation of power consumption, because it is based on the actual device utilization.

### Reverting to Estimation Mode

Power Calculator will revert to estimation mode from calculation mode in the following circumstances:

- ▶ If you start using Power Calculator in calculation mode and change the data in any cell other than AF (%), Freq., V., Dynamic Power Multiplier, Ambient Temperature, Performance Grade, Operating Condition, or Process Type, Power Calculator will automatically revert to estimation mode.
- ▶ Rerunning a process before Place & Route will change the software mode if you are working with the unsaved “untitled” temporary power calculator file. For example, if you rerun Map Design while in calculation mode using the “untitled” file, the tool will revert to estimation mode. If you are working with a saved .pcf file, the software mode will not change when you rerun a process.

### Reverting to Calculation Mode

For many types of changes, Power Calculator enables you to revert to calculation mode from estimation mode, if you have not yet saved the changes to the .pcf file. See [“Reverting to Calculation Mode” on page 427](#) for more information.

# Power Summary

Power Summary provides an overview of power consumption conditions. It is the first page that opens when you run Power Calculator. The Power Summary enables you to change the targeted device, operating conditions, voltage, and other basic parameters. Updated estimates of power consumption are then displayed based on these changes.

## Device

The Device section enables you to select a device family, package, part name, performance grade, and operating conditions. It displays power information based on these selections.

You can specify one of the following operating conditions, depending on the device. As this is device dependent, please refer to the device data sheet for more accuracy.

- ▶ Industrial – Devices are rated at 105 degrees Celsius.
- ▶ Commercial – Devices are rated at 85 degrees Celsius.
- ▶ Automotive – Devices are rated at 125 degrees Celsius.

## Device Power Parameters Section

The Device Power Parameters section contains information pertaining to the device process conditions and power model status.

The process type specifies the corners or conditions under which the device was manufactured. It can be one of the following:

- ▶ Typical – to reflect the typical amount of current consumed by the circuit.
- ▶ Worst – to reflect the maximum amount of current consumed by the circuit.

The Power File Revision displays the status of the model:

- ▶ Advanced – The power file has all the constants, functions, formulas, and defaults. The constants are based on silicon simulation data without extracted layout parameters. The status of this file is “advanced.”
- ▶ Preliminary – The power file has all the constants, functions, formulas, and defaults. The constants are based on nominal silicon characterization data rather than simulation data. The status of this file is “preliminary.”
- ▶ Final/Production – The power file has all the constants, functions, formulas, and defaults. The constants are based on silicon characterization data that includes characterization of corner lots and conditions rather than simulation data. The status of this file is “production.”

## Environment Section

The Environment section displays information about the operating temperature of the device.

If Computed  $T_J$  is selected, the Thermal Profile button is enabled for you to choose the thermal impedance model for the power-consumption or current-consumption calculation.

The Ambient Temperature cell allows you to specify the surroundings at which the device is expected to operate, in degrees Celsius. Temperature values must be between -40 and +125 degrees Celsius.

Effective Theta-JA specifies the cumulative thermal impedances of a particular system. This figure is used in calculating the junction temperature ( $T_J$ ) of a die in a particular environment according to the following formula:

$$T_J = \text{power} * \text{theta\_effective} + \text{ambient\_temperature}$$

### User defined Junction temperature

- ▶ Users can directly enter  $T_J$  now, as opposed to having to use workarounds to modify it indirectly
- ▶ Modify  $T_J$  for your design

You can enter junction temperature directly through User Entered  $T_J$  and Computed  $T_J$ . The Computed  $T_J$  is the default when the Environment section is displayed.

When User Entered  $T_J$  is selected:

- ▶ Thermal Profile is disabled.
- ▶ Ambient Temperature is hidden.
- ▶ Junction Temperature is enabled and allows user to enter values.
- ▶ Effective Theta-JA is not applicable and displays N/A.

Junction Temperature specifies the temperature of the device within the device package, in degrees Celsius. You can adjust the junction temperature by using the models in the Thermal Profile dialog box. If the calculated value in the Junction Temperature box is either higher than 125 degrees Celsius or higher than the maximum junction temperature allowed for a particular device and operating conditions, a red text appears in the Junction Temperature box.

### Note

---

When you select User Entered  $T_J$ , you can directly type a value in the Junction Temperature box.

---

Maximum Safe Ambient specifies the maximum safe operating temperature for a die. If this temperature is exceeded, the semiconductor physics of the silicon change, so the die can operate erratically. The life of the device is also shortened.

### Voltage/Dynamic Power Multiplier (DPM)

In general, for semiconductors devices, the dynamic power consumption is independent of the variation in process and temperature. Power Calculator

follows this rule, and hence any change to either process or temperature does not change the dynamic current or power.

To provide an option to add some safeguards, Power Calculator includes the Dynamic Power Multiplier or DPM column right next to the voltage supplies on the Summary tab. DPM allows you to add a multiplier for the dynamic current for each individual power supplies. This multiplier is included in the dynamic current equation.

Dynamic Power Multiplier has a default value of 1. This means the dynamic power is what is predicted by the Power Calculator. If you want to add, 20%, for example, additional dynamic power, the DPM can be set to 1.2 ( $1 + 20\%$ ) and it can be placed against the appropriate power supply. This increases the dynamic power for that supply by 20% and provides you with some guard band.

### **Current by Power Supply**

This section displays the static, dynamic, and total current consumption in amperes.

### **Power by Power Supply**

This section displays the static, dynamic, and total power consumption in watts, the value of which is rounded to three digits after the decimal point.

### **Power by Block**

This section displays the total power consumption by the different types of blocks in watts, the value of which is rounded to three digits after the decimal point.

### **Peak Startup (A)**

This section shows how much peak startup current each supply in the design draws, in amperes. When the "N/A" notation appears in this column, it means that no data is available yet. However, you can call Lattice Semiconductor Technical Support for this information.

## **Power Calculator Pages**

Each time Power Calculator opens, it displays the Power Summary, which shows the targeted device, operating conditions, voltage, and other basic information. Additional pages are available from the tabs arranged at the bottom of the window. Except for Graph and Report, each of these pages allows you to view, edit, and add elements. The number and types of pages that are available depends on the selected device.

## Pages Available for Most Device Families

### Block RAM

The Block RAM page displays the power consumed by the embedded block RAM (EBR) in the design and the factors that affect it. Power-consumption calculation for the Block RAM page requires the frequency and activity factor per clock domain.

The Block RAM page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing “SP RAM > # EBR Blocks,” the Utilization table is updated after power calculation.

### Misc

The Misc page includes any non-generic IP, such as oscillators, i2c, and spi. These IPs do not have their own page due to negligible power contribution.

The Misc page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing “OSC > # OSC,” the Utilization table is updated after power calculation.

### PLL

The PLL page displays the estimated power consumed by the phase locked loops in the design and the factors that influence it. The power-consumption calculation is based on the input frequency, the number of PLLs in the design, and internal feedback architecture of PLL in the device.

The PLL page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing “PLL > # PLL,” the Utilization table is updated after power calculation.

The PLL page is available for all devices.

### Power Matrix

The Power Matrix page shows the amount of power pulled by each component in the design from multiple power sources. Two tabs are provided, allowing you to view the current usage (A) and power usage (W) of each type of component.

### Logic Block

The Logic Block page displays the estimated power consumed by the logic in the design and the factors that affect it. Power-consumption calculation in the Logic section requires both the frequency and an activity factor per clock domain. Power calculation is also based on the specified number and enable factor of LUTs, distributed RAMs, ripple-carry logic circuits, and registers driven by the clock.

The Logic Block page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing “Logic > # Logic LUTs,” the Utilization table is updated after power calculation.

## Clocks

The Clocks page displays the estimated power consumed by the clocks in the design and the factors that affect it. Dynamic power calculation is based on the frequency of each clock.

You can specify clock names in the Clocks tab and define the frequency of each clock. When the clock names are reference on the other tabs such as Logic Block, the relevant frequency value is automatically filled and use.

The Clocks page only reports clocks that go to the clock tree, such as Primary Clock, Secondary Clock and Edge Clock.

## I/O

The I/O page displays the estimated power consumed by the I/Os in the design and the factors that affect it. The power-consumption calculation for this page requires the frequency, activity factor, and number of inputs or outputs per clock domain. For bidirectional signals, it requires the number of bidirectional I/Os, input and output frequency, and input and output activity factor per clock domain. If you use an .udb file, Power Calculator extracts the information for the I/O page directly from the .udb file. If you do not use an .udb file, Power Calculator assigns the default resource usage values according to the design's family.

You can enable I/O standby mode from Bank I/O table or from user's design. If "Allow Standby INR" is "Yes" in bank voltage table, all differential input/bidi I/Os are standby-enabled; if "Allow Standby INR" is "No" in bank voltage table, all differential input/bidi I/Os are standby-disabled except MIPI DPHY input/bidi I/Os, MIPI DPHY input/bidi I/Os can be either standby-enabled or standby-disabled. If "Allow Standby DIFFIO" is "Yes" in bank voltage table, all differential output I/Os are standby-enabled; if "Allow Standby DIFFIO" is "No" in bank voltage table, all differential output I/Os are standby-disabled except MIPI DPHY output I/Os, MIPI DPHY output I/Os can be either standby-enabled or standby-disabled.

For certain devices that support boundary scanning, there is a radio option at the top of the I/O tab which allows users to enable or disable boundary scanning. Disabling this option will set Vccjb to 0 volts in the power summary page. Enabling this option will update Vccjb in the power summary tab to reflect that boundary scanning is on. By default, this option is disabled and will not account for boundary scanning.

Devices that do not support boundary scanning do not have this option in the I/O tab, and as such will not account for boundary scanning in the power estimation results, or the power summary tab.

The I/O page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing "Input Output WRIO > # I/P," the Utilization table is updated after power calculation.

### *I/O Banks Assignment:*

Manually assigning WRIO and HPIO to specific I/O banks is optional. Power Calculator computes the total number of available I/Os and automatically

assigns them to valid banks. *If you choose to manually assign I/Os to banks, note that the tool hides banks with no usable I/Os or those that are not supported for the current configuration or device.*

### I/O Termination

The I/O Termination page enables you to provide information about external terminations for the I/Os. You can specify the average equivalent thevenin resistive load in ohms ( $R_{th}$ ) and the equivalent thevenin voltage in volts ( $V_{th}$ ). Power-consumption calculation is based on the power consumed by the external termination that you provide.

The I/O Termination page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing “Termination > # I/P,” the Utilization table is updated after power calculation.

### Graph

The Graph page displays three types of graphs:

- ▶ Power vs. VCC Supply Voltage
- ▶ Power vs. Ambient Temperature
- ▶ Power vs. Frequency

Each graph displays two plots—typical and worst case. Use the Edit > Graph Settings command to change the graphs to be displayed. The dialog box enables you to specify the range, step, X axis, and Y axis of each graph. See [“Generating Power Graphs” on page 437](#) for more information.

To prevent any unnecessary calculations and additional processing time, graphs are only generated when you select the Graph tab. During the graph generation time, you cannot change tabs and must wait for the graph calculations to finish before performing any other action. If you switch tabs and change any information that will alter the power, the graphs will be regenerated when you next select the Graph tab.

### Report

The Report page contains a summary of the estimated power-consumption or current-consumption data calculated by Power Calculator. Information is taken from the Power Summary and from each page of the Power Calculator user interface.

In the Power Model section, the Status can be Preliminary, Advanced, or Final.

- ▶ Preliminary – The power file has all the constants, functions, formulas, and defaults. The constants are based on nominal silicon characterization data rather than simulation data.
- ▶ Advanced – The power file has all the constants functions, formulas, and defaults. The constants are based on silicon simulation data without extracted layout parameters.

- ▶ Final/Production – The power file has all the constants, functions, formulas, and defaults. The constants are based on silicon characterization data that includes characterization of corner lots and conditions rather than simulation data.

The report is available in both text (ASCII) and HTML. It is updated each time you make a change to any of the data in the editable cells.

### Pages Dependent on Selected Device/ Device Architecture

#### LED

The LED page allows you to generate the constant current sources. The signal name for Input is "EN" and "LEDPU" for Output. Default Signal Value for unconnected port: Input is "0"

Input EN : Logic "0"

The LED page is available for all devices.

#### DDRPHY

The DDRPHY page displays the estimated power consumed by DDRPHY in the design and the factors affecting it. The frequency, activity factor, enable factor, and type and number of DDRPHY's powered by each clock are all required for the power-consumption calculation on this page.

The RX, TX, and IDLE are separate DDRPHY power modes whose individual power and time percentages are used in the DDRPHY page for LPDDR/DDR power estimation. The RX and TX are user-entered values while the IDLE value is calculated.

The DDRPHY page also displays Utilization table, showing the percentage of resources used for the IP. When editing "DDRPHY > # DDRPHY," the Utilization table is updated after power calculation.

#### MPP

The MPP page displays the estimated power consumed by MPPHYX4 and MPPCIEX8 in the design and the factors affecting it. The protocol, data rate, activity factor, enable factor, link width, and number of MPPHYX4s and MPPCIEX8s are all required for the power-consumption calculation on this page. The MPP uses 100% activity factor by default.

The MPPHYX4s and MPPCIEX8s options can be selected by using the pull down arrow above the table entry. When selected, options are displayed with corresponding protocol note.

The MPPs can only be added for devices supporting it, and there is a DRC which checks to ensure users do not add more MPPs than their device supports. Also, only protocol and type can be selected with the dropdown, the other settings are user-entered directly.



The MPP page also displays Utilization table for each tab, showing the percentage of resources used for each IP. When editing “MPPHYX4\_MPQ0 > # MPPHYX4\_MPQ0,” the Utilization table is updated after power calculation.

## **DSP**

The DSP page displays the estimated power consumed by the digital signal processors in the design and the factors that affect it. The power-consumption calculation for this page requires the frequency, activity factor, enable factor, and the type and number of DSPs driven by each clock.

The DSP page also displays Utilization table, showing the percentage of resources used for the IP. When editing “DSP > # DSP,” the Utilization table is updated after power calculation.

## **SRAM**

The SRAM page displays the power consumed by the single port RAM used by the design and the factors that affect it. Power-consumption calculation for the SRAM page requires the frequency and activity factor per clock domain.

## **LRAM**

The LRAM page displays the power consumed by the Large RAM blocks and the factors that affect it. It allows the entry of LRAM type, frequency, activity factor, enable factor, and number of blocks.

## **SGMIICDR**

The SGMIICDR page displays the power consumed by the SGMII (Serial Gigabit Media Independent Interface)/CDR (Clock Data Recovery) blocks and the factors that affect it. It allows the entry of frequency, activity factor, enable factor, and number of blocks.

## **DDRDLL**

The DDRDLL page displays the power consumed by the DDRDLL (Double Data Rate Delay Locked Loop) master delay control blocks and the factors that affect it. It allows the entry of frequency, activity factor, enable factor, and number of blocks.

The DDRDLL page also displays Utilization table, showing the percentage of resources used for the IP. When editing “DDRDLL > # DDRDLL,” the Utilization table is updated after power calculation.

## **DLLDEL**

The DLLDEL page displays the power consumed by the DLLDEL (Delay Locked Loop Delay) slave delay blocks and the factors that affect it. It allows the entry of frequency, activity factor, enable factor, and number of blocks.

The DLLDEL page also displays Utilization table, showing the percentage of resources used for the IP. When editing “DLLDEL > # DLLDEL,” the Utilization table is updated after power calculation.

## DQS

The DQS page displays the power consumed by the DQS (DDR memory strobe) blocks and the factors that affect it. It allows the entry of DQS gearing mode, frequency, activity factor, enable factor, and number of blocks.

## MIPIDPHY

The MIPIDPHY page displays the power consumed by the MIPIDPHY (Mobile Industry Processor Interface Physical layer) blocks and the factors that affect it. It allows the entry of data rate, activity factor, and duty cycles for transmit/receive and low power/high speed. The MIPIDPHY has VCCDPHY and others power domains, and it uses 100% activity factor and 80% HS duty cycle for all dynamic power calculation. Customer can specify HS duty cycle in either continuous (normal power consumption) or non-continuous (power saving condition) clocking mode. For continuous clocking mode, the MIPIDPHY supports X4/X3/X2/X1 mode operation.

The MIPIDPHY page is available for CrossLink-NX device only.

## ADC

The ADC page displays the power consumed by the ADC (Analog to Digital Converter) block and the factors that affect it. It allows the entry of frequency, activity factor, enable factor, number of blocks, and comparator enables.

## ALU

The ALU page displays the power consumed by the ALU (Arithmetic Logic Unit) block and the factors that affect it. It allows the entry of frequency, activity factor, enable factor, and number of blocks.

## PCIE

The PCIE page displays the power consumed by the PCIE (Peripheral Component Interconnect Express) hardened block and the factors that affect it. It allows the entry of activity factor, enable factor, number of blocks, and PCIE speed. The data rate (2.5G, 5G, 8G) cannot be input directly, it is based on the type. The PCIE uses 100% activity factor by default for all dynamic power calculation including VCC power domain.

## PCS

The PCS page displays the power consumed by the PCS hardened block and the factors that affect it. It allows the entry of activity factor, enable factor, number of blocks, number of lanes and data rate. It includes PCIE\_LL (PCIE Link layer) and PCS table. The data rate (2.5G, 5G, 8G) in PCIE\_LL cannot be input directly, it is based on the type. When PCIE\_LL is used (there is a line in PCIE\_LL table and # PCIE = 1), the PCS data rate will be set to the same value as PCIE\_LL data rate automatically. If no PCIE\_LL is used, the PCS data rate can be set by user.

## Color Coding of Cells

The background colors of the cells on Power Calculator pages have the following significance:

- ▶ White – The cell is editable. When you edit the contents of this type of cell, the software mode does not change. If the software is in calculation mode, it will remain in calculation mode. If the software is in estimation mode, it will remain in estimation mode.
- ▶ Green – The cell is read-only or contains output from the software.
- ▶ Lite Yellow – The cell contains data extracted from a design file, such as an .udb file. If you enter data into this type of cell and the software is in calculation mode, it will change to estimation mode unless you enter data into the Performance Grade, Operating Conditions, and Process Type boxes. If the software is in estimation mode, it will remain in estimation mode.
- ▶ Red – The calculated value in the Junction Temperature box is either higher than 125 degrees Celsius or higher than the maximum junction temperature allowed for a particular device and operating conditions. The Junction Temperature box is the only cell that can display red text.

The font colors in the cells on Power Calculator pages have the following significance:

- ▶ Blue – Indicates default values.
- ▶ Grey out – Indicates values that cannot be edited on the I/O page. Since the I/O page has columns for inputs, outputs, and bidirectionals, red font prevents you from altering an I/O that is not valid. For example, if the I/O type belongs only to an I/O input, the cell in the # of Inputs column would display a value in black font, indicating that it is editable. The cells in the # of Outputs and the # of Bidi columns, however, would display values in gray font to indicate that they cannot be edited.
- ▶ Black – Indicates all other text.

## Working with Power Calculator Files

When you first open Power Calculator for a design project, it creates a temporary file that appears in the title bar as “Untitled.” This file contains default information, based on the device, or information extracted from the .udb file. When you enter data into Power Calculator pages and save the changes, the information gets stored in a Power Calculator file (.pcf). You can create a new Power Calculator file (.pcf) by saving the “Untitled” file. Or you can create a new .pcf file from the File menu before or after Power Calculator is opened.

When you use a .pcf file, rather than the “Untitled” temporary file, Power Calculator maintains the information it has already extracted from the .udb file. The saved .pcf file will not get overwritten when you rerun Map or Place & Route Design, and the software mode will not change.

This section describes how to create new Power Calculator files, how to work with multiple existing .pcf files, and how to activate a .pcf file and load it into Power Calculator. It also shows how to import a value change dump file (.vcd) for power calculation.

## Creating a New Power Calculator File in the Radiant Software

You can create a new .pcf from the File menu or from the Analysis Files folder pop-up menu. You can do this before or after opening Power Calculator.

### To create a new .pcf file:

1. In the Radiant software, do one of the following to open the New file dialog box:
  - ▶ Choose **File > New > File**
  - ▶ Press **Ctrl+N**.
  - ▶ Right-click the Analysis Files folder in the File List pane and choose **Add > New File** from the pop-up menu.
2. In the New file dialog box, select **Power Calculator Files** from the Source Files list.
3. Type a name for the new .pcf file in the name box.
4. In the Location box, enter the path and name of the directory where the Power Calculator file (.pcf) is to be stored. You can use the Browse button to navigate to the desired directory. By default, the file is stored in the current project folder.

The “Add to Implementation” option adds the new .pcf file to the Analysis files folder and is selected by default. If you do not wish the .pcf file to be added to the Analysis files folder for the current project, clear the “Add to Implementation” option. You cannot clear this option if you are using the Analysis Files folder to add a new file.

5. If your project contains more than one design implementation, select the desired implementation from the drop-down menu. By default, the active implementation is already selected.
6. Click **New** to create the .pcf file in the selected directory.

If Power Calculator is already open and contains unsaved changes to the current .pcf file, the Confirm dialog box will appear. Click **Yes** if you want to save the changes or **No** to discard them.

Power Calculator opens, if it is not open already. This might take a few seconds. The new .pcf file is loaded into Power Calculator and its name is displayed in the title bar. The .pcf file is added to the Analysis Files folder where its name is highlighted in bold type, indicating that it is set as the active .pcf file for the current implementation. Because the .pcf file is set as active, it will be loaded automatically when you close and reopen

Power Calculator. When you rerun a process in the Radiant software, the .pcf file will not get overwritten.

#### Note

Each time you create a new Power Calculator file through the File menu or the Analysis Files pop-up menu, the new .pcf file is automatically set as the active one for the current implementation unless you have cleared the “Add to Implementation” option. To make the .pcf file inactive, right-click the file name in the Analysis Files folder and choose **Set as Inactive**.

#### See Also

- ▶ [“Inputs” on page 402](#)
- ▶ [“Saving a Power Calculator File” on page 418](#)
- ▶ [“Outputs” on page 403](#)
- ▶ [“Opening an Existing Power Calculator File in the Radiant Software” on page 419](#)

## Creating a New Power Calculator File in the Stand-Alone Power Calculator

If you have started Power Calculator as a stand-alone tool, you can create a new Power Calculator project file (.pcf) from the File menu.

#### To create a new .pcf file from the stand-alone Power Calculator:

1. From the stand-alone Power Calculator, choose **File > New File**.
2. In the Power Calculator – New Project dialog box, type a name for the file and browse to the desired directory.
3. To use an existing .udb file for the project, browse to the location of the .udb file. Otherwise, leave the .udb box empty.
4. Click **OK**.

If you selected an .udb file in Step 3, Power Calculator loads the new project in calculation mode. If you did not select an .udb file, Power Calculator loads the new project in estimation mode.

#### See Also

- ▶ [“Inputs” on page 402](#)
- ▶ [“Saving a Power Calculator File” on page 418](#)
- ▶ [“Opening an Existing Power Calculator File in the Stand-Alone Power Calculator” on page 420](#)

## Saving a Power Calculator File

When you enter data into Power Calculator, an asterisk appears in both the title bar and the Power Calculator tab to indicate that there are unsaved changes. If you have not yet created a Power Calculator file (.pcf) for your project, or if no .pcf file has been set as the active file, “Untitled” will appear in the title bar. The “Untitled” file is a temporary file that contains default settings based on the device. To add power analysis changes to your project, you must save the “Untitled” as a .pcf file, open an existing .pcf file, or create a new one. Afterwards, you can simply click the Save button to write any changes to the .pcf file. You can also save an existing .pcf file to a different directory or file name.

### To save the Untitled file:

1. Choose **File > Save Untitled As**, and in the dialog box, navigate to the desired directory.
2. Type a name in the file name box and click **Save**.

The information entered in your project is saved in the .pcf file, and the .pcf file is automatically added to the Analysis Files folder in the File List pane.

### To save changes to an existing Power Calculator file:

- ▶ Choose **File > Save** or press **Ctrl+S** or click .

### To save a Power Calculator file to a different directory or file name:

1. Choose **File > Save <file\_name>.pcf As** to open the Save dialog box.
2. In the Save In box, navigate to the directory in which to save the .pcf file.
3. Type a different name in the File Name box.
4. In the Files of Type box, select **Power Calculator File (.pcf)**.
5. Click **Save**.

The saved .pcf file is added to the project’s Analysis Files folder in the File List pane.

### See Also

- ▶ [“Adding Power Calculator Files to the Analysis Files Folder” on page 420](#)
- ▶ [“Setting a Power Calculator File as the Active Analysis File” on page 421](#)
- ▶ [“Outputs” on page 403](#)

## Opening an Existing Power Calculator File in the Radiant Software

You can open an existing Power Calculator (.pcf) file in the Radiant software before or after opening Power Calculator. When you open a .pcf file in the Radiant software, the design information must match the information in the current project. You can open an existing .pcf file from the File menu, or from the Analysis Files folder.

### To open an existing .pcf file from the File menu:

1. Choose **File > Open > File** or press **Ctrl+O**.
2. In the Open File dialog box, select **Power Calculator Files (.pcf)** from the Files of Type drop-down menu. If Power Calculator is already open, this will already be selected as the default file type.
3. Navigate to the directory that contains the desired .pcf file, select the file, and click **Open**.

Power Calculator opens automatically, if it is not already open. The Power Summary page is displayed and the information from the selected .pcf file is loaded. The name of the .pcf file appears in the title bar.

### To open a recently opened .pcf file:

- ▶ Choose **File > Recent Files > filename** from the list of the four most recently opened files.

### Note

---

When you open a .pcf file from the File menu, it is not automatically added to the Analysis Files folder. You must [add](#) it to the folder manually.

---

### To open an existing .pcf file from the Analysis Files directory:

1. In the Radiant software, select the File List tab in the pane on the left.
2. Expand the Analysis Files folder.

You can open the active .pcf file, if it is not already open, or one that is not active. An active .pcf file appears in bold type.

3. Double-click the name of the .pcf file that you want to open. Optionally, right-click the file name and choose **Open**.

The information from the .pcf file is loaded into Power Calculator, and the name of the file appears in the title bar.

### See Also

- ▶ [“Adding Power Calculator Files to the Analysis Files Folder” on page 420](#)
- ▶ [“Setting a Power Calculator File as the Active Analysis File” on page 421](#)

## Opening an Existing Power Calculator File in the Stand-Alone Power Calculator

If you have opened Power Calculator as a stand-alone tool, you can open an existing Power Calculator file (.pcf) from the File menu.

### To open an existing .pcf file from the stand-alone Power Calculator:

1. Choose **File > Open File**.
2. Navigate to the desired .pcf file and click **Open**.

If you have unsaved changes in the currently loaded .pcf file, a Confirm message box will appear. Click **Yes** if you want to save the changes. Otherwise, click **No**.

If an .udb file is associated with the selected .pcf file, Power Calculator loads the project in calculation mode. If no .udb file is associated with the .pcf file, Power Calculator loads the new project in estimation mode.

### See Also

- ▶ [“Saving a Power Calculator File” on page 418](#)
- ▶ [“Creating a New Power Calculator File in the Stand-Alone Power Calculator” on page 417](#)

## Adding Power Calculator Files to the Analysis Files Folder

The Radiant software enables you to add existing Power Calculator files (.pcf) to the Analysis Files folder. This gives you easy access to the .pcf files in your project and enables you to designate a .pcf file as the active one for a design implementation. When a .pcf file has been set as the active analysis file, it will be loaded into Power Calculator automatically when you close Power Calculator and reopen it.

You can add a .pcf file to the Analysis Files folder before or after starting Power Calculator.

### To add an existing .pcf file to the Analysis Files directory:

1. In the Radiant software, select the File List tab in the pane on the left.
2. Right-click the Analysis Files folder and choose **Add > Existing File** from the pop-up menu.
3. In the dialog box, select **Analysis Files (\*.pcf)** in the Files of Type box.
4. Navigate to the directory that contains the desired .pcf file, select it, and click **Add**.



The file is added to the Analysis Files folder. You can double-click the .pcf file to open it in Power Calculator.

### Note

When you add a .pcf file to the Analysis Files folder, it is not automatically set as the Active .pcf file for the implementation. You must [set](#) it as the active file manually.

### See Also

- ▶ [“Removing Power Calculator Files from the Analysis Files Folder” on page 421](#)
- ▶ [“Creating a New Power Calculator File in the Radiant Software” on page 416](#)
- ▶ [“Setting a Power Calculator File as the Active Analysis File” on page 421](#)

## Removing Power Calculator Files from the Analysis Files Folder

There may be times when you want to remove files from the Analysis Files folder to make room for others. When you remove a Power Calculator File (.pcf) from the Analysis Files folder, it is not deleted from your project. You can always add it back later.

### To remove a .pcf file from the Analysis Files folder:

- ▶ Right-click the file name and choose **Remove**.

The file is removed from the Analysis Files list, but it remains in your project directory.

## Setting a Power Calculator File as the Active Analysis File

In order for Power Calculator to load a specific Power Calculator File (.pcf) each time it opens, you must designate the .pcf file as the active one for the implementation. This is done automatically when you create a new .pcf file. If no .pcf file has been set as the active one, Power Calculator will extract information from the placed and routed .udb file when you open Power Calculator. If no .udb file is available, it will display default resource information based on the targeted device.

### To set a .pcf file as the active analysis file:

1. Make sure that you have added the desired .pcf file to the [Analysis Files folder](#).
2. Right-click the desired .pcf file in the Analysis Files folder and choose **Set as Active PCF**.

The Radiant software displays the .pcf file name in bold type, indicating that it is the active power analysis file for the current design implementation. The Radiant software does not automatically load the newly activated file into Power Calculator if a different .pcf file is already open.

3. To open the active .pcf file, if a previous file is already open, double-click the activated .pcf file name in the Analysis Files folder; or right-click it and choose **Open**.

When you close and reopen Power Calculator for the current design project, the active .pcf file will be loaded.

## Changing an Active Power Calculator File to Inactive

It is not required that a Power Calculator File (.pcf) be set as the active one for a design implementation. You can always open a .pcf file manually from the File menu or from the Analysis Files folder.

### To change an active Power Calculator File to inactive:

- ▶ Right-click the name of the active .pcf file in the Analysis File folder and choose **Set as Inactive** from the pop-up menu.

When you close and reopen Power Calculator, it displays default information or information from the routed .udb file. "Untitled" appears in the title bar.

## Entering Data

When you have a design open in the Radiant software, Power Calculator extracts information such as device, package, part, performance grade, and operating conditions. You can modify the device settings and the editable cells on any page. If Power Calculator is in calculation mode, making changes reverts it to estimation mode. There are only a few settings, listed below, that you can modify without reverting to estimation mode:

- ▶ activity factor
- ▶ enable factor
- ▶ Frequency
- ▶ Voltage
- ▶ Dynamic Power Multiplier
- ▶ Ambient Temperature
- ▶ Performance Grade
- ▶ Operating Condition
- ▶ Process Type

You can revert to calculation mode after making many types of changes, if they have not yet been saved to the .pcf file.

Power Calculator allows you to enter data directly in the editable cells. It also enables you to make global changes to frequency, activity factor by changing the default setting in the Frequency Settings, Activity Factor, and Enable Factor Settings dialog boxes. You can use a simulation file to populate Frequency, AF (activity factor) cells.

### See Also

- ▶ [“Software Mode” on page 405](#)
- ▶ [“Reverting to Calculation Mode” on page 427](#)
- ▶ [“Power Calculator Pages” on page 408](#)

## Editing Cells

Power Calculator includes built-in design rule checks. It automatically checks values that you enter into editable cells to ensure that they do not violate design rules. If you attempt to enter an inappropriate value in the Type, # I/P, # O/P, or # Bidi cell in the I/O page, Power Calculator will block the invalid value and display the previous value in the cell.

Power Calculator also provides tool tips that display the valid range of values for an editable cell. To ensure that the value you are entering is a valid one, hold your mouse over the cell to view the tool tip.

Most cells on Power Calculator pages are editable text cells that enable you to type a modified value. Others cells, such as the Device and Power parameters sections of the Power Summary page, contain visible drop-down menus for making a selection. Still others, such as those in the Type column on the I/O page, contain hidden drop-down menus that become visible when you double-click a cell.

### To edit a cell:

- ▶ Depending on the type of cell you are editing, do one of the following:
  - ▶ Double-click the editable cell, type a new value, and then press **Enter** or click anywhere outside the cell.
  - ▶ Select a value from the visible drop-down list.
  - ▶ Double-click the cell and select a value from the drop-down list that appears.

Power Calculator calculates the results automatically and displays them. It also updates the Report page.

### See Also

- ▶ [“Power Calculator Pages” on page 408](#)
- ▶ [“Color Coding of Cells” on page 415](#)
- ▶ [“Cutting and Pasting Cell Contents” on page 425](#)

- ▶ [“Copying and Pasting Cell Contents” on page 426](#)
- ▶ [“Changing Values Automatically” on page 426](#)

## Editing Pages

You can change the settings and values on any Power Calculator page and, if desired, save the results to a separate Power Calculator File (.pcf) in the Analysis Files folder.

### To edit Power Calculator pages:

1. On the Power Summary page, modify any settings in the Device section as desired.

When you select a different device, Power Calculator compares the design's requirements against the available resources in the selected device. If the selected device is not suitable for the design—for example, if the number of LUTs in the design exceeds those available in the device, the number can't be entered, user may move cursor to the editable cell, and refer to the value range to reduce the design size to fit the smaller device.

2. In the Device Power Parameters section of the Power Summary page, set the Process Type option, which specifies the process corners or conditions under which the device was manufactured. It can be one of the following:
  - ▶ Typical – specifies typical conditions to reflect the typical amount of current consumed by the circuit.
  - ▶ Worst – specifies fast conditions to reflect the maximum amount of current consumed by the circuit.
3. In the Environment section of the Power Summary page, do the following:
  - ▶ Click **Thermal Profile** to select a thermal impedance model or enter your own Effective Theta-JA value.
  - ▶ Select from User Entered Tj and Computed Tj to enter junction temperature directly.

The Computed Tj is the default when the Environment section is displayed. Change the ambient temperature, as desired.

When User Entered Tj is selected:

- ▶ Thermal Profile is disabled.
- ▶ Ambient Temperature is hidden.
- ▶ Junction Temperature is enabled and allow us to enter values.
- ▶ Effective Theta-JA is not applicable and displays N/A.

See [“Controlling Operating Temperature” on page 432](#).

4. In the Voltage/Dynamic Power Multiplier section, enter new values, as desired, for voltage and DPM.

The voltage is the estimated power consumption by power supply. DPM is the derating factor for the dynamic portion of the power consumption.

See [“Voltage/Dynamic Power Multiplier \(DPM\)” on page 407](#).

5. Select other tabs and enter values into the editable cells of the other Power Calculator pages. The number and types of pages varies according to the device family.
6. Save your changes.

#### See Also

- ▶ [“Power Calculator Pages” on page 408](#)
- ▶ [Saving a Power Calculator File](#)
- ▶ [“Adding Power Calculator Files to the Analysis Files Folder” on page 420](#)
- ▶ [“Setting a Power Calculator File as the Active Analysis File” on page 421](#)
- ▶ [“Editing Cells” on page 423](#)

## Adding and Deleting Clock Rows

You can easily add and delete clock rows on the Power Calculator pages.

#### To add a clock row to a page:

1. Right-click inside the desired table and choose **Add Row** from the pop-up menu.
2. Enter the appropriate data in the cells that have a white or light yellow background. Some columns with a light yellow background, such as Type, offer drop-down menus from which you can select settings.

#### To delete a clock row from a page:

- ▶ Right-click in the row that you want to delete and choose **Remove Row**.

#### See Also

- ▶ [“Editing Cells” on page 423](#)

## Cutting and Pasting Cell Contents

You can cut the contents of a cell in a clock row and paste them in a cell in the same row or another row.

#### To cut and paste cell contents:

1. Double-click the desired cell to select its contents, and then right-click.
2. From the pop-up menu, select **Cut**. Alternatively, you can press **Ctrl+x**.

You cannot cut the contents of any cells or columns that include a drop-down menu or text that is read-only.

3. Double-click the cell into which you want to paste the contents that you have cut, and then right-click.
4. From the pop-up menu, select **Paste**. Alternatively, you can press **Ctrl+v**.

**See Also**

- ▶ [“Editing Cells” on page 423](#)
- ▶ [“Changing Values Automatically” on page 426](#)

## Copying and Pasting Cell Contents

You can copy the contents of a cell in a clock row to a cell in the same row or another row.

**To copy and paste the contents of a cell:**

1. Double-click the desired cell to select its contents, and then right-click.
2. From the pop-up menu, select **Copy**. Alternatively, you can press **Ctrl+c**.
3. Double-click the cell into which you want to paste the contents that you have copied, and then right-click.
4. From the pop-up menu, select **Paste**. Alternatively, you can press **Ctrl+v**.

**See Also**

- ▶ [“Editing Cells” on page 423](#)
- ▶ [“Changing Values Automatically” on page 426](#)

## Changing Values Automatically

When you change values on any of the pages, Power Calculator recalculates the results automatically. For example, when you change the frequency of a clock in one cell and press Enter, Power Calculator automatically changes the frequency for that clock in all Frequency cells.

You can also use the Activity Factor Settings and Frequency Settings dialog boxes to make changes to all frequency, activity factor cells.

**See Also**

- ▶ [“Changing the Global Default Activity Factor” on page 427](#)
- ▶ [“Changing the Global Default Frequency Setting” on page 428](#)
- ▶ [“Importing a Value Change Dump \(.vcd\) File” on page 428](#)

## Reverting to Calculation Mode

After you have made changes that causes the software to run in estimation mode, Power Calculator allows you to revert to calculation mode, under the following circumstances:

- ▶ The changes you made have not been saved to the .pcf file.

### To revert to calculation mode from estimation mode:

1. Choose **Edit > Revert to Calculation Mode**.
2. In the Confirm dialog box, click **Yes** to confirm that you want to discard all the changes that you made in estimation mode.

Power Calculator removes all the changes you made and reverts to the settings in the .pcf file.

### See Also

- ▶ [“Software Mode” on page 405](#)

## Changing the Global Default Activity Factor

Power Calculator automatically assigns a default activity factor in the cells of the pages that display an activity factor, such as AF (%), or that use an activity factor in calculations, such as Input AF (%). These default values appear in blue font. You can use the Edit menu to globally change this default activity factor.

### To globally change the default activity factor:

1. Choose **Edit > Activity Factor Settings**.
2. In the Power Calculator - Activity Factor Settings dialog box, enter the new activity factor in the **Activity Factor Default** text box.
3. Click **OK**.

All the default activity factors appearing in blue font are changed to the new activity factor. Power Calculator automatically saves the new default.

If you manually change an activity factor in only one cell, the font becomes black to indicate that it is not a default value.

You can use a .vcd file to populate the cells that display or use activity factors. The resulting values are not considered defaults and therefore appear in black font.

### See Also

- ▶ [“Activity Factor Calculation” on page 403](#)
- ▶ [“Importing a Value Change Dump \(.vcd\) File” on page 428](#)

## Importing a Value Change Dump (.vcd) File

Power Calculator enables you to import a value change dump (.vcd) file of simulation results into your project. Normally, you would import a .vcd file only when you want the Frequency, AF (activity factor) cells on Power Calculator pages to be populated with frequency and activity factor data from the .vcd file.

To ensure that Power Calculator populates the Frequency and AF cells with the VCD information, make sure that you follow these requirements:

- ▶ The .vcd file should be in the format of gate-level simulation, and it should match the design.
- ▶ A post-PAR timing simulation netlist must be used for name matching. You cannot use the RTL design.
- ▶ A stimulus must be used in the simulator that actually toggles the signals you are interested in; otherwise, you will see no difference in Power Calculator after the VCD is read.

### To import a .vcd file into your project:

1. Choose **Edit > Open Simulation File** to open the Power Calculator – Open Simulation File dialog box.
2. In the VCD File box, type or select the path and name of the .vcd file that you want to open.
3. In the Module Name in VCD box, specify the name of the module in the .vcd file from which to take the frequency and activity factor data.
4. Select the Case Sensitive option if the name of the .vcd file to be imported is case-sensitive.
5. Click **OK**.

Power Calculator Frequency and AF cells are now populated with the data from the .vcd file.

### See Also

- ▶ [“Changing the Global Default Frequency Setting” on page 428](#)

## Changing the Global Default Frequency Setting

You can globally change the default frequency values for the clocks listed in the Power Calculator pages. These default values appear in blue font in the Freq. (MHz) columns.

You can change this global frequency value in one of two ways:

- ▶ Specify a value in the Frequency Settings dialog box.



- ▶ In the Frequency Settings dialog box, select **Use Frequency TWR** options to import frequencies from the timing report.

---

**Note**

The frequency of some clocks, such as those that have high dependency on user constraints and usage, cannot be imported by using **Use Frequency TWR** options. In cases where clock frequency cannot be imported, you must specify a value.

---

**To globally change the default frequency setting by specifying a value:**

1. Choose **Edit > Frequency Settings**.
2. In the Frequency Settings dialog box, enter the new frequency in the **Frequency Default** cell, in megahertz.

The default is 0 megahertz.

3. Click **OK**.

**To globally change the default frequency setting by using values from the .twr file:**

1. Choose **Edit > Frequency Settings**.
2. In the Power Calculator - Frequency Settings dialog box, select one of the following options in the Frequency TWR box. For all of these options, make sure timing report contains the names of the clocks in the pages for which you want default frequency values.
  - ▶ **Minimum of Constraint And Timing** – Specifies that the default frequency in the Frequency (MHz) column of the Power Calculator pages be taken from the lesser of the constrained frequency or the actual frequency in timing report. The frequency is in megahertz.
  - ▶ **Always Use Constraint**– Specifies that the default frequency in the Frequency (MHz) column of the Power Calculator pages be taken from the constrained frequency in timing report. The frequency is in megahertz.
  - ▶ **Always Use Timing**– Specifies that the default frequency in the Frequency (MHz) column of the Power Calculator pages be taken from the actual frequency in timing report. The frequency is in megahertz.
3. Click **OK**.

Power Calculator now populates the Frequency cells of its pages with the frequency data from the timing report.

---

**Note**

The value you entered in the Frequency Default cell takes precedence over the options in the Frequency TWR box.

---

**See Also**

- ▶ [“Inputs” on page 402](#)

## Estimating Resource Usage

Power Calculator allows you to specify an estimate of resources that the design will use, for the purpose of power analysis. The estimate can be based on design type or on component utilization. Based on your selections, Power Calculator immediately displays the number of resources that will be utilized for each type.

### To estimate resource usage based on design type:

1. Choose **Edit > Resource Settings**.
2. In the dialog box, select **Specify Resource by Design Type**.
3. Select the design type from the drop-down menu.

Power Calculator calculates the resource usage based on the design and displays the utilization in the bottom portion of the dialog box.

4. Click **OK**.

### To estimate resource usage based on component utilization:

1. Choose **Edit > Resource Settings**.
2. In the dialog box, select **Specify Resource by Component Utilization**.
3. Do one or both of the following:

- ▶ Select a Small, Medium, or Large option based on the design size.

Power Calculator displays a percentage of Logic, I/O, and EBR based on your selection.

- ▶ Select a percentage from the Logic(%), I/O(%), and EBR(%) drop-down menus.

Power Calculator calculates the resource usage based on your selections and displays the utilization in the bottom portion of the dialog box.

4. Click **OK**.

### See Also

- ▶ [“Estimating Routing Resource Usage” on page 430](#)

## Estimating Routing Resource Usage

You can estimate the amount of routing resources that your design will use for the purpose of power analysis.

### To estimate routing resource usage:

1. Choose **Edit > Estimation Mode Settings**.

The Power Calculator - Estimation Mode Settings dialog box appears.

2. From the Routing Resource Utilization drop-down menu, select the amount of routing resources that you expect your design to use.

- ▶ **Low** – Uses a small amount of routing resources.

Select this option if you have a datapath oriented FPGA architecture with low fanout nets.


- ▶ **Medium** – Uses an average amount of routing resources. This is the default setting

Select this option if your design is a mix of datapath and control style logic. If unsure of your design style, retain the Medium default setting.

- ▶ **High** – Uses a large amount of routing resources.

Select this option if your design has high numbers of high fanout nets that span large areas of the FPGA.

These settings are further illustrated in the figure below.

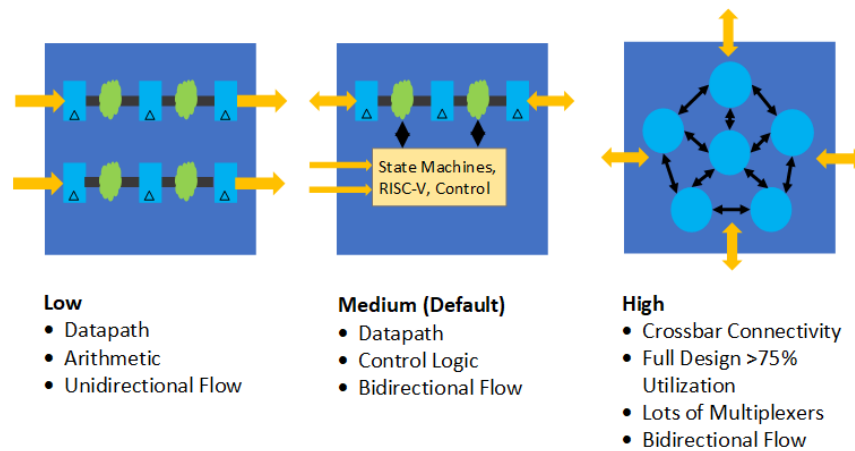

3. Click **OK**.

#### See Also

- ▶ [“Estimating Resource Usage” on page 430](#)

## Running Immediate Calculation

The Calculate button allows you to run power calculation with a mouse-click after you have made changes to your power calculation.

#### To enable the Calculate button:

1. Choose **Edit**, then uncheck **Calculate Immediately**. The Calculate button appears on the top-right of the Power Summary page.

#### Note:

Any changes cause a note **“Power result is dirty. Manually click ‘Calculate’ button to run power calculation.”** shown in red color.

2. Click the **Calculate** button. The power calculation result will be updated, and the red note will disappear.

## Controlling Operating Temperature

Minimizing the device's operating temperature is critical to reducing power consumption.

A device has two parts: the die, which is the silicon inside the device, and the package, which is the outer shell. Each die-package combination has a thermal resistance value (often referred to as  $\theta$ ), which is a measure of how well the combination can dissipate heat. Lower values indicate better heat dissipation for the device.

Thermal impedance is the cumulative individual thermal resistances of a defined network. Power Calculator offers different models that provide ways to calculate the thermal impedance for a given device when it is mounted on the board. These models cover scenarios related to board sizes, air flows, and heat sinks that affect the thermal impedance. You can use these models to calculate the thermal impedance for the scenario that you choose.

You can choose the thermal impedance models by selecting **Computed  $T_J$**  and clicking the **Thermal Profile** button in the Environment section at the top right of the Power Summary page.

These thermal impedance models use the following terminology:

- ▶ Junction temperature – the temperature of the die in the device package, in degrees Celsius. You can adjust the junction temperature by choosing a model that applies a heat sink and changes the air flow value. Junction temperature is also affected by the package that you select in the Package Type box. In addition, the changes that you enter in many of the editable (white and turquoise) cells on the Power Summary page affect junction temperature.
- ▶ Heat sink – any material or object that dissipates unwanted heat from a device by absorbing it and conducting it away to a surface from which it dissipates into its surroundings. The reduction of junction-to-ambient thermal impedance depends on different factors, such as the speed and direction of the air flow over the heat sink and the materials used to attach the heat sink to the package. For heat-sink properties and proper attachment methods, contact your heat-sink manufacturer for specifications.
- ▶ Air flow – the movement of air around the device in a package to cool it. It is measured in linear feet per minute (LFM). The higher the air flow value you select, the greater the cooling effect on the device.
- ▶ Ambient temperature – the expected operating temperature, in degrees Celsius, of the medium surrounding a device in a package.
- ▶ Theta JA – the thermal impedance between the silicon die and the ambient air within a JEDEC-defined environment. The boards used to measure these values have four layers, and their size is defined by JEDEC specifications.

- ▶ Effective Theta JA – similar to Theta JA, but defined as the sum of all the package and board thermal resistances outside of a JEDEC-defined environment. It indicates how well the heat dissipates from the die to the ambient (air) for a particular thermal network as a whole outside of a JEDEC-defined environment.
- ▶ Theta JB – indicates how well the heat dissipates from the junction on the silicon die to the board.
- ▶ Theta JC – indicates how well the heat dissipates from the junction of the die to the package case in which it is enclosed, as defined by the JEDEC specifications.
- ▶ Theta BA – indicates how well the heat dissipates from the board to the ambient (air).
- ▶ Theta CS – indicates how well the heat dissipates from the package case to the heat sink. It is a measure of the thermal resistance of the interface material that makes contact between the package case and the heat sink attached to the package. It can be thermal grease, double-sided sticky tape, glue, or phase-shift material.
- ▶ Theta SA – indicates how well the heat dissipates from the heat sink to the ambient (air).

#### See Also

- ▶ [“Power Calculator Pages” on page 408](#)

## Selecting a Thermal Impedance Model

You can experiment with various board sizes, heat sinks, and air flow settings to select a thermal impedance model for your design. The choice of board affects the Theta JB and Theta BA values, and the heat sink and air-flow selections affect the Theta SA and Theta JA values.

#### Note

---

The current values provided with the thermal models are averages of different values, and they are provided as a courtesy. To produce better predictions, it is advised that you submit your own thermal values.

---

#### To select a thermal impedance model:

1. In the Environment section of the Power Summary page, select **Computed T<sub>J</sub>** and click **Thermal Profile**.

The Effective Theta-JA specifies the cumulative thermal impedance of a particular system. This figure is used in calculating the junction temperature (T<sub>J</sub>) of a die in a particular environment according to the following formula:

$$T_J = power * theta\_effective + ambient\_temperature.$$

2. In the Power Calculator - Thermal Profile dialog box, select the source of the effective thermal impedance (effective Theta JA) value:

- ▶ If you want Power Calculator to calculate the effective Theta JA value from the selections that you make in the Board Selection, Heat Sink Selection, and Airflow Selection drop-down menus, choose **Use Thermal Models**.
  - ▶ If you want to provide your own effective Theta JA value, choose **User-Defined Effective Theta-JA**.
3. If you chose Use Thermal Models:
- a. Select the size of the board that to use from the Board Selection drop-down menu:
    - ▶ JEDEC Board (2S2P) – Specifies that a board defined by JEDEC specifications be used. These specifications are based on real boards and measurements conducted in the lab used by Lattice Semiconductor. For packages < 27.0 mm in length, the buried planes are 74.2 mm x 74.2 mm (3" x 3"). For packages larger than or equal to 27.0 mm, the buried planes are 99.6 mm x 99.6 mm (4" by 4"). Power Calculator uses Theta JA or Theta JC, depending on the type of heat sink selection you make in the Heat Sink Selection menu. Theta JA is used only if you choose No Heat Sink. The ThetaJA value is the published value measured in the lab.
    - ▶ Small Board – Specifies that a board that is slightly larger than the JEDEC board be used. The board is assumed to be 6" to 8" square. This setting adds the Theta JB value to the board thermal impedance.
    - ▶ Medium Board – Specifies that a medium board be used, one that is assumed to be 8" to 12" square. This setting adds the Theta JB value to the board thermal impedance.
    - ▶ Large Board – Specifies that a large board be used, one that is assumed to be larger than 14" square. This setting adds the Theta JB value to the board thermal impedance.

---

**Note**

Many factors can affect the actual thermal properties and change the values, including:

- ▶ The number of board layers.
- ▶ Airflow over the board.
- ▶ Number of devices powered up around the device package and their distance from the package.
- ▶ Thickness of the copper and the width of the traces on each layer.
- ▶ Number of thermal vias.
- ▶ Shape and thickness of each power and ground plane below the transfer of heat from the die to the ambient environment.

As a result, users are encouraged to make their own thermal measurements or simulations and use them in Power Calculator to see what kind of junction temperature might result.

---

- b. Select the type of heat sink from the Heat Sink Selection drop-down menu:

- ▶ No Heat Sink – Specifies that no heat sink be used. Theta JA is used, and you must choose the air flow from the Airflow Selection menu. The No Heat Sink setting is the default.
  - ▶ Low-Profile Heat Sink – Specifies that a short heat sink be used.
  - ▶ Medium-Profile Heat Sink – Specifies that a medium heat sink be used. This setting adds the Theta JC value to the Heat Sink thermal impedance.
  - ▶ High-Profile Heat Sink – Specifies that a tall heat sink be used.
  - ▶ Custom-Profile Heat Sink – Enables you to specify your own heat-sink value in the Theta-SA for Custom Heat Sink box. The Airflow Selection option is not available when you select Custom-Profile Heat Sink.
- c. Select the air flow in linear feet per minute (LFM) from the Airflow Selection drop-down menu:
- ▶ 0 LFM
  - ▶ 200 LFM
  - ▶ 500 LFM

If you use a heat sink, the 0 LFM setting is not available.

The Airflow Selection option is not available when you select Custom-Profile Heat Sink from the Heat Sink Selection menu.

4. If you chose User-Defined Theta-JA Effective, enter your effective thermal impedance value in the Effective Theta-JA box. Values entered must be greater than 0.

This box is not available if you selected Use Thermal Models.

5. Click **OK**.

The new effective Theta JA value now appears in the Effective Theta-JA box in the Environment section of the Power Summary page.

#### See Also

- ▶ [“Controlling Operating Temperature” on page 432](#)
- ▶ [“Changing the Ambient Temperature” on page 435](#)

## Changing the Ambient Temperature

The ambient temperature is the expected operating temperature, in degrees Celsius, of the medium surrounding a device in a package. You can select an ambient temperature in the range of -40 to 125 degrees Celsius.

#### To change the ambient temperature:

1. In the Environment section of the Power Summary page, select **Computed T<sub>J</sub>**.

2. Enter a value, in degrees Celsius, in the Ambient Temperature box and press **Enter** or click anywhere outside the cell.

The value entered must be between -40 and +125 degrees Celsius. The default value is 25 degrees Celsius for all devices.

When you change the value in the Ambient Temperature box, Power Calculator updates the following cells:

- ▶ Junction Temperature.
- ▶ Values in the Static (A) and Total (A) columns of the Current by Power Supply and Power by Power Supply sections.
- ▶ The totals in the Power by Block Column.

If you enter a value that is beyond the commercial, industrial, or automotive device limits, you will receive an error message that displays the range of valid values.

#### See Also

- ▶ [“Controlling Operating Temperature” on page 432](#)
- ▶ [“Selecting a Thermal Impedance Model” on page 433](#)

## Changing the Junction Temperature

The junction temperature is the temperature of the die during operation. A higher junction temperature increases the chances of having thermal issues. Check the valid junction temperature range as specified in Operating Conditions in your device data sheet.

#### To change the junction temperature:

1. In the Environment section of the Power Summary page, select **User Entered  $T_J$** .
2. Enter a value, in degrees Celsius in the **Junction Temperature (C)** box and press **Enter** or click anywhere outside the cell.

The value entered must be with the valid range in degrees Celsius. The default value is 25 degrees Celsius for all devices.

Once you select **User Entered  $T_J$** , Thermal Profile is disabled, Ambient Temperature (C) is hidden, and Effective Theta-JA(C/W) is N/A, which means the value is zero.

If the junction temperature of the die is not within the valid temperature ranges, the performance, reliability, and functionality can get affected. If you enter a value that is beyond the commercial, industrial, or automotive device limits, you will receive an error message that displays the range of valid values.

#### See Also

- ▶ [“Controlling Operating Temperature” on page 432](#)



- ▶ [“Selecting a Thermal Impedance Model” on page 433](#)

## Generating Power Consumption Reports

In addition to the automatically generated reports from power settings, Power Calculator also provides graphs of power consumption and generate a comma-separated value file (.csv) from the command line.

## Generating Power Graphs

Power Calculator can create graphs showing how power consumption is affected when you vary the voltage, temperature, and clock frequency in the design. You can generate three default power graphs on the Graph page:

- ▶ Power vs. Supply Voltage
- ▶ Power vs. Ambient Temperature
- ▶ Power vs. Frequency

Each graph displays a typical and worst case plot. You can select the X axis and Y axis for each graph.

Graphs are only generated when you select the Graph tab. During graph generation, you cannot select a different tab until the calculations are finished. If you change the information in any other page that alters the power, the graphs will be regenerated when you again select the Graph tab. If you do not change any power information, the graphs will not be regenerated.

### To generate the Power vs. Supply Voltage graphs:

1. Choose **Edit > Graph Settings**.
2. In the Power by Section part of the Graphs Settings dialog box, set the following options:
  - a. In the Y Axis box, select Total Power or the specific type of block power to display, such as I/O or Block RAM, to place on the Y axis of the graph.
  - b. In the X Axis box, select the type of supply voltage to place on the X axis of the graph.
  - c. In the Lower Limit box, enter the lower boundary of the voltage range on the X axis. The lower limit can be 5 percent lower than the nominal supply value.
  - d. In the Upper Limit box, enter the upper boundary of the voltage range on the X axis. The upper limit can be 5 percent higher than the nominal supply value.

- e. In the Resolution box, enter the step in which the supply voltage values on the X axis should appear. The voltage supply step is limited to a resolution of .01.
3. Click **OK** to close the dialog box and apply the settings.
4. Click the Graph tab to see the resulting charts.

**To generate the Power vs. Ambient Temperature graphs:**

1. Choose **Edit > Graph Settings**.
2. In the Power by Temperature part of the Graphs Settings dialog box, set the following options:
  - a. In the Y Axis box, select Total Power or the type of block power, such as I/O or Block RAM, to place on the Y axis of the graph.
  - b. In the X Axis box, select **Ambient Temperature** for the X axis of the graph. Temperature is in degrees Celsius.
  - c. In the Lower Limit box, enter the lower boundary of the temperature range on the X axis. The range limits are determined by the device's operating condition:
    - ▶ Industrial: –40 through 105
    - ▶ Commercial: 0 through 85
    - ▶ Automotive: –40 through 125
  - d. In the Upper Limit box, enter the upper boundary of the temperature range on the X axis. The range limits are determined by the device's operating condition:
    - ▶ Industrial: –40 through 105
    - ▶ Commercial: 0 through 85
    - ▶ Automotive: –40 through 125
  - e. In the Resolution box, enter the step in which the temperature values on the X axis should appear. The temperature step is limited to resolution of 10 degrees Celsius.
3. Click **OK** to close the dialog box and apply the settings.
4. Once the graphic data has been prepared, click the Graph tab to see the resulting charts.

**To generate the Power vs. Frequency graphs:**

1. Choose **Edit > Graph Settings**.
2. In the Power by Frequency part of the Graphs Settings dialog box, set the following options:
  - a. In the Y Axis box, select Total Power or the specific type of block power, such as I/O or Block RAM, to place on the Y axis of the graph.
  - b. In the X Axis box, select the clock to place on the X axis of the graph. It can be any of the clocks listed on the Clocks page.

- c. In the Lower Limit box, enter the lower boundary of the frequency range on the X axis. The lower boundary is limited to 0 MHz.
  - d. In the Upper Limit box, enter the upper boundary of the frequency range on the X axis. The upper boundary is limited to 10000 MHz.
  - e. In the Resolution box, enter the step in which the frequency values on the X axis should appear. The default frequency increment is 20 MHz.
3. Click **OK** to close the dialog box and apply the settings.
  4. Once the graphic data has been prepared, click the Graph tab to see the resulting charts.

## Viewing the Power Calculator Report

The report page contains a summary of the estimated power consumption or current consumption data calculated by the Power Calculator. It is available in text (ASCII), HTML, and .csv formats, and it is updated each time you make a change to any of the data in the editable cells.

### To view the Power Calculator report:

- ▶ To view the results in text format, click the Report tab.
- ▶ To view the results in HTML format, click **View HTML Report**.
- ▶ To view the results in .csv format, click **Generate CSV Report**.

### See Also

- ▶ [“Entering Data” on page 422](#)
- ▶ [“Power Calculator Pages” on page 408](#)

## Generating a Power Calculator Report in CSV Format

A consolidated report of data in all the Power Calculator pages can be generated in .csv format. This allows you to analyze the results in an external spreadsheet application that supports CSV.

### To generate a Power Calculator report in CSV format:

1. Click the **Generate CSV Report** button at the upper right-hand corner of the Power Calculator window.
2. In the Generate CSV Report dialog box, browse to the target directory for the report.
3. Type a name in the File name box and click Save.

## Chapter 10

# Using IBIS Model Files

Signal integrity analysis enables characterization of interconnect discontinuities and behaviors. You can use signal integrity analysis models to perform a simulation on your board or to trace setup before laying out the board to look for signal integrity issues, such as crosstalk, reflection, ringing, overshoot, undershoot, impedance mismatch, and line termination.

Lattice Semiconductor supports signal integrity (SI) analysis at the PC board level using Input/Output Buffer Information Specification (IBIS) format models.

## IBIS Overview

IBIS is a behavioral model used for simulation. It was developed originally by Intel in the early 1990s and has become a device-modeling standard that is regulated and developed by a forum of electronic design automation (EDA) vendors, computer manufacturers, semiconductor vendors, universities, and end users.

IBIS is a standard supported by all popular signal integrity analysis tool vendors, including Cadence, Mentor Graphics, and Zuken.

IBIS models help you analyze signal integrity and electromagnetic compatibility (EMC) on printed circuit boards. Unlike conventional behavioral simulation models that contain such modeling elements as schematic symbols and polynomial expressions, IBIS models consist of tabular data. This tabular data contains current and voltage values in the output and input pins, as well as the voltage and time relationship at the output pins under rising or falling switching conditions. The IBIS model data represents realistic device behavior, based on collected data at varied operating conditions. IBIS models provide this data without disclosure of any proprietary design information.

IBIS provides more accurate models because it accounts for non-linear aspects of the I/O structures, the ESD structures, and the package parasitics. It has several advantages over other traditional models such as SPICE, including faster simulation times and no non-convergence problems. Finally, IBIS can be run on nearly any industry-wide platform because of an almost universal EDA vendor support for the IBIS standard.

An IBIS model file is not an executable; it is an ASCII file of all the pertinent data that represents a device's electrical behavior and can be used in a simulator.

For detailed and updated information about IBIS, visit the [IBIS Open Forum](#) website.

## Lattice Semiconductor IBIS Model Files

Lattice provides two types of IBIS model files for use in your project:

- ▶ Design-specific IBIS models that you can generate from within your Radiant project.
- ▶ General-purpose IBIS models based on your device, which are available in the Radiant installation folder or from the specific device web page in the Lattice website.

Both types can be used on various EDA tools supporting the IBIS standard.

Design specific IBIS models that are generated within Radiant software represent the behavior of the input/output buffers based on the I/O standard and settings of the design. The generated IBIS files include the package parasitics information such as resistance, inductance, and capacitance that are specific to the design, resulting in simulation that may be more precise.


General purpose IBIS models are used for common device families and not specific to any particular design. These are ideal for initial simulations or when specific design details are not yet available.

## Generating Design-Specific IBIS Models in the Radiant Software

IBIS generates .ibs and .pkg files for the design.

You can generate your own IBIS models by performing the following steps:

1. In Task Detail view, select the **IBIS Model** option under Export Files.

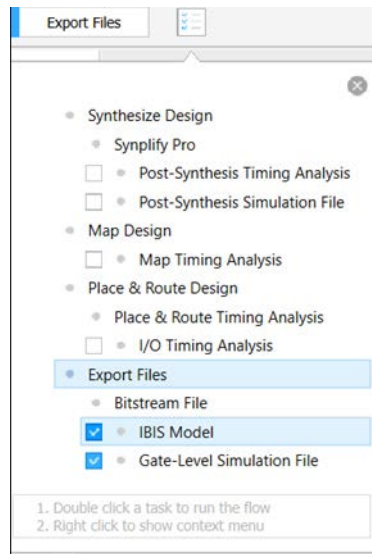

Click **Export Files** to run the whole process.

2. A **.pkg** and a **.ibs** file will be created in your project directory after the process has been completed.

- ▶ .ibs file – this process generates a design-specific model file *project\_name.ibs* in your project directory.
- ▶ .pkg file – IBIS generation copies the correct .pkg file from *<install\_dir>/cae\_library/ibis* folder to your project directory.

For example, if you are using the following device:

- ▶ Family: LIFCL (CrossLink-NX)
- ▶ Device: LIFCL-40
- ▶ Package: CABGA400

The **lifcl-40-cabga400.pkg** file from the Radiant install directory gets copied to the location where your project is stored.

3. If you are using the Avant device, IBIS incorporates sysCONFIG pin data to the **Pin** column of the generated. ibs file. The CFG (Configuration) of the pin is listed in the **signal\_name** column.

A pin cannot be used in designs when it is being used by sysCONFIG.

| [Pin] | signal_name | model_name            | R_pin | L_pin | C_pin |
|-------|-------------|-----------------------|-------|-------|-------|
| AA2   | clk         | lvc180axxcxaaahaaain  |       |       |       |
| V21   | reset_n     | lvc180axxcxaaahaaain  |       |       |       |
| M24   | c[0]        | lvc180sr50aaaaahaaou  |       |       |       |
| N23   | c[1]        | lvc180sr50aaaaahaaou  |       |       |       |
| N24   | c[2]        | lvc180sr50aaaaahaaou  |       |       |       |
| F23   | c[3]        | lvc180sr50aaaaahaaou  |       |       |       |
| R23   | c[4]        | lvc180sr50aaaaahaaou  |       |       |       |
| T23   | c[5]        | lvc180sr50aaaaahaaou  |       |       |       |
| T21   | c[6]        | lvc180sr50aaaaahaaou  |       |       |       |
| R21   | c[7]        | lvc180sr50aaaaahaaou  |       |       |       |
| M23   | c[8]        | lvc180sr50aaaaahaaou  |       |       |       |
| F24   | c[9]        | lvc180sr50aaaaahaaou  |       |       |       |
| L24   | c[10]       | lvc180sr50aaaaahaaou  |       |       |       |
| L25   | c[11]       | lvc180sr50aaaaahaaou  |       |       |       |
| U23   | c[12]       | lvc180sr50aaaaahaaou  |       |       |       |
| V23   | c[13]       | lvc180sr50aaaaahaaou  |       |       |       |
| F21   | c[14]       | lvc180sr50aaaaahaaou  |       |       |       |
| N21   | c[15]       | lvc180sr50aaaaahaaou  |       |       |       |
| U6    | MDQ1        | lvc180fr50baaaaaaaio  |       |       |       |
| L1    | SDQ1        | lvc180fr50baaaaaaaio  |       |       |       |
| N1    | PROGRAMN    | lvc180axxbbaaaaaaaain |       |       |       |
| U5    | MDQ0        | lvc180fr50baaaaaaaio  |       |       |       |
| K1    | SDQ0        | lvc180fr50baaaaaaaio  |       |       |       |
| P1    | CFGMODE     | lvc180axxbbaaaaaaaain |       |       |       |

Refer to [sysCONFIG Settings](#) for more information about sysCONFIG pins.

# Copying General-Purpose IBIS Models from Radiant Installation Folder

In the Lattice Radiant software, Lattice Semiconductor provides **IBIS (.ibs) model files** for behavioral simulation. IBIS models are located in the following installation directory path in Radiant: `<install_dir>/cae_library/ibis`.

The following table lists all available IBIS model files in the software.

**Table 30: Available Lattice IBIS Models**

| Family  | Lattice Semiconductor IBIS Model Files |
|---------|----------------------------------------|
| iCE40UP | iCE40UP.ibs                            |
| LAV-AT  | lav-at.ibs                             |
| LFCPNX  | lfcpx.ibs                              |
| LFD2NX  | lfd2nx.ibs                             |
| LFMXO5  | lfxo5.ibs                              |
| LIFCL   | lifcl.ibs                              |
| UT24C   | ut24c.ibs                              |
| UT24CP  | ut24cp.ibs                             |

Lattice Semiconductor IBIS models characterize all available devices in a given device family. Files contain multiple data matrices that contain similar data for a given device in the same family.

## Note

The collected IBIS source code data in these files is only representative of how a given Lattice Semiconductor device operates. It is still your responsibility to verify your design for consistency and functionality through the use of formal verification methods. There are no guarantees regarding the use or functionality of the IBIS data in the files listed in the table above.

**Package (.pkg) files** are also included in the `<install_dir>/cae_library/ibis` folder. These files specify each pin's LRC (Lower Right Corner) in order to see the skew between pins in a DDR bus. The following table lists all available .pkg files in the software.



**Table 31: Available Package Files**

| Family | Package Files                                                                                                                                                                                                                                                                                        |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT | lav-at-e70-lfg676.pkg<br>lav-at-e70-lfg1156.pkg<br>lav-at-g70-lfg676.pkg<br>lav-at-g70-lfg1156.pkg<br>lav-at-x70-lfg676.pkg<br>lav-at-x70-lfg1156.pkg                                                                                                                                                |
| LFCPNX | lfcpx-50-asg256.pkg<br>lfcpx-50-bbg484.pkg<br>lfcpx-50-bfg484.pkg<br>lfcpx-50-cbg256.pkg<br>lfcpx-100-asg256.pkg<br>lfcpx-100-bbg484.pkg<br>lfcpx-100-bfg484.pkg<br>lfcpx-100-cbg256.pkg<br>lfcpx-100-lfg672.pkg                                                                                     |
| LFD2NX | lfd2nx-17-csfbga121.pkg<br>lfd2nx-40-cabga196.pkg<br>lfd2nx-40-cabga256.pkg<br>lfd2nx-40-csfbga121.pkg                                                                                                                                                                                               |
| LFMXO5 | lfmxo5-25-bbg256.pkg<br>lfmxo5-25-bbg400.pkg<br>lfmxo5-55T-bbg400.pkg<br>lfmxo5-100T-bbg400.pkg                                                                                                                                                                                                      |
| LIFCL  | lifcl-17-cabga256.pkg<br>lifcl-17-csfbga121.pkg<br>lifcl-17-qfn72.pkg<br>lifcl-17-wlcsp72.pkg<br>lifcl-33u-fccsp104.pkg<br>lifcl-33u-wlcsp84.pkg<br>lifcl-33-wlcsp84.pkg<br>lifcl-40-cabga256.pkg<br>lifcl-40-cabga400.pkg<br>lifcl-40-csbgga289.pkg<br>lifcl-40-csfbga121.pkg<br>lifcl-40-qfn72.pkg |

**Table 31: Available Package Files**

| Family | Package Files        |
|--------|----------------------|
| UT24C  | ut24c40-cabga256.pkg |
| UT24CP | ut24cp100-bbg484.pkg |

## Downloading General-Purpose IBIS Models from the Lattice Website

The same IBIS file available in the Radiant installation folder can be downloaded from the Lattice website.

To download IBIS models from the lattice website, navigate to the **Home > Products > FPGA & CPLD > <Device>** web page. Scroll down to the Documentation section and click **IBIS Model**. The IBIS models available for the device are listed on a table for you to select and download.

### Documentation

| Quick Reference                                                                                                                                                                                                                                                                                                                                                                   | Technical Resources       | Information Resources            | Downloads                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|----------------------------------|-------------------------------------------------------------------------------------------|
| <a href="#">Key Documents</a><br><a href="#">Data Sheet</a><br><a href="#">Application Note</a><br><a href="#">Pin &amp; Package</a>                                                                                                                                                                                                                                              | <a href="#">Schematic</a> | <a href="#">Product Brochure</a> | <a href="#">BSDL Model</a><br><a href="#">Delphi Models</a><br><a href="#">IBIS Model</a> |
| <div> <div> </div> <div> <div>TITLE ▾</div> <div>NUMBER ▾</div> <div>VERSION ▾</div> <div>DATE ▾</div> <div>FORMAT ▾</div> <div>SIZE</div> </div> </div>                                                                                                                                                                                                                          |                           |                                  |                                                                                           |
| <div> <div> <input type="checkbox"/> </div> <div> <div>[IBIS AMI] LAV-AT </div> <div>This document would be provided through Technical Support Request after sign-in to the Lattice website. Please refer to Answer Database <a href="#">FAQ 6539</a> for detailed instructions.</div> </div> <div>FPGA-MD-02041</div> <div>0.80</div> <div>12/5/2022</div> <div>WEB</div> </div> |                           |                                  |                                                                                           |
| <div> <div> <input type="checkbox"/> </div> <div> <div>[IBIS] Avant </div> <div></div> </div> <div>FPGA-MD-02039</div> <div>0.83</div> <div>5/9/2024</div> <div>ZIP</div> <div>28.7 MB</div> </div>                                                                                                                                                                               |                           |                                  |                                                                                           |
| <div> <div> <input type="checkbox"/> </div> <div> <div>Select All</div> <div>Notify Me of Changes *</div> <div>Download Selected as Zip File</div> </div> </div>                                                                                                                                                                                                                  |                           |                                  |                                                                                           |

\*By clicking on the "Notify Me of Changes" button, you agree to receive notifications on changes to the document(s) you selected.

For some devices, Lattice provides IBIS-AMI (Algorithmic Modeling Interface) model files through the [Technical Support Answer Database](#).

## Programming the FPGA

After you have created and verified your design, you can use the final output data file to download or upload a bitstream to or from an FPGA device using the Radiant Programmer. Programmer supports serial and microprocessor programming of Lattice devices in PC and Linux environments. A device can be scanned automatically.

The Radiant Programmer is available with the Radiant software, and is also available in a stand-alone version.

Features include:

- ▶ Scan and display contents (.xcf file)
- ▶ Download data files to devices
- ▶ Create/modify/display .xcf file
- ▶ Generate embedded file on the .xcf file
- ▶ Generate Tester serial vector format (.svf) on the .xcf file

The Radiant Programmer uses a Single Document Interface (SDI) where a single .xcf project is displayed per Programmer instance. Opening an additional .xcf file closes the current .xcf file. To open additional .xcf files in stand-alone mode, a separate instance of the Radiant Programmer needs to be launched.

### See Also

- ▶ [Programming the FPGA](#)
- ▶ [File Formats](#)
- ▶ [SPI Flash Support](#)
- ▶ [Using the Radiant Programmer](#)
- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)

- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## About the Programmer Window

The Radiant Programmer offers several views to help you set up your connection to a target board and to program the FPGAs. If an item is not showing, choose it in the View menu.

**Table View** The Programmer window includes a table with the devices in the current Programmer project. Use this table to see information about the devices and to set options for programming them.

- ▶ To adjust what information is showing in the table, go to **View > Columns** and choose what you want to see.
- ▶ To add or remove devices from the table, right-click in the table to see commands for editing the rows.
- ▶ To adjust options for a device, double-click in its row. The Device Properties dialog box opens. This dialog box gives access to many operations and options. See [Device Properties Dialog Box](#).

Each row has a column for the device status. The status indicates whether the operation performed was successful or not. This field is also used for read back operations to display what is read back if the data to display is short. For larger data sets that are read back, a dialog box is displayed.

### System Viewer

The Programmer window includes a schematic showing the devices and how they are connected to the host processor. Double-clicking a device opens the Device Properties dialog box, which gives access to many operations and options. See [Device Properties Dialog Box](#).

### Output

Displays results from Programmer operations similar to the Output view in the Radiant software.

### Tcl Console

Displays the Tcl commands used similar to the Tcl Console view in the Radiant software.

### Cable Setup

A dialog box for identifying the cable connection to the target board and setting options for it. See [Cable Setup Dialog Box](#).

### Embedded Options

A dialog box for specifying options for an embedded design file before generating it. See [Generating Embedded Design Files](#).

### SVF Options

A dialog box for specifying options for an SVF file before generating it. See [Generating Tester Serial Vector Format \(SVF\) Files](#).

## File Formats

Lattice supports the following file formats.

### Data File

A data file can be a hex, or bitstream file. Each of these files is based upon an IEEE programming standard:

### Bitstream

Data files used for configuring volatile memory (SRAM) of our FPGAs.

### Hex

Hexadecimal PROM data files used for Programming into external non-volatile memory, such as parallel or Serial Peripheral Interface (SPI) Flash devices.

### See Also

- ▶ [Programming the FPGA](#)
- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

# SPI Flash Support

The Radiant Programmer, combined with a Lattice cable fly-wire, supports the programming of SPI flash devices. All Lattice FPGA devices supported by the Radiant software support SPI Flash.

Each Lattice FPGA device contains Lattice's Reveal IP. Radiant Programmer uses the JTAG interface to program the SPI flash device. Because of their bitstream compression capability, these FPGAs allow the use of smaller-capacity SPI memory devices.

## Third Party SPI Flash Devices

The following tables list supported third-party SPI flash devices. Click the third-party manufacturer name to link to the table of supported third-party SPI flash devices.

### Note

The Radiant Programmer support for additional third-party SPI flash devices may be added from time to time. To see if support for third-party SPI flash devices has been added, in addition to those listed in the tables below, check the SPI Flash options in the [Device Properties Dialog Box](#).

[Adesto](#)

[Cypress](#)

[ON Semiconductor](#)

[GigaDevice](#)

[ISSI](#)

[Macronix](#)

[Micron](#)

[Spansion](#)

[Winbond](#)

[Return to Top](#)

### Table 32: Adesto

AT25QL641

AT25SF128

AT25SF321

[Return to Top](#)

**Table 33: Cypress**

S25FL064L  
S25FL116K  
S25FL128L  
S25FL127S  
S25FL128S  
S25FL132K  
S25FL164K  
S25FL256L  
S25FL256S  
S25FL512S  
S25FS064S  
S25FS128S  
S25FS256S  
S25FS512S  
S28HS512T

[Return to Top](#)

**Table 34: ON Semiconductor**

LE25U40CMD

[Return to Top](#)**Table 35: GigaDevice**

GD25Q16C  
GD25Q16E  
GD25Q20C  
GD25Q20E  
GD25Q32C  
GD25Q32E  
GD25Q40C  
GD25Q40E  
GD25Q64C  
GD25Q64E  
GD25Q80C  
GD25Q80E  
GD25LQ16C  
GD25LQ16E  
GD25LQ20C  
GD25LQ20E  
GD25LQ32D  
GD25LQ32E  
GD25LQ64C  
GD25LQ64E  
GD25LQ40C  
GD25LQ40E  
GD25LQ80C  
GD25LQ80E  
GD25Q127C  
GD25Q128E  
GD25Q256D  
GD25Q256E  
GD25LB128E  
GD25LQ128D  
GD25LQ128E  
GD25LQ256D



[Return to Top](#)**Table 36: ISSI**

IS25LP064  
IS25LP128  
IS25WP128  
IS25WQ020  
IS25WQ040  
IS25LP016D  
IS25LP032A  
IS25LP032D  
IS25LP256D  
IS25LP064A  
IS25LP064D  
IS25LP080D  
IS25LP128F  
IS25LP512M  
IS25LQ016B  
IS25LQ020B  
IS25LQ032B  
IS25LQ040B  
IS25LQ080B  
IS25WP016D  
IS25WP032D  
IS25WP040D  
IS25WP064A  
IS25WP080D  
IS25WP128F  
IS25WP256D  
IS25WP512M

[Return to Top](#)**Table 37: Macronix**

|            |              |
|------------|--------------|
| MX25L1606E | MX25U8033E   |
| MX25L1635E | MX25V1006F   |
| MX25L2006E | MX25V1035F   |
| MX25L3206E | MX25V1635F   |
| MX25L3233F | MX25V20066   |
| MX25L4006E | MX25V2035F   |
| MX25L6406E | MX25V4035F   |
| MX25L6433F | MX25V8035F   |
| MX25L6435E | MX66L1G45G   |
| MX25L6436E | MX66U1G45G   |
| MX25L6445E | MX25L12833F  |
| MX25L8006E | MX25L12835E  |
| MX25R1035F | MX25L12835F  |
| MX25R1635F | MX25L12836E  |
| MX25R2035F | MX25L12845E  |
| MX25R3235F | MX25L12845G  |
| MX25R4035F | MX25L25635E  |
| MX25R6435F | MX25L25635F  |
| MX25R8035F | MX25L25645G  |
| MX25U1633F | MX25L51245G  |
| MX25U1635F | MX25U12835F  |
| MX25U2033E | MX25U25645G  |
| MX25U3235E | MX25U51245G  |
| MX25U3235F | MX66L51235F  |
| MX25U4033E | MX35LF1G24AD |
| MX25U4035F | MX35LF2G24AD |
| MX25U6435E |              |
| MX25U6435F |              |

[Return to Top](#)**Table 38: Micron**

|          |           |
|----------|-----------|
| M25P10   | N25Q128   |
| M25P20   | N25Q128A  |
| M25P32   | N25Q256   |
| M25P40   | N25Q512   |
| M25P64   | MT25QL01  |
| M25P80   | MT25QL02  |
| M25P128  | MT25QU01  |
| M25PE10  | MT25QU02  |
| M25PE16  | MT35XL01  |
| M25PE20  | MT35XL02  |
| M25PE40  | MT35XU01  |
| M25PE80  | MT35XU02  |
| M25PX16  | N25Q016A  |
| M25PX32  | N25Q032A  |
| M25PX64  | N25Q128A  |
| M25PX80  | MT25QL128 |
| M45PE10  | MT25QL256 |
| M45PE16  | MT25QL512 |
| M45PE20  | MT25QU128 |
| M45PE40  | MT25QU256 |
| M45PE80  | MT25QU512 |
| N25Q032  | MT35XL256 |
| N25Q032A | MT35XL512 |
| N25Q064  | MT35XU256 |
|          | MT35XU512 |

[Return to Top](#)**Table 39: Spansion**

S25FL001D  
S25FL002D  
S25FL004A  
S25FL004D  
S25FL008A  
S25FL016A  
S25FL032A  
S25FL032P  
S25FL040A  
S25FL064A  
S25FL064P  
S25FL128P  
S25FL132K  
S25FL164K  
S25FL204K  
S25FL208K  
S25FL216K

[Return to Top](#)**Table 40: Winbond**

W25Q10  
W25Q20  
W25Q16  
W25Q32  
W25Q64  
W25Q80  
W25Q16FW  
W25Q16JV  
W25Q16JW  
W25Q20CL  
W25Q32FV  
W25Q32FW  
W25Q32JV  
W25Q32JW  
W25Q40CL  
W25Q64FV  
W25Q64FW  
W25Q64JV  
W25Q64JW  
W25Q80DV  
W25X10CL  
W25X20CL  
W25X40CL  
W35N01JW  
W35T51NW  
W25M512JV  
W25Q128FV  
W25Q128FW  
W25Q128JV  
W25Q128JW  
W25Q256FV  
W25Q256JV  
W25Q256JW  
W25Q512JV

[Return to Top](#)

### Third Party SPI Flash Devices (Legacy)

The following tables list supported legacy third-party SPI flash devices. Click the third-party manufacturer name to link to the table of supported legacy third-party SPI flash devices.

#### Note

The Radiant Programmer support for additional legacy third-party SPI flash devices may be added from time to time. To see if support for third-party SPI flash devices has been added, in addition to those listed in the tables below, check the SPI Flash options in the [Device Properties Dialog Box](#).

[Adesto](#)

[AMIC](#)

[Atmel](#)

[Eon Silicon](#)

[Intel](#)

[Macronix](#)

[NexFlash](#)

[Numonyx](#)

[SSTI](#)

[STMicro](#)

[WinBond.](#)

#### Table 41: Adesto

AT25SF041

[Return to Top of Legacy Device List](#)

#### Table 42: AMIC

A25L10P

A25L16P

A25L20P

A25L40P

A25L80P

[Return to Top of Legacy Device List](#)

**Table 43: Atmel**

AT26F004  
AT25DF021  
AT25DF081  
AT25DF161  
AT25DF321  
AT25DF641  
AT25F2048  
AT25F4096  
AT26DF161  
AT26DF321  
AT25DF041A  
AT25FS040N  
AT26DF081A  
AT26DF161A  
AT45DB041D  
AT45DB081D  
AT45DB161D  
AT45DB321D  
AT45DB642D

[Return to Top of Legacy Device List](#)

**Table 44: Eon Silicon**

EN25Q32B

[Return to Top of Legacy Device List](#)

**Table 45: Intel**

25F016S33  
25F160S33  
25F320S33  
25F640S33

[Return to Top of Legacy Device List](#)

**Table 46: Macronix**

MX25L1005  
MX25L1605  
MX25L2005  
MX25L3205  
MX25L6405  
MX25L8005  
MX25U8035  
MX25L12805  
MX25L4005(A)

[Return to Top of Legacy Device List](#)

**Table 47: NexFlash**

NX25P16  
NX25P20  
NX25P32  
NX25P40  
NX25P80



[Return to Top of Legacy Device List](#)

**Table 48: Numonyx**

M25P16  
M25P20  
M25P32  
M25P40  
M25P64  
M25P80  
M25P128  
M25PE16  
M25PE20  
M25PE40  
M25PE80  
M25PX16  
M25PX32  
M25PX64  
M25PX80  
M45PE16  
M45PE20  
M45PE40  
M45PE80  
N25Q032  
N25Q064  
N25Q128  
N25Q128A

[Return to Top of Legacy Device List](#)

**Table 49: SSTI**

SST25VF020  
SST25VF040  
SST25VF080  
SST25LF020A  
SST25LF040A  
SST25LF080A  
SST25VF010A  
SST25VF016B  
SST25VF032B  
SST25VF040B  
SST25VF064C  
SST25VF080B  
SST26VF016B  
SST26VF032B  
SST26VF064B

[Return to Top of Legacy Device List](#)

**Table 50: STMicro**

M25P16  
M25P20  
M25P32  
M25P40  
M25P64  
M25P80  
M25PE16  
M25PE20  
M25PE40  
M25PE80  
M45PE16  
M45PE20  
M45PE40  
M45PE80

[Return to Top of Legacy Device List](#)

**Table 51: WinBond**

W25P10  
W25X10  
W25P16  
W25P20  
W25P32  
W25P40  
W25P80  
W25X16  
W25X20  
W25X32  
W25X40  
W25X64  
W25X80  
W25Q128BV  
W25Q64DW

[Return to Top of Legacy Device List](#)

## Third Party SPI Serial MRAM Flash Devices

The following tables list supported third-party SPI serial MRAM flash devices. Click the third-party manufacturer name to link to the table of supported third-party SPI serial MRAM flash devices.

[Avalanche Technology](#)

[Everspin Technology](#)

[Netsol](#)

### Table 52: Avalanche Technology

AS1016204

AS3016204

AS3064204

AS3128208

[Return to Third Party SPI Serial MRAM Flash Devices](#)

### Table 53: Everspin Technology

EM008LX

EM016LX

EM032LX

EM064LX

EM0128LX

[Return to Third Party SPI Serial MRAM Flash Devices](#)

### Table 54: Netsol

S3AI604R0M

S3A3204x0M

[Return to Third Party SPI Serial MRAM Flash Devices](#)

### See Also

- ▶ [Programming the FPGA](#)
- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

# Using the Radiant Programmer

This section provides procedures for using the Radiant Programmer. Topics include:

- ▶ [Plugging the Cable into the PC](#)
- ▶ [Detecting a Cable](#)
- ▶ [Selecting from Multiple Cables](#)
- ▶ [Creating a New Radiant Programmer Project](#)
- ▶ [Opening an Existing Radiant Programmer Project](#)
- ▶ [Checking the XCF Project](#)
- ▶ [Scanning the Device](#)
- ▶ [Selecting from a Matching Device ID List](#)
- ▶ [Adding a Lattice Device to a Chain](#)
- ▶ [Adding a Generic JTAG Device to a Chain](#)
- ▶ [Removing a Device from a Chain](#)
- ▶ [Editing Device Properties](#)
- ▶ [Moving a Device Up or Down](#)
- ▶ [Setting Target Memory, Port Interface, Access Mode, and Operation](#)
- ▶ [Setting Programming Characteristics](#)
- ▶ [Downloading Design Files](#)
- ▶ [Adding a Custom SPI Flash Device](#)
- ▶ [Editing a Custom SPI Flash Device](#)
- ▶ [Removing a Custom SPI Flash Device](#)
- ▶ [Programming Using Custom SPI Flash Device](#)
- ▶ [Unlocking Secure SPI Flash Support](#)
- ▶ [Configuring SPI Flash Options](#)
- ▶ [Changing the Port Assignment](#)
- ▶ [Testing the Cable Signal](#)
- ▶ [Viewing the Log File](#)

## Plugging the Cable into the PC

You can plug the USB cable into the PC whether the PC is turned on or off. However, make sure that Radiant Programmer is closed and that the target board's power is off before plugging the cable into your PC or unplugging it.

### To plug the cable into the PC:

1. Make sure that the Radiant Programmer is closed, and that the target board is powered off.

2. Plug the cable into your PC and the target board.
3. If your PC is turned on, wait about one minute for the Windows operating system to recognize the USB cable. The amount of time varies, depending on your PC's speed.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Detecting a Cable

You can use the Radiant Programmer Detect Cable feature to determine which cable and port you are using.

**To detect a cable:**

1. If Cable Setup dialog box is not showing in the Radiant Programmer window, choose **View > Cable Setup**.
2. In the Cable Setup dialog box, click **Detect Cable**.

The Radiant Programmer detects all available cables connected to your PC, and lists the cable type, port settings, and descriptions in the Output view.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Cable Setup Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Selecting from Multiple Cables

The Radiant Programmer can recognize as many as five USB cables plugged into the same PC.

The first USB cable plugged into the PC is assigned port Ez-USB-0. The second is assigned port Ez-USB-1, and so on. The first FTDI USB2 cable is assigned port FTUSB-0, and the second FTUSB-1, and so on.

If the PC is turned off, and then later turned back on, the assigned ports might change, since the PC detects the cables according to the USB port address instead of the order in which they were plugged into the PC. Since the USB cable port assignments might change during power-up, you might have to reselect the USB cable in the Cable Setup dialog box.

#### To select a USB cable from multiple cables:

- ▶ In the Cable Setup dialog box, select the USB cable you want to use from the Port pulldown list.

#### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Cable Setup Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Creating a New Radiant Programmer Project

By creating a new Radiant Programmer project, you create a chain file (.xcf) from a scan with default settings, create an .xcf file from a scan with custom settings, or a new blank project.

Pathnames in the .xcf files are written in “cross platform compatible” format by default. This format uses forward-slashes (/), which work with both Linux and Windows. For Windows-only systems you might prefer to use Native Delimiter format, which uses back-slashes (\). To use the Windows Native Delimiter format, open the Programmer initialization file in a text editor:

Users\<name>\AppData\Roaming\LatticeSemi\DiamondNG\programmer.ini

Go to the end of the file and add a line with: **PathDelimiter=1**

Programmer can be started from the Radiant software, the Windows Start menu (integrated or stand-alone version), or a Linux command line.

#### To create a new Radiant Programmer project:

1. Make sure that the board is turned on and that the Lattice parallel or USB cable is properly connected to the computer.
2. Do one of the following to start Programmer:
  - ▶ In the Radiant software, choose **Tools > Programmer**.
  - ▶ In the Radiant software, click  in the toolbar.

- ▶ In the Windows Start menu, choose **Lattice Radiant Software > Accessories > Radiant Programmer**.
  - ▶ In the Windows Start menu, choose **Lattice Radiant Programmer > Radiant Programmer**.
  - ▶ In Linux, from the *<Programmer install path>/bin/linux64* directory, enter the following on a command line:  
  
./programmer
3. In the Getting Started dialog box, enter a project name in the Project Name box.
  4. Browse to the location where you wish your project to reside in the Project Location box.
  5. Choose one of the following:
    - ▶ **Create a new project from a scan.** This option creates a new project from a scan.
      - ▶ If you have a board connected to your computer, you can click the **Detect Cable** button to detect the cable and port. Otherwise, you can manually select cable and port from the Cable and Port pulldown lists.
    - ▶ **Create a New Blank Project.** This option creates a new blank Radiant Programmer project.
  6. Click **OK**.

#### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Getting Started Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Opening an Existing Radiant Programmer Project

To open an existing Radiant Programmer project, you must have an existing chain file (.xcf). The daisy chain configuration must be the same as that for which the chain configuration file was created. Each unique chain configuration requires a unique chain configuration file.

Programmer can be started from the Radiant software, the Windows Start menu (integrated or stand-alone version), or a Linux command line.



**To start the Radiant Programmer with an existing project:**

1. Do one of the following to start Programmer:
  - ▶ In the Radiant software, choose **Tools > Programmer**.
  - ▶ In the Radiant software, click  in the toolbar.
  - ▶ In the Windows Start menu, choose **Lattice Radiant Software > Accessories > Radiant Programmer**.
  - ▶ In the Windows Start menu, choose **Lattice Radiant Programmer > Radiant Programmer**.
  - ▶ In Linux, from the *<Programmer install path>/bin/lin64* directory, enter the following on a command line:
 

```
./programmer
```
2. In the Getting Started dialog box, choose **Open an Existing Programmer Project**.
3. Click **OK**.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Getting Started Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Checking the XCF Project

The Check XCF button allows you to perform a design rule check on your XCF project setup before performing any actions. This feature is run automatically when the .xcf file is saved.

**To check the XCF project:**

- ▶ In the Radiant Programmer, choose **Run > Check XCF Project** or click  in the toolbar. The Radiant Programmer checks the XCF project and indicates in the output pane whether or not the project is valid.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Scanning the Device

There are several ways to scan a device. When you create a new project, you can choose to scan your board, perform a custom scan, or create a blank project without performing a scan.

### Note

Not all Lattice device families support Scan capability. Refer to the *Lattice Radiant Software Release Notes* for more information on the device family that does not support Scan.

### To scan the device chain on the board that is connected to your PC:

1. Make sure that the board is turned on and that the cable is properly connected to the Radiant Programmer.
2. In the Radiant Programmer, choose **Run > Scan Device** or click  in the toolbar. The Radiant Programmer opens a new configuration file, scans the printed circuit board connected to your computer, and lists the devices in the new file.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Selecting from a Matching Device ID List

When a scanned device shares the same device ID with other devices, the software indicates this in the main window with the message “Cannot identify detected device on <row number>”. Please manually select correct device.”

### To select a different device from the matching ID list:

1. Click the device in the Device column.
2. Select the device you want to use from the drop-down menu.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)

- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Adding a Lattice Device to a Chain

You can add any Lattice device to an existing chain.

### To add a Lattice device to a chain:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose **Add Device**.
  2. Choose a Lattice device family from the **Device Family** column drop-down menu.
  3. Choose a device from the **Device** column drop-down menu.
- The software inserts the new device into the active chain.

### To add an iCE40 UltraPlus device:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose **Add Device**.
  2. Select iCE40 UltraPlus from the **Device Family** column drop-down menu.
  3. Select iCE40UP3K or iCE40UP5K from the **Device** column drop-down menu.
  4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose **Device Properties**.
  5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.
- The software inserts the new device into the active chain.

### To add a LAV-AT device:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose **Add Device**.
  2. Select LAV-AT from the **Device Family** column drop-down menu.
  3. Select LAV-AT-E70, LAV-AT-G70, LAV-AT-X70 from the **Device** column drop-down menu.
  4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose **Device Properties**.
  5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.
- The software inserts the new device into the active chain.

**To add an LIFCL device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose **Add Device**.
2. Select LIFCL from the **Device Family** column drop-down menu.
3. Select LIFCL-40 from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose **Device Properties**.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**To add an LIFCL Engineering Sample device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select LIFCL\_ENG from the **Device Family** column drop-down menu.
3. Select LIFCL-40-ES from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose **Device Properties**.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**To add an LFCPNX or UT24CP device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select LFCPNX or UT24CP from the **Device Family** column drop-down menu.
3. Select LFCPNX-100 or UT24CP-100 from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**To add an LFD2NX or UT24C device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select LFD2NX or UT24C from the **Device Family** column drop-down menu.
3. Select LFD2NX-40 or UT24C-40 from the **Device** column drop-down menu.

4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

#### To add an LFMNX device:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select LFMNX from the **Device Family** column drop-down menu.
3. Select LFMNX-50 from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

#### To add and LFMXO5 device:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select LFMXO5 from the **Device Family** column drop-down menu.
3. Select LFMXO5-25, LFMXO5-55T, LFMXO5-100T from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

#### To add an LFMXO5D device:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select LFMXO5D from the **Device Family** column drop-down menu.
3. Select LFMXO5-15D from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**To add a MachXO3D device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select MachXO3D from the **Device Family** column drop-down menu.
3. Select a device from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**To add a MachXO3L device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select MachXO3L from the **Device Family** column drop-down menu.
3. Select a device from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**To add a MachXO3LF device:**

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar, or right-click and choose Add Device.
2. Select MachXO3LF from the **Device Family** column drop-down menu.
3. Select a device from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose Device Properties.
5. In the Device Properties dialog box, click the Browse button and navigate to the bitstream for the device. Select the file and click **Open**.

The software inserts the new device into the active chain.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Adding a Generic JTAG Device to a Chain

You can add any one of the following types of devices to a chain:

- ▶ JTAG-NOP Device

### To add a Generic JTAG device:

1. In the Radiant Programmer, choose **Edit > Add Device**, click the  button on the toolbar or right-click and choose **Add Device**.
2. Select Generic JTAG Device from the **Device Family** column drop-down menu.
3. Select a JTAG-NOP from the **Device** column drop-down menu.
4. Highlight the row, and choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose **Device Properties**.
5. In the Device Properties dialog box, at the bottom, enter a value for the instruction register length or click **Load from File** and browse to the .svf file.
6. Click **OK**.

The software inserts the new device into the active chain.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Programming the FPGA](#)

## Removing a Device from a Chain

### To remove a device from the active chain:

1. In the Radiant Programmer, select the device that you want to delete.
2. Choose **Edit > Remove Device**, click the  button on the toolbar, or right-click and chose **Remove Device**.

### Note

There is no Undo for this command.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)

- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Editing Device Properties

**To edit device properties in a chain:**

1. In the Radiant Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, click the  button on the toolbar, or right-click and choose **Device Properties**.
3. In the Device Properties dialog box, edit the device properties.
4. Click **OK** to close the Device Properties dialog box.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Moving a Device Up or Down

**To move a device up or down in the Radiant Programmer:**

- ▶ With the left mouse button, select and hold the number in the far left in the row of the device that you want to move. Then drag and drop to the row where you want to move the device.

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)



## Setting Target Memory, Port Interface, Access Mode, and Operation

### To set a device operation:

1. Select a device.
2. Double-click the appropriate column for the device.
3. In the Device Properties dialog box, select the specific Target Memory, Port Interface, Access Mode, and Operation for the device in the drop-down menu boxes.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Setting Programming Characteristics

Use the Settings dialog box to specify how the Radiant Programmer processes the configuration. You can also specify other options.

### To specify Programming characteristics:

1. In the Radiant Programmer, choose **Edit > Settings**.  
The Settings dialog box opens.
2. Select the options you want, and then click **OK**.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Settings Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Downloading Design Files

After you have specified all of the processing options, use the Program command to download the design files to the devices.

- ▶ In the Radiant Programmer, choose **Run > Program Device**, or click  on the toolbar.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Generating Embedded Design Files

Lattice Embedded VME enables in-field upgrades of Lattice programmable devices by suitable embedded processors. Lattice provides the option to generate several different file formats for different embedded target options.

For iCE40UP, the following embedded solution is supported:

- ▶ Slave SPI Embedded: Enables field upgrades via the target SPI port.

For LAV-AT, the following embedded solutions are supported:

- ▶ Slave SPI Embedded: Enables field upgrades via the target SPI port.
- ▶ JTAG Embedded: Enables field upgrades via the JTAG port.

For LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, and UT24CP, the following embedded solutions are supported:

- ▶ Slave SPI Embedded: Enables field upgrades via the target SPI port.
- ▶ I2C Embedded: Enables field upgrades via the I2C port.
- ▶ JTAG Embedded: Enables field upgrades via the JTAG port.

### To generate embedded design files:

1. In the Embedded Options tab, select the desired embedded options. For more information on embedded options, refer to the following tables.
2. Choose **Run > Generate Embedded Code**, or click  on the toolbar. The files are generated in the specified directory. See the following tables for file types.

**Table 55: Slave SPI Embedded—Device Family, Input File 1, Output File 1, and Output File 2**

| Device Family | Input File                                   | Output File 1                                                                                                                                                                                                      | Output File 2          |
|---------------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| iCE40UP       | XCF File (.xcf)<br>Bitstream (.bit/<br>.hex) | Algorithm VME File (*_algo.iew). This is the algorithm file that specifies which operations will be executed. It must be used with a VME data file. This file is used in device programming or in field upgrading. | Data File (*_data.iew) |
| LAV-AT        | XCF File (.xcf)<br>Bitstream (.bit/<br>.rbt) | Algorithm VME File (*_algo.iew). This is the algorithm file that specifies which operations will be executed. It must be used with a VME data file. This file is used in device programming or in field upgrading. | Data File (*_data.iew) |
| LFCPNX        |                                              |                                                                                                                                                                                                                    |                        |
| LFD2NX        |                                              |                                                                                                                                                                                                                    |                        |
| LFMNX         |                                              |                                                                                                                                                                                                                    |                        |
| LFMXO5        |                                              |                                                                                                                                                                                                                    |                        |
| LFMXO5D       |                                              |                                                                                                                                                                                                                    |                        |
| LIFCL         |                                              |                                                                                                                                                                                                                    |                        |
| MachXO3D      |                                              |                                                                                                                                                                                                                    |                        |
| MachXO3L      |                                              |                                                                                                                                                                                                                    |                        |
| MachXO3LF     |                                              |                                                                                                                                                                                                                    |                        |
| UT24C         |                                              |                                                                                                                                                                                                                    |                        |
| UT24CP        |                                              |                                                                                                                                                                                                                    |                        |
| LIFCL ES      |                                              |                                                                                                                                                                                                                    |                        |

**Table 56: Slave SPI Embedded Options—Compress Embedded Files, Convert VME files to HEX (c.) Prom-Based Embedded VME, and Insert Source Code**

| Device Family | Compress Embedded Files |     | Convert VME files to HEX (c.) Prom-Based Embedded VME |     | Include Source Code |     |
|---------------|-------------------------|-----|-------------------------------------------------------|-----|---------------------|-----|
|               | On                      | Off | On                                                    | Off | On                  | Off |
| ICE40UP       | On                      | Off | On                                                    | Off | On                  | Off |

**Table 56: Slave SPI Embedded Options—Compress Embedded Files, Convert VME files to HEX (c.) Prom-Based Embedded VME, and Insert Source Code**

| Device Family | Compress Embedded Files |     | Convert VME files to HEX (c.) Prom-Based Embedded VME |     | Include Source Code |     |
|---------------|-------------------------|-----|-------------------------------------------------------|-----|---------------------|-----|
|               | On                      | Off | On                                                    | Off | On                  | Off |
| LAV-AT        | On                      | Off | On                                                    | Off | On                  | Off |
| LFCPNX        |                         |     |                                                       |     |                     |     |
| LFD2NX        |                         |     |                                                       |     |                     |     |
| LFMNX         |                         |     |                                                       |     |                     |     |
| LFMXO5        |                         |     |                                                       |     |                     |     |
| LFMXO5D       |                         |     |                                                       |     |                     |     |
| LIFCL         |                         |     |                                                       |     |                     |     |
| MachXO3D      |                         |     |                                                       |     |                     |     |
| MachXO3L      |                         |     |                                                       |     |                     |     |
| MachXO3LF     |                         |     |                                                       |     |                     |     |
| UT24C         |                         |     |                                                       |     |                     |     |
| UT24CP        |                         |     |                                                       |     |                     |     |
| LIFCL ES      |                         |     |                                                       |     |                     |     |

**Table 56: Slave SPI Embedded Options—Compress Embedded Files, Convert VME files to HEX (c.) Prom-Based Embedded VME, and Insert Source Code**

| Device Family | Compress Embedded Files                                                                                                                                                                                                                                                      | Convert VME files to HEX (c.) Prom-Based Embedded VME                                                                                                                                                                                                                                                                                                                                            | Include Source Code                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               | <p>Compress data. This option reduces the file size of the VME file through compression, using less memory space. Clearing this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance.</p> | <p>Do not compress.</p> <p>This operation creates a VME file that is used in file-based embedded programming where the programming of the device is based on the input file. When this option is turned on, it creates a .c file, which is used in EPROM base programming to create a single complied image that is loaded into the CPU. Then the CPU uses this image to program the device.</p> | <p>Do not generate .c file.</p> <p>Copy contents of sspiembedded/ sourcecode directory to working project directory.</p> <p>There are two directories of the Target SPI Embedded source code:</p> <ul style="list-style-type: none"> <li>▶ sspiem</li> <li>▶ sspiem_eprom</li> </ul> <p><b>Note:</b> If the “Convert VME files to HEX (c.) Prom-Based Embedded VME” option is selected, the contents of the sspiem_eprom directory is copied.</p> <p>If the “Convert VME files to HEX (c.) Prom-Based Embedded VME” option is not selected, the contents of the sspiem directory is copied.</p> |

**Table 57: I2C Embedded—Device Family, Input File 1, Output File 1, and Output File 2**

| Device Family | Input File                                   | Output File 1                                                                                                                                                                                                      | Output File 2          |
|---------------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| LAV-AT        | XCF File (.xcf)<br>Bitstream (.bit/<br>.rbt) | Algorithm VME File (*_algo.iea). This is the algorithm file that specifies which operations will be executed. It must be used with a VME data file. This file is used in device programming or in field upgrading. | Data File (*_data.ied) |
| LFCPNX        |                                              |                                                                                                                                                                                                                    |                        |
| LFD2NX        |                                              |                                                                                                                                                                                                                    |                        |
| LFMNX         |                                              |                                                                                                                                                                                                                    |                        |
| LFMXO5        |                                              |                                                                                                                                                                                                                    |                        |
| LFMXO5D       |                                              |                                                                                                                                                                                                                    |                        |
| LIFCL         |                                              |                                                                                                                                                                                                                    |                        |
| MachXO3D      |                                              |                                                                                                                                                                                                                    |                        |
| MachXO3L      |                                              |                                                                                                                                                                                                                    |                        |
| MachXO3LF     |                                              |                                                                                                                                                                                                                    |                        |
| UT24C         |                                              |                                                                                                                                                                                                                    |                        |
| UT24CP        |                                              |                                                                                                                                                                                                                    |                        |
| LIFCL ES      |                                              |                                                                                                                                                                                                                    |                        |

**Table 58: I2C Embedded Options—Compress Embedded Files, Convert VME Files to HEX (c.) Prom-Based Embedded VME, and Insert Source Code**

| Device Family | Compress Embedded Files                                                                                                                                                                                                                                               |                  | Convert VME files to HEX (c.) Prom-Based Embedded VME                                                                                                                                                                                                                                                                                                             |                          | Include Source Code                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |              |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| LAV-AT        | On                                                                                                                                                                                                                                                                    | Off              | On                                                                                                                                                                                                                                                                                                                                                                | Off                      | On                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Off          |
| LFCPNX        |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| LFD2NX        |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| LFMNX         |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| LFMXO5        |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| LFMXO5D       |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| LIFCL         |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| MachXO3D      |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| MachXO3L      |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| MachXO3LF     |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| UT24C         |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| UT24CP        |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
| LIFCL ES      |                                                                                                                                                                                                                                                                       |                  |                                                                                                                                                                                                                                                                                                                                                                   |                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |              |
|               | Compress data. This option reduces the file size of the VME file through compression, using less memory space. Clearing this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance. | Do not compress. | This operation creates a VME file that is used in file-based embedded programming where the programming of the device is based on the input file. When this option is turned on, it creates a .c file, which is used in EPROM base programming to create a single complied image that is loaded into the CPU. Then the CPU uses this image to program the device. | Do not generate .c file. | Copy contents of i2cembedded/ sourcecode directory to working project directory.<br><br>There are two directories of the Target SPI Embedded source code:<br><ul style="list-style-type: none"> <li>▶ i2cem</li> <li>▶ i2cem_eprom</li> </ul> <b>Note:</b> If the “Convert VME files to HEX (c.) Prom-Based Embedded VME” option is selected, the contents of the i2cem_eprom directory is copied.<br><br>If the “Convert VME files to HEX (c.) Prom-Based Embedded VME” option is not selected, the contents of the i2cem directory is copied. | Do not copy. |



**Table 59: Full JTAG Embedded—Device Family, Input File 1, Output File 1**

| Device Family | Input File            | Output File 1                                                                                                                                                                                                     |
|---------------|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT        | XCF File (.xcf)       | Algorithm VME File (*_algo.ia). This is the algorithm file that specifies which operations will be executed. It must be used with a VME data file. This file is used in device programming or in field upgrading. |
| LFCPNX        | Bitstream (.bit/.rbt) |                                                                                                                                                                                                                   |
| LFD2NX        |                       |                                                                                                                                                                                                                   |
| LFMNX         |                       |                                                                                                                                                                                                                   |
| LFMXO5        |                       |                                                                                                                                                                                                                   |
| LFMXO5D       |                       |                                                                                                                                                                                                                   |
| LIFCL         |                       |                                                                                                                                                                                                                   |
| MachXO3D      |                       |                                                                                                                                                                                                                   |
| MachXO3L      |                       |                                                                                                                                                                                                                   |
| MachXO3LF     |                       |                                                                                                                                                                                                                   |
| UT24C         |                       |                                                                                                                                                                                                                   |
| UT24CP        |                       |                                                                                                                                                                                                                   |
| LIFCL ES      |                       |                                                                                                                                                                                                                   |

**Table 60: JTAG Full VME Embedded Options—Compress VME File, Convert VME Files to HEX (c.) File-Based Embedded VME**

| Device Family | Compress Embedded Files                                                                                                                                                                                                                                                      |     | Convert VME files to HEX (c.) Prom-Based Embedded VME                                                                                                                                                                                                                                                                                                                                                                                    |    |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
|               | On                                                                                                                                                                                                                                                                           | Off | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                            | On |
| LAV-AT        | On                                                                                                                                                                                                                                                                           | Off | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                            | On |
| LFCPNX        |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| LFD2NX        |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| LFMNX         |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| LFMXO5        |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| LFMXO5D       |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| LIFCL         |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| MachXO3D      |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| MachXO3L      |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| MachXO3LF     |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| UT24C         |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| UT24CP        |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| LIFCL ES      |                                                                                                                                                                                                                                                                              |     |                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
|               | <p>Compress data. This option reduces the file size of the VME file through compression, using less memory space. Clearing this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance.</p> |     | <p>Uncompressed data.</p> <p>By default this operation is turned off. This creates a VME file that is used in file-based embedded programming where the programming of the device is based on the input file. When this option is turned on, it creates a .c file that is used in EPROM-base programming to create a single complied image that will be loaded into the CPU. Then the CPU will use this image to program the device.</p> |    |

**Table 61: JTAG Full VME Embedded Options—Compact VME File, Fixed Pulse Width (Rev. D)**

| Device Family | Compact VME File                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |    | Fixed Pulse Width (Rev. D) |    |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|----------------------------|----|
|               | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | On | Off (Default)              | On |
| LAV-AT        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LFCPNX        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LFD2NX        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LFMNX         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LFMXO5        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LFMXO5D       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LIFCL         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| MachXO3D      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| MachXO3L      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| MachXO3LF     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| UT24C         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| UT24CP        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
| LIFCL ES      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                            |    |
|               | <p>By default this operation is turned off. When this option is turned on it will split the VME data file into two different sections. An algorithm section and a data section. Whenever there is data needed in the algorithm section it will get it from the data section. This option is useful to turn on when the VME file is repeating the same operation even with different data. The operation will be in a loop and will reference the data section. This option will reduce the file size of the VME file.</p> |    |                            |    |
|               | <p>Compact VME file.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |    |                            |    |
|               | <p>By default this setting is off enabling looping (status polling algorithm) in the VME file. When it is turned on then there will be no looping (status polling algorithm) and instead commands in loops will be repeated for as many times as the loop iterated for. Status polling algorithm is a Lattice specific command in VME files, turning this option on makes the VME file generic and is useful when programming through a non-Lattice device, but increases file size.</p>                                  |    |                            |    |
|               | <p>Fixed Pulse Width VME file.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |    |                            |    |

**Table 62: JTAG Full VME Embedded Options—Verify USERCODE, Program Device If Fails**

| Device Family | Verify USERCODE, Program Device If Fails                                                                                                                                                                                                                                                                                                                                                                                                    |                                                           |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| LAV-AT        | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                               | On                                                        |
| LFCPNX        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LFD2NX        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LFMNX         |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LFMXO5        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LFMXO5D       |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LIFCL         |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| MachXO3D      |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| MachXO3L      |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| MachXO3LF     |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| UT24C         |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| UT24CP        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LIFCL ES      |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
|               | By default this operation is turn off and preforms the standard erase, program, verify flow. When this option is turned on then before attempting to program a device it will check to see if the USERCODE of the device is the same as the file to be programmed. If the USERCODEs are the same then that device will be skipped and will not be reprogrammed, otherwise if the USERCODEs do not match then the device will be programmed. | Verify USERCODE, program device if USERCODE Verify fails. |

**Table 63: JTAG Full VME Embedded Options—Include Header, Include Comment, Maximum Memory Allocation Size Per Row of Data (Kbytes)**

| Device Family | Include Header                                                                                                                                                                                                                                                        |                            | Include Comment                                                                                                                                                                                                       |                               | Maximum Memory Allocation Size Per Row of Data (kB)                                                                                                                                                                                                                                                                                                                                       |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               | Off (Default)                                                                                                                                                                                                                                                         | On                         | Off (Default)                                                                                                                                                                                                         | On                            |                                                                                                                                                                                                                                                                                                                                                                                           |
| LAV-AT        |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFCPNX        |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFD2NX        |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFMNX         |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFMXO5        |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFMXO5D       |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LIFCL         |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| MachXO3D      |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| MachXO3L      |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| MachXO3LF     |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| UT24C         |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| UT24CP        |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LIFCL ES      |                                                                                                                                                                                                                                                                       |                            |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
|               | By default the header is included in the VME file otherwise the header file is omitted from the VME file. The header contains information on the version and is useful in debugging. Turning the header off can be used to reduce the file size of the VME file size. | Omit header from VME file. | The default is off which does not include comments in the VME file, if turned on then comments will appear for the operations. Turning comments on is useful for debugging the VME file, but will increase file size. | Include comments in VME file. | Set the Maximum buffer size. By default this size of the buffer is 64k, but if a system has a limitation on the max buffer size only being 16k then this option can be set to 16k to compensate for that limitation. Or if the system can support buffers of more than 64k then the setting can be increase to 128k or 256k. Valid values for this operation are 8, 16, 32, 64, 128, 256. |

The following table lists device family, input file types, and output file extensions for JTAG Slim VME embedded deployment.

**Table 64: JTAG Slim VME Embedded Options -- Device Family, Input File 1, Output File 1, and Output File 2**

| Device Family | Input File      | Output File 1                                                                                                                                                                                                   | Output File 2                                                                                                                                                                                                                                     |
|---------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT        | XCF File (.xcf) | Algorithm VME File (*_algo.vme) - This is the algorithm file that specifies which operations will be executed must be used with a VME data file. This file is used in device programming or in field upgrading. | Data VME File (*_data.vme) - This is the data file that provides the data that the algorithm file will use to preforms executed operations must be used with a VME algorithm file. This file is used in device programming or in field upgrading. |
| LFCPNX        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFD2NX        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFMNX         |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFMXO5        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFMXO5D       |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LIFCL         |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| MachXO3D      |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| MachXO3L      |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| MachXO3LF     |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| UT24C         |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| UT24CP        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LIFCL ES      |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |

The following table lists options -- Compressed Embedded Files, convert VME files to HEX (.c) File-Based Embedded VME -- for JTAG Slim VME embedded deployment.

**Table 65: JTAG Slim VME Embedded Options -- Compressed VME Data File, Convert VME files to HEX (.c) File-Based Embedded VME**

| Device Family | Compress VME Data File                                                                                                                                                                                                                                                  |                 | Convert VME files to HEX (.c) File-Based Embedded VME                                                                                                                                                                                                                                                                                                                                                                                |                        |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
|               | On (Default)                                                                                                                                                                                                                                                            | Off             | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                        | On                     |
| LAV-AT        | On (Default)                                                                                                                                                                                                                                                            | Off             | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                        | On                     |
| LFCPNX        |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| LFD2NX        |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| LFMNX         |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| LFMXO5        |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| LFMXO5D       |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| LIFCL         |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| MachXO3D      |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| MachXO3L      |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| MachXO3LF     |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| UT24C         |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| UT24CP        |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| LIFCL ES      |                                                                                                                                                                                                                                                                         |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                      |                        |
|               | Compress data. This option reduces the file size of the VME file through compression, using less memory space. Unchecking this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance. | Do not compress | By default this operation is turned off, this will create a VME file that will be used in file based embedded programming where the programming of the device is based on the input file. When this option is turned on then it will create a .c file which will be used in EPROM base programming to create a single compiled image that will be loaded in to the CPU. Then the CPU will use this image to then program the device. | Generate Hex (.c) file |

**See Also:**

► [Lattice Radiant Software User Guide](#)

# Generating Tester Serial Vector Format (SVF) Files

Lattice provides the option to generate the Serial Vector Format (SVF) files.

## To generate an SVF file:

1. In the SVF Options tab, select the desired options. For more information on embedded options, refer to the following tables.
2. Choose **Run > Generate SVF File**, or click  on the toolbar. The files are generated in the specified directory.

**Table 66: SVF JTAG Chain—Device Family, Input File 1, and Output File**

| Device Family | Input File 1    | Output File     |
|---------------|-----------------|-----------------|
| Lattice Chain | XCF File (.xcf) | SVF File (.svf) |

**Table 67: SVF JTAG Chain—Options—Operation**

| Device Family         | Operation              |
|-----------------------|------------------------|
| Lattice Single Device | Contained in XCF file. |

**Table 68: SVF JTAG Chain—Options—Write Header and Comments, Write Rev D Standard SVF File**

| Device Family         | Write Header and Comments   |                           | Write Rev D Standard SVF File                                     |                      |
|-----------------------|-----------------------------|---------------------------|-------------------------------------------------------------------|----------------------|
|                       | On (Default)                | Off                       | Off (Default)                                                     | On                   |
| Lattice Single Device | Write headers and comments. | Omit header and comments. | Rev. E Standard SVF. For Flash-based FPGAs, Lattice Extended SVF. | Rev. D Standard SVF. |

**Table 69: SVF JTAG Chain—Options—Use RUNTEST from Rev C; For Erase, Program, and Verify Operations, Skip Verify**

| Device Family         | Use RUNTEST from Rev C |                 | For Erase, Program, and Verify Operations, Skip Verify |                                |
|-----------------------|------------------------|-----------------|--------------------------------------------------------|--------------------------------|
|                       | Off (Default)          | On              | Off (Default)                                          | On                             |
| Lattice Single Device | Standard RUNTEST.      | Rev. C RUNTEST. | Include verify in EPV operations.                      | Omit verify in EPV operations. |



**Table 70: SVF JTAG Chain—Options—Include RESET at the End of the SVF File; Set Maximum Data Size per Row (Kbits)**

| Device Family         | Include RESET at the End of the SVF File       |                                         | Set Maximum Data Size per Row (Kbits) |                    |
|-----------------------|------------------------------------------------|-----------------------------------------|---------------------------------------|--------------------|
|                       | Off (Default)                                  | On                                      | Off (Default)                         | On                 |
| Lattice Single Device | Do not write RESET at the end of the SVF file. | Write RESET at the end of the SVF file. |                                       | 64/8/16/32/128/256 |

## Adding a Custom SPI Flash Device

This feature allows you users to add your own SPI Flash device to the Radiant Programmer database.

### To create a Custom SPI Flash device:

1. Choose **Tools > Custom Flash Device**.
2. In the Edit Custom Device dialog box, select **SPI Serial Flash Custom**, and click **Add**.
3. In the Custom SPI Flash dialog box, enter:
  - ▶ **Device Description**—This can be any alphanumeric string that describes the device (for example: M25P32-VMF6C).
  - ▶ **Device Name**—This can be any alphanumeric string that describes the device name (for example: SPI-M25P32).
  - ▶ **Package**—This can be any alphanumeric string that describes the package (for example: 16-pin SOIC).
4. In the Device Vendor drop-down menu, choose device vendor.
5. In the Device Density drop-down, choose device density.
6. Device vendor ID—This can be any alphanumeric string that describes the device vendor ID (for example: 0x2C).
7. Device memory ID—This can be any alphanumeric string that describes the device memory capacity ID (for example: 0x15).
8. In the Byte Per Sector drop-down, choose the desired value.
9. If the SPI Flash device supports sector protection, check the **Protection Options On** box.
10. Click **OK**.
11. Once the custom SPI flash has been added, it can be selected in the Device Properties dialog box.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Custom SPI Flash Dialog Box](#)

- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Editing a Custom SPI Flash Device

If you have already created a custom SPI Flash device, you can edit its properties in the Custom SPI Flash dialog box.

### To edit the properties of a Custom SPI Flash device:

1. Choose **Tools > Custom Flash Device**.
2. In the Edit Custom Device dialog box, select **SPI Serial Flash Custom**, select the SPI Flash device you want to edit, and click **Edit**.
3. In the Custom SPI Flash dialog box, enter:
  - ▶ **Device Description**—This can be any alphanumeric string that describes the device (for example: M25P32-VMF6C).
  - ▶ **Device Name**—This can be any alphanumeric string that describes the device name (for example: SPI-M25P32).
  - ▶ **Package**—This can be any alphanumeric string that describes the package (for example: 16-pin SOIC).
4. In the Device Vendor drop-down menu, choose device vendor.
5. In the Device Density drop-down, choose device density.
6. Device vendor ID—This can be any alphanumeric string that describes the device vendor ID (for example: 0x2C).
7. Device memory capacity ID—This can be any alphanumeric string that describes the device vendor memory capacity ID (for example: 0x15).
8. In the Byte Per Sector drop-down, choose the desired value.
9. If the SPI Flash device supports sector protection, check the **Protection Options ON** box.
10. Click **OK**.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Custom SPI Flash Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Removing a Custom SPI Flash Device

Once you have created a custom SPI Flash device, you can remove it from the Custom SPI Flash dialog box.

### To edit the properties of a Custom SPI Flash device:

1. Choose **Tools > Custom Flash Device**.
2. In the Edit Custom Device dialog box, select **SPI Serial Flash Custom**.
3. Select the SPI Flash device you want to remove.
4. Click **Remove**.
5. Click **OK**.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Custom SPI Flash Dialog Box](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Programming Using Custom SPI Flash Device

After a custom SPI Flash device has been created, you can program it using the Radiant Programmer.

### To program using a Custom SPI Flash device:

1. Left-click on the row corresponding to the device you want to edit, and choose **Edit > Device Properties**, to display the Device Properties dialog box.
2. In the Target Memory Mode drop-down list, choose **External SPI Flash memory (SPI FLASH)**.
3. In the Family drop-down list, choose **SPI Serial Flash Custom**.
4. In the Device drop-down list, choose the name of the custom device you created.
5. Click **OK**.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Device Properties Dialog Box](#)

- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Unlocking Secure SPI Flash Support

If a custom SPI flash device or a SPI flash device was secured and you wish to reprogram the SPI flash, you must first unlock the device before reprogramming it.

### To unlock a secure SPI flash:

1. Create a new the Radiant Programmer project as described in [Creating a New Radiant Programmer Project](#) or open an existing Radiant Programmer project as described in [Opening an Existing Radiant Programmer Project](#).
2. Right-click on the row corresponding to the device you would like to edit, and choose **Edit > Device Properties**.
3. In the Operation drop-down list, chose **SPI Flash Unlock Device**.
4. Ensure that the **Secure SPI Flash Golden Pattern Sectors** box is unchecked.
5. Click **OK**.
6. In the Radiant Programmer, choose **Run > Program**, or click  on the toolbar.

The SPI flash is now unlocked and can be reprogrammed.

**Table 71: SPI Flash Devices**

| SPI Device | SPI Package | Unlock Supported? |
|------------|-------------|-------------------|
| Adesto     | AT25SF321   | No                |
| Adesto     | AT25QL641   | No                |
| Adesto     | AT25SF128   | No                |
| Cypress    | S25FL116K   | Yes               |
| Cypress    | S25FL132K   | Yes               |
| Cypress    | S25FL164K   | Yes               |
| Cypress    | S25FL064L   | No                |
| Cypress    | S25FL128L   | No                |
| Cypress    | S25FL256L   | Yes               |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| Cypress           | S25FL128S          | No                       |
| Cypress           | S25FL256S          | Yes                      |
| Cypress           | S25FL512S          | No                       |
| Cypress           | S25FS064S          | No                       |
| Cypress           | S25FS128S          | No                       |
| Cypress           | S25FS256S          | Yes                      |
| Cypress           | S25FS512S          | No                       |
| Cypress           | S28HS512T          | No                       |
| ON Semiconductor  | LE25U40CMD         | No                       |
| GigaDevice        | GD25Q20C           | No                       |
| GigaDevice        | GD25Q20E           | No                       |
| GigaDevice        | GD25Q40C           | No                       |
| GigaDevice        | GD25Q40E           | No                       |
| GigaDevice        | GD25Q80C           | No                       |
| GigaDevice        | GD25Q80E           | No                       |
| GigaDevice        | GD25Q16C           | Yes                      |
| GigaDevice        | GD25Q16E           | Yes                      |
| GigaDevice        | GD25Q32C           | Yes                      |
| GigaDevice        | GD25Q32E           | Yes                      |
| GigaDevice        | GD25Q64C           | Yes                      |
| GigaDevice        | GD25Q64E           | Yes                      |
| GigaDevice        | GD25Q127C          | Yes                      |
| GigaDevice        | GD25Q128E          | Yes                      |
| GigaDevice        | GD25Q256D          | Yes                      |
| GigaDevice        | GD25Q256E          | Yes                      |
| GigaDevice        | GD25LQ20C          | No                       |
| GigaDevice        | GD25LQ20E          | No                       |
| GigaDevice        | GD25LQ40C          | No                       |
| GigaDevice        | GD25LQ40E          | No                       |
| GigaDevice        | GD25LQ80C          | No                       |
| GigaDevice        | GD25LQ80E          | No                       |
| GigaDevice        | GD25LQ16C          | Yes                      |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| GigaDevice        | GD25LQ16E          | Yes                      |
| GigaDevice        | GD25LQ32D          | Yes                      |
| GigaDevice        | GD25LQ32E          | Yes                      |
| GigaDevice        | GD25LQ64C          | Yes                      |
| GigaDevice        | GD25LQ64E          | Yes                      |
| GigaDevice        | GD25LQ128D         | Yes                      |
| GigaDevice        | GD25LB128E         | Yes                      |
| GigaDevice        | GD25LQ128E         | Yes                      |
| GigaDevice        | GD25LQ256D         | Yes                      |
| ISSI              | IS25LP064          | Yes                      |
| ISSI              | IS25LP128          | Yes                      |
| ISSI              | IS25LP032A         | Yes                      |
| ISSI              | IS25LP064A         | Yes                      |
| ISSI              | IS25LP080D         | Yes                      |
| ISSI              | IS25LP016D         | Yes                      |
| ISSI              | IS25LP032D         | Yes                      |
| ISSI              | IS25LP256D         | Yes                      |
| ISSI              | IS25LP128F         | Yes                      |
| ISSI              | IS25LP512M         | No                       |
| ISSI              | IS25LQ020B         | No                       |
| ISSI              | IS25LQ040B         | No                       |
| ISSI              | IS25LQ080B         | Yes                      |
| ISSI              | IS25LQ016B         | Yes                      |
| ISSI              | IS25LQ032B         | Yes                      |
| ISSI              | IS25WP128          | Yes                      |
| ISSI              | IS25WP064A         | Yes                      |
| ISSI              | IS25WP040D         | No                       |
| ISSI              | IS25WP080D         | Yes                      |
| ISSI              | IS25WP016D         | Yes                      |
| ISSI              | IS25WP032D         | Yes                      |
| ISSI              | IS25WP128F         | Yes                      |
| ISSI              | IS25WP256D         | Yes                      |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| ISSI              | IS25WP512M         | No                       |
| ISSI              | IS25WQ020          | No                       |
| ISSI              | IS25WQ040          | No                       |
| SPANSION          | S25FL064A          | No                       |
| SPANSION          | S25FL040A          | No                       |
| SPANSION          | S25FL004A          | No                       |
| SPANSION          | S25FL008A          | No                       |
| SPANSION          | S25FL016A          | No                       |
| SPANSION          | S25FL032A          | No                       |
| SPANSION          | S25FL064A          | No                       |
| SPANSION          | S25FL001D          | No                       |
| SPANSION          | S25FL002D          | No                       |
| SPANSION          | S25FL004D          | No                       |
| SPANSION          | S25FL032P          | No                       |
| SPANSION          | S25FL064P          | No                       |
| SPANSION          | S25FL128P          | No                       |
| SPANSION          | S25FL132K          | Yes                      |
| SPANSION          | S25FL164K          | Yes                      |
| SPANSION          | S25FL204K          | Yes                      |
| SPANSION          | S25FL208K          | Yes                      |
| SPANSION          | S25FL216K          | Yes                      |
| Macronix          | MX25V1006F         | No                       |
| Macronix          | MX25L2006E         | Yes                      |
| Macronix          | MX25V20066         | Yes                      |
| Macronix          | MX25L4006E         | Yes                      |
| Macronix          | MX25L8006E         | Yes                      |
| Macronix          | MX25L1606E         | Yes                      |
| Macronix          | MX25L3206E         | Yes                      |
| Macronix          | MX25L6406E         | Yes                      |
| Macronix          | MX25U2033E         | Yes                      |
| Macronix          | MX25U4033E         | Yes                      |
| Macronix          | MX25U8033E         | Yes                      |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| Macronix          | MX25L1635E         | Yes                      |
| Macronix          | MX25U3235E         | Yes                      |
| Macronix          | MX25L6435E         | Yes                      |
| Macronix          | MX25U6435E         | Yes                      |
| Macronix          | MX25L12835E        | Yes                      |
| Macronix          | MX25L25635E        | Yes                      |
| Macronix          | MX25L6436E         | Yes                      |
| Macronix          | MX25L12836E        | Yes                      |
| Macronix          | MX25L6445E         | Yes                      |
| Macronix          | MX25L12845E        | Yes                      |
| Macronix          | MX25U1633F         | Yes                      |
| Macronix          | MX25L3233F         | Yes                      |
| Macronix          | MX25L6433F         | Yes                      |
| Macronix          | MX25L12833F        | Yes                      |
| Macronix          | MX25V1035F         | No                       |
| Macronix          | MX25R1035F         | No                       |
| Macronix          | MX25R2035F         | Yes                      |
| Macronix          | MX25V2035F         | Yes                      |
| Macronix          | MX25R4035F         | Yes                      |
| Macronix          | MX25U4035F         | Yes                      |
| Macronix          | MX25V4035F         | Yes                      |
| Macronix          | MX25R8035F         | Yes                      |
| Macronix          | MX25V8035F         | Yes                      |
| Macronix          | MX25R1635F         | Yes                      |
| Macronix          | MX25U1635F         | Yes                      |
| Macronix          | MX25V1635F         | Yes                      |
| Macronix          | MX25R3235F         | Yes                      |
| Macronix          | MX25U3235F         | Yes                      |
| Macronix          | MX25R6435F         | Yes                      |
| Macronix          | MX25U6435F         | Yes                      |
| Macronix          | MX25L12835F        | Yes                      |
| Macronix          | MX25U12835F        | Yes                      |



**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| Macronix          | MX25L25635F        | Yes                      |
| Macronix          | MX25L12845G        | Yes                      |
| Macronix          | MX25L25645G        | Yes                      |
| Macronix          | MX25U25645G        | Yes                      |
| Macronix          | MX25L51245G        | Yes                      |
| Macronix          | MX25U51245G        | No                       |
| Macronix          | MX66L51235F        | No                       |
| Macronix          | MX66L1G45G         | Yes                      |
| Macronix          | MX66U1G45G         | Yes                      |
| Macronix          | MX35LF1G24AD       | Yes                      |
| Macronix          | MX35LF2G24AD       | Yes                      |
| Micron            | M25P10             | No                       |
| Micron            | M25P20             | No                       |
| Micron            | M25P40             | No                       |
| Micron            | M25P80             | No                       |
| Micron            | M25P16             | Yes                      |
| Micron            | M25P32             | Yes                      |
| Micron            | M25P64             | Yes                      |
| Micron            | M25P128            | Yes                      |
| Micron            | M25PE10            | No                       |
| Micron            | M25PE20            | No                       |
| Micron            | M25PE40            | No                       |
| Micron            | M25PE80            | No                       |
| Micron            | M25PE16            | No                       |
| Micron            | M45PE10            | No                       |
| Micron            | M45PE20            | No                       |
| Micron            | M45PE40            | No                       |
| Micron            | M45PE80            | No                       |
| Micron            | M45PE16            | No                       |
| Micron            | M25PX80            | No                       |
| Micron            | M25PX16            | No                       |
| Micron            | M25PX32            | Yes                      |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| Micron            | M25PX64            | Yes                      |
| Micron            | N25Q016A           | No                       |
| Micron            | N25Q032            | Yes                      |
| Micron            | N25Q032A           | No                       |
| Micron            | N25Q064            | Yes                      |
| Micron            | N25Q128            | Yes                      |
| Micron            | N25Q128A           | Yes                      |
| Micron            | N25Q256            | Yes                      |
| Micron            | N25Q512            | No                       |
| Micron            | MT25QL128          | Yes                      |
| Micron            | MT25QL256          | Yes                      |
| Micron            | MT25QL512          | No                       |
| Micron            | MT25QL01           | Yes                      |
| Micron            | MT25QL02           | Yes                      |
| Micron            | MT25QU128          | Yes                      |
| Micron            | MT25QU256          | Yes                      |
| Micron            | MT35XL256          | Yes                      |
| Micron            | MT35XU256          | Yes                      |
| Micron            | MT25QU512          | Yes                      |
| Micron            | MT35XL512          | Yes                      |
| Micron            | MT35XU512          | Yes                      |
| Micron            | MT25QU01           | Yes                      |
| Micron            | MT35XL01           | Yes                      |
| Micron            | MT35XU01           | Yes                      |
| Micron            | MT25QU02           | Yes                      |
| Micron            | MT35XL02           | Yes                      |
| Micron            | MT35XU02           | Yes                      |
| WinBond           | W25Q10             | Yes                      |
| WinBond           | W25Q20             | Yes                      |
| WinBond           | W25Q80             | Yes                      |
| WinBond           | W25Q16             | Yes                      |
| WinBond           | W25Q32             | Yes                      |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| WinBond           | W25Q64             | Yes                      |
| WinBond           | W25X10CL           | No                       |
| WinBond           | W25X20CL           | Yes                      |
| WinBond           | W25X40CL           | No                       |
| WinBond           | W25Q20CL           | Yes                      |
| WinBond           | W25Q40CL           | No                       |
| WinBond           | W25Q80DV           | No                       |
| WinBond           | W25Q32FV           | Yes                      |
| WinBond           | W25Q64FV           | Yes                      |
| WinBond           | W25Q128FV          | Yes                      |
| WinBond           | W25Q256FV          | Yes                      |
| WinBond           | W25Q16FW           | Yes                      |
| WinBond           | W25Q32FW           | Yes                      |
| WinBond           | W25Q64FW           | Yes                      |
| WinBond           | W25Q128FW          | Yes                      |
| WinBond           | W25Q16JV           | Yes                      |
| WinBond           | W25Q32JV           | Yes                      |
| WinBond           | W25Q64JV           | Yes                      |
| WinBond           | W25Q128JV          | Yes                      |
| WinBond           | W25Q256JV          | Yes                      |
| WinBond           | W25Q512JV          | No                       |
| WinBond           | W25M512JV          | No                       |
| WinBond           | W25Q16JW           | Yes                      |
| WinBond           | W25Q32JW           | Yes                      |
| WinBond           | W25Q64JW           | Yes                      |
| WinBond           | W25Q128JW          | Yes                      |
| WinBond           | W25Q256JW          | Yes                      |
| WinBond           | W35T51NW           | No                       |
| WinBond           | W35N01JW           | No                       |
| Adesto            | AT25SF041          | No                       |
| AMIC              | A25L10P            | No                       |
| AMIC              | A25L20P            | No                       |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| AMIC              | A25L40P            | No                       |
| AMIC              | A25L80P            | No                       |
| AMIC              | A25L16P            | No                       |
| Eon Silicon       | EN25Q32B           | No                       |
| ATMEL             | AT25DF021          | No                       |
| ATMEL             | AT25DF041A         | No                       |
| ATMEL             | AT25DF081          | No                       |
| ATMEL             | AT25DF161          | No                       |
| ATMEL             | AT25DF321          | No                       |
| ATMEL             | AT25DF641          | No                       |
| ATMEL             | AT25F2048          | No                       |
| ATMEL             | AT25F4096          | No                       |
| ATMEL             | AT25FS040N         | No                       |
| ATMEL             | AT26F004           | No                       |
| ATMEL             | AT26DF081A         | No                       |
| ATMEL             | AT26DF161          | No                       |
| ATMEL             | AT26DF161A         | No                       |
| ATMEL             | AT26DF321          | No                       |
| ATMEL             | AT45DB041D         | No                       |
| ATMEL             | AT45DB081D         | No                       |
| ATMEL             | AT45DB161D         | No                       |
| ATMEL             | AT45DB321D         | No                       |
| ATMEL             | AT45DB642D         | No                       |
| INTEL             | 25F016S33          | Yes                      |
| INTEL             | 25F160S33          | Yes                      |
| INTEL             | 25F320S33          | Yes                      |
| INTEL             | 25F640S33          | Yes                      |
| NexFlash          | NX25P20            | No                       |
| NexFlash          | NX25P40            | No                       |
| NexFlash          | NX25P80            | No                       |
| NexFlash          | NX25P16            | No                       |
| NexFlash          | NX25P32            | No                       |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| Numonyx           | M25P20             | No                       |
| Numonyx           | M25P40             | No                       |
| Numonyx           | M25P80             | No                       |
| Numonyx           | M25P16             | Yes                      |
| Numonyx           | M25P32             | Yes                      |
| Numonyx           | M25P64             | Yes                      |
| Numonyx           | M25P128            | Yes                      |
| Numonyx           | M25PE20            | No                       |
| Numonyx           | M25PE40            | No                       |
| Numonyx           | M25PE80            | No                       |
| Numonyx           | M25PE16            | No                       |
| Numonyx           | M25PX80            | No                       |
| Numonyx           | M25PX16            | No                       |
| Numonyx           | M25PX32            | Yes                      |
| Numonyx           | M25PX64            | Yes                      |
| Numonyx           | M45PE20            | No                       |
| Numonyx           | M45PE40            | No                       |
| Numonyx           | M45PE80            | No                       |
| Numonyx           | M45PE16            | No                       |
| Numonyx           | N25Q032            | Yes                      |
| Numonyx           | N25Q064            | Yes                      |
| Numonyx           | N25Q128            | Yes                      |
| Numonyx           | N25Q128A           | Yes                      |
| Macronix          | MX25L1005          | No                       |
| Macronix          | MX25L2005          | No                       |
| Macronix          | MX25L4005(A)       | No                       |
| Macronix          | MX25L8005          | No                       |
| Macronix          | MX25L1605          | Yes                      |
| Macronix          | MX25L3205          | Yes                      |
| Macronix          | MX25L6405          | Yes                      |
| Macronix          | MX25L12805         | Yes                      |
| Macronix          | MX25U8035          | Yes                      |

**Table 71: SPI Flash Devices**

| <b>SPI Device</b> | <b>SPI Package</b> | <b>Unlock Supported?</b> |
|-------------------|--------------------|--------------------------|
| SSTI              | SST25VF010A        | No                       |
| SSTI              | SST25VF020         | No                       |
| SSTI              | SST25VF040         | No                       |
| SSTI              | SST25VF080         | No                       |
| SSTI              | SST25LF020A        | No                       |
| SSTI              | SST25LF040A        | No                       |
| SSTI              | SST25LF080A        | No                       |
| SSTI              | SST25VF040B        | No                       |
| SSTI              | SST25VF080B        | No                       |
| SSTI              | SST25VF016B        | No                       |
| SSTI              | SST25VF032B        | No                       |
| SSTI              | SST25VF064C        | No                       |
| SSTI              | SST26VF016B        | Yes                      |
| SSTI              | SST26VF032B        | Yes                      |
| SSTI              | SST26VF064B        | Yes                      |
| STMicro           | M25P20             | No                       |
| STMicro           | M25P40             | No                       |
| STMicro           | M25P80             | No                       |
| STMicro           | M25P16             | No                       |
| STMicro           | M25P32             | No                       |
| STMicro           | M25P64             | Yes                      |
| STMicro           | M25PE20            | No                       |
| STMicro           | M25PE40            | No                       |
| STMicro           | M25PE80            | No                       |
| STMicro           | M25PE16            | No                       |
| STMicro           | M45PE20            | No                       |
| STMicro           | M45PE40            | No                       |
| STMicro           | M45PE80            | No                       |
| STMicro           | M45PE16            | No                       |
| WinBond           | W25P10             | No                       |
| WinBond           | W25P20             | No                       |
| WinBond           | W25P40             | No                       |

**Table 71: SPI Flash Devices**

| SPI Device | SPI Package | Unlock Supported? |
|------------|-------------|-------------------|
| WinBond    | W25P80      | No                |
| WinBond    | W25P16      | No                |
| WinBond    | W25P32      | No                |
| WinBond    | W25X10      | No                |
| WinBond    | W25X20      | No                |
| WinBond    | W25X40      | No                |
| WinBond    | W25X80      | No                |
| WinBond    | W25X16      | No                |
| WinBond    | W25X32      | No                |
| WinBond    | W25X64      | No                |
| WinBond    | W25Q128BV   | No                |
| WinBond    | W25Q64DW    | Yes               |

**See Also**

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Configuring SPI Flash Options

You can use the Device Properties dialog box to configure SPI Flash options for Ultra Plus devices.

**To configure SPI Flash Options:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory pulldown menu, choose **External SPI Flash Memory (SPI FLASH)**.
4. In the Port Interface pulldown menu, choose **SPI** for iCE40UP, MachXO3L, MachXO3LF or **JTAG2SPI** or **SSPI2SPI** for LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO4, LIFCL, MachXO3D, UT24C or UT24CP.

5. In the Access Mode pulldown menu, choose **Direct Programming**.
6. In the Options pulldown menu, chose the desired SPI Flash option.
7. In the Programming File box, browse to and select the programming file (.bit, .rbt, .bin, .hex, .mcs, .exo, or .xtek).
8. Select the desired **Family**, **Vendor**, **Device**, and **Package** options.
9. Click **Load from File** to select the data size entered. You can change this size by typing a different file size. This feature is useful if you only want to use a portion of the file for the operation. If you change the file size, it must be no larger than the full file size or the device size.
10. Select start address and end address from the **Start Address (Hex)** and **End Address (Hex)** drop-down menus. For the AMD parallel flash, the starting address is automatically selected and cannot be changed.
11. To erase the flash device if a verify error occurs, click, the **Erase SPI Part on Programming Error** box.
12. Click **OK**.

#### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Changing the Port Assignment

When you first launch the Programmer software with the cables properly connected, it connects to the first available port that it detects. You can change the connecting port, as well as other cable options, using the Cable and Port Setting dialog box.

#### To change the port setup:

1. In Programmer, choose **View > Cable Setup**.
2. In the Cable Setup dialog box, choose the options that you want. Changes are immediately applied.

If the cable is not connected or cannot be detected (if the board power is not on, for example), Programmer software displays an error message.

#### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Cable Setup Dialog Box](#)



- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Testing the Cable Signal

The Cable Signal Tests dialog box helps you debug or improve the cable signal. You can use an oscilloscope, while running the continuous loop feature, to test your printed circuit board.

### To test the cable signal:

1. In Programmer, choose **View > Cable Setup**.
2. In the Cable Setup dialog box, click the **Debug Mode** button.  
The Cable Signal Tests dialog box opens.
3. In the dialog box, click **Power Check** to test the connection.  
The VCC Status LED blinks green if the cable and power are detected. It produces an error message and blinks red if the cable or power is not detected.
4. In the dialog box, select an option for the pins you want to test. The options are defined as follows:
  - ▶ **Toggle** – Alternates between logic 1 and logic 0.
  - ▶ **Hold High** – Holds at logic 1.
  - ▶ **Hold Low** – Holds at logic 0.
  - ▶ **Read (TDO only)** – Reads back the data from TDO and records the read back data in the Programmer log file.
5. To test the settings you have selected, click **Test**.  
This causes the pins that have a Toggle setting to toggle once from logic 1 to logic 0 to logic 1.
6. To perform continuous testing, click **Loop Test**.  
This causes the pins that have a Toggle setting to toggle continuously until you stop the process.
7. To stop the loop process, press **ESC**.

### Note

---

The options available for cable signal testing varies, depending on the type of cable you are using and the options you have selected in the Cable Setup dialog box. Options not available are grayed out.

---

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Cable Signal Tests Dialog Box](#)

- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Viewing the Log File

An ASCII text log file summarizes the results of the Programmer operations.

### To view the log file:

- ▶ Click the  button on the toolbar. An ASCII text file opens showing the contents of the log.

### See Also

- ▶ [Using the Radiant Programmer](#)
- ▶ [Programming the FPGA](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Using Programmer Tcl Commands

This section provides the Programmer extended Tcl command syntax, command options, and usage examples. These commands are only supported in standalone Programmer.

### Programmer Tcl Command Descriptions

The following table provides a listing of all valid Programmer Tcl command options and describes option functionality.

**Table 72: Programmer Tcl Commands**

| Command            | Function (Argument)                                                                                                                                                                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>pgr_project</b> | <b>pgr_project open</b> <XCF file>                                                                                                                                                     | The open command will open the specified project file in-memory.                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                    | <b>pgr_project save</b> [<XCF file>]                                                                                                                                                   | Writes the current project to the specified path. If there is no file path specified then it will overwrite the original file.                                                                                                                                                                                                                                                                                                                                                                           |
|                    | <b>pgr_project close</b>                                                                                                                                                               | Closes the current project. If a Programmer GUI is open with the associated project, then the corresponding Programmer GUI will be closed as well.                                                                                                                                                                                                                                                                                                                                                       |
|                    | <b>pgr_project help</b>                                                                                                                                                                | Displays help for the pgr_project command.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>pgr_program</b> | <no_argument>                                                                                                                                                                          | When pgr_program is run without arguments it will display the current status of the available settings. Note that specifying a key without a value will display the current value. The following keys can be used to modify those settings.<br><br>Generally, the pgr_program command and its sub-commands allow you to run the equivalent process commands from the Tcl Console window in the Radiant software interface. These commands can override connection options that are set in user defaults. |
|                    | <b>pgr_program set -cable</b> <LATTICE   USB   USB2>                                                                                                                                   | Sets the cable for downloading.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                    | <b>pgr_program set -portaddress</b> <0x0378 0x0278 0x03bc 0x0378 0x0278 0x03bc 0x<custom address>><br><EzUSB-0 EzUSB-1 EzUSB-2 ... EzUSB-15><br><FTUSB-0 FTUSB-1 FTUSB-2 ... FTUSB-15> | Sets the port address for the downloading.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                    | <b>pgr_program run</b>                                                                                                                                                                 | Executes the current xcf with the current settings. Note that there may be warnings that are displayed in the Tcl Console window. These warnings will be ignored and processing will continue.                                                                                                                                                                                                                                                                                                           |
|                    | <b>pgr_program help</b>                                                                                                                                                                | Displays help for pgr_program command.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

**Table 72: Programmer Tcl Commands**

| Command                         | Function (Argument) | Description                                                        |
|---------------------------------|---------------------|--------------------------------------------------------------------|
| <b>pgr_genfile</b>              | <no_argument>       | Programmer generate files command (not supported for customer use) |
| <b>pgr_genfile set -process</b> | <svf   vme12>       | Sets file type for file generation.                                |
| <b>pgr_genfile set -outfile</b> | <file path>         | Sets the output file.                                              |
| <b>pgr_genfile run</b>          |                     | Generates file based on the current xcf and current settings.      |
| <b>pgr_genfile help</b>         |                     | Displays help for pgr_genfile command.                             |

This section displays the usage information of the commands:

## pgr\_project

Commands to open, save or close XCF file.

### Syntax

```
pgr_project open <XCF file>|save <XCF file>|close
```

### Arguments

- ▶ **open <XCF file>**: This option specify XCF file name and open it.
- ▶ **save <XCF file>**: This option specify XCF file name and save current XCF project.
- ▶ **close**: Closes current XCF project.

### Example

```
pgr_project open test.xcf
pgr_project save test.xcf
pgr_project close
```

### See Also

- ▶ [“Using Programmer Tcl Commands” on page 510](#)

## pgr\_program

Commands to Save current design to disk.

### Syntax

```
pgr_program set [-cable LATTICE|USB|USB2] [-portaddress <portaddress>]|run
```

### Arguments

- ▶ **set**: No arguments return the status of the current settings.

- ▶ **-cable LATTICE|USB|USB2:** (Optional) Sets the cable for downloading.
- ▶ **-portaddress <portaddress>:** (Optional) Sets the port address for downloading. Where port address for cable type can be:
  1. LATTICE --- 0x0378|0x0278|0x03bc|0x0378|0x0278|0x03bc|0x<custom address>
  2. USB --- EzUSB-0|EzUSB-1|EzUSB-2|...|EzUSB-15
  3. USB2 --- FTUSB-0|FTUSB-1|FTUSB-2|...|FTUSB-15
- ▶ **run:** Executes the current XCF with the current settings.

### Example

```
pgr_program set -cable LATTICE
pgr_program set -portaddress 0x0378
pgr_program run
```

### See Also

- ▶ [“Using Programmer Tcl Commands” on page 510](#)

## pgr\_genfile

Commands to generate files, not supported for customer use.

### Syntax

```
pgr_genfile set [-process <file type>] [-outfile <file path>] | run
```

### Arguments

- ▶ **set:** No arguments return the status of the current settings.
- ▶ **-process <file type>:** (Optional) Sets the file type for file generation. where file type for process can be:
 

```
file type --- svf|vme12
```
- ▶ **-outfile <file path>:** (Optional) Sets the output file.
- ▶ **run:** Generates file based on the current XCF and current settings.

### Example

```
pgr_genfile set -process svf
pgr_genfile set -outfile test
pgr_genfile run
```

### See Also

- ▶ [“Using Programmer Tcl Commands” on page 510](#)

# Programmer Options

This section lists the options available in Programmer.

Topics include:

- ▶ [Getting Started Dialog Box](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Custom SPI Flash Dialog Box](#)
- ▶ [Settings Dialog Box](#)
- ▶ [Cable Setup Dialog Box](#)
- ▶ [Cable Signal Tests Dialog Box](#)

## Getting Started Dialog Box

The following options are available in the Getting Started dialog box:

### Project Name

Specifies the name of the project.

### Project Location

Specifies the location of the project.

### Create a New Project from a Scan

Scans the attached chain with the last used cable settings.

### Cable

Specifies the download cable type:

- ▶ **HW-USBN-2A**—(Lattice HW-USBN-2A USB port programming cable)
- ▶ **HW-USBN-2B (FTDI)**—(Lattice HW-USBN-2B (FTDI) USB programming cable)
- ▶ **HW-DLN-3C (Parallel)**—(Lattice HW-DLN-3C parallel programming cable)

### Port

Specifies the serial port to which the download cable is connected. Select the port from the list or click Detect Cable.

### Detect Cable

Automatically detects where the download cable is connected.

### Blank Programmer Project

Creates a new blank project.

### Open an Existing Programmer Project

Allows you to browse to an existing .xcf configuration file and open an existing Programmer project.

### See Also

- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Device Properties Dialog Box

The Device Properties dialog box consists of two tabs: [General Tab](#) and [Device Information Tab](#).

### General Tab

The following options are available in the Device Properties dialog box General tab, depending on selected Access Mode and Operation.

**Target Memory** Target memory is the storage memory type on the FGPA.

**Table 73: Target Memory for iCE40UP**

| Target Memory                            | Description                                                                                                           |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Compressed Random Access Memory (CRAM)   | The memory type used for CRAM configuration.                                                                          |
| Non Volatile Configuration Memory (NVCM) | This memory type is used to program the non-volatile configuration memory (NVCM) while the device is not operational. |
| External SPI Flash Memory (SPI FLASH)    | Serial peripheral interface (SPI) memory flash memory.                                                                |

**Table 74: Target Memory for LAV-AT, LFCPNX, LFD2NX, LIFCL, UT24C or UT24CP**

| Target Memory                             | Description                                                                        |
|-------------------------------------------|------------------------------------------------------------------------------------|
| Static Random Access Memory (SRAM)        | The memory type used for SRAM configuration.                                       |
| Non Volatile Configuration Memory (EFUSE) | This memory type is used to program the non-volatile configuration memory (EFUSE). |
| External SPI Flash Memory (SPI FLASH)     | Serial peripheral interface (SPI) memory flash memory.                             |

**Table 75: Target Memory for LFMNX, MachXO3D, MachXO3L, or MachXO3LF**

| Target Memory                             | Description                                                                        |
|-------------------------------------------|------------------------------------------------------------------------------------|
| Static Random Access Memory (SRAM)        | The memory type used for SRAM configuration.                                       |
| FLASH Configuration Memory                |                                                                                    |
| Non Volatile Configuration Memory (EFUSE) | This memory type is used to program the non-volatile configuration memory (EFUSE). |
| External SPI Flash Memory (SPI FLASH)     | Serial peripheral interface (SPI) memory flash memory.                             |

**Table 76: Target Memory for LFMXO5D**

| Target Memory                             | Description                                                                        |
|-------------------------------------------|------------------------------------------------------------------------------------|
| Static Random Access Memory (SRAM)        | The memory type used for SRAM configuration.                                       |
| Non Volatile Configuration Memory (EFUSE) | This memory type is used to program the non-volatile configuration memory (EFUSE). |
| Internal Flash Memory (FLASH)             | Flash memory.                                                                      |

**Port Interface** The following tables list the port interfaces...

**Table 77: Port Interface for iCE40UP**

| Port Interface | Description                                                              |
|----------------|--------------------------------------------------------------------------|
| Slave SPI      | The four-wire serial peripheral interface (SPI) communications protocol. |
| SPI            | Serial peripheral interface (SPI) communications protocol.               |

**Table 78: Port Interface for LAV-AT**

| Port Interface | Description                                                              |
|----------------|--------------------------------------------------------------------------|
| JTAG           | The four-wire JTAG interface communications protocol.                    |
| Slave SPI      | The four-wire serial peripheral interface (SPI) communications protocol. |
| SPI            | Serial peripheral interface (SPI) communications protocol.               |



**Table 79: Port Interface for LFCPNX, LFD2NX, LFMXO5, LFMXO5D, LIFCL, UT24C or UT24CP**

| Port Interface | Description                                                                                                                                                                                                                                                                                            |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JTAG           | The four-wire JTAG interface communications protocol.                                                                                                                                                                                                                                                  |
| Slave SPI      | The four-wire serial peripheral interface (SPI) communications protocol.                                                                                                                                                                                                                               |
| I2C            | The two-wire Integrated Circuit (I2C) communications protocol.                                                                                                                                                                                                                                         |
| SPI            | Serial peripheral interface (SPI) communications protocol.                                                                                                                                                                                                                                             |
| I3C Bridge     | For Lattice Nexus Platform devices, the I3C Configuration Cable Bridge provides an interface with bridging logic to covert HW-USBN-2B data traffic into I3C bus format, Radiant Programmer 3.1X (and later) allows you to access Lattice FPGA configuration logic via the I3C configuration interface. |

**Table 80: Port Interface for LFMNX, MachXO3D, MachXO3L, MachXO3LF**

| Port Interface | Description                                           |
|----------------|-------------------------------------------------------|
| JTAG           | The four-wire JTAG interface communications protocol. |
| JTAG2SPI       | The JTAG to SSPI bridge.                              |

**Access Mode** Selects the mode for programming the device.

**Table 81: Access Mode for iCE40UP**

| Access Mode        | Description                                                       |
|--------------------|-------------------------------------------------------------------|
| Direct Programming | Used for direct programming while the device is not in operation. |

**Table 82: Access Mode for LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP**

| Access Mode              | Description                                                                                                                                                                                                                                                             |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Feature Rows Programming | Used to program, read back, and edit the Feature Row sector of the LAV-AT, LFCPNX, LFD2NX, LFMXO5, LFMXO5D, LIFCL, UT24C or UT24CP device. This mode also is used to read back and edit the non-volatile Control Register 1 (which also belongs to Feature Row sector). |
| Direct Programming       | Used for direct programming while the device is not in User mode.                                                                                                                                                                                                       |

**Table 82: Access Mode for LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP**

| Access Mode                   | Description                                                       |
|-------------------------------|-------------------------------------------------------------------|
| Background Programming        | Used for background programming while the device is in User mode. |
| Advanced Security Programming | Used for programming the security keys.                           |

**Operation** Lists the available operation modes for the device. Choose one from the pull-down list.

**Table 83: Operations for iCE40UP**

| Operation                                    | Description                                                                                                                                                                                     |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blank Check                                  | Checks if the device is erased (blank).                                                                                                                                                         |
| CRAM Read and Save                           | Shifts in a bitstream by directly loading the iCE40 CRAM over the SPI bus. The contents in memory are then read and saved to an output file.                                                    |
| Erase, Program, Verify                       | Erases, programs, and verifies the new configuration memory.                                                                                                                                    |
| Fast Configuration                           | Shifts in a bitstream directly into device and the device takes care of the rest for configuration.                                                                                             |
| Fast Program, Read and Save                  | Shifts in a bitstream directly into device and the device takes care of the rest for configuration. The contents in memory are then read and saved to an output file.                           |
| Fast Program, Read and Save without DONE bit | Shifts in a bitstream directly into device and the device takes care of the rest for configuration, but without the DONE bit. The contents in memory are then read and saved to an output file. |
| Program Only                                 | Programs a new configuration into memory. Issues programming instructions and then the data is taken from the data file.                                                                        |
| Program, Verify                              | Programs the memory of the device and then verifies the contents of that memory.                                                                                                                |
| Program, Verify, Secure                      | Programs the memory of a device, verifies the contents of memory, secures the configuration block. Secure inhibits readback of the device.                                                      |
| Read DONE bit                                | Reads to see if the DONE bit has or has not been set.                                                                                                                                           |
| Read Device Properties                       | Reads the properties of the device.                                                                                                                                                             |
| Secure Device                                | Secures the configuration block. Secure inhibits readback of the device.                                                                                                                        |
| Verify ID                                    | Verifies the ID of the device.                                                                                                                                                                  |
| Verify Only                                  | Verifies the new configuration memory.                                                                                                                                                          |

**Table 84: Operations for LAV-AT**

| Target Memory                                     | Ports Interface | Access Mode        | Operations                                                                                                                                                                                                                                       |
|---------------------------------------------------|-----------------|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Static Random Access Memory (SRAM)                | JTAG Slave SPI  | Direct Programming | Fast Configuration<br>Erase Only<br>Verify ID<br>Display ID<br>Program Control Register0<br>Display Control Register0<br>Program Control Register1<br>Display Control Register1<br>Display USERCODE<br>Read Status Register<br>Refresh<br>Bypass |
| External SPI flash Memory (SPI FLASH) Programming | SPI             | Direct Programming | Erase, Program, Verify<br>Erase, Program<br>Verify Only<br>Verify ID<br>Erase All<br>Calculate File Size Checksum<br>Calculate Device Size Checksum<br>Read and Save<br>Erase, Program, Verify Quad 1<br>Scan SPI Flash Device                   |

**Table 85: Operations for LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP**

| Target Memory                      | Ports Interface          | Access Mode              | Operations                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------------|--------------------------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Static Random Access Memory (SRAM) | JTAG Slave SPI, I2C, I3C | Direct Programming       | Fast Configuration<br>Erase, Program, Verify<br>Verify Only<br>Erase Only<br>Verify ID<br>Display ID<br>Program Control Register0<br>Display Control Register0<br>Program Control Register1<br>Display Control Register1<br>Display USERCODE<br>Read and Save<br>Read Status Register<br>Refresh<br>Secure Plus<br>Bypass<br>External Primary Dry Run<br>External Golden Dry Run |
|                                    |                          | Background Programming   | SEI Fast Program<br>Verify Only<br>Verify ID<br>Display ID<br>Display Control Register0<br>Display Control Register1<br>Display USERCODE<br>Read and Save<br>Read Status Register<br>Refresh<br>External Primary Dry Run<br>External Golden Dry Run<br>Bypass                                                                                                                    |
| Non Volatile Configuration Memory  | JTAG Slave SPI, I2C      | Feature Rows Programming | Program Feature Row<br>Update Feature Row<br>Read Feature Row<br>Program Control NV Register1<br>Display Control NV Register1                                                                                                                                                                                                                                                    |

**Table 85: Operations for LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP**

| Target Memory                                                                                             | Ports Interface    | Access Mode                        | Operations                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------|--------------------|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                           |                    | Advanced Security Keys Programming | Program Password Key<br>Read Password Key<br>Program Encryption Key<br>Read Encryption Key<br>Program Public Key<br>Read Public Key<br>Program TraceID<br>Display TraceID<br>Program Locks Policies<br>Read Locks Policies<br>Update Locks Policies<br>Lock Ports Interface<br>Enable HMAC Authentication Mode<br>Enable ECDSA Authentication Mode |
| External SPI flash Memory (SPI FLASH) Programming<br><br>Note: LFMXO5, LFMXO5D does not support this mode | JTAG2SPI, SSPI2SPI | Direct Programming                 | Erase, Program, Verify<br>Erase, Program<br>Verify Only<br>Verify ID<br>Erase All<br>Calculate File Size Checksum<br>Calculate Device Size Checksum<br>Read and Save<br>Erase, Program, Verify Quad 1<br>Scan SPI Flash Device<br>Fail Safe Upgrade                                                                                                |

**Table 86: Flash Operations (LFMXO5, LFMXO5D only)**

| Target Memory              | Ports Interface | Access Mode            | Operations                      |
|----------------------------|-----------------|------------------------|---------------------------------|
| Flash Configuration Memory | JTAG Slave SPI  | Direct Programming     | Erase, Program, Verify          |
|                            |                 |                        | Erase, Program, Verify, Refresh |
|                            |                 |                        | Program Only                    |
|                            |                 |                        | Verify Only                     |
|                            |                 |                        | Verify ID                       |
|                            |                 |                        | Erase All                       |
|                            |                 |                        | Blank Check                     |
|                            |                 |                        | Read and Save                   |
|                            |                 |                        | Bypass                          |
|                            |                 | Background Programming | Erase, Program, Verify          |
|                            |                 |                        | Erase, Program, Verify, Refresh |
|                            |                 |                        | Program Only                    |
|                            |                 |                        | Verify Only                     |
|                            |                 |                        | Verify ID                       |
|                            |                 |                        | Erase All                       |
|                            |                 |                        | Blank Check                     |
|                            |                 |                        | Read and Save                   |
|                            |                 |                        | Bypass                          |

The following is an alphabetic list of all available operations with a definition of each operation.

**Table 87: Operations**

| Operation                    | Description                                                                                                          |
|------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Blank Check                  | Check if entire configuration memory is blank,                                                                       |
| Bypass                       | No operation is performed on the device.                                                                             |
| Display Control NV Register1 | Reads and displays the content of non-volatile control register 1, which is in the same location as the Feature Row. |
| Display Control Register0    | Reads and displays the contents of Control Register 0.                                                               |
| Display Control Register1    | Reads and displays the contents of the SRAM Control Register 1.                                                      |
| Display ID                   | Reads and displays the device ID.                                                                                    |
| Display Status Register      | Reads and displays the device's Status Register.                                                                     |
| Display USERCODE             | Reads and displays the USERCODE.                                                                                     |
| Erase All                    | Erases all configuration memory.                                                                                     |

**Table 87: Operations (Continued)**

| Operation                        | Description                                                                                                                                                                                                                               |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Erase Feature Row                | Erases the feature row.                                                                                                                                                                                                                   |
| Erase Only                       | Erases the configuration memory.                                                                                                                                                                                                          |
| Erase, Program, Verify           | Erases, programs, and verifies the new configuration memory.<br><br>In SRAM mode, this operation only supported to program and verify the CFG data array, All other instructions or data related to the LMNI INIT Bus will be ignored.    |
| Erase, Program, Verify, Refresh  | Erases, programs, and verifies the new configuration memory; and at the end perform a refresh.                                                                                                                                            |
| External Primary Dry Run         | Execute Dry Run on Primary image off External SPI Flash.                                                                                                                                                                                  |
| External Golden Dry Run          | Execute Dry Run on Golden image off External SPI Flash.                                                                                                                                                                                   |
| Enable HMAC Authentication Mode  | Program HMAC Authentication Mode Enable Bit.                                                                                                                                                                                              |
| Enable ECDSA Authentication Mode | Program ECDSA Authentication Mode Enable Bit.                                                                                                                                                                                             |
| Fast Configuration               | Shifts in a bitstream directly into device and the device take care of the rest for configuration.<br><br><b>Note:</b> For LIFCL ES devices, power-cycling is required if an error occurs when using SRAM "Fast Configuration" operation. |
| Program/Program Only             | Programs a new configuration into memory. Issues programming instructions and then the data are taken from the data file.                                                                                                                 |
| Program Control NV Register1     | Programs the content of non-volatile control register 1 which is in the same location of the Feature Row.                                                                                                                                 |
| Program Control Register0        | Read Back and update the Control Register 0.                                                                                                                                                                                              |
| Program Control Register1        | Read Back and update the SRAM Control Register 1.                                                                                                                                                                                         |
| Program Encryption Key           | Programs the encryption key into a device.                                                                                                                                                                                                |
| Program Feature Row              | Programs the Feature Row.<br><br>Programs the 128-bit feature row data into a device. The setting is from the .fea file.                                                                                                                  |
| Program Password Key             | Programs the password keys into the device.                                                                                                                                                                                               |
| Program Public Key               | Programs the ECDSA public keys into the device.                                                                                                                                                                                           |
| Program Locks Policies           | Program the device's Locks Policies.                                                                                                                                                                                                      |
| Lock Ports Interface             | Program the Ports interface locks.                                                                                                                                                                                                        |



**Table 87: Operations (Continued)**

| Operation                                | Description                                                                                                                                                                                                                       |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Read and Save                            | Reads the contents of memory and saves it to an output file.<br><br>In SRAM mode, this operation only supported to read and save the CFG data array, All other instructions or data related to the LMNI INIT Bus will be ignored. |
| Read Encryption Key                      | Reads the contents of encryption key.                                                                                                                                                                                             |
| Read Feature Row                         | Reads the contents of the Feature Row.                                                                                                                                                                                            |
| Read Password Key                        | Reads the contents of Password Key.                                                                                                                                                                                               |
| Read Public Key                          | Reads the contents of ECDSA Public Key.                                                                                                                                                                                           |
| Read Locks Policies                      | Reads the contents of device's Locks Policies.                                                                                                                                                                                    |
| Read Status Register                     | Reads the contents of the Status Register.                                                                                                                                                                                        |
| Refresh                                  | Configures the pattern in non-volatile memory into SRAM.                                                                                                                                                                          |
| Secure Plus                              | Secures the configuration block and the user's fuses memory. Secure inhibits readback of the device.                                                                                                                              |
| SEI Fast Program                         | Fast Program the SEI (Soft Error Injection) bitstream to support SED features.                                                                                                                                                    |
| Scan SPI Flash Device                    | Scans the SPI Flash in the board.                                                                                                                                                                                                 |
| SPI Flash Calculate Device Size Checksum | Calculates the Checksum of the entire device.                                                                                                                                                                                     |
| SPI Flash Calculate File Size Checksum   | Calculates the Checksum of the data contained in the device for the address range of the input file.                                                                                                                              |
| SPI Flash Erase All                      | Erases all of the configuration memory.                                                                                                                                                                                           |
| SPI Flash Erase, Program, Verify         | Erases, programs, and verifies the new configuration memory.                                                                                                                                                                      |
| SPI Flash Erase, Program, Verify Quad 1  | Erases, programs, and verifies the new configuration memory; and enable the SPI-Flash Quad read mode.                                                                                                                             |
| SPI Flash Read and Save                  | Same as "Read and Save."                                                                                                                                                                                                          |
| SPI Flash Verify Only                    | Same as "Verify Only"/Verify the content of external SPI Flash.                                                                                                                                                                   |
| Upload to Static RAM                     | Uploads data to SRAM.                                                                                                                                                                                                             |
| Update Feature Row                       | Read back and update the feature rows in the device                                                                                                                                                                               |
| Update Locks Policies                    | Update the Locks Policies.                                                                                                                                                                                                        |
| Verify ID                                | Verifies the ID of the device.                                                                                                                                                                                                    |

**Table 87: Operations (Continued)**

| Operation       | Description                                                                                                                                                                                          |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Verify Only     | Verifies the new configuration memory.<br><br>In SRAM mode, this operation only supported to verify the CFG data array, All other instructions or data related to the LMNI INIT Bus will be ignored. |
| Verify USERCODE | Verifies the USERCODE of the device.                                                                                                                                                                 |

**Device Information Tab**

The Device Information tab displays information on the device selected. The content can vary depending upon the device selected, and can include:

- ▶ Family Name
- ▶ Device Name
- ▶ VCC Voltage Supply
- ▶ Programming Pins
- ▶ JTAG IDCODE
- ▶ JTAG IDCODE MASK
- ▶ IDCODE Length
- ▶ SOFT IDCODE
- ▶ Maximum Erase Pulse Width (ms)
- ▶ Maximum Program Pulse Width (ms)

**See Also**

- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Custom SPI Flash Dialog Box

The following options are available in the Custom SPI Flash dialog box:

**Device Family**

Lists the device family being used.

**Device Description**

The name that was assigned to the device.

**Device Name**

This can be any alphanumeric string that describes the device name (for example: SPI-M25P32).

**Package**

This can be any alphanumeric string that describes the package (for example: 16-pin SOIC).

**Device Vendor**

The vendor of the custom SPI Flash device.

**Device Density**

The size of the Serial SPI Flash device (512 kilobits - 512 MB).

**Manufacturing ID**

The manufacturing ID of the vendor of the custom SPI Flash device. (for example: 0xC2 Macronix).

**Device Memory Capacity ID**

This can be any alphanumeric string that describes the device ID (for example: 0x15).

**Byte Per Sector**

Allows you to choose desired bytes per sector value.

**Protection Options ON** If the SPI Flash device supports sector protection, select this option to enable protection options. This allows you to select **Secure SPI Flash Golden Pattern Sectors** in the [Device Properties Dialog Box](#).

**See Also**

- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Settings Dialog Box

The following options are available in the Settings dialog box:

**General Tab****At Programmer Start-Up**

Allows you to select between showing the Programmer Getting Started dialog box at start-up, or opening the last Programmer project at start-up.

### **USERCODE Display**

Allows you to choose in which format the USERCODE will be displayed. Choices are Hex, ASCII, and Decimal.

### **Device Family Selection List Order**

Allows you to display the Device Family pull-down list in the Programmer main window in either chronological or alphabetical order. The default is chronological order.

### **Log File Path**

Shows the location of the Programmer log file, and allows you to browse to and set a new location for the Programmer.log file.

### **Clear Log File Each Time Application Starts**

Clears the log file each time the application starts. If the option is not selected, the log file continues increase in size until the file is manually erased.

## **Programming Tab**

### **Sequential Mode**

Programs all the devices on the board one at a time. If an Operation Override is selected, all Operation descriptions in the chain file are temporarily changed to the override setting.

### **Use Default JTAG States (TLR/TLR)**

Uses Test-Logic-Reset (TLR) as the starting and ending JTAG state of the JTAG State Machine for download.

### **Avoid Test Logic Reset (TLR) State**

Avoids the Test Logic Reset State of the JTAG State Machine during download.

### **Use Custom JTAG States**

Specify Test-Logic-Reset (TLR) or Run-Test/Idle (RTI) as the starting and ending JTAG state of the JTAG State Machine for download.

### **Initial TAP State**

Specify TLR or RTI as the starting JTAG state of the JTAG State Machine for download.

### **Final TAP State**

Specify TLR or RTI as the ending JTAG state of the JTAG State Machine for download.

### Check Cable Setup Before Programming

Confirms that the cable signals are correctly connected to the board and devices in the JTAG chain on the board match the devices selected in the .xcf file.

### Continue Download on Error

Ignores any errors while downloading and continues running.

### See Also

- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Cable Setup Dialog Box

The following options are available in the Cable Setup dialog box:

**Detect Cable** Automatically detects where the download cable is connected.

### Cable

Specifies the download cable type:

- ▶ **HW-USBN-2A** - (Lattice HW-USBN-2A USB port programming cable)
- ▶ **HW-USBN-2B (FTDI)** - (Lattice HW-USBN-2B (FTDI) USB programming cable)
- ▶ **HW-DLN-3C (Parallel)** - (Lattice HW-DLN-3C parallel programming cable)

### Port

Specifies the serial port to which the download cable is connected. Select the port from the list or click Detect Cable.

### Custom Port

Specifies a custom parallel port to which the download cable is connected. Use hexadecimal format to type the port name.

### Use default Clock Divider

Uses the fastest TCK clock speed.

## Use custom Clock Divider

Enables the TCK Divider Setting option.

### TCK Divider Setting (0 - 30x)

Allows you to slow down the TCK clock. This is done by extending the low period of the clock. Refer the following tables for specific frequency settings for USB-2B (2232H FTDI USB host chip), USB-2B (2232D FTDI USB host chip), and USB-2A and Parallel port cables.

**Table 88: USB-2B (2232H FTDI USB host chip)**

| Divider | Clock Frequency <sup>1</sup> | Divider | Clock Frequency <sup>1</sup> |
|---------|------------------------------|---------|------------------------------|
| 0       | 30 MHz                       | 5       | 5 MHz                        |
| 1       | 15 MHz (Default)             | 6       | 4.2 MHz                      |
| 2       | 10 MHz                       | 7       | 3.7 MHz                      |
| 3       | 7.5 MHz                      | 8       | 3.1 MHz                      |
| 4       | 6 MHz                        | 9       | 3 MHz                        |
|         |                              | 10      | 2.7 MHz                      |

<sup>1</sup>Calculation formula for USB-2B (2232H FTDI USB host chip):

$$\text{Frequency} = 60 \text{ MHz} / (1 + \text{ClockDivider}) * 2$$

**Table 89: USB-2B (2232D FTDI USB host chip)**

| Divider | Clock Frequency <sup>2</sup> | Divider | Clock Frequency <sup>2</sup> |
|---------|------------------------------|---------|------------------------------|
| 0       | 6 MHz                        | 5       | 1 MHz                        |
| 1       | 3 MHz (Default)              | 6       | 0.8 MHz                      |
| 2       | 2 MHz                        | 7       | 0.7 MHz                      |
| 3       | 1.5 MHz                      | 8       | 0.65 MHz                     |
| 4       | 1.2 MHz                      | 9       | 0.6 MHz                      |
|         |                              | 10      | 0.5 MHz                      |

<sup>2</sup>Calculation formula for USB-2B (2232D FTDI USB host chip):

$$\text{Frequency} = 12 \text{ MHz} / (1 + \text{ClockDivider}) * 2$$

**Table 90: USB-2A and Parallel port**

| Divider | Low Pulse Width delay <sup>3</sup> | Divider | Low Pulse Width delay <sup>3</sup> |
|---------|------------------------------------|---------|------------------------------------|
| 0       | NA                                 | 5       | 5x                                 |
| 1       | 1x                                 | 6       | 6x                                 |
| 2       | 2x                                 | 7       | 7x                                 |

**Table 90: USB-2A and Parallel port (Continued)**

|   |    |    |     |
|---|----|----|-----|
| 3 | 3x | 8  | 8x  |
| 4 | 4x | 9  | 9x  |
|   |    | 10 | 10x |

<sup>3</sup>The USB-2A frequency fixed at 1.5 MHz and Parallel Port frequency fixed at 500 kHz

### Use Default I/O Settings

Only use the four JTAG signals.

### Use Custom I/O Settings

Specify additional non-JTAG signals connected to the board.

### INITN Pin Connected

Select this option if you connect the INIT pin to the download cable. This option is only available with the Lattice USB port programming cable.

### Done Pin Connected

Select this option if you connect the DONE pin to the download cable. This option is not available for the Lattice HW-DLN-3C parallel programming cable.

### TRST Pin Connected

Select this option if you connect the TRST pin to the download cable. Specify active high or active low.

### PROGRAMN Pin Connected

Select this option if you connect the PROGRAMN pin to the download cable.

### ispEN Pin Connected

Select this option if you connect the ispEN pin to the download cable. Specify active high or active low.

### Debug Mode

Opens the Cable Signal Tests dialog box. See [Cable Signal Tests Dialog Box](#).

### See Also

- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Cable Signal Tests Dialog Box

The following options are available in the Cable Signal Tests dialog box:

### Toggle

Alternates between logic 1 and logic 0.

### Hold High

Holds at logic 1.

### Hold Low

Holds at logic 0.

### Test

Applies the selected settings to the selected pin connections. This causes the pins that have a toggle setting to toggle once from logic 1 to logic 0 to logic 1.

### Loop Test

Performs continuous testing, causing the pins that have a toggle setting to toggle continuously until you click ESC.

### View Log

Opens the log file, an ASCII text file that summarizes the results of the Cable Signal Test operations.

### Power Check

Tests the cable and power connections, causing the VCC Status LED to blink green or red to indicate that cable and power are detected or not detected.

### VCC Status

Shows the status of the cable and power connection. The LED blinks green when the cable and power are detected. It blinks red and produces an error message when cable or power is not detected.

### Toggle Delay

Sets the delay after each operation. Default is 0.

### Number of Bytes

Sets the number of bytes read by each operation. Default is 0.

### See Also

- ▶ [Programmer Options](#)
- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)



- ▶ [Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer](#)

## Programming and Configuring iCE40 Devices with Programmer

The Radiant Programmer supports programming and configuration of iCE40 devices.

There are three basic flows for programming or configuring iCE40 devices:

- ▶ iCE40 CRAM Configuration Flow using .bin and .hex files output from the Radiant software. The default is .bin.

CRAM configuration is accomplished by directly loading the iCE40 CRAM over the SPI bus.

- ▶ iCE40 NVCM Programming Flow using Nonvolatile Configuration Memory (.nvcn) files output from the Radiant software.

NCVM programming involves transmitting programming data over the SPI bus to the NVCM array internal to the iCE40 device. The NVCM is one-time programmable (OTP).

- ▶ iCE40 SPI Flash Programming Flow using a separate SPI Flash device to configure an iCE40 device.

In this flow, the iCE40 device acts as the SPI bus master and therefore controls the data flow from the configuration device.

### See Also

- ▶ [Configuring an iCE40 Device Using the CRAM Flow](#)
- ▶ [Programming an iCE40 Device Using the NVCM Flow](#)
- ▶ [Programming an iCE40 Device Using SPI Flash Device Flow](#)
- ▶ [Using the Radiant Programmer](#)
- ▶ [Lattice Radiant Software User Guide](#)
- ▶ [TN1248 - iCE40 Programming and Configuration](#)

## Configuring an iCE40 Device Using the CRAM Flow

iCE40 CRAM Configuration Flow uses .hex files, .bin files, or Intel-Hex files output from the Radiant software. CRAM configuration is accomplished by directly loading the iCE40 CRAM over the SPI bus.

When using the Radiant Programmer to configure an iCE40 device, you must first create a new Programmer project, or open an existing Programmer project. By creating a new Programmer project, you create a chain file (.xcf).

**To create a new Programmer project:**


1. Make sure that the board is turned on and that the Lattice USB programming cable is properly connected to the computer.
2. Issue the start command.
  - ▶ In Windows, go to the Windows Start menu and choose **All Programs > Lattice Radiant Software> Accessories > Radiant Programmer**.
  - ▶ In Linux, from the `<install_path>/programmer/bin/linux64` directory, enter the following on a command line:  

```
./programmer
```
3. In the Getting Started dialog box, enter a project name in the **Project Name** box.
4. Browse to the location where you wish your project to reside in the **Project Location** box.
5. Choose one of the following:
  - ▶ **Create a new project from a scan.** This option creates a new project from a scan.
    - ▶ If you have a board connected to your computer, you can click the **Detect Cable** button to detect the cable and port. Otherwise, you can manually select cable and port from the **Cable** and **Port** pulldown lists.
  - ▶ **Create a New Blank Project** - This option creates a new blank Programmer project.
  - ▶ Click **OK**.
6. In Programmer:
  - ▶ Select the iCE40 family in the Device Family drop-down menu.
  - ▶ Select the desired iCE40 device in the Device drop-down menu.
7. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties**.
8. In the Device Properties dialog box:
  - ▶ In the Target Memory pulldown menu, choose **Compressed Random Access Memory (CRAM)**.
  - ▶ In the Port Interface pulldown menu, choose **Slave SPI**.
  - ▶ In the Access Mode pulldown menu, choose **Direct Programming**.
  - ▶ In the Operation pulldown menu, choose the desired operation, as described in the Device Properties dialog box.
9. In the Programming File box, browse to the Radiant software-generated programming file (.hex or .bin).
10. Click **OK** to close the Device Properties dialog box.

After you have specified all of the processing options, use the Program command to download the design file to the iCE40 device.

- In Programmer, choose **Run > Program**, or click  on the toolbar.

The diagram below shows the iCE40 CRAM configuration flow

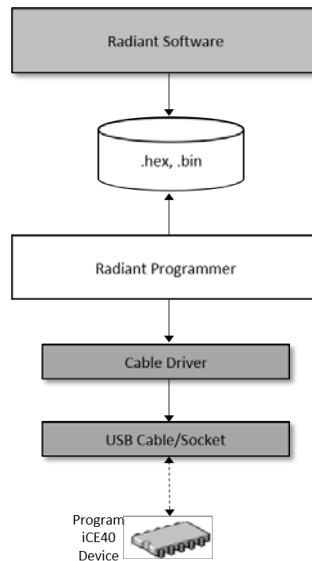

#### See Also

- [Programming and Configuring iCE40 Devices with Programmer](#)
- [Getting Started Dialog Box](#)
- [Device Properties Dialog Box](#)
- [Using the Radiant Programmer](#)
- [TN1248 - iCE40 Programming and Configuration](#)
- [Lattice Radiant Software User Guide](#)

## Programming an iCE40 Device Using the NVCM Flow

iCE40 NVCM Programming Flow uses Nonvolatile Configuration Memory (.nvcf) files output from the Radiant software.

When using the Radiant Programmer to configure an iCE40 device, you must first create a new Programmer project, or open an existing Programmer project. By creating a new Programmer project, you create a chain file (.xcf).

#### To create a new Programmer project:

1. Make sure that the board is turned on and that the Lattice USB programming cable is properly connected to the computer.
2. Issue the start command.


- ▶ In Windows, go to the Windows Start menu and choose **All Programs > Lattice Radiant Software > Accessories > Radiant Programmer**.
  - ▶ In Linux, from the `<install_path>/programmer/bin/linux64` directory, enter the following on a command line:  

```
./programmer
```
3. In the Getting Started dialog box, enter a project name in the **Project Name** box.
  4. Browse to the location where you wish your project to reside in the **Project Location** box.
  5. Choose one of the following:
    - ▶ **Create a new project from a scan.** This option creates a new project from a scan.
      - ▶ If you have a board connected to your computer, you can click the **Detect Cable** button to detect the cable and port. Otherwise, you can manually select cable and port from the **Cable** and **Port** pulldown lists.
    - ▶ **Create a New Blank Project** - This option creates a new blank Radiant Programmer project.
    - ▶ Click **OK**.
  6. In Programmer:
    - ▶ Select the iCE40 family in the Device Family drop-down menu.
    - ▶ Select the desired iCE40 device in the Device drop-down menu.
  7. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties**.
  8. In the Device Properties dialog box:
    - ▶ In the Target Memory pulldown menu, choose **Non Volatile Configuration Memory (NVCM)**.
    - ▶ In the Port Interface pulldown menu, choose **Slave SPI**.
    - ▶ In the Access Mode pulldown menu, choose **Direct Programming**.
    - ▶ In the Operation pulldown menu, choose the desired operation, as described in the Device Properties dialog box.
  9. In the Programming File box, browse to the Radiant software-generated NVCM programming file (.nvcn).
  10. Click **OK** to close the Device Properties dialog box.

After you have specified all of the processing options, use the Program command to download the design file to the iCE40 device.

In Programmer, choose **Run > Program**, or click  on the toolbar.

The diagram below shows the iCE40 NVCM programming flow

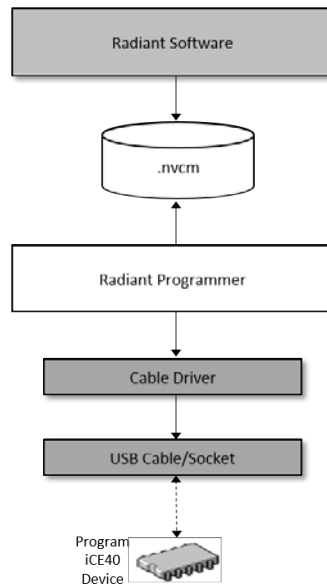

#### See Also

- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Getting Started Dialog Box](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Using the Radiant Programmer](#)
- ▶ [Lattice Radiant Software User Guide](#)
- ▶ [TN1248 - iCE40 Programming and Configuration](#)

## Programming an iCE40 Device Using SPI Flash Device Flow

iCE40 SPI Flash Programming Flow involves using a separate SPI Flash device to configure an iCE40 device.

When using the Radiant Programmer to configure an iCE40 device, you must first create a new Programmer project, or open an existing Programmer project. By creating a new Programmer project, you create a chain file (.xcf).

#### To create a new Programmer project:

1. Make sure that the board is turned on and that the Lattice USB programming cable is properly connected to the computer.
2. Issue the start command.
  - ▶ In Windows, go to the Windows Start menu and choose **All Programs > Lattice Radiant Software > Accessories > Radiant Programmer**.

- ▶ In Linux, from the `<install_path>/programmer/bin/linux64` directory, enter the following on a command line:

```
./programmer
```

3. In the Getting Started dialog box, enter a project name in the **Project Name** box.
4. Browse to the location where you wish your project to reside in the **Project Location** box.
5. Choose one of the following:
  - ▶ **Create a new project from a scan.** This option creates a new project from a scan.
    - ▶ If you have a board connected to your computer, you can click the **Detect Cable** button to detect the cable and port. Otherwise, you can manually select cable and port from the **Cable** and **Port** pulldown lists.
  - ▶ **Create a New Blank Project** - This option creates a new blank Radiant Programmer project.

#### Note


Because iCE40 devices are Target SPI, and not JTAG, Programmer does not support the “**Create a New Project from a Scan**” option for iCE40 devices.

6. Click **OK**.
7. In Programmer:
  - ▶ Select the iCE40 family in the Device Family drop-down menu.
  - ▶ Select the desired iCE40 device in the Device drop-down menu.
8. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties**.
9. In the Device Properties dialog box:
  - ▶ In the Target Memory pulldown menu, choose **External SPI Flash Memory (SPI FLASH)**.
  - ▶ In the Port Interface pulldown menu, choose **SPI**.
  - ▶ In the Access Mode pulldown menu, choose **Direct Programming**.
  - ▶ In the Operation pulldown menu, choose the desired operation, as described in Device Properties dialog box.
10. In the Programming File box, browse to the Radiant software-generated programming file (.hex or .bin).
11. In the Advanced Flash Options box, select **Family**, **Vendor**, **Device**, and **Package**.
12. Click **Load from File** to fill in the Data File Size box. You can change this size by typing a different file size. This feature is useful if you only want to use a portion of the file for the operation. If you change the file size, it must be no larger than the full file size or the device size.

13. Select start address and base address from **Start Address (Hex)** and **Base Address (Hex)** drop-down menus.
14. If you want to erase the flash device if a verify error occurs, click, the **Erase SPI Part on Programming Error** box.
15. Click **OK**.

After you have specified all of the processing options, use the Program command to download the design file to the SPI Flash device.

In Programmer, choose **Run > Program**, or click  on the toolbar. The diagram below shows the iCE40 SPI Flash programming flow.

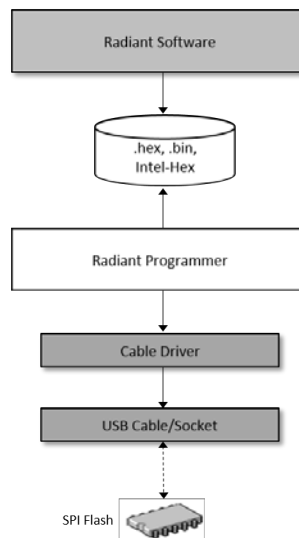

#### See Also

- ▶ [Programming and Configuring iCE40 Devices with Programmer](#)
- ▶ [Adding a Custom SPI Flash Device](#)
- ▶ [Editing a Custom SPI Flash Device](#)
- ▶ [Removing a Custom SPI Flash Device](#)
- ▶ [Programming Using Custom SPI Flash Device](#)
- ▶ [Getting Started Dialog Box](#)
- ▶ [Device Properties Dialog Box](#)
- ▶ [Using the Radiant Programmer](#)
- ▶ [Lattice Radiant Software User Guide](#)
- ▶ [TN1248 - iCE40 Programming and Configuration](#)

## Programming and Configuring LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL,

## MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Devices with Programmer

The Radiant Programmer supports programming and configuration of LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP devices.

This section describes:

- ▶ [Reading the Feature Row \(LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Only\)](#)
- ▶ [Programming the Feature Row \(LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only\)](#)
- ▶ [Programming the Password Key \(LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only\)](#)
- ▶ [Programming the Encryption Key \(LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only\)](#)
- ▶ [Programming the ECDSA Public Key \(LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only\)](#)
- ▶ [Executing LFMNX, LFMXO5, LFMXO5D, MachXO3D, MachXO3L, MachXO3LF Dry Run Features](#)
- ▶ [Setting Lock Policies \(LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP\)](#)
- ▶ [Setting External Configuration Ports Interfaces Locking Features \(LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP\)](#)

The following tables describe the feature row that contains user-specified information necessary for device operations. For example, you can specify the device's I2C slave address without using the default address from the factory.

**Table 91: Feature Row Definition - Feature Bit**

| Bit | Name                 | Note                                              |
|-----|----------------------|---------------------------------------------------|
| 1:0 | Authentication       | 00 - No Auth                                      |
| 2   | Decompression Enable |                                                   |
| 4:3 | Decryption Enable    | 00 - OFF<br>01 - Undefined<br>10 - ON<br>11 - OFF |



**Table 91: Feature Row Definition - Feature Bit**

| Bit | Name        | Note                              |
|-----|-------------|-----------------------------------|
| 5   | CID_EN      |                                   |
| 8:6 | Boot Select |                                   |
| 9   | PWD_EN      |                                   |
| 10  | PWD_ALL     |                                   |
| 11  | I3C_ONLY    | I3C Only / I2C Disable            |
| 12  | SLV_ON      | Slave port only when PROGN_EN set |
| 13  | PROGN_EN    | Enable user IO on PROGN           |
| 14  | INITN_EN    | Enable user IO on INITN           |
| 15  | DONE_en     | Enable user IO on DONE            |

**Table 92: Feature Row Definition - Feature**

| Bit   | Name                       | Note  |
|-------|----------------------------|-------|
| 3:0   | I3C Device Character [3:0] |       |
| 7:4   | I3C Instance ID [3:0]      | 7:4   |
| 15:8  | I3C Slave Address [7:0]    | 15:8  |
| 16    | I3C_bit32                  | 16    |
| 31:17 | RESERVED                   | 31:17 |
| 39:32 | Unique ID MSB [7:0]        | 39:32 |
| 47:40 | I2C Slave Address [7:0]    | 47:40 |
| 63:48 | RESERVED                   | 63:48 |
| 95:64 | Custom ID Code [31:0]      |       |

**Table 93: Feature Row Definition - CR1**

| Bit   | Name     | Note                                 |
|-------|----------|--------------------------------------|
| 31:25 | RESERVED |                                      |
| 24    | DPA_EN   | DPA enable for bitstream decryption. |
| 23:18 | RESERVED |                                      |

**Table 93: Feature Row Definition - CR1**

| Bit    | Name                              | Note                                                                                                                                                                                                                                                                 |
|--------|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 17     | 32-bit SPIM address               | Enable 32-bit MSPI addressing mode, default 24-bit addressing.                                                                                                                                                                                                       |
| 16     | Bulk Erase Enable                 | Control bit to enable auto SRAM Bulk Erase for refresh or PROGRAMN pin toggle.                                                                                                                                                                                       |
| 15     | SFDP Enable                       | Enables checking the SFDP signature during controller SPI booting. Should be enabled for flash devices that support SFDP.<br><br>1-enable reading SFDP signature from flash SFDP header.<br><br>0-enable reading LSCC signature from flash starting at address 0x000 |
| 14     | 32-bit SPIM commands              | Send 32-bit command set on MSPI, default 24-bit command set.                                                                                                                                                                                                         |
| 13     | Disable IO glitch filter          | Disable IO Glitch Filter during config                                                                                                                                                                                                                               |
| 12     | cfg_noise                         | CFG can enable the HSE noise generation by setting this to 1. If set to 0, gen_con[1] controls the noise generation.                                                                                                                                                 |
| [11:8] | Slave Idle Timer count value      | Slave Idle Timer count value.                                                                                                                                                                                                                                        |
| [7:5]  | Master Preamble Timer count value | preamble_count: number of clock cycles to get a valid preamble.<br><br>0 600000<br>1 400000<br>2 200000<br>3 40000<br>4 20000<br>5 4000<br>6 2000<br>7 400                                                                                                           |

**Table 93: Feature Row Definition - CR1**

| Bit   | Name                              | Note                                                                                                                                                                      |
|-------|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4     | signature_dis                     | If sfdp_en=0 do not read LSCC signature from flash, go directly to reading preamble.<br><br>1=skip checking signature when sfdp_en=0,<br>0=signature enabled (default 0). |
| [3:2] | Master Preamble Timer retry value | Number of times the Master Preamble detection should be retried. 0-No retry<br><br>1-Retry 1 time<br>2-Retry 3 times<br>3-Retry forever                                   |
| 1     | RESERVED                          |                                                                                                                                                                           |
| 0     | IO Ready Disable                  | When set to 1 disables waiting for IO ready.                                                                                                                              |

## Reading the Feature Row (LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP Only)

You can read the contents of the feature row of LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP, edit the settings, and program the new settings into the feature row of the device.

**To read the feature row of an LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Feature Row Programming**.

To program data into Shadow Register instead of OTP eFUSE, choose **Feature Row Pseudo Programming**.

5. In the Operation box, select **Read Feature Row**.
6. Click **OK** to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.

The Feature Row dialog box displays. The fields in the dialog box are not editable.

8. Click **Close** to close the Feature Row dialog box.

**To read the non-volatile control register 1 of an LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose Device Properties to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Feature Row Programming**.

To program data into Shadow Register instead of OTP eFUSE, choose **Feature Row Pseudo Programming**.

5. In the Operation box, select **Display Control NV Register1**.
6. Click **OK** to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.

The non-volatile control register 1 dialog box displays. The fields in the dialog box are not editable.

8. Click **Close** to close the dialog box.

## Programming the Feature Row (LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only)

You can program the contents of a .fea file to the feature row of an LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device.

**To program the feature row of an LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Feature Row Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Feature Row Pseudo Programming**.
5. In the Operation box, select **Program Feature Row**.
6. In the Feature Row Programming Options box, browse to the Feature Row (.fea) file.
7. Select the sector lock options and **Lock Read** access, **Lock Write** access, and/or **Lock Fabric Port** access based on choice of security.
8. Click **OK** to close the Device Properties dialog box.
9. Choose **Design > Program**, or click  on the toolbar.

**To edit the feature row of an LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Feature Row Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Feature Row Pseudo Programming**.
5. In the Operation box, select **Update Feature Row**.
6. Click **OK** to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.  
The Feature Row dialog box displays.
8. Edit the fields in the dialog box as desired, then click **Program**. A dialog box asking if you wish to overwrite the selected register. If you click Yes, the feature row is programmed as edited.

**To edit the Non-Volatile Control Register 1 of an LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Feature Row Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Feature Row Pseudo Programming**.
5. In the Operation box, select **Program Control NV Register1**.
6. Click **OK** to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.
8. In the non-volatile Control Register 1 dialog box displays.
9. Edit the fields in the dialog box as desired, then click Program. A dialog box asking if you wish to overwrite the selected register. If you click Yes, the device non-volatile Control Register 1 is programmed as edited.

## Programming the Password Key (LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only)

You can program the password key from a .key file to the LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device.

**To read the password key of an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.

4. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.

To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.

5. In the Operation box, select **Read Password Key**. If the device is empty, you can read the all 0 password directly,. If the device is programmed with password, you need to enable **Password Protection Options** and select the key file.
6. Click OK to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.

**To program the password key to an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.
5. In the Operation box, select **Program Password Key**.
6. In the Password Key Programming Options box, browse to the key (.key) file.
7. Select the sector lock options and **Lock Read** access, **Lock Write** access, and/or **Lock Fabric Port** access based on choice of security.
8. Click **OK** to close the Device Properties dialog box.
9. Choose **Design > Program**, or click  on the toolbar.

## Programming the Encryption Key (LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only)

You can program the encryption key from a .bek file to the LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device.

**To read the encryption key of an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.
5. In the Operation box, select **Read Encryption Key**.
6. Click **OK** to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.

**To program the encryption key to an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.
5. In the Operation box, select **Program Encryption Key**.
6. In the Encryption Key Programming Options box, browse to the key (.bek) file.
7. If designed, select “Encrypted Bitstream Only” option, type “yes” to confirm.
8. Select the sector lock options and Lock Read access, Lock Write access, and/or **Lock Fabric Port** access based on choice of security.
9. Click **OK** to close the Device Properties dialog box.
10. Choose **Design > Program**, or click  on the toolbar.



## Programming the ECDSA Public Key (LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP Only)

You can program the public key from a .pub, .pem, or .der file to the LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device.

**To read the public key of an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.
5. In the Operation box, select **Read Public Key**.
6. Click **OK** to close the Device Properties dialog box.
7. Choose **Design > Program**, or click  on the toolbar.

**To program the public key to an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.
5. In the Operation box, select **Program Public Key**.

6. In the Public Key Programming Options box, browse to the key (.pub, .pem, or .der) file.
7. Select the sector lock options and Lock Read access, Lock Write access, and/or **Lock Fabric Port** access based on choice of security.
8. Click **OK** to close the Device Properties dialog box.
9. Choose **Design > Program**, or click  on the toolbar.

## Executing LFMNX, LFMXO5, LFMXO5D, MachXO3D, MachXO3L, MachXO3LF Dry Run Features

LFMNX, LFMXO5, LFMXO5D, MachXO3D, MachXO3L, MachXO3LF can trigger a dry run bitstream downloading from external flash through the controller SPI port. “Dry run” means downloading the bitstream but without actually writing the configuration SRAM.

The following are done during the “dry run” process:

- ▶ Decrypting the Bitstream if it is encrypted
- ▶ Authentication with the Bitstream if it is required
- ▶ CRC check if it is enabled
- ▶ Execute command “ISC\_PROGRAM\_USERCODE” inside the bitstream and store the USERCODE to a special shadow register named “DRYRUN USERCODE”. The command does not override “SRAM USERCODE” or “Flash USERCODE”.

After the “dry run” finishes, it reports the execution status, such as execution pass/fail and authentication pass/fail. You can use the command “USERCODE\_DRYRUN” to read the shadow register of “DRYRUN USERCODE.”

### To execute a dry run from external SPI Flash Primary Image in Programmer:

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Access Mode drop-down menu, choose **Static RAM Cell Mode**.
4. In the Port Interface drop-down menu, choose the interface.
5. In the Operation box, select **SRAM External Primary Dry Run**.
6. Click **OK**.
7. Choose **Design > Program**, or click  on the toolbar.

The USERCODE from the Primary image is displayed if the “Dry Run” executed successfully.

**To execute a dry run from external SPI Flash Golden Image in Programmer:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Access Mode drop-down menu, choose **Static RAM Cell Mode**.
4. In the Port Interface drop-down menu, choose the interface.
5. In the Operation box, select **SRAM External Golden Dry Run**.
6. Click **OK**.
7. Choose **Design > Program**, or click  on the toolbar.

The USERCODE from the Golden image is displayed if the “Dry Run” executed successfully.

## Setting Lock Policies (LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP)

LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP provide read, program permission to access the FPGA configuration sectors. The security setup can be applied inside each individual sector to store security setting bits.

The sectors include:

- ▶ SRAM
- ▶ Feature Row sector
- ▶ Password Key sector
- ▶ Public Key sector
- ▶ Encryption Key sector

The centralized security settings can be applied to store central security setting bits for all of the FPGA configuration sectors. The detailed explanation of each central security bit is given as follows:

**Read Security Lock** Inside dedicated security policy sector. This bit provides Read Protection for a particular sector.

**Erase Security Lock** Stops erase activity to the SRAM sector. This bit prevents accidental erasure of user set-up.

**Write Security Lock** Inside dedicated security policy sector. This bit provides Write Protection for a particular sector.

**To read the locks policies of an LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP device:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Port Interface drop-down menu, choose **JTAG Interface**.
5. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.

To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.

6. In the Operation box, select **Read Locks Policies**.
7. Click **OK** to close the Device Properties dialog box
8. Choose **Design > Program**, or click  on the toolbar.

**To program the locks policies in Programmer:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Port Interface drop-down menu, choose **JTAG Interface**.
5. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.

To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.

6. In the Operation box, select **Program Locks Policies**.
7. Select the sector **Lock Fabric Port Access** based on choice of security.
8. Click **OK**.

## Setting External Configuration Ports Interfaces Locking Features (LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP)

LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LFMXO5D, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C, or UT24CP have Write access permission control for external CFG ports and an internal system bus to access the FPGA configuration sectors. External CFG ports include JTAG, target SPI and slave I2C.

**To setup the Ports interfaces security lock policy in Programmer:**

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Non Volatile Configuration Memory**.
4. In the Port Interface drop-down menu, choose **JTAG Interface**.
5. In the Access Mode drop-down menu, choose **Advanced Security Keys Programming**.  
To program data into Shadow Register instead of OTP eFUSE, choose **Advanced Security Keys Pseudo Programming**.
6. In the Operation box, select **Lock Ports Interface**.
7. Select **Lock Ports Access** and/or **Lock System Bus Access** based on desired choices of security.
8. Click **OK**.

## Setting LFMNX, MachXO3D, MachXO3L, MachXO3LF Version Rollback Protection Features

The LFMNX, MachXO3D, MachXO3L, MachXO3LF device families can support version rollback downloading from either on-die flash or external flash through the controller SPI port. “Version Rollback” means downloading first version or the latest version bitstream depending on user settings.

The following are done during the “Version Rollback” process:

- ▶ Decrypting the Bitstream if it is encrypted
- ▶ Authentication with the Bitstream. It is always required for this feature.
- ▶ CRC check if it is enabled
- ▶ Program the Authenticated DONE
- ▶ Execute command “ISC\_PROGRAM\_USERCODE” inside the bitstream
- ▶ Compare the USERCODE time stamp of two FLASH Blocks
- ▶ Booting from the FLASH sector that had the first version or the latest version bitstream depending on user settings

After the “Version Rollback” finished it will report the execution status, such as execution pass/fail and authentication pass/fail. The user can use the command “USERCODE” to read the USERCODE time stamp.

### Note

The VRBP\_EN bit in the feature row need to set to 1 to enable the version rollback protection feature.

### To execute a “Version Rollback” testing from on-die Flash in Programmer:

1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the [Device Properties Dialog Box](#).
3. In the Access Mode drop-down menu, choose **Flash Programming Mode**.
4. In the Port Interface drop-down menu, choose the interface.
5. In the Operation box, select **Flash Version Rollback Protection**.
6. Provide the data files (.jed) for both Flash A and Flash B.
7. Click **OK**.
8. Choose **Design > Program**, or click  on the toolbar.

The USERCODE of the first version or the latest version bitstream depending on user settings will be displayed.

## Programming the Flash Memory (LFMXO5, LFMXO5D Only)

You can program the contents of a .jed file to the configuration block of the flash memory of LFMXO5, LFMXO5D. The LFMXO5, LFMXO5D flash memory contains Flash Header, CFG0,CFG1,CFG2, UFM0, UFM1, UFM2, and 0-8 User Data memory blocks.

**To program the flash memory for the LFMXO5, LFMXO5D device:**


1. In Programmer, select the device that you want to edit.
2. Choose **Edit > Device Properties**, or click the  button on the toolbar, or right-click and choose **Device Properties** to display the Device Properties dialog box.
3. In the Target Memory drop-down menu, choose **Flash Configuration Memory**.
4. In the Port Interface drop-down menu, choose **JTAG Interface** or **Slave SPI Interface**.
5. In the Access Mode drop-down menu, choose **Direct Programming** or **Background Programming**.
6. In the Operation box, select **Erase,Program,Verify**.
7. Select the memory block, or blocks (Flash Header, CFG0,CFG1,CFG2, UFM0, UFM1, UFM2, or 0-8 User Data) that you wish to program.
8. In the Programming File box, browse to and select the programming file (.jed for CFG0,CFG1,CFG2, UFM0, UFM1, UFM2. .mcs for Flash Header and 0-8 User Data).
9. Click **OK** to close the Device Properties dialog box.
10. Choose **Design > Program**, or click  on the toolbar.

## Executing LFMXO5-15D Provision

This section describes the step-by-step procedure on how to perform provision using the LFMXO5D device.

**To execute provision for the LFMXO5D device:**

1. Connect the USB cable between your PC and MachXO5-NX Development Board's J11.
2. Launch Radiant Programmer.
3. Scan the device and select the following:
  - ▶ **Device Family:** LFMXO5D
  - ▶ **Device:** LFMXO5-15D
4. In the Device Properties dialog box, select the following:
  - ▶ **Target Memory:** Provision FLASH Configuration Memory
  - ▶ **Port Interface:** JTAG
  - ▶ **Access Mode:** Device Provisioning
  - ▶ **Operation:** Erase, Program, Verify, Refresh

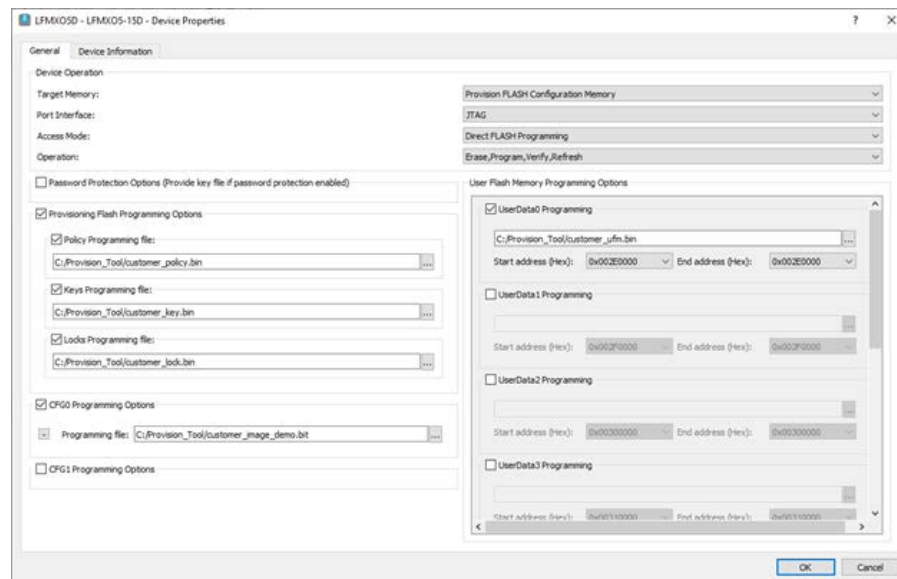

To distinguish the operation types, there are two access modes: **Device Provisioning** and **ESFB Operations**.

The Operation dropdown menu has the following options:

- ▶ Device Provisioning dropdown has **Erase, Program, Verify, Refresh** operation.

**Erase, Program, Verify, Refresh** – Initial step to provision a new device with Customer Policy, Key, and Locks files. You cannot provision a device again once the process has been completed. Re-provisioning is allowed after the zeroization is executed successfully.

- ▶ The rest of the operations are under **ESFB Operations**.

**Table 94: ESFB Operations**


| Operation                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Customer Image Filed Upgrade | <p>Executes multiple ESFB APIs to update the customer image in CFG0/CFG1, depending on the active image that is running. For example, when the current image is running at CFG0, this item will target CFG1 for an update or vice versa. This requires two input files, the keyblob_normal for Erase Customer Image, and the Customer Image .bit file. The sequence of API execution includes:</p> <ul style="list-style-type: none"> <li>▶ Read Current Image Status</li> <li>▶ Erase Customer Image</li> <li>▶ Program Customer Image</li> <li>▶ Dry-run Customer Image</li> <li>▶ Set Primary Image</li> </ul> |
| Read Current Image Status    | Reads the current running customer image status.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |



**Table 94: ESFB Operations**

| Operation                  | Description                                                                                                                                                                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Read Customer Image Status | Reads the specified customer image status.                                                                                                                                                                                                                                       |
| Erase Customer Image       | Erases the specified customer image.                                                                                                                                                                                                                                             |
| Program Customer Image     | Programs customer image into On-Chip flash.                                                                                                                                                                                                                                      |
| Dry-run Customer Image     | Executes a dry run of the customer image. Dry-run can only be executed on non-actively running image.                                                                                                                                                                            |
| Set Primary Image          | Sets either image 1 or image 2 as the primary image.                                                                                                                                                                                                                             |
| Software Reboot            | Reconfigures the FPGA with the primary image, similar to pulse PROGRAMN low, or REFRESH command via JTAG.                                                                                                                                                                        |
| Set Customer Image Valid   | Sets valid on an image. This function can only be executed on the current active image.                                                                                                                                                                                          |
| Read Minimum Version       | Reads the minimum image version that the device can roll back.                                                                                                                                                                                                                   |
| Set Minimum Version        | Sets the minimum image version that the device can roll back.                                                                                                                                                                                                                    |
| Read UFM                   | Reads the specified page in the UFM.                                                                                                                                                                                                                                             |
| Lock UFM                   | Locks a certain UFM sector specified by you for the erase & write operation.                                                                                                                                                                                                     |
| Unlock UFM                 | Unlocks a certain UFM sector specified by you for the erase & write operation.                                                                                                                                                                                                   |
| Erase UFM                  | Erases the specified UFM                                                                                                                                                                                                                                                         |
| Program UFM                | A program-specific page of the UFM.                                                                                                                                                                                                                                              |
| Read Unique ID             | Reads the Unique ID of the device.                                                                                                                                                                                                                                               |
| Read Policy Sector         | Reads customer policy related services that you can request from the ESFB IP.                                                                                                                                                                                                    |
| Read Key Sector            | Reads customer keys related services that you can request from the ESFB IP.                                                                                                                                                                                                      |
| Read Lock Sector           | Reads locks related services that you can request from the ESFB IP.                                                                                                                                                                                                              |
| KAK Revoke                 | Authorizes the KAK revoke key blob and revokes the specified KAK.                                                                                                                                                                                                                |
| Zeroization                | Sets the device to zero state so that the device can be recommissioned.                                                                                                                                                                                                          |
| Warm Reboot                | For hitless I/O FPGA reconfiguration, which minimizes system interruption while the FPGA is reconfigured with a new user image, the TransFR option in the Radiant Device Constraint Editor needs to be enabled in the user image for hitless I/O to work properly with this API. |

5. In the **Provisioning Flash Programming Options** section, navigate to the location where these files are stored and click **Open**:
  - ▶ <file\_name>.bin file
  - ▶ <file\_name\_key>.bin file
  - ▶ <file\_name\_lock>.bin file
6. In the **CFG0 Programming Options** section, browse to the location of your <file\_name>.bit file and click **Open**.
7. In the **User Flash Memory Programming Options** pane, browse to the location of your UserData0 (ufm.bin) file and click **Open**.
8. Click **OK** to program the files into the device's FLASH.

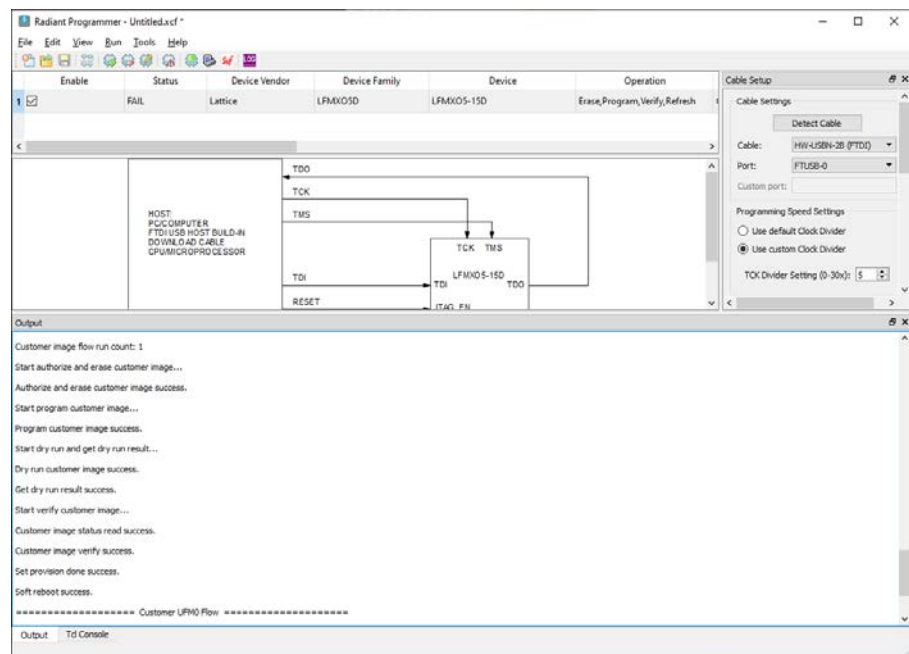

## Executing LFMXO5-55TD Provision

This section describes the step-by-step procedure on how to perform provision using the LFMXO5-55TD device.


### To execute provision for the LFMXO5-55TD device:

1. Connect the HW-USBN-2B cable between your PC and Lattice Sentry 4.0 MachXO5-55TD board.

For more information about HW-USBN-2B cable and jumper settings required on the Sentry 4.0 board, refer to chapters 8.3.1 to 8.3.4 of [FPGA-UG-02217-1.0 - Lattice Sentry 4.0 MachXO5-NX LFMXO5-55TD Walkthrough Guide](#).

2. Launch Radiant Programmer.

3. Scan the device and select the following:
  - ▶ **Device Family:** LFMXO5D
  - ▶ **Device:** LFMXO5-55TD
4. In the Device Properties dialog box, select the following:
  - ▶ **Target Memory:** Provision FLASH Configuration Memory
  - ▶ **Port Interface:** JTAG
  - ▶ **Access Mode:** Device Provisioning
  - ▶ **Operation:** Erase, Program, Verify, Refresh

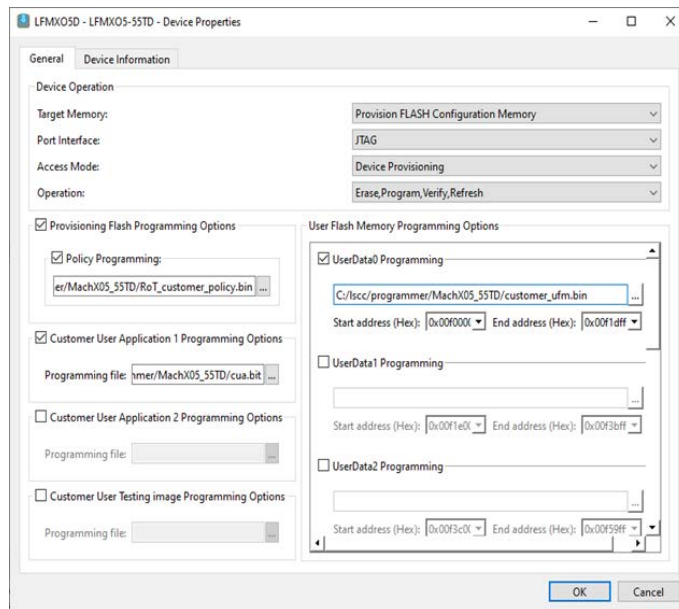

To distinguish the operation types, there are two access modes: **Device Provisioning** and **ESFB Operations**.

The Operation dropdown menu has the following options:

- ▶ Device Provisioning dropdown has **Erase, Program, Verify, Refresh** operation.

**Erase, Program, Verify, Refresh** – Initial step to provision a new device with Customer Policy, Key, and Locks files. You cannot provision a device again once the process has been completed. Re-provisioning is allowed after the zeroization is executed successfully.

- ▶ The rest of the operations are under **ESFB Operations**.


**Table 95: ESFB Operations**

| Operation                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Customer Image Field Upgrade | <p>Executes multiple ESFB APIs to update the customer image in CFG0/CFG1, depending on the active image that is running. For example, when the current image is running at CFG0, this item will target CFG1 for an update or vice versa. This requires two input files, the keyblob_normal for Erase Customer Image, and the Customer Image .bit file. The sequence of API execution includes:</p> <ul style="list-style-type: none"> <li>▶ Read Current Image Status</li> <li>▶ Erase Customer Image</li> <li>▶ Program Customer Image</li> <li>▶ Dry-run Customer Image</li> <li>▶ Set Primary Image</li> </ul> |
| CUT Image Update             | <p>Like Customer Image Field Upgrade, this operation is to update the CUT (Customer User Testing) Image. The sequence of API execution includes:</p> <ul style="list-style-type: none"> <li>▶ Erase Customer Image</li> <li>▶ Program Customer Image</li> <li>▶ Dry-run Customer Image</li> <li>▶ Set Primary Image</li> </ul>                                                                                                                                                                                                                                                                                    |
| User Firmware Update         | <p>Updates the User Firmware. The sequence of API Execution includes:</p> <ul style="list-style-type: none"> <li>▶ Erase User Firmware</li> <li>▶ Program User Firmware</li> <li>▶ Dry-run User Firmware</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                               |
| Read Current Image Status    | Reads the current running customer image status.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Read Customer Image Status   | Reads the specified customer image status.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Erase Customer Image         | Erases the specified customer image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Program Customer Image       | Programs customer image into On-Chip flash.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Dry-run Customer Image       | Executes a dry run of the customer image. Dry-run can only be executed on non-actively running image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Set Primary Image            | Sets either image 1 or image 2 as the primary image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Software Reboot              | Reconfigures the FPGA with the primary image, similar to pulse PROGRAMN low, or REFRESH command via JTAG.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Set Customer Image Valid     | Sets valid on an image. This function can only be executed on the current active image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Read Minimum Version         | Reads the minimum image version that the device can roll back.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

**Table 95: ESFB Operations**

| Operation           | Description                                                                                                                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set Minimum Version | Sets the minimum image version that the device can roll back.                                                                                                                                                                                                                    |
| Read UFM            | Reads the specified page in the UFM.                                                                                                                                                                                                                                             |
| Lock UFM            | Locks a certain UFM sector specified by you for the erase and write operation.                                                                                                                                                                                                   |
| Unlock UFM          | Unlocks a certain UFM sector specified by you for the erase and write operation.                                                                                                                                                                                                 |
| Erase UFM           | Erases the specified UFM.                                                                                                                                                                                                                                                        |
| Program UFM         | A program-specific page of the UFM.                                                                                                                                                                                                                                              |
| Read Unique ID      | Reads the Unique ID of the device.                                                                                                                                                                                                                                               |
| Read Trace ID       | Reads Trace ID.                                                                                                                                                                                                                                                                  |
| Read Policy Sector  | Reads customer policy related services that you can request from the ESFB IP.                                                                                                                                                                                                    |
| ISK Revoke          | Authorizes the ISK revoke key blob and revokes the specified ISK.                                                                                                                                                                                                                |
| KAK Revoke          | Authorizes the KAK revoke key blob and revokes the specified KAK.                                                                                                                                                                                                                |
| Zeroization         | Sets the device to zero state so that the device can be recommissioned.                                                                                                                                                                                                          |
| Warm Reboot         | For hitless I/O FPGA reconfiguration, which minimizes system interruption while the FPGA is reconfigured with a new user image, the TransFR option in the Radiant Device Constraint Editor needs to be enabled in the user image for hitless I/O to work properly with this API. |

- In the **Provisioning Flash Programming Options** section, navigate to the location where these files are stored and click **Open**:
  - ▶ <file\_name\_policy>.bin file
  - ▶ <file\_name\_application>.bit file
  - ▶ <file\_name\_user\_flash\_data>.bin file
- In the **Customer User Application 1 Programming Options** section, browse to the location of your <file\_name\_application>.bit file and click **Open**.
- In the **User Flash Memory Programming Options** pane, browse to the location of your UserData0 (<file\_name\_user\_flash\_data>.bin) file and click **Open**.
- Click **OK** to program the files into the device's FLASH.

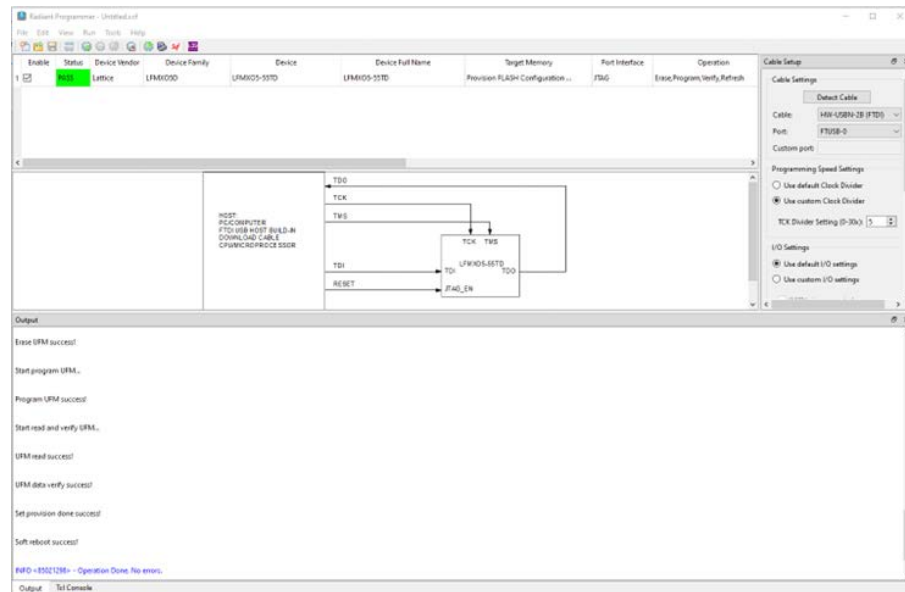

## Executing LFMXO5-55TDQ Provision


This section describes the step-by-step procedure on how to perform provision using the LFMXO5-55TDQ device.

### To execute provision for the LFMXO5-55TDQ device:

1. Connect the HW-USB-2B cable between your PC and Lattice Sentry 4.0 MachXO5-55TDQ board.

For more information about HW-USB-2B cable and jumper settings required on the Sentry 4.0 board, refer to chapters 8.3.1 to 8.3.4 of [FPGA-UG-02217- Lattice Sentry 4.0 MachXO5-NX LFMXO5-55TD Walkthrough Guide](#).

2. Launch Radiant Programmer.
3. Scan the device and select the following:
  - ▶ **Device Family:** LFMXO5D
  - ▶ **Device:** LFMXO5-55TDQ
4. In the Device Properties dialog box, select the following:
  - ▶ **Target Memory:** Provision FLASH Configuration Memory
  - ▶ **Port Interface:** JTAG
  - ▶ **Access Mode:** Device Provisioning
  - ▶ **Operation:** Erase, Program, Verify, Refresh

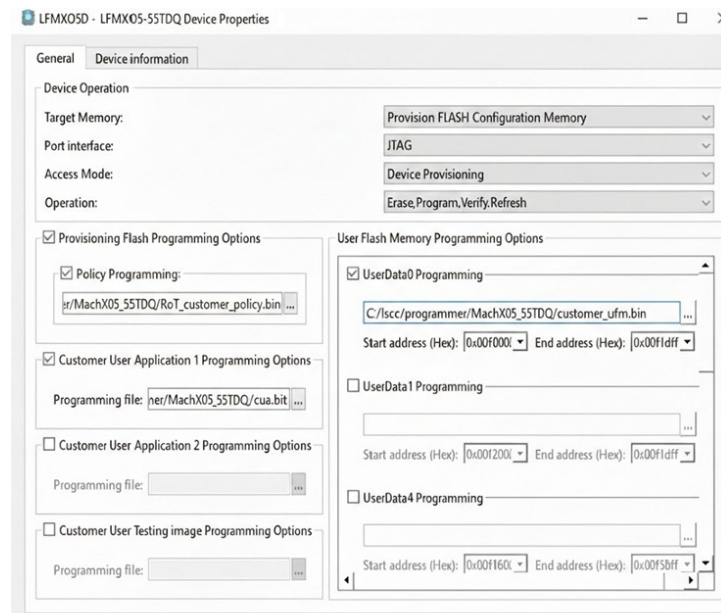

To distinguish the operation types, there are two access modes: **Device Provisioning** and **ESFB Operations**.

The Operation dropdown menu has the following options:

- ▶ Device Provisioning dropdown has **Erase, Program, Verify, Refresh** operation.
- Erase, Program, Verify, Refresh** – Initial step to provision a new device with Customer Policy, Key, and Locks files. You cannot provision a device again once the process has been completed. Re-provisioning is allowed after the zeroization is executed successfully.
- ▶ The rest of the operations are under **ESFB Operations**.

**Table 96: ESFB Operations**

| Operation                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Erase, Program, Verify, Refresh | Initial step to provision a new device with Customer Policy. You cannot provision a device again once the process has been completed. Re-provisioning is allowed after the zeroization is executed successfully.                                                                                                                                                                                                                                                                                                                                                                                                  |
| Customer Image Field Upgrade    | <p>Executes multiple ESFB APIs to update the customer image in CFG0/CFG1, depending on the active image that is running. For example, when the current image is running at CFG0, this item will target CFG1 for an update or vice versa. This requires two input files, the keyblob_normal for Erase Customer Image, and the Customer Image .bit file. The sequence of API execution includes:</p> <ul style="list-style-type: none"> <li>▶ Read Current Image Status</li> <li>▶ Erase Customer Image</li> <li>▶ Program Customer Image</li> <li>▶ Dry-run Customer Image</li> <li>▶ Set Primary Image</li> </ul> |
| CUT Image Update                | <p>Like Customer Image Field Upgrade, this operation is to update the CUT (Customer User Testing) Image. The sequence of API execution includes:</p> <ul style="list-style-type: none"> <li>▶ Erase Customer Image</li> <li>▶ Program Customer Image</li> <li>▶ Dry-run Customer Image</li> <li>▶ Set Primary Image</li> </ul>                                                                                                                                                                                                                                                                                    |
| User Firmware Update            | <p>Updates the User Firmware. The sequence of API Execution includes:</p> <ul style="list-style-type: none"> <li>▶ Erase User Firmware</li> <li>▶ Program User Firmware</li> <li>▶ Dry-run User Firmware</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                               |
| Read Current Image Status       | Reads the current running customer image status.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Read Customer Image Status      | Reads the specified customer image status.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Erase Customer Image            | Erases the specified customer image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Program Customer Image          | Programs customer image into On-Chip flash.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Dry-run Customer Image          | Executes a dry run of the customer image. Dry-run can only be executed on non-actively running image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Set Primary Image               | Sets either image 1 or image 2 as the primary image.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Software Reboot                 | Reconfigures the FPGA with the primary image, similar to pulse PROGRAMN low, or REFRESH command via JTAG.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

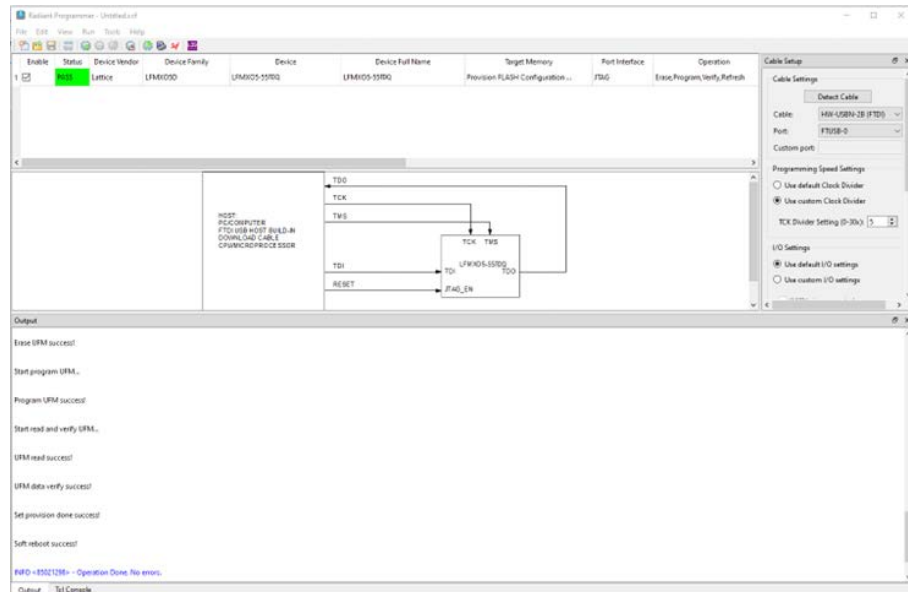


**Table 96: ESFB Operations**

| Operation                | Description                                                                                                                                                                                                                                                                      |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set Customer Image Valid | Sets valid on an image. This function can only be executed on the current active image.                                                                                                                                                                                          |
| Read Minimum Version     | Reads the minimum image version that the device can roll back.                                                                                                                                                                                                                   |
| Set Minimum Version      | Sets the minimum image version that the device can roll back.                                                                                                                                                                                                                    |
| Read UFM                 | Reads the specified page in the UFM.                                                                                                                                                                                                                                             |
| Lock UFM                 | Locks a certain UFM sector specified by you for the erase and write operation.                                                                                                                                                                                                   |
| Unlock UFM               | Unlocks a certain UFM sector specified by you for the erase and write operation.                                                                                                                                                                                                 |
| Erase UFM                | Erases the specified UFM.                                                                                                                                                                                                                                                        |
| Program UFM              | A program-specific page of the UFM.                                                                                                                                                                                                                                              |
| Read Unique ID           | Reads the Unique ID of the device.                                                                                                                                                                                                                                               |
| Read Trace ID            | Reads Trace ID.                                                                                                                                                                                                                                                                  |
| Read Policy Sector       | Reads customer policy related services that you can request from the ESFB IP.                                                                                                                                                                                                    |
| ISK Revoke               | Authorizes the ISK revoke key blob and revokes the specified ISK.                                                                                                                                                                                                                |
| KAK Revoke               | Authorizes the KAK revoke key blob and revokes the specified KAK.                                                                                                                                                                                                                |
| Zeroization              | Sets the device to zero state so that the device can be recommissioned.                                                                                                                                                                                                          |
| Warm Reboot              | For hitless I/O FPGA reconfiguration, which minimizes system interruption while the FPGA is reconfigured with a new user image, the TransFR option in the Radiant Device Constraint Editor needs to be enabled in the user image for hitless I/O to work properly with this API. |

- In the **Provisioning Flash Programming Options** section, navigate to the location where these files are stored and click **Open**:
  - ▶ <file\_name\_policy>.bin file
  - ▶ <file\_name\_application>.bit file
  - ▶ <file\_name\_user\_flash\_data>.bin file
- In the **Customer User Application 1 Programming Options** section, browse to the location of your <file\_name\_application>.bit file and click **Open**.

7. In the **User Flash Memory Programming Options** pane, browse to the location of your UserData0 (<file\_name\_user\_flash\_data>.bin) file and click **Open**.
8. Click **OK** to program the files into the device's FLASH.



# Deploying the Design with the Deployment Tool

The Radiant Deployment Tool allows you to generate files for deployment for single devices, a chain of devices, and can also convert data files to other formats and use the data files it produces to generate other data file formats.

The Radiant Deployment Tool is a stand-alone tool available from the Radiant Programmer software.

## To run the Deployment Tool:

- ▶ Do one of the following:
  - ▶ In the Programmer window, choose **Tools > Deployment Tool**.
  - ▶ In the Windows Start menu, choose **All Programs > Lattice Radiant Programmer > Deployment Tool**. Requires the stand-alone Programmer.
  - ▶ In Linux, go to the *<Programmer install\_path>/bin/lin64* directory, and enter the following on a command line:

```
./deployment
```

The Deployment Tool window opens.

A four-step wizard allows you to select deployment type, input file type, and output file type.

## See Also

- ▶ [Deployment Function Types](#)
- ▶ [iCE40 Warm Boot/Cold Boot Bitstream Output Options](#)
- ▶ [Input File Descriptions](#)
- ▶ [Input File Formats](#)
- ▶ [Bitstream Output File Descriptions](#)
- ▶ [Bitstream Output Formats](#)
- ▶ [SVF, and STAPL Output Formats](#)
- ▶ [Output Options Descriptions](#)
- ▶ [Creating a New Deployment](#)
- ▶ [Opening an Existing Deployment](#)
- ▶ [Encrypting a JEDEC with Deployment Tool](#)
- ▶ [Encrypting a Bitstream with Deployment Tool](#)
- ▶ [Authenticating a Bitstream with Deployment Tool \(LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP\)](#)
- ▶ [Opening an Existing Deployment While Running the Deployment Tool](#)
- ▶ [Creating a New Deployment While Running the Deployment Tool](#)
- ▶ [Using Quick Launch Button to Create a New Deployment](#)

- ▶ [Viewing the Deployment Tool Log File](#)
- ▶ [Changing the Deployment Tool Log File Settings](#)

## Deployment Function Types

This section provides tables that list device family, input file types, output file extensions, and options for each available deployment function type.

Click on the list items below to jump to topics that contain lists of device family, input file types, output file type/extensions, and options for each deployment function type.

- ▶ [File Conversion Deployment Function Type](#)
- ▶ [Tester Deployment Function Type](#)
- ▶ [Embedded System Deployment Function Type](#)
- ▶ [External Memory Deployment Type](#)

## File Conversion Deployment Function Type

Not supported for iCE40UP devices.

This topic provides tables that list device family, input file types, output file extensions, and options for File Conversion deployment function type:

**Table 97: IEEE 1532 ISC Data File—Device Family, Input File 1, and Output File**

| Device Family | Input File 1 | Output File     |
|---------------|--------------|-----------------|
| MachXO3D      | JEDEC (.jed) | ISC Data (.isc) |
| MachXO3L      |              |                 |
| MachXO3LF     |              |                 |

**Table 98: IEEE 1532 ISC Data File—Options**

| Device Family | Overwrite USERCODE   |                       |                 |
|---------------|----------------------|-----------------------|-----------------|
|               | Off (Default)        | On                    | Checksum        |
| MachXO3D      | Input File USERCODE. | User specified value. | JEDEC checksum. |
| MachXO3L      |                      |                       |                 |
| MachXO3LF     |                      |                       |                 |

**Table 99: Application Specific BSDL File—Device Family, Input File 1, Input File 2, and Output File**

| Device Family | Input File 1         | Input File 2        | Output File      |
|---------------|----------------------|---------------------|------------------|
| LAV-AT        | JEDEC (.jed)         | Generic BSDL (.bsm) | BSDL File (.bsm) |
| LFCPNX        | Argument File (.alt) |                     |                  |
| LFD2NX        |                      |                     |                  |
| LIFCL         |                      |                     |                  |
| LFMNX         |                      |                     |                  |
| LFMXO5        |                      |                     |                  |
| UT24C         |                      |                     |                  |
| UT24CP        |                      |                     |                  |
| MachXO3D      |                      |                     |                  |
| MachXO3L      |                      |                     |                  |
| MachXO3LF     |                      |                     |                  |

**Table 100: Application Specific BSDL File—Options**

| Device Family | Convert Bi-directional I/O's to Input and Output |          |
|---------------|--------------------------------------------------|----------|
|               | Off (Default)                                    | On       |
| LAV-AT        | Do not convert.                                  | Convert. |
| LFCPNX        |                                                  |          |
| LFD2NX        |                                                  |          |
| LIFCL         |                                                  |          |
| LFMNX         |                                                  |          |
| LFMXO5        |                                                  |          |
| UT24C         |                                                  |          |
| UT24CP        |                                                  |          |
| MachXO3D      |                                                  |          |
| MachXO3L      |                                                  |          |
| MachXO3LF     |                                                  |          |

**Table 101: JEDEC File—Device Family, Input File 1, and Output File**

| Device Family | Input File 1           | Output File  |
|---------------|------------------------|--------------|
| MachXO3D      | JEDEC (.jed)           | JEDEC (.jed) |
| MachXO3L      |                        |              |
| MachXO3LF     |                        |              |
|               | JEDEC (.jed)           |              |
|               | Bitstream (.bit, .rbt) |              |
|               | JEDEC (.jed)           |              |
|               | ISC Data (.isc)        |              |

**Table 102: JEDEC File—Options—Overwrite USERCODE**

| Device Family | Overwrite USERCODE   |                       |                 |                                      |
|---------------|----------------------|-----------------------|-----------------|--------------------------------------|
|               | Off (Default)        | On                    | Checksum        | Disable (Internal Command Line Only) |
| MachXO3D      | Input File USERCODE. | User specified value. | JEDEC checksum. | Omit USERCODE from JEDEC.            |
| MachXO3L      |                      |                       |                 |                                      |
| MachXO3LF     |                      |                       |                 |                                      |

**Table 103: JEDEC File—Options—Program Security Bit**

| Device Family | Program Security Bit         |                                |                         |
|---------------|------------------------------|--------------------------------|-------------------------|
|               | Default (Default)            | Off                            | On                      |
| MachXO3D      | Use setting from input file. | Do not program security fuses. | Program security fuses. |
| MachXO3L      |                              |                                |                         |
| MachXO3LF     |                              |                                |                         |

**Table 104: JEDEC File—Options—Encryption**

| Device Family  | Encryption          |
|----------------|---------------------|
| Encryption Key |                     |
| MachXO3D       | Load from BEK file. |
| MachXO3L       |                     |
| MachXO3LF      |                     |

**Table 105: Bitstream—Device Family, Input File 1, Format, and Output File**

| Device Family | Input File 1           | Format                 | Output File      |
|---------------|------------------------|------------------------|------------------|
| LAV-AT        | Bitstream (.bit, .rbt) | Binary Bitstream       | Bitstream (.bit) |
| LFCPNX        |                        |                        |                  |
| LFD2NX        |                        |                        |                  |
| LIFCL         |                        |                        |                  |
| LFMNX         |                        |                        |                  |
| LFMXO5        |                        |                        |                  |
| UT24C         |                        |                        |                  |
| UT24CP        |                        |                        |                  |
| MachXO3D      |                        |                        |                  |
| MachXO3L      |                        |                        |                  |
| MachXO3LF     |                        |                        |                  |
| LIFCL ES      |                        | ASCII Bitstream        | Bitstream (.rbt) |
|               |                        | Intel Hex              | Hex (.mcs)       |
|               |                        | Motorola Hex           | Hex (.exo)       |
|               |                        | Extended Tektronix Hex | Hex (.xtek)      |

**Table 106: Bitstream—Options—Encryption**

| Device Family | Encryption                                                               |                     |
|---------------|--------------------------------------------------------------------------|---------------------|
|               | Configuration Mode                                                       | Encryption Key      |
| LAV-AT        | Selects the appropriate configuration mode for the bitstream encryption. | Load from BEK File  |
| LFCPNX        |                                                                          | Load from BEK file. |
| LFD2NX        |                                                                          |                     |
| LIFCL         |                                                                          |                     |
| LFMNX         |                                                                          |                     |
| LFMXO5        |                                                                          |                     |
| UT24C         |                                                                          |                     |
| UT24CP        |                                                                          |                     |
| MachXO3D      |                                                                          |                     |
| MachXO3L      |                                                                          |                     |
| MachXO3LF     |                                                                          |                     |
| LIFCL ES      |                                                                          |                     |

**Table 107: Bitstream—Options—Encryption**

| Device Family | Encryption         |
|---------------|--------------------|
| LFCPNX        | Encryption Key     |
| LFD2NX        | Load from BEK File |
| LFMNX         |                    |
| LFMXO5        |                    |
| LIFCL         |                    |
| MachXO3D      |                    |
| MachXO3L      |                    |
| MachXO3LF     |                    |
| UT24C         |                    |
| UT24CP        |                    |
| LIFCL ES      |                    |



**Table 108: Bitstream—Options—Authentication**

| Device Family | Encryption                                                                                           |
|---------------|------------------------------------------------------------------------------------------------------|
| LFCPNX        | Authentication                                                                                       |
| LFD2NX        | Public Key and Private Key Signature                                                                 |
| LIFCL         | Load from GUI and load Public Key (.pub, .pem, or .der) file and Private File (.prv, .pem, or .der). |
| LFMNX         |                                                                                                      |
| LFMXO5        |                                                                                                      |
| UT24C         |                                                                                                      |
| UT24CP        |                                                                                                      |
| MachXO3D      |                                                                                                      |
| MachXO3L      |                                                                                                      |
| MachXO3LF     |                                                                                                      |

**Table 109: Bitstream Options—Verify ID Code, Frequency, Compression**

| Device Family | Verify ID Code               |                                 |                        | Frequency                    |                                   | Compression                  |                          |                  |
|---------------|------------------------------|---------------------------------|------------------------|------------------------------|-----------------------------------|------------------------------|--------------------------|------------------|
|               | Default (Default)            | On                              | Off                    | Default (Default)            | Frequency Selection               | Default (Default)            | On                       | Off              |
| LAV-AT        | Use setting from input file. | Include verify ID in bitstream. | Do not verify ID code. | Use setting from input file. | Valid frequency device dependent. | Use setting from input file. | Compress bitstream data. | Do not compress. |
| LFCPNX        |                              |                                 |                        |                              |                                   |                              |                          |                  |
| LFD2NX        |                              |                                 |                        |                              |                                   |                              |                          |                  |
| LIFCL         |                              |                                 |                        |                              |                                   |                              |                          |                  |
| LFMNX         |                              |                                 |                        |                              |                                   |                              |                          |                  |
| LFMXO5        |                              |                                 |                        |                              |                                   |                              |                          |                  |
| UT24C         |                              |                                 |                        |                              |                                   |                              |                          |                  |
| UT24CP        |                              |                                 |                        |                              |                                   |                              |                          |                  |
| MachXO3D      |                              |                                 |                        |                              |                                   |                              |                          |                  |
| MachXO3L      |                              |                                 |                        |                              |                                   |                              |                          |                  |
| MachXO3LF     |                              |                                 |                        |                              |                                   |                              |                          |                  |
| LIFCL ES      |                              |                                 |                        |                              |                                   |                              |                          |                  |

**Table 110: Bitstream Options—CRC Calculation, Overwrite USERCODE, Byte Wide Bit Mirror, and Retain Bitstream Header**

| Device Family | CRC Calculator               |                                  |                          | Overwrite USERCODE  |                       | Byte Wide Bit Mirror (Intel Hex (.mcs), Motorola Hex (.exo), and Extended Tektronix Hex (.xtek) only) |                  | Retain Bitstream Header (Intel Hex (.mcs), Motorola Hex (.exo), and Extended Tektronix Hex (.xtek) only) |                          |
|---------------|------------------------------|----------------------------------|--------------------------|---------------------|-----------------------|-------------------------------------------------------------------------------------------------------|------------------|----------------------------------------------------------------------------------------------------------|--------------------------|
|               | Default (Default)            | On                               | Global CRC Only          | Off (Default)       | On                    | Off (Default)                                                                                         | On               | Off (Default)                                                                                            | On                       |
| LAV-AT        | Use setting from input file. | Include CRC for each data frame. | Include global CRC only. | Input File USERCODE | User specified value. | No change to bit order.                                                                               | Flips each byte. | Replace bitstream header.                                                                                | Retain bitstream header. |
| LFCPNX        |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| LFD2NX        |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| LIFCL         |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| LFMNX         |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| LFMXO5        |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| UT24C         |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| UT24CP        |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| MachXO3D      |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| MachXO3L      |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| MachXO3LF     |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |
| LIFCL ES      |                              |                                  |                          |                     |                       |                                                                                                       |                  |                                                                                                          |                          |

**Table 111: JEDEC to Hex File Conversion**

| Device Family | Input File 1 | Format         | Output File       |
|---------------|--------------|----------------|-------------------|
| MachXO3D      | JEDEC (.jed) | ASCII Raw Hex  | ASCII Hex (.hex)  |
| MachXO3L      |              |                |                   |
| MachXO3LF     |              |                |                   |
|               |              | Binary Raw Hex | Binary Hex (.bin) |

## Tester Deployment Function Type

Not supported for iCE40UP devices.

This topic provides tables that list device family, input file types, output file extensions, and options for Tester deployment function type:

- ▶ [SVF Single Device](#)
- ▶ [SVF JTAG Chain](#)
- ▶ [STAPL Single Device](#)
- ▶ [STAPL JTAG Chain](#)

**Table 112: SVF Single Device**

| Device Family         | Input File 1           | Output File     |
|-----------------------|------------------------|-----------------|
| Lattice Single Device | Bitstream (.bit, .rpt) | SVF file (.svf) |

**Table 113: SVF Single Device—Options—Operation**

| Device Family         | Operation             |
|-----------------------|-----------------------|
| Lattice Single Device | Device-dependent list |

**Table 114: SVF Single Device—Options—Write Header and Comments, Write Rev D Standard SVF File**

| Device Family         | Write Header and Comments   |                            | Write Rev D Standard SVF File                                     |                      |
|-----------------------|-----------------------------|----------------------------|-------------------------------------------------------------------|----------------------|
|                       | On (Default)                | Off                        | Off (Default)                                                     | On                   |
| Lattice Single Device | Write headers and comments. | Omit headers and comments. | Rev. E Standard SVF. For Flash-based FPGAs, Lattice Extended SVF. | Rev. D Standard SVF. |

**Table 115: SVF Single Device—Options—Use RUNTEST from Rev C; For Erase, Program, and Verify Operations, Skip Verify**

| Device Family         | Use RUNTEST from Rev C |                 | For Erase, Program, and Verify Operations, Skip Verify |                                |
|-----------------------|------------------------|-----------------|--------------------------------------------------------|--------------------------------|
|                       | Off (Default)          | On              | Off (Default)                                          | On                             |
| Lattice Single Device | Standard RUNTEST.      | Rev. C RUNTEST. | Include verify in EPV operations.                      | Omit verify in EPV operations. |

**Table 116: SVF Single Device—Options—Include RESET at the End of the SVF File; Set Maximum Data Size per Row (Kbits)**

| Device Family         | Include RESET at the End of the SVF File       |                                         | Set Maximum Data Size per Row (Kbits) |                         |
|-----------------------|------------------------------------------------|-----------------------------------------|---------------------------------------|-------------------------|
|                       | Off (Default)                                  | On                                      | Off (Default)                         | On                      |
| Lattice Single Device | Do not write RESET at the end of the SVF file. | Write RESET at the end of the SVF file. |                                       | 8, 16, 32, 64, 128, 256 |

**Table 117: SVF JTAG Chain**

| Device Family | Input File 1    | Output File     |
|---------------|-----------------|-----------------|
| Lattice Chain | XCF file (.xcf) | SVF file (.svf) |

**Table 118: SVF JTAG Chain—Options—Operation**

| Device Family         | Operation              |
|-----------------------|------------------------|
| Lattice Single Device | Contained in XCF file. |

**Table 119: SVF JTAG Chain—Options—Write Header and Comments, Write Rev D Standard SVF File**

| Device Family         | Write Header and Comments   |                            | Write Rev D Standard SVF File                                     |                      |
|-----------------------|-----------------------------|----------------------------|-------------------------------------------------------------------|----------------------|
|                       | On (Default)                | Off                        | Off (Default)                                                     | On                   |
| Lattice Single Device | Write headers and comments. | Omit headers and comments. | Rev. E Standard SVF. For Flash-based FPGAs, Lattice Extended SVF. | Rev. D Standard SVF. |

**Table 120: SVF JTAG Chain—Options—Use RUNTEST from Rev C; For Erase, Program, and Verify Operations, Skip Verify**

| Device Family         | Use RUNTEST from Rev C |                 | For Erase, Program, and Verify Operations, Skip Verify |                                |
|-----------------------|------------------------|-----------------|--------------------------------------------------------|--------------------------------|
|                       | Off (Default)          | On              | Off (Default)                                          | On                             |
| Lattice Single Device | Standard RUNTEST.      | Rev. C RUNTEST. | Include verify in EPV operations.                      | Omit verify in EPV operations. |

**Table 121: SVF JTAG Chain—Options—Include RESET at the End of the SVF File; Set Maximum Data Size per Row (Kbits)**

| Device Family         | Include RESET at the End of the SVF File       |                                         | Set Maximum Data Size per Row (Kbits) |                         |
|-----------------------|------------------------------------------------|-----------------------------------------|---------------------------------------|-------------------------|
|                       | Off (Default)                                  | On                                      | Off (Default)                         | On                      |
| Lattice Single Device | Do not write RESET at the end of the SVF file. | Write RESET at the end of the SVF file. |                                       | 8, 16, 32, 64, 128, 256 |

**Table 122: STAPL Single Device**

| Device Family         | Input File 1           | Output File       |
|-----------------------|------------------------|-------------------|
| Lattice Single Device | Bitstream (.bit, .rpt) | STAPL file (.stp) |

**Table 123: STAPL Single Device—Options—ACA Compression; Include Print Statements; For Erase, Program, and Verify Operations, Skip Verify**

| Device Family         | ACA Compression |                  | Include Print Statements      |                           | For Erase, Program, and Verify Operations, Skip Verify |                                |
|-----------------------|-----------------|------------------|-------------------------------|---------------------------|--------------------------------------------------------|--------------------------------|
|                       | On (Default)    | Off              | Off (Default)                 | On                        | Off (Default)                                          | On                             |
| Lattice Single Device | Compress data.  | Uncompress data. | Print statements as comments. | Include print statements. | Include verify in EPV operations.                      | Omit verify in EPV operations. |

**Table 124: STAPL JTAG Chain**

| Device Family | Input File 1    | Output File       |
|---------------|-----------------|-------------------|
| Lattice Chain | XCF file (.xcf) | STAPL file (.stp) |

**Table 125: STAPL JTAG Chain—Options—ACA Compression; Include Print Statements; For Erase, Program, and Verify Operations, Skip Verify**

| Device Family | ACA Compression |                  | Include Print Statements      |                           | For Erase, Program, and Verify Operations, Skip Verify |                                |
|---------------|-----------------|------------------|-------------------------------|---------------------------|--------------------------------------------------------|--------------------------------|
|               | On (Default)    | Off              | Off (Default)                 | On                        | Off (Default)                                          | On                             |
| Lattice Chain | Compress data.  | Uncompress data. | Print statements as comments. | Include print statements. | Include verify in EPV operations.                      | Omit verify in EPV operations. |

## Embedded System Deployment Function Type

This topic provides tables that list device family, input file types, output file extensions, and options for Embedded System deployment function type.

**Table 126: JTAG Full VME Embedded -- Device Family, Input XCF File, and Output File**

| Device Family | Input XCF File                                                                                                                                                                                                                                                                                                                                    | Output File     |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| LAV-AT        | XCF File (.xcf) - Programmer Project file. XCF files can be used to save the setup of a Programmer Project. XCF files can either be loaded back into Programmer to work on a previous project or loaded into deployment tool for file conversions, generate a tester file, generate an embedded system file, or generate an external memory file. | VME File (.vme) |
| LFCPNX        |                                                                                                                                                                                                                                                                                                                                                   |                 |
| LFD2NX        |                                                                                                                                                                                                                                                                                                                                                   |                 |
| LIFCL         |                                                                                                                                                                                                                                                                                                                                                   |                 |
| LFMNX         |                                                                                                                                                                                                                                                                                                                                                   |                 |
| LFMXO5        |                                                                                                                                                                                                                                                                                                                                                   |                 |
| UT24C         |                                                                                                                                                                                                                                                                                                                                                   |                 |
| UT24CP        |                                                                                                                                                                                                                                                                                                                                                   |                 |
| MachXO3D      |                                                                                                                                                                                                                                                                                                                                                   |                 |
| MachXO3L      |                                                                                                                                                                                                                                                                                                                                                   |                 |
| MachXO3LF     |                                                                                                                                                                                                                                                                                                                                                   |                 |
| LIFCL ES      |                                                                                                                                                                                                                                                                                                                                                   |                 |

The following table lists options -- Compress VME File, Convert VME Files to HEX (c.) File-Based Embedded VME -- for JTAG Full VME embedded deployment.

**Table 127: JTAG Full VME Embedded Options -- Compress VME File, Convert VME Files to HEX (c.) File-Based Embedded VME**

| Device Family | Compress VME                                                                                                                                                                                                                                                            |                    | Convert VME Files to HEX (c.) File-Based Embedded VME                                                                                                                                                                                                                                                                                                                                                                                   |                         |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| LAV-AT        | On (Default)                                                                                                                                                                                                                                                            | Off                | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                           | On                      |
| LFCPNX        | Compress data. This option reduces the file size of the VME file through compression, using less memory space. Unchecking this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance. | Uncompressed data. | By default this operation is turned off, this will create a VME file that will be used in file based embedded programming where the programming of the device is based on the input file. When this option is turned on then it will create a .c file which will be used in EPROM base programming to create a single compiled image that will be loaded in to the CPU. An then the CPU will use this image to then program the device. | Generate Hex (.c) file. |
| LFD2NX        |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LIFCL         |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LFMNX         |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LFMXO5        |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| UT24C         |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| UT24CP        |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| MachXO3D      |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| MachXO3L      |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| MachXO3LF     |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LIFCL ES      |                                                                                                                                                                                                                                                                         |                    |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |

The following table lists options -- Compact VME File, Fixed Pulse Width (Rev. D) -- for JTAG Full VME embedded deployment.

**Table 128: JTAG Full VME Embedded Options -- Compact VME File, Fixed Pulse Width (Rev. D)**

| Device Family | Compact VME File                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                   | Fixed Pulse Width (Rev. D)                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                             |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
|               | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | On                | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | On                          |
| LAV-AT        | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | On                | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | On                          |
| LFCPNX        | By default this operation is turned off. When this option is turned on it will split the VME data file into two different sections. An algorithm section and a data section. Whenever there is data needed in the algorithm section it will get it from the data section. This option is useful to turn on when the VME file is repeating the same operation even with different data. The operation will be in a loop and will reference the data section. This option will reduce the file size of the VME file. | Compact VME file. | By default this setting is off enabling looping (status polling algorithm) in the VME file. When it is turned on then there will be no looping (status polling algorithm) and instead commands in loops will be repeated for as many times as the loop iterated for. Status polling algorithm is a Lattice specific command in VME files, turning this option on makes the VME file generic and is useful when programming through a non-Lattice device, but increases file size. | Fixed Pulse Width VME file. |
| LFD2NX        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| LIFCL         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| LFMNX         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| LFMXO5        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| UT24C         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| UT24CP        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| MachXO3D      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| MachXO3L      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| MachXO3LF     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |
| LIFCL ES      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |

The following table lists options -- Verify USERCODE, Program Device if Fails -- for JTAG Full VME embedded deployment.

**Table 129: JTAG Full VME Embedded Options -- Verify USERCODE, Program Device if Fails**

| Device Family | Verify USERCODE, Program Device if Fails                                                                                                                                                                                                                                                                                                                                                                                                    |                                                           |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
|               | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                               | On                                                        |
| LAV-AT        | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                               | On                                                        |
| LFCPNX        | By default this operation is turn off and preforms the standard erase, program, verify flow. When this option is turned on then before attempting to program a device it will check to see if the USERCODE of the device is the same as the file to be programmed. If the USERCODEs are the same then that device will be skipped and will not be reprogrammed, otherwise if the USERCODEs do not match then the device will be programmed. | Verify USERCODE, Program device if USERCODE Verify Fails. |
| LFD2NX        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LIFCL         |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LFMNX         |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LFMXO5        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| UT24C         |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| UT24CP        |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| MachXO3D      |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| MachXO3L      |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| MachXO3LF     |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |
| LIFCL ES      |                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                           |

The following table lists options -- Maximum Memory Allocation Size Per Row of Data (Kbytes) -- for JTAG Full VME embedded deployment.

**Table 130: JTAG Full VME Embedded Options -- Include Header, Include Comment, Maximum Memory Allocation Size Per Row of Data (Kbytes)**

| Device Family | Include Header                                                                                                                                                                                                                                                        |                           | Include Comment                                                                                                                                                                                                       |                               | Maximum Memory Allocation Size Per Row of Data (Kbytes)                                                                                                                                                                                                                                                                                                                                   |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT        | Off (Default)                                                                                                                                                                                                                                                         | On                        | Off (Default)                                                                                                                                                                                                         | On                            | Set the Maximum buffer size. By default this size of the buffer is 64k, but if a system has a limitation on the max buffer size only being 16k then this option can be set to 16k to compensate for that limitation. Or if the system can support buffers of more than 64k than the setting can be increase to 128k or 256k. Valid values for this operation are 8, 16, 32, 64, 128, 256. |
| LFCPNX        | By default the header is included in the VME file otherwise the header file is omitted from the VME file. The header contains information on the version and is useful in debugging. Turning the header off can be used to reduce the file size of the VME file size. | Omit header from VME file | The default is off which does not include comments in the VME file, if turned on then comments will appear for the operations. Turning comments on is useful for debugging the VME file, but will increase file size. | Include comments in VME file. |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFD2NX        |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LIFCL         |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFMNX         |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LFMXO5        |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| UT24C         |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| UT24CP        |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| MachXO3D      |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| MachXO3L      |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| MachXO3LF     |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |
| LIFCL ES      |                                                                                                                                                                                                                                                                       |                           |                                                                                                                                                                                                                       |                               |                                                                                                                                                                                                                                                                                                                                                                                           |

The following table lists device family, input file types, and output file extensions for JTAG Slim VME embedded deployment.

**Table 131: JTAG Slim VME Embedded -- Device Family, Input File 1, Output File 1, and Output File 2**

| Device Family | Input File      | Output File 1                                                                                                                                                                                                   | Output File 2                                                                                                                                                                                                                                     |
|---------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT        | XCF File (.xcf) | Algorithm VME File (*_algo.vme) - This is the algorithm file that specifies which operations will be executed must be used with a VME data file. This file is used in device programming or in field upgrading. | Data VME File (*_data.vme) - This is the data file that provides the data that the algorithm file will use to preforms executed operations must be used with a VME algorithm file. This file is used in device programming or in field upgrading. |
| LFCPNX        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFD2NX        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LIFCL         |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFMNX         |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LFMXO5        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| UT24C         |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| UT24CP        |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| MachXO3D      |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| MachXO3L      |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| MachXO3LF     |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |
| LIFCL ES      |                 |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                   |



The following table lists options -- Compressed Embedded Files, convert VME files to HEX (c.) File-Based Embedded VME -- for JTAG Slim VME embedded deployment..

**Table 132: JTAG Slim VME Embedded Options -- Compressed VME Data File, Convert VME files to HEX (c.) File-Based Embedded VME**

| Device Family | Compress VME Data File                                                                                                                                                                                                                                                  |                  | Convert VME files to HEX (c.) File-Based Embedded VME                                                                                                                                                                                                                                                                                                                                                                                   |                         |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
|               | On (Default)                                                                                                                                                                                                                                                            | Off              | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                           | On                      |
| LAV-AT        | Compress data. This option reduces the file size of the VME file through compression, using less memory space. Unchecking this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance. | Do not compress. | Off (Default)                                                                                                                                                                                                                                                                                                                                                                                                                           | On                      |
| LFCPNX        |                                                                                                                                                                                                                                                                         |                  | By default this operation is turned off, this will create a VME file that will be used in file based embedded programming where the programming of the device is based on the input file. When this option is turned on then it will create a .c file which will be used in EPROM base programming to create a single compiled image that will be loaded in to the CPU. An then the CPU will use this image to then program the device. | Generate Hex (.c) file. |
| LFD2NX        |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LIFCL         |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LFMNX         |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LFMXO5        |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| UT24C         |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| UT24CP        |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| MachXO3D      |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| MachXO3L      |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| MachXO3LF     |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |
| LIFCL ES      |                                                                                                                                                                                                                                                                         |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                         |

The following table lists device family, input file types, and output file extensions for Target SPI embedded deployment.

**Table 133: Slave SPI Embedded -- Device Family, Input File 1, Output File 1, and Output File 2**

| Device Family | Input File                      | Output File 1                                                                                                                                                                                                   | Output File 2          |
|---------------|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| LAV-AT        | XCF File (.xcf)                 | Algorithm VME File (*_algo.vme) - This is the algorithm file that specifies which operations will be executed must be used with a VME data file. This file is used in device programming or in field upgrading. | Data File (*_data.sed) |
| LFCPNX        | Bitstream (.bit)                |                                                                                                                                                                                                                 |                        |
| LFD2NX        |                                 |                                                                                                                                                                                                                 |                        |
| LIFCL         |                                 |                                                                                                                                                                                                                 |                        |
| LFMNX         |                                 |                                                                                                                                                                                                                 |                        |
| LFMXO5        |                                 |                                                                                                                                                                                                                 |                        |
| UT24C         |                                 |                                                                                                                                                                                                                 |                        |
| UT24CP        |                                 |                                                                                                                                                                                                                 |                        |
| MachXO3D      |                                 |                                                                                                                                                                                                                 |                        |
| MachXO3L      |                                 |                                                                                                                                                                                                                 |                        |
| MachXO3LF     |                                 |                                                                                                                                                                                                                 |                        |
| LIFCL ES      |                                 |                                                                                                                                                                                                                 |                        |
| ICE40         | XCF File (.xcf)<br>NVCM (.nvcm) |                                                                                                                                                                                                                 |                        |

The following table lists options -- Compress Embedded Files, Convert VME files to HEX (c.) File-Based Embedded VME -- for Target SPI embedded deployment..

**Table 134: Slave SPI Embedded Options -- Compress Embedded Files, Convert VME files to HEX (c.) File-Based Embedded VME**

| Device Family                                                                                                              | Device Family                                                                                                                                                                                                                                                           | Convert VME files to HEX (c.) File-Based Embedded VME | Generate Hex (.c) File                                                                                                                                                                                                                                                                                                                                                                                                                  | Operation (.xcf and .jed files only) |
|----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| LAV-AT<br>LFCPNX<br>LFD2NX<br>LIFCL<br>LFMNX<br>LFMXO5<br>UT24C<br>UT24CP<br>MachXO3D<br>MachXO3L<br>MachXO3LF<br>LIFCL ES | On (Default)                                                                                                                                                                                                                                                            | Off                                                   | On (Default)                                                                                                                                                                                                                                                                                                                                                                                                                            | On                                   |
|                                                                                                                            | Compress data. This option reduces the file size of the VME file through compression, using less memory space. Unchecking this option generates an uncompressed VME, which is useful for debugging. Compressed and uncompressed VME have the same level of performance. | Do not compress.                                      | By default this operation is turned off, this will create a VME file that will be used in file based embedded programming where the programming of the device is based on the input file. When this option is turned on then it will create a .c file which will be used in EPROM base programming to create a single complied image that will be loaded in to the CPU. An then the CPU will use this image to then program the device. | Generate Hex (.c) file.              |

The following table lists device family, input file types, and output file extensions for I2C embedded deployment.

**Table 135: I2C Embedded -- Device Family, Input File 1, Output File 1, and Output File 2**

| Device Family | Input File       | Output File 1               | Output File 2          |
|---------------|------------------|-----------------------------|------------------------|
| LAV-AT        | XCF File (.xcf)  | Algorithm File (*_algo.sea) | Data File (*_data.sed) |
| LFCPNX        | Bitstream (.bit) |                             |                        |
| LFD2NX        |                  |                             |                        |
| LIFCL         |                  |                             |                        |
| LFMNX         |                  |                             |                        |
| LFMXO5        |                  |                             |                        |
| UT24C         |                  |                             |                        |
| UT24CP        |                  |                             |                        |
| MachXO3D      |                  |                             |                        |
| MachXO3L      |                  |                             |                        |
| MachXO3LF     |                  |                             |                        |
| LIFCL ES      |                  |                             |                        |

The following table lists options -- Compress Embedded Files, Convert VME files to HEX (c.) File-Based Embedded VME, Operation (.xcf and .jed files only), I2C Slave Address -- for I2C embedded deployment.

**Table 136: I2C Embedded Options -- Compress Embedded Files, Convert VME files to HEX (c.) File-Based Embedded VME, Operation (.xcf and .jed files only), I2C Slave Address**

| Device Family    | Compressed Embedded Files |           | Convert VME files to HEX (c.) File-Based Embedded VME |                | Operation (.jed files only)                                                 | I2C Slave Address                                                                                                                                                         |
|------------------|---------------------------|-----------|-------------------------------------------------------|----------------|-----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LAV-AT<br>LFCPNX | On<br>(Default)           | Off       | Off (Default)                                         | On             | The list of options and operation is dependent on which device is selected. | Used to set the I2C Slave address. By default the value is 0b1000000. The user can modify this value if the value of the I2C Slave Address if there project calls for it. |
| LFD2NX           | Compress                  | Do not    | By default this                                       | Generate       |                                                                             |                                                                                                                                                                           |
| LIFCL            | embedded                  | compress. | operation is turned                                   | Hex (.c) file. |                                                                             |                                                                                                                                                                           |
| LFMNX            | files.                    |           | off, this will create a                               |                |                                                                             |                                                                                                                                                                           |
| LFMXO5           |                           |           | VME file that will be                                 |                |                                                                             |                                                                                                                                                                           |
| UT24C            |                           |           | used in file based                                    |                |                                                                             |                                                                                                                                                                           |
| UT24CP           |                           |           | embedded                                              |                |                                                                             |                                                                                                                                                                           |
| MachXO3D         |                           |           | programming where                                     |                |                                                                             |                                                                                                                                                                           |
| MachXO3L         |                           |           | the programming of                                    |                |                                                                             |                                                                                                                                                                           |
| MachXO3LF        |                           |           | the device is based                                   |                |                                                                             |                                                                                                                                                                           |
| LIFCL ES         |                           |           | on the input file.                                    |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | When this option is                                   |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | turned on then it will                                |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | create a .c file which                                |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | will be used in                                       |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | EPROM base                                            |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | programming to                                        |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | create a single                                       |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | compiled image that                                   |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | will be loaded in to                                  |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | the CPU. An then                                      |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | the CPU will use this                                 |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | image to then                                         |                |                                                                             |                                                                                                                                                                           |
|                  |                           |           | program the device.                                   |                |                                                                             |                                                                                                                                                                           |

The following table lists options -- Include Comments for I2C embedded deployment.

**Table 137: I2C Embedded Options -- Include Comments**

| Device Family | Include Comments                                                                                                                                                                                                      |    |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| LAV-AT        | Off (Default)                                                                                                                                                                                                         | On |
| LFCPNX        |                                                                                                                                                                                                                       |    |
| LFD2NX        |                                                                                                                                                                                                                       |    |
| LIFCL         |                                                                                                                                                                                                                       |    |
| LFMNX         |                                                                                                                                                                                                                       |    |
| LFMXO5        |                                                                                                                                                                                                                       |    |
| UT24C         |                                                                                                                                                                                                                       |    |
| UT24CP        |                                                                                                                                                                                                                       |    |
| MachXO3D      |                                                                                                                                                                                                                       |    |
| MachXO3L      |                                                                                                                                                                                                                       |    |
| MachXO3LF     |                                                                                                                                                                                                                       |    |
| LIFCL ES      |                                                                                                                                                                                                                       |    |
|               | The default is off which does not include comments in the VME file, if turned on then comments will appear for the operations. Turning comments on is useful for debugging the VME file, but will increase file size. |    |

The following table lists options -- Fixed Pulse Width for I2C embedded deployment.

**Table 138: I2C Embedded Options -- Fixed Pulse Width**

| Device Family                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Include       | Comments |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----------|
| LAV-AT                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Off (Default) | On       |
| LFCPNX                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |               |          |
| LFD2NX                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |               |          |
| LIFCL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |          |
| LFMNX                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |          |
| LFMXO5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |               |          |
| UT24C                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |          |
| UT24CP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |               |          |
| MachXO3D                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |               |          |
| MachXO3L                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |               |          |
| MachXO3LF                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |               |          |
| LIFCL ES                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |               |          |
| <p>By default this setting is off. Used fixed pulse width. enabling looping (status polling algorithm) in the VME file. When it is turned on then there will be no looping (status polling algorithm) and instead commands in loops will be repeated for as many times as the loop iterated for. Status polling algorithm is a Lattice specific command in VME files, turning this option on makes the VME file generic and is useful when programming through a non-Lattice device, but increases file size.</p> |               |          |

## External Memory Deployment Type

This topic provides tables that list device family, input file types, output file extensions, and options for File Conversion deployment function type:

- ▶ [Hex Conversion](#)
- ▶ [Dual Boot](#)
- ▶ [Ping-Pong Boot](#)
- ▶ [Advanced SPI Flash](#)
- ▶ [sysCONFIG Daisy Chain](#)

**Table 139: Hex Conversion**

| Device Family | Input File             | Output File 1          | Output File 2 |
|---------------|------------------------|------------------------|---------------|
| iCE40         | Bitstream (.bin)       | Intel Hex              | Hex (.mcs)    |
|               |                        | Motorola Hex           | Hex (.exo)    |
|               |                        | Extended Tectronix Hex | Hex (.xtek)   |
| LAV-AT        | Bitstream (.bit, .rbt) | Intel Hex              | Hex (.mcs)    |
| LFCPNX        |                        | Motorola Hex           | Hex (.exo)    |
| LFD2NX        |                        | Extended Tectronix Hex | Hex (.xtek)   |
| LIFCL         |                        |                        |               |
| LFMNX         |                        |                        |               |
| LFMXO5        |                        |                        |               |
| UT24C         |                        |                        |               |
| UT24CP        |                        |                        |               |
| MachXO3D      |                        |                        |               |
| MachXO3L      |                        |                        |               |
| MachXO3LF     |                        |                        |               |
| LIFCL ES      |                        |                        |               |

**Table 140: Hex Conversion Options—Program Security Bit**

| Device Family | Program Security Bit         |                                |                         |
|---------------|------------------------------|--------------------------------|-------------------------|
| LAV-AT        | Default (Default)            | Off                            | On                      |
| LFCPNX        |                              |                                |                         |
| LFD2NX        |                              |                                |                         |
| LIFCL         |                              |                                |                         |
| LFMNX         |                              |                                |                         |
| LFMXO5        |                              |                                |                         |
| UT24C         |                              |                                |                         |
| UT24CP        |                              |                                |                         |
| MachXO3D      |                              |                                |                         |
| MachXO3L      |                              |                                |                         |
| MachXO3LF     |                              |                                |                         |
| LIFCL ES      |                              |                                |                         |
|               | Use setting from input file. | Do not program security fuses. | Program security fuses. |

**Table 141: Hex Conversion Options—Encryption**

| Device Family | Encryption                                                               |                     |
|---------------|--------------------------------------------------------------------------|---------------------|
|               | Configuration Mode                                                       | Encryption Key      |
| LAV-AT        | Selects the appropriate configuration mode for the bitstream encryption. | Load from BEK File. |
| LIFCL         |                                                                          |                     |
| LFMNX         |                                                                          |                     |
| LFMXO5        |                                                                          |                     |
| LFD2NX        |                                                                          |                     |
| UT24C         |                                                                          |                     |
| MachXO3D      |                                                                          |                     |
| MachXO3L      |                                                                          |                     |
| MachXO3LF     |                                                                          |                     |
| LIFCL ES      |                                                                          |                     |

**Table 142: Hex Conversion Options—Authentication**

| Device Family | Encryption                                                                                           |  |
|---------------|------------------------------------------------------------------------------------------------------|--|
|               | Authentication                                                                                       |  |
| LAV-AT        |                                                                                                      |  |
| LIFCL         |                                                                                                      |  |
| LFD2NX        |                                                                                                      |  |
| LFMNX         |                                                                                                      |  |
| LFMXO5        |                                                                                                      |  |
| UT24C         |                                                                                                      |  |
| MachXO3D      |                                                                                                      |  |
| MachXO3L      |                                                                                                      |  |
| MachXO3LF     |                                                                                                      |  |
| LIFCL ES      |                                                                                                      |  |
|               | Public Key and Private Key Signature                                                                 |  |
|               | Load from GUI and load Public Key (.pub, .pem, or .der) file and Private File (.prv, .pem, or .der). |  |



**Table 143: Hex Conversion Options—Verify ID Code, Frequency, Compression**

| Device Family | Verify ID Code                        |                                       |                              | Frequency                             |                                             | Compression                           |                                |                     |
|---------------|---------------------------------------|---------------------------------------|------------------------------|---------------------------------------|---------------------------------------------|---------------------------------------|--------------------------------|---------------------|
|               | Default<br>(Default)                  | On                                    | Off                          | Default<br>(Default)                  | Frequency<br>Selection                      | Default<br>(Default)                  | On                             | Off                 |
| LAV-AT        |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| LIFCL         |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| LFD2NX        |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| LFMNX         |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| LFMXO5        |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| LIFCL ES      |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| MachXO3D      |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| MachXO3L      |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| MachXO3LF     |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
| UT24C         |                                       |                                       |                              |                                       |                                             |                                       |                                |                     |
|               | Use<br>setting<br>from<br>input file. | Include<br>verify ID in<br>bitstream. | Do not<br>verify ID<br>code. | Use<br>setting<br>from<br>input file. | Valid<br>frequency<br>device-<br>dependent. | Use<br>setting<br>from input<br>file. | Compress<br>bitstream<br>data. | Do not<br>compress. |

**Table 144: Hex Conversion Options—CRC Calculation**

| Device Family | CRC Calculation                 |                                     |                             |
|---------------|---------------------------------|-------------------------------------|-----------------------------|
|               | Default (Default)               | On                                  | Off                         |
| LAV-AT        | Use setting from<br>input file. | Include CRC for<br>each data frame. | Include Global CRC<br>only. |
| LFPCNX        |                                 |                                     |                             |
| LFD2NX        |                                 |                                     |                             |
| LIFCL         |                                 |                                     |                             |
| LFMNX         |                                 |                                     |                             |
| LFMXO5        |                                 |                                     |                             |
| UT24C         |                                 |                                     |                             |
| UT24CP        |                                 |                                     |                             |
| MachXO3D      |                                 |                                     |                             |
| MachXO3L      |                                 |                                     |                             |
| MachXO3LF     |                                 |                                     |                             |
| LIFCL ES      |                                 |                                     |                             |

**Table 145: Hex Conversion Options—Byte Wide Mirror**

| Device Family | Off (Default)           | On                      |
|---------------|-------------------------|-------------------------|
| iCE40         | No change to bit order. | No change to bit order. |
| LAV-AT        | No change to bit order. | No change to bit order. |
| LFCPNX        |                         |                         |
| LFD2NX        |                         |                         |
| LIFCL         |                         |                         |
| LFMNX         |                         |                         |
| LFMXO5        |                         |                         |
| UT24C         |                         |                         |
| UT24CP        |                         |                         |
| MachXO3D      |                         |                         |
| MachXO3L      |                         |                         |
| MachXO3LF     |                         |                         |
| LIFCL ES      |                         |                         |

**Table 146: Hex Conversion Options—Retain Bitstream Header**

| Device Family | Off (Default)             | On                       |
|---------------|---------------------------|--------------------------|
| LAV-AT        | Replace Bitstream Header. | Retain Bitstream Header. |
| LFCPNX        |                           |                          |
| LFD2NX        |                           |                          |
| LIFCL         |                           |                          |
| LFMNX         |                           |                          |
| LFMXO5        |                           |                          |
| UT24C         |                           |                          |
| UT24CP        |                           |                          |
| MachXO3D      |                           |                          |
| MachXO3L      |                           |                          |
| MachXO3LF     |                           |                          |
| LIFCL ES      |                           |                          |

**Table 147: Hex Conversion Options—Starting Address**

| Device Family | Starting Address   |                                          |
|---------------|--------------------|------------------------------------------|
| LAV-AT        | Off (Default)      | Starting Address                         |
| LFCPNX        |                    |                                          |
| LFD2NX        |                    |                                          |
| LIFCL         |                    |                                          |
| LFMNX         |                    |                                          |
| LFMXO5        |                    |                                          |
| UT24C         |                    |                                          |
| UT24CP        |                    |                                          |
| MachXO3D      |                    |                                          |
| MachXO3L      |                    |                                          |
| MachXO3LF     |                    |                                          |
| LIFCL ES      |                    |                                          |
|               | No address offset. | Starting address in 0x010000 increments. |

**Table 148: Dual Boot**

| Device Family | Golden Pattern Input File 1 | Primary Pattern Input File 2 | Format                 | Output File |
|---------------|-----------------------------|------------------------------|------------------------|-------------|
| LAV-AT        | Bitstream (.bit, .rbt)      | Bitstream (.bit, .rbt)       | Intel Hex              | Hex (.mcs)  |
| LIFCL         |                             |                              | Motorola Hex           | Hex (.exo)  |
| LFD2NX        |                             |                              | Extended Tektronix Hex | Hex (.xtek) |
| LFMNX         |                             |                              |                        |             |
| LFMXO5        |                             |                              |                        |             |
| LIFCL ES      |                             |                              |                        |             |
| MachXO3D      |                             |                              |                        |             |
| MachXO3L      |                             |                              |                        |             |
| MachXO3LF     |                             |                              |                        |             |

**Table 149: Dual Boot Options—SPI Flash Size**

| Device Family | SPI Flash Size                        |
|---------------|---------------------------------------|
| LAV-AT        | 1/2/4/8/16/32/64/128/256/513 (512 Mb) |
| LIFCL         |                                       |
| LFD2NX        |                                       |
| LFMNX         |                                       |
| LFMXO5        |                                       |
| LIFCL ES      |                                       |
| MachXO3D      |                                       |
| MachXO3L      |                                       |
| MachXO3LF     |                                       |

**Table 150: Dual Boot Options—Protect Golden Sector**

| Device Family | Protect Golden Sector                   |                                                   |
|---------------|-----------------------------------------|---------------------------------------------------|
| LAV-AT        | Off (Default)                           | On                                                |
| LIFCL         |                                         |                                                   |
| LFD2NX        |                                         |                                                   |
| LFMNX         |                                         |                                                   |
| LFMXO5        |                                         |                                                   |
| LIFCL ES      |                                         |                                                   |
| MachXO3D      |                                         |                                                   |
| MachXO3L      |                                         |                                                   |
| MachXO3LF     |                                         |                                                   |
|               | Locate golden in next available sector. | Locate Golden at the beginning of the upper half. |

**Table 151: Dual Boot Options—Byte Wide Mirror and Retain Bitstream Header**

| Device Family | Byte Wide Mirror        |                         | Retain Bitstream Header   |                          |
|---------------|-------------------------|-------------------------|---------------------------|--------------------------|
|               | Off (Default)           | On                      | Off (Default)             | On                       |
| LAV-AT        |                         |                         |                           |                          |
| LFCPNX        |                         |                         |                           |                          |
| LFD2NX        |                         |                         |                           |                          |
| LFMNX         |                         |                         |                           |                          |
| LFMXO5        |                         |                         |                           |                          |
| LIFCL         |                         |                         |                           |                          |
| MachXO3D      |                         |                         |                           |                          |
| MachXO3L      |                         |                         |                           |                          |
| MachXO3LF     |                         |                         |                           |                          |
| UT24C         |                         |                         |                           |                          |
| UT24CP        |                         |                         |                           |                          |
| LIFCL ES      |                         |                         |                           |                          |
|               | No change to bit order. | Flip each byte of data. | Replace Bitstream Header. | Retain Bitstream Header. |

**Table 152: Dual Boot Options—SPI Flash Read Mode**

| Device Family | SPI Flash Mode       |                  |                      |                      |
|---------------|----------------------|------------------|----------------------|----------------------|
|               | Off (Default)        | Fast Read        | Dual I/O             | Quad I/O             |
| LAV-AT        |                      |                  |                      |                      |
| LFCPNX        |                      |                  |                      |                      |
| LFD2NX        |                      |                  |                      |                      |
| LFMNX         |                      |                  |                      |                      |
| LFMXO5        |                      |                  |                      |                      |
| LIFCL         |                      |                  |                      |                      |
| MachXO3D      |                      |                  |                      |                      |
| MachXO3L      |                      |                  |                      |                      |
| MachXO3LF     |                      |                  |                      |                      |
| UT24C         |                      |                  |                      |                      |
| UT24CP        |                      |                  |                      |                      |
| LIFCL ES      |                      |                  |                      |                      |
|               | Standard Read Opcode | Fast Read Opcode | Dual I/O Read Opcode | Quad I/O Read Opcode |

**Table 153: Dual Boot Options—Optimize Memory Space**

| Device Family | SPI Flash Mode                 |                |
|---------------|--------------------------------|----------------|
|               | Off (Default)                  | On             |
| LAV-AT        | Use worst case bitstream size. | Use file size. |
| LFCPNX        |                                |                |
| LFD2NX        |                                |                |
| LFMNX         |                                |                |
| LFMXO5        |                                |                |
| LIFCL         |                                |                |
| MachXO3D      |                                |                |
| MachXO3L      |                                |                |
| MachXO3LF     |                                |                |
| UT24C         |                                |                |
| UT24CP        |                                |                |
| LIFCL ES      |                                |                |

**Table 154: Dual Boot Options—Encryption**

| Device Family | Encryption       |                             |
|---------------|------------------|-----------------------------|
|               | Off (Default)    | On                          |
| LAV-AT        | Normal bitstream | Primary encrypted bitstream |
| LFCPNX        |                  |                             |
| LFD2NX        |                  |                             |
| LFMNX         |                  |                             |
| LFMXO5        |                  |                             |
| LIFCL         |                  |                             |
| MachXO3D      |                  |                             |
| MachXO3L      |                  |                             |
| MachXO3LF     |                  |                             |
| UT24C         |                  |                             |
| UT24CP        |                  |                             |
| LIFCL ES      |                  |                             |

**Table 155: Dual Boot Options—Authentication**

| Device Family                                                                                        | Encryption     |
|------------------------------------------------------------------------------------------------------|----------------|
| LAV-AT                                                                                               | Authentication |
| LFCPNX                                                                                               |                |
| LFD2NX                                                                                               |                |
| LFMNX                                                                                                |                |
| LFMXO5                                                                                               |                |
| LIFCL                                                                                                |                |
| MachXO3D                                                                                             |                |
| MachXO3L                                                                                             |                |
| MachXO3LF                                                                                            |                |
| UT24C                                                                                                |                |
| UT24CP                                                                                               |                |
| Public Key and Private Key Signature                                                                 |                |
| Load from GUI and load Public Key (.pub, .pem, or .der) file and Private File (.prv, .pem, or .der). |                |

**Table 156: Ping-Pong Boot**

| Device Family | Golden Pattern Input File 1 | Primary Pattern Input File 2 | Format                 | Output File |
|---------------|-----------------------------|------------------------------|------------------------|-------------|
| LAV-AT        | Bitstream (.bit, .rbt)      | Bitstream (.bit, .rbt)       | Intel Hex              | Hex (.mcs)  |
| LFCPNX        |                             |                              | Motorola Hex           | Hex (.exo)  |
| LFD2NX        |                             |                              | Extended Tektronix Hex | Hex (.xtek) |
| LFMNX         |                             |                              |                        |             |
| LFMXO5        |                             |                              |                        |             |
| LIFCL         |                             |                              |                        |             |
| MachXO3D      |                             |                              |                        |             |
| MachXO3L      |                             |                              |                        |             |
| MachXO3LF     |                             |                              |                        |             |
| UT24C         |                             |                              |                        |             |
| UT24CP        |                             |                              |                        |             |
| LIFCL ES      |                             |                              |                        |             |

**Table 157: Ping-Pong Boot Options—SPI Flash Size**

| Device Family | SPI Flash Size                        |
|---------------|---------------------------------------|
| LAV-AT        | 1/2/4/8/16/32/64/128/256/513 (512 Mb) |
| LFCPNX        |                                       |
| LFD2NX        |                                       |
| LFMNX         |                                       |
| LFMXO5        |                                       |
| LIFCL         |                                       |
| MachXO3D      |                                       |
| MachXO3L      |                                       |
| MachXO3LF     |                                       |
| UT24C         |                                       |
| UT24CP        |                                       |
| LIFCL ES      |                                       |

**Table 158: Ping-Pong Boot Options—Generate Jump Table Only**

| Device Family | Protect Golden Sector |                 |
|---------------|-----------------------|-----------------|
| LAV-AT        | Off (Default)         | On              |
| LFCPNX        |                       |                 |
| LFD2NX        |                       |                 |
| LFMNX         |                       |                 |
| LFMXO5        |                       |                 |
| LIFCL         |                       |                 |
| MachXO3D      |                       |                 |
| MachXO3L      |                       |                 |
| MachXO3LF     |                       |                 |
| UT24C         |                       |                 |
| UT24CP        |                       |                 |
| LIFCL ES      |                       |                 |
|               | Full images           | Jump table only |



**Table 159: Ping-Pong Boot Options—Byte Wide Mirror and Retain Bitstream Header**

| Device Family | Byte Wide Mirror        |                         | Retain Bitstream Header   |                          |
|---------------|-------------------------|-------------------------|---------------------------|--------------------------|
|               | Off (Default)           | On                      | Off (Default)             | On                       |
| LAV-AT        |                         |                         |                           |                          |
| LFCPNX        |                         |                         |                           |                          |
| LFD2NX        |                         |                         |                           |                          |
| LFMNX         |                         |                         |                           |                          |
| LFMXO5        |                         |                         |                           |                          |
| LIFCL         |                         |                         |                           |                          |
| MachXO3D      |                         |                         |                           |                          |
| MachXO3L      |                         |                         |                           |                          |
| MachXO3LF     |                         |                         |                           |                          |
| UT24C         |                         |                         |                           |                          |
| UT24CP        |                         |                         |                           |                          |
| LIFCL ES      |                         |                         |                           |                          |
|               | No change to bit order. | Flip each byte of data. | Replace Bitstream Header. | Retain Bitstream Header. |

**Table 160: Ping-Pong Boot Options—SPI Flash Read Mode**

| Device Family | SPI Flash Mode       |                  |                      |                      |
|---------------|----------------------|------------------|----------------------|----------------------|
|               | Off (Default)        | Fast Read        | Dual I/O             | Quad I/O             |
| LAV-AT        |                      |                  |                      |                      |
| LFCPNX        |                      |                  |                      |                      |
| LFD2NX        |                      |                  |                      |                      |
| LFMNX         |                      |                  |                      |                      |
| LFMXO5        |                      |                  |                      |                      |
| LIFCL         |                      |                  |                      |                      |
| MachXO3D      |                      |                  |                      |                      |
| MachXO3L      |                      |                  |                      |                      |
| MachXO3LF     |                      |                  |                      |                      |
| UT24C         |                      |                  |                      |                      |
| UT24CP        |                      |                  |                      |                      |
| LIFCL ES      |                      |                  |                      |                      |
|               | Standard Read Opcode | Fast Read Opcode | Dual I/O Read Opcode | Quad I/O Read Opcode |

**Table 161: Ping-Pong Boot Options—Primary Starting Address—Secondary Starting Address**

| Device Family | SPI Flash Mode |             |
|---------------|----------------|-------------|
| LAV-AT        | Use default.   | Use custom. |
| LFCPNX        |                |             |
| LFD2NX        |                |             |
| LFMNX         |                |             |
| LFMXO5        |                |             |
| LIFCL         |                |             |
| MachXO3D      |                |             |
| MachXO3L      |                |             |
| MachXO3LF     |                |             |
| UT24C         |                |             |
| UT24CP        |                |             |
| LIFCL ES      |                |             |

**Table 162: Ping-Pong Boot Options—Encryption**

| Device Family | Off (Default)    | On                          |
|---------------|------------------|-----------------------------|
| LAV-AT        | Normal bitstream | Primary encrypted bitstream |
| LFCPNX        |                  |                             |
| LFD2NX        |                  |                             |
| LFMNX         |                  |                             |
| LFMXO5        |                  |                             |
| LIFCL         |                  |                             |
| MachXO3D      |                  |                             |
| MachXO3L      |                  |                             |
| MachXO3LF     |                  |                             |
| UT24C         |                  |                             |
| UT24CP        |                  |                             |
| LIFCL ES      |                  |                             |

**Table 163: Ping-Pong Boot Options—Authentication**

| Device Family                                                                                        | Encryption            |
|------------------------------------------------------------------------------------------------------|-----------------------|
| LAV-AT                                                                                               | <b>Authentication</b> |
| LFCPNX                                                                                               |                       |
| LFD2NX                                                                                               |                       |
| LFMNX                                                                                                |                       |
| LFMXO5                                                                                               |                       |
| LIFCL                                                                                                |                       |
| MachXO3D                                                                                             |                       |
| MachXO3L                                                                                             |                       |
| MachXO3LF                                                                                            |                       |
| UT24C                                                                                                |                       |
| UT24CP                                                                                               |                       |
| Public Key and Private Key Signature                                                                 |                       |
| Load from GUI and load Public Key (.pub, .pem, or .der) file and Private File (.prv, .pem, or .der). |                       |

**Table 164: Advanced SPI Flash**

| Device Family | Input File 1           | Format                 | Output File |
|---------------|------------------------|------------------------|-------------|
| LAV-AT        | Bitstream (.bit, .rbt) | Intel Hex              | Hex (.mcs)  |
| LFCPNX        |                        | Motorola Hex           | Hex (.exo)  |
| LFD2NX        |                        | Extended Tektronix Hex | Hex (.xtek) |
| LFMNX         |                        |                        |             |
| LFMXO5        |                        |                        |             |
| LIFCL         |                        |                        |             |
| MachXO3D      |                        |                        |             |
| MachXO3L      |                        |                        |             |
| MachXO3LF     |                        |                        |             |
| UT24C         |                        |                        |             |
| UT24CP        |                        |                        |             |
| LIFCL ES      |                        |                        |             |

**Table 165: Advanced SPI Flash - iCE40**

| Device Family | Enable Cold Boot        |           | Number of Patterns |                    |                    |                 |                    |                    |
|---------------|-------------------------|-----------|--------------------|--------------------|--------------------|-----------------|--------------------|--------------------|
|               | Off (Default)           | On        | Number of Patterns | Pattern 1          | Starting Address 1 | Pattern 2 - 3   | Pattern 4          | Starting Address 4 |
| iCE40         | <b>POR Boot Pattern</b> |           | 2/3/4              | Selected Pattern 1 | 0x010000 Sectors   | User Data 2 - 3 | Selected Pattern 4 | 0x010000 Sectors   |
|               | 1/2/3/4                 | Cold Boot |                    |                    |                    |                 |                    |                    |

**Table 166: Advanced SPI Flash Options—SPI Flash Size**

| Device Family | SPI Flash Size                                   |
|---------------|--------------------------------------------------|
| iCE40         | 512 (512Kb)/1/2/4/8/16/32/64/128/256/513 (512Mb) |
| LAV-AT        |                                                  |
| LFCPNX        |                                                  |
| LFD2NX        |                                                  |
| LFMNX         |                                                  |
| LFMXO5        |                                                  |
| LIFCL         |                                                  |
| MachXO3D      |                                                  |
| MachXO3L      |                                                  |
| MachXO3LF     |                                                  |
| UT24C         |                                                  |
| UT24CP        |                                                  |
| LIFCL ES      |                                                  |

**Table 167: Advanced SPI Flash Options—Byte Wide Mirror**

| Device Family | Byte Wide Mirror        |                         |
|---------------|-------------------------|-------------------------|
| LAV-AT        | Off (Default)           | On                      |
| LFCPNX        |                         |                         |
| LFD2NX        |                         |                         |
| LFMNX         |                         |                         |
| LFMXO5        |                         |                         |
| LIFCL         |                         |                         |
| MachXO3D      |                         |                         |
| MachXO3L      |                         |                         |
| MachXO3LF     |                         |                         |
| UT24C         |                         |                         |
| UT24CP        |                         |                         |
| LIFCL ES      |                         |                         |
|               | No change to bit order. | Flip each byte of data. |

**Table 168: Advanced SPI Flash Options—Retain Bitstream Header**

| Device Family | Retain Bitstream Header   |                          |
|---------------|---------------------------|--------------------------|
| LAV-AT        | Off (Default)             | On                       |
| LFCPNX        |                           |                          |
| LFD2NX        |                           |                          |
| LFMNX         |                           |                          |
| LFMXO5        |                           |                          |
| LIFCL         |                           |                          |
| MachXO3D      |                           |                          |
| MachXO3L      |                           |                          |
| MachXO3LF     |                           |                          |
| UT24C         |                           |                          |
| UT24CP        |                           |                          |
| LIFCL ES      |                           |                          |
|               | Replace Bitstream Header. | Retain Bitstream Header. |

**Table 169: Advanced SPI Flash Options—User Hex Files**

| Device Family |                  |           |                                                        |                              |                                 |                    |                              |                                    |
|---------------|------------------|-----------|--------------------------------------------------------|------------------------------|---------------------------------|--------------------|------------------------------|------------------------------------|
| LAV-AT        | Off<br>(Default) | On        | Number<br>of User<br>Hex<br>Files                      | Select<br>User Hex<br>File 1 | Select<br>Starting<br>Address 1 | User Data<br>2-3   | Select<br>User Hex<br>File 4 | Select<br>Starting<br>Address<br>4 |
| LFCPNX        |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| LFD2NX        |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| LFMNX         |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| LFMXO5        |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| LIFCL         |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| MachXO3D      |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| MachXO3L      |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| MachXO3LF     |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| UT24C         |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| UT24CP        |                  |           |                                                        |                              |                                 |                    |                              |                                    |
| LIFCL ES      |                  |           |                                                        |                              |                                 |                    |                              |                                    |
|               | Off              | User data | 1/2/3/4/5/<br>6/7/8/9/<br>10/11/12/<br>13/14/15/<br>16 | Select<br>User Hex<br>File   | 0x010000<br>Sectors             | User Data<br>2 - 3 | Select<br>User Hex<br>File   | 0x01000<br>0 Sectors               |

**Table 170: Advanced SPI Flash Options—SPI Flash Read Mode**

| Device Family |                            |                     |                            |                            |
|---------------|----------------------------|---------------------|----------------------------|----------------------------|
| LFCPNX        | Standard Read<br>(Default) | Fast Read           | Dual I/O                   | Quad I/O                   |
| LFD2NX        |                            |                     |                            |                            |
| LFMNX         |                            |                     |                            |                            |
| LFMXO5        |                            |                     |                            |                            |
| LIFCL         |                            |                     |                            |                            |
| MachXO3D      |                            |                     |                            |                            |
| MachXO3L      |                            |                     |                            |                            |
| MachXO3LF     |                            |                     |                            |                            |
| UT24C         |                            |                     |                            |                            |
| UT24CP        |                            |                     |                            |                            |
| LIFCL ES      |                            |                     |                            |                            |
|               | Standard Read<br>Opcode    | Fast Read<br>Opcode | Dual I/O<br>Read<br>Opcode | Quad I/O<br>Read<br>Opcode |

**Table 171: Advanced SPI Flash Options—SPI Flash Read Mode (Avant)**

| Device Family | Standard Read (Default) | Fast Read        | Dual I/O             | Quad I/O             | xSPI Profile 1 Read                                                       | xSPI Profile 2 Read                                                       |
|---------------|-------------------------|------------------|----------------------|----------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------|
| LAV-AT        | Standard Read Opcode    | Fast Read Opcode | Dual I/O Read Opcode | Quad I/O Read Opcode | Bitstream only command. Selects the mode and frequency to boot from MSPI. | Bitstream only command. Selects the mode and frequency to boot from MSPI. |

**Table 172: Advanced SPI Flash Options—Clock Mode**

| Device Family | Standard/Fast Read Dual/Quad IO | xSPI Profile 1 Read<br>xSPI Profile 2 Read |
|---------------|---------------------------------|--------------------------------------------|
| LAV-AT        | Single-ended clock              | Single-ended clock<br>Differential Clock   |

**Table 173: Advanced SPI Flash Options—Multiple Boot**

| Device Family | Multiple Boot |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
|---------------|---------------|-----------|--------------------------------|--------------------------|------------------------------|---------------------------|----------------------------------|------------------|------------------------------|---------------------------|----------------------------------|--------------------------------|-----------------------|
| LAV-AT        | Off (Default) | On        |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                | Optimize Memory Space |
| LFCPNX        |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| LFD2NX        |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| LFMNX         |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| LFMXO5        |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| LIFCL         |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| MachXO3D      |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| MachXO3L      |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| MachXO3LF     |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| UT24C         |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| UT24CP        |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
| LIFCL ES      |               |           |                                |                          |                              |                           |                                  |                  |                              |                           |                                  |                                |                       |
|               |               |           | Number of Alternate Data Files | Select Golden Data File  | Select Alternate Data File 1 | Select Starting Address 1 | Next Pattern                     | Alternates 2 - 3 | Select Alternate Data File 4 | Select Starting Address 4 | Next Pattern                     | Off (Default)                  | On                    |
|               | No Multiboot  | Multiboot | 1/2/3/4                        | Select golden data file. | Select alternate data file.  | 0x010000 sectors          | <prim alt1   alt2   alt3   alt4> | Alternates 2 - 3 | Select alternate data file.  | 0x010000 sectors          | <prim alt1   alt2   alt3   alt4> | Use worst case bitstream size. | Use file size.        |

**Table 174: sysCONFIG Daisy Chain**

| Device Family | Input File 1 | Input File 2 | Format                    | Output File |
|---------------|--------------|--------------|---------------------------|-------------|
| LAV-AT        | Bitstream    | Bitstream    | Intel Hex                 | Hex (.mcs)  |
| LIFCL         | (.bit, .rbt) | (.bit, .rbt) |                           |             |
| LFD2NX        |              |              |                           |             |
| LFMNX         |              |              |                           |             |
| LFMXO5        |              |              |                           |             |
| LIFCL ES      |              |              |                           |             |
| MachXO3D      |              |              |                           |             |
| MachXO3L      |              |              |                           |             |
| MachXO3LF     |              |              |                           |             |
| UT24C         |              |              |                           |             |
|               |              |              | Motorola Hex              | Hex (.exo)  |
|               |              |              | Extended<br>Tektronix Hex | Hex (.xtek) |

**Table 175: sysCONFIG Daisy Chain Options—Merge Format**

| Device Family | Merge Format          |                                      |               |
|---------------|-----------------------|--------------------------------------|---------------|
|               | Intelligent (Default) | Intelligent Merge                    |               |
|               |                       | Frequency                            | Slayer Output |
| LAV-AT        | Intelligent Merge     | Default/(device-specific selections) | Combine Merge |
| LIFCL         |                       |                                      |               |
| LFD2NX        |                       |                                      |               |
| LFMNX         |                       |                                      |               |
| LFMXO5        |                       |                                      |               |
| LIFCL ES      |                       |                                      |               |
| UT24C         |                       |                                      |               |



**Table 176: sysCONFIG Daisy Chain Options—Byte Wide Mirror and Retain Bitstream Header**

| Device Family | Byte Wide Mirror        |                         | Retain Bitstream Header   |                          |
|---------------|-------------------------|-------------------------|---------------------------|--------------------------|
|               | Off (Default)           | On                      | Off (Default)             | On                       |
| LAV-AT        |                         |                         |                           |                          |
| LFCPNX        |                         |                         |                           |                          |
| LFD2NX        |                         |                         |                           |                          |
| LFMNX         |                         |                         |                           |                          |
| LFMXO5        |                         |                         |                           |                          |
| LIFCL         |                         |                         |                           |                          |
| MachXO3D      |                         |                         |                           |                          |
| MachXO3L      |                         |                         |                           |                          |
| MachXO3LF     |                         |                         |                           |                          |
| UT24C         |                         |                         |                           |                          |
| UT24CP        |                         |                         |                           |                          |
| LIFCL ES      |                         |                         |                           |                          |
|               | No change to bit order. | Flip each byte of data. | Replace Bitstream Header. | Retain Bitstream Header. |

## iCE40 Warm Boot/Cold Boot Bitstream Output Options

The following output format options are available for generating iCE40 warm boot/cold boot bitstreams. Except where otherwise noted, the default setting is listed first for each option.

### Intel Hex/Motorola Hex/Extended Tektronix Hex

**SPI Flash Size: 64 Mb (512 Kb - 256 Mb):** Possible PROM sizes are 512 Kb, 1 Mb, 2 Mb, 4 Mb, 8 Mb, 16Mb, 32 Mb, 64 Mb, 128 Mb, and 256 Mb.

**Byte Wide Bit Mirror: OFF/ON:** Flips each byte. Default: bytes are not flipped. Optional.

**Number of Patterns: 2 (2 - 4):** Specifies the number of iCE40 configuration files.

**Enable Cold Boot: OFF/ON:** Optional. Default is warm boot. If selected, cold boot is chosen.

**Power On Reset Boot Image 1 (1 - 4):** Indicates the input configuration file path and name. Must be specified for each configuration file.

**Pattern (1 - 4) Starting Address:** SPI flash address location for the configuration file. Must be specified for each configuration file.

### See Also

- ▶ [External Memory Deployment Type](#)
- ▶ [Creating a New Deployment](#)

## Input File Descriptions

The following table shows how files produced by the Radiant software and the Deployment Tool can be used as input files to generate other data file formats. For example, the Deployment Tool uses a binary bitstream generated by Radiant for a Lattice device to output an ISC file. This ISC file can then be used to generate a bitstream ASCII readback file.

The Deployment Tool can read customized bitstreams with various commands and options, such as CRC calculation and comparison.

**Table 177: Input Files**

| Input File | Description                                                                                                                                                                                                | Output                                                                                                                                                                                                                                                                                                                                     |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| .isc       | In-System Configurable file (ISC) generated from a JEDEC, BIT, RBT, RBK, RBKA, MSK, or MSKA.                                                                                                               | Bitstream, SVF, JED, STAPL                                                                                                                                                                                                                                                                                                                 |
| .bit       | Bitstream binary file (BIT) generated from a JEDEC, ISC, BIT, or RBT.                                                                                                                                      | Bitstream, ISC, JED, Intel, Motorola, and Extended Tektronix Hex                                                                                                                                                                                                                                                                           |
| .rbt       | Bitstream ASCII file (RBT) generated from a JEDEC, ISC, BIT, or RBT.                                                                                                                                       | Bitstream, ISC, JED, Intel, Motorola, and Extended Tektronix Hex                                                                                                                                                                                                                                                                           |
| .rbk       | Bitstream binary readback file (RBK) generated from an ISC when the READ option is selected for bitstream binary output.                                                                                   | ISC                                                                                                                                                                                                                                                                                                                                        |
| .rbka      | Bitstream ASCII readback file (RBKA) generated from an ISC when the READ option is selected for bitstream ASCII output.                                                                                    | ISC                                                                                                                                                                                                                                                                                                                                        |
| .xcf       | An .xcf file is a configuration file used for programming devices in a JTAG daisy chain. The XCF file contains information about each device, the data files targeted, and the operations to be performed. | STAPL File (.stp), SVF File (.svf), Generic Vector Format (.tst), GenRad (.gr), HP3070 (.pcf), HP3065 (.pcf), Teradyne 1800 (.asc), Teradyne L200/300 (.asc), ME File (.vme), Data VME File (*_data.vme), Data File (*_data.sed), Embedded Bitstream (.cpu), Embedded Bitstream (.c), Embedded Bitstream (.txt), Embedded Bitstream (.hex) |

### See Also

- ▶ [Input File Formats](#)

## Input File Formats

The input file format used with the Deployment Tool depends on the device and the selected output format. The following table shows the data files for Lattice devices that can be used as input files to generate bitstream, serial vector format, or in-system configuration data files.

**Table 178: Input File Formats**

| Device Family | Input for Bitstream Output | Multiple Input/ Output | Input for SVF Output | Input for ISC Output | Input for JEDEC Output |
|---------------|----------------------------|------------------------|----------------------|----------------------|------------------------|
| ICE40         | .bin                       | Not available          | Not available        | Not available        | Not available          |
| LAV-AT        | .bit, .rbt                 | .bit, .rbt             | .bit, .rbt           | Not available        | Not available          |
| LFCPNX        |                            |                        |                      |                      |                        |
| LFD2NX        |                            |                        |                      |                      |                        |
| LFMNX         |                            |                        |                      |                      |                        |
| LFMXO5        |                            |                        |                      |                      |                        |
| LIFCL         |                            |                        |                      |                      |                        |
| MachXO3D      |                            |                        |                      |                      |                        |
| MachXO3L      |                            |                        |                      |                      |                        |
| MachXO3LF     |                            |                        |                      |                      |                        |
| UT24C         |                            |                        |                      |                      |                        |
| UT24CP        |                            |                        |                      |                      |                        |

### See Also

► [Input File Descriptions](#)

## Bitstream Output File Descriptions

The output file format generated by the Deployment Tool depends on the device and the selected format options. To see a list of all the output formats by device family, see [Bitstream Output Formats](#).

**Table 179: Bitstream Output File**

| File Extension | Description                                                                                                                                       |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| .bit           | Binary bitstream.                                                                                                                                 |
| .rbt           | ASCII bitstream.                                                                                                                                  |
| .msk           | Binary bitstream mask file generated from an In-System Configurable (ISC) file when the READ_MASK option is selected for bitstream binary output. |
| .mska          | ASCII bitstream mask file generated from an In-System Configurable (ISC) file when the READ_MASK option is selected for ASCII output.             |

**Table 179: Bitstream Output File (Continued)**

| File Extension | Description                                                                                                   |
|----------------|---------------------------------------------------------------------------------------------------------------|
| .rbk           | Binary readback bitstream file generated from an ISC file when the READ option is selected for binary output. |
| .rbka          | ASCII readback bitstream file generated from an ISC file when the READ option is selected for ASCII output.   |
| .exo           | Motorola hexadecimal output data file.                                                                        |
| .mcs           | Intel hexadecimal output data file.                                                                           |
| .xtek          | Extended Tektronix hexadecimal output data file.                                                              |

## Bitstream Output Formats

The Deployment Tool generates bitstream data files. The table below shows the types of bitstreams and output formats that can be generated for each device family.

**Table 180: Bitstream Output Formats**

| Device Family | Single Bitstream                                                          | Merged Bitstream                     |
|---------------|---------------------------------------------------------------------------|--------------------------------------|
| iCE40         | Intel Hex (.mcs)<br>Motorola Hex (.exo)<br>Extended Tektronix Hex (.xtek) | Not available                        |
| LAV-AT        | Bitstream Binary (.bit)                                                   | Intel Hex Merge (.mcs)               |
| LFCPNX        | Bitstream ASCII (.rbt)                                                    | Motorola Hex Merge (.exo)            |
| LFD2NX        | Intel Hex (.mcs)                                                          | Extended Tektronix Hex Merge (.xtek) |
| LFMNX         | Motorola Hex (.exo)                                                       |                                      |
| LFMXO5        | Extended Tektronix Hex (.xtek)                                            |                                      |
| LIFCL         |                                                                           |                                      |
| MachXO3D      |                                                                           |                                      |
| MachXO3L      |                                                                           |                                      |
| MachXO3LF     |                                                                           |                                      |
| UT24C         |                                                                           |                                      |
| UT24CP        |                                                                           |                                      |

### See Also

► [Bitstream Output File Descriptions](#)

## SVF, and STAPL Output Formats

The Deployment Tool generates Serial Vector Format (SVF), In-System Configuration (ISC), and Standard Test and Programming Language (STAPL) data files for Lattice devices.

### SVF Output Files

SVF files are generated from ISC, binary bitstream (BIT), or ASCII bitstream (RBT) input files.

### ISC Output Files

ISC files are generated from binary bitstream (BIT), ASCII bitstream (RBT), binary readback (RBK), ASCII readback (RBKA), binary mask (MSK), and ASCII mask (MSKA) input files.

### STAPL Output Files

STAPL files are generated from JEDEC input files.

### See Also

▶ [Input File Descriptions](#)

## Output Options Descriptions

The following describes each of the options provided by the Deployment Tool for outputting data files. The number and types of options depend on the type of device that you are programming and the output format. For options available by device type, refer to the device-specific options.

**Verify ID Code** – Generates the bitstream which verifies the ID code.

**Program Secure** – Generates the data file which secures the device.

**Compression** – Compresses the bitstream.

**Frequency** – Generates the bitstream using the specified frequency.

**Byte Wide Bit Mirroring** – Flips each byte in Intel, Extended Tektronix, and Motorola hexadecimal data files.

**RUNTEST from REV C** – Generates the serial vector format file using the format specified in the SVF file specification, revision C or earlier.

**For Erase, Program, and Verify Operations, Skip Verify** – Globally skips the verification step of the Erase, Program, and Verify operation.

## Creating a New Deployment

The Deployment Tool has a wizard interface that guides you through the process of creating a deployment for the various function types and output file types.

### To create a new Deployment:

1. Issue the start command in one of the following ways:
  - ▶ To start Deployment Tool that is integrated in the Radiant software:
    - ▶ In the Radiant software, open Programmer by choosing **Tools > Programmer**.
    - ▶ In the Programmer window, choose **Tools > Deployment Tool**.
  - ▶ To start Deployment Tool from stand-alone Radiant Programmer:
    - ▶ In the Programmer window, choose **Tools > Deployment Tool**.
  - or
  - ▶ From the Windows Start menu, choose **All Programs > Lattice Radiant Programmer > Deployment Tool**.
  - ▶ In Linux, from the *<Programmer install\_path>/bin/lin64* directory, enter the following on a command line:
 

```
./deployment
```
2. In the Getting Started dialog box, choose **Create a New Deployment**.
3. In the Function Type dropdown menu, choose from one of the following options:
  - ▶ File Conversion
  - ▶ Tester
  - ▶ External Memory
4. In the Output File Type box, choose an output file type.
5. Click **OK**. The Deployment Tool loads the device database. A four step process must now be completed.
6. In “Step 1”, do one of the following, depending on the type of file you are using:
  - ▶ If you are creating a deployment from an .xcf file, use the  (**Browse**) button to browse to the project's .xcf file.
  - ▶ If you are creating a deployment from a data file, select Input File(s) window, click ... (**Browse**) and browse to the projects .jed file. The Device Family and Device boxes are automatically populated by the Deployment Tool.
7. Click **Next**.
8. In “Step 2” (Options dialog box), select the desired options for your output file type.
9. Click **Next**.

10. In the “Step 3” (Select Output File(s) dialog box), select the desired output file type from the dropdown menu, and using the  button, browse to the desired location of the output file(s).
11. Click **Next**.
12. In the “Step 4” (Generate Deployment dialog box), review the Deployment Tool Summary and Command Line Information.
13. Choose **File > Generate**, or click the  button, to perform the Deployment. Results of the generation are available for review.
14. Choose **File > Save**, or click the  button, to save the deployment (.ddt) file to your desired location.

### See Also

- ▶ [iCE40 Warm Boot/Cold Boot Bitstream Output Options](#)

## Opening an Existing Deployment

If a deployment was saved as a deployment (.ddt) file, the deployment can be opened in Deployment Tool and regenerated using the same deployment options, or by applying different deployment options.

### To open an existing deployment:

1. Issue the start command in one of the following ways:
  - ▶ To start Deployment Tool that is integrated in the Radiant software:
    - ▶ In the Radiant software, open Programmer by choosing **Tools > Programmer**.
    - ▶ In the Programmer window, choose **Tools > Deployment Tool**.
  - ▶ To start Deployment Tool from stand-alone Radiant Programmer:
    - ▶ In the Programmer window, choose **Tools > Deployment Tool**.
  - or
  - ▶ From the Windows Start menu, choose **All Programs > Lattice Radiant Programmer > Deployment Tool**.
  - ▶ In Linux, from the `<Programmer install_path>/bin/linux64` directory, enter the following on a command line:
 

```
./deployment
```
2. In the Getting Started dialog box, choose **Open an Existing Deployment**.
3. Click **OK**. The Deployment Tool loads the device database. A four step process must now be completed.
4. In “Step 1”, do one of the following, depending on the type of file you are using:
  - ▶ If you are creating a deployment from an .xcf file, use the  (**Browse**) button to browse to the project's .xcf file.

- ▶ If you are creating a deployment from a data file, select Input File(s) window, click ... (**Browse**) and browse to the projects .jed file. The Device Family and Device boxes are automatically populated by the Deployment Tool.
- 5. Click **Next**.
- 6. In “Step 2” (Options dialog box), select the desired options for your output file type.
- 7. Click **Next**.
- 8. In the “Step 3” (Select Output File(s) dialog box), select the desired output file type from the dropdown menu, and using the using the  button, browse to the desired location of the output file(s).
- 9. Click **Next**.
- 10. In the “Step 4” (Generate Deployment dialog box), review the Deployment Tool Summary and Command Line Information.
- 11. Choose **File > Generate**, or click the  button, to perform the Deployment. Results of the generation are available for review.
- 12. Choose **File > Save**, or click the  button, to save the deployment (.ddt) file to your desired location.

#### See Also

- ▶ [Creating a New Deployment](#)
- ▶ [iCE40 Warm Boot/Cold Boot Bitstream Output Options](#)

## Encrypting a JEDEC with Deployment Tool

Encryption settings are initially set in the Diamond software using the Security Setting Tool. Refer to [Bitstream Security Settings Tool for Nexus Devices](#).

Deployment Tool allows you to encrypt an existing unencrypted JEDEC (.jed) file it has not already been encrypted, and output an encrypted .jed file.

#### Note

---

LFMNX, LFMXO5, MachXO3D, MachXO3L, and MachXO3LF families support encrypted JEDEC files.

---

#### IMPORTANT!

---

To turn on this security feature, you need to install the Encryption Control Pack.

---



**To encrypt an unencrypted .jed file with Deployment Tool:**

1. Issue the start command.
  - ▶ In Linux, from the `<install_path>/bin/lin` directory, enter the following on a command line:  

```
./deployment
```
2. In the Getting Started dialog box, choose **Create a New Deployment**.
3. In the Function Type dropdown menu, choose **File Conversion**.
4. In the Output File Type box, choose **JEDEC File**.
5. Click **OK**. The Deployment Tool loads the device database.
6. In the Step 1 of 4 dialog box, select Input File(s) window, click ... (**Browse**) in the File Name box, and browse to and open the .bit, .isc., .jed, or .rpt file you wish to encrypt, click **Open**, then click **Next**.
7. In the Step 2 of 4 Options dialog box, click the **Encryption** box.
8. To edit the encryption key, click **Edit Key** to display the Encryption Key dialog box. Edit the encryption key as desired, or load an Encryption Key Format file (.bek or .BEK) from file, and click **OK**.

**Note**

---

If the encryption key was entered manually, you must save the key to a .BEK file.

---

9. Click **Next**.
10. In the Step 3 of 4 Select Output File(s) dialog box, select the desired output file type from the dropdown menu, and using the  button, browse to the desired location of the output file(s).
11. Click **Next**.
12. In the Step 4 of 4 Generate Deployment dialog box, review Deployment Tool Summary and Command Line Information.
13. Choose **File > Generate**, or click the  button, to perform the Deployment. The Deployment Generate Result are available for review.
14. If you wish to save the deployment, choose **File > Save**, or click the  button, to save the deployment (.ddt) file in your desired location.

For more information about setting security options for Lattice FPGA devices, refer to the following Lattice Technical Notes:

- ▶ [TN1212](#), LatticeXP2 Advanced Security Programming Usage Guide
- ▶ [FPGA-TN-02202-1.7](#), Advanced Security Encryption Key Programming Guide for ECP Device Family

**See Also**

- ▶ [Bitstream Security Settings Tool for Nexus Devices](#)
- ▶ [Encrypting a Bitstream with Deployment Tool](#)

# Encrypting a Bitstream with Deployment Tool

Encryption settings are initially set in the Diamond software using the Security Setting Tool. Refer to [Bitstream Security Settings Tool for Nexus Devices](#).

Deployment Tool allows you to encrypt an existing unencrypted bitstream (.bit or .rbt) file if it was not already encrypted, and output an encrypted .bit file.

## Note

LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP devices support encrypted bitstreams.

## IMPORTANT!

To turn on this security feature, you need to install the Encryption Security Control Pack.

### To encrypt an unencrypted .bit or .rbt file with Deployment Tool:

1. Issue the start command.
  - ▶ In Linux, from the `<install_path>/bin/linux` directory, enter the following on a command line:
 

```
./deployment
```
2. In the Getting Started dialog box, choose **Create a New Deployment**.
3. In the Function Type dropdown menu, choose **File Conversion**.
4. In the Output File Type box, choose **Bitstream**.
5. Click **OK**. The Deployment Tool loads the device database.
6. In the Step 1 of 4 dialog box, select Input File(s) window, click ... (**Browse**) in the File Name box, and browse to and open the .bit you wish to encrypt, then click **Next**.
7. In the Step 2 of 4 Options dialog box, select a USERCODE format (Hex, ASCII, or Binary) from the USERCODE Format drop-down list, then type alphanumeric values using up to 16 characters
  - ▶ For the default ASCII format, type alphanumeric values using up to 16 characters.
  - ▶ For hex format, type values of 0 through F, using up to 32 characters.
  - ▶ For binary format, type 0 and 1 values, using up to 128 characters.
8. Alternately, you can choose to overwrite USERCODE with JEDEC checksum by checking the box.
9. Click the **Encryption** box.

10. To edit the encryption key, click **Edit Key** to display the Encryption Key dialog box. Edit the encryption key as desired, or load an Encryption Key Format file (.bek or .BEK) from file, and click **OK**.

#### Note

If the encryption key was entered manually, you must save the key to a .BEK file.

11. Click **Next**.
12. In the Step 3 of 4 Select Output File(s) dialog box, select the desired output file type from the dropdown menu, and using the  button, browse to the desired location of the output file(s).
13. Click **Next**.
14. In the Step 4 of 4 Generate Deployment dialog box, review Deployment Tool Summary and Command Line Information.
15. Choose **File > Generate**, or click the  button, to perform the Deployment. The Deployment Generate Result are available for review.
16. If you wish to save the deployment, choose **File > Save**, or click the  button, to save the deployment (.ddt) file in your desired location.

For more information about setting security options for Lattice FPGA devices, refer to the following Lattice Technical Notes:

- ▶ [TN1212](#), LatticeXP2 Advanced Security Programming Usage Guide
- ▶ [FPGA-TN-02202-1.7](#), Advanced Security Encryption Key Programming Guide for ECP Device Family

#### See Also

- ▶ [Bitstream Security Settings Tool for Nexus Devices](#)
- ▶ [Encrypting a JEDEC with Deployment Tool](#)

## Authenticating a Bitstream with Deployment Tool (LAV-AT, LFCPNX, LFD2NX, LFMNX, LFMXO5, LIFCL, MachXO3D, MachXO3L, MachXO3LF, UT24C or UT24CP)

Authentication settings are initially set in the Diamond software using the Security Setting Tool. Refer to [Bitstream Security Settings Tool for Nexus Devices](#).

Deployment Tool allows you to convert an existing normal bitstream (.bit or .rbt) to an authentication output bitstream.

### IMPORTANT!

---

To turn on this security feature, you need to install the Encryption Security Control Pack.

---

#### To convert a normal .bit or .rbt file to an authenticated output bitstream with Deployment Tool:

1. Issue the start command.
  - ▶ In Windows choose **Programs > Lattice Diamond > Accessories > Deployment Tool**.
  - ▶ In Linux, from the `<install_path>/bin/linux` directory, enter the following on a command line:  

```
./deployment
```
2. In the Getting Started dialog box, choose **Create a New Deployment**.
3. In the Function Type dropdown menu, choose **File Conversion**.
4. In the Output File Type box, choose **Bitstream**.
5. Click **OK**. The Deployment Tool loads the device database.
6. In the Step 1 of 4 dialog box, select Input File(s) window, click ... (**Browse**) in the File Name box, and browse to the file you wish to authenticate, then click **Next**.
7. In the Step 2 of 4 Options dialog box, select a USERCODE format (Hex, ASCII, or Binary) from the USERCODE Format drop-down list, then type alphanumeric values using up to 16 characters.
  - ▶ For the default ASCII format, type alphanumeric values using up to 16 characters.
  - ▶ For hex format, type values of 0 through F, using up to 32 characters.
  - ▶ For binary format, type 0 and 1 values, using up to 128 characters.
8. Alternately, you can choose to overwrite USERCODE with JEDEC checksum by checking the box.
9. Click the **Authentication** box.
10. To load the public key, under Public Key, click **Load**, and in the security\_setting directory, browse to desired public key (.pub) file.
11. Depending on which type of authentication method was selected in the Security Setting tool:
  - ▶ For Private Key, click **Load**, and in the security\_setting directory, browse to desired Private Key (.prv) file. In the Encryption File Password dialog box, provide a password to open the file, and click **OK**.
  - ▶ For ECDSA Signature, click **Load**, and in the security\_setting directory, browse to desired Private Key (.prv) file. In the Encryption

File Password dialog box, provide a password to open the file, and click **OK**.

12. Click **Next**.
13. In the Step 3 of 4 Select Output File(s) dialog box, select the desired output file type from the dropdown menu, and using the  button, browse to the desired location of the output file(s).
14. Click **Next**.
15. In the Step 4 of 4 Generate Deployment dialog box, review Deployment Tool Summary and Command Line Information.
16. Choose **File > Generate**, or click the  button, to perform the Deployment. The Deployment Generate Result are available for review.
17. If you wish to save the deployment, choose **File > Save**, or click the  button, to save the deployment (.ddt) file in your desired location.


#### See Also

- ▶ [Bitstream Security Settings Tool for Nexus Devices](#)

## Generating STAPL File for LFMXO5D Provision

The following steps describe how to generate a STAPL file.


1. In **Programmer**, save your project to create a .xcf file.
2. Launch the Deployment Tool by clicking **Tools > Deployment Tool** from the toolbar.

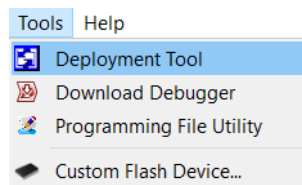


3. In the Deployment Tool dialog box, select the following options:

- ▶ **Function Type:** Tester
- ▶ **Output File Type:** STAPL: JTAG Chain


Click **OK**.

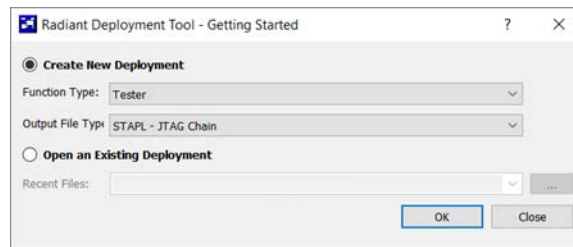


4. Input your .xcf file by browsing to the directory where you saved the file. Click **Next**.

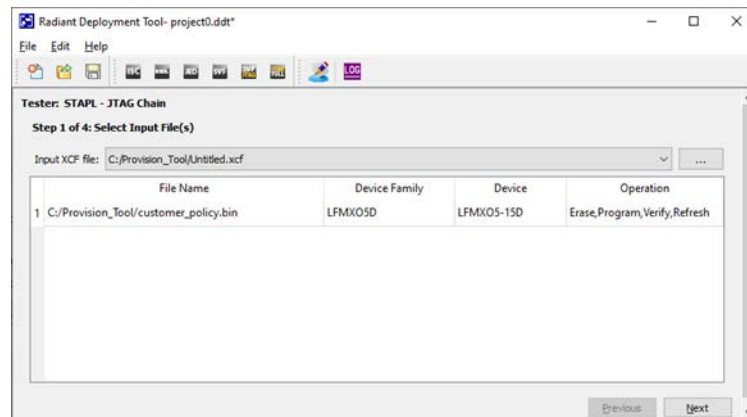


5. In **STAPL Options**, select the options you want to add and click Next.

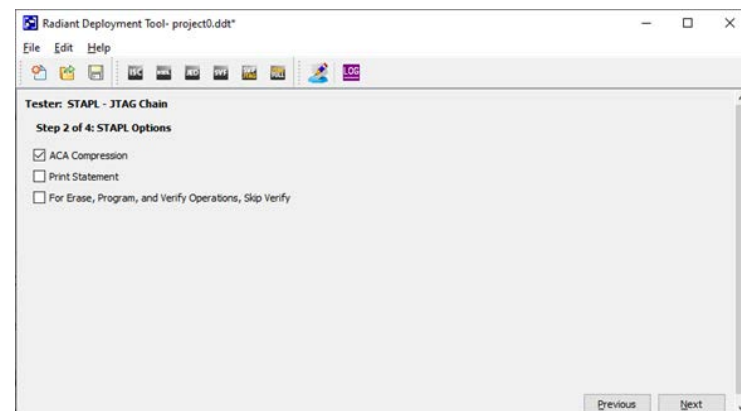

6. In **Output STAPL**, browse to the location of your .stp file and click Open. Once added, click Next.

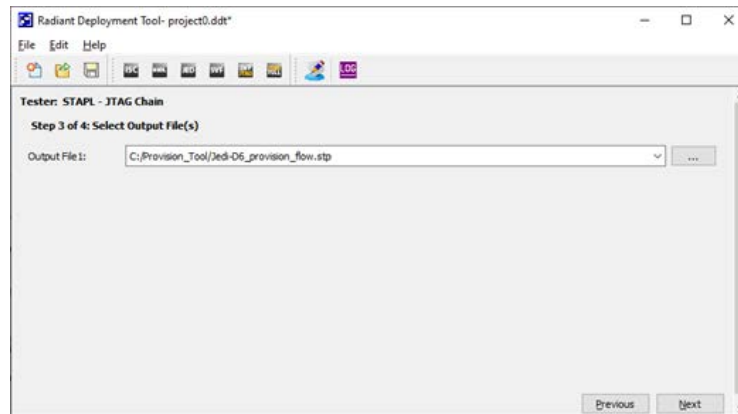

- Click the **Generate** button to generate the STAPL file.

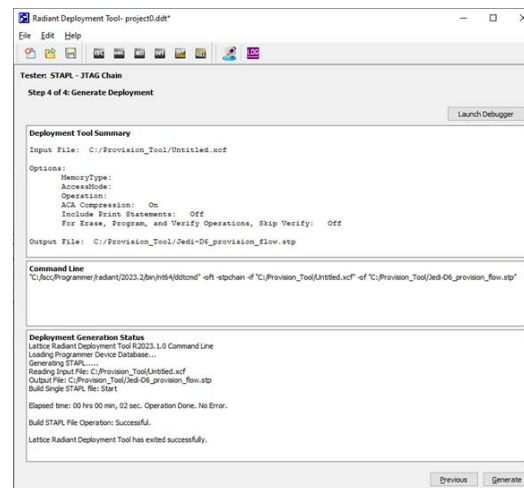

If the file has been generated successfully, click the **Launch Debugger** button in the upper-right corner of the dialog box to launch the tool and process your STAPL file.

## Opening an Existing Deployment While Running the Deployment Tool

You can open a different existing deployment while running the Deployment Tool, and save the deployment you are currently working on.

### To open an existing deployment while running the Deployment Tool:

- Choose **File > Open**.
- In the Open dialog box, browse to the deployment (.ddt) file that you wish to open and select it.
- Click **Open**.

**See Also**

- ▶ [Creating a New Deployment](#)
- ▶ [iCE40 Warm Boot/Cold Boot Bitstream Output Options](#)

## Creating a New Deployment While Running the Deployment Tool

You can create a new deployment while running the Deployment Tool.

**To create a new deployment while running the Deployment Tool:**


1. Choose **File > New**, or click the  button.
2. Deployment Tool prompts you to save the .ddt file for the project you are currently working on. If you wish to save the deployment you are currently working on, click **Yes**, and in the Save As dialog box, create a name for the .ddt file and save in the desired location.
3. In the Function Type drop-down menu, choose from one of the options.
4. In the Output File Type box, choose an output file type.
5. Click **OK**. The Deployment Tool loads the device database.

**See Also**

- ▶ [Creating a New Deployment](#)
- ▶ [Using Quick Launch Button to Create a New Deployment](#)
- ▶ [iCE40 Warm Boot/Cold Boot Bitstream Output Options](#)

## Using Quick Launch Button to Create a New Deployment

Quick launch buttons allow you to create a new Deployment while running the Deployment Tool without having to use the Getting Started dialog box. The toolbar supports up to six quick launch buttons.

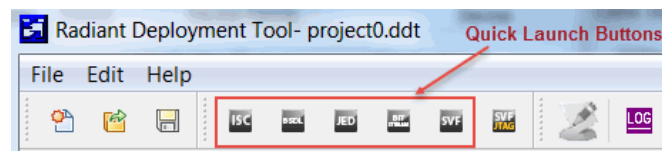

You can customize which quick launch buttons appear in the toolbar. Choices of quick launch buttons include:

- ▶ IEEE 1532 ISC Data File
- ▶ Application Specific BSDL File



- ▶ JEDEC File
- ▶ Bitstream
- ▶ JEDEC to Hex
- ▶ SVF - Single Device
- ▶ SVF - JTAG Chain
- ▶ STAPL - Single Device
- ▶ STAPL - JTAG Chain
- ▶ JTAG Full VME Embedded
- ▶ JTAG Slim VME Embedded
- ▶ Slave SPI Embedded
- ▶ I2C Embedded
- ▶ Hex Conversion
- ▶ Dual Boot
- ▶ Ping Pong Boot
- ▶ Advanced SPI Flash
- ▶ sysCONFIG Daisy Chain

**To customize which quick launch buttons appear in the Deployment Tool toolbar:**

1. Place the cursor over a quick launch button, and right-click.
2. In the drop-down menu, check the box of the quick start button that you want to display in the toolbar. A maximum of six buttons may be selected.

**See Also**

- ▶ [Creating a New Deployment](#)
- ▶ [Creating a New Deployment While Running the Deployment Tool](#)
- ▶ [iCE40 Warm Boot/Cold Boot Bitstream Output Options](#)

## Viewing the Deployment Tool Log File

The log file shows recent actions in a text editor.

**To view the log file:**

Click  button on the toolbar.

**See Also**

- ▶ [Deploying the Design with the Deployment Tool](#)

## Changing the Deployment Tool Log File Settings

The log file shows recent actions in a text editor. You can change settings to clear log file path each time the application starts, and you can also change where the log file is saved.

### To change where the log file is saved:

1. Choose **Edit > Settings**.
2. In the Log File Path dialog box, browse to the folder where you wish to save the deployment\_tool.log file.

### To clear the log file each time the application starts:

1. Choose **Edit > Settings**.
2. Check the **Clear Log File Each Time Application Starts** box.

If the **Clear Log File Each Time Application Starts** box is unchecked, the log file will continue increase in size until the file is manually erased.

### See Also

- ▶ [Deploying the Design with the Deployment Tool](#)

# Debugging SVF, STAPL, and VME Files

Download Debugger is a stand-alone software tool for debugging the following file types:

- ▶ Serial Vector Format (SVF)
- ▶ Standard Test And Programming Language (STAPL)
- ▶ Lattice Embedded (VME)

Download Debugger allows you to program a device, and edit, debug, and trace the process of SVF, STAPL, and VME files.

Download Debugger also allows you to create, edit, or view a VME file in hexadecimal format.

This section provides procedures for using Download Debugger. Topics include:

- ▶ [Understanding SVF Files](#)
- ▶ [Download Debugger Software Support of SVF Operations](#)
- ▶ [Running Download Debugger](#)
- ▶ [Opening an Existing SVF File](#)
- ▶ [Creating a New SVF File](#)
- ▶ [Setting Device Programming Options in Download Debugger](#)
- ▶ [Setting Port Assignments and Options in Download Debugger](#)
- ▶ [Setting and Removing Breakpoints in an SVF File](#)
- ▶ [Processing an SVF File](#)
- ▶ [Viewing the Download Debugger Log File](#)
- ▶ [Saving a Log File in Download Debugger](#)
- ▶ [Clearing the Contents of a Log File in Download Debugger](#)
- ▶ [Editing an SVF File](#)
- ▶ [Opening an Existing STAPL File](#)
- ▶ [Creating a New STAPL File](#)
- ▶ [Viewing STAPL Processing](#)
- ▶ [Setting and Removing Breakpoints in a STAPL File](#)
- ▶ [Processing a STAPL File in Download Debugger](#)
- ▶ [Viewing the Download Debugger Log File](#)
- ▶ [Saving a Log File in Download Debugger](#)
- ▶ [Clearing the Contents of a Log File in Download Debugger](#)
- ▶ [Editing a STAPL File](#)
- ▶ [Setting Windows Options in Download Debugger](#)

## Understanding SVF Files

The Serial Vector Format file (.svf) is the medium for exchanging descriptions of high-level 1149.1 bus operations. The SVF file is defined as an ASCII file that consists of a set of SVF statements. The 1149.1 bus operations consist of scan operations and movements between deferent stable states. Refer to the Serial Vector Format Specification Rev E for detailed definitions of SVF statement formats. Current SVF specifications are available from Asset-Intertech website at [www.asset-intertech.com](http://www.asset-intertech.com).

### See Also

► [Debugging SVF, STAPL, and VME Files](#)

## Download Debugger Software Support of SVF Operations

The Download Debugger supports a selective set of SVF operations. The following table lists SVF operations supported by the Download Debugger.

| SVF Operation | Description                                                                                                                   | Support Status                                                                                               |
|---------------|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| ENDDDR        | Specifies default end state for DR scan operations.                                                                           | Full support                                                                                                 |
| ENDIR         | Specifies default end state for IR scan operations.                                                                           | Full support                                                                                                 |
| HDR           | (Header Data Register) Specifies a header pattern, which is placed at the beginning of subsequent DR, scan operations.        | Supports TDI keyword only. SMASK, TDO and MASK are not supported.                                            |
| HIR           | (Header Instruction Register) Specifies a header pattern, which is placed at the beginning of subsequent IR, scan operations. | Supports TDI keyword only. SMASK, TDO and MASK are not supported.                                            |
| RUNTEST       | Forces the 1149.1 bus to the RUN_TEST/IDLE state for a specified number of clocks.                                            | Full support                                                                                                 |
| SDR           | (Scan data register) Performs an 1149.1 data register scan.                                                                   | Supports TDI, TDO, and MASK keywords. SMASK is ignored.                                                      |
| SIR           | (Scan Instruction Register) Performs an 1149.1 instruction register scan.                                                     | Supports TDI, TDO, and MASK keywords. SMASK is ignored.                                                      |
| STATE         | Forces the 1149.1 bus to a specified stable state.                                                                            | Supports only single target state. The Download Debugger does not allow you to specify custom traverse path. |
| TDR           | (Trailer Data Register) Specifies a trailer pattern, which is appended to the end of subsequent DR scan operations.           | Supports TDI keyword only. SMASK, TDO, and MASK are not supported.                                           |
| TIR           | (Trailer Data Register) Specifies a trailer pattern which is appended to the end of subsequent IR scan operations             | Supports TDI keyword only. SMASK, TDO, and MASK are not supported.                                           |

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Running Download Debugger

Download Debugger runs separately from the Radiant software environment.

**To start the Download Debugger:**

1. Issue the start command in one of the following ways:

- ▶ To start Download Debugger that is integrated in the Radiant software:
    - ▶ In the Radiant software, open Programmer by choosing **Tools > Programmer**.
    - ▶ In the Programmer window, choose **Tools > Download Debugger**.
  - ▶ To start Download Debugger from stand-alone Radiant Programmer:
    - ▶ In the Programmer window, choose **Tools > Download Debugger**.
- or
- ▶ From the Windows Start menu, choose **All Programs > Lattice Radiant Programmer > Download Debugger**.
  - ▶ In Linux, from the `<Programmer install_path>/bin/linux64` directory, enter the following on a command line:

```
./debugger
```

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Opening an Existing SVF File

The Download Debugger Edit Window allows you to perform various editing functions on your SVF file. You can check the SVF file for errors line by line when you program your device.

**To open an existing SVF file:**

1. In Download Debugger, choose **File > Open** to open the dialog box.
2. Locate and select the desired SVF file, and then click **Open**.

The selected SVF file opens in the Download Debugger Edit window.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Creating a New SVF File

To create a new empty SVF file:

- ▶ In Download Debugger, choose **File > > New > SVF** to open the SVF Debugger Edit window and create a new empty SVF file.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Setting Device Programming Options in Download Debugger

To set SVF options:

1. In Download Debugger, choose **Configuration > Options**.  
The [Options Dialog Box](#) opens.
2. Select the options that you want and click **OK**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Setting Port Assignments and Options in Download Debugger

Use the [Cable and I/O Port Settings Dialog Box](#) to specify the preferred location for download, select the port address or cable, and choose the download cable type.

To set port assignments and options:

1. In Download Debugger, choose **Configuration > Cable and I/O Port Setup**.  
The [Cable and I/O Port Settings Dialog Box](#) opens.
2. Select the options that you want and click **OK**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Setting and Removing Breakpoints in an SVF File

By using the Download Debugger, you can set a breakpoint in your SVF file before processing it. The process stops at the line that you specify. After clicking OK in the dialog box, you can resume the process.

### To set a breakpoint in an SVF File:

1. Select a line in your SVF file.
2. Choose **Command > Breakpoint > Toggle Breakpoint**.

### To select the next breakpoint:

1. Select a line in your SVF file.
2. Choose **Command > Breakpoint > Next Breakpoint**.

### To select the previous breakpoint:

1. Select a line in your SVF file.
2. Choose **Command > Breakpoint > Previous Breakpoint**.

### To clear all breakpoints:

1. In your SVF file, select the breakpoint you want to remove.
2. Choose **Command > Breakpoint > Clear All Breakpoints**.

### See Also

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Processing an SVF File

After setting device programming options and port assignments, you can process your SVF file with the Download Debugger. You can program a device with a download cable, step through each line of the process, reset it and begin again.

### To process an SVF file:

- ▶ Choose **Command > Go**.

### To step through a process, line by line:

- ▶ Choose **Command > Step**.

The process will step through the SVF file line by line.

**To reset a process and start a process from the beginning:**

- ▶ Choose **Command > Reset**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Viewing the Download Debugger Log File

The Download Debugger generates a log file of the process and reports any errors encountered. When you select **Continue on Error** in the [Options Dialog Box](#), the log file also reports state machine transitions and delay time for debug.

**To view a log file:**

- ▶ In Download Debugger, choose **View > View Log File**.

The log file is displayed in a text editor.

**See Also**

- ▶ [Clearing the Contents of a Log File in Download Debugger](#)
- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Saving a Log File in Download Debugger

**To save a log file:**

1. In Download Debugger, choose **Configuration > Options**.
2. The [Options Dialog Box](#) opens.
3. Use the Browse button to specify the path of the directory you wish to save your log file to.
4. Click **OK**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)



## Clearing the Contents of a Log File in Download Debugger

To clear the contents of the log file:

- ▶ In Download Debugger, choose **Edit > Clear Log File**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Editing an SVF File

Use the Edit menu commands in the Download Debugger to edit an SVF file.

To edit an SVF file:

1. In Download Debugger, select a line in your SVF file.
2. Make the edits using commands in the Edit menu, and click **File > Save**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Opening an Existing STAPL File

The Download Debugger allows you to perform various editing functions on your STAPL file. You can check the STAPL file for errors line by line when you program your device.

To open an existing STAPL file:

1. In Download Debugger, choose **File > Open** to open the dialog box.
2. Locate and select the desired STAPL (.stp) file, and then click **Open**.

The selected STAPL file opens in the Download Debugger.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Creating a New STAPL File

### To create a new empty STAPL file:

- ▶ In Download Debugger, choose **File > New**.

A blank edit window opens. You can start entering contents for your new STAPL file, and save the file when you finish.

### See Also

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Viewing STAPL Processing

To view the output information during STAPL processing, you should open the Output Information dialog box before processing the STAPL file.

### See Also

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Setting and Removing Breakpoints in a STAPL File

By using the Download Debugger, you can set a breakpoint in your STAPL file before processing it. The process stops at the line that you specify. After clicking OK in the dialog box, you can resume the process.

### To set a breakpoint in a STAPL file:

1. Select a line in your STAPL file.
2. Choose **Command > Breakpoint > Toggle Breakpoint**.

### To select the next breakpoint:

1. Select a line in your STAPL file.
2. Choose **Command > Breakpoint > Next Breakpoint**.

### To select the previous breakpoint:

1. Select a line in your STAPL file.
2. Choose **Command > Breakpoint > Previous Breakpoint**.

### To clear all breakpoints:

1. In your STAPL file, select the breakpoint you want to remove.
2. Choose **Command > Breakpoint > Clear All Breakpoints**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Processing a STAPL File in Download Debugger

After setting device programming options and port assignments, you can process your STAPL file with the Download Debugger and examine the progress in the Output Information dialog box. You can program a device with a download cable, step through each line of the process, reset it and begin again.

**To process a STAPL file:**

- ▶ Choose **Command > Go**.

**To step through a process, line by line:**

- ▶ Choose **Command > Step**.

The process will step through the STAPL file line by line.

**To reset a process and start a process from the beginning:**

- ▶ Choose **Command > Reset**.

**See Also**

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Viewing the Download Debugger Log File

The Download Debugger generates a log file that tracks the process and reports any errors encountered. The log file contains all the information displayed in the Status window and also the status of the cable. When you select **Continue on Error** in the [Options Dialog Box](#), the log file also reports state machine transitions and delay time for debug.

**To view a log file:**

- ▶ In Download Debugger, choose **View > View Log File**.

The log file is displayed in a text editor.

**See Also**

- ▶ [Saving a Log File in Download Debugger](#)
- ▶ [Clearing the Contents of a Log File in Download Debugger](#)

▶ [Debugging SVF, STAPL, and VME Files](#)

## Saving a Log File in Download Debugger

To save a log file:

1. In Download Debugger, choose **Configuration > Options**.  
The [Options Dialog Box](#) opens.
2. Use the Browse button to specify the path of the directory you want to save your log file to.
3. Click **OK**.

See Also

▶ [Debugging SVF, STAPL, and VME Files](#)

## Clearing the Contents of a Log File in Download Debugger

To clear the contents of the log file:

- ▶ In Download Debugger, choose **Edit > Clear Log File**.

See Also

▶ [Debugging SVF, STAPL, and VME Files](#)

## Editing a STAPL File

Use the Edit menu commands in the Download Debugger to edit a STAPL file.

To edit a STAPL file:

1. In Download Debugger, select a line in your STAPL file.
2. Make the edits using commands in the Edit menu, and click **File > Save**.

See Also

▶ [Debugging SVF, STAPL, and VME Files](#)

## Setting Windows Options in Download Debugger

Use the Windows options to change the way how multiple windows are displayed in Download Debugger.

### To cascade open windows:

- ▶ Choose **Window > Cascade**.

### To tile open windows:

- ▶ Choose **Window > Tile**.

### See Also

- ▶ [Debugging SVF, STAPL, and VME Files](#)

## Download Debugger Options

This section lists the options available in Download Debugger.

Topics include:

- ▶ [Cable and I/O Port Settings Dialog Box](#)
- ▶ [Options Dialog Box](#)

## Cable and I/O Port Settings Dialog Box

The following options are available in the Cable and I/O Port Settings dialog box.

### Cable Description

This option is displayed when multiple cables are detected. When enabled, this option allows you to select the desired cable.

### Cable

Specifies the download cable type: Lattice (parallel port), USB (LSC USB cable), or USB2 (FTDI USB2 cable)

### Port

Specifies the port to which the download cable is connected.

### Custom Port

Specifies a custom parallel port to which the download cable is connected. Use hexadecimal format to type the port name.

### Using Slave SPI Interface Connection

This option allows you to target the target SPI port of the selected device. This allows you to debug target SPI device programming

### Using JTAGI2C Interface Connection (HW-USBM-2B Cable Only)

Only use an HW-USBM-2B cable for a JTAGI2C interface connection.

### Use Default Clock Divider

Uses the fastest TCK clock speed.

### Use Custom Clock Divider

Enables the Use Custom Clock Divider feature.

### TCK Divider Setting (0 - 30x)

Allows you to slow down the TCK clock. This is done by extending the low period of the clock. Refer the following tables for specific frequency settings for USB-2B (2232H FTDI USB host chip), USB-2B (2232D FTDI USB host chip), and USB-2A and Parallel port cables.

**Table 181: USB-2B (2232H FTDI USB host chip)**

| Divider | Clock Frequency <sup>1</sup> | Divider | Clock Frequency <sup>1</sup> |
|---------|------------------------------|---------|------------------------------|
| 0       | 30 MHz                       | 5       | 5 MHz                        |
| 1       | 15 MHz (Default)             | 6       | 4.2 MHz                      |
| 2       | 10 MHz                       | 7       | 3.7 MHz                      |
| 3       | 7.5 MHz                      | 8       | 3.1 MHz                      |
| 4       | 6 MHz                        | 9       | 3 MHz                        |
|         |                              | 10      | 2.7 MHz                      |

<sup>1</sup>Calculation formula for USB-2B (2232H FTDI USB host chip):

Frequency = 60 MHz / (1 + ClockDivider) \*2

**Table 182: USB-2B (2232D FTDI USB host chip)**

| Divider | Clock Frequency <sup>2</sup> | Divider | Clock Frequency <sup>2</sup> |
|---------|------------------------------|---------|------------------------------|
| 0       | 6 MHz                        | 5       | 1 MHz                        |
| 1       | 3 MHz (Default)              | 6       | 0.8 MHz                      |
| 2       | 2 MHz                        | 7       | 0.7 MHz                      |
| 3       | 1.5 MHz                      | 8       | 0.65 MHz                     |

**Table 182: USB-2B (2232D FTDI USB host chip) (Continued)**

|   |         |    |         |
|---|---------|----|---------|
| 4 | 1.2 MHz | 9  | 0.6 MHz |
|   |         | 10 | 0.5 MHz |

<sup>2</sup>Calculation formula for USB-2B (2232D FTDI USB host chip):

$$\text{Frequency} = 12 \text{ MHz} / (1 + \text{ClockDivider}) * 2$$

**Table 183: USB-2A and Parallel port**

| Divider | Low Pulse Width delay <sup>3</sup> | Divider | Low Pulse Width delay <sup>3</sup> |
|---------|------------------------------------|---------|------------------------------------|
| 0       | NA                                 | 5       | 5x                                 |
| 1       | 1x                                 | 6       | 6x                                 |
| 2       | 2x                                 | 7       | 7x                                 |
| 3       | 3x                                 | 8       | 8x                                 |
| 4       | 4x                                 | 9       | 9x                                 |
|         |                                    | 10      | 10x                                |

<sup>3</sup>The USB-2A frequency fixed at 1.5 MHz and Parallel Port frequency fixed at 500 KHz

### Use Default I/O Settings

Only use the four JTAG signals.

### Use Custom I/O Settings

.Specify additional non-JTAG signals connected to the board.

### INITN Pin Connected

Select this option if you connect the INIT pin to the download cable. This option is only available with the ispDOWNLOAD USB cable.

### DONE Pin Connected

Select this option if you connect the DONE pin to the download cable. This option is only available with the ispDOWNLOAD USB cable.

### TRST Pin Connected

Select this option if you connect the TRST pin to the download cable. Specify active high or active low.

### PROGRAM Pin Connected

Select this option if you connect the PROGRAM pin to the download cable.

### ispEN Pin Connected

Select this option if you connect the ispEN pin to the download cable. Specify active high or active low.

**See Also**

▶ [Download Debugger Options](#)

## Options Dialog Box

The following options are available in the within the three tabs (General, SVF, STAPL) found in the Options dialog box.

**Log File Name**

Allows you to specify name and location of log file.

**Clear Log File Each Time Start Application**

A Check to clear the log file each time Download Debugger is started.

**Source Editor**

Allows you to specify font, size, tab size, of Source Editor.

**Show Line Number**

Toggles display of line numbers in left margin of Source Editor.

**Show Indicator Margin**

Toggles display of indicator margin in left side of Source Editor.

**Disable SVF Syntax Checker**

Disables the tool that checks the syntax of the SVF file.

**Ignore IR and DR Header Trailer in SVF**

Ignores the HIR, TIR, HDR, and TDR information in SVF file. If you set up HIR, TIR, HDR, or TDR in this dialog box, this option must be selected.

**Continue on Error**

Continues processing the file even if there is an error. You can look at the log file for the errors encountered. When this option is selected, the log file also reports state machine transitions and delay time for debug.

**Mixed Chain**

Tells the Download Debugger that the hardware configuration is a mixed chain, therefore disabling the ISP chain when processing the SVF file.

**TCK Frequency**



Specifies the TCK clock frequency for the chosen SVF file. This value is used to determine the TCK clock period and the length of the delay times.

**SVF Vendor**

Allows you select from the following SVF vendors for the selected device: JTAG STANDARD, LATTICE, ALTERA, and XILINX. This option is available for JTAG devices only.

**Starting TAP State**

Select the starting JTAG state of the JTAG State Machine for download. Only two states are available: TLR (Test-Logic-Reset) and RTI (Run-Test/Idle).

**Instruction Register Header**

Sets the IR header length in number of bits (0-100).

**Instruction Register Trailer**

Sets the IR trailer length in number of bits (0-100).

**Data Register Header**

Sets the HDR in number of bits (0-100).

**Data Register Trailer**

Sets the TDR in number of bits (0-100).

**Ignore IR and DR Header Trailer in STAPL**

Ignores the HIR, TIR, HDR and TDR information in STAPL file. If you set up HIR, TIR, HDR, or TDR in this dialog box, this option must be selected.

**See Also**

▶ [Download Debugger Options](#)

## Using Programming File Utility

The Radiant Programming File Utility is a stand-alone tool that allows you to view, compare, and edit data files. When comparing two data files, the software generates an output (.out) file with the differences highlighted in red.

### See Also

- ▶ [Running Programming File Utility](#)
- ▶ [Viewing Data Files](#)
- ▶ [Comparing Two Data Files](#)
- ▶ [Editing Feature Row Values](#)
- ▶ [Editing Control Register0 or Control Register1 Values](#)
- ▶ [Control Register1 Editor Dialog Box](#)
- ▶ [Editing the USERCODE in the Data File](#)

## Running Programming File Utility

Open Programming File Utility from the Tools menu of Programmer. Or you can also open it directly if you have the stand-alone Programmer installed or are working on a Linux system.

### To run the Programming File Utility:

- ▶ Do one of the following:
  - ▶ In the Programmer window, choose **Tools > Programming File Utility**.
  - ▶ In the Windows Start menu, choose **All Programs > Lattice Radiant Programmer > Programming File Utility**. Requires the stand-alone Programmer.
  - ▶ In Linux, go to the *<Programmer install\_path>/bin/lin64* directory, and enter the following on a command line:

```
./fileutility
```

The Programming File Utility window opens.

### See Also

- ▶ [Using Programming File Utility](#)

## Viewing Data Files

The data file can be in any of the following formats: .jed, .isc, .rbt, .rbka, .mska, .bit, .rbk, .msk, .bsm, .bsd, .bin, .hex, .mcs, .exo, xtek, nvcm, .out.

**To view a data file:**

- ▶ In the Programming File Utility, choose **File > Open** and select the data file you want to view.

Use the **Edit > Find** and **Edit > Find Next** commands to search for text in the file. Choose **File > Save As** to save the file with another file name.

Change file appearance such as font and font size by choosing **Configuration > Options** and changing settings in the Options dialog box.

**See Also**

- ▶ [Using Programming File Utility](#)

## Comparing Two Data Files

You can use the Programming File Utility application to compare two data files. After creating the output file, the software displays the output file and highlights the differences between the two files.

**To compare two data files:**

1. Choose **Command > Data Files Comparison** or click  on the toolbar. The Data Files Comparison dialog box opens.
2. Click the Browse buttons under First Data and Second Data to select the two data files you want to compare.
3. Optionally, if you are comparing two readback files (.rbk), browse for the mask file (.msc) to include masked bits in the comparison.
4. If desired, type a different name for the output file or browse to a file name that you want to overwrite. By default, the software uses the first data file name and appends the extension .out.
5. Click **OK**.

The software compares the files and displays a message indicating whether the two files are identical or contain differences.

6. Click **OK** to close the message box and display the output file in the Programming File Utility window.
7. If the files contain differences, the Next  and Previous  arrows will become enabled on the toolbar. Use these buttons to examine each difference in the output file.

**Viewing the Output File** The output file displays lines of data from the first file. Each of these lines is followed by a comparison line which shows dots where the files are the same. When different, the line is highlighted in red and the data from the second file is displayed.

An output file that uses a mask file to compare two readback files displays each line of data from the first readback file in black, followed by a line of data in green from the mask file, and then a comparison line. The comparison line shows dots where the two readback files are the same. When different, the

line is highlighted in red and the data from the second readback file is displayed.

### See Also

► [Using Programming File Utility](#)

## Editing Feature Row Values

You can use the Feature Row Editor to enable or disable silicon features in Lattice FPGA devices by editing the Feature Row fuse settings in the data file.

### To edit control register values:

1. Choose **Tools > Feature Row Editor**.

The [Feature Row Editor Dialog Box](#) opens.

2. Using the  (**Browse**) button, select the data (.fea) file you want to edit.
3. Click **Read** to display current data file settings.

The software displays the default values in the top row. The second row shows the values that can be modified in black, and those that cannot be modified in red.

4. Click the cell of a value displayed in black to change it.

► To change the value in Feature Row, click the value cell and toggle the value from 1 to 0 or from 0 to 1.

5. To overwrite the existing data file, choose **Save**.
6. To create a new data file with a different name, choose **Save As** and save as a different file name.

### See Also

► [Using Programming File Utility](#)

## Editing Control Register0 or Control Register1 Values

You can use either the Control Register0 Editor or the Control Register1 Editor to read the control registers of a bitstream file, modify the settings, and save them.

### To edit control register values:

1. Choose **Tools > Control Register0 Editor** or choose **Tools > Control Register1 Editor**.

The Control Register 0 editor or Control Register 1 editor opens (see [Control Register0 Editor Dialog Box](#) or [Control Register1 Editor Dialog Box](#) for more information).

- Using the  (**Browse**) button, browse to the .isc, .rpt, or .bit file that you want to edit, select the file, and then click **Open**.

The editor opens with the selected file.

- Click **Read** to display the values of the control register.
- The software displays the default values in the top row.

The software displays the default values in the top row. The second row shows the values that can be modified in black, and those that cannot be modified in red.

- Click the cell of a value displayed in black to change it.
  - ▶ To change a value, click the value cell and toggle the value from 1 to 0 or from 0 to 1.
- To overwrite the existing data file, choose **Save**.
- To create a new data file with a different name, choose **Save As** and save as a different file name.
- A message box pops up, displaying the new control register value. Click **OK**.
- A confirmation message box informs you that Write to file was successful. Click **OK**.
- Click **Close** to exit the Control Register 0 or Control Register 1 dialog box.

#### See Also

- ▶ [Using Programming File Utility](#)

## Editing the USERCODE in the Data File

The USERCODE Editor allows you to add information, such as serial code number, design code, or lot number, to the .jed, .isc, .rpt, or .bit file. This information is written to the USERCODE after the fuse map data in a JEDEC file. The signature must be in either decimal (0-9), ASCII, or hexadecimal (0-F) characters. In an ISC data file, this information is written in the user code data record in hexadecimal.

#### Note:

The LFMXO5 USERCODE in a JEDEC file for internal flash cannot be updated.

#### To use the USERCODE Editor:

- Choose **Tools > USERCODE Editor**.
 

The USERCODE Editor opens (see [USERCODE Editor Dialog Box](#) for more information).
- Using the  (**Browse**) button, browse to the .jed, .isc, .rpt, or .bit file that you want to edit, select the file, and then click **Open**.

Click **Read**.

- If there is no data in the field, you will see a string of 8 Fs (Hexadecimal).

- Edit the string as required. The USERCODE edit box displays the current bit position as you type. The signature must be in decimal (0-9), ASCII, or hexadecimal (0-F) characters.

- Click **Save** or **Save As** to save the USERCODE data when finished.

- Click **Yes** when prompted to overwrite the data file.

- A confirmation message box informs you that the USERCODE write to file was successful. Click **OK**.

When you open the .jed file in a text editor, you will see the new USERCODE data added to the bottom of the file, as shown in the example below:

[illegible]

When you open the .isc data file in a text editor, you will see the new USERCODE data added to the end of the bottom of the file, as shown in the example below:

```
ta usercode (initialize --LATTICE_NOTEDATA_WIDTH = 32--
TTICE NOTEADDRESS WIDTH = 1(97D84A22) ),
```

## e Also

- ## Using Programming File Utility
- ### Running Programming File Utility

## Securing the Device and Setting the Persistent Bit

The Security and Persistent Fields Editor allows you to read both the security settings and the persistent bit of the bitstream file and to change the setting to ON or OFF.

**read the settings of the security and persistent fields:**

- Choose **Tools > Security and Persistent Fields Editor**.

The Security and Persistent Fields Editor opens (see [Security and Persistent Fields Editor Dialog Box](#) for more information).

- Click the **Browse** button and select the desired bitstream data file.

- Click **Read** to view the settings for Security and Persistent Bit and display them in the Status cells.

- To change a setting from Disabled to Enabled or vice versa, click the status cell.

5. Do either of the following to save the changes:
  - ▶ To save the changes to the current data file, click **Save**. In the pop-up dialog box, click **Yes** to confirm that you want to overwrite the data file.
  - ▶ To save the changed data file to a different location or with a different file name, click **Save As**. In the Save As Data File dialog box, specify file name and location, and click **Save**.
6. A confirmation message box informs you that Write to file was successful. Click **OK**.
7. Click **Close** to exit the Security and Persistent Fields Editor.

**See Also**

- ▶ [Using Programming File Utility](#)
- ▶ [Running Programming File Utility](#)

## Programming File Utility Options

This section lists the options available in Programming File Utility. Topics include:

- ▶ [Feature Row Editor Dialog Box](#)
- ▶ [Control Register0 Editor Dialog Box](#)
- ▶ [Control Register1 Editor Dialog Box](#)
- ▶ [USERCODE Editor Dialog Box](#)
- ▶ [Security and Persistent Fields Editor Dialog Box](#)

## Feature Row Editor Dialog Box

The following options are available in the Feature Row Editor dialog box:

**Device** Lists the project's device. If a device is not displayed, use the browse button to locate the correct data file. Once a device is displayed, click **Read** to get the correct Max Bits/Digits information.

**Read**

Reads the data file values and displays them in the display field.

**Save**

Saves the data file.

**Save As**

Saves the data file with another file name.

**Close**

Closes this dialog box.

**See Also**

- ▶ [Editing Feature Row Values](#)
- ▶ [Programming File Utility Options](#)

## Control Register0 Editor Dialog Box

The following options are available in the Control Register0 Editor dialog box:

**Device**

Lists the project's device. If a device is not displayed, use the browse button to locate the correct data file. Once a device is displayed, click **Read** to get the correct Max Bits/Digits information.

**Read**

Reads the data file values and displays them in the display field.

**Save**

Saves the data file.

**Save As**

saves the data file with another file name.

**Close**

Closes this dialog box.

**See Also**

- ▶ [Editing Control Register0 or Control Register1 Values](#)
- ▶ [Programming File Utility Options](#)

## Control Register1 Editor Dialog Box

The following options are available in the Control Register1 Editor dialog box:

**Device** Lists the project's device. If a device is not displayed, use the browse button to locate the correct data file. Once a device is displayed, click **Read** to get the correct Max Bits/Digits information.

**Read**

Reads the data file values and displays them in the display field.

**Save**



Saves the data file.

**Save As**

Saves the data file with another file name.

**Close**

Closes this dialog box.

**See Also**

- ▶ [Editing Control Register0 or Control Register1 Values](#)
- ▶ [Programming File Utility Options](#)

## USERCODE Editor Dialog Box

The following options are available in the USERCODE Editor dialog box:

**Device**

Lists the project's device. If a device is not displayed, use the browse button to locate the correct data file. Once a device is displayed, click **Read** to get the correct Max Bits/Digits information.

**USERCODE Format**

Allows you to display the USERCODE field in hexadecimal, decimal, or ASCII format.

**Usercode**

Allows you to specify a USERCODE value to override the current value in the data file.

**Read**

Reads the USERCODE field in the data file and displays it in the display field.

**Save**

Writes the value in the USERCODE display field and saves the data file.

**Save As**

Writes the value in the USERCODE display field allows you to save the data file with another file name.

**Close**

Closes this dialog box.

**See Also**

- ▶ [Editing the USERCODE in the Data File](#)
- ▶ [Programming File Utility Options](#)

## Security and Persistent Fields Editor Dialog Box

The following options are available in the Security and Persistent Fields Editor dialog box:

**Device**

Lists the project's device. If a device is not displayed, use the browse button to locate the correct data file. Once a device is displayed, click **Read** to get the correct chip value information.

**Read**

Reads the security and persistent field in the data file and displays it in the display field.

**Save**

Writes the value in the security and persistent field and saves the data file.

**Save As**

Writes the value in the security and persistent field and allows you to save the data file with another file name.

**Close**

Closes this dialog box.

**See Also**

- ▶ [Securing the Device and Setting the Persistent Bit](#)
- ▶ [Programming File Utility Options](#)

## Testing and Debugging On-Chip

The final stage of developing a design is testing it on the actual FPGA device either on a test board or in your system. Lattice Semiconductor provides the following tools for testing and debugging:

- ▶ **Reveal Inserter** allows you to select which design signals to use for debug tracing or triggering, then generate a core on the basis of these signals and their use. After generating the required core, it generates a modified design with the necessary debug connections and links it to the signals.
- ▶ **Reveal Analyzer/Controller** allows you debug your FPGA circuitry by giving you access to internal nodes inside the device so you can observe their behavior. It enables you to set and change various values and combinations of trigger signals. Before debugging, Reveal Analyzer/Controller requires that a special interface module be added to the design at a certain stage, depending on the selected debug flow. See [“Debug Flows” on page 652](#)

After it is added, rerun the design implementation process (Synthesize Design, Map Design, Place & Route Design) and generate bitstream data file to program the FPGA. The tools can share the same cable and JTAG port that Programmer uses to download the design.

### Note

Aside from the tools integrated with the Radiant GUI a standalone version of Reveal Analyzer is also available. See [“Using Standalone Reveal Analyzer” on page 715](#).

### See Also

- ▶ [Debugging with Reveal Usage Guidelines and Tips](#)
- ▶ [Reveal User Guide for Radiant Software](#)
- ▶ [Reveal Troubleshooting Guide for Lattice Radiant Software](#)

## About Reveal Logic Analysis

One of the most common activities in debugging is logic analysis. To do this, use Reveal Inserter and Reveal Analyzer. You can use both with all supported FPGA devices.

Reveal continuously monitors signals within the FPGA for specific conditions, which can range from simple to quite complex. When the trigger condition occurs, Reveal can save signal values preceding, during, and following the event for analysis, including a waveform presentation. The data can be saved to a value change dump file (.vcd), which can be used with tools such as QuestaSim, or to an ASCII tabular format that can be used with tools such as Excel.

Before running Reveal Analyzer, use Reveal Inserter to add Reveal modules to your design. In these modules, specify the signals to monitor, define the trigger conditions, and other options. Reveal supports multiple logic analyzer cores using hard or soft JTAG interface. Hard JTAG is basically a JTAG block IP that is part of the device. Soft JTAG is built in RTL, which uses the device fabric logic. When working with Nexus and Avant devices, you can minimize logic resources by merging hard and soft JTAGhubs in Reveal. See [“Using JTAGhub” on page 699](#).

You can have up to 15 modules, typically one for each clock region of interest. When the modules are set up, regenerate the bitstream data file to program the FPGA.

A feature is enabling an added module called Reveal Controller. This controller module enables:

- ▶ Access to the control and status registers of the hard IPs such as I2CFIFO, PLL, PCIe, CDR, and DPHY via the LMMI (Lattice Memory Mapped Interface) slave interface.
- ▶ Virtual switches and LEDs emulating on-board switches and LEDs to control and monitor a user design. Up to 32 switches and 32 LEDs are supported.
- ▶ Read/write access to a bank of user registers and/or initialize memory post-configuration.

The main purpose is narrowing down to problem areas during debug cycles using a divide and conquer method into many small functional blocks to control and monitor the status of each block.

Before starting a test run, set up Reveal Analyzer. This includes setting a number of options, including modifying trigger conditions and customizing the waveform display. You can save these settings for later use. During and after a test run, view the incoming data in Reveal's LA Waveform view. You can also save the data to a .vcd or .txt file to analyze with other tools.

**Note:**

Reveal supports IEEE-P1735 encryption. If this encryption is applied to a design, the design tree will allow only the visible ports and signals that are not encrypted to be inserted by the Reveal Inserter for triggering purposes.

---

**See Also**

- ▶ [Lattice Radiant Software User Guide](#)

## Resource Usage Considerations

Reveal debug consumes FPGA resources such as LUT4s, registers, and block RAM. While Reveal is designed to operate across all supported devices, resource usage can become significant—especially on smaller architectures. This section provides guidance on choosing suitable devices and configuring Reveal to ensure successful implementation and analysis.

Reveal Inserter adds trigger logic, trace networks, event counters, and optional EBR-based buffers. These structures have fixed architectural cost and cannot be reduced by strategy settings or synthesis optimizations. As a result:

- ▶ Smaller, lower-density devices can run out of resources because Reveal may use a significant amount of available LUT4s, depending on design size and the number of trace/trigger nodes selected.
- ▶ Reveal constraints, such as maximum sequence depth ( $\leq 16$ ) and event counters ( $\leq 65,536$ ), directly influence the amount of inserted logic.
- ▶ Each clock region can support only one Reveal module, and up to 15 modules per device.

When overall logic utilization is already high or when you enable deep trace capture, the design may fail to Map or PAR due to insufficient remaining logic or routing capacity.

Larger devices are strongly recommended for Reveal. These devices offer significantly more LUT4, register, and EBR resources, reducing the risk of congestion or routing failures when Reveal is enabled.

If you must use smaller devices:

- ▶ Minimize the number of trigger and trace signals.
- ▶ Use EBR-based capture buffers where possible, to offload storage demand from LUT4s.
- ▶ Limit Reveal to short capture sequences and fewer modules.
- ▶ Review MAP/PAR utilization reports to verify that the design is not approaching saturation.

## Guidelines for Choosing Reveal Settings

To optimize usability while managing impact on resources:

- ▶ **Minimize trace network size**  
Limit trace signals to those essential for debugging.  
Prefer hierarchical selection rather than selecting wide buses at full width.
- ▶ **Adjust sequence and trigger complexity**  
Use shallow Max Sequence Depth when working on smaller devices.  
Avoid constructing unnecessarily complex trigger conditions that generate large amounts of combinational comparison logic.
- ▶ **Prefer EBR-based storage**  
When capturing waveforms, enable Reveal options that place trace buffers in Embedded Block RAM (EBR) instead of LUTs.  
EBR usage is generally more efficient and has smaller timing impact.
- ▶ **Review Reveal Inserter output resource estimates**  
Reveal Inserter reports added logic utilization.  
If resource usage is high relative to available device capacity, consider lowering resource requirements or moving to a larger device. [
- ▶ **Evaluate device fit using map or PAR reports**  
Use MAP Resource Usage and PAR reports to ensure that added Reveal structures do not exceed LUT, routing, or EBR limits before finalizing the debug configuration.

## Using Reveal Example Projects

For hands-on experience using the Reveal tools, you can work with example projects targeting various devices.

**To start a Reveal example project:**

1. Choose **File > Open > Design Example**.  
The Open Example dialog box opens.
2. Select the example project.
3. Browse to select the location.
4. Click **OK**.

The design project opens. At this point, you can open Reveal Inserter.

### Note

---

If you want to preserve the original example for future experiments, choose **File > Archive Project** now.

---

5. In the Process bar on top, double-click **Export Files** to implement the design.

If you want to use the example project with a test board, change the device type to match the board by double-clicking the device in the File List view and running the design implementation process.

The following table provides a list of available Reveal example projects.

| Name                             | Device  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------------|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LFD2NX_Reveal_controller_example | LFD2NX  | <p>A basic design for the Certus-NX device, which displays an example pattern and state using LEDs and a 7-segment display. The design can be interfaced using Reveal Controller, or the I/Os on the device to control functionality and the pattern output. It also includes a PLL to generate the clock as well as a DPRAM to store the sample patterns.</p> <p>You can find a detailed description of this example project in the header of the top.v file.</p>          |
| LFMXO5_Reveal_controller_example | LFMXO5  | <p>A basic design for the MachXO5-NX device, which displays an example pattern and state using LEDs and a 7-segment display. The design can be interfaced using Reveal Controller, or the I/Os on the device to control functionality and the pattern output. It also includes an oscillator to generate the clock as well as a DPRAM to store the sample patterns.</p> <p>You can find a detailed description of this example project in the header of the top.v file.</p> |
| counter_reveal                   | iCE40UP | <p>A basic design for the iCE40 UltraPlus device, which displays an RGB LED. It also includes PWM (pulse-width modulation) control for the RGB channels. The design can be interfaced using Reveal Controller, or the I/Os on the device to control functionality and the RGB LED output.</p>                                                                                                                                                                               |
| example_reveal_avant             | LAV-AT  | <p>A simple example design demonstrating Reveal capabilities targeting Avant device. It is a 32-bit counter with an asynchronous reset and an output to toggle LEDs. It counts up and toggles LEDs based on the internal oscillator clock.</p>                                                                                                                                                                                                                              |
| example_reveal_nexus             | LIFCL   | <p>A simple example design demonstrating Reveal capabilities targeting the CrossLink-NX device. It is a 32-bit counter with an asynchronous reset and an output to toggle LEDs. It counts up and toggles LEDs based on the internal oscillator clock.</p>                                                                                                                                                                                                                   |


These example projects are coded in Verilog with a Reveal module already inserted. Trace data is also configured and can be viewed in Reveal Analyzer. A test board is not required to open the Reveal tools or to view the existing trace data. To actually run Reveal Analyzer to collect new data, however, you will need a test board.

## Debug Flows

Reveal Inserter features three debug flows. When you open Reveal Inserter, the Reveal Inserter Wizard prompts you to choose the debug flow to use.

- ▶ **RTL (Pre-Synthesis)** – This is the standard flow for debugging a design all at once. The user inserts the logic core before the design is synthesized the first time. Refer to [“RTL \(Pre-Synthesis\) Debug Flow” on page 655](#) for details.
- ▶ **Post-Synthesis** – This flow allows you to insert debug logic after running synthesis. As such, this option is available if you have already run synthesis. It is useful for isolating or monitoring certain signals and focus your changes or improvements in specific areas of the design. Refer to [“Post-Synthesis Debug Flow” on page 656](#) for details.
- ▶ **Post-Place & Route** – This flow allows you to insert debug logic after running place and route. As such, this option is available if you have already completed synthesis, mapping, and placement and routing. Also referred to as non-intrusive debugging, you can add your debug core after place and route without having to alter your original design. The post-place & route debug flow is available when designing for Avant and Nexus devices. Refer to [“Post-Place & Route Debug Flow” on page 658](#) for details.

**Figure 20: Reveal Inserter Wizard**

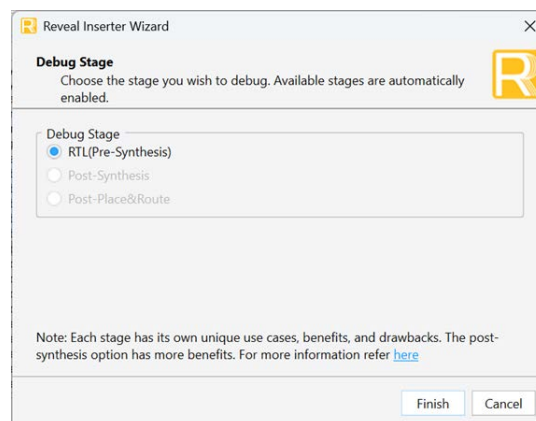



## Debug Stage Guidelines

### RTL (Pre-Synthesis) Stage

**Use Case:**

In this stage, the sample clock, trace signals, trigger signals, and other relevant signals are selected within the RTL (Register Transfer Level) design. The debug core is inserted prior to synthesis.

**Benefits:**

Enables users to select signals they are already familiar with from the RTL design.

**Drawbacks:**

- ▶ Modifications to the debug core—such as adding or removing signals—can unpredictably affect synthesis results.
- ▶ If parts of the design are optimized outside of the Reveal tool, they may not be optimized in conjunction with the Reveal debugger, depending on the selected trace and trigger signals.

### Post-Synthesis Stage

**Use Case:**

Signals such as the sample clock, trace signals, and trigger signals are selected within the synthesized design. The debug core is synthesized independently and integrated into the user's synthesized design.

**Benefits:**

- ▶ The user design does not require re-synthesis; only the debug core is synthesized and inserted.
- ▶ The bitstream implementation reflects the synthesis-optimized version of the user design.
- ▶ Reduces synthesis runtime for complex designs, provided no changes are made to the user design.
- ▶ Internal constraints remain unaffected, as the design hierarchy is preserved.
- ▶ Eliminates unpredictability in synthesis outcomes for the user design.

**Drawbacks:**

- ▶ Synthesis tools may optimize or alter signals intended for debugging.
- ▶ Signal names may differ from their original RTL identifiers.

**Recommendation:**

To mitigate these issues, apply the `syn_rvl_debug` synthesis attribute to the signals intended for debugging in the RTL design. Refer to the Verilog/VHDL documentation for correct syntax.

**Note**

---

The post-synthesis debug flow is recommended due to its advantages in preserving design integrity and reducing synthesis time.

---

**Post-Place-and-Route (Post-PAR) Stage****Use Case:**

Signal selection—including the sample clock, trace signals, and trigger signals—is performed within the place-and-routed design. The debug core is then synthesized and integrated into the post-PAR user design, followed by execution of the incremental design flow.

**Benefits:**

- ▶ Placement of user design objects remains unaffected.
- ▶ May reduce Place-and-Route runtime for complex designs.
- ▶ Routing impact is minimal, typically around 2% to 3%.

**Drawbacks:**

- ▶ Certain signals selected for debugging may not be suitable for routing, potentially resulting in tool errors.

This option is recommended primarily for debugging a limited number of signals.

## RTL (Pre-Synthesis) Debug Flow

The following are the general steps in the Reveal Inserter RTL debug flow.

1. Start Reveal Inserter.
2. In the Reveal Inserter Wizard, the **RTL (Pre-Synthesis)** debug stage is selected. Click **Finish**.
3. Create a new Reveal Inserter project or open an existing Reveal Inserter project.
4. Add and set up analyzer and controller modules.
5. Insert the debug logic.

This process generates and synthesizes the debug logic.

The generated .rvl is automatically imported into the Radiant software if you enabled the “Activate Reveal file in design project” option in the Insert Debug to Design dialogbox.

6. Map, place, and route the design.
7. Generate the bitstream file.

If you want to perform logic analysis with Reveal Analyzer, continue with these steps:

8. Set up the cable connection with Programmer.
9. Download the design onto the device.
10. Start Reveal Analyzer and perform logic analysis with it.

## Post-Synthesis Debug Flow

In post-synthesis debugging, it is required that you mark the specific signal objects that you want to monitor by adding the `syn_rvl_debug` synthesis attribute in the RTL source files. This allows you to keep track of these signals more easily as they are highlighted on the user interface. The `syn_rvl_debug` attribute is the same for both Synplify and LSE tools. See [Post-Place & Route Debug Flow](#).

The `syn_rvl_debug` attribute performs two functions:

- ▶ This attribute highlights the signal so it can be easily identified in the user interface.
- ▶ After synthesis, this attribute tells the synthesis tool to preserve the signal without optimizing it. If it is a bus, the data width is also preserved. The synthesis tool passes the same attribute to the signal in the post-synthesis netlist (\*.vm).

The syntax in Verilog/System-Verilog is:

```
/* synthesis syn_rvl_debug = 1 */;
```

The syntax in VHDL is:

```
attribute syn_rvl_debug : boolean;
attribute syn_rvl_debug of sig1 : signal is true;
```

For example:

```
input clki /*synthesis syn_rvl_debug = 1 */,
wire clk1 /* synthesis syn_rvl_debug = 1 */;
reg [39:0] cnt /* synthesis syn_rvl_debug = 1 */;
reg [31:0] cnti /* synthesis syn_rvl_debug = 1 */;
```

The following are the general steps in the Reveal Inserter Post-Synthesis debug flow.

1. After running synthesis, start Reveal Inserter.
2. In the Reveal Inserter Wizard, select **Post-Synthesis** as debug stage and click **Finish**.

In the list of signals displayed in Reveal Inserter, the signals with the `syn_rvl_debug` attributes are highlighted for easy tracking.

3. Add and set up analyzer and controller modules, if needed.

### Note

 
When Reveal Controller is used for switches in post-synthesis, make sure the signals are not driven by other signals in the design. Multiple driver issues produce an error in Place & Route.

4. Click the **Design Rule Check** button and fix errors, if needed.
5. Click the **Insert Debug** button.

6. In the Insert Debug to Design dialog box, select the modules to insert. Select **Activate Reveal file in design project** to include it in synthesis. This also sets other .rvl files as inactive.

7. Click **OK**. The .rvl file is listed in the File List view under Debug Files.

You will note that the Synthesize Design process bar now has a small white box to indicate that only Reveal is to be synthesized in post-synthesis stage.



8. Run **Synthesize Design**. Only the changes in Reveal are processed. In the Task Detail View, you will observe the added Post-Synthesis Reveal task in progress.

9. Map, place, and route the design.

10. Generate the bitstream file.

If you want to perform logic analysis with Reveal Analyzer, continue with these steps:

11. Set up the cable connection with Programmer.
12. Download the design onto the device.
13. Start Reveal Analyzer and perform logic analysis with it.

### Identifying Signals in Post-Synthesis Debug Stage

The synthesis tool may add a suffix to the name of a signal with the `syn_rvl_debug` attribute. This change is minimal and the signal remains recognizable to the user.

The `syn_rvl_debug` attribute may be attached to top level input/output ports, which will be connected to the input/output buffers. In case of an input port with the `syn_rvl_debug` attribute, in the .vm file, the output of the input buffer should get the passed attribute. In case of an output port with attribute, in the .vm file, the input of the output buffer should get the passed attribute.

#### Example 1

RTL Code:

```
input clki /* synthesis syn_rvl_debug = 1 */,
```

The expected output is:

```
wire clki_c /* synthesis syn_rvl_debug = 1 */;
```

where `clki` is driving the input port of IB and `clki_c` is connected to the output port. This is similar in the output port:

```
output dout /* synthesis syn_rvl_debug = 1 */,
```

The expected output is:

```
wire dout_c /* synthesis syn_rvl_debug = 1 */
```

## Example 2

RTL Code:

```
reg [31:0] counter /*synthesis syn_rvl_debug = 1*/;
```

This is the expected .vm code when the exact signal name is preserved:

```
wire [31:0] counter /*synthesis syn_rvl_debug = 1*/;
```

When the exact signal name cannot be preserved, some suffix(\*) may be added.

```
wire [31:0] counter_* /*synthesis syn_rvl_debug = 1*/;
```

## Example 3

If the attribute is provided in the following way, it is applied to the last signal:

RTL Code:

```
reg sig1, sig2, sig3 /*synthesis syn_rvl_debug = 1*/;
```

The expected .vm code is:

```
wire sig3 /*synthesis syn_rvl_debug = 1*/;
```

The synthesis tool may also expand/elaborate the RTL code if the attribute is attached to the states in the FSM. This depends on the type of encoding such as binary, one-hot and others.

## Post-Place & Route Debug Flow

Similar to the post-synthesis debug flow, in post-place & route debugging, it is required that you mark the specific signal objects that you want to monitor by adding the syn\_rvl\_debug synthesis attribute in the RTL source files. The syntax for Verilog and VHDL are the same. See [“Post-Synthesis Debug Flow” on page 656](#).

The following are the general steps in the Reveal Inserter Post-Place & Route debug flow.

### Note

When you initially run synthesis, map, and place & route, make sure there is no active Reveal (.rvl) project. If there is an active .rvl project, make it inactive by right-clicking the .rvl file in the File List view and choosing Set as Inactive.

1. After running synthesis, map, and place & route, start Reveal Inserter.
2. In the Reveal Inserter Wizard, select **Post-Place & Route** as debug stage and click **Finish**.

#### Note

In the Tcl Console, you will see that a new Reveal project is created in the post-PAR stage. The placed and routed design is preserved in the PAR output udb.

```
> rvl_new_project -stage postpar
```

In the design tree, the entire database after place and route is shown. The signals with the syn\_rvl\_debug attributes are highlighted.

3. Add and set up logic analyzer cores

#### Note

Adding Reveal Controller cores is not supported in post-Place & Route debug flow.

4. Click the **Design Rule Check** button and fix errors, if needed.
5. Click the **Insert Debug** button.
6. In the Insert Debug to Design dialog box, select the modules to insert. Select **Activate Reveal file in design project** to include it in synthesis. This also sets other .rvl files, if any, as inactive.

Click **OK**.

7. In the Save Reveal Project dialog box, type the file name of the .rvl file and click **Save**. The .rvl file is listed in the File List view under Debug Files.

You will note that the Place & Route process bar now has a small white box to indicate that only Reveal is to be processed in post-place and route stage.



8. In the Task Detail View, you will observe that the following sub-tasks are unchecked. These will be run when you click the Place & Route button.
  - ▶ Place & Route Reveal
  - ▶ Place & Route Timing Analysis
9. Run **Place & Route**. Only the changes in Reveal are processed.
10. Generate the bitstream file.

If you want to perform logic analysis with Reveal Analyzer, continue with these steps:

11. Set up the cable connection with Programmer.
12. Download the design onto the device.
13. Start Reveal Analyzer and perform logic analysis with it.

# Post-PAR Reveal Incremental Flow

Incremental flow integrates Reveal logic without altering the existing layout or placement of other design elements.

## To run post-PAR Reveal Incremental Flow

If you are using a project without a Reveal (.rvl) file:

1. Mark the signals with the necessary attributes required for use in the debugger.


For example: `wire clk1/*synthesis syn_rvl_debug=1 */;`

Refer to “[Debug Flows](#)” on page 652 for more information.

2. Open the project file in Radiant, ensuring that the associated constraints are included.
3. If you have an active .rvl project, set it as inactive.
4. Run **Synthesis**, **MAP**, and **Place & Route**.
5. Click **Reveal Inserter**.

The Reveal Inserter Wizard opens.

In the Debug Stage section, select the **Post-Place&Route** option.

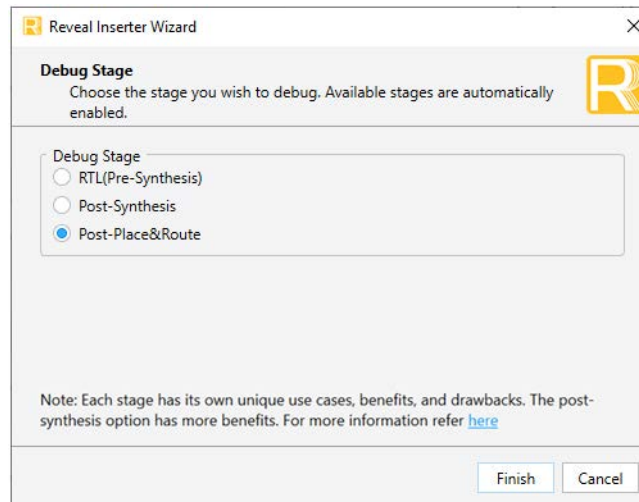

Click **Finish**.

6. In the Datasets pane, click **Add core...**
7. Add the debug core by selecting the sample clock, trigger, and trace signals in the same manner as done during the pre-synthesis and post-synthesis stages.

The selected signals will be shown in a different color.

For more information, refer to “[Debug Flows](#)” on page 652.

8. After configuring the debug core, check DRC and insert the core with the Reveal project's name.



Once done, you will see a white box at the bottom right corner of the **Place & Route Design** button.



9. Click **Place & Route** to run the post-PAR Reveal flow.
10. Click **Export Files** to generate the bit file.

**If you are using an existing post-PAR Reveal project:**

1. Double-click the existing post-PAR Reveal project for the current design and make it active.
2. Click **Place & Route** to run the post-PAR Reveal flow.
3. Click **Export Files** to generate the bit file.

# Identifying Original RTL Signals in Post-synthesis and Post-Place and Route Debug

During Post-Synthesis or Post-Place-and-Route (Post-PAR) analysis, one of the key usability improvements in the Reveal is the ability to identify which signals in the transformed design correspond to the original RTL signals.

Making the RTL-to-physical signal allows you to perform more accurate and efficient analysis, especially in complex designs where signal names may be heavily altered by synthesis or place-and-route processes.

Here is an example.

The same name from RTL design for which you added a marker is displayed.

```
reg [25:0] count /* synthesis syn_rvl_debug = 1 */;
```

- ▶ This line defines a 26-bit register named count.
- ▶ The comment `/* synthesis syn_rvl_debug = 1 */` is the synthesis directive that tells the synthesis tool to preserve this signal for debugging.
- ▶ The `syn_rvl_debug` attribute marks the signal so that it can be tracked and viewed.

The RTL name is preserved in the netlist as an attribute. After synthesis, the tool retains the debug marker and adds metadata to the netlist:

```
(* syn_rvl_debug = 1, rvl_logic_rtl = "countOK[25:0]" *)
```

- ▶ `syn_rvl_debug = 1`: Still marks the signal for Reveal debugging.
- ▶ `rvl_logic_rtl = "countOK[25:0]"`: This attribute maps the synthesized signal back to the original RTL name.
- ▶ Even if the signal name changes during synthesis (e.g., from `count` to `countOK`), this attribute helps trace it back to the RTL source.

The value of signal/bus is displayed in the Reveal Inserter GUI. You can see and probe the signal `countOK[25:0]`.

This is the synthesized version of the original RTL signal count. Because of the preserved attributes, you can view the actual values of this bus during simulation or hardware debug.

## Non-Intrusive Debug Signal Routing After PAR

Sometimes, your design is already compiled and placed and routed with a Reveal instance, but you want to change the signals to observe. You can do this without redoing synthesis or disturbing the existing placement.

Reveal can access a list of available post-PAR signals, incrementally route only the newly selected signals, and leave the rest of the design untouched.

# Creating Reveal Modules

Create the modules for Reveal logic analysis with Reveal Inserter. The process consists of identifying trace signals, which are the signals that you want to analyze, defining a trigger signal, which is the event you want to analyze, and setting a few options. Then you insert the modules into your design and implement it.

With Reveal Inserter, it is easy to set up simple triggering conditions, as well as extremely complex ones. Triggering in Reveal is based on the trigger unit and the trigger expression. A trigger unit is used to compare signals to a value, and a trigger expression is used to combine trigger units to form a trigger signal.

Currently, you can only have one module due to the soft JTAG core. Each Reveal Inserter project can include up to 15 modules. Each module has its own settings, trace signals, and trigger signal. In many cases, a single module is all that is required to debug a design. However, in designs with multiple clock regions, it may be necessary to sample different clock regions at the same time. For those types of designs, it is recommended that you use multiple modules, one for each clock region.

Take some time to plan the logic analysis, as Reveal modules can take a considerable amount of FPGA resources and creating the modules can take a significant amount of time. Find out how many EBRs and slices are still available, and consider adding all the trace signals and trigger events that you might want to analyze. The trigger signals can be modified in Reveal Analyzer while you're running tests if the necessary signals and capacity have been specified in the modules.

## About Reveal Inserter

Reveal Inserter has several views to help you manage the Reveal modules, find signals, and set up trace and trigger signals.

### Dataset

Dataset provides a list of all the modules in the Reveal project. To work on the trace and trigger signals of a module, select the module in the Dataset view. You can also add, remove, or rename modules by right-clicking a module name and choosing from the pulldown menu. See [“Managing the Modules in a Project” on page 665](#).

### Design Tree

Design Tree provides a list of all the buses and signals in the design. You can select signals to trace and to trigger on by dragging them from the Design Tree view. To find signals, use the Filter function. See [“Searching for Signals” on page 667](#).

Design Tree also keeps track of how signals are being used. See [“Viewing Signals in Design Tree” on page 666](#).

### Trigger Output

Trigger Output provides a list of trigger signals available from other modules. These signals can also be traced and triggered on by the current logic analyzer module. Select these signals by dragging them from the Trigger Output view. To make a trigger available in the Trigger Output view, see [“Trigger Out” on page 691](#).

### Trace Signal Setup

Trace Signal Setup is where you assemble and organize the list of signals to be traced by the current logic analyzer module. Select signals by dragging them from the Design Tree and Trigger Output views. You can rearrange the signals in the list and organize them into groups. This view also provides several options for the trace operation. See [“Setting Up Trace Signals” on page 673](#).

### Trigger Signal Setup

Trigger Signal Setup is where you assemble the trigger for the current logic analyzer module. The trigger is the event that tells the module to save the data from the trace signals. Triggers are built up from “trigger units,” collections of signals compared to specific values, and “trigger expressions,” logical and sequential combinations of trigger units. See:

- ▶ [“About Trigger Signals” on page 679](#)
- ▶ [“Setting Up Trigger Units” on page 680](#)
- ▶ [“Setting Up Trigger Expressions” on page 683](#)
- ▶ [“Setting Trigger Options” on page 690](#)

### Controller Setup

Reveal Controller Setup is where you setup all your Virtual (Configuring) Switch/LED Settings, User Registers, and Hard IP selections. See:

- ▶ [“Setting Up Virtual Switch/LED Settings” on page 691](#)
- ▶ [“Configuring User Memory Setup” on page 693](#)
- ▶ [“Configuring Hard IP Setup” on page 697](#)

## Managing the Modules in a Project

Each Reveal Inserter project can include up to 15 modules and are listed in the Dataset view. You can add, rename, and remove modules in the Dataset view.

**To add a module:**

1. Choose **Debug > Add New Core**.
2. From the submenu, choose a module type.  
Reveal Inserter adds a new module in the Dataset pane.

**To rename a module:**

1. Double-click the module name in the Dataset pane.
2. Type the new name of the module over the old name. The module name must:
  - ▶ Begin with a letter.
  - ▶ Consist of letters, numbers, and underscores (\_).
  - ▶ Be different from all other modules in the Reveal project.
  - ▶ Be different from all other modules and instances in the design.
3. Press **Enter**.

**To remove a module:**

1. Select the module in the Dataset pane.
2. Press **Delete**.

## Viewing Signals in Design Tree

The Design Tree pane shows the hierarchy of the whole design with all of the signals and buses. From the Design Tree pane, you can select signals and drag them to the Trace Signal Setup and Trigger Signal Setup views. To help you find signals, Design Tree has a search function, explained in [“Searching for Signals” on page 667](#).

The Design Tree pane also gives some information about the signals and how they are being used in the Reveal module. If you select a signal in the hierarchy, the Output tab displays information about it. If a signal is used in the Reveal module, it appears in the Design Tree pane in bold, followed by a symbol showing how the signal is being used:

- ▶ @Tc: trace signal
- ▶ @Tg: trigger unit signal
- ▶ @C: control signal (sample clock or sample enable)
- ▶ @Mx: mixed bus. Some of the signals are being used one way and some are not or are being used in another way.

**To view all signals in the design hierarchy:**

- ▶ Right-click on the design name in the Design Tree pane and choose **Expand All** from the pop-up menu.

**To view the buses, ports, top-level signals, and top level of the hierarchy:**

- ▶ Right-click on the design name in the Design Tree pane and choose **Collapse All** from the pop-up menu.

Note that if a design, modules or instances are encrypted with the IEEE-P1735 encryption standard, a user will be able to see either only the ports and signals or only the ports of a module or no module altogether depending on where the encryption was placed.

## Searching for Signals

You can find signals in the Design Tree pane using the Filter search box. Type any character or sequence of characters in the search box and the Design Tree pane displays only the signal names which contain the character or your input string.

In the Design Tree pane, click on a signal to select it. To select more than one signal, control-click on each one. To select all signals and buses in a range, click on the first signal and Shift-click on the last one.

**Note:**

---

If you added the `syn_rvl_debug` attribute to your signals, these signals are highlighted in yellow.

---

**See Also**

- ▶ [“Viewing Signals in Design Tree” on page 666](#)

## Checking the Design Rules

Use the Design Rule Check tool to verify that your Reveal project is not violating any design rules, such as proper module names, number of signals used, and required options set. The design rule check also tells you the total number of EBRs and slices needed for the project.

**To check the Reveal module settings:**

- ▶ Choose **Debug** >  **Design Rule Check**.

The results of the rule check are displayed in the Output tab.

## Saving a Project

Reveal Inserter automatically performs a design rule check whenever a project is saved. The results are shown in the Output tab.

### Note

Reveal Inserter generates a new “signature,” or tracking mechanism, whenever a Reveal project is saved. Reveal Analyzer reads this signature to ensure that the FPGA has been programmed with the latest Reveal project. If you save the project without re-programming the FPGA, Reveal Analyzer will issue an error message, even if the Reveal project was not changed.

### To save the project settings in the current directory:

- ▶ Choose **File** >  **Save** <filename>.

### To save the project settings in another directory:

- ▶ Choose **File** > **Save** <filename> **As**. In the Save Reveal Project dialog box, browse to the desired directory, enter the name of the new .rvl file name in the File Name box, and click **Save**.

### See Also

- ▶ [“Setting Up Virtual Switch/LED Settings” on page 691](#)

## Limitations

Reveal Inserter has the following limitations:

### Unsupported VHDL, Verilog and System Verilog Features in Reveal Inserter

The following features are valid in the VHDL, Verilog and System Verilog languages but not supported in Reveal Inserter:

- ▶ Array types of two dimensions or more are not shown in the port or node section.
- ▶ Undeclared wires attached to instantiated component instances are not shown in the hierarchical design tree. You must declare these wires explicitly if you want to trace or trigger with them.
- ▶ Variables used in conditional statements like if-then-else statements are not available for tracing and triggering.
- ▶ Variables used in selection statements like the case statement are not available for tracing and triggering.
- ▶ If function calls are used in the array declaration, the actual size of the array is unknown to Reveal Inserter.
- ▶ Entity and architecture of the same design cannot be in different files.
- ▶ In Verilog, you must declare variables at the beginning of a module body to avoid obtaining different results from various synthesis tools.



- ▶ In VHDL, you must declare synthesis attributes within an entity, and not within an architecture, to avoid obtaining different results from various synthesis tools.
- ▶ Signals used in VHDL “generate” statements are not available for tracing and triggering.
- ▶ Signals that are VHDL user-defined enumerated types, integer type, or Boolean type are not available for tracing and triggering.
- ▶ Some signals in a System Verilog design appear in the signal hierarchy but are not available for triggering or tracing.

Array types of two dimensions or more are not shown in the port or node section.

### **syn\_rvl\_debug, syn\_keep, and preserve\_signal Attributes**

In VHDL, always define the `syn_rvl_debug`, `syn_keep`, and `preserve_signal` attributes as Boolean types when you declare them in your design. Synplify defines them as Boolean types, and Reveal Inserter will issue an error message if you define them as strings.

### **Signals Implemented as Hard Routes**

Signals that are implemented as hard routes in the FPGA instead of using the routing fabric are not available for tracing or triggering. Examples are connections to IB and OB components. Many common hard routes are automatically shown as unavailable in Reveal Inserter, but some are not. If you select a signal for tracing or triggering that is implemented as a hard route, an error will occur during the synthesis, mapping, placement, or routing steps. For output tristate buffers or bidirectional buffers, it is recommended to use OBZ, BB component instantiations to avoid hardwired routing issues with Reveal Inserter.

### **Coding Style**

For mixed signal designs, the Verilog signal declaration should avoid bus style format for single bit.

For example:

```
input [0:0] datain;
```

Since it is a single bit input port, it should be declared as:

```
input datain;
```

### **Dangling or Unconnected Nets**

Dangling, or unconnected, nets in Verilog, System Verilog or VHDL code are available for use with Reveal Inserter.

### **Synthesis Parameters**

VHDL generics for synthesis must be added via HDL Parameters field in Project Properties. The current version does not support adding parameters via Command Line Options field in Synthesis Strategy setting.

### Relative Path Syntax

When using LSE, there are instances when Reveal is unable to read files, such as .coe INIT, that use the relative path syntax.

For example:

```
parameter pSPI_TF_Init = "RF_Init.coe", // Rx FIFO Memory  
Init
```

You must use the full absolute path of these files instead.

For example:

```
parameter pSPI_TF_Init = "C:/Users/<user name>/  
nexus_solutions/Reveal_roadmap/readmemh/22_ml6c5x-path/source/  
RF_Init.coe", // Rx FIFO Memory Init
```

### Post-Synthesis / Post-PAR Reveal Sample Clocks

The following considerations apply when using internal clocks as Reveal sample clocks.

When using Post-Synthesis or Post-PAR Reveal, it is recommended that you select sample clocks from the top level of the design.

Selecting sample clocks from lower levels of the design hierarchy may lead to signal-name collisions. In this case, Radiant automatically creates a signal-name alias for the lower-level clock to avoid contention. This behavior can break existing constraints that reference the original clock signal name (for example, get\_clocks calls in a PDC file).

If using a lower-level clock as a sample clock is unavoidable and your design includes constraints tied to the original clock signal name, you must add an additional constraint that accounts for the updated clock name (for example, by explicitly creating a generated clock at the appropriate primitive/PLL output or top-level signal and using that name in subsequent constraints).

## Creating Logic Analysis Modules

The major steps in creating a Logic Analysis module are shown below.

The design must be successfully synthesized before running Reveal Inserter.

### Note

Reveal Inserter has limitations and requirements in how it works with the design. See ["Limitations" on page 668](#) and ["Creating Logic Analysis Modules" on page 670](#).

---

**To create a Logic Analyzer module:**

1. After opening the design project, choose **Tools >  Reveal Inserter**.  
Reveal Inserter launches with the active Reveal project (.rvl) file open. If there are no existing projects, Reveal Inserter creates one.  
  
Reveal Inserter also parses and statically elaborates the design. In some cases, code that was successfully synthesized is flagged as having an error. In these cases, Reveal Inserter is interpreting the HDL code more strictly than the chosen synthesis tool.  
  
To correct this problem, see the reveal\_error.log file in the implementation directory. With the help of this file, locate and correct the problem in the code. Then synthesize the design and open Reveal Inserter again.
2. Select a module in the Dataset view. If you want to add another module to the project, choose **Debug > Add New Core > Add Logic Analyzer**. See also [“Managing the Modules in a Project” on page 665](#).
3. Set up the trace signals as desired. See [“Setting Up Trace Signals” on page 673](#).
4. Create trigger units, which are collections of signals and the values that are part of causing a trigger signal. See [“Setting Up Trigger Units” on page 680](#).
5. Create trigger expressions, which are logical combinations of trigger units. See [“Setting Up Trigger Expressions” on page 683](#).
6. Select trigger options. See [“Event Counter” on page 690](#) and [“Trigger Out” on page 691](#).
7. Once you have set up of all your modules, add them to the design project by choosing **Debug >  Insert Debug** and running the design implementation process. See [“Inserting the Reveal Modules” on page 697](#).

**To create a Reveal Controller module:**

1. After opening the design project, choose **Tools >  Reveal Inserter**.  
Reveal Inserter launches with the active Reveal project (.rvl) file open. If there are no existing projects, Reveal Inserter creates one.  
  
Reveal Inserter also parses and statically elaborates the design. In some cases, code that was successfully synthesized is flagged as having an error. In these cases, Reveal Inserter is interpreting the HDL code more strictly than the chosen synthesis tool.  
  
To correct this problem, see the reveal\_error.log file in the implementation directory. With the help of this file, locate and correct the problem in the code. Then synthesize the design and open Reveal Inserter again.
2. Click **Add Core > Add Controller** a module in the Dataset view or you can add a controller by choosing **Debug > Add New Core > Add Controller**. Note that only one Reveal Controller can be added to a project. See also [“Managing the Modules in a Project” on page 665](#).
3. On the bottom tab, select Virtual Switch & LED Setup tab to set up the Virtual Switch/LED Setting as desired. In the Datasets pane, a Filter box is

located at the bottom for searching signals. Individual bits or buses can be dragged into the LED List pane. The Address and Width field on the top of the pane will adjust accordingly. See [“Setting Up Virtual Switch/LED Settings” on page 691](#).

4. On the bottom pane, select User Register Setup tab to setup the user registers. See [“Configuring User Memory Setup” on page 693](#).
5. On the bottom pane, select the Hard IP Setup tab to setup IP debug. See [“Configuring Hard IP Setup” on page 697](#)
6. Once you have set up of all your modules, add them to the design project by choosing **Debug >  Insert Debug** and running the design implementation process. See [“Inserting the Reveal Modules” on page 697](#).

## Using the Reveal Controller Simulation Model

The Reveal Controller Simulation Model replicates the functionality of Reveal Controller in simulation.

### To set up the Reveal Controller Simulation Model:

1. Choose **Tools > Reveal Inserter** to insert a reveal module into the design.
2. Run **Synthesize Design** to generate the reveal\_workspace file.
  - ▶ If you insert Reveal Controller only, the tool will create the sim\_src folder with the pre-synthesis Reveal generated source file under reveal\_workspace.
  - ▶ If you insert Reveal Controller and Analyzer, the Reveal engine will not create the folder and no source files will be provided.
3. Click **Tools > Simulation Wizard** or click the  icon in the toolbar.
4. In the Simulator Project Name and Stage dialog box, enter the project name.  
Click **Next**.
5. In the Add and Reorder Source dialog box, select and add the source files from the sim\_src folder.

Click **Next**.

The following compiler directives are all enabled in the source file. You can use the OEM simulator or any standalone simulator to compile and simulate the Controller:

- ▶ ``define en_sw`
- ▶ ``define en_led`
- ▶ ``define en_user_mem`
- ▶ ``define en_user_creg`
- ▶ ``define en_user_sreg`

## Setting Up Trace Signals

Setting up the trace signals for a module consists of selecting the signals and buses to watch and dragging them into the Trace Signal Setup tab. You can have up to 512 trace signals in a module.

There is no limit to the bus organization of the design, so you can organize the signals according to how you want to view the data. Order them from top to bottom and organize them into buses, or rearrange the trace signals into your own organization of trace buses. You can manage them using the Debug menu or by right-clicking selected signals.

### To set up trace signals:

1. Click the **Trace Signal Setup** tab.
2. Select a module in the Dataset view.
3. Select signals in the Design Tree and Trigger Output views and drag the signals to the desired position in the Trace Signal Setup tab. For help finding signals, see [“Searching for Signals” on page 667](#).

Check the value to the right of the Implementation box to see how adding trace signals affects the consumption of FPGA resources.

4. You can further organize the signals in the Trace Signal Setup tab by ungrouping buses into individual signals and grouping signals into new buses.
  - ▶ To break a bus into individual signals, select the bus and choose **Debug > UnGroup Trace Bus**.
  - ▶ To create a new trace bus, select the desired signals and buses and choose **Debug > Group Trace Data**. Double-click the new bus and type in the desired name.

You can also drag signals and buses into and out of other buses.

5. To see what happens in the signals that define the trigger units, select **Include trigger signals in trace data** at the bottom of the Trace Signal Setup tab.

A bus named “Trigger Signals” appears at the top of your list of trace signals. For details, see [“Include Trigger Signals in Trace Data” on page 674](#).

6. Set the trace options. There are several options that enhance the trace signals or control how data is sampled:
  - ▶ [“Sample Clock” on page 674](#)
  - ▶ [“Sample Enable” on page 674](#)
  - ▶ [“Buffer Depth” on page 675](#)
  - ▶ [“Timestamp” on page 676](#)
  - ▶ [“Implementation” on page 676](#)
  - ▶ [“Data Capture Mode” on page 677](#)

### See Also

- ▶ [“Viewing Signals in Design Tree” on page 666](#)

## Include Trigger Signals in Trace Data

In order to monitor what happens on the signals that make up a trigger, you can add all signals used in the trigger units to the trace signals.

This option creates a bus named “Trigger Signals” at the top of your list of trace signals. Trigger Signals contains buses named for each trigger unit and contains the buses and signals used in the trigger units. The Trigger Signals bus cannot be moved or modified in any way.

### To add the trigger signals to the trace signals:

- ▶ Select **Include trigger signals in trace data**.

## Sample Clock

The sample clock determines when the trace signals are sampled. Reveal Analyzer samples the trace signals once every clock cycle on the clock’s rising edge.

When selecting the trigger and trace signals in Reveal Inserter, make sure all these signals are in the selected sample clock domain. If the design has multiple clocks, you can add multiple Reveal cores with each core in a different clock domain. You can use the same sample clock in multiple Reveal cores.

### To set the sample clock signal:

- ▶ Find the signal in the Design Tree view and drag it to the Sample Clock box of the Trace Signal Setup tab.

### Note

On the board, make sure that the sample clock frequency is at least that of the JTAG clock. If the sample clock speed is too slow, you will be unable to complete capturing data with Reveal Analyzer.

The sample clock frequency should be no more than 200 MHz.

### See Also

- ▶ [“Searching for Signals” on page 667](#)

## Sample Enable

The sample enable is a signal that can be used to turn data capture on and off. Normally, data is captured for every sample clock cycle during a specified number of cycles. With sample enable, data capture only happens when the

sample enable signal is active. Use sample enable to reduce the size of the trace buffer when there are stretches of data of no interest that are associated with a single signal.

An example is a design that contains different sections, with some sections only working during certain clock phases. The design uses a master clock and generates different signals for the phases. You can use one of the phase signals as the sample enable.

If the trigger occurs while the sample enable is inactive, Reveal Analyzer cannot accurately calculate the trigger point. Instead of showing the precise trigger point, Reveal Analyzer shows a trigger region that spans five clock cycles. Reveal Analyzer can guarantee that the trigger occurs in this region, but it cannot determine during which clock cycle the trigger occurs.

#### To set the sample enable:

1. Select **Sample Enable**.
2. Find the signal in the Design Tree view and drag it to the box in the Sample Enable section of the Trace Signal Setup tab.
3. In the box to the right of the signal name box, choose whether the signal is:
  - ▶ **Active High**. Data can be captured when the sample enable is high.
  - ▶ **Active Low**. Data can be captured when the sample enable is low.

#### See Also

- ▶ [“Searching for Signals” on page 667](#)

## Buffer Depth

The buffer depth specifies the size of the trace memory buffer as the maximum number of samples that can be stored. The buffer should be deep enough to hold enough samples, before and after the trigger, for your analysis multiplied by the number of trigger events that you want to see in one test run. Available values are powers of two from 16 to 65,536.

For example, if you want 20 samples from each of five events, choose a buffer depth of at least 128.

#### To set the buffer depth:

1. Determine the maximum number of samples for your test run. Be generous to avoid re-implementing the design to get a larger buffer.
2. In the Buffer Depth box, choose a value that is at least as large as the desired number of samples.

Check the value to the right of the Implementation box to see how changing the buffer depth affects the consumption of FPGA resources.

## Timestamp

The timestamp is a count of sample clock cycles from the beginning of a test run. This is different from the sample index that Reveal Analyzer automatically supplies. The sample index only provides a count of samples within each trigger's data set. The timestamp continues counting between triggers and when the sample enable signal blocks data capture.

However, unlike the sample index, the timestamp contains extra data in each sample and requires a larger trace buffer.

Use the timestamp when you want to know how long the test ran before triggering or how long the sample enable signal blocked data capture. The timestamp can also help associate triggers with external events or with data from another Reveal module using the same sample clock.

### To add timestamps to the trace samples:

1. Select **Timestamp**.
2. Determine the number of sample clock cycles in the longest test run you want to do.
3. In the pulldown menu next to "Timestamp," select the size of the timestamp in bits. Choose the smallest value that can hold the count for the desired number of sample clock cycles.

For example, if you want to run a test for 50 thousand cycles, choose 16 bits.

Check the value to the right of the Implementation box to see how changing the timestamp size affects the consumption of FPGA resources.

## Implementation

The implementation specifies what kind of RAM to use for the Reveal module. Normally EBR would be selected, but distributed RAM can be used if you are short of EBR.

### To set the implementation:

- ▶ In the Implementation box, choose a kind of RAM:
  - ▶ **EBR** (embedded block RAM)
  - ▶ **DistRAM** (distributed RAM)

The number of EBR or slices needed is shown on the screen. This value changes as you add or remove trace signals, or change the buffer depth or timestamp size.



## Data Capture Mode

The data capture mode specifies whether Reveal Analyzer can look for one trigger or multiple triggers in a test run. Multiple Trigger Capture mode provides the greatest flexibility during test runs. Single Trigger Capture mode slightly reduces the amount of FPGA resources needed.

### To set the data capture mode:

1. In the Data Capture Mode section, select one of the following:
  - ▶ **Single Trigger Capture.** Reveal Analyzer captures the data for only one trigger.
  - ▶ **Multiple Trigger Capture.** Reveal Analyzer captures the data for multiple triggers. The number of triggers is specified in Reveal Analyzer unless you are creating a module to monitor the power-on reset (POR) functions (see below).
2. If you select Multiple Trigger Capture, choose the "Minimum samples per trigger." The number of samples collected for each trigger is set in Reveal Analyzer but cannot be smaller than this value.
3. If you select Multiple Trigger Capture and are creating a POR module, choose the "Number of triggers for POR." For an explanation of POR modules, see ["Power-on Reset \(POR\) Debug" on page 677](#).

## Power-on Reset (POR) Debug

Power-on Reset (POR) Debug is a capture mode in Reveal that lets you record the very first activity that happens right at, and immediately after, device power-up/reset. It is intended for debugging boot and initialization sequences that are otherwise hard to observe once the system is already running. These events happen before the Reveal Analyzer is active.

An automatic "trigger enable" signal must be built into the Reveal module to monitor POR functions. When the trigger enables signal transitions to "active", the module watches for the trigger and collects samples. It is similar to clicking the Run  button in Reveal Analyzer. When Reveal Analyzer starts, it loads and displays any data collected by the POR modules.

Use POR Debug when you need visibility of:

- ▶ Reset de-assertion and clock bring-up order
- ▶ Early configuration/handshake signals between your FPGA fabric and external devices (such as PMIC, MCU, boot flash)
- ▶ First transactions on internal buses or state machines that run only once at boot

You can enable **POR Debug** while defining the logic-analyzer core in Reveal Inserter (with your sample clock and trace/trigger set).

After you implement the design and program the device, you arm the capture from Reveal Analyzer, then power-cycle (or assert POR) on the board.

The core samples from the earliest post-POR cycles into its on-chip trace buffer; once full or once the trigger condition is met, you can read the waveform back over JTAG.

**To set up POR Debug:**

1. Open Reveal Inserter for your project.  
Add/choose your LA core, pick trace and trigger signals, and set the sample clock.
2. In the POR Debug section, check **Trigger Enable**.
3. Assign the trigger signal. In the Design Tree, locate the signal and drag it into the Trigger Enable text box.
4. Choose the trigger polarity.
  - ▶ **Active High** (trigger when signal = 1)
  - ▶ **Active Low** (trigger when signal = 0)
5. Continue setting up your **Trigger Unit** and **Trigger Expression**.

The POR debug core can also capture more than one separate trigger event during a single power-on session. Instead of stopping after the first match, the core re-arms itself and records each time your POR trigger condition occurs, saving a segment for each event until it hits a limit (buffer full or the selected number of triggers). This allows you to detect recurring or hard-to-reproduce problems during initial system boot, including multiple reset cycles, erratic handshake behavior, or brief disturbances in power-rail sequencing.

To set up multiple trigger capture for POR, in the Data Capture Mode section, select **Multiple Trigger Capture**. The POR core can collect up to  $N$  events, where  $N$  is the **Number of triggers for POR** value.

- ▶ If you expect only one critical event (such as the first deassertion of reset), leave the value at 1.
- ▶ If you suspect repeated issues during ramp-up (such as retry loops), choose a larger number, but remember that each additional event consumes part of the fixed capture memory.

**Notes**

---

- ▶ POR modules are not supported in iCE40UP devices.
  - ▶ Check your device family data sheet to determine starting values for “Number of triggers” based on typical buffer depths and boot sequences for that family.
  - ▶ Only one Trigger Expression is supported. This restriction ensures the POR module can run immediately at power-on with minimal hardware. Any multi-condition logic must be simplified into one expression. When multiple expressions are present—even unintentionally—the tool disables the POR Debug option.
-

## About Trigger Signals

Most of the trigger features need to be set up initially in Reveal Inserter but many of them can be modified in Reveal Analyzer while testing the design. See Table 184 on page 679.

Changes in Reveal Inserter means the design has to be re-implemented (synthesis, map, place, and route) and reloaded into the FPGA. So it is worthwhile to be forward-thinking and pro-actively define your trigger units, trigger expressions, and other options. Think of setting up a trigger signal as creating capacity and access to signals and memory. Try to give yourself capacity to define all the triggering events that you might want to analyze later on.

**Table 184: Where Trigger Features Can Be Changed**

| Feature                  |                               | Reveal Inserter | Reveal Analyzer |
|--------------------------|-------------------------------|-----------------|-----------------|
| Trigger Units            | Add                           | ✓               |                 |
|                          | Name                          | ✓               | ✓               |
|                          | Signals                       | ✓               |                 |
|                          | Operator                      | ✓               | ✓               |
|                          | Radix                         | ✓               | ✓               |
|                          | Value                         | ✓               | ✓               |
| Trigger Expressions      | Add                           | ✓               |                 |
|                          | Remove                        | ✓               | ✓               |
|                          | Name                          | ✓               | ✓               |
|                          | Expression                    | ✓               | ✓               |
|                          | RAM type                      | ✓               |                 |
|                          | Maximum sequence depth        | ✓               |                 |
|                          | Maximum event counter         | ✓               |                 |
| Multiple Trigger Capture | Make available                | ✓               |                 |
|                          | Number of samples per trigger | ✓               | ✓               |
|                          | Number of triggers            |                 | ✓               |
| Other Features           | AND All versus OR All         |                 | ✓               |
|                          | Final event counter size      | ✓               | ✓               |
|                          | Trace buffer depth            | ✓               |                 |
|                          | Timestamp                     | ✓               |                 |
|                          | Trigger position              |                 | ✓               |

**See Also**

- ▶ [“Setting Up Trigger Units” on page 680](#)
- ▶ [“Setting Up Trigger Expressions” on page 683](#)
- ▶ [“Setting Trigger Options” on page 690](#)
- ▶ [“Setting Up the Trigger Signals” on page 721](#)

## Setting Up Trigger Units

The trigger unit is used to compare a number of signals to a value. A number of different operators are available for comparison and can be dynamically changed during analysis, along with the comparison value and the trigger unit name.

Each trigger unit can have up to 256 signals. Since there are 16 allowable trigger units, each module can have a maximum of 4096 trigger signals.

Try to minimize the number of trigger units in a module. The more trigger units there are, the longer it takes for Reveal Analyzer to configure the module at the beginning of a test run. More than eight trigger units may cause a delay of 30 seconds or more; 16 trigger units may cause a delay of 5 minutes.

Before you start setting up the trigger units, set the **Default Trigger Radix**. This option is in the Trigger Unit section of the Trigger Signal Setup tab. The default trigger radix is applied automatically to any new trigger units that you create but does not affect the radix of any existing trigger units. You can always change the radix of any trigger unit at any time.

### To set up a trigger unit:

1. To add a new trigger unit, click **Add** in the Trigger Unit section of the Trigger Signal Setup tab.
2. Specify the signals in the trigger unit by using one of following methods:
  - ▶ Drag and drop signals from the Design Tree and Trigger Output views to the Signals column. For more information on using the Design Tree view, see [“Viewing Signals in Design Tree” on page 666](#) and [“Searching for Signals” on page 667](#).
  - ▶ Double-click in the Signals column to open the TU Signals dialog box. See [“Selecting and Ordering Trigger Signals” on page 681](#).
3. To change the order of the signals or to remove them, double-click in the **Signals** column.  
The TU Signals dialog box opens. See [“Selecting and Ordering Trigger Signals” on page 681](#).
4. Click in the **Operator** column and choose an operator from the pulldown menu. See [“About Trigger Unit Operators” on page 681](#).  
Both the operator type and the trigger unit value can be changed in Reveal Analyzer during hardware debugging.

5. If you want to change the radix of the Value column, click in the **Radix** column and choose a radix from the pulldown menu. The menu includes token sets whose bit width matches the trigger unit's signals.

Token sets are text labels for values that might appear on trace buses. You can create and apply token sets in Reveal Analyzer. See [“Creating Token Sets” on page 729](#).

6. Enter the comparison value in the **Value** column. The form of the value must match the specified radix. If you've selected a token set in the Radix column, a pulldown menu opens in the Value column listing the tokens in the token set.

You can use “x” for a don't-care value if you selected binary, octal, or hexadecimal in the Radix column and if you selected ==, !=, or serial compare in the Operator column.

## Selecting and Ordering Trigger Signals

In the Trigger Unit section of the Trigger Signal Setup view, double-click in the Signals column. The TU Signals dialog box opens.

### To select and order trigger unit signals:

1. In the left side of the TU Signals dialog box, select signals that you want to use in the trigger unit. Click on a signal to select it. To select more than one signal, control-click on each one. To select all signals and buses in a range, click on the first signal to select and Shift-click on the last one.
2. Click > to add them to the box on the right.
3. To remove signals from the trigger unit, select them in the right box and click <.
4. Organize the signals by selecting one and clicking the up or down arrow until the signal is in its desired position. Continue until all the signals are in the desired order from least significant bit (LSB) down to the most significant bit (MSB).
5. Click **OK**.

## About Trigger Unit Operators

Most of the trigger unit operators use standard logical comparisons between the current value of the combined signals of the trigger unit and a specified value.

Operators can be changed in Reveal Analyzer, with the exception of “serial compare”. Refer to [“Serial Compare” on page 682](#) for more information.

**Standard Logical Operators** Reveal includes the following operators:

- ▶ == equal to
- ▶ != not equal to
- ▶ > greater than

- ▶ `>=` greater than or equal to
- ▶ `<` less than
- ▶ `<=` less than or equal to

**Rising-Edge and Falling-Edge Operators** The “rising edge” and “falling edge” operators check for change in the signal value, not the value itself. So the trigger unit’s specified value is a bit mask showing which signals should have a rising or falling edge.

- ▶ A **1** means “look for the edge,”
- ▶ A **0** means “ignore this bit.” A multiple-bit value is true if any of the specified bits has the edge.

For example, consider a trigger unit defined as `cout[3:0]`, rising edge, 1110. This trigger unit is true only when `cout[3]`, `cout[2]`, or `cout[1]` have a rising edge. What happens on `cout[0]` does not matter.

- ▶ `0000 > 1110`  
True because `cout[3]`, `cout[2]`, and `cout[1]` rose.
- ▶ `0000 > 1111`  
True for the same reason. It does not matter whether `cout[0]` rises or not.
- ▶ `0000 > 0100`  
True because a rising edge on any of the specified bits is sufficient.
- ▶ `1000 > 1000`  
False because `cout[3]` is high, but did not rise.

### Serial Compare

The “serial compare” operator checks for a series of values on a single signal. For example, if a trigger unit’s specified value is 1011, the “serial compare” operator looks for a **1** on the first clock, a **0** on the second clock, a **1** on the third clock, and a **1** on the last clock. Only after those four conditions are met in the four clock cycles is the trigger unit true.

Serial compare is available only when a single signal is listed in the trigger unit’s signal list. The radix is automatically binary.

You can only set the serial compare operator in Reveal Inserter. You cannot change or select it in Reveal Analyzer as you can the other operators.

## Managing Trigger Units

You can add and remove trigger units only in Reveal Inserter. You cannot add them in Reveal Analyzer.

### To add a trigger unit:

- ▶ To add a new trigger unit, click **Add** in the Trigger Unit section of the Trigger Signal Setup tab.

**To rename a trigger unit:**

- ▶ Click in the Name column of the Trigger Unit section of the Trigger Signal Setup tab and type in the new name. The name can consist of letters, numbers, and underscores. The first character must be either an underscore or a letter.

**To remove a trigger unit:**

1. In the Trigger Unit section of the Trigger Signal Setup tab, click in any box in the line representing the trigger unit that you want to remove.
2. Click **Remove**.

**See Also**

- ▶ [“Setting Up Trigger Units” on page 680](#)

## Setting Up Trigger Expressions

You can set up the initial trigger expressions in Reveal Inserter and change them and their names in Reveal Analyzer. You can also enable or disable trigger expressions in Reveal Analyzer. However, you cannot change the maximum sequence depth or the maximum event counter of the trigger expressions in Reveal Analyzer.

**To set up a trigger expression:**

1. Click **Add** in the Trigger Expression section of the Trigger Signal Setup tab to add a new trigger expression.
2. Enter the trigger expression in the **Expression** column. See [“Trigger Expression Syntax” on page 684](#).

Reveal Inserter checks the syntax and displays the syntax in red font if it is erroneous.

Both the trigger units and operators associated with a trigger expression can be changed in Reveal Analyzer during hardware debugging.

3. Click in the **Ram Type** column and choose whether the trigger expression is to be implemented with EBR (embedded block RAM) or slices (distributed RAM). The menu also shows how many of each resource is needed. Choose EBR if available. If short of EBR, choose slices.
4. Click in the **Max Sequence Depth** column and choose the maximum number of sequences, or trigger units connected by THEN operators, that can be used in the trigger expression.

The maximum sequence depth must be at least as large as the number in the Sequence Depth column, which shows the number of sequences currently used by the trigger expression. Increasing the maximum sequence depth allows you to use more sequences if you change the trigger expression in Reveal Analyzer, but it also uses more FPGA resources. Consider the largest chain of sequences you might want to use in your test and choose a value at least that large. Reveal supports up to 16 sequence levels.

The Max Sequence Depth value is set statically in Reveal Inserter and cannot be changed in Reveal Analyzer.

5. Click in the **Max Event Counter** box and choose the maximum size of the count in the trigger expression (the count is how many times a sequence must occur before a THEN statement).

The Max Event Counter value must be at least as large as the largest counter value used in the trigger expression. Increasing the size of the event counter allows you to use larger counts if you change the trigger expression in Reveal Analyzer, but it also uses more FPGA resources. Consider the largest count you might want to use in your test and choose a value at least that large. The maximum is 65,536.

The Max Event Counter setting can only be changed in Reveal Inserter.

### See Also

- ▶ [“Example Trigger Expressions” on page 688](#)

## Trigger Expression Syntax

Trigger expressions are combinations of trigger units. Trigger units can be combined in combinatorial, sequential, and mixed combinatorial and sequential patterns. A trigger expression can be dynamically changed at any time. Each core supports up to 16 trigger expressions that can be dynamically enabled or disabled in Reveal Analyzer. Trigger expressions support AND, OR, XOR, NOT, parentheses (for grouping), THEN, NEXT, # (count), and ## (consecutive count) operators. Each part of a trigger expression, called a sequence, can also be required to be valid a number of times before continuing to the next sequence in the trigger expression.

**Detailed Trigger Expression Syntax** Trigger expressions in both Reveal Inserter and Reveal Analyzer use the same syntax.

**Operators** You can use the following operators to connect trigger units:

- ▶ & (AND) – Combines trigger units using an AND operator.
- ▶ | (OR) – Combines trigger units using an OR operator.
- ▶ ^ (XOR) – Combines trigger units using a XOR operator.
- ▶ ! (NOT) – Combines a trigger unit with a NOT operator.
- ▶ Parentheses – Groups and orders trigger units.
- ▶ THEN – Creates a sequence of wait conditions. For example, the following statement:

```
TU1 THEN TU2
```

means “wait for TU1 to be true, then wait for TU2 to be true.”

The following expression:

```
(TU1 & TU2) THEN TU3
```

means “wait for TU1 and TU2 to be true, then wait for TU3 to be true.”

Reveal supports up to 16 sequence levels.



See [“Sequences and Counters” on page 685](#) for more information on THEN statements.

- ▶ NEXT – Creates a sequence of wait conditions similar to THEN, except the second trigger unit must come immediately after the first. That is, the second trigger unit must occur in the next clock cycle after the first trigger unit. See [“Sequences and Counters” on page 685](#) for more information on NEXT statements.
- ▶ # (count) – Inserts a counter into a sequence. See [“Sequences and Counters” on page 685](#) for information on counters.
- ▶ ## (consecutive count) – Inserts a counter into a sequence similar to Like # (count) except that the trigger units must come in consecutive clock cycles. That is, one trigger unit immediately after another with no delay between them. See [“Sequences and Counters” on page 685](#) for information on counters.

### Case Sensitivity

Trigger expressions are case-insensitive.

### Spaces

You can use spaces anywhere in a trigger expression.

### Sequences and Counters

Sequences are sequential states connected by THEN or NEXT operators. A counter counts how many times a state must occur before a THEN or NEXT statement or the end of the sequence. The maximum value of this count is determined by the Max Event Counter value. This value must be specified in Reveal Inserter and cannot be changed in Reveal Analyzer.

The following is an example of a trigger expression with a THEN operator:

```
TU1 THEN TU2
```

This trigger expression is interpreted as “wait for TU1 to be true, then wait for TU2 to be true.”

Here’s the same example written with a NEXT operator:

```
TU1 NEXT TU2
```

it is interpreted as “wait for TU1 to be true, then wait *one clock cycle* for TU2 to be true.” If TU2 is not true in the next clock cycle, the sequence fails and starts over, waiting for TU1 again.

The next trigger expression:

```
TU1 THEN TU2 #2
```

is interpreted as “wait for TU1 to be true, then wait for TU2 to be true for two sample clocks.” TU2 may be true on consecutive or non-consecutive sample clocks and still meet this condition.

The following statement:

```
TU1 ##5 THEN TU2
```

means that TU1 must occur for five consecutive sample clocks before TU2 is evaluated. If there are any extra delays between any of the five occurrences of TU1, the sequence fails and starts over.

The next expression:

```
(TU1 & TU2) #2 THEN TU3
```

means “wait for the second occurrence of TU1 and TU2 to be true, then wait for TU3.”

The last expression:

```
TU1 THEN (1) #200
```

means “wait for TU1 to be true, then wait for 200 sample clocks.” This expression is useful if you know that an event occurs a certain time after a condition.

You can only use one count (# or ##) operator per sequence. For example, the following statement is not valid, because it uses two counts in a sequence:

```
TU1 #5 & TU2 #2
```

Multiple count values are allowed for a single trigger expression, but only one per sequence. For two count operators to be valid in a trigger expression, the expression must contain at least one THEN or NEXT operator, as in the following example:

```
(TU1 & TU2) #5 THEN TU2 #2
```

This expression means “wait for TU1 and TU2 to be true for five sample clocks, then wait for TU2 to be true for two sample clocks.”

Also, the count operator must be applied to the entire sequence expression, as indicated by parentheses in the expression just given. The following is not allowed:

```
TU1 #5 & TU2 THEN TU2 #2
```

The count (#) operator cannot be used as part of a sequence following a NEXT operator. A consecutive count (##) operator may be used after a NEXT operator. The following is not allowed:

```
TU1 NEXT TU2 #2
```

The count (# or ##) operators can only be used in one of two areas:

- ▶ Immediately after a trigger unit or parentheses(). However, if the trigger unit is combined with another trigger unit without parentheses, a # cannot be used.
- ▶ After a closing parenthesis.

**Precedence** The symbols used in trigger expression syntax take the following precedence:

- ▶ Because it inserts a sequence, the THEN and NEXT operators always take the highest precedence in trigger expressions.
- ▶ Between THEN or NEXT statements, the order is defined by parentheses that you insert. For example, the following trigger expression:

```
TU1 & (TU2|TU3)
```

means “wait for either TU1 and TU2 or TU1 and TU3 to be true.”

If you do not place any parentheses in the trigger expression, precedence is left to right until a THEN or NEXT statement is reached.

For example, the following trigger expression:

```
TU1 & TU2|TU3
```

is interpreted as “wait for TU1 & TU2 to be true or wait for TU3 to be true.”

- ▶ The precedence of the ^ operator is same as that of the & operator and the | operator.
- ▶ The logic negation operator (!) has a higher precedence than the ^ operator, & operator, or | operator, for example:

```
!TU1 & TU2
```

means “not TU1 and TU2.”

- ▶ The # and ## operators have the same precedence as the ^ operator, & operator, or | operator. However, they can only be used in one of two areas:
  - ▶ Immediately after a trigger unit or trigger units combined in parentheses. However, if the trigger unit is combined with another trigger unit without parentheses, a # or ## operator cannot be used.

Here is an example of correct syntax using the count (#) operator:

```
TU1 #2 THEN TU3
```

This statement means “wait for TU1 to be true for two sample clocks, then wait for TU3.”

However, the following syntax is incorrect, because the count operator is applied to multiple trigger units combined without parentheses:

```
TU1 & TU2#2 THEN TU3
```

- ▶ Use parentheses to combine multiple trigger units and then apply a count, as in the following example:

```
(TU1 & TU2) #2 THEN TU3
```

This statement means “wait for the combination of TU1 and TU2 to be true for two sample clocks, then wait for TU3.”

## See Also

- ▶ [“Example Trigger Expressions” on page 688](#)

## Example Trigger Expressions

The following is a series of examples that demonstrate the flexibility of trigger expressions.

### Example 1: Simplest Trigger Expression-

TU1

This trigger expression is true, causing a trigger to occur when the TU1 trigger unit is matched. The value and operator for the trigger unit is defined in the trigger unit, not in the trigger expression.

### Example 2: Combinatorial Trigger Expression-

TU1 & TU2 | TU3

This trigger expression is true when (TU1 and TU2) or TU3 are matched. If no precedence ordering is specified, the order is left to right.

### Example 3: Combinatorial Trigger Expression with Precedence Ordering-

TU1 & (TU2 | TU3)

This trigger expression gives different results than the previous one. In this case, the trigger expression is true if (TU1 and TU2) or (TU1 and TU3) are matched.

### Example 4: Simple Sequential Trigger Expression-

TU1 THEN TU2

This trigger expression looks for a match of TU1, then waits for a match on TU2 a minimum of one sample clock later. Since this expression uses a THEN statement, it is considered to have multiple sequences. The first sequence is "TU1," since it must be matched first. The second sequence is "TU2," because it is only checked for a match after the first sequence has been found. The "sequence depth" is therefore 2.

The sequence depth is an important concept to understand for trigger expressions. Since the debug logic is inserted into the design, logic must be used to support the required sequence depth. Matching the depth to the entered expression can be used to minimize the logic. However, if you try to define a trigger expression that has a greater sequence depth than is available in the FPGA, an error will prevent the trigger expression from running. The dynamic capabilities of the trigger expression can therefore be limited. To allow more flexibility, you can specify the maximum sequence depth when you set up the debug logic in Reveal Inserter. You can reserve more room for the trigger expression than is required for the trigger expression currently entered. If you specify multiple trigger expressions, each trigger expression can have its own maximum sequence depth.

### Example 5: Mixed Combinatorial and Sequential Trigger Expression-

TU1 & TU2 THEN TU3 THEN TU4 | TU5

This trigger expression only generates a trigger if (TU1 AND TU2) match, then TU3 matches, then (TU4 or TU5) match. You can set precedence for any sequence, but not across sequences. The expression (TU1 & TU2) | TU3 THEN TU4 is correct. The expression (TU1 & TU2 THEN TU3) | TU4 is invalid and is not allowed.

### Example 6: Sequential Trigger Expression with Sequence Counts-

The next trigger expression shows two new features: the sequence count and a true operator to count sample clocks:

(TU1 & TU2)#2 THEN TU3 THEN TU4#5 THEN (1)#200

This trigger expression means wait for (TU1 and TU2) to be:

1. True twice
2. Wait for TU3 to be true
3. Wait for TU4 to be true five times
4. Wait 200 sample clocks

The count (# followed by number) operator can only be applied to a whole sequence, not part of a sequence. When the count operator is used in a sequence, the count may or may not be contiguous. The always true operator (1) can be used to wait or delay for a number of contiguous sample clocks. It is useful to know an event you want to capture occurs a certain time after a condition, but you did not know the state of the trigger signals at that time.

However, there is a limitation on the maximum size of the counter. This depends on how much hardware is reserved for the sequence counter. When you define a trigger expression, the Max Event Counter setting in the Trigger Expression section of Reveal Inserter and Reveal Analyzer specifies how large a count value is allowed in the trigger expression. Each trigger expression can have a unique Max Event Counter setting.

### See Also

► [“Trigger Expression Syntax” on page 684](#)

## Managing Trigger Expressions

Trigger expressions are combinatorial or sequential equations of trigger units or both. Trigger expressions can be defined during insertion and changed in Reveal Analyzer. You can add up to 16 trigger expressions.

You can add trigger expressions in Reveal Inserter but not in Reveal Analyzer. You can dynamically enable or disable individual trigger expressions before triggering is activated during hardware debugging.

**To add a trigger expression:**

- ▶ In the Trigger Expression section of the Trigger Signal Setup tab, click **Add**.

**To rename a trigger expression:**

- ▶ Click in the Name column of the Trigger Expression section of the Trigger Signal Setup tab, and type in the new name. The name can consist of letters, numbers, and underscores. The first character must be either an underscore or a letter.

**To remove a trigger expression:**

1. Click in any box in the line representing the expression that you want to remove.
2. Click **Remove**.

**See also**

- ▶ [Setting Up Trigger Expressions](#)

## Setting Trigger Options

In addition to the trigger units and trigger expressions, there are two other aspects of triggers: the final event counter and enabling the trigger signal for other Reveal modules.

### Event Counter

The final event counter allows a counter to be added to the final trigger of one or more trigger expressions. In order to use the final event counter during logic analysis, you must specify it during insertion, along with the maximum count allowed. The actual count used by the counter during triggering can be dynamically changed during logic analysis.

**To add a counter to the output of the final trigger:**

1. Select **Enable final trigger counter** in the lower left portion of the Trigger Signal Setup tab.
2. In the **Event Counter Value** pulldown menu, choose the maximum size of the count of all the trigger expression outputs combined. You can choose powers of two between 2 and 65536.

Clearing the “Enable final trigger counter” option is equivalent to setting the counter to a value of 1.

You can change the value of this parameter in Reveal Analyzer, but you cannot make the value bigger, so be sure to reserve enough space for the count that you think you will need.

## Trigger Out

To support triggers based on multiple sample clocks, cross-triggering is available between different debug modules. Reveal provides an optional trigger-out signal in the triggering section for every module.

If a design has multiple modules, trigger-out signals from other modules are listed as an available signal. To use a trigger-out signal as an input to another module, you must specify it as a NET or BOTH type. The IO type is only used for connecting the trigger-out to an external I/O. Trigger-out signals are listed in the Trigger Output view.

### To create a trigger output signal:

1. Select **Enable Trigger Out** from the bottom of the Trigger Signal Setup view.
2. In the Net pulldown menu, choose one of the following:
  - ▶ **IO** – Creates an I/O signal that can connect to an I/O pin.
  - ▶ **NET** – Creates a net signal that can be used in another module.
  - ▶ **BOTH** – Creates a signal that can be used on another module and can connect to an I/O pin.
3. If you want to change the signal's name, double-click the desired name next to the Net menu and type in the new name.
4. In the Polarity menu, choose whether the signal is **Active High** or **Active Low**.
5. In the "Minimum pulse width" box, enter the minimum pulse width of the trigger output signal, measured in cycles of the sample clock. You can input any value of 0 or greater as the minimum pulse.

### Note:

---

For soft IP or single core devices, only IO is selectable in the NET pulldown menu.

---

## Setting Up Virtual Switch/LED Settings

The data pane consists of Virtual Switch/LED panels in which you drag and drop the RTL-defined switch and LED signals. A maximum of 32 bits can be selected for both Virtual Switch/LED signals.

### To set up Virtual Switch/LED signals:

1. Select the top\_Controller core in the Datasets view. (There can only be one Controller core.)
2. Click the **Virtual Switch & LED Setup** tab.
3. Select signals in the Design Tree by expanding the hierarchy or doing a name search in the Filter text box and clicking on Search. For help finding signals, see ["Searching for Signals" on page 667](#).

4. Drag the desired signals to the Virtual Switch or LED data panels to the right. The width of the signals will automatically update between 1-32 entries at the top.
5. Beside the header title, Virtual Switch/LED Setting, there is a check box in which the Controller function for Virtual Switch/LED can be enabled/disabled.

**Note:**

In order for this tab to display the Switch/LED names correctly and for the compilation tool flow to run through successfully, use the **Reveal Controller template** from the Source Template Editor tool. See [“Using Templates” on page 118](#).

---

## Selecting and Ordering Virtual Switch/LED Signals

**To select and order virtual switch/LED signals:**

- ▶ In the Switch List and LED List tables, click on a signal to select it. To select more than one signal, control-click on each one. To select all signals and buses in a range, click on the first signal to select and Shift-click on the last one.
- ▶ To move selected signals up and down the list, use the up and down arrows  .

**Note**

---

Reveal controller allows you to re-order signals on the virtual LEDs and Switches.

---

- ▶ To remove signals from the trigger unit, select them and click the Delete icon . You can also press the Delete key.
- ▶ To order the signals from the most significant bit (MSB) to the least significant bit (LSB) and vice versa, click the **MSB** and **LSB** buttons.

## Assigning Colors to Virtual Switch/LED Signals

**To assign colors to virtual switch/LED signals:**

1. In the Switch List and LED List tables, click the color of the signal.
2. This opens the Select Color dialog box. Choose the color to assign to the signal and click **OK**.

The colors you assign are also reflected in the virtual LED/Switch console in Reveal Analyzer. See [“Virtual LED/Switch Console” on page 731](#).



## Configuring User Memory Setup

Setting up the User Memory setting consists of assigning six mandatory ports (which must be defined in the user RTL design). The maximum data width is 32 bits.

The user design must include a memory block (EBR, Distributed Memory or PMI Memory) to be able setup User Memory.

The mandatory signals in the user design to set up User Memory are:

- ▶ Clock
- ▶ Clock\_enable
- ▶ Wr\_Rdn
- ▶ Address
- ▶ WData
- ▶ RData

### To set up User Memory signals:

1. To select the top Controller core in the Dataset view, click on it. There can only be one Controller core. When you click on Add Controller, the control panel will appear. You can enable User Memory and connect to any lower-level hierarchy under the top-level, provided that all the ports are connected without any unconnected ports before and by selecting the corresponding memory port names. The Address and Data Width will be automatically updated.
2. Reveal Controller will add a mux between user logic and the Reveal Controller, which can be left blank or connected to the user logic. Once checked, click the **User Memory Setup** tab.

☒ User Memory Setting

Address: 0x90000000-0x9000FFFF

Address Width: 9 (4-16)

Data Width: 32 (4-32)

| Setting List |                                             |
|--------------|---------------------------------------------|
|              | Memory Port                                 |
| Clock        | top_test1_inst/pmi_ram_dp_inst/Clock        |
| Clock_enable | top_test1_inst/pmi_ram_dp_inst/ClockEn      |
| Wr_Rdn       | top_test1_inst/pmi_ram_dp_inst/WE_RDN       |
| Address[8:0] | top_test1_inst/pmi_ram_dp_inst/Address[8:0] |
| WData[31:0]  | top_test1_inst/pmi_ram_dp_inst/WData[31:0]  |
| RData[31:0]  | top_test1_inst/pmi_ram_dp_inst/Q[31:0]      |

Virtual Switch & LED Setup   **User Memory Setup**   Hard IP Setup   User Status Register Setup   User Control Register Setup

3. Select signals in the Design Tree and drag the signals to the desired position under Setting List in the User Memory Setup tab. As the pre-

synthesis controller debug, no need to add any floating wires. For help finding signals see, [“Searching for Signals” on page 667](#).

4. Drag the desired signals into the User Memory data panel to the right. You do not need to provide a clock if there is no user logic connected while the width of the signals will automatically update between 4-32 entries at the top.
5. Beside the title User Memory Setting, there is a check box in which the Controller function for User Memory signals can be enabled/disabled. If there is a noticeable reset port, it should be connected to an inactive reset signal so that it does not impact the controller functionality and it should not be in a floating state.

## Configuring User Control Register Setup

The User Control Register Setup tab displays a table-like panel where you can enable the Control Register. The Control Register address ranges from 0x81000000 up to 0x810000f8.

You can add up to 32-address locations with a maximum data-width of 8-bit. If the signal has a data width greater than 8, it splits into 8-bit per address location with a unique label.

The user design must include the control registers as wires, which should not have any other drivers. They should be treated as asynchronous switches as they are changed with the JTAG clock.

These signals are read-writable from the controller.

### To set up User Control Register:

1. Click the **User Control Register Setup** tab.

| Control Register |        |                                                                                                                                                                                                                                                         |       |
|------------------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|
|                  | Name   | Control Signals (MSB:LSB)                                                                                                                                                                                                                               | Width |
| 1                | creg0  | top_test1_inst/control_reg1:7.top_test1_inst/control_reg0:6.top_test1_inst/control_reg0:5.top_test1_inst/control_reg0:4.top_test1_inst/control_reg0:3.top_test1_inst/control_reg0:2.top_test1_inst/control_reg0:1.top_test1_inst/control_reg0:0         | 8     |
| 2                | creg1  | top_test1_inst/control_reg0_7_0[7:0]                                                                                                                                                                                                                    | 8     |
| 3                | creg2  | top_test1_inst/control_reg0_15_8[7:0]                                                                                                                                                                                                                   | 8     |
| 4                | creg3  | top_test1_inst/control_reg0_23_16[7:0]                                                                                                                                                                                                                  | 8     |
| 5                | creg4  | top_test1_inst/control_reg1:7.top_test1_inst/control_reg1:6.top_test1_inst/control_reg1:5.top_test1_inst/control_reg1:4.top_test1_inst/control_reg1:3.top_test1_inst/control_reg1:2.top_test1_inst/control_reg1:1.top_test1_inst/control_reg1:0         | 8     |
| 6                | creg5  | top_test1_inst/count_reg1:15.top_test1_inst/count_reg1:14.top_test1_inst/count_reg1:13.top_test1_inst/count_reg1:12.top_test1_inst/count_reg1:11.top_test1_inst/count_reg1:10.top_test1_inst/count_reg1:9.top_test1_inst/count_reg1:8                   | 8     |
| 7                | creg6  | top_test1_inst/control_reg1:23.top_test1_inst/control_reg1:22.top_test1_inst/control_reg1:21.top_test1_inst/control_reg1:20.top_test1_inst/control_reg1:19.top_test1_inst/control_reg1:18.top_test1_inst/control_reg1:17.top_test1_inst/control_reg1:16 | 8     |
| 8                | creg7  | top_test1_inst/control_reg1:31.top_test1_inst/control_reg1:30.top_test1_inst/control_reg1:29.top_test1_inst/control_reg1:28.top_test1_inst/control_reg1:27.top_test1_inst/control_reg1:26.top_test1_inst/control_reg1:25.top_test1_inst/control_reg1:24 | 8     |
| 9                | creg8  | top_test1_inst/control_reg2:7.top_test1_inst/control_reg2:6.top_test1_inst/control_reg2:5.top_test1_inst/control_reg2:4.top_test1_inst/control_reg2:3.top_test1_inst/control_reg2:2.top_test1_inst/control_reg2:1.top_test1_inst/control_reg2:0         | 8     |
| 10               | creg9  | top_test1_inst/control_reg2:15.top_test1_inst/control_reg2:14.top_test1_inst/control_reg2:13.top_test1_inst/control_reg2:12.top_test1_inst/control_reg2:11.top_test1_inst/control_reg2:10.top_test1_inst/control_reg2:9.top_test1_inst/control_reg2:8   | 8     |
| 11               | creg10 | top_test1_inst/control_reg2:23.top_test1_inst/control_reg2:22.top_test1_inst/control_reg2:21.top_test1_inst/control_reg2:20.top_test1_inst/control_reg2:19.top_test1_inst/control_reg2:18.top_test1_inst/control_reg2:17.top_test1_inst/control_reg2:16 | 8     |
| 12               | creg11 | top_test1_inst/control_reg3:31.top_test1_inst/control_reg3:30.top_test1_inst/control_reg3:29.top_test1_inst/control_reg3:28.top_test1_inst/control_reg3:27.top_test1_inst/control_reg3:26.top_test1_inst/control_reg3:25.top_test1_inst/control_reg3:24 | 8     |
| 13               | creg12 | top_test1_inst/control_reg3:7.top_test1_inst/control_reg3:6.top_test1_inst/control_reg3:5.top_test1_inst/control_reg3:4.top_test1_inst/control_reg3:3.top_test1_inst/control_reg3:2.top_test1_inst/control_reg3:1.top_test1_inst/control_reg3:0         | 8     |
| 14               | creg13 | top_test1_inst/control_reg3:15.top_test1_inst/control_reg3:14.top_test1_inst/control_reg3:13.top_test1_inst/control_reg3:12.top_test1_inst/control_reg3:11.top_test1_inst/control_reg3:10.top_test1_inst/control_reg3:9.top_test1_inst/control_reg3:8   | 8     |
| 15               | creg14 | top_test1_inst/control_reg3:23.top_test1_inst/control_reg3:22.top_test1_inst/control_reg3:21.top_test1_inst/control_reg3:20.top_test1_inst/control_reg3:19.top_test1_inst/control_reg3:18.top_test1_inst/control_reg3:17.top_test1_inst/control_reg3:16 | 8     |
| 16               | creg15 | top_test1_inst/control_reg3:31.top_test1_inst/control_reg3:30.top_test1_inst/control_reg3:29.top_test1_inst/control_reg3:28.top_test1_inst/control_reg3:27.top_test1_inst/control_reg3:26.top_test1_inst/control_reg3:25.top_test1_inst/control_reg3:24 | 8     |
| 17               | creg16 | top_test1_inst/count_reg4:7.top_test1_inst/count_reg4:6.top_test1_inst/count_reg4:5.top_test1_inst/count_reg4:4.top_test1_inst/count_reg4:3.top_test1_inst/count_reg4:2.top_test1_inst/count_reg4:1.top_test1_inst/count_reg4:0                         | 8     |
| 18               | creg17 | top_test1_inst/control_reg4:15.top_test1_inst/control_reg4:14.top_test1_inst/control_reg4:13.top_test1_inst/control_reg4:12.top_test1_inst/control_reg4:11.top_test1_inst/control_reg4:10.top_test1_inst/control_reg4:9.top_test1_inst/control_reg4:8   | 8     |
| 19               | creg18 | top_test1_inst/control_reg4:23.top_test1_inst/control_reg4:22.top_test1_inst/control_reg4:21.top_test1_inst/control_reg4:20.top_test1_inst/control_reg4:19.top_test1_inst/control_reg4:18.top_test1_inst/control_reg4:17.top_test1_inst/control_reg4:16 | 8     |
| 20               | creg19 | top_test1_inst/control_reg4:31.top_test1_inst/control_reg4:30.top_test1_inst/control_reg4:29.top_test1_inst/control_reg4:28.top_test1_inst/control_reg4:27.top_test1_inst/control_reg4:26.top_test1_inst/control_reg4:25.top_test1_inst/control_reg4:24 | 8     |
| 21               | creg20 | top_test1_inst/count_reg5:7.top_test1_inst/count_reg5:6.top_test1_inst/count_reg5:5.top_test1_inst/count_reg5:4.top_test1_inst/count_reg5:3.top_test1_inst/count_reg5:2.top_test1_inst/count_reg5:1.top_test1_inst/count_reg5:0                         | 8     |
| 22               | creg21 | top_test1_inst/count_reg5:15.top_test1_inst/count_reg5:14.top_test1_inst/count_reg5:13.top_test1_inst/count_reg5:12.top_test1_inst/count_reg5:11.top_test1_inst/count_reg5:10.top_test1_inst/count_reg5:9.top_test1_inst/count_reg5:8                   | 8     |
| 23               | creg22 | top_test1_inst/count_reg5:23.top_test1_inst/count_reg5:22.top_test1_inst/count_reg5:21.top_test1_inst/count_reg5:20.top_test1_inst/count_reg5:19.top_test1_inst/count_reg5:18.top_test1_inst/count_reg5:17.top_test1_inst/count_reg5:16                 | 8     |
| 24               | creg23 | top_test1_inst/control_reg5:31.top_test1_inst/control_reg5:30.top_test1_inst/control_reg5:29.top_test1_inst/control_reg5:28.top_test1_inst/control_reg5:27.top_test1_inst/control_reg5:26.top_test1_inst/control_reg5:25.top_test1_inst/control_reg5:24 | 8     |
| 25               | creg24 | top_test1_inst/control_reg6:7.top_test1_inst/control_reg6:6.top_test1_inst/control_reg6:5.top_test1_inst/control_reg6:4.top_test1_inst/control_reg6:3.top_test1_inst/control_reg6:2.top_test1_inst/control_reg6:1.top_test1_inst/control_reg6:0         | 8     |
| 26               | creg25 | top_test1_inst/count_reg6:15.top_test1_inst/count_reg6:14.top_test1_inst/count_reg6:13.top_test1_inst/count_reg6:12.top_test1_inst/count_reg6:11.top_test1_inst/count_reg6:10.top_test1_inst/count_reg6:9.top_test1_inst/count_reg6:8                   | 8     |
| 27               | creg26 | top_test1_inst/control_reg6:23.top_test1_inst/control_reg6:22.top_test1_inst/control_reg6:21.top_test1_inst/control_reg6:20.top_test1_inst/control_reg6:19.top_test1_inst/control_reg6:18.top_test1_inst/control_reg6:17.top_test1_inst/control_reg6:16 | 8     |
| 28               | creg27 | top_test1_inst/control_reg6:31.top_test1_inst/control_reg6:30.top_test1_inst/control_reg6:29.top_test1_inst/control_reg6:28.top_test1_inst/control_reg6:27.top_test1_inst/control_reg6:26.top_test1_inst/control_reg6:25.top_test1_inst/control_reg6:24 | 8     |
| 29               | creg28 | top_test1_inst/control_reg7:7.top_test1_inst/control_reg7:6.top_test1_inst/control_reg7:5.top_test1_inst/control_reg7:4.top_test1_inst/control_reg7:3.top_test1_inst/control_reg7:2.top_test1_inst/control_reg7:1.top_test1_inst/control_reg7:0         | 8     |
| 30               | creg29 | top_test1_inst/count_reg7:15.top_test1_inst/count_reg7:14.top_test1_inst/count_reg7:13.top_test1_inst/count_reg7:12.top_test1_inst/count_reg7:11.top_test1_inst/count_reg7:10.top_test1_inst/count_reg7:9.top_test1_inst/count_reg7:8                   | 8     |
| 31               | creg30 | top_test1_inst/count_reg7:23.top_test1_inst/count_reg7:22.top_test1_inst/count_reg7:21.top_test1_inst/count_reg7:20.top_test1_inst/count_reg7:19.top_test1_inst/count_reg7:18.top_test1_inst/count_reg7:17.top_test1_inst/count_reg7:16                 | 8     |
| 32               | creg31 | top_test1_inst/count_reg7:31.top_test1_inst/count_reg7:30.top_test1_inst/count_reg7:29.top_test1_inst/count_reg7:28.top_test1_inst/count_reg7:27.top_test1_inst/count_reg7:26.top_test1_inst/count_reg7:25.top_test1_inst/count_reg7:24                 | 8     |

2. Click the **Add** button. By default, a unique label is assigned to the Name column. You can edit this label by double-clicking it.

3. Drag-and-drop the corresponding signals from Design View to the **Control Signals** column.

Or

4. Select the existing row and double-click the Control Signals column.

The **Edit Signals** dialog box appears.

5. In the Edit Signals dialog box, do the following:

a. Choose signals from the **Select Signals** pane.

b. Click the forward  button to move the signals to the right-hand pane.

c. Change the order of the signals as desired.

d. Click **OK**.

6. If you wish to delete a row from the Control Signals column, click the **Remove** button to delete the selected row.

# Configuring User Status Register Setup

The User Status Register Setup tab displays a table-like panel where you can enable the Status Register. The Status Register address ranges from 0x81001000 up to 0x810010f8.

You can add up to 32-address locations with a maximum data-width of 8-bit. If the signal has a data width greater than 8, it splits into 8-bit per address location with a unique label.

The user design must include status registers as wires, which should be driven by registers to show the status of the different functional blocks of the design. These signals are read-only.

## To set up User Status Register:

1. Click the **User Status Register Setup** tab.

| Name   | Status Signals (MSB:LSB)                                                                                                                                                                                                                                | Width |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|
| sreg0  | top_test1_inst/stat_reg0:7.top_test1_inst/stat_reg0:6.top_test1_inst/stat_reg0:5.top_test1_inst/stat_reg0:4.top_test1_inst/stat_reg0:3.top_test1_inst/stat_reg0:2.top_test1_inst/stat_reg0:1.top_test1_inst/stat_reg0:0                                 | 8     |
| sreg1  | top_test1_inst/stat_reg0:15.top_test1_inst/stat_reg0:14.top_test1_inst/stat_reg0:13.top_test1_inst/stat_reg0:12.top_test1_inst/stat_reg0:11.top_test1_inst/stat_reg0:10.top_test1_inst/stat_reg0:9.top_test1_inst/stat_reg0:8                           | 8     |
| sreg2  | top_test1_inst/stat_reg0:23.top_test1_inst/stat_reg0:22.top_test1_inst/stat_reg0:21.top_test1_inst/stat_reg0:20.top_test1_inst/stat_reg0:19.top_test1_inst/stat_reg0:18.top_test1_inst/stat_reg0:17.top_test1_inst/stat_reg0:16                         | 8     |
| sreg3  | top_test1_inst/stat_reg0:31.top_test1_inst/stat_reg0:30.top_test1_inst/stat_reg0:29.top_test1_inst/stat_reg0:28.top_test1_inst/stat_reg0:27.top_test1_inst/stat_reg0:26.top_test1_inst/stat_reg0:25.top_test1_inst/stat_reg0:24                         | 8     |
| sreg4  | top_test1_inst/stat_reg1:7.top_test1_inst/stat_reg1:6.top_test1_inst/stat_reg1:5.top_test1_inst/stat_reg1:4.top_test1_inst/stat_reg1:3.top_test1_inst/stat_reg1:2.top_test1_inst/stat_reg1:1.top_test1_inst/stat_reg1:0                                 | 8     |
| sreg5  | top_test1_inst/stat_reg1:15.top_test1_inst/stat_reg1:14.top_test1_inst/stat_reg1:13.top_test1_inst/stat_reg1:12.top_test1_inst/stat_reg1:11.top_test1_inst/stat_reg1:10.top_test1_inst/stat_reg1:9.top_test1_inst/stat_reg1:8                           | 8     |
| sreg6  | top_test1_inst/stat_reg2:23.top_test1_inst/stat_reg2:22.top_test1_inst/stat_reg2:21.top_test1_inst/stat_reg2:20.top_test1_inst/stat_reg2:19.top_test1_inst/stat_reg2:18.top_test1_inst/stat_reg2:17.top_test1_inst/stat_reg2:16                         | 8     |
| sreg7  | top_test1_inst/stat_reg3:31.top_test1_inst/stat_reg3:30.top_test1_inst/stat_reg3:29.top_test1_inst/stat_reg3:28.top_test1_inst/stat_reg3:27.top_test1_inst/stat_reg3:26.top_test1_inst/stat_reg3:25.top_test1_inst/stat_reg3:24                         | 8     |
| sreg8  | top_test1_inst/stat_reg4:7.top_test1_inst/stat_reg4:6.top_test1_inst/stat_reg4:5.top_test1_inst/stat_reg4:4.top_test1_inst/stat_reg4:3.top_test1_inst/stat_reg4:2.top_test1_inst/stat_reg4:1.top_test1_inst/stat_reg4:0                                 | 8     |
| sreg9  | top_test1_inst/stat_reg5:15.top_test1_inst/stat_reg5:14.top_test1_inst/stat_reg5:13.top_test1_inst/stat_reg5:12.top_test1_inst/stat_reg5:11.top_test1_inst/stat_reg5:10.top_test1_inst/stat_reg5:9.top_test1_inst/stat_reg5:8                           | 8     |
| sreg10 | top_test1_inst/stat_reg6:23.top_test1_inst/stat_reg6:22.top_test1_inst/stat_reg6:21.top_test1_inst/stat_reg6:20.top_test1_inst/stat_reg6:19.top_test1_inst/stat_reg6:18.top_test1_inst/stat_reg6:17.top_test1_inst/stat_reg6:16                         | 8     |
| sreg11 | top_test1_inst/stat_reg7:31.top_test1_inst/stat_reg7:30.top_test1_inst/stat_reg7:29.top_test1_inst/stat_reg7:28.top_test1_inst/stat_reg7:27.top_test1_inst/stat_reg7:26.top_test1_inst/stat_reg7:25.top_test1_inst/stat_reg7:24                         | 8     |
| sreg12 | top_test1_inst/stat_reg8:7.top_test1_inst/stat_reg8:6.top_test1_inst/stat_reg8:5.top_test1_inst/stat_reg8:4.top_test1_inst/stat_reg8:3.top_test1_inst/stat_reg8:2.top_test1_inst/stat_reg8:1.top_test1_inst/stat_reg8:0                                 | 8     |
| sreg13 | top_test1_inst/stat_reg9:15.top_test1_inst/stat_reg9:14.top_test1_inst/stat_reg9:13.top_test1_inst/stat_reg9:12.top_test1_inst/stat_reg9:11.top_test1_inst/stat_reg9:10.top_test1_inst/stat_reg9:9.top_test1_inst/stat_reg9:8                           | 8     |
| sreg14 | top_test1_inst/stat_reg10:23.top_test1_inst/stat_reg10:22.top_test1_inst/stat_reg10:21.top_test1_inst/stat_reg10:20.top_test1_inst/stat_reg10:19.top_test1_inst/stat_reg10:18.top_test1_inst/stat_reg10:17.top_test1_inst/stat_reg10:16                 | 8     |
| sreg15 | top_test1_inst/stat_reg11:31.top_test1_inst/stat_reg11:30.top_test1_inst/stat_reg11:29.top_test1_inst/stat_reg11:28.top_test1_inst/stat_reg11:27.top_test1_inst/stat_reg11:26.top_test1_inst/stat_reg11:25.top_test1_inst/stat_reg11:24                 | 8     |
| sreg16 | top_test1_inst/status_reg4:7.top_test1_inst/status_reg4:6.top_test1_inst/status_reg4:5.top_test1_inst/status_reg4:4.top_test1_inst/status_reg4:3.top_test1_inst/status_reg4:2.top_test1_inst/status_reg4:1.top_test1_inst/status_reg4:0                 | 8     |
| sreg17 | top_test1_inst/status_reg5:15.top_test1_inst/status_reg5:14.top_test1_inst/status_reg5:13.top_test1_inst/status_reg5:12.top_test1_inst/status_reg5:11.top_test1_inst/status_reg5:10.top_test1_inst/status_reg5:9.top_test1_inst/status_reg5:8           | 8     |
| sreg18 | top_test1_inst/status_reg6:23.top_test1_inst/status_reg6:22.top_test1_inst/status_reg6:21.top_test1_inst/status_reg6:20.top_test1_inst/status_reg6:19.top_test1_inst/status_reg6:18.top_test1_inst/status_reg6:17.top_test1_inst/status_reg6:16         | 8     |
| sreg19 | top_test1_inst/status_reg7:31.top_test1_inst/status_reg7:30.top_test1_inst/status_reg7:29.top_test1_inst/status_reg7:28.top_test1_inst/status_reg7:27.top_test1_inst/status_reg7:26.top_test1_inst/status_reg7:25.top_test1_inst/status_reg7:24         | 8     |
| sreg20 | top_test1_inst/count_reg5:5.top_test1_inst/count_reg5:4.top_test1_inst/count_reg5:3.top_test1_inst/count_reg5:2.top_test1_inst/count_reg5:1.top_test1_inst/count_reg5:0                                                                                 | 8     |
| sreg21 | top_test1_inst/status_reg5:15.top_test1_inst/status_reg5:14.top_test1_inst/status_reg5:13.top_test1_inst/status_reg5:12.top_test1_inst/status_reg5:11.top_test1_inst/status_reg5:10.top_test1_inst/status_reg5:9.top_test1_inst/status_reg5:8           | 8     |
| sreg22 | top_test1_inst/status_reg6:23.top_test1_inst/status_reg6:22.top_test1_inst/status_reg6:21.top_test1_inst/status_reg6:20.top_test1_inst/status_reg6:19.top_test1_inst/status_reg6:18.top_test1_inst/status_reg6:17.top_test1_inst/status_reg6:16         | 8     |
| sreg23 | top_test1_inst/status_reg7:31.top_test1_inst/status_reg7:30.top_test1_inst/status_reg7:29.top_test1_inst/status_reg7:28.top_test1_inst/status_reg7:27.top_test1_inst/status_reg7:26.top_test1_inst/status_reg7:25.top_test1_inst/status_reg7:24         | 8     |
| sreg24 | top_test1_inst/status_reg8:7.top_test1_inst/status_reg8:6.top_test1_inst/status_reg8:5.top_test1_inst/status_reg8:4.top_test1_inst/status_reg8:3.top_test1_inst/status_reg8:2.top_test1_inst/status_reg8:1.top_test1_inst/status_reg8:0                 | 8     |
| sreg25 | top_test1_inst/status_reg9:15.top_test1_inst/status_reg9:14.top_test1_inst/status_reg9:13.top_test1_inst/status_reg9:12.top_test1_inst/status_reg9:11.top_test1_inst/status_reg9:10.top_test1_inst/status_reg9:9.top_test1_inst/status_reg9:8           | 8     |
| sreg26 | top_test1_inst/status_reg10:23.top_test1_inst/status_reg10:22.top_test1_inst/status_reg10:21.top_test1_inst/status_reg10:20.top_test1_inst/status_reg10:19.top_test1_inst/status_reg10:18.top_test1_inst/status_reg10:17.top_test1_inst/status_reg10:16 | 8     |
| sreg27 | top_test1_inst/status_reg11:31.top_test1_inst/status_reg11:30.top_test1_inst/status_reg11:29.top_test1_inst/status_reg11:28.top_test1_inst/status_reg11:27.top_test1_inst/status_reg11:26.top_test1_inst/status_reg11:25.top_test1_inst/status_reg11:24 | 8     |
| sreg28 | top_test1_inst/status_reg12:7.top_test1_inst/status_reg12:6.top_test1_inst/status_reg12:5.top_test1_inst/status_reg12:4.top_test1_inst/status_reg12:3.top_test1_inst/status_reg12:2.top_test1_inst/status_reg12:1.top_test1_inst/status_reg12:0         | 8     |
| sreg29 | top_test1_inst/status_reg13:15.top_test1_inst/status_reg13:14.top_test1_inst/status_reg13:13.top_test1_inst/status_reg13:12.top_test1_inst/status_reg13:11.top_test1_inst/status_reg13:10.top_test1_inst/status_reg13:9.top_test1_inst/status_reg13:8   | 8     |
| sreg30 | top_test1_inst/status_reg14:23.top_test1_inst/status_reg14:22.top_test1_inst/status_reg14:21.top_test1_inst/status_reg14:20.top_test1_inst/status_reg14:19.top_test1_inst/status_reg14:18.top_test1_inst/status_reg14:17.top_test1_inst/status_reg14:16 | 8     |
| sreg31 | top_test1_inst/status_reg15:31.top_test1_inst/status_reg15:30.top_test1_inst/status_reg15:29.top_test1_inst/status_reg15:28.top_test1_inst/status_reg15:27.top_test1_inst/status_reg15:26.top_test1_inst/status_reg15:25.top_test1_inst/status_reg15:24 | 8     |

Address: 0x81001000 ~ 0x810010f8

Virtual Switch & LED Setup   User Memory Setup   **User Status Register Setup**   User Control Register Setup   Hard IP Setup

2. Click the **Add** button. By default, a unique label is assigned to the Name column. You can edit this label by double-clicking it.
3. Drag-and-drop the corresponding signals from Design View to the **Status Signals** column.

Or

4. Select the existing row and double-click the Status Signals column.

The **Edit Signals** dialog box appears.

5. In the Edit Signals dialog box, do the following:
  - a. Choose signals from the **Select Signals** pane.
  - b. Click the forward  button to move the signals to the right-hand pane.
  - c. Change the order of the signals as desired.
  - d. Click **OK**.
6. If you wish to delete a row from the Status Signals column, click the **Remove** button to delete the selected row.

## Configuring Hard IP Setup

The Hard IPs are automatically extracted from the RTL design and displayed in the data pane.

For the Inserter, the starting addresses for the IPs as shown is only for informational purpose. The addresses can be experimented in the Analyzer.

### To set up Hard IP:

1. Click the **Hard IP Setup** tab.
2. Select Controller function for Hard IPs for analysis by enabling check boxes.

When implementing Reveal Controller for Hard IPs of PCS and PCIE, the implementation will not remove the user logic but will mux it with Reveal Controller logic. The following information explains this process:

- ▶ The user logic will access the LMMI interface and be active in the beginning of design for functions like link state machine. After that, the function needs to be inactive.
- ▶ When Reveal Controller gets access to the LMMI registers, it will select the mux during that time only. When there is no Reveal read/write command, it will de-select the mux.

## Inserting the Reveal Modules

When you finish setting up the trace and trigger signals, you can insert the Reveal modules into the design.

### Note

---

Interactive and standalone synthesis are not compatible with Reveal modules. Reveal Inserter automatically uses the integrated synthesis option. Make sure your design project is set up for integrated synthesis if not done already.

---

**To insert the debug logic modules into the design:**

1. Choose **Debug >  Insert Debug**.
2. In the Insert Debug to Design dialog box, select the modules to insert.
3. Select **Activate Reveal file in design project**.  
If the .rvl file is not active in the design project, the Reveal modules will not be included during synthesis.
4. Click **OK**.  
Reveal Inserter performs a design rule check and saves the Reveal (.rvl) file. The Output view shows resource requirements and the DRC report for the modules. The .rvl file is listed in the File List view under Debug Files.
5. Implement the design in the usual way. See [“Implementing the Design” on page 334](#).

Adding Reveal modules can sometimes cause design implementation to fail. If you have any problems, see [“Troubleshooting Design Implementation Errors” on page 698](#) and [“Limitations” on page 668](#).

**Troubleshooting Design Implementation Errors**

If the design implementation process fails after inserting a Reveal module, check this section for solutions.

**Signals Implemented as Hard Routes** Some signals that are implemented as hard routes in the FPGA instead of using the routing fabric are not available for tracing or triggering. Examples are connections to IB and OB components. If you select a signal for tracing or triggering that is implemented as a hard route, an error will occur during the synthesis, mapping, placement, or routing steps. However, the error can take many forms. Following are some examples.

**Example 1:**

An example error message from the synthesis log file, <cktname>.log:

```
@E:"f:\cws\bugs\cr37986\reveal_workspace\tmpreveal\rx_ddr_rvl.vhd":648:8:
648:12|Port 'serin' on Chip 'RX_DDR' drives 1 PAD loads and 1 non PAD
loads
```

**Example 2:**

In this example error message, the serin signal is a hard route, but serin is not the name of the original signal that was traced. The hierarchical path shown is for the Reveal module that was generated. It is not part of the original design and is not displayed during the debug module insertion. The error message does not specify which trace or trigger signal is causing the problem.

To manually determine which signal is causing this error, you can use two approaches:



1. Remove signals one by one in Reveal Inserter to see which caused the error. If you have only a few signals, this would be the best approach.
2. Manually look through the design to determine the problem. If you have many signals, this approach would be the best.

**Example 3:**

*ERROR - map: IO register/latch FF\_inst cannot be implemented in PIC.*

In this case, the input of a register is being traced. But the register is being implemented as an input flip-flop because of a preference, USE DIN. Allowing the register to be implemented as an internal flip-flop by removing the preference resolves the issue.

**See Also**

▶ [“Limitations” on page 668](#)

## Removing Reveal Modules from the Design

When you want to remove the Reveal modules from your design, you can either remove the .rvl file from the design project or set it as inactive, leaving it easily available for future use. Otherwise, the modules will continue to be inserted.


**To remove the Reveal modules from the design:**

1. In the File List view, right-click the .rvl file.
2. Do one of the following:
  - ▶ To remove the Reveal modules but keep the project, choose **Set as Inactive**.
  - ▶ To delete the Reveal project, choose **Remove**.
3. Implement the design in the usual way. See [“Implementing the Design” on page 334](#).

## Using JTAGhub

A JTAGhub is a module that contains a JTAG core, which is either hard or soft, and around it is soft logic. A hard JTAG core wrapped by soft logic is a hard JTAGhub. A soft JTAG RTL core wrapped by soft logic is a soft JTAGhub.

In Nexus, a hard JTAGhub is referred to as JTAGH19 and a soft JTAGhub is called JTAGH19SOFT. In Avant, a hard JTAGhub is referred to as JTAGH25 and a soft JTAGhub is called JTAGH25SOFT. In pre-synthesis, you can have a maximum of 19 connected cores in Nexus and 25 connected cores in Avant

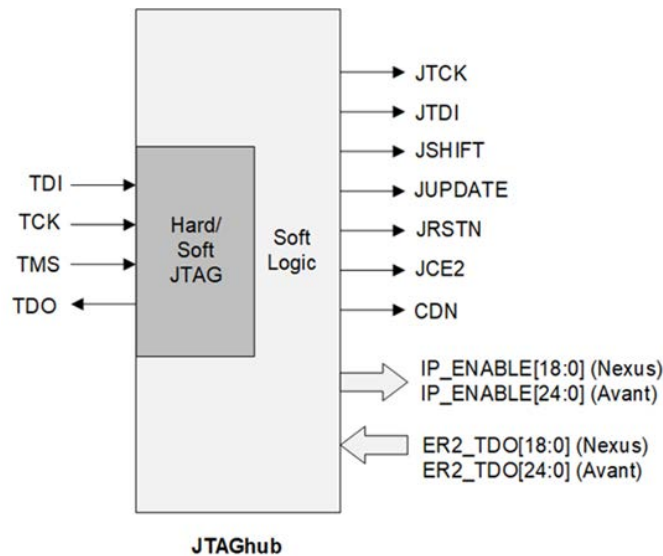
**Figure 21: JTAGhub Architecture**

There can only be one hard JTAG in a design. So if there are multiple hard JTAGhub instances, all these are merged by the post-synthesis utility. Multiple soft JTAGhubs, with or without merging, are acceptable.

A JTAGhub, either soft or hard is inserted as a black-box by Reveal Inserter for normal debugging and treated as a primitive for synthesis. It is added to the synthesis header file as a black-box. The logic is not optimized by the synthesis tool. The user can also manually instantiate the JTAGhub in the design.

### Hard JTAGhub – Merged

If there is already one hard JTAGhub in the design and the user inserts another hard JTAGhub in Reveal, then the two hard JTAGhubs are merged.

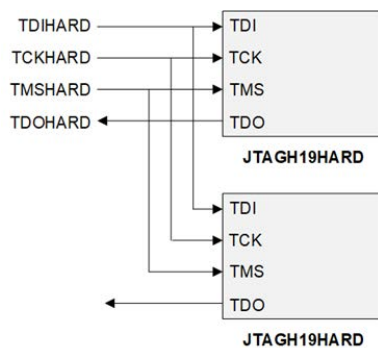**Figure 22: Hard JTAGhub - Merged**




On the other hand, there can be multiple soft JTAGhub instances in a design. These soft JTAGhubs may or may not be merged. Each soft JTAGhub needs four I/O ports and a JTAG cable.

### Soft JTAGhub – Merged

This is an example of two soft JTAG instances that are merged. In this example, all the JTAG ports are connected. TDISOFT, TCKSOFT, TMSSOFT and TDOSOFT are the top-level ports of the design. If the user needs to insert Reveal debugger, then the user must use TDISOFT, TCKSOFT, TMSSOFT, TDOSOFT as the top level port names.


By merging JTAGhubs, only one set of I/O pins is required and only one set of logic is involved. Since merging minimizes logic resources, the design utilizes a minimal number LUTs.

**Figure 23: Soft JTAGhub - Merged**

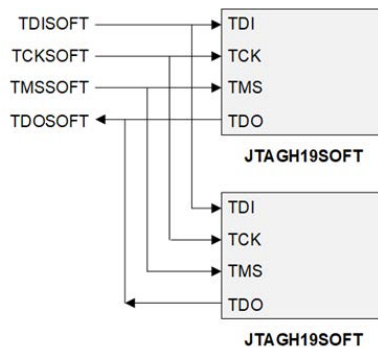

### Soft JTAGhub – Not Merged

This is an example of two soft JTAGhub instances that are not merged. In this diagram, the TDI, TCK, TMS, and TDO ports are connected to their corresponding top-level ports. The design has two independent sets of soft JTAG ports that are connected to two different cables. Hard JTAG is used for both programming and debugging. Both of these operations can be performed using the same cable and connection. Note that this is not true for soft JTAG.

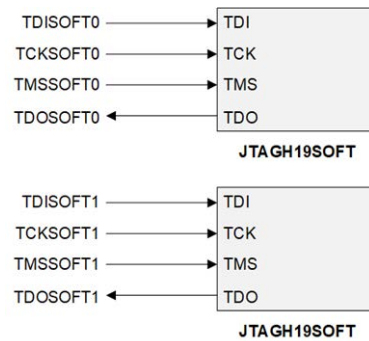**Figure 24: Soft JTAGhub - Not Merged****Notes**

- ▶ Designs generated in Lattice Propel can use hard JTAG, soft JTAG, or a mix of the two types, depending on the processor. If there are two processors, two independent debugging GDBs are used. In some devices, however, Propel can use only one soft JTAGhub.
- ▶ The JTAG primitive and JTAGH19/JTAGH25 cannot co-exist in a design. Likewise, JTAGA and JTAGH19SOFT/JTAGH25SOFT cannot be added together in one design. These result in an error.
- ▶ If both JTAGH25 and JTAGMON are present in the design, the merge tool will intelligently combine them, ensuring compatibility and avoiding duplication.

## JTAGhub Input and Output Ports

In JTAGhub, the standard TCK, TMS, TDI, and TDO ports are connected to the I/Os and go off-chip. All the other ports are connected to the FPGA fabric. When multiple sets of JTAGhubs are in the same design, all the JTAG ports are unique. Each set connects to one JTAG cable.

| Signal | Description                                                                                                                                               |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| TDI    | Data shifted into the test or programming logic of the device.                                                                                            |
| TCK    | Signal that synchronizes the internal state machine operations. In JTAG, TCK is not like a regular clock. It is pulsed when data is transmitted/received. |
| TMS    | Signal sampled at the rising edge of TCK to determine the next state.                                                                                     |
| TDO    | Data shifted out of the test or programming logic of the device.                                                                                          |
| JTCK   | Signal similar to TCK and controlled by IP_ENABLE and ER2_TDO.                                                                                            |

| Signal                                             | Description                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JTDI                                               | Signal similar to TDI and controlled by IP_ENABLE and ER2_TDO.                                                                                                                                                                                                                                 |
| JSHIFT                                             | Signal asserted and de-asserted at the pos-edge of JTCK. It remains high as long as valid data is available in JTDI.                                                                                                                                                                           |
| JUPDATE                                            | Signal that gives a positive pulse of one-cycle after JSHIFT is de-asserted. It should be used to capture the shifted-data (JTDI). It is asserted and de-asserted at the pos-edge of JTCK.                                                                                                     |
| JRSTN                                              | An active low reset signal. Initially set low and then remains high.                                                                                                                                                                                                                           |
| JCE2                                               | Signal that goes high when valid data becomes available in JTDI for the selected core. It remains high as long as the data is valid. It is asserted one clock cycle before JSHIFT is asserted and de-asserted at the same time as JSHIFT.                                                      |
| CDN                                                | Not used                                                                                                                                                                                                                                                                                       |
| IP_ENABLE[18:0] (Nexus)<br>IP_ENABLE[24:0] (Avant) | Communicates with 19 cores in Nexus and 25 cores in Avant.<br><br>Each bit enables one core. When one core is enabled, others are disabled.<br><br>When IP_ENABLE bit and JCE2 and JSHIFT are high, then valid data is shifted in with JTDI and shifted out with corresponding bit of ER2_TDO. |
| ER2_TDO[18:0] (Nexus)<br>ER2_TDO[24:0] (Avant)     | Input data to be shifted out of TDO. Each bit corresponds to equivalent bit of IP_ENABLE.                                                                                                                                                                                                      |

A soft JTAGhub uses four GPIO ports with locate constraints. Hard JTAGhub pins are fixed in the device.

The TDI, TCK, TMS and TDO ports can be connected to the top-level of the user design.

The user or the tools must connect top-level ports to the TDI, TCK, and TMS of the JTAGhub. The TDO port may be connected to the top-level port for synthesis and may not be connected to the top-level port for simulation to avoid having multiple drivers.

If simulation is not required, it is recommended that the TDI, TCK, TMS input ports be tied to low and the TDO be unconnected.

### Notes


- ▶ For debug cores inserted by Reveal Inserter, there is no support for simulation.
- ▶ For netlists generated in Lattice Propel, it is possible to simulate the user design.
- ▶ Encrypted source files for JTAGH19/JTAGH25 and JTAGH19SOFT/JTAGH25SOFT are provided to compile and run the simulation. In an Avant project, the models will also be available in the OEM simulator.

## JTAGhub Ecosystem

In a typical design, several Reveal debug cores and, normally, one Reveal Controller core may be present. There may likewise be user design logic and one or more RISC-V cores. These can all be connected to one JTAGhub and can communicate with the JTAG one at a time.

The JTAG cable connects to the machine with the Debug Analyzer and Reveal Controller tools. To set parameters and connectivity, the user can use the interface or run Tcl commands since these are all standard JTAG protocol commands. The RISC-V GDB debugging protocol can also be included. All these communicate with the cables server, then the device driver, and onto the device through the JTAG cable.

**Figure 25: JTAGhub Ecosystem**

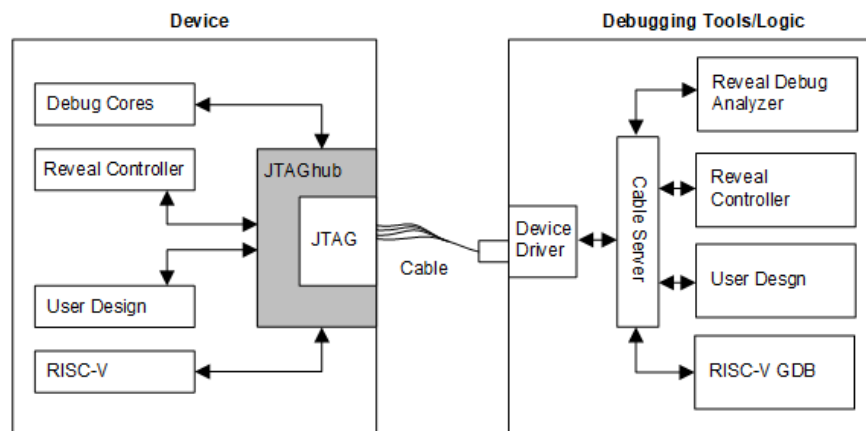

## JTAGhub Usage and Design Examples

This section provides some examples of how JTAGhub is used in a design and recommendations for debugging. A general rule is to avoid using both hard and soft JTAGhubs if using only one cable. With multiple cables, hard and soft JTAGhubs can be mixed in the design.

Note: A design with RISC-V does not necessarily come from Propel.

**Example 1. The design has no existing JTAGhub**

In this case, the user can insert either a hard JTAGhub or a soft JTAGhub.

**Example 2. The design contains one RISC-V with hard JTAGhub**

In this case, the user should use hard JTAGhub for Reveal debugging with just one cable. If soft JTAG is used for Reveal debugging, another cable is required.

**Example 3. The design contains one RISC-V with soft JTAGhub**

In this case, the user should use soft JTAGhub for Reveal debugging. The soft JTAGhubs are merged and only one cable is required.

**Example 4. The design contains two RISC-V cores with hard JTAGhub**

In this case, the user should use hard JTAGhub for Reveal debugging. The hard JTAGhubs are merged and only one cable is required.

**Example 5. The design contains two RISC-V cores with soft JTAGhub**

In this case, the user should use soft JTAGhub for Reveal debugging.

**Example 6. The design contains one RISC-V with hard JTAGhub and the user instantiates another one hard JTAGhub**

In this case, the three hard JTAGhubs are merged and the user should use hard JTAGhub for Reveal debugging.

**Example 7. The design contains one RISC-V with soft JTAGhub and the user instantiates another one soft JTAGhub**

In this case, the three soft JTAGhubs are merged and the user should use soft JTAGhub for Reveal debugging.

**Example 8. The design contains multiple RISC-V cores with independent soft JTAGhubs**

In this case, the user must use multiple cables, one for each RISC-V processor and its associated soft JTAGhub.

## JTAGhub Address Scheme

The following addressing scheme is used to address the individual cores from the Cablesrvr clients (Reveal Debug, Controller, RISC-V GDB, User Instance - Avant). If the user manually instantiates JTAGhub in the design, it is recommended to use only CORE-17 and CORE-18.

The address length is 24 bits for Nexus and 32 bits for Avant.

| Address      | Description                                                                                                                                        |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Nexus</b> |                                                                                                                                                    |
| Bit[23]      | Bit[23]                                                                                                                                            |
| Bit[22:4]    | 19 bits for IP_ENABLE[18:0], one-bit for each core. To enable a core, the IP_ENABLE bit of that core is set high and other IP_ENABLE bits set low. |
| Bit[3]       | Reserved bit for future use to clear data.                                                                                                         |
| Bit[2:0]     | 3-bit control, value of 6 means read                                                                                                               |
| <b>Avant</b> |                                                                                                                                                    |
| Bit[29]      | Bit[29]                                                                                                                                            |
| Bit[28:4]    | 25 bits for IP_ENABLE[24:0], one bit for each core. To enable a core, the IP_ENABLE bit of that core is set high and other IP_ENABLE bits set low. |
| Bit[3]       | Reserved bit for future use to clear data                                                                                                          |
| Bit[2:0]     | 3-bit control, value of 6 means read                                                                                                               |
| Bit[31:30]   | 2 bits reserved                                                                                                                                    |

## JTAGhub CORES

### Example Commands

To enable read of the ID of a CORE

```
! enable ER1
SIR 8 TDI (32);          // 8-bit data with hex value 32
! set reveal core
SDR 24 TDI (800006);     // 24-bit data with hex value 800006
```

To enable a CORE (CORE0 n this case)

```
! enable ER1
SIR 8 TDI (32);
SDR 24 TDI (000016);
```

This table lists the CORE hex values for Nexus and Avant devices. In Nexus, CORE17 and CORE18 are open to any user instantiation. In Avant, CORE17 to CORE 24 are cores open to any user instantiation.

| Nexus                          | Avant                            |
|--------------------------------|----------------------------------|
| CORE17 => SDR 24 TDI (200006); | CORE17 => SDR 32 TDI (00200006); |
| CORE18 => SDR 24 TDI (400006); | CORE18 => SDR 32 TDI (00400006); |
|                                | CORE19 => SDR 32 TDI (00800006); |
|                                | CORE20 => SDR 32 TDI (01000006); |
|                                | CORE21 => SDR 32 TDI (02000006); |
|                                | CORE22 => SDR 32 TDI (04000006); |
|                                | CORE23 => SDR 32 TDI (08000006); |
|                                | CORE24 => SDR 32 TDI (10000006); |

## Setting Parameters and Connectivity

When Reveal Inserter inserts a core, it sets the HUB\_\* value as “0b1” and connects the IP\_ENABLE bit and the ER2\_TDO bit.

### Examples:

- ▶ For any user instantiation, the settings and connections are as follows for CORE-17

```
parameter HUB_17 = "0b1";
```

IP\_ENABLE[17] is connected to the IP\_ENABLE input port of the core.

ER2\_TDO[17] is connected to the ER2\_TDO output port of the core.

- ▶ For any user instantiation, the settings and connections are as follows for CORE-18

```
parameter HUB_18 = "0b1";
```

IP\_ENABLE[18] is connected to the IP\_ENABLE input port of the core.

ER2\_TDO[18] is connected to the ER2\_TDO output port of the core.


## JTAG BYPASS Instruction in SOFTJTAG Chain

JTAG BYPASS instruction allows you to reduce overhead by passing over devices in a chain that do not need to be involved in the current action. These devices remain in functional mode but allow data to flow through to the next device in the chain. When debugging, you can also use BYPASS instruction to isolate what may be offending devices in the chain.

You can build a SOFTJTAG chain of Nexus devices, Avant devices, or a mix of both Nexus and Avant devices. Radiant supports up to 22 devices in a single chain.

The TDO port of the first device is connected to the TDI port of the next device in the chain. The TCK and TMS ports are connected together.

**Figure 26: Soft JTAGhub Chain of Three Nexus Devices**

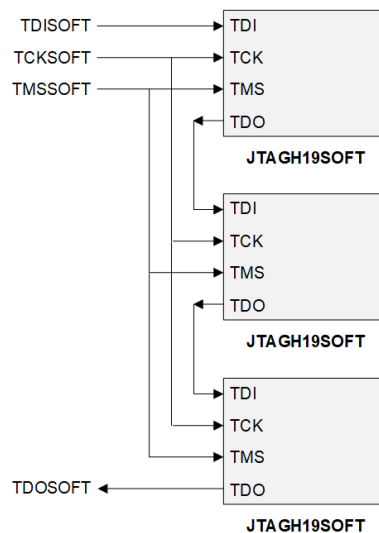

Each device with softJTAG interface can be debugged in Reveal when connected in a chain. For example, if multiple devices are connected in a chain, a specific target device can be selected to be debugged. You can mix hardJTAG and softJTAG interfaces as long as they are connected in a chain. The softJTAG interface only has access to the FPGA fabric and that is how debugging is done.

### Note:


The softJTAG interface does not have access to configuration logic, so there are no programming and scanning functions.



### To scan debug devices in a chain with hardJTAG and softJTAG interfaces:


1. Scan the devices in Radiant Programmer tool. The hardJTAG interface will be used in scanning these devices. Open Radiant Programmer and choose **Run > Scan Device**. The tool scans and lists the devices in a new .xcf file.
2. If there are devices connected in the chain using softJTAG interface, manually add these devices using **Edit > Add Device**.

**Figure 27: Manually Adding Device**

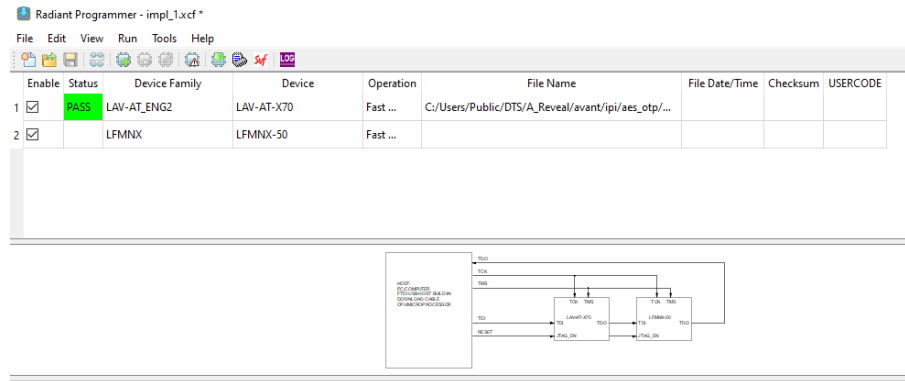

3. Create the .xcf file. This .xcf file will be common for all the Reveal projects.
4. Open Reveal Analyzer and create a new project.
5. In the Reveal Analyzer/Controller Startup Wizard, select the **Multiple Device in JTAG Chain** option.

**Figure 28: Multiple Devices in JTAG Chain Option**

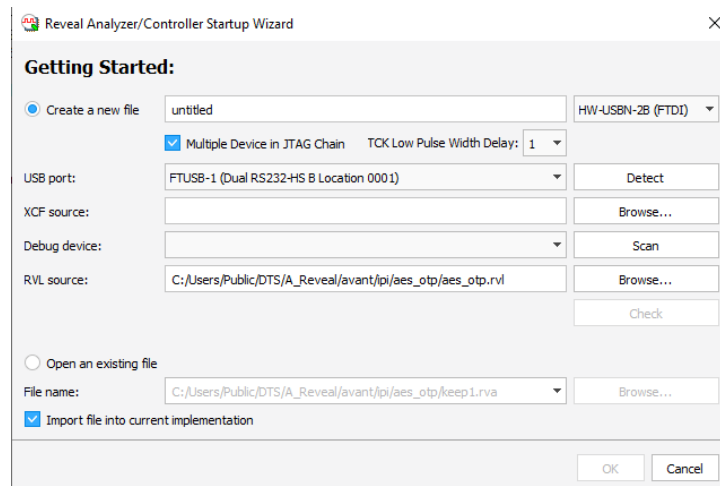

6. In the XCF source row, click **Browse** to locate and load the .xcf file that you created in Step 2.

7. In the Debug device row, click **Scan** to find the FPGA device.

**Note:**


Always load the .xcf source file before running scan. If you do not specify the .xcf source file, there will be an error message.

## Using JTAGMON

The JTAGMON primitive is a hardware-level anti-tamper mechanism for Avant devices. It monitors the JTAG interface against unauthorized access or any security risk.

JTAGMON instantiates IB (Input Buffers) to receive the JTAG signals. It can log, analyze, or trigger alerts based on JTAG activity. If an unexpected JTAG activity is detected, for example during runtime, it can trigger a system response such as a reset, a lockdown, or an alert.

**Figure 29: JTAG Ports with Fabric Access in Avant**

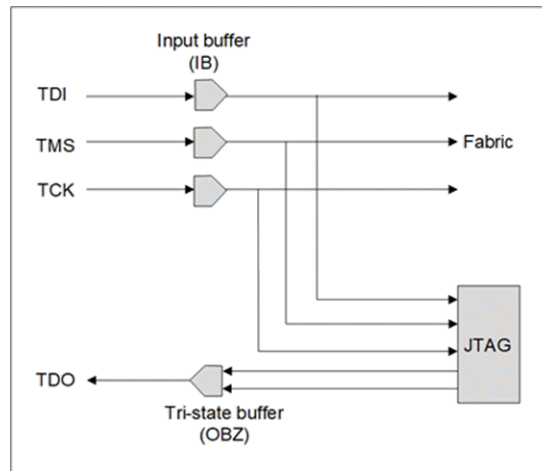

## JTAGMON Input and Output Ports

The following ports allow the primitive to sit inline with the JTAG chain, observing and potentially modifying or blocking signals.

The top level port names of the design connecting to the TDI, TCK, TMS ports of the JTAGMON primitive must be TDI, TCK, and TMS respectively. These can drive both JTAG ports and Fabric routing.

| Input Ports | Description                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TDI         | Test Data Input, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TDI pin.                                                             |
| TCK         | Test Clock, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TCK pin.<br><br>Clocks registers and TAP Controller.                      |
| TMS         | Test Mode Select, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TMS pin.<br><br>Controls state machine switching for TAP Controller |

| Output Ports | Description                    |
|--------------|--------------------------------|
| TDIO         | Monitored Test Data Out        |
| TCKO         | Monitored Test Clock Out       |
| TMSO         | Monitored Test Mode Select Out |

# JTAGMON Design Flow

This section details how JTAGMON is implemented in the design flow.

## 1. RTL Design Instantiation

The RTL design includes an instantiation of the JTAGMON primitive.

Top-Level Inputs: The JTAG interface signals—TDI (Test Data In), TMS (Test Mode Select), and TCK (Test Clock)—are exposed at the top level of the design.

Output Connections: The outputs of the JTAGMON primitive are connected to a soft IP block that monitors these signals. This soft IP could be used for debugging, test access, or signal analysis.

## 2. Synthesis Phase

In synthesis, the primitive is declared in the synthesis header file.

It uses:

- ▶ `syn_black_box` attribute to indicate it is a black box during synthesis.
- ▶ `black_box_pad_pin` to preserve pin names and prevent optimization.

During synthesis, the tool is configured not to infer input buffers (IBs) for the JTAG signals. This is to preserve the integrity of the JTAG path and allow for proper monitoring and routing.

This ensures that the JTAG signals remain unbuffered and directly accessible, which is critical for accurate signal observation and debugging.

## 3. Post-Synthesis / Mapping

JTAGMON Expansion: After synthesis and during the mapping phase, the JTAGMON primitive is expanded as input buffers using data from the post-synthesis .udb file.

## 4. Optional Merge with JTAGhub

Reveal Inserter automatically inserts the current JTAGhub (JTAGH25). If both JTAGH25 and JTAGMON are present, the merge tool combines them, ensuring compatibility and avoiding duplication.

This step ensures that all JTAG-related components are correctly interconnected and that the monitoring infrastructure is unified.

## 5. Place and Route (PAR)

During the Place and Route (PAR) stage, the tool ensures that the JTAG ports are correctly located on the physical device.


This includes assigning the correct I/O pads and ensuring signal integrity and timing closure for the JTAG interface.

## JTAGMON Use Cases

This section illustrates JTAGMON in JTAG process flows.


### Case 1. Pre-synthesis (Standalone)

The JTAGMON block monitors the JTAG signals before passing them on to the softIP.

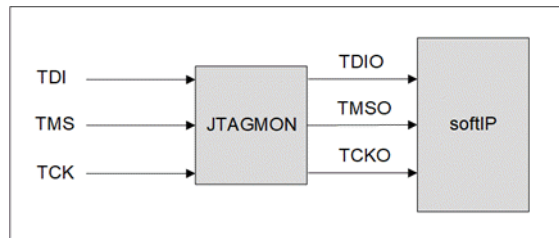


### Case 2. Post-synthesis (Standalone)

The Input Buffer acts as an intermediary stage that prepares the incoming JTAG signals for use by the softIP.

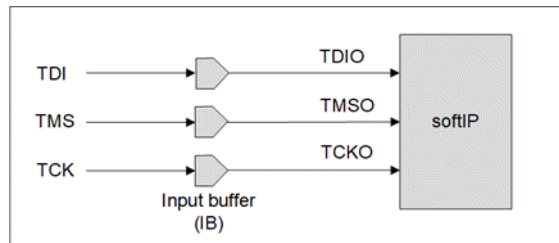


**Case 3. Pre-synthesis (Merge with JTAGH25)**

The diagram shows the two parallel JTAG signal processing flows, each targeting a different module. If both JTAGMON and JTAGH25 are present in the design, they are merged by the merge tool.

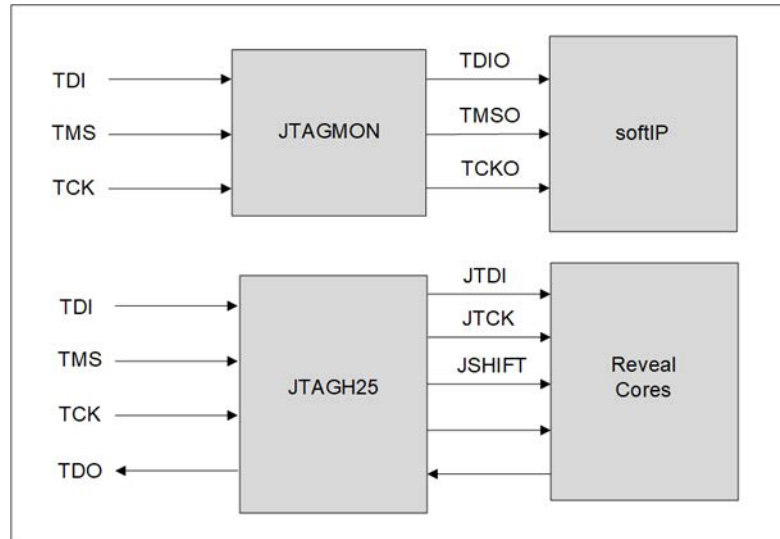**Case 4. Post-synthesis (Merge with JTAGH25)**

The signals first pass through the Input Buffer, which conditions them for further processing. The outputs are then sent to a softIP block and a JTAG block within the Reveal Cores. The JTAG block processes the signals and produces an output TDO.

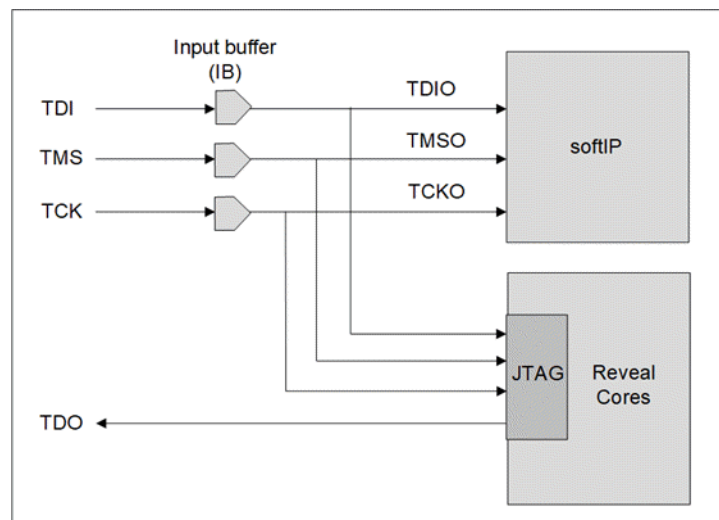

# Performing Logic Analysis with Reveal Analyzer

Once you have created one or more Reveal modules in Reveal Inserter, you can use Reveal Analyzer to capture the trace signal data from your evaluation board and view that data as waveforms. As you run your tests and start getting results, you can modify the trigger units and expressions and the use of the trace buffer to test other conditions.

## To perform logic analysis:

1. If you are working in a secured lab (without a network connection to the design project files), make a copy of the required files and install them in the lab computer. See [“Using Standalone Reveal Analyzer” on page 715](#).
2. Connect your evaluation board and program the FPGA. See [“Programming the FPGA” on page 717](#).
3. Start Reveal Analyzer by selecting **Create a new file** in the Reveal Analyzer Startup Wizard. See [“Starting Reveal Analyzer” on page 717](#).
4. Set up the trigger signals for each module that you want to use. See [“Setting Up the Trigger Signals” on page 721](#).
5. Capture data. See [“Capturing Data” on page 747](#).
6. View the resulting waveforms for each module. See [“Analyzing Trace Data in Waveform Format” on page 749](#).
7. Optionally, you can save the data in a Reveal Analyzer (.rva) file, a value change dump (.vcd) file for use in third-party tools, or in an ASCII text (.txt) file. See [“Saving the Reveal Analyzer Settings and Data” on page 760](#).

## To just view waveforms captured earlier:

1. Start Reveal Analyzer by selecting **Open an existing file** in the Reveal Analyzer Startup Wizard. See [“Starting Reveal Analyzer” on page 717](#).
2. View the waveforms. See [“Analyzing Trace Data in Waveform Format” on page 749](#).
3. Optionally, you can save the data in a Reveal Analyzer (.rva) file, a value change dump (.vcd) file for use in third-party tools, or in an ASCII text (.txt) file. See [“Saving the Reveal Analyzer Settings and Data” on page 760](#).

# Using Standalone Reveal Analyzer

The usual process of Reveal logic analysis assumes that you are performing logic analysis on the same computer on which you created the Reveal modules, or that you are using a computer on the same network with easy access to the files. However, if your evaluation system is in a secured lab that is off the network or if you are using multiple PCs to run Reveal and would like to avoid importing the entire project, it is ideal to use the standalone Reveal Analyzer and the standalone Programmer.

You can download 64-bit versions of the standalone Reveal Analyzer installers from the Lattice website. These are available in <http://>

[www.latticesemi.com/Latticeradiant](http://www.latticesemi.com/Latticeradiant) under **Software Downloads & Documentation**.

- ▶ Reveal Standalone <version> 64-bit for Linux
- ▶ Reveal Standalone <version> 64-bit for Windows

Some documents and downloads may not be visible to anonymous visitors. To view all items, please log in to your Lattice account.

To start the standalone Reveal Analyzer:

- ▶ In Windows, go to the Windows Start menu and choose **Programs > Lattice Radiant Reveal <version> >  Radiant Reveal Logic Analyzer**.
- ▶ In Linux, go to a command line and enter the following: *<Reveal install path>/bin/linux64/revealrva*.

To perform logic analysis, copy the files needed to program the FPGA and to run Reveal Analyzer over to the lab computer. After you finish collecting trace data, you may want to copy settings or the trace data to bring them out of the lab.

The files you need to run Reveal Analyzer in the lab are:

- ▶ Reveal project (.rvl) file produced by Reveal Inserter. This is the defining file for a Reveal project and its modules. The .rvl file identifies the trace and trigger signals, and stores the trace and trigger options.
- ▶ Reveal settings (.rvs) file produced by Reveal Inserter. This file contains settings that can be changed in Reveal Analyzer while running tests. These settings include important parts of trigger units and trigger expressions.
- ▶ Bitstream (.bin or .hex) file produced by the Export Files stage of the design implementation process. This file is required to program the FPGA.
- ▶ Programmer (.xcf) scan chain configuration file is generated by Programmer for programming devices in a JTAG daisy chain. It contains information about each device, the data files targeted, and the operations to be performed. The .xcf file must reside in the design project directory for Reveal Analyzer to use it.

### Files to Bring Back:

After collecting data with Reveal Analyzer, you may want to bring one or more files back from the lab either to update the Reveal project or to analyze the data somewhere else.

If you made changes to the settings for trigger units or trigger expressions in Reveal Analyzer and want to update the project in Reveal Inserter with them, copy the .rvs file.

To analyze the trace data outside the lab using Reveal Analyzer's LA Waveform view, choose **File >  Save <file>** and copy the following two files:



- ▶ Reveal Analyzer (.rva) file defines the Reveal Analyzer project. This file also contains data about the display of signals in the LA Waveform view.
- ▶ Reveal Trace (.trc) file contains data recorded from the last test run. This file loads Reveal Analyzer's LA Waveform view.

To analyze the trace data outside the lab using another tool, save the data as either a value change dump (.vcd) or text (.txt) file and copy that file. See [“Saving to Other Formats” on page 761](#).

## Programming the FPGA

For an evaluation board using a single FPGA, program the FPGA in the usual way.

For an evaluation board using multiple FPGAs in a JTAG daisy chain, Reveal Analyzer has the following requirements:

- ▶ Only one device can be debugged at a time.
- ▶ The .xcf file must be in the design project directory.

### To program an FPGA with a Reveal module in a daisy chain:

1. In Programmer, double-click the device row to open the Device Properties dialog box.
2. For non-target devices that should not be programmed, choose **Bypass** in the Operation pulldown menu and click **OK**.  
For the target FPGAs, choose **Fast Configuration**.
3. Assign the data file for the device.
4. Click **OK**.

For an FPGA that contains its own SPI flash, flash programming is also an option.

### See Also

- ▶ [“Programming the FPGA” on page 447](#)

## Starting Reveal Analyzer

Before starting Reveal Analyzer you need to decide if you want to work with a new Reveal Analyzer (.rva) file or an existing one. The .rva file defines the Reveal Analyzer project and contains data about the display of signals in the LA Waveform view. You may want to start Reveal Analyzer with a new file to set up a new test. Start with an existing file to rerun a test, to set up a new test based on existing settings, or to just view the waveforms from an earlier test.

How you start Reveal Analyzer also depends on whether you are using it integrated with the Radiant software or using the standalone version, and on your operating system.

## Starting with a New File

Before you can start Reveal Analyzer with a new .rva file, you need to be connected to your evaluation board with a download cable and have the board's power turned on. The following steps can also be seen in Figure 30

### To start Reveal Analyzer with a new file:

1. Issue the start command.
  - ▶ For the version that is integrated with the Radiant software, go to the Radiant software main window and choose **Tools >  Reveal Analyzer**.
  - ▶ For the standalone version, see [“Using Standalone Reveal Analyzer” on page 715](#)

The Reveal Analyzer Startup Wizard dialog box appears.


2. If Reveal Analyzer opens with an existing file, choose **File > Save As**.

The Save Reveal Analyzer File dialog box opens. Change the filename and click **Save**. You now have a new .rva file ready to work with.

3. In the Reveal Analyzer Startup Wizard dialog box, Select **Create a new file** (at the upper-left of the dialog box).


The dialog box presents a few rows of boxes that need to be filled in. In the figure below, the numbers match up with the steps in this procedure and show where the boxes, buttons, and menus are for each step.

**Figure 30: Startup Wizard with Steps for a New File**

 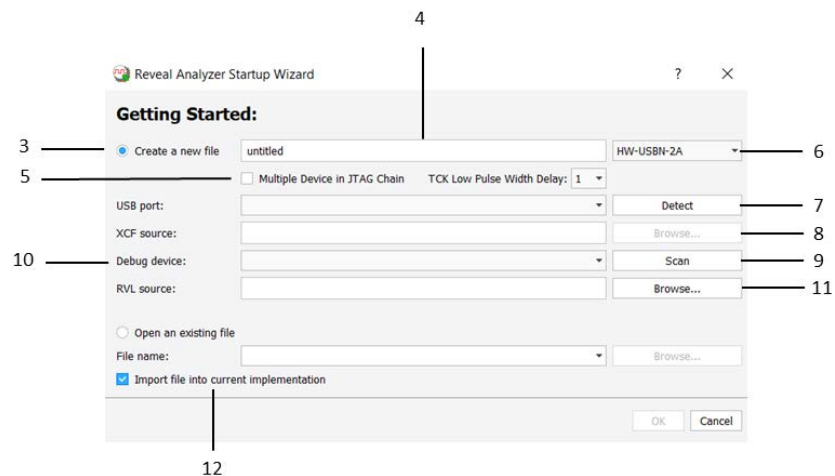


4. In the first second row, type in the base name of the file. The extension is added automatically.
5. If there are daisy-chained devices, select **Multiple Device in JTAG Chain**.

6. To the right of this row is a pulldown menu. Choose the type of cable that your board is connected to.
7. Select the port. The method depends on the cable type:
  - ▶ If USB, click **Detect**. Then choose from the active ports found. The following figure shows the row after choosing a USB type.

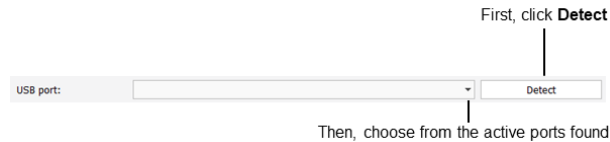

- ▶ If parallel, select the port address. If it's not one of the standard addresses given, select **0x** and type in the hexadecimal address. Then click **Check** to verify that the connection is working. The following figure shows the row after choosing a parallel type.



8. If there are daisy-chained devices, click **Browse** in the XCF source row to find the XCF source file.
9. Click **Scan** to find the FPGA.
10. If there is more than one FPGA on your board, go to the “Debug device” menu and choose one that has a Reveal  icon. The icon indicates the presence of a Reveal module.
11. Click **Browse** in the RVL source row to find the Reveal Inserter project (.rvl) file.
12. To add the new .rva file to the File List view, select **Import file into current implementation**. The .rva file works the same either way.
13. Click **OK**.

### See Also

- ▶ [“Creating a New Source File” on page 26](#)

## Starting with an Existing File

If you want to start with an existing file, you just need to have that .rva file in the design project. You need to be connected to the evaluation board only if you want to run a test and capture data.

### To start Reveal Analyzer with an existing file:

1. Issue the start command.
  - ▶ In the Radiant software main window, choose **Tools >  Reveal Analyzer**.


- ▶ For the standalone version, see [“Using Standalone Reveal Analyzer” on page 715](#)

The Reveal Analyzer Startup Wizard dialog box appears.

If Reveal Analyzer opens with the .rva file you want to use, you’re ready to go. Otherwise continue with the following steps.

2. In the Reveal Analyzer Startup Wizard dialog box, elect **Open an existing file** (in the lower part of the dialog box). See Figure 31.

**Figure 31: Existing File Part of Startup Wizard**

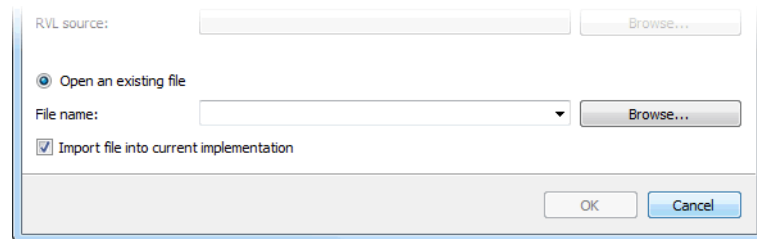

3. In the “File name” box, choose one of the available .rva files.
4. If the file you want is not in the menu, click **Browse** and browse to the desired .rva file.
5. To add the .rva file to the File List view, select **Import file into current implementation**. The .rva file works the same either way.
6. Click **OK**.

If the connection to your evaluation board has changed, either in the cable type or the computer port used, you need to tell Reveal Analyzer about the new connection. See [“Changing the Cable Connection” on page 720](#).

## Changing the Cable Connection

If you need to change how your evaluation board is connected to your computer, go ahead and make the change. Then go through the following procedure to change the Reveal Analyzer project.

### To change the cable setting in a Reveal Analyzer project:

1. Make sure your evaluation board is connected and that its power is on.
2. If Reveal Analyzer is not already open, start it as described in [“Starting with an Existing File” on page 719](#).

3. Choose **Design > Cable Connection Manager**.

The Cable Connection Manager dialog box opens.

4. In the dialog box, choose the cable type.

The second row in the dialog box changes to select the specific port.

5. Select the specific port. The method depends on the port type:
  - ▶ If USB, click **Detect**. Then choose from the active ports found.
  - ▶ If parallel, select the port address. If it's not one of the standard addresses given, select **0x** and type in the hexadecimal address. Then click **Check** to verify that the connection is working.
6. To change the clock speed of the cable connection, adjust the value of TCK Low Pulse Width Delay.
7. Click **OK**.

## Setting Up the Trigger Signals

In Reveal Analyzer, you cannot create new trigger units or trigger expressions, but you can change how they are named and defined. In trigger units, you can change the operators, radices, and values. In trigger expressions, you can change the expression including the operators and which trigger units are used. You can also modify some of the trigger options and the trigger position.

### To modify the trigger of a module.

1. Click on the **LA Trigger** tab.
2. Choose the module from the pulldown menu in the Reveal Analyzer toolbar.

The definition of the module's trigger units and trigger expressions appear. Grayed out cells and options cannot be changed in Reveal Analyzer. To change them, you must go back to Reveal Inserter.

3. Modify the trigger units as desired. If you want to change:
  - ▶ Operator: Choose an operator from the pulldown menu. You cannot change or select serial compare in Reveal Analyzer. See ["About Trigger Unit Operators" on page 722](#).
  - ▶ Radix of the value: Choose a radix from the pulldown menu. The menu includes token sets whose bit width matches the trigger unit's signals.
  - ▶ Value: Select it and type in a new comparison value. The form of the value must match the specified radix. If you selected a token set in the Radix column, a pulldown menu opens in the Value column listing the tokens in the token set.

You can use "x" for a don't-care value if you selected binary, octal, or hexadecimal in the Radix column and if you selected ==, !=, or serial compare in the Operator column.

4. Modify the trigger expressions as desired. Trigger expressions can be completely rewritten provided that you do not exceed the maximum sequence depth or the maximum event counter. See ["Trigger Expression Syntax" on page 723](#).
5. In the Trigger Expression Name column, select the trigger expressions that you want to use in the next test.

6. In the POR Debug section, if you wish to connect POR when Analyzer opens, click the **Connect POR when Analyzer opens** check box.
7. In the Trigger Options section, at Enable TE, choose how to combine the selected trigger expressions to form the trigger event:
  - ▶ **AND All** means that all of the trigger expressions must be satisfied to form the trigger event.
  - ▶ **OR All** means that only one of the trigger expressions must be satisfied to form the trigger event.
8. If you want the trigger event, as specified in the Enable TE option, to happen more than once before capturing trace data, select **Final Event Counter** in the Trigger Position section, and then specify the number of times the event is to happen to produce the actual trigger on the trigger signal. This option is available only if the event counter was enabled for the module in Reveal Inserter.
9. In the Trigger Options section, specify the number of samples per trigger and the number of triggers you want to record. The number of samples multiplied by the number of triggers cannot be greater than the trace buffer depth that was specified in Reveal Inserter. Reveal Analyzer adjusts the values when needed.
10. In the Trigger Position section, specify the trigger position relative to the trace data. The numbers in the section title show the current position. For example, "8/128" means the trigger happens on sample 8 out of the 128 samples per trigger. Select either:
  - ▶ **Pre-selected** and choose one of the standard positions:
    - ▶ Pre-Trigger: 1/16 of the way from the beginning of the samples.
    - ▶ Center-Trigger: 1/2 of the way from the beginning of the samples.
    - ▶ Post-Trigger: 15/16 of the way from the beginning of the samples.
  - ▶ **User-selected** and choose a position with the slider.

It should be noted that for each of the Pre-, Center- and Post-Trigger samples, a user is only guaranteed to see the waveforms from that point on. For example if you choose Post-Trigger (15/16), then a user will only see the sample waveforms for the last 1/16 of 256 sample data.

## About Trigger Unit Operators

Most of the trigger unit operators use standard logical comparisons between the current value of the combined signals of the trigger unit and a specified value. But some of the operators are unusual and need some explanation.

With the exception of "serial compare," the operators can be changed in Reveal Analyzer. Refer to ["Serial Compare" on page 723](#) for more information.

### Standard Logical Operators

Reveal includes the following operators:

- ▶ == equal to
- ▶ != not equal to
- ▶ > greater than
- ▶ >= greater than or equal to
- ▶ < less than
- ▶ <= less than or equal to

### Rising-Edge and Falling-Edge Operators

The “rising edge” and “falling edge” operators check for change in the signal value, not the value itself. So the trigger unit’s specified value is a bit mask showing which signals should have a rising or falling edge. A 1 means “look for the edge;” a 0 means “ignore this bit.” A multiple-bit value is true if any of the specified bits have the edge.

For example, consider a trigger unit defined as `cout[3:0]`, rising edge, 1110. This trigger unit will be true only when `cout[3]`, `cout[2]`, or `cout[1]` have a rising edge. What happens on `cout[0]` does not matter.

- ▶ 0000 > 1110  
True because `cout[3]`, `cout[2]`, and `cout[1]` rose.
- ▶ 0000 > 1111  
True for the same reason. It does not matter whether `cout[0]` rises or not.
- ▶ 0000 > 0100  
True because a rising edge on any of the specified bits is sufficient.
- ▶ 1000 > 1000  
False because `cout[3]` did not rise. It just stayed high.

### Serial Compare

The “serial compare” operator checks for a series of values on a single signal. For example, if a trigger unit’s specified value is 1011, the “serial compare” operator looks for a **1** on the first clock, a **0** on the second clock, a **1** on the third clock, and a **1** on the last clock. Only after those four conditions are met in the four clock cycles is the trigger unit true.

Serial compare is available only when a single signal is listed in the trigger unit’s signal list. The radix is automatically binary.

You can only set the serial compare operator in Reveal Inserter. You cannot change or select it in Reveal Analyzer as you can the other operators.

## Trigger Expression Syntax

Trigger expressions are combinations of trigger units. Trigger units can be combined in combinatorial, sequential, and mixed combinatorial and sequential patterns. A trigger expression can be dynamically changed at any

time. Each core supports up to 16 trigger expressions that can be dynamically enabled or disabled in Reveal Analyzer. Trigger expressions support AND, OR, XOR, NOT, parentheses (for grouping), THEN, NEXT, # (count), and ## (consecutive count) operators. Each part of a trigger expression, called a sequence, can also be required to be valid a number of times before continuing to the next sequence in the trigger expression.

### Detailed Trigger Expression Syntax

Trigger expressions in both Reveal Inserter and Reveal Analyzer use the same syntax.

#### Operators

You can use the following operators to connect trigger units:

- ▶ & (AND) – Combines trigger units using an AND operator.
- ▶ | (OR) – Combines trigger units using an OR operator.
- ▶ ^ (XOR) – Combines trigger units using a XOR operator.
- ▶ ! (NOT) – Combines a trigger unit with a NOT operator.
- ▶ Parentheses – Groups and orders trigger units.
- ▶ THEN – Creates a sequence of wait conditions. For example, the following statement:

```
TU1 THEN TU2
```

means “wait for TU1 to be true, then wait for TU2 to be true.”

The following expression:

```
(TU1 & TU2) THEN TU3
```

means “wait for TU1 and TU2 to be true, then wait for TU3 to be true.”

Reveal supports up to 16 sequence levels.

See [“Sequences and Counters” on page 685](#) for more information on THEN statements.

- ▶ NEXT – Creates a sequence of wait conditions, like THEN, except the second trigger unit must come immediately after the first. That is, the second trigger unit must occur in the next clock cycle after the first trigger unit. See [“Sequences and Counters” on page 685](#) for more information on NEXT statements.
- ▶ # (count) – Inserts a counter into a sequence. See [“Sequences and Counters” on page 685](#) for information on counters.
- ▶ ## (consecutive count) – Inserts a counter into a sequence. Like # (count) except that the trigger units must come in consecutive clock cycles. That is, one trigger unit immediately after another with no delay between them. See [“Sequences and Counters” on page 685](#) for information on counters.

#### Case Sensitivity

Trigger expressions are case-insensitive.



## Spaces

You can use spaces anywhere in a trigger expression.

## Sequences and Counters

Sequences are sequential states connected by THEN or NEXT operators. A counter counts how many times a state must occur before a THEN or NEXT statement or at the end of the sequence. The maximum value of this count is determined by the Max Event Counter value. This value must be specified in Reveal Inserter and cannot be changed in Reveal Analyzer.

Here is an example of a trigger expression with a THEN operator:

```
TU1 THEN TU2
```

This trigger expression is interpreted as “wait for TU1 to be true, then wait for TU2 to be true.”

If the same example were written with a NEXT operator:

```
TU1 NEXT TU2
```

it is interpreted as “wait for TU1 to be true, then wait *one clock cycle* for TU2 to be true.” If TU2 is not true in the next clock cycle, the sequence fails and starts over, waiting for TU1 again.

The next trigger expression:

```
TU1 THEN TU2 #2
```

is interpreted as “wait for TU1 to be true, then wait for TU2 to be true for two sample clocks.” TU2 may be true on consecutive or non-consecutive sample clocks and still meet this condition.

The following statement:

```
TU1 ##5 THEN TU2
```

means that TU1 must occur for five consecutive sample clocks before TU2 is evaluated. If there are any extra delays between any of the five occurrences of TU1, the sequence fails and starts over.

The next expression:

```
(TU1 & TU2) #2 THEN TU3
```

means “wait for the second occurrence of TU1 and TU2 to be true, then wait for TU3.”

The last expression:

```
TU1 THEN (1) #200
```

means “wait for TU1 to be true, then wait for 200 sample clocks.” This expression is useful if you know that an event occurs a certain time after a condition.

You can only use one count (# or ##) operator per sequence. For example, the following statement is not valid, because it uses two counts in a sequence:

```
TU1 #5 & TU2 #2
```

Multiple count values are allowed for a single trigger expression, but only one per sequence. For two count operators to be valid in a trigger expression, the expression must contain at least one THEN or NEXT operator, as in the following example:

```
(TU1 & TU2) #5 THEN TU2 #2
```

This expression means “wait for TU1 and TU2 to be true for five sample clocks, then wait for TU2 to be true for two sample clocks.”

Also, the count operator must be applied to the entire sequence expression, as indicated by parentheses in the expression just given. The following is not allowed:

```
TU1 #5 & TU2 THEN TU2 #2
```

The count (#) operator cannot be used as part of a sequence following a NEXT operator. A consecutive count (##) operator may be used after a NEXT operator, however. The following is not allowed:

```
TU1 NEXT TU2 #2
```

The count (# or ##) operators can only be used in one of two areas:

- ▶ Immediately after a trigger unit or parentheses(). However, if the trigger unit is combined with another trigger unit without parentheses, a # cannot be used.
- ▶ After a closing parenthesis.

## Precedence

The symbols used in trigger expression syntax take the following precedence:

- ▶ Because it inserts a sequence, the THEN and NEXT operators always take the highest precedence in trigger expressions.
- ▶ Between THEN or NEXT statements, the order is defined by parentheses that you insert. For example, the following trigger expression:

```
TU1 & (TU2|TU3)
```

means “wait for either TU1 and TU2 or TU1 and TU3 to be true.”

If you do not place any parentheses in the trigger expression, precedence is left to right until a THEN or NEXT statement is reached.

For example, the following trigger expression:

```
TU1 & TU2|TU3
```

is interpreted as “wait for TU1 & TU2 to be true or wait for TU3 to be true.”

- ▶ The precedence of the ^ operator is same as that of the & operator and the | operator.

- ▶ The logic negation operator (!) has a higher precedence than the ^ operator, & operator, or | operator, for example:

```
!TU1 & TU2
```

means “not TU1 and TU2.”

- ▶ The # and ## operators have the same precedence as the ^ operator, & operator, or | operator. However, they can only be used in one of two areas:

- ▶ Immediately after a trigger unit or trigger units combined in parentheses. However, if the trigger unit is combined with another trigger unit without parentheses, a # or ## operator cannot be used.

Here is an example of correct syntax using the count (#) operator:

```
TU1 #2 THEN TU3
```

This statement means “wait for TU1 to be true for two sample clocks, then wait for TU3.”

However, the following syntax is incorrect, because the count operator is applied to multiple trigger units combined without parentheses:

```
TU1 & TU2#2 THEN TU3
```

- ▶ After a closing parenthesis. Use parentheses to combine multiple trigger units and then apply a count, as in the following example:

```
(TU1 & TU2) #2 THEN TU3
```

This statement means “wait for the combination of TU1 and TU2 to be true for two sample clocks, then wait for TU3.”

### See Also

- ▶ [“Example Trigger Expressions” on page 727](#)

## Example Trigger Expressions

The following is a series of examples that demonstrate the flexibility of trigger expressions.

### Example 1: Simplest Trigger Expression

Following is the simplest trigger expression:

```
TU1
```

This trigger expression is true, causing a trigger to occur when the TU1 trigger unit is matched. The value and operator for the trigger unit is defined in the trigger unit, not in the trigger expression.

### Example 2: Combinatorial Trigger Expression

An example of a combinatorial trigger expression is as follows:

```
TU1 & TU2 | TU3
```

This trigger expression is true when (TU1 and TU2) or TU3 are matched. If no precedence ordering is specified, the order is left to right.

### **Example 3: Combinatorial Trigger Expression with Precedence Ordering**

In the following example of a combinatorial trigger expression, precedence makes a difference:

TU1 & (TU2 | TU3)

This trigger expression gives different results than the previous one. In this case, the trigger expression is true if (TU1 and TU2) or (TU1 and TU3) are matched.

### **Example 4: Simple Sequential Trigger Expression**

The following is an example of a simple sequential trigger expression:

TU1 THEN TU2

This trigger expression looks for a match of TU1, then waits for a match on TU2 a minimum of one sample clock later. Since this expression uses a THEN statement, it is considered to have multiple sequences. The first sequence is "TU1," since it must be matched first. The second sequence is "TU2," because it is only checked for a match after the first sequence has been found. The "sequence depth" is therefore 2.

The sequence depth is an important concept to understand for trigger expressions. Since the debug logic is inserted into the design, logic must be used to support the required sequence depth. Matching the depth to the entered expression can be used to minimize the logic. However, if you try to define a trigger expression that has a greater sequence depth than is available in the FPGA, an error will prevent the trigger expression from running. The dynamic capabilities of the trigger expression can therefore be limited. To allow more flexibility, you can specify the maximum sequence depth when you set up the debug logic in Reveal Inserter. You can reserve more room for the trigger expression than is required for the trigger expression currently entered. If you specify multiple trigger expressions, each trigger expression can have its own maximum sequence depth.

### **Example 5: Mixed Combinatorial and Sequential Trigger Expressions**

Here is an example showing how you can mix combinatorial and sequential elements in a trigger expression:

TU1 & TU2 THEN TU3 THEN TU4 | TU5

This trigger expression only generates a trigger if (TU1 AND TU2) match, then TU3 matches, then (TU4 or TU5) match. You can set precedence for any sequence, but not across sequences. The expression (TU1 & TU2) | TU3 THEN TU4 is correct. The expression (TU1 & TU2 THEN TU3) | TU4 is invalid and is not allowed.

**Example 6: Sequential Trigger Expression with Sequence Counts** The next trigger expression shows two new features, the sequence count and a true operator to count sample clocks:

`(TU1 & TU2)#2 THEN TU3 THEN TU4#5 THEN (1)#200`

This trigger expression means wait for (TU1 and TU2) to be true two times, then wait for TU3 to be true, then wait for TU4 to be true five times, then wait 200 sample clocks. The count (# followed by number) operator can only be applied to a whole sequence, not part of a sequence. When the count operator is used in a sequence, the count may or may not be contiguous. The always true operator (1) can be used to wait or delay for a number of contiguous sample clocks. It is useful if you know that an event that you want to capture occurs a certain time after a condition but you did not know the state of the trigger signals at that time.

However, there is a limitation on the maximum size of the counter. This depends on how much hardware is reserved for the sequence counter. When you define a trigger expression, the Max Event Counter setting in the Trigger Expression section of Reveal Inserter and Reveal Analyzer specifies how large a count value is allowed in the trigger expression. Each trigger expression can have a unique Max Event Counter setting.


#### See Also

► [“Trigger Expression Syntax” on page 723](#)

## Creating Token Sets

You can create sets of “tokens,” or text labels, for values that might appear on trace buses. You can create tokens such as ONE, TWO, THREE, or Reset, Boot, and Load. Tokens can make reading the waveforms in Reveal Analyzer easier and can highlight the occurrence of key values. See Figure 32 for an example. The row for the chstate bus uses tokens.

**Figure 32: LA Waveform View Using Tokens**

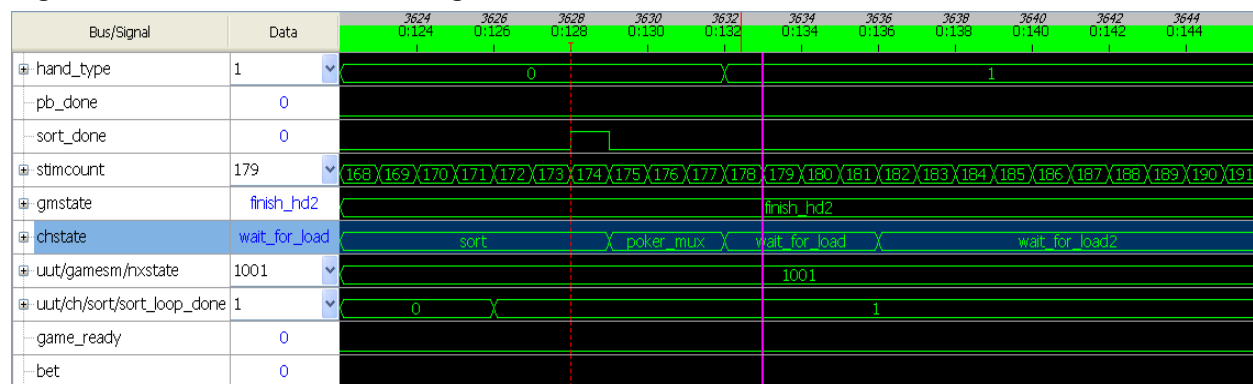

**To create or modify a token set:**

1. Choose **Design > Token Set Manager**.

The Token Manager dialog box opens. If the Reveal project already has token sets defined, they are listed in the dialog box.

2. If you want to use token sets that were previously saved to a separate file, right-click in the dialog box and choose **Import**. In the Import Tokens dialog box, browse to the token (.rvt) file and click **Open**.

The token sets in the .rvt file are added to the list in Token Manager.

3. To create a new token set, click **Add Set**.

A new token set is started with default values. But it has no tokens defined yet.

4. To change the size of the token values, double-click the value in the Num. of Bits column and type in the new width (up to 256) in bits. The width must be the same as the bus that the token set will be used with.

The Num. of Bits value can only be changed when the token set is empty. If there are any tokens, you will get an error message.

5. To create a new token, select a token set. Then click **Add Token**.

A new token is created with default values. Repeat for as many new tokens as needed.

6. You can modify token sets by doing any of the following:

- ▶ To change the name of a token or token set, double-click the name and type a new name. The name can consist of letters, numbers, and underscores (\_). It must start with a letter.
- ▶ To change the value of a token, double-click the value and type in a new value. Token values must be prefixed by one of the radix indicators shown in the following table:

| Radix       | Prefix | Example |
|-------------|--------|---------|
| Binary      | b'     | b'110x0 |
| Octal       | o'     | o'53    |
| Decimal     | d'     | d'123   |
| Hexadecimal | h'     | x'0F2   |

If a value does not have a prefix, its radix is assumed to be binary. You can use an "x" in binary numbers as a don't-care value.

- ▶ To remove a token or token set, select it and click **Remove**.
7. You can save the collection of token sets showing in the dialog box to a separate file for use in another project. To save the token sets, right-click and choose **Export**. In the Export Tokens dialog box, browse to the desired location and type in the name of the new token (.rvt) file. Click **Save**.
  8. When you are done, click **Close** to close the dialog box. The token sets are automatically applied to the current Reveal project.

## Debugging with Reveal Controller

Reveal Controller is another divide-and-conquer mechanism for you to emulate an otherwise unavailable environment for power debug. For example, your evaluation board would only have a limited number of LEDs or switches but the virtual environment enables up to 32 bits. Register memory mapping and dumping of values is also easily manifested while visibility into Hard IPs is also enabled.


### Note

During a debug session with Controller, the constant polling of the signals ties up the JTAG ports for other operations such as attempting to program an updated bitstream as a parallel operation. You must end the debugging session first.

## Virtual LED/Switch Console

Once Reveal Analyzer is set up and started, you are presented with three tabs, the first of which is a virtual LED/Switch console to emulate the board.

**Figure 33: Virtual LED/Switch**

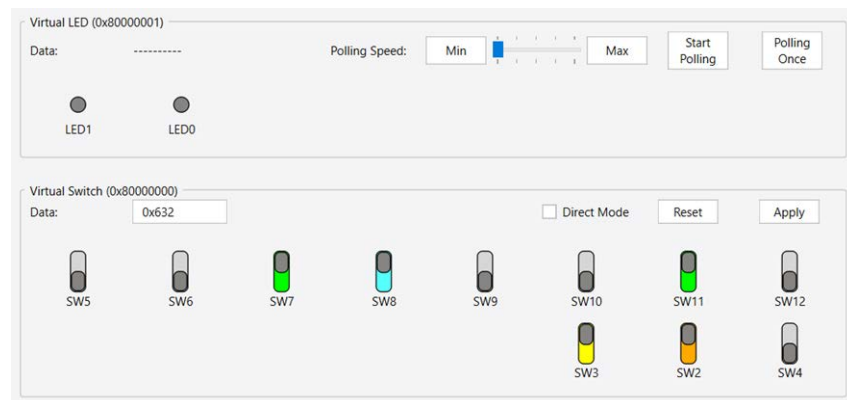

The top section, Virtual LED, shows all the LEDs that were defined in the insertion stage. Once the board is running, you can see the LEDs flash in red and green as they would in the real hardware environment. You can click the Min and Max buttons to adjust polling speed.

The lower section shows the virtual switch in which you can either enter the data as a hex value or can set the virtual dip switches.

You can assign the colors of LEDs and switches in the Reveal Inserter Switch List and LED List tables. See [“Assigning Colors to Virtual Switch/LED Signals” on page 692](#).

Select Direct Mode to see the data and switches in real time instead of waiting until the Apply button is clicked.

### Note

Switches are of type in/out. When defining switches in RTL, use the WIRE definition otherwise multiple input driver errors will be encountered later in the flow.

---

## User Memory Analysis

The second tab is for User Memory Analysis. The title indicates the range of the User Memory map. Analysis follows no particular steps or order.

- ▶ Default Data: A value that will initialize all memory locations.
- ▶ Write Address/Data: Address and data in hex to be written.
- ▶ Read Address/Data: Enter address. The data is read back when 'Read' is selected.
- ▶ Memory File: You can dump from/to a range of memory addresses to a .mem file. A user can also **Load MemFile** to load a pre-configured memory file.

## Running User Control Register

1. In the **User Control Register** tab, select a label from the **Name** column, then click the **Rd** button.

User Control Register reads the value of the corresponding address location and executes the following TCL command:


```
rva_run_controller -read_control "label"
```

2. Select a label from the Name column.
3. In the **WR Value** column, do the following:
  - a. Enter desired value.
  - b. Click the **Wr** button.

User Control Register executes the following TCL command:

```
rva_run_controller -write_control "label" -data value
```



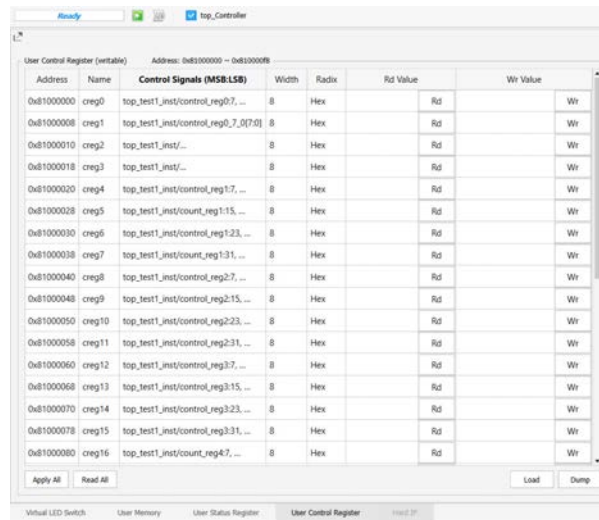


- Double-click a row in the **Control Signals** column to display the list of signals with their corresponding value.
- In the User Control Register tab, click the **Apply All** button to apply the value of all address locations assigned by the Name column and execute multiple TCL commands sequentially.
- Click the **Read All** button to read the value of all address locations assigned by the Name column and execute multiple TCL commands sequentially.
- Click the **Load** button to load the value from the register file to all address locations of Control Register.
- Click the **Dump** button to save the value of all address locations to a register file.

## Running User Status Register

- In the **User Status Register** tab, select a label from the **Name** column, then click the **Rd** button.

User Status Register reads the value of the corresponding address location and executes the following TCL command:

```
rva_run_controller -read_status "label"
```

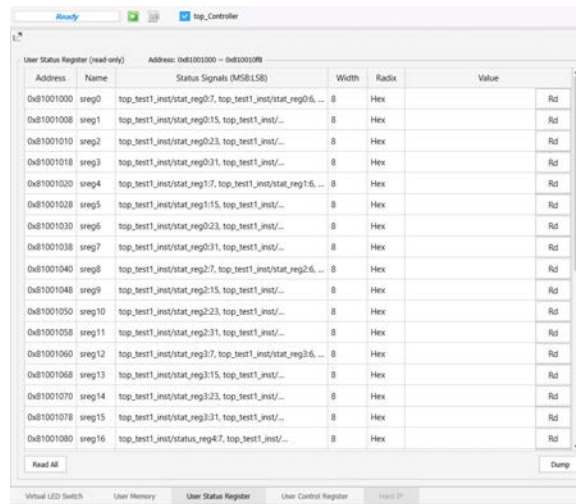

- On the bottom left corner, click the **Read All** button.

The Read All button reads the value of all address locations assigned by the Name column and executes multiple TCL commands sequentially.

- On the bottom right corner, click the **Dump** button.

The Dump button saves the value of all address locations to a register file.

- Double-click a row in the **Status Signals** column to display the list of signals with their corresponding value.

## Hard IP Debug

All the IP selected for analysis in Reveal Inserter are displayed here.

Main operations are reading/writing to memory locations.

### Note


The detail settings of each IP is beyond the scope of this help. Links will be provided to Application Notes to explain its usage.

## Debugging Nexus PCS/SerDes

Radiant supports PCS/SerDes debugging for devices built on the Nexus platform such as CertusPro-NX.

To debug Nexus PCS/SerDes:

1. Use the Reveal Inserter tool to add controller cores to the design. These cores allow writing and reading the control and status registers and change the parameters for PCS/Serdes operations.
2. If your design has a hard IP, the Hard IP Setup tab displays all your hard IPs. Under the Enable column, click the check box of an IP to enable the debug function.

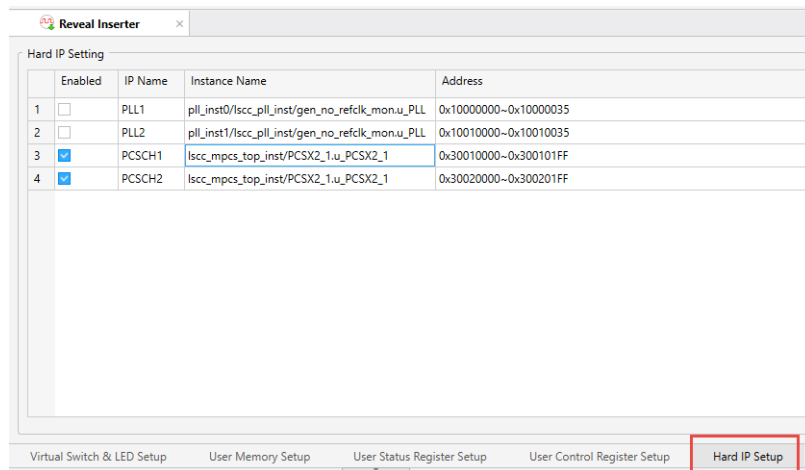

3. Generate the updated bitstream with the inserted debug cores and program the device.
4. Open Reveal Analyzer/Controller and connect to the programmed device through USB/JTAG.

5. In the Hard IP tab, you will see the instantiated hard IP blocks on the Nexus device. Scroll to the IP core to debug..

PCSCH1

Address (0x30010000 ~ 0x300101FF)

Instance Hierarchy: lsc\_mpcs\_top\_inst/PCSX2\_1.u\_PCSX2\_1

**Eye-Opening Monitor...**

**Transmit Settings**

Differential Amplitude: 0mV

Output Termination: 100 ohm

Tx Post-Cursor Ratio: 0

Tx Pre-Cursor Ratio: 0

Invert Tx Data Polarity: off

Tx PLL Loss of Lock Status: unlocked

**Receive Settings**

Input Termination: 100 ohm

Rx EQ: SS\_LMS 2.5GT/s

Invert Rx Data Polarity: off

CDR Loss of Lock Status: unlocked

Data Loss of Lock Status: unlocked

**Loopback Mode Settings** Note: The "Reload" function will not update th

Loopback Mode: Disabled

**Serdes/PCS Reset**

MPCS Tx Reset: off

MPCS Rx Reset: off

PMA Tx Reset: off

PMA Rx Reset: off

PMA Tx HiZ: off

PMA Rx HiZ: off

Apply Reload

Write Address: 0x30010000

Write Data: 0x0 Write

Read Address: 0x30010000

Read Data: Read

Dump From (Offset): 0x00000000 Range: Dump

Dump MemFile: Load

Load MemFile: Load

Virtual LED Switch User Memory User Status Register User Control Register **Hard IP**

6. Set the control parameters and click the **Apply** button.
7. Run your design.
8. Analyze the captured data. You can modify settings if allowed.

Click the **Eye Opening Monitor** button to view a graphical eye diagram that details the signal eye width and height. See [“Running Reveal Eye-Opening Monitor” on page 743](#).

## Debugging Avant with SerDes Toolkit

In designs using Avant MPPHY module, Radiant supports SerDes debugging using the SerDes toolkit. This feature allows you to evaluate and debug the performance of transceivers. It generates and checks data patterns to measure the bit error rate (BER), which helps in identifying signal integrity issues. In Reveal Inserter, set up hard IP by clicking the Hard IP Setup tab and then select functions by enabling check boxes.

You can test and validate transceiver links. You can verify that the transceivers are functioning correctly and can handle the data rates required in your design. By analyzing the BER, you can identify and diagnose issues such as signal degradation, noise, or incorrect settings. You can also optimize transceiver configurations by adjusting various transceiver parameters.

SerDes toolkit features:

- ▶ Real-time access to transceiver settings. This allows you to monitor and modify the settings of the transceiver on-the-fly while the system is running.
  - ▶ Adjust Parameters: Use different transceiver and clocking topologies. Change settings such as pre-emphasis, equalization, and data rate in real-time to see how they affect the signal quality.
  - ▶ Optimize Performance: Fine-tune the transceiver settings to achieve the best possible performance for your specific board configuration.
  - ▶ Troubleshoot Issues: Quickly identify and resolve issues by making adjustments and immediately observing the impact on the link quality.
- ▶ Sweep testing. Automate the process of testing various settings to find the optimal configuration. The AutoSweep feature with interval-stepping capability allows quick testing of many combinations of physical medium attachment (PMA) analog settings to find the optimal setting for a particular transceiver link.

---

### Note

You can capture Eye Diagram data while auto-sweeping the PMA settings.

---

- ▶ Data pattern generators and checkers select transceiver.
- ▶ Multiple different PRBS (Pseudo-Random Binary Sequence) and clock patterns transmitted over the channels.
- ▶ Channel manager interface monitor and track status while testing multiple channels simultaneously.
- ▶ Running link tests between multiple devices across one or more boards.
- ▶ Save and Load capability that enables comparison of different sets of signal integrity results including the eye diagram. This capability enables customers to compare the signal integrity results for different PMA settings.

After the device is programmed, SerDes Toolbox, TX, and RX settings are displayed in the Hard IP tab of the Reveal Controller interface.



Clicking the **Read** button of a specific lane shows the required settings from the device and populates the values for the lane. Inactive lanes are grayed out

**Table 185: SerDes Toolbox Settings**

| Settings        | Display/Values                        | Description                                                                                                                                                                                                                                         |
|-----------------|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Loopback Mode   | DISABLED (Default)                    | This is a testing configuration where the transmitted signal is looped back to the receiver without leaving the device.                                                                                                                             |
|                 | Near-End Serial                       | In Near-End Serial, the transmitted signal is looped back at the near end of the communication link, close to the transmitter.                                                                                                                      |
|                 | Parallel                              | In Parallel, the transmitted data is looped back in parallel.                                                                                                                                                                                       |
|                 |                                       | Multiple data lanes are used simultaneously for the loopback test.                                                                                                                                                                                  |
| TX PRBS Pattern | DISABLED (Default)                    | This is the PRBS (Pseudo-Random Binary Sequence) pattern generated and sent by the transmitter side of the communication link.                                                                                                                      |
|                 | PRBS31                                |                                                                                                                                                                                                                                                     |
|                 | PRBS23_18                             |                                                                                                                                                                                                                                                     |
|                 | PRBS23_21                             |                                                                                                                                                                                                                                                     |
|                 | PRBS16                                | The PRBS pattern is used to test the integrity of the link by sending a known sequence of bits and checking if the received sequence matches the expected pattern.                                                                                  |
|                 | PRBS15                                | ▶ PRBS<BITS> PRBS patterns with more number of bits (long pattern) are particularly useful for jitter measurement.                                                                                                                                  |
|                 | PRBS11                                | ▶ FIXED WORD is a single unchanging predefined sequence.                                                                                                                                                                                            |
|                 | PRBS9                                 | ▶ DC balanced refers to a pattern that includes an equal number of ones and zeros. This balance helps keep the DC level steady and reduces signal degradation, which is particularly important when the signal passes through AC-coupling circuits. |
|                 | PRBS7                                 |                                                                                                                                                                                                                                                     |
|                 | FIXED WORD (PAT0)                     |                                                                                                                                                                                                                                                     |
|                 | DC BALANCED (PAT0, ~PAT0)             |                                                                                                                                                                                                                                                     |
|                 | FIXED PATTERN (000, PAT0, 3FF, ~PAT0) | ▶ FIXED PATTERN is a predefined sequence that is a combination of multiple fixed words or sequences.                                                                                                                                                |
|                 |                                       | When selected, the Restart button takes on the value.                                                                                                                                                                                               |
| RX PRBS Pattern | DISABLED (Default)                    | This is the PRBS pattern generated and sent by the receiver side of the communication link.                                                                                                                                                         |
|                 | PRBS31                                |                                                                                                                                                                                                                                                     |
|                 | PRBS23_18                             |                                                                                                                                                                                                                                                     |
|                 | PRBS23_21                             |                                                                                                                                                                                                                                                     |
|                 | PRBS16                                | The PRBS pattern is used to test the integrity of the link by sending a known sequence of bits and checking if the received sequence matches the expected pattern.                                                                                  |
|                 | PRBS15                                | ▶ PRBS<BITS> PRBS patterns with more number of bits (long pattern) are particularly useful for jitter measurement.                                                                                                                                  |
|                 | PRBS11                                | ▶ FIXED WORD is a single unchanging predefined sequence.                                                                                                                                                                                            |
|                 | PRBS9                                 | ▶ DC balanced refers to a pattern that includes an equal number of ones and zeros. This balance helps keep the DC level steady and reduces signal degradation, which is particularly important when the signal passes through AC-coupling circuits. |
|                 | PRBS7                                 |                                                                                                                                                                                                                                                     |
|                 | FIXED WORD (PAT0)                     |                                                                                                                                                                                                                                                     |
|                 | DC BALANCED (PAT0, ~PAT0)             |                                                                                                                                                                                                                                                     |
|                 | FIXED PATTERN (000, PAT0, 3FF, ~PAT0) | ▶ FIXED PATTERN is a predefined sequence that is a combination of multiple fixed words or sequences.                                                                                                                                                |
|                 |                                       | When selected, the Restart button takes on the value.                                                                                                                                                                                               |
| PAT0            |                                       | Enter the pattern:                                                                                                                                                                                                                                  |
|                 |                                       | ▶ 8 bits for 16-bit data width                                                                                                                                                                                                                      |
|                 |                                       | ▶ 10 bits for 20-bit data-width                                                                                                                                                                                                                     |

**Table 185: SerDes Toolbox Settings**

| Settings           | Display/Values            | Description                                                                                         |
|--------------------|---------------------------|-----------------------------------------------------------------------------------------------------|
| Restart            | Restart button            | Clicking this button clears the TX and RX pattern settings and sets the selected Patterns and sync. |
| Inject 1-bit Error | Inject 1-bit Error button | Clicking this button inserts a 1-bit error in LSB of TX word.                                       |
| PRBS Error Count   | PRBS Error Count button   | Clicking this button reads the error count and displays it in the cell.                             |

**Table 186: TX Settings**

| Settings             | Display/Values                                          | Description                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PLL Lock Status      | Green = Locked<br>Red = Unlocked                        | When the PLL (Phase-Locked Loop) is locked, the output signal stays in sync with the input signal, maintaining a steady phase relationship. If the PLL becomes "unlocked," it indicates that synchronization failed, and the output signal is no longer aligned with the input signal.                                                                                         |
| TX Data Polarity     | Non-invert = Unchecked<br>Invert = Checked              | Non-Invert Data Polarity means that the data signal is transmitted without any change in its original form. The logical '1' (high) and logical '0' (low) levels of the signal are maintained.<br><br>Invert Data Polarity means that the data signal is flipped or transmitted in an inverted form. In this case, the logical '1' becomes '0' and the logical '0' becomes '1'. |
| TX Data Width        | 8-bit<br>10-bit<br>16-bit<br>20-bit<br>32-bit<br>40-bit | TX data width is the number of bits that can be transmitted simultaneously over a channel.                                                                                                                                                                                                                                                                                     |
| TX Data Enable       | Off<br>On                                               | When the TX Data Enable signal is On, the data on the TX line is valid and ready for transmission. When the signal is Off, the data on the TX line is not valid, and the transmission should be ignored.                                                                                                                                                                       |
| TX Equal Pre-cursor  | 0.0 to 6.75 with 0.25 each step                         | The adjustment of the signal before the main data pulse to compensate for distortions and signal degradation caused by the transmission channel. Pre-conditioning the signal with pre-cursor equalization reduces inter-symbol interference (ISI) and enhances overall signal quality at the receiver's end.                                                                   |
| TX Equal Main-cursor | 0 to 24                                                 | The primary coefficient (main cursor) is used as the key value in determining the total equalization. The main cursor coefficient represents the central, most significant part of the transmitted signal. It is the primary reference point in the signal that should have the highest amplitude.                                                                             |



**Table 186: TX Settings**

| Settings                   | Display/Values                                                                       | Description                                                                                                                                                                                                                                                                                                  |
|----------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TX Equal Post-cursor       | 0.0 to 8.75 with 0.25 each step                                                      | The adjustment of the signal after the main data pulse to compensate for distortions and signal degradation caused by the transmission channel. Pre-conditioning the signal with post-cursor equalization reduces inter-symbol interference (ISI) and enhances overall signal quality at the receiver's end. |
| TX Termination             | 54-ohms<br>52-ohms<br>50-ohms<br>48-ohms<br>46-ohms<br>44-ohms<br>42-ohms<br>40-ohms | The termination resistor value on the transmission side of the communication link. This resistor matches the transmission line impedance and minimizes signal reflections.                                                                                                                                   |
| TX Diff Amplitude Enable   | Off<br>On                                                                            | When the TX Diff Amplitude Enable setting is turned On, the transmitter can generate a differential signal with the appropriate amplitude so that the signal can be accurately interpreted by the receiver, even in the presence of noise.                                                                   |
| TX Diff Amplitude (iboot)  | 0 to 15                                                                              | The strength of the amplitude boost applied to the differential signal. This help helps the transmitted signal to be accurately received despite noise or interference.                                                                                                                                      |
| TX Diff Amplitude (vboost) | 0 to 7                                                                               |                                                                                                                                                                                                                                                                                                              |

**Table 187: RX Settings**

| Settings         | Display/Values                   | Description                                                                                                                                                                                                                                                                                                           |
|------------------|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CDR Lock Satus   | Green = Locked<br>Red = Unlocked | When the CDR (Clock and Data Recovery) the data is correctly sampled and the clock is properly aligned with the data transitions.<br><br>If the CDR is unlocked, data errors may occur due to misalignment between the clock and data signals.                                                                        |
| RX Signal Status | Green = Valid<br>Red = Invalid   | A valid RX signal status indicates that the received data is correctly aligned with the clock signal.<br><br>An invalid RX signal means that the received data is not correct or cannot be properly interpreted. This may be due to signal integrity issues, clock misalignment, protocol errors, or data corruption. |

**Table 187: RX Settings**

| Settings                    | Display/Values         | Description                                                                                                                                                                                |
|-----------------------------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RX Loss of Signal Threshold | 60mVpp                 | This value is the minimum signal level required to maintain reliable data transmission. When the signal falls below this threshold, the system detects a loss of signal.                   |
|                             | 80mVpp                 |                                                                                                                                                                                            |
|                             | 100mVpp                |                                                                                                                                                                                            |
|                             | 120mVpp                |                                                                                                                                                                                            |
|                             | 140mVpp                |                                                                                                                                                                                            |
|                             | 160mVpp                |                                                                                                                                                                                            |
|                             | 180mVpp                |                                                                                                                                                                                            |
| RX Data Polarity            | Non-invert = Unchecked | Non-Invert Data Polarity means that the data signal is received without any change in its original form. The logical '1' (high) and logical '0' (low) levels of the signal are maintained. |
|                             | Invert = Checked       | Invert Data Polarity means that the data signal is flipped or received in an inverted form. In this case, the logical '1' becomes '0' and the logical '0' becomes '1'.                     |
| RX Data Width               | 8-bit                  | RX data width is the number of bits that can be received simultaneously over a channel.                                                                                                    |
|                             | 10-bit                 |                                                                                                                                                                                            |
|                             | 16-bit                 |                                                                                                                                                                                            |
|                             | 20-bit                 |                                                                                                                                                                                            |
|                             | 32-bit                 |                                                                                                                                                                                            |
|                             | 40-bit                 |                                                                                                                                                                                            |
| RX Equal Afe Rate           | 0 to 7                 | The "adaptive equalization filter rate" setting that adjusts the equalization parameters dynamically to optimize signal integrity and minimize bit errors.                                 |
| RX Equal Atten Level        | 0 to 7                 | The receiver equalization attenuation level setting adjusts the attenuation applied to the received signal to optimize signal integrity and minimize bit errors.                           |
| RX Equal Ctle Pole          | 0 to 3                 | This value indicates the pole location of the Continuous-Time Linear Equalizer (CTLE) in the receiver path.                                                                                |
| RX Equal Ctle Boost         | 0 to 31                | This value refers to the CTLE boost in the receiver path. Boosting the CTLE increases its gain, especially at higher frequencies.                                                          |
| RX Termination              | 54-ohms                | The termination resistor value on the receiver side of the communication link. This resistor matches the transmission line impedance and minimizes signal reflections                      |
|                             | 52-ohms                |                                                                                                                                                                                            |
|                             | 50-ohms                |                                                                                                                                                                                            |
|                             | 48-ohms                |                                                                                                                                                                                            |
|                             | 46-ohms                |                                                                                                                                                                                            |
|                             | 44-ohms                |                                                                                                                                                                                            |
|                             | 42-ohms                |                                                                                                                                                                                            |
|                             | 40-ohms                |                                                                                                                                                                                            |
| RX Termination Acdc         | DC (Default)           | This indicates whether the receiver termination is set to an alternating current (AC) or a direct current (DC) coupling mode.                                                              |
|                             | AC                     |                                                                                                                                                                                            |

**Table 187: RX Settings**

| Settings           | Display/Values | Description                                                                 |
|--------------------|----------------|-----------------------------------------------------------------------------|
| RX Equal Vga1 Gain | 0 to 7         | The value indicates the amplification level of the signal received by VGA2. |
| RX Equal Vga2 Gain | 0 to 7         | The value indicates the amplification level of the signal received by VGA2. |

Clicking the Eye Opening Monitor button provides a graphical eye diagram that details the signal eye width and height.

See [“Running Reveal Eye-Opening Monitor” on page 743](#) for more information.


## Running Reveal Eye-Opening Monitor

The Reveal Eye-Opening Monitor can be launched from the Reveal Analyzer/Controller. You need to be connected to a board to be able to run the Eye-Opening Monitor.

### To launch the Eye-Opening Monitor:

1. In the Radiant software main window choose **Tools > Reveal Analyzer/Controller**

In the drop-down menu, choose **top\_Controller** to display the **Hard IP** tab.

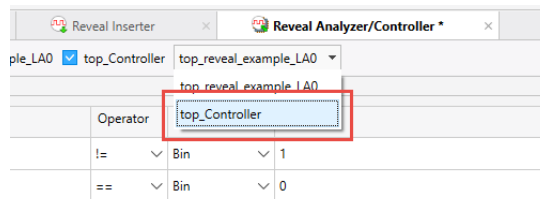


2. Click the **Hard IP** tab.

If debugging a non-Avant device, scroll down to the PCS channels to locate the **Eye-Opening Monitor** button.


If debugging an Avant device, the **Eye-Opening Monitor** button is located at the upper-right of the current IP instance.

3. Click the **Eye-Opening Monitor** button. The Eye-Opening Monitor dialog box is displayed.

The figure below shows the Eye-Opening Monitor dialog box when debugging a non-Avant device.

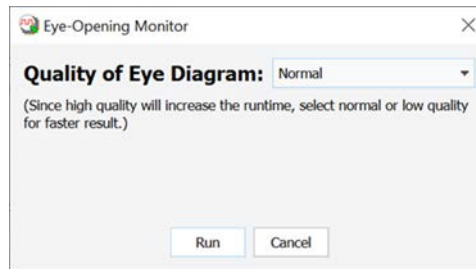

The figure below shows the Eye-Opening Monitor dialog box when debugging an Avant device. The Channel and Import options are added.

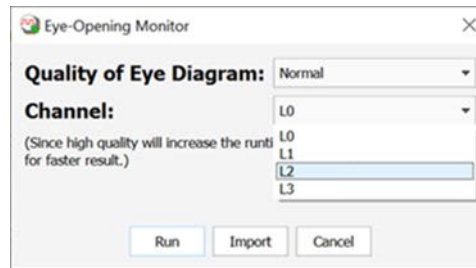


4. In the Eye-Opening Monitor dialog box, select the quality of the eye diagram from the drop-down menu.

It is recommended to select normal or low quality for a faster result, and select high quality for the final result. The default is normal quality.

If you are debugging Avant SerDes multiple channels, select the channel to debug in the Channel drop-down menu.

By using this function, you can measure the relative performance of a SerDes through comparison, analyze data with regards to the height and width of the eye diagram, and check where the passing eye begins and ends.

5. Click the **Run** button to start the EOM process. You can stop the process at any time by clicking the **Stop** button.
6. After the EOM has finished running, it will display the eye diagram for the current channel. The figure below shows the Eye Diagram when debugging non- Avant devices.

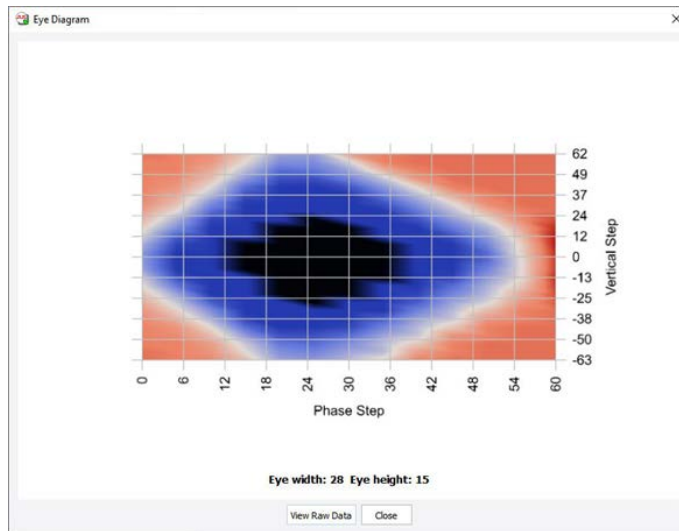**Figure 34: Example of Eye Diagram for Non-Avant Devices**

At the bottom of the eye diagram for non-Avant devices, you can click the **View Raw Data** button to open the raw data file containing the number of samples and errors used in calculating the density of the eye diagram.

The figure shows a window titled "eom\_normal\_PCSCH1.csv" displaying a table of raw data. The table has 7 columns: an index column, "x", "y", "nsamples\_cur", "nsamples\_pre", "nerrors\_cur", and "nerrors\_pre". The data is as follows:

|    | x | y   | nsamples_cur | nsamples_pre | nerrors_cur | nerrors_pre |
|----|---|-----|--------------|--------------|-------------|-------------|
| 1  | 0 | -63 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f3b22    |
| 2  | 0 | -60 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f39bc    |
| 3  | 0 | -57 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f3ac3    |
| 4  | 0 | -54 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f3a35    |
| 5  | 0 | -51 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f3a70    |
| 6  | 0 | -48 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f39f0    |
| 7  | 0 | -45 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f3bf7    |
| 8  | 0 | -42 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f3819    |
| 9  | 0 | -39 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f338f    |
| 10 | 0 | -36 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f26f7    |
| 11 | 0 | -33 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0f0e98    |
| 12 | 0 | -30 | 0x1e0000     | 0x1e0000     | 0x000000    | 0x0edb7f    |
| 13 | 0 | -27 | 0x1e0000     | 0x1e0000     | 0x000004    | 0x0e9928    |
| 14 | 0 | -24 | 0x1e0000     | 0x1e0000     | 0x000029    | 0x0dc442    |
| 15 | 0 | -21 | 0x1e0000     | 0x1e0000     | 0x0000f4    | 0x0d0d33    |
| 16 | 0 | -18 | 0x1e0000     | 0x1e0000     | 0x000712    | 0x0b6720    |
| 17 | 0 | -15 | 0x1e0000     | 0x1e0000     | 0x0013cf    | 0x0a2d8f    |

At the bottom of the window, there is a "Close" button.

- ▶ The raw data comes from the eom register.
- ▶ The numbers from nsample\_cur, nsample\_pre, nerrors\_cur, and nerrors\_pre columns calculate the result.
- ▶ The numbers are collected by reading the eom register of the PCS IP.

If you change the Reveal Controller options, you can re-run the EOM to display the new eye diagram and view the new raw data until the desired result is achieved.


## Importing an Existing EOM Result

If you are debugging Avant SerDes, each time you run the EOM, the result is automatically saved as a .txt file in the project folder. The file name provides information on the EOM settings. For example, the file name *eom\_normal\_MPPHYX4Q1\_L2.txt* tells you that the EOM result was generated using normal quality for the MPPHYX4Q1 instance with L2 or lane 2 as the selected channel.

To import an existing EOM result:

1. Click the **Import** button in the Eye-Opening Monitor dialog box.
2. The Select Existing EOM File dialog box is displayed. Selecting AVANT EOM (\*.txt) displays only the EOM results for debugging the Avant device.
3. Select the .txt file and click **Open**. The Eye Diagram is displayed. The figure below shows the Eye Diagram when debugging Avant devices.

**Figure 35: Example of Eye Diagram for Avant Devices**

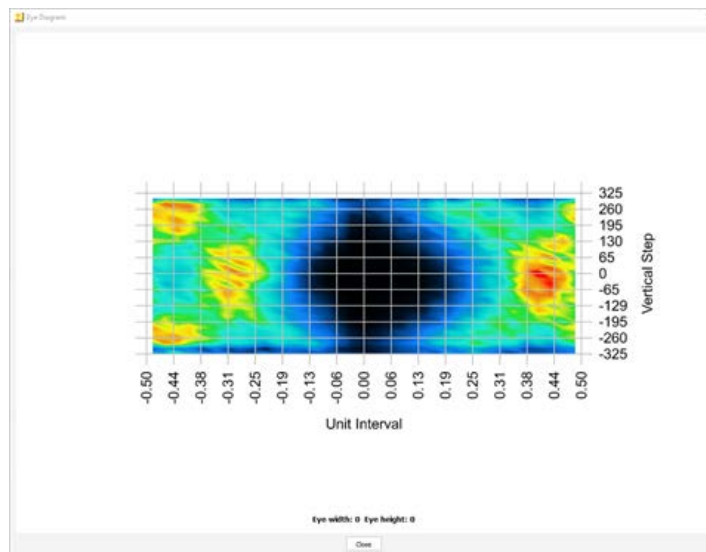

See [“Debugging Avant with SerDes Toolkit” on page 737](#) for more information.

## Capturing Data

After you have configured trigger settings in the LA Trigger tab, you can capture data.

Before capturing data, however, your evaluation board must be connected and the design downloaded. See [“Programming the FPGA” on page 717](#).

### To capture data:

1. In the Reveal Analyzer toolbar, select the modules you want to use.
2. Click the Run  button in the Reveal Analyzer toolbar.

The Run button changes into the Stop  button and the status bar next to the button shows the progress.

Reveal Analyzer first configures the modules selected for the correct trigger condition, then waits for the trigger conditions to occur. When a trigger occurs, the data is uploaded to your computer. The resulting waveforms appear in the LA Waveform tab.

If the trigger condition is not met, Reveal Analyzer continues running. In that case, you can use manual triggering, described in [“Using Manual Triggering” on page 748](#).

### See Also

- ▶ [“Stopping Data Capture” on page 747](#)

## Stopping Data Capture

You can stop capturing data at any time.

### To stop data capture:

1. Choose a module from the pulldown menu in the Reveal Analyzer toolbar.
2. Click the Stop  button in the Reveal Analyzer toolbar.

This command only stops the data capture for the current module. You must stop each module separately.

## Using Manual Triggering

If triggering fails to occur or you want to trigger manually instead of triggering when a signal condition occurs, you can use manual triggering to collect data. The data may then help you find out why triggering did not occur as you originally intended.

When you select manual triggering, Reveal Analyzer fills the buffer with data captured from that moment. In single-trigger capture mode, it fills the buffer and stops. In multiple-trigger capture mode, it captures one trigger and data. You can then continue to manually trigger as many times as the original triggering setup specified. If you want to capture fewer triggers, you can manually trigger the desired number of times, then click the Stop  button. Then the buffer starts uploading the data.

### To use manual triggering:

1. After you start capturing data with the Run  button, choose a module from the pulldown menu in the Reveal Analyzer tool bar.
2. Click the Manual Trigger  button.  
This command only applies to the data capture on the current module. You must start each module separately.
3. When you have captured the desired number of triggers in multiple trigger capture mode, click the Stop  button.



## Analyzing Trace Data in Waveform Format

In the LA Waveform tab, you can view the trace data that was captured during a debug session in waveform format. Whenever the trace stops, Reveal Analyzer reads the trace samples and automatically updates the signal waveforms. The signal values are shown over time based on the trigger conditions set in the debug logic.

### To view a waveform:


1. Click the **LA Waveform** tab.
2. Choose a module from the pulldown menu in the Reveal Analyzer tool bar.

## The LA Waveform Tab

In the LA Waveform tab, waveforms are presented in a grid layout as shown in [Figure 51](#). The waveform display remains blank until a debug session is run and the trigger expression conditions are met, at which point it updates with the captured waveform data. The waveform window lists the trace signals on the left and indicates their values at the trigger position. The timeline at the top of the window correlates to the number of samples captured, not absolute time units.

Sometimes the waveform includes fewer clock cycles than you expect; in particular, fewer before the trigger. This happens if the trigger occurs so quickly after the test starts that there are not enough clock cycles before the trigger to fill that part of the trace buffer.

**Figure 36: LA Waveform Tab with Captured Trace Data**

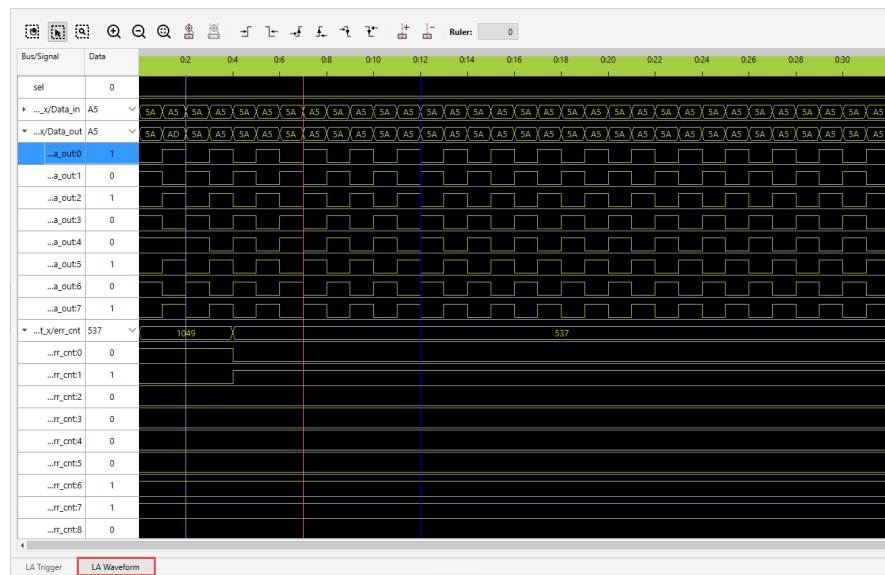

## Waveform Toolbar

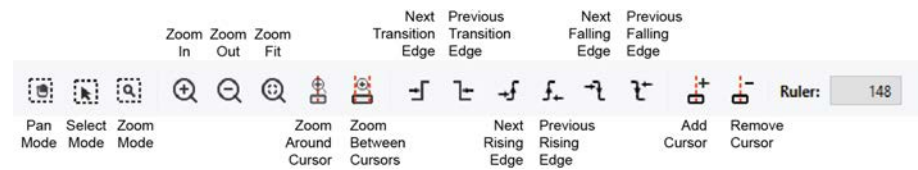



**Table 188: Waveform Toolbar Functions**

| Object                          | Description                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operation Modes</b>          |                                                                                                                                                    |
| Pan Mode                        | Drag and move across the waveform without altering zoom or selection.                                                                              |
| Select Mode                     | Select specific waveform regions or cursors for further operations.                                                                                |
| Zoom Mode                       | Activate zoom functionalities for detailed waveform inspection.                                                                                    |
| <b>Zoom Controls</b>            |                                                                                                                                                    |
| Zoom In                         | Magnify the waveform view for closer inspection.                                                                                                   |
| Zoom Out                        | Reduce the waveform view to see a broader range.                                                                                                   |
| Zoom Fit                        | Automatically adjust the zoom level to fit the entire waveform within the view.                                                                    |
| Zoom Around Cursor              | Zoom in or out, centered around the currently selected cursor.                                                                                     |
| Zoom Between Cursors            | Adjust the zoom level to fit the region between two selected cursors. Set the red cursor in between the user added cursor and then click the icon. |
| <b>Transition Edge Controls</b> |                                                                                                                                                    |
| Next Transition Edge (NTE)      | Shows the next transition point in the signal (either rising or falling).                                                                          |
| Previous Transition Edge (PTE)  | Shows the most recent transition point before the current position.                                                                                |
| Next Rising Edge (NRE)          | Jumps to the next rising edge in the signal.                                                                                                       |
| Previous Rising Edge (PRE)      | Jumps to the most recent rising edge before the current position.                                                                                  |
| Next Falling Edge (NFE)         | Jumps to the next falling edge in the signal.                                                                                                      |
| Previous Falling Edge (PFE)     | Jumps to the most recent falling edge before the current position.                                                                                 |
| <b>Add and Remove Cursor</b>    |                                                                                                                                                    |
| Add Cursor                      | Open the Add Cursor dialog box to place a user cursor on the waveform display.                                                                     |

**Table 188: Waveform Toolbar Functions**

| Object                                                                                             | Description                                                                                 |
|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| Remove Cursor                                                                                      | Open a list of available cursors and choose the cursor to remove from the waveform display. |
| <b>Ruler</b>                                                                                       |                                                                                             |
| The Ruler field shows the timeline value at which the mouse is hovering over the waveform display. |                                                                                             |

## Waveform Display Area

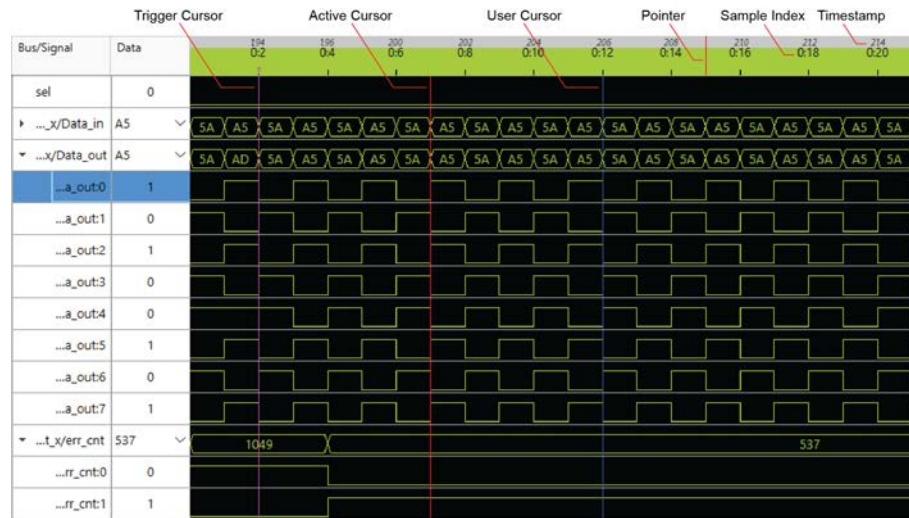**Table 189: Description of Elements in Waveform Display Area**

| Object                     | Description                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Bus and Signal Data</b> |                                                                                                                                                                                                                                                                                                                                                                         |
| Bus/Signal Column          | <p>Displays the names of the trace buses and signals in the selected module.</p> <p>Note: When you copy and paste a duplicate or incorrect signal, you can delete it using either of the following keyboard shortcuts:</p> <ul style="list-style-type: none"> <li>▶ Shift + Delete</li> <li>▶ Ctrl + X</li> </ul>                                                       |
| Data Column                | <p>Displays the value of the bus or signal at the active cursor (a solid, red line that you can set in the waveform display). Buses also have a pulldown menu for setting the radix used in the Data column and in the waveform display. The menu includes token sets whose bit width matches the bus. See <a href="#">“Setting a Trace Bus Radix” on page 758</a>.</p> |

**Table 189: Description of Elements in Waveform Display Area****Waveform Display**

The waveform display area shows the trace data in waveform format. When there is room, bus values are included the display using the radix set in the Data column. You can zoom in and out, pan, and jump to various points.

The waveform display includes several other elements to help you read the display and analyze the data:

**Cursors**

Vertical lines cutting through all the signals, cursors mark moments in the waveform. The LA Waveform view comes with the following three types of cursors:

|                |                                                                                                                                                                                                                                                                                                                                                       |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trigger Cursor | A <b>purple</b> line with a “T” at the top, trigger cursors are automatically placed at the moment of each final trigger event. If the module used a sample enable signal and the exact moment of the trigger is unknown, the waveform shows a trigger cursor five clock cycles before the sample enable signal turned inactive and sampling stopped. |
| Active Cursor  | A <b>red</b> line appears wherever you click in the waveform. The Data column shows the values of the signals and buses at the moment highlighted by the active cursor.                                                                                                                                                                               |
| User Cursor    | User. A <b>blue</b> line can be dragged anywhere you want. Use these cursors to mark moments of interest. You can also use these cursors to maneuver about a long waveform with the <b>Go to Cursor</b> command. See <a href="#">“Working with Waveform Cursors” on page 754</a> .                                                                    |

**Other Elements**

|              |                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pointer      | A red line that cuts across the timestamp and sample index bars, the pointer follows the horizontal movement of the mouse pointer across the waveform display. Use the pointer to see where you are in time as you examine the waveform.                                                                                                                                                                    |
| Sample Index | The green bar near the top of the display shows a count of triggers and trace samples within each trigger’s data set. The sample indexes have the form <code>&lt;trigger&gt;:&lt;sample&gt;</code> . For example, 0:2 indicates the first trigger and the third trace sample for that trigger (the counts are zero-based). 2:10 indicates the third trigger and the eleventh trace sample for that trigger. |
| Timestamp    | The gray bar at the top of the display shows “timestamps” of the trace frames (actually, a simple count of the clock cycles). Timestamps are shown only if the Timestamp trace option was selected for the module in Reveal Inserter. See <a href="#">“Timestamp” on page 676</a> .                                                                                                                         |

**See Also**

- ▶ [“Zooming In and Out” on page 734](#)
- ▶ [“Moving around the Waveform” on page 735](#)

## Right-click Options

**Table 190: Waveform Display Right-click Options**

| Object                                                | Description                                                                                                                                                  |
|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operation Modes</b>                                |                                                                                                                                                              |
| Pan Mode                                              | Drag and move across the waveform without altering zoom or selection.                                                                                        |
| Select Mode                                           | Select specific waveform regions or cursors for further operations.                                                                                          |
| Zoom Mode                                             | Activate zoom functionalities for detailed waveform inspection.                                                                                              |
| <b>Cursor Options</b>                                 |                                                                                                                                                              |
| Add Cursor                                            | Open the Add Cursor dialog box to place a user cursor on the waveform display.                                                                               |
| Remove Cursor ><br><cursor>                           | Open a list of available cursors and choose the cursor to remove from the waveform display.                                                                  |
| Remove All Cursors                                    | Remove all user cursors from the waveform display.                                                                                                           |
| <b>Zoom Options</b>                                   |                                                                                                                                                              |
| Click <b>Zoom</b> and choose from the sub-menu below: |                                                                                                                                                              |
| ▶ Zoom In                                             | Magnify the waveform view for closer inspection.                                                                                                             |
| ▶ Zoom Out                                            | Reduce the waveform view to see a broader range.                                                                                                             |
| ▶ Zoom Fit                                            | Automatically adjust the zoom level to fit the entire waveform within the view.                                                                              |
| ▶ Zoom Trigger                                        | Jump to trigger point.                                                                                                                                       |
| ▶ Zoom Start                                          | Jump to the start of the display.                                                                                                                            |
| ▶ Zoom End                                            | Jump to the end of the display.                                                                                                                              |
| Set Bus Radix                                         | Open the Set Bus Radix dialog box and set a trace bus radix.                                                                                                 |
| Set Clock Period                                      | Open the Set Clock Period dialog box and include in the data an approximate measure of time. See <a href="#">"Specifying the Clock Period" on page 762</a> . |
| Export Waveform                                       | Open the Export Waveform dialog box and save the data captured to a value change dump (.vcd) or to a text file.                                              |
| Cut                                                   | Remove the selected bus/signal waveform.                                                                                                                     |
| Copy                                                  | Copy the selected bus/signal waveform.                                                                                                                       |
| Paste                                                 | Paste a cut or copied waveform into a different Bus/Signal row.                                                                                              |
| Group Signals                                         | Open the New Bus Name dialog box and create a new bus for the selected signal.                                                                               |

**Table 190: Waveform Display Right-click Options**

| Object                  | Description                                                                      |
|-------------------------|----------------------------------------------------------------------------------|
| Edit Color              | Open the Select Color dialog box to assign a new color to the selected waveform. |
| Revert to Default Color | Restore the color of the selected waveform back to the original.                 |

## Working with Waveform Cursors

 
Most cursor functions require that the LA Waveform view be in Select mode. To be in Select Mode, click the **Select Mode** button on the Waveform Toolbar. You can also right-click on the Waveform display and choose **Select Mode**.

- ▶ [Adding Cursors](#)
- ▶ [Removing Cursors](#)
- ▶ [Moving Cursors](#)

### Adding Cursors

**To add a user cursor:**


- On the Waveform Toolbar, click the **Add Cursor** button and choose **Add New**.
- In the Enter Cursor Name box, type the name of the new cursor.



- Press **Enter** on the keyboard.

The new user cursor, which is a blue line, is added. Hovering on the cursor shows the cursor's details. You can set the cursor in place using drag-and-drop.

Clicking the Add Cursor button shows the name of the added cursor.

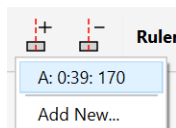

**To add a user cursor using the right mouse button:**

- Click in the desired clock cycle.

The active cursor appears. Make sure it is where you want the user cursor to be.

2. Right-click and choose **Add Cursor**.
3. In the Enter Cursor Name box, type the name of the new cursor.
4. Press **Enter** on the keyboard.

## Removing Cursors

**To remove a user cursor using the Remove Cursor button:**

1. On the Waveform Toolbar, click the **Remove Cursor** button.
2. Choose the cursor to remove.

**To remove a user cursor using the right mouse button:**

- ▶ Right-click in the waveform and choose **Remove Cursor > <cursor>**.

**To remove all cursors:**

- ▶ Right-click and choose **Clear All Cursors**.

## Moving Cursors

**To move a user cursor:**

1. Zoom in so you can easily see and click in individual samples.
2. Click in the desired location.

The active cursor appears. Make sure it is where you want the user cursor to be.
3. Carefully click in the sample to the right of the user cursor.

You must click on or to the right of the user cursor. Otherwise you are just moving the active cursor to a neighboring sample.

The user cursor and the active cursor exchange locations.

**To jump to a user cursor:**

- ▶ You can also right-click in the waveform and choose **Go to Cursor > <cursor>**. Cursors are identified by the sample index as shown in the green bar at the top of the waveform display.

**See Also**

- ▶ [“Moving around the Waveform” on page 757](#)

## Zooming In and Out

You can zoom in to expand the waveform and see more detail, or zoom out to see more of the waveform.

Zoom functions require that the LA Waveform view be in Zoom mode. To be in Zoom mode, click the **Zoom Mode** button on the Waveform Toolbar. You can also right-click on the Waveform display and choose **Zoom Mode**.

### To zoom in on a waveform:

- ▶ On the Waveform Toolbar, click the **Zoom** button.
- ▶ Click **View > Zoom In**.
- ▶ Right-click and choose **Zoom > Zoom In**.
- ▶ Keyboard shortcut: If in **Zoom Mode**, press **Ctrl +** on the keyboard.

### To zoom in on a specified area:

1. Click the **Zoom Mode** button.

The pointer changes to a cross: .

2. Hold down the left mouse button and drag the pointer across the area you want to zoom in on.

A shaded area appears on the waveform display.

3. Release the mouse button.

The shaded area expands to fill the display.

### To zoom out on a waveform:

- ▶ On the Waveform Toolbar, click the **Zoom** button.
- ▶ Click **View > Zoom Out**.
- ▶ Right-click and choose **Zoom > Zoom Out**.
- ▶ Keyboard shortcut: If in **Zoom Mode**, press **Ctrl -** on the keyboard.

### To show the entire waveform in the window:

- ▶ On the Waveform Toolbar, click the **Zoom Fit** button.
- ▶ Click **View > Zoom Fit**.
- ▶ Right-click and choose **Zoom > Zoom Fit**.

### See Also

- ▶ [“Moving around the Waveform” on page 757](#)



## Moving around the Waveform

The waveform is usually much wider than the display, especially if you zoom in enough to see individual trace samples. To see nearby sections of the waveform, you can pan by sliding it left and right (described below) or by using the horizontal scroll bar at the bottom of the LA Waveform view. You can also jump to various points in the waveform including any cursors you've placed, the trigger point, the start of the display, and the end.

### To pan the waveform display:

1. Right-click in the waveform and choose **Pan Mode**.
2. Press the left mouse button and drag to the left or the right.

### To jump to a location in the waveform:

- ▶ Right-click in the waveform and choose one of the following from the menu. To jump to the:
  - ▶ User cursor, choose **Go to Cursor > <cursor>**. Cursors are identified by the sample index as shown in the green bar at the top of the waveform display.
  - ▶ Trigger point, choose **Zoom > Zoom Trigger**
  - ▶ Start of the display, choose **Zoom > Zoom Start**
  - ▶ End of the display, choose **Zoom > Zoom End**

The display changes to show the selection. The zoom level may change to keep the display filled.

### See Also

- ▶ [“Working with Waveform Cursors” on page 754](#)
- ▶ [“Zooming In and Out” on page 756](#)

## Setting a Trace Bus Radix

You can set the radix of a trace bus displayed in the LA Waveform tab. You can choose a binary, octal, decimal, or hexadecimal radix. You can also use any token set whose bit width matches the bus.

### To set the bus radix of a signal or bus:

1. In the LA Waveform tab, click in the Data cell of the signal or bus.  
A menu appears showing the different radices and any token sets that fit.
2. Choose the desired radix or token set.

### To set the bus radix of multiple signals and buses:

This method can set several signals to the same radix but cannot use tokens.

1. In the LA Waveform tab, select one or more buses.  
Click on a bus to select it. To select multiple buses, Control-click on each one. To select all buses in a range, click on one end of the range and Shift-click the other end. If you want to change all the signals in the waveform to the same radix, you do not need to select anything.
2. Right-click in one of the selected waveforms and choose **Set Bus Radix**. Be careful to click in the same row as one of your selections, or you will change the selection.  
The Set Bus Radix dialog box opens.
3. In the pulldown menu, choose the radix.
4. In the Range pulldown menu, choose **Selected signals** or, if you want to change all the signals in the waveform to the same radix, choose **All signals**.
5. Click **OK**.

## Changing LA Waveform Colors

You can change the colors used by the LA Waveform view.

### To change the colors:

1. Choose **Tools > Options**.
2. In the Options dialog box, choose **Colors > Reveal Analyzer**.
3. Double-click on the color sample for the desired part of the LA Waveform view.

The Select Color dialog box opens.

4. Select a color.
5. In the Select Color dialog box, click **OK**.
6. To see the effect of the change, click **Apply**.
7. Change other colors if desired.
8. Click **OK**.

### To change the color of a specific waveform:

1. Right-click on the waveform and choose **Edit Color**.
2. In the Select Color dialog box, choose the new color.
3. Click **OK**.

## Counting Samples

You can easily count the number of samples in a range on the display.

### To count samples:

- ▶ Click where you want to start counting and drag to the end of the range.

While you're dragging, the LA Waveform view shows two red lines and the number of samples between the lines.

## Saving Waveforms

You can also save the captured waveform as an RVA file and reload it when you reopen Reveal Analyzer. The saved waveform carries most of the customization that you applied such as color changes, bus grouping, cursors, and others (except for zoom in/out information.)

### To save a waveform:

1. Choose **File > Save <file> As**.  
The Save Reveal Analyzer File dialog box appears.
2. Browse to the directory in which to save the project.  
Make sure to save the .rva in the same directory as .rvl project file.
3. In the File name box, type the file name.
4. Click **Save**.

## Saving the Reveal Analyzer Settings and Data

You can save the waveform data in the following formats:

- ▶ Reveal Analyzer (.rva) file, which will also include the trigger settings and waveform setup for future use
- ▶ Value change dump (.vcd) file, which can be imported by third-party tools such as QuestaSim.
- ▶ Text (.txt) file

Save to an .rva file if you want to see the data in the LA Waveform view again or if you want to use the trigger settings. See [“Saving a Reveal Analyzer File” on page 761](#). To save to a different format, see [“Saving to Other Formats” on page 761](#).

## Saving a Reveal Analyzer File

You can save the waveform along with the trigger settings and waveform setup in a Reveal Analyzer (.rva) file that you can use in the future. You can also save an existing .rva file in a file with a different name.

### To save changes in the current file:

- ▶ Choose **File** >  **Save <file>**.

### To save the file with a different name:

1. Choose **File** > **Save <file> As**.

The Save Reveal Analyzer File dialog box appears.

2. Browse to the directory in which you want to save the project.
3. In the File name box, type the file name.
4. Click **Save**.

## Saving to Other Formats

You can export the data captured for individual modules to a value change dump (.vcd) file, which can be imported by third-party tools such as QuestaSim or to an ASCII text (.txt) file.

### To export data:

1. Choose the module from the pulldown menu in the Reveal Analyzer tool bar.
2. If you want the data to include an approximate measure of time instead of a simple count of clock cycles, right-click the waveform and choose **Set Clock Period**. See [“Specifying the Clock Period” on page 762](#).
3. If you want to export only some of the signals, select them in the waveform. You can only export whole buses. If you select only some of the signals in a bus, you get the whole bus.
4. Right-click in the waveform and choose **Export Waveform**.  
The Export Waveform dialog box opens.
5. Browse to the location where you want to export the file.
6. Type in a name in the **File name** box.
7. Choose a file type.
8. If you are exporting only some of the signals, choose **Selected signals** in the Range box.
9. If you are exporting to .vcd, type in a module name. This will form the title in the .vcd file. If you leave the field empty, the module name will be “<unknown>”.
10. Click **Save**.

## Specifying the Clock Period

By default, Reveal Analyzer refers to time by a count of the sample clock cycles. You can convert this to an approximate measure of time, in nanoseconds or picoseconds, by specifying the length of the clock period. When the waveform is exported, this measure of time is shown instead of a simple count of cycles.

### To set the clock period:

1. Right-click the waveform and choose **Set Clock Period**.
2. Specify the scale by choosing a unit for the period in the pulldown menu on the right side of the dialog box. If you are specifying a frequency in the megahertz range, choose **ns**. If you are specifying a frequency in the gigahertz range, choose **ps**.
3. Place the cursor in either the Period or Frequency text box and type in the desired value. The other text box is filled in automatically.

Only integers are allowed. If you try to specify a frequency that requires a non-integer period, the period is truncated to an integer and the frequency is automatically adjusted. For example, typing 150 in the Frequency text box gives you a period of six and a frequency of 166.

4. Click **OK**.

## Using the Memory Controller Debug

The memory controller debug feature for Avant devices provides an interactive and targeted method for diagnosing and resolving DDR interface issues or stress-testing your design.

- ▶ Initiate various types of memory training routines such as write leveling, read gate training, and VREF training.
- ▶ Write directly to DDR mode registers and fine-tuning memory parameters such as drive strength, termination, and on-die VREF settings.
- ▶ Immediately assess the impact of your changes through the Margin Report and VREF Report. These are visual and quantitative feedback on signal margins and voltage reference calibration.
- ▶ Stress-test your design, even if not currently experiencing issues. You can create traffic patterns based on your use cases. Test different types of memory access patterns and see how the memory controller handles them.

The following section describes the memory controller debug feature. For complete information on the IP, see [FPGA-IPUG-02195, DDR Memory PHY Module](#).

## Enabling the Memory Controller Debug

Enabling the memory controller debug is a two-step process:


- ▶ Enable Reveal debug during IP configuration
- ▶ Enable memory controller debug in Reveal Inserter

The supported version is DDR Memory Controller 2.6.0.04 or later.

To enable Reveal debug during IP configuration:

1. In the Module/IP tree, select the component to generate.
2. Configure your settings in the Module/IP Block Wizard.

Check the **Enable Reveal Debug** option.

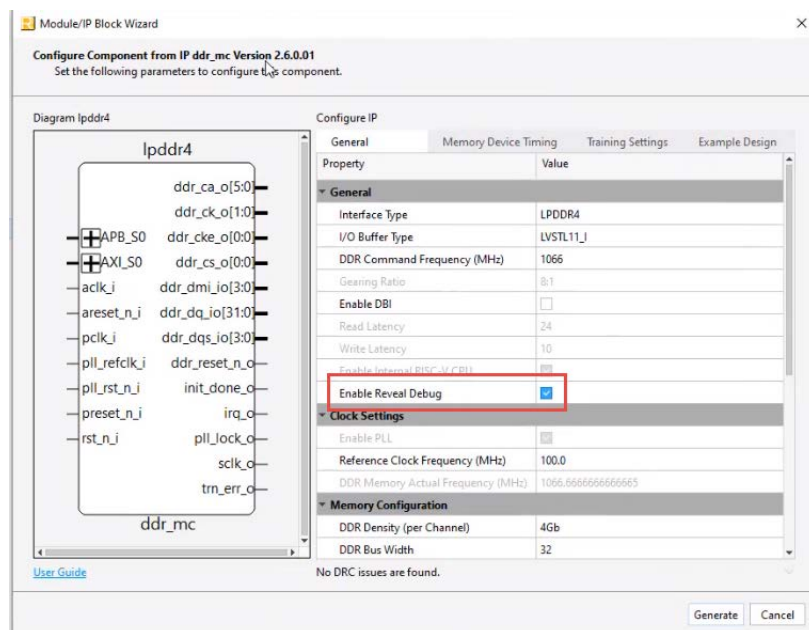

3. Click **Generate**.

To automatically import the .ipx file into your project when the component is generated, select **Insert to project** in the Check Generating Result dialog box.

4. Click **Finish**.

To enable the memory controller debug in Reveal Inserter:

1. Open Reveal Inserter. select **RTL (Pre-Synthesis)** in Debug Stage.
2. Click **Finish**.
3. In Datasets, click **Add Controller** to add a Controller core.
4. Click the **Hard IP Setup** tab.
5. Under Hard IP Setting, enable the IP by selecting its check box on the Enabled column.

6. Click the  **Insert Debug** button.
7. In the Insert Debug to Design dialog box, select the modules to insert.
8. Select **Activate Reveal file in design project**.  
If the .rvl file is not active in the design project, the Reveal modules will not be included during synthesis.
9. Click **OK**.
10. In the Save Reveal Project dialog box, indicate the file name and click **Save**.  
The active .rvl file is listed in the File List view under Debug Files.
11. Click **Export Files** to run the design flow and insert the Reveal controller.

## Downloading the Bitstream and Starting a Reveal Analyzer Project

If the correct setup process is followed and Reveal inserter is properly configured, download the bitstream and start a new project in Reveal Analyzer/Controller.

Connect the board with the Avant device to your computer. Using Radiant Programmer, download the bitstream to the board. Refer to [“Programming the FPGA” on page 447](#).

After downloading the bitstream and making sure that there are no errors, open the Reveal Analyzer/Controller to create a new project. Refer to [“Starting Reveal Analyzer” on page 717](#).

## Running Calibration


To open the memory controller debug interface and run calibration:

1. In Reveal Analyzer/Controller, choose **top\_Controller** in the drop-down menu.
2. Click the **Hard IP** tab.  
You can separate the tab by clicking the detach icon at the upper right corner.
3. The **Memory Interface Calibration** tab opens.  
You can view the status of various memory controller debug tuning tests such as command bus training, write leveling, read training, and write training. You can also read and write from the mode registers of their memory controller IP.
4. Click the **Run** button.  
This shows the calibration status, calibration margin report, current ODT, and VREF settings.



The Calibration Margin Report tab shows the margin for various DQS/DQ, command/control, and address signals.

For detailed information on the available options, refer to [FPGA-IPUG-02195, DDR Memory PHY Module](#).

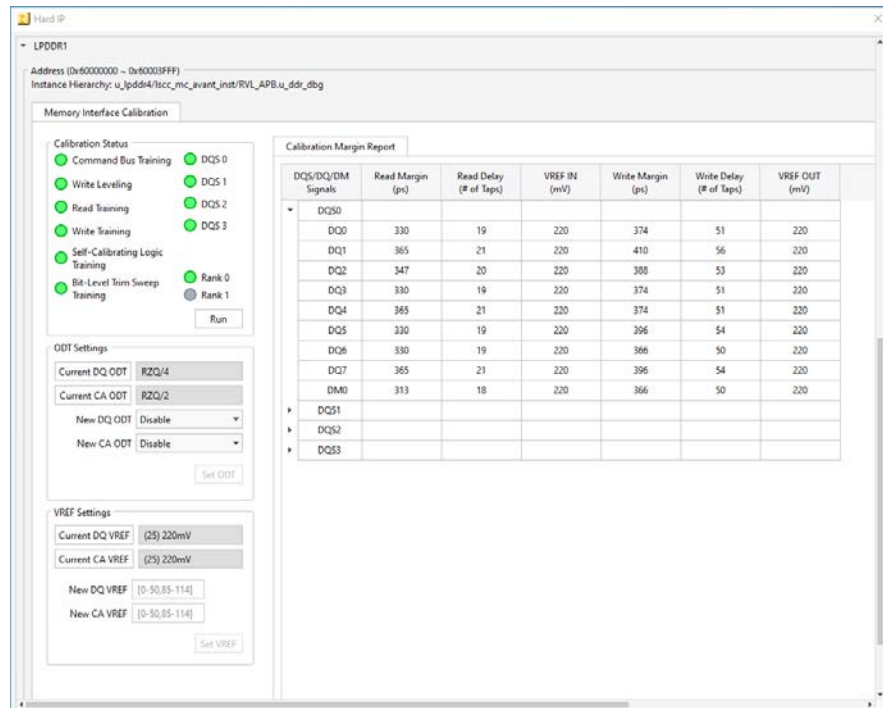

When you run the calibration, a .csv file of the results is automatically saved in the directory of your .rva file.

### Note

This feature is repeatable with TCL commands, with or without the GUI.

## Applying Engineering Change Orders

Engineering Change Orders, or ECOs, are requests to make changes to your design after it has been placed and routed. The changes are written into the Unified Database (.udb) file without requiring you to repeat the entire design implementation process. After applying ECOs, you can continue to generate bitstream/JEDEC files for your design.

ECOs are mainly used to correct errors found in the hardware model during debugging, or to facilitate design specification changes when problems are introduced with the integration of other FPGAs or components in your PC board design.

The Radiant software design flow supports interactive ECO editing with the ECO Editor, which is a tabular user interface similar to Spreadsheet View. The ECO Editor includes sheets for editing I/O constraints, and memory initialization values. These features enable you to edit the Unified Database (.udb) file created by the Place & Route Design process. You can also sort the sysIO constraints list and save the sorting order. The ECO Editor provides a Change Log window that enables you to track the changes between the modified .udb file and the post-PAR .udb file.

### Note

After you have edited your post-PAR UDB file, your functional simulation and timing simulation will no longer match.

ECO memory initialization is not supported directly to use instantiate EBR primitives, such as SP16K/DP16K.

## Editing sysIO Settings in ECO Editor

The ECO Editor provides separate sheets for exporting sysIO constraints. After a design is placed and routed, you can open the ECO Editor to export these constraints. The changes you make in the ECO Editor are written into the Unified Database (.udb) file without requiring you to go through the entire design implementation process.

To export sysIO constraints, click the sysIO Setting tab at the bottom of the ECO Editor window.

## Editing sysIO Settings

You can use the ECO Editor to export sysIO constraints after the design has been placed and routed.

### To export sysIO constraints:

1. In Radiant software, make sure that you have already run the Place & Route Design process, and then choose **Tools > ECO Editor** .
2. At the bottom of the ECO Editor, click the **sysIO Setting** tab.

In the sysIO Setting window, values from design sources are shown in blue, and modified values are shown in black.

You can only edit the values of cells that have white backgrounds.

3. In the sysIO Setting window, double-click the constraint that you want to modify. Select a value from the drop-down menu or type a new value.
4. When you have finished, choose **File > Save <file\_name>.udb** to save the changes to the current .udb file.

## Setting Memory Initialization Values in ECO Editor

Memory Initialization is a feature that allows you to change initial values to EBRs (Embedded Block RAM) for device configuration after the design has been placed and routed. It saves you time by allowing you to fix a few incorrect initialization values in your post-PAR Unified Database (.udb) file without having to repeat the entire flow.

Changing initial memory values might become necessary, for example, if incorrect values were assigned during synthesis or if there is some off-chip device that your FPGA is communicating with that requires a different value than the one that was initially set.

You use the ECO Editor's Memory Initialization window to update initial memory values.

### See Also

- ▶ ["Memory Initialization Update" on page 768](#)

- ▶ [“Updating Initial Values for EBRs” on page 768](#)

## Memory Initialization Update

Setting initial memory values actually writes the initial values directly into your post-PAR Unified Database (.udb) file. For this to be accomplished, you need to provide the following information:

- ▶ Unified Database file (.udb) – the *<design\_name>.udb* file that is updated by the Place & Route Design process.
- ▶ Memory Initialization File (.mem) – an ASCII-based text file that contains initial data values on various address locations in the memory module. This file should be in the same format that was used in module creation. See

---

### Note

You must create .mem files for ROMs. Memory Initialization files are optional for RAM modules.

---

To learn more about how to create a memory initialization file, see [“Applying Engineering Change Orders” on page 766](#)

- ▶ Memory block parameters – information on the memory block such as module name, memory mode, depth, width, and format.  
  
If the memory module is created by pure RTL design, the software can update memory initialization from LSE flow.
- ▶ Instance name (not a file) – the name that was given to the memory module in your top-level vm.

## Updating Initial Values for EBRs

Before updating memory values in ECO Editor, you need to add the memory module to your design and run the Place & Route Design process. The memory modules can be modules created by LSE flow..

---

### Note

Once you edit initial memory values in the post-PAR UDB file, your functional simulation and timing simulation results will no longer match. You might need to preserve an original version of your UDB file.

---

### To update memory initialization values:

1. Customize a memory initialization file (.mem) in any ASCII text editor. In this step, you should change the values of the INITVALs in your .mem file

as necessary and save the file in your project directory. You might also want to create a copy of the original .mem file.

### Note

---

You must create a .mem file for ROM instances in your design. RAM instances may or may not need .mem files associated with them.

---

For example, there might be a ROM memory instance in your design; so you create a .mem file called romb.mem in your project directory. These updated INITVALs will be used to override present ones that were auto-generated through the flow. Although the .mem file can be located anywhere on your system, it is recommended that you place them in your project directory.

2. In the Radiant software main window, make sure that you have already successfully run the Place & Route Design process, and then choose **Tools > ECO Editor**.

3. Select the **Memory Initialization** tab at the bottom of the ECO Editor window.

The Memory Initialization window displays the memory instances, memory file, and any parameters for memory modules that were created by LSE flow.

4. Right-click a memory instance, and choose **Update Initial Memory** from the pop-up menu. You can also choose **Update Initial Memory** from the Edit menu.

The Update Initial Memory dialog box opens, displaying the information about the currently selected memory block.

5. To change the format of the memory file, select a format from the File Format menu.
6. Click the ... button next to the Memory File box to browse to the .mem file that you previously edited, as suggested in Step 1. Make sure that the File Format is correct.

If your design targets an LIFCL device and uses EBR blocks, you can use the .mem file or one of two other initialization options, as follows:

- ▶ Initialize to all 1s – fills the EBR memory with all 1s instead of the values in the .mem file.
- ▶ Initialize to all 0s – fills the EBR memory with all 0s instead of the values in the .mem file.
- ▶ Memory File – uses the values in the .mem file for initialization.

7. Click **Update**.

The ECO Editor attempts to update the current memory block's initial memory values. A message will appear telling you whether the initialization succeeds or not.

8. Click **OK**.

The Update Initial Memory dialog box closes after a successful initialization. If the initialization fails, the dialog box will stay open.

9. After the initialization succeeds, choose **File > Save File** to save the memory initialization changes to the current UDB file.

## Running Design Rule Check

When you export constraints in the ECO Editor, the software automatically runs design rule check and reports errors, if any, in the Radiant software Output view.

You can also manually run the design rule check by choosing **View > Run DRC** .

## Strategy Reference Guide

A strategy provides a unified view of all the options related to implementation tools such as synthesis, map, and place and route. Strategy options are listed in the Strategy dialog box. Open the dialog box by double-clicking a strategy name in the File List view.

For information about an option, select it. A brief description appears at the bottom of the dialog box. Press **F1** to open this guide and see the full description.

The descriptions of the strategy options are grouped by their processes (such as Synplify Pro or Lattice Synthesis Engine (LSE) options).

For detailed information on how to apply strategies to your project, see [“Using Strategies” on page 43](#).

### Constraint Propagation

Constraint Propagation strategy options are listed below:

[“Propagation Debug Mode” on page 777](#)

### Synplify Pro Options

Synplify Pro strategy options are listed below:

- ▶ [“Allow Duplicate Modules \(for Synplify Pro\)” on page 777](#)
- ▶ [“Area \(for Synplify Pro\)” on page 777](#)
- ▶ [“Arrange VHDL Files” on page 778](#)
- ▶ [“Auto Compile Point” on page 778](#)
- ▶ [“Automatic Read/Write Check Insertion for RAM” on page 778](#)

- ▶ [“Clock Conversion” on page 778](#)
- ▶ [“Command Line Options \(for Synplify Pro\)” on page 778](#)
- ▶ [“Default Enum Encoding” on page 779](#)
- ▶ [“Disable IO Insertion” on page 779](#)
- ▶ [“Export Radiant Software Settings to Synplify Pro GUI” on page 779](#)
- ▶ [“FDC Constraint Files” on page 780](#)
- ▶ [“FSM Compiler” on page 780](#)
- ▶ [“Fanout Guide” on page 780](#)
- ▶ [“Force GSR \(for Synplify Pro\)” on page 780](#)
- ▶ [“Frequency \(MHz\)” on page 780](#)
- ▶ [“Library Directories” on page 781](#)
- ▶ [“Number of Critical Paths” on page 781](#)
- ▶ [“Number of Start/End Points” on page 781](#)
- ▶ [“Output Netlist Format” on page 781](#)
- ▶ [“Pipelining and Retiming” on page 781](#)
- ▶ [“Push Tristates” on page 781](#)
- ▶ [“RTL Design Rule Check Option” on page 782](#)
- ▶ [“Resolve Mixed Drivers \(for Synplify Pro\)” on page 782](#)
- ▶ [“Resource Sharing \(for Synplify Pro\)” on page 782](#)
- ▶ [“Resynthesize All” on page 782](#)
- ▶ [“Update Compile Point Timing Data” on page 782](#)
- ▶ [“Use Clock Period for Unconstrained I/O” on page 783](#)
- ▶ [“VHDL 2008 \(for Synplify Pro\)” on page 783](#)

### **Lattice Synthesis Engine (LSE) Options**

LSE strategy options are listed below:

- ▶ [“Allow Duplicate Modules \(for LSE\)” on page 783](#)
- ▶ [“Allow Mixed Assignments \(for LSE\)” on page 783](#)
- ▶ [“Carry Chain Length” on page 783](#)
- ▶ [“Command Line Options \(for LSE\)” on page 783](#)
- ▶ [“DSP Style” on page 784](#)
- ▶ [“DSP Utilization” on page 784](#)
- ▶ [“Decode Unreachable States” on page 784](#)
- ▶ [“Disable Distributed RAM” on page 784](#)
- ▶ [“EBR Utilization” on page 784](#)



- ▶ [“FSM Encoding Style” on page 784](#)
- ▶ [“Fix Gated Clocks” on page 784](#)
- ▶ [“Force GSR \(for LSE\) \(Not applicable for iCE40 UltraPlus\)” on page 785](#)
- ▶ [“Ignore Constraint Errors” on page 785](#)
- ▶ [“Ignore Constraint Errors” on page 785](#)
- ▶ [“Intermediate File Dump” on page 785](#)
- ▶ [“Loop Limit” on page 785](#)
- ▶ [“Macro Search Path \(for LSE\)” on page 785](#)
- ▶ [“Max Fanout Limit” on page 786](#)
- ▶ [“Memory Initial Value File Search Path \(for LSE\)” on page 786](#)
- ▶ [“Optimization Goal” on page 786](#)
- ▶ [“Propagate Constants” on page 787](#)
- ▶ [“RAM Style” on page 787](#)
- ▶ [“ROM Style” on page 787](#)
- ▶ [“RTL Design Rule Check” on page 788](#)
- ▶ [“Register With High Fanout” on page 788](#)
- ▶ [“Rules Disabled” on page 788](#)
- ▶ [“Read Write Check on RAM” on page 788](#)
- ▶ [“Remove Duplicate Registers” on page 788](#)
- ▶ [“Remove LOC Properties \(for LSE\)” on page 789](#)
- ▶ [“Report Trimmed User Nets \(for LSE\)” on page 789](#)
- ▶ [“Resolve Mixed Drivers \(for LSE\)” on page 789](#)
- ▶ [“Resource Sharing \(for LSE\)” on page 789](#)
- ▶ [“Target Frequency” on page 789](#)
- ▶ [“Use Carry Chain” on page 789](#)
- ▶ [“Use DCC Insertion” on page 789](#)
- ▶ [“Use IO Insertion” on page 789](#)
- ▶ [“Use IO Registers” on page 790](#)
- ▶ [“VHDL 2008 \(for LSE\)” on page 790](#)
- ▶ [“Use Partition \(for LSE\)” on page 790](#)

## Post-Synthesis

Post-Synthesis strategy options are listed below:

- ▶ [“Command Line Options \(for Post-Synthesis\)” on page 790](#)
- ▶ [“External Module Files \(.udb\)” on page 790](#)

## Post-Synthesis Timing Analysis Options

Post-Synthesis Timing Analysis strategy options are listed below:

- ▶ [“Command Line Options \(for Post-Synthesis Timing Analysis\)” on page 791](#)
- ▶ [“Number of End Points” on page 791](#)
- ▶ [“Number of End Points” on page 791](#)
- ▶ [“Number of Paths Per Constraint \(for Post-Synthesis Timing Analysis\)” on page 791](#)
- ▶ [“Number of Paths Per Endpoint \(for Post-Synthesis Timing Analysis\)” on page 792](#)
- ▶ [“Number of Unconstrained Paths \(for Post-Synthesis Timing Analysis\)” on page 792](#)
- ▶ [“Report Format \(for Post-Synthesis Timing Analysis\)” on page 792](#)
- ▶ [“Timing Analysis Options \(for Post-Synthesis Timing Analysis\)” on page 792](#)

## MAP Design Options

MAP Design strategy options are listed below:

- ▶ [“Command Line Options \(for Map Design\)” on page 792](#)
- ▶ [“Ignore Constraint Errors” on page 792](#)
- ▶ [“Infer GSR” on page 793](#)
- ▶ [“Report Signal Cross Reference” on page 793](#)
- ▶ [“Report Symbol Cross Reference” on page 793](#)

## MAP Timing Analysis Options

MAP Timing Analysis strategy options are listed below:

- ▶ [“Command Line Options \(for Map Timing Analysis\)” on page 793](#)
- ▶ [“Number of End Points” on page 793](#)
- ▶ [“Number of Paths Per Constraint \(for Map Timing Analysis\)” on page 794](#)
- ▶ [“Number of Paths Per Endpoint \(for Map Timing Analysis\)” on page 794](#)
- ▶ [“Number of Unconstrained Paths \(for Map Timing Analysis\)” on page 794](#)
- ▶ [“Report Format \(for Map Timing Analysis\)” on page 794](#)
- ▶ [“Speed for Hold Analysis” on page 794](#)

- ▶ [“Speed for Setup Analysis” on page 794](#)
- ▶ [“Timing Analysis Options \(for Map Timing Analysis\)” on page 794](#)

## **Place & Route Design Options**

Place & Route Design strategy options are listed below:

- ▶ [“Command Line Options \(for Place & Route Design\)” on page 794](#)
- ▶ [“Disable Auto Hold Timing Correction \(for Place & Route Design\)” on page 795](#)
- ▶ [“Disable Timing Driven \(for Place & Route Design\)” on page 795](#)
- ▶ [“Impose Hold Time Correction” on page 795](#)
- ▶ [“Multi-Tasking Node List” on page 795](#)
- ▶ [“Number of Host Machine Cores” on page 795](#)
- ▶ [“Pack Logic Block Utility” on page 795](#)
- ▶ [“Path-based Placement” on page 796](#)
- ▶ [“Placement Iteration Start Point” on page 796](#)
- ▶ [“Placement Iterations” on page 796](#)
- ▶ [“Placement Save Best Run” on page 796](#)
- ▶ [“plc\\_opt::Critical Instance Duplication” on page 796](#)
- ▶ [“plc\\_opt::Device Dependent Optimization” on page 796](#)
- ▶ [“plc\\_opt::Netlist Change Record File” on page 797](#)
- ▶ [“plc\\_opt::Sweet Spot Relocation” on page 797](#)
- ▶ [“plc\\_opt::Timing Effort Level” on page 797](#)
- ▶ [“Prioritize Hold Correction Over Setup Performance \(for Place & Route Design\)” on page 797](#)
- ▶ [“Run Placement Only” on page 797](#)
- ▶ [“Run Post-Placement Physical Synthesis” on page 797](#)
- ▶ [“Set Speed Grade for Hold Optimization \(for Place & Route Design\)” on page 797](#)
- ▶ [“Set Speed Grade for Setup Optimization” on page 797](#)
- ▶ [“Stop Once Setup Timing is Met \(for Place & Route Design\)” on page 798](#)

## **Place & Route Timing Analysis Options**

Place & Route Timing Analysis strategy options are listed below:

- ▶ [“Command Line Options \(for Place & Route Timing Analysis\)” on page 798](#)

- ▶ [“Number of End Points \(for Place & Route Timing Analysis\)” on page 798](#)
- ▶ [“Number of Paths Per Constraint \(for Place & Route Timing Analysis\)” on page 798](#)
- ▶ [“Number of Paths Per Endpoint \(for Place & Route Timing Analysis\)” on page 798](#)
- ▶ [“Number of Unconstrained Paths \(for Place & Route Timing Analysis\)” on page 798](#)
- ▶ [“Report Format \(for Place & Route Timing Analysis\)” on page 798](#)
- ▶ [“Speed for Hold Analysis” on page 798](#)
- ▶ [“Speed for Setup Analysis” on page 798](#)
- ▶ [“Timing Analysis Options \(for Place & Route Timing Analysis\)” on page 799](#)

### **IO Timing Analysis Options**

The following option is associated with the IO Timing Analysis process:

- ▶ [“All Performance Grade” on page 799](#)

### **Timing Simulation Options**

Timing Simulation strategy options are listed below:

- ▶ [“Generate PUR in the Netlist” on page 799](#)
- ▶ [“Generate X for Setup/Hold Violation” on page 799](#)
- ▶ [“Multichip Module Prefix” on page 799](#)
- ▶ [“Negative Setup-Hold Times” on page 799](#)
- ▶ [“Retarget Speed Grade” on page 800](#)
- ▶ [“Timing Check With Min Speed Grade” on page 800](#)
- ▶ [“Timing Simulation Max Delay between Buffers \(ps\)” on page 800](#)
- ▶ [“Verilog Hierarchy Separator” on page 800](#)

### **Bitstream Options**

Bitstream strategy options are listed below:

- ▶ [“Bitstream Mode” on page 800](#)
- ▶ [“Command Line Options” on page 800](#)
- ▶ [“ES Parts” on page 800](#)
- ▶ [“Enable Early IO Wakeup” on page 800](#)

- ▶ “Enable Timing Check” on page 801
- ▶ “Enable Warm Boot” on page 801
- ▶ “Initialize EBR Quadrant 0” on page 801
- ▶ “Initialize EBR Quadrant 1” on page 801
- ▶ “Initialize EBR Quadrant 2” on page 801
- ▶ “Initialize EBR Quadrant 3” on page 801
- ▶ “IP Evaluation” on page 801
- ▶ “No header” on page 801
- ▶ “Set All Unused IO No Pullup” on page 801
- ▶ “Oscillator Frequency Range” on page 801
- ▶ “Output Format” on page 801
- ▶ “Register Initialization” on page 802
- ▶ “Run DRC (iCE40UP only)” on page 802
- ▶ “SPI Flash Low Power Mode” on page 802
- ▶ “Set NVCM Security” on page 802

## Constraint Propagation Options

This page lists all the strategy options associated with the Constraint Propagation process.

### Propagation Debug Mode

When set to True, the ignored constraints will be enabled.

Using Propagation Debug Mode can affect timing of other circuits and can lead to false timing reports.

## Synplify Pro Options

This page lists all the strategy options associated with the Synplify Pro Synthesis process. For information on their use in Synplify Pro, see the [Synopsys Synplify Pro for Lattice User Guide](#).

**Allow Duplicate Modules (for Synplify Pro)** Allows the use of duplicate modules in your design.

When it is set to True, the last definition of the module is used by the software and any previous definitions are ignored. The default is False.

**Area (for Synplify Pro)** Specifies optimization preference for area reduction over timing delay reduction.

The True option specifies the area reduction mode. When set to True, this setting overrides the setting in [Frequency \(MHz\)](#).

The default is False.

This option is equivalent to the “set\_option -frequency 1” command in Synplify Pro.

**Arrange VHDL Files** Allows Synplify Pro to reorder the VHDL source files for synthesis.

The default is True for VHDL or VHDL design entry type projects, and False for other projects. When this is set to False, Synplify Pro will use the file order in the Radiant software File List view.

**Auto Compile Point** With Automatic Compile Points, synthesis decides based on existing hierarchy and utilization estimates. The default is True.

Compile Points minimize the amount of netlist changes resulting from RTL code changes. Compile points create logical boundaries where optimization will not occur. This may sacrifice some design performance for design result predictability. No user intervention is needed aside from enabling the flow.

---

**Note:**

Auto Compile Point does not support the iCE40UP device.

---

**Automatic Read/Write Check Insertion for RAM** When this option is set in the strategy, the synthesis tool inserts glue logic around inferred RAM to avoid simulation mismatches caused by indeterminate output values when the read and write addresses are same. By default this option is OFF.

You should design to make sure the read and write addresses are never the same.

**Clock Conversion** Controls gated and generated clock conversion.

Values are True and False but the default is False.

**Command Line Options (for Synplify Pro)** Enables additional command line options for the Synplify Pro Synthesis process.

**To enter a command line option:**

1. In the Strategy dialog box, select **Synplify Pro** in the Process list.
2. Double-click the Value column for the Command line Options option.
3. Type in the option and its value (if any) in the text box.
4. Click **Apply**.

For example:

```
set_option -library_path c:/source
```

**Default Enum Encoding** (For VHDL designs) Defines how enumerated data types are implemented.

The type of implementation affects the performance and device utilization. Available options are:

- ▶ Default – Automatically assigns an encoding style based on the number of states:
  - ▶ Sequential: 0-4 enumerated types
  - ▶ Onehot: 5-40 enumerated types
  - ▶ Gray: more than 40 enumerated types
- ▶ Gray – Only one bit of the state register changes at a time, but because more than one bit can be hot, the value must be decoded to determine the state. For example: 000, 001, 011, 010, 110
- ▶ Onehot – Only two bits of the state register change (one goes to 0; one goes to 1) and only one of the state registers is hot (driven by a 1) at a time. For example: 0000, 0001, 0010, 0100, 1000
- ▶ Sequential – More than one bit of the state register can change at a time, but because more than one bit can be hot, the value must be decoded to determine the state. For example: 000, 001, 010, 011, 100

This option is equivalent to the “set\_option -default\_enum\_encoding default | onehot | gray | sequential” command in Synplify Pro.

**Disable IO Insertion** Controls whether the synthesis tool will add I/O buffers into your design.

If this is set to True, Synplify Pro will not add I/O buffers into your design. If it is set to False (default), the synthesis tool will insert I/O buffers into your design.

This option is equivalent to the “set\_option -disable\_io\_insertion 1 | 0” command in Synplify Pro.

**Disable Register Replication During S/R Optimization** (Not applicable for iCE40 UltraPlus): When this option is set in the strategy, the synthesis tool will NOT duplicate the registers while inferring the address pointers for the RAM during Shift-register inference. By default this option is OFF and the tool will duplicate the address pointer registers to get better performance.

**Export Radiant Software Settings to Synplify Pro GUI** Controls whether the strategy settings are exported to Synplify Pro during interactive synthesis (opening Synplify Pro through the Tools menu). After opening Synplify Pro, you can change settings in Synplify Pro's interface. This option has no effect with integrated or stand-alone synthesis.

Available options are:

- ▶ No – Synplify Pro opens with its own defaults, ignoring the strategy settings.

- ▶ Yes (default) – Synplify Pro opens with the strategy settings every time. Options set and saved in a previous Synplify Pro session are ignored.
- ▶ Only on First Launch – Synplify Pro opens with the strategy settings the first time only. After that, Synplify Pro opens with settings saved in a previous session or with its own defaults. After the first time, the strategy settings are ignored.

For more information, see [“Interactive Synthesis” on page 341](#).

**FDC Constraint Files** Specifies the Synopsys FPGA Design Constraint (FDC) files. The FDC file contains Synopsys SDC Standard timing constraints, such as `create_clock`, `set_input_delay`, and `set_false_path`, along with the non-timing constraints (design constraints), such as `define_attribute`, `define_scope_collection`, and `define_io_standard`.

**FSM Compiler** Enables or disables the FSM Compiler and controls the use of FSM synthesis for state machines.

When Synplify Pro is selected as the synthesis tool, it enables or disables the FSM Compiler and controls the use of FSM synthesis for state machines. When this is set to True (default), the FSM Compiler automatically recognizes and optimizes state machines in the design. The FSM Compiler extracts the state machines as symbolic graphs, and then optimizes them by re-encoding the state representations and generating a better logic optimization starting point for the state machines.

This option is equivalent to the `“set_option -symbolic_fsm_compiler 1 | 0”` command in Synplify Pro.

**Fanout Guide** Controls fanout during synthesis. When the specified fanout limit is achieved, logic will be duplicated.

The default is 1000.

This option is equivalent to the `“set_option -maxfan <number>”` command in Synplify Pro.

**Force GSR (for Synplify Pro)** Forces Global Set/Reset Pin usage.

Available options are:

- ▶ False (default) – Does not infer Global Set/Reset in your design.
- ▶ Auto – Allows the software to decide whether to infer Global Set/Reset in your design.
- ▶ True – Always infers Global Set/Reset in your design.

This option is equivalent to the `“set_option -force_gsr auto | yes | no”` command in Synplify Pro.

**Frequency (MHz)** Specifies the global design frequency (in MHz). Nothing in the Value column means "auto" and Synplify Pro will try to maximize the frequency of the clocks.



The setting is ignored when [Area \(for Synplify Pro\)](#) is set to True.

This option is equivalent to the “set\_option -frequency <number> | auto” command in Synplify Pro.

**Library Directories** Specifies all the paths to the directories which contain the Verilog library files to be included in your design for the project.

You can also add custom library files with module definitions for the design in a single file. The names of files read from the library path must match module names. Mismatches result in error messages.

**Number of Critical Paths** Specifies the number of critical timing paths to be reported in the timing report.

This option is equivalent to the “set\_option -num\_critical\_paths <number>” command in Synplify Pro.

**Number of Start/End Points** Specifies the number of start and end points you want the software to report in the critical path section of the timing report.

This option is equivalent to the “set\_option -num\_startend\_points <number>” command in Synplify Pro.

**Output Netlist Format** Outputs a mapped VHDL netlist for post-synthesis simulation.

Available options are: None (default) and VHDL.

This option is equivalent to the “set\_option -write\_vhdl 1 | 0” command in Synplify Pro.

**Pipelining and Retiming** Enables the pipelining and retiming features to improve design performance.

Values are:

- ▶ None – Disables the pipelining and retiming features.
- ▶ Pipelining Only (default) – Runs the design at a faster frequency by moving registers into a ROM or multiplier, creating pipeline stages.
- ▶ Pipelining and Retiming – When enabled, registers may be moved into combinational logic to improve performance.

This option is equivalent to the “set\_option -pipe 1 | 0 -retiming 1 | 0” command in Synplify Pro.

**Push Tristates** When this is set to True, the Synplify Pro compiler pushes tristates through objects such as muxes, registers, latches, buffers, nets, and tristate buffers, and propagates the high impedance state.

The high-impedance states are not pushed through combinational gates such as ANDs or ORs.

The default is False.

This option is equivalent to the “set\_option -compiler\_compatible 1 | 0” command in Synplify Pro.

**RTL Design Rule Check Option** If RTL Design Rule Check is On, Radiant flow runs the DRC step first. If DRC fails, Radiant does not run the synthesis step anymore. If DRC step succeeds, Radiant continues to run the synthesis step as before.

If RTL Design Rule Check is Off, Radiant runs the synthesis step directly without running DRC.

**Resolve Mixed Drivers (for Synplify Pro)** If a net is driven by a VCC or GND and active drivers, setting this option to True will connect the net to the VCC or GND driver. The default value is False.

This option is equivalent to the “set\_option -resolve\_multiple\_driver 1 | 0” command in Synplify Pro.

**Resource Sharing (for Synplify Pro)** When this is set to True (default), the synthesis tool uses resource sharing techniques to optimize area.

With resource sharing, synthesis uses the same arithmetic operators for mutually exclusive statements; for example, with the branches of a case statement. Conversely, you can improve timing by disabling resource sharing, but at the expense of increased area.

This option is equivalent to the “set\_option -resource\_sharing 1 | 0” command in Synplify Pro.

**Resynthesize All** When this is set to True (default), Synplify Pro will resynthesize all portions, modules, or files of the RTL source. When this is set to False, Synplify Pro will synthesize only the updated portions, modules or files of the RTL source since the last run result.

If you run the “Force Run From Start” process, all portions, modules, or files of the RTL source will be resynthesized, regardless of whether this option is set to True or False.

**Update Compile Point Timing Data** Determines whether (True) or not (False) changes inside a compile point can cause the compile point (or top-level) containing it to change accordingly.

When this is set to False (default), Synplify Pro keeps the top level module the same, which is desired by incremental flow.

When this is set to True, changes in low level partitions will be propagated to top partitions up to top module. Synplify Pro will possibly optimize timing data and certainly will write a new timestamp onto the partition for the top level module.

This option is equivalent to the “set\_option -update\_models\_cp 1 | 0” command in Synplify Pro.

**Use Clock Period for Unconstrained I/O** Controls whether to forward annotate constraints for I/O ports without explicit user-defined constraints.

When this is set to True, only explicit I/O port constraints are forward annotated. When it is set to False (the default), all I/O port constraints are forward annotated.

This option is equivalent to the “set\_option -auto\_constraint\_io 1 | 0” command in Synplify Pro.

This option is also limited to a certain device.

**VHDL 2008 (for Synplify Pro)** When this is set to True, VHDL 2008 is selected as the VHDL standard for the project.

## LSE Options

This page lists all the strategy options associated with the LSE synthesis process.

**Allow Duplicate Modules (for LSE)** When set to True, allows the design to keep duplicate modules. LSE issues a warning and uses the last definition of the module. Any previous definitions are ignored. The default is False, which causes an error if there are duplicate modules.

This option is equivalent to the “-allow\_duplicate\_modules” option in the SYNTHESIS command.

**Allow Mixed Assignments (for LSE)** When set to True, having both blocking and non-blocking assignments to the same variable will be allowed. A warning will be issued instead of an error.

**Carry Chain Length** Specifies the maximum number of carry chain cells (CCUs) that get mapped to a single carry chain. Default is 0, which is interpreted as infinite length.

This option is equivalent to the “-carry\_chain\_length” option in the SYNTHESIS command.

**Command Line Options (for LSE)** Enables additional command line options for the LSE Synthesis process.

### To enter a command line option:

1. In the Strategy dialog box, select **LSE** in the Process list.
2. Double-click the Value column for the Command line Options option.
3. Type in the option and its value (if any) in the text box.
4. Click **Apply**.

For detailed description on LSE command line options, see [“Running Synthesis from the Command Line” on page 1686](#).

**DSP Style** Specifies how DSP modules should be implemented: with DSP resources or with Logic (LUTs).

This option is equivalent to the “-use\_dsp” option in the SYNTHESIS command.

**DSP Utilization** Specifies the percentage of DSP sites that LSE should try to use.

This option is equivalent to the “-dsp\_utilization” option in the SYNTHESIS command.

**Decode Unreachable States** When set to True, synthesis infers safe recovery logic from unreachable states in all the state machines of the design.

This option is equivalent to the “-decode\_unreachable\_states” option in the SYNTHESIS command.

**Disable Distributed RAM** When set to True, inferred memory will not use the distributed RAM of the PFUs.

**EBR Utilization** Specifies EBR utilization target setting in percent of total vacant sites. LSE will honor the setting and do the resource computation accordingly. Default is 100 (in percentage).

This option is equivalent to the “-bram\_utilization” option in the SYNTHESIS command.

**FSM Encoding Style** Specifies the encoding style to use with the design.

This option is equivalent to the “-fsm\_encoding\_style” option in the SYNTHESIS command. Valid options are auto, one-hot, gray, and binary. The default value is auto, meaning that the tool looks for the best implementation.

---

#### Note

The encoding type “gray” only works with less than or equal to four machine states. When the number of machine states is larger than four, LSE will use other encoding styles and issue the following warning message:

***WARNING - Gray encoding is not supported for state machines with more than four states.***

---

**Fix Gated Clocks** When set to True, LSE changes standard gated clocks to forms more effective for FPGAs. Clocks are gated with AND or OR gates to conserve power, but in FPGAs such clocks cause skew and prevent global clock resources from being used. The Fix Gated Clocks option is ignored if the Optimization Goal option is set to Area.

The gated clocks must be specified in the .ldc file with create\_clock constraints. All inputs of the gating logic must be driven by primary inputs and

the gating logic must be decomposable. Instantiated primitives and black boxes are not affected.

Converted clocks and the associated registers are reported in the synthesis.log file.

**Force GSR (for LSE) (Not applicable for iCE40 UltraPlus)** Forces Global Set/Reset Pin usage. (Not applicable for iCE40 UltraPlus).

Available options are:

- ▶ No (default) – Does not infer Global Set/Reset in your design.
- ▶ Auto – Allows the software to decide whether to infer Global Set/Reset in your design.
- ▶ Yes – Always infers Global Set/Reset in your design.

**Ignore Constraint Errors** Enables or disables the LSE synthesis process to ignore constraint errors.

By default, the box is unchecked (False), and LSE terminates processing and issue an error message when constraint errors are encountered.

When the box is checked (True), LSE will ignore constraint errors and continue processing.

The LSE synthesis report includes the setting of this option and the constraint errors found.

**Intermediate File Dump** If you set this to True, LSE will produce intermediate encrypted Verilog files. If you supply Lattice with these files, they can be decrypted and analyzed for problems. This option is good for analyzing simulation issues.

This option is equivalent to the “-ifd” option in the SYNTHESIS command.

**Loop Limit** Specifies the maximum number of iterations of “for” and “while” loops in the source code before determining potential design issue. If the loop limit is reached and the design loop has not terminated yet, an error will be produced. The limit is applied when the loop index is a variable, not when it is a constant. The higher the loop\_limit, the longer the run time. The default value is 1950. Setting a higher value may cause stack overflow during some of the optimizations during synthesis. A lower value will be ignored and the default used instead.

This option is equivalent to the “-loop\_limit” option in the SYNTHESIS command.

**Macro Search Path (for LSE)** Allows you to specify a path (or paths) to locate physical macro files used in a given design. The software will add the specified paths to the list of directories to search when resolving file references. The option can also be used for indicating the directories containing include files that are specified in the RTL design files.

You do not need to specify a search path if the necessary file is in the directory containing the top-level .ngo file or if the FILE attribute in the design gives a complete path name for the file (instead of a relative path name).

The software follows the following order to search:

1. Current implementation directory
2. Project directory
3. Directories where the LPC or IPX source files reside
4. User-specified macro search paths

To specify a macro search path, double-click the Value box, and directly enter the path or click the ... button to browse for one or more paths.

This option is equivalent to the “-p” option in the SYNTHESIS command.

**Max Fanout Limit** Specifies the maximum fanout setting. LSE will make sure that any net in the design is not exceeding this limit. Default is 1000 fanouts.

This option is equivalent to the “-max\_fanout” option in the SYNTHESIS command.

**Memory Initial Value File Search Path (for LSE)** Allows you to specify a path (or paths) to locate memory initialization file (.mem) used in a given design. The software will add the specified path(s) to the list of directories to search when resolving file references.

To specify a search path, double-click the Value box, and directly enter the path or click the ... button to browse for one or more paths.

This option is equivalent to the “-path” option in the SYNTHESIS command.

**Optimization Goal** Enables LSE to optimize the design for area or speed.

Valid options are:

- ▶ **Area** – Optimizes the design for area by reducing the total amount of logic used for design implementation.

When Optimization Goal is set to Area, LSE honors the LDC constraints if there are any. If [Use IO Registers](#) is set to Auto, LSE packs input and output registers into I/O pad cells.

---

**Note**

With the Area setting, LSE also ignores all SDC constraints. These constraints are not used by LSE and are not added for use by the later stages of implementation.

---

- ▶ **Timing** – Optimizes the design for speed by reducing the levels of logic.

When Optimization Goal is set to Timing and a create\_clock constraint is available in an .ldc file, LSE ignores the [Target Frequency](#) setting and uses the value from the create\_clock constraint instead.

If there are multiple clocks, and if not all the clocks use `create_clock` constraint, then LSE will assign 200 MHz constraint on the remaining clocks in Timing Mode.

If [Use IO Registers](#) is set to Auto, LSE does not pack input and output registers into I/O pad cells.

The default setting depends on the device type.

For more information, see [“Optimizing LSE for Area and Timing” on page 337](#).

This option is equivalent to the “-optimization\_goal” option in the SYNTHESIS command.

**Propagate Constants** When set to True (default), enables constant propagation to reduce area, where possible. LSE will then eliminate the logic used when constant inputs to logic cause their outputs to be constant.

You can turn off the operation by setting this option to False.

This option is equivalent to the “-propagate\_constants” option in the SYNTHESIS command.

**RAM Style** Sets the type of random access memory globally to distributed, embedded block RAM, or registers.

The default is Auto which attempts to determine the best implementation, that is, the synthesis tool will map to technology RAM resources (EBR/Distributed) based on the resource availability.

This option will apply a `syn_ramstyle` attribute globally in the source to a module or to a RAM instance. To turn off RAM inference, set its value to Registers.

- ▶ Registers – Causes an inferred RAM to be mapped to registers (flip-flops and logic) rather than the technology-specific RAM resources.
- ▶ Distributed – Causes the RAM to be implemented using the distributed RAM or PFU resources.
- ▶ Block\_RAM – Causes the RAM to be implemented using the dedicated RAM resources. If your RAM resources are limited, for whatever reason, you can map additional RAMs to registers instead of the dedicated or distributed RAM resources using this attribute.

This option is equivalent to the “-ramstyle” option in the SYNTHESIS command.

**ROM Style** Allows you to globally implement ROM architectures using dedicated, distributed ROM, or a combination of the two (Auto).

This applies the `syn_romstyle` attribute globally to the design by adding the attribute to the module or entity. You can also specify this attribute on a single module or ROM instance.

Specifying a `syn_romstyle` attribute globally or on a module or ROM instance with a value of:

- ▶ **Auto (default)** – Allows the synthesis tool to choose the best implementation to meet the design requirements for speed, size, and so on.
- ▶ **Logic** – Causes the ROM to be implemented using the distributed ROM or PFU resources. Specifically, the logic value will implement ROM to logic (LUT4) or ROM technology primitives.
- ▶ **EBR** – Causes the ROM to be mapped to dedicated EBR block resources. ROM address or data should be registered to map it to an EBR block. If your ROM resources are limited, for whatever reason, you can map additional ROM to registers instead of the dedicated or distributed RAM resources using this attribute.

Infer ROM architectures using a CASE statement in your code. For the synthesis tool to implement a ROM, at least half of the available addresses in the CASE statement must be assigned a value. For example, consider a ROM with six address bits (64 unique addresses). The CASE statement for this ROM must specify values for at least 32 of the available addresses.

This option is equivalent to the “-romstyle” option in the SYNTHESIS command.

**RTL Design Rule Check** If RTL Design Rule Check is On, Radiant flow runs the DRC step first. If DRC fails, Radiant does not run the synthesis step anymore. If DRC step succeeds, Radiant continues to run the synthesis step as before.

If RTL Design Rule Check is Off, Radiant runs the synthesis step directly without running DRC.

**Register With High Fanout** Config fanout limit. Values less than or equal to 0 will imply the default value of 20.

**Rules Disabled** Disable DRC rules by message IDs.

**Read Write Check on RAM** When set to True, LSE inserts additional glue logic to the RAM read/write port to resolve read/write conflicts. The default is False.

A warning message indicating a potential simulation mismatch will be issued if RAM has a read/write conflict.

**Remove Duplicate Registers** Specifies the removal of duplicate registers.

When set to True (default), LSE removes a register if it is identical to another register. If two registers generate the same logic, the second one will be deleted and the first one will be made to fan out to the second one's destinations. LSE will not remove duplicate registers if this option is set to False.



This option is equivalent to the “-remove\_duplicate\_regs” option in the SYNTHESIS command.

**Remove LOC Properties (for LSE)** Setting this to On removes LOC properties in the synthesized design.

**Report Trimmed User Nets (for LSE)** When set to True, LSE will report whenever a user-declared HDL net is trimmed from the netlist.

**Resolve Mixed Drivers (for LSE)** If a net is driven by a VCC or GND and active drivers, setting this option to True connects the net to the VCC or GND driver.

**Resource Sharing (for LSE)** When this is set to True (default), the synthesis tool uses resource sharing techniques to optimize area.

With resource sharing, synthesis uses the same arithmetic operators for mutually exclusive statements; for example, with the branches of a case statement. Conversely, you can improve timing by disabling resource sharing, but at the expense of increased area.

This option is equivalent to the “-resource\_sharing” option in the SYNTHESIS command.

**Target Frequency** Specifies the target frequency setting. This frequency applies to all the clocks in the design. If there are some clocks defined in an .ldc file, the remaining clocks will get this frequency setting. When a create\_clock constraint is available in an .ldc file, LSE ignores the Target Frequency setting for that clock and uses the value from the create\_clock constraint instead.

This option is equivalent to the “-frequency” option in the SYNTHESIS command.

**Use Carry Chain** Turns on (True) or off (False) carry chain implementation for adders. Default is True.

This option is equivalent to the “-use\_carry\_chain” option in the SYNTHESIS command.

**Use DCC Insertion** Specifies the clock gate or registers to perform DCC insertion. If the values Gated Clock (support clock gating cell), Registers (support registers enable mux), and Both (support gated clock and registers) are applied, it will be saved in the strategy file. The default value is None.

To specify under Strategies, select Strategy1 > Synthesize Design. Under Synthesize Design, select LSE > Use DCC Insertion. Double-click the Value box to browse and select from the list values.

This option is equivalent to the “-use\_dcc\_insertion” option in the SYNTHESIS command.

**Use IO Insertion** When set to True, LSE uses I/O insertion and GSR.

This option is equivalent to the “-use\_io\_insertion” option in the SYNTHESIS command.

**Use IO Registers** When True, this option forces the synthesis tool to pack all input and output registers into I/O pad cells based on the timing requirements for the target device family. Auto, the default setting, enables this register packing if [Optimization Goal](#) is set to Area. If Optimization Goal is Timing or Balanced, Auto disables register packing.

This option is equivalent to the “-use\_io\_reg” option in the SYNTHESIS command.

You can also control packing on individual registers and ports. See [“syn\\_useioff” on page 893](#).

**VHDL 2008 (for LSE)** When this is set to True, VHDL 2008 is selected as the VHDL standard for the project.

**Use Partition (for LSE)** When set to True, the -partition synthesis flow is enabled, and the partition synthesis passes through the LSE command option.

## Post-Synthesis Options

This page lists all strategy options associated with the Post-Synthesis process. The options available for user setting are dependent on the target device of your project.

### Command Line Options (for Post-Synthesis)

Enables additional command line options for the associated process.

### External Module Files (.udb)

Allows the user to supply already synthesized modules for design assembly into the top level design. These modules must be already synthesized in Unified Database (.udb) format.

For example:

```
c:\case1\ip1.udb; d:\example\aaa\abc.udb
```

Multiple .udb files can be separated by ‘;’

This internal process, Post-Synthesis, performed after logic synthesis resolves and assembles lower level modules to top level to complete the design contents.

All modules contents must be resolved at this stage before the flow can continue to the next stage.

### Ignore Constraint Errors

Enables or disables the post-synthesis process to ignore constraint errors.

By default, the box is unchecked (False), and post-synthesis terminates processing and issue an error message when constraint errors are encountered.

When the box is checked (True), post-synthesis will ignore constraint errors and continue processing.

The post-synthesis report includes the setting of this option and the constraint errors found.

### **Hardware Evaluation**

Enables or disables the ability to temporarily test IP in a device without an IP license. If enabled, a timer is added to the design that allows unlicensed IP to function for about 4 hours in a device. If disabled, you cannot generate a bitstream if there are any unlicensed IP in the design.

You might want to disable this option to refine your design while waiting for the license. You will not be able to generate a bitstream, but you will be able to see how resources are used (without the timer) and close timing. When you get the license, you can then generate the bitstream.

### **Note:**

---

The Hardware Evaluation option is only for a device that does not support bitstream encryption ability even with a built-in hardware evaluation timer (i.e., LAV-AT device).

---

## **Post-Synthesis Timing Analysis Options**

This page lists all strategy options associated with the Post-Synthesis Timing Analysis process.

**Command Line Options (for Post-Synthesis Timing Analysis)** Enables additional command line options for the associated process.

### **Number of End Points**

Controls the number of endpoints in the critical endpoint summary.

Number of endpoints is a number for the Endpoint Slacks section.

### **Number of Paths Per Constraint (for Post-Synthesis Timing Analysis)**

Lists detailed logic and route delays for all constrained paths and nets in the design.

Number of paths per constraint is the total number of paths.

**Number of Paths Per Endpoint (for Post-Synthesis Timing Analysis)**

Controls maximum number of paths that could be reported for each endpoint.

**Number of Unconstrained Paths (for Post-Synthesis Timing Analysis)**

Reports paths not covered by a timing preference.

**Report Format (for Post-Synthesis Timing Analysis)** Specifies the report format type.

- ▶ Lattice Standard – Displays timing report format that is similar to formats used in many industry timing tools.
- ▶ Diamond Style – Displays timing report that is similar to Diamond software TRACE report.

**Timing Analysis Options (for Post-Synthesis Timing Analysis)**

Specifies the analysis type.

- ▶ Hold Analysis – Performs hold analysis.
- ▶ Standard Setup Analysis – Performs setup time checks.
- ▶ Standard Setup and Hold Analysis – Performs both the Standard Setup Analysis and the Hold Analysis.

## Map Design Options

This page lists all strategy options associated with the Map Design process. The options available for user setting are dependent on the target device of your project.

**Command Line Options (for Map Design)** Enables additional command line options for the associated process.

**To enter a command line option:**

1. In the Strategy dialog box, select the associated process in the Process list.
2. Double-click the Value column for the Command line Options option.
3. Type in the option and its value (if any) in the text box.
4. Click **Apply**.

To reference more information about command line options for the Map Design process, type `map -h <architecture>` in a command line window. For detailed options description, refer to [“Running MAP from the Command Line” on page 1694](#).

**Ignore Constraint Errors** Enables or disables the Map Design process to ignore constraint errors.

By default, the box is unchecked (False), and Map Design terminates processing and issues an error message when constraint errors are encountered.

When the box is checked (True), Map Design will ignore constraint errors and continue processing.

The Map Design process report includes the setting of this option and the constraint errors found.

**Infer GSR** (Not applicable for iCE40 UltraPlus): Enables or disables the GSR inferencing.

GSR inference is only applicable to PLC slice registers by default. Each black-box can have its own rules to guide mapper to perform GSR inference. Rules to be applied according to device architecture specification. For example, in LIFCL device, it is applicable to SLICE / IO registers, block RAM, large RAM, and DDR components.

When multiple GSR instances are found in the design, mapper is able to merge them if their outputs are actually the same wire in the netlist. Otherwise mapper will issue an error.

Mapper can also create a GSR component if user specified the GSR signal in the constraint file.

**Report Signal Cross Reference** When this is set to True, the map report (.mrp) will show where nets in the logical design were mapped in the physical design.

The default is False.

**Report Symbol Cross Reference** When this is set to True, the map report (.mrp) will show where symbols in the logical design were mapped in the physical design.

The default is False.

**Set VIRTUAL IO on all ports** When set to True, MAP report includes virtual IO information.

## Map Timing Analysis Options

This page lists all strategy options associated with the Map Timing Analysis process.

**Command Line Options (for Map Timing Analysis)** Enables additional command line options for the associated process.

**Number of End Points** Controls the number of endpoints in the critical endpoint summary.

Number of endpoints is a number for the Endpoint Slacks section.

**Number of Paths Per Constraint (for Map Timing Analysis)** Lists detailed logic and route delays for all constrained paths and nets in the design.

Number of paths per constraint is the total number of paths.

**Number of Paths Per Endpoint (for Map Timing Analysis)** Controls maximum number of paths that could be reported for each endpoint.

**Number of Unconstrained Paths (for Map Timing Analysis)** Reports paths not covered by a timing preference.

**Report Format (for Map Timing Analysis)** Specifies the report format type.

- ▶ Lattice Standard – Displays timing report format that is similar to formats used in many industry timing tools.
- ▶ Diamond Style – Displays timing report that is similar to Diamond software TRACE report.

**Speed for Hold Analysis** Specifies performance grade for hold analysis. This option allows you to override the default m (minimum) delay for hold time analysis. The minimum delay represents the smallest and fastest delay on the device being targeted.

The user-selected speed grade is used for setup time analysis to verify that the design meets the required performance specifications.

**Speed for Setup Analysis** Specifies performance grade for setup analysis. This option allows you to override the default performance grade which runs setup analysis against the performance grade of the device currently targeted by the project implementation.

**Timing Analysis Options (for Map Timing Analysis)** Specifies the analysis type.

- ▶ Hold Analysis – Performs hold analysis.
- ▶ Standard Setup Analysis – Performs setup time checks.
- ▶ Standard Setup and Hold Analysis – Performs both the Standard Setup Analysis and the Hold Analysis.

## Place & Route Design Options

This page lists all strategy options associated with the Place & Route Design process. The options available for user setting are dependent on the target device of your project.

**Command Line Options (for Place & Route Design)** Allows you to specify options from the par command without directly using the command line. Type in a string of options without the par command.

For detailed descriptions of placement and routing command line options, see [“Running PAR from the Command Line” on page 1696](#).

**Disable Auto Hold Timing Correction (for Place & Route Design)** When the switch is used, PAR will not check the hold timing of the design, so no correction of potential hold timing violations will be performed.

**Disable Timing Driven (for Place & Route Design)** Enables or disables the timing-driven option for the PAR run.

When this is set to True, the timing-driven option for the PAR run will not be used. If this is set to False, PAR automatically uses the timing-driven option if the Timing Wizard is present and if any timing constraints are found in the preference file. If selected, the timing-driven option is not invoked in any case and cost-based placement and routing are done instead.

Two examples of situations in which you might disable this option are:

- ▶ You have timing constraints specified in your preference file, but you want to execute a quick PAR run without using the timing-driven option to give you a rough idea of how difficult the design is to place and route.
- ▶ You only have a single license for the timing-driven option but you want to use this license for another application (for example, to perform timing-driven routing within EPIC) that will run at the same time as PAR. This option keeps the license free for the other application.

**Impose Hold Time Correction** Forces PAR to fix hold time violations even if there are setup time violations.

**Multi-Tasking Node List** Allows you to specify the node file name for the multi-tasking PAR.

The multi-tasking PAR allows you to use multiple machines (nodes) that are networked together for a multi-run PAR job, significantly reducing the total amount of time for completion.

For more information on multi-tasking PAR, see [“Running Multiple PAR Jobs in Parallel” on page 361](#).

**Number of Host Machine Cores** Allows you to run multiple threads on your local machine by specifying how many cores to be used from your local machine. The range is from 0 to 64.

**Pack Logic Block Utility** Sets the relative density (of available slices) at which the slices within a device are to be packed, in terms of a percentage of the available slices in the device.

This option has great control of the packing density. The value range is 0-100 percent (100 = minimum packing; 0 = maximum density).

If this option is not specified (blank), it defaults to a percentage that depends on which device is selected. For example, for LIFCL, the default is 75 percent. The result will be a less dense packing, depending on the size of the design relative to the number of available slices in the device. If the design is large

compared with the number of available slices in the device, the placer will make a reasonable effort to pack the design so that it fits in the device.

If you specify a density value for this option, the placer will attempt to pack the device to that density. The “0” setting results in the densest mapping. If the design is large compared with the target density, the placer will make an aggressive packing effort to meet your target. However, this may adversely impact the design  $f_{MAX}$  performance.

**Path-based Placement** Allows you to apply path-based placement. Path-based placement gives better performance and more predictable results.

Options are Off and On.

---

**Note:**

The Pack Logic Block Utility and Path-based Placement strategies are not supported in the LAV-AT device.

---

**Placement Iteration Start Point** Specifies the cost table to use (from 1-100) to begin the PAR run.

The default is 1. Cost tables are not an ordered set. There is no correlation between a cost table's number and its relative value. If cost table 100 is reached, placement does not begin at 1 again, even if command options specify that more placements should be performed.

**Placement Iterations** Specifies the maximum number of placement/routing passes (0-100, 0 = run until solved) to be run (regardless of whether they complete) at the Placement Effort Level.

Each iteration uses a different cost table when the design is placed and will produce a different Uniform Database (.udb) file. If you specify a Starting Cost Table, the iterations begin at that table number.

**Placement Save Best Run** Determines the number (1-100) of best outputs of the Place and Route run to save (defaults to 1).

If no number is specified, all output designs produced by the PLACE & ROUTE run are saved. The best outputs are determined by a scoring system described in the section titled Scoring the Routed Design.

This option does not care how many iterations you performed or how many effort levels were used. It compares every result to every other result.

**plc\_opt::Critical Instance Duplication** Allows to duplicate a critical instance to improve timing.

Default value is Auto.

**plc\_opt::Device Dependent Optimization**



This option do some device-dependent optimization to improve timing.

For example, if a REG input pin is timing critical, packing it together with its LUT driver into a single slice can help to improve timing result due to device-dependent fast connections.

Default value is Auto.

#### **plc\_opt::Netlist Change Record File**

Record the netlist changes if the file is specified.

#### **plc\_opt::Sweet Spot Relocation**

Allows to adjust the critical instance locations to improve timing.

Default value is Auto.

#### **plc\_opt::Timing Effort Level**

This option have limited feature so far. Features are all On for any timing effort value if the features are not Off by the user.

Timing effort level values are Low, Medium, High.

Default value is Medium.

**Prioritize Hold Correction Over Setup Performance (for Place & Route Design)** During hold timing correction, there may be situations when correcting a hold timing violation would cause a setup requirement to become violated. By default, we do not correct the hold violation on such connections so as to preserve the setup performance, but when this switch is used, we will attempt to correct the hold violation and let the setup requirement become violated.

**Run Placement Only** Setting this to True prevents the design from being routed. PAR will output a placed, but not routed Unified Design Database(.udb) file.

This option defaults to False.

**Run Post-Placement Physical Synthesis** Setting this to On by clicking the button will turn on the Physical Synthesis options.

#### **Set Speed Grade for Hold Optimization (for Place & Route Design)**

Specifies performance grade for hold analysis. This option allows you to override the default m (minimum) performance grade for hold time analysis, which represents faster silicon than the fastest performance grade of the device being targeted.

**Set Speed Grade for Setup Optimization** Specifies performance grade for setup analysis. This option allows you to override the default performance

grade which runs setup analysis against the performance grade of the device currently targeted by the project implementation.

**Stop Once Setup Timing is Met (for Place & Route Design)** Setting this to True forces the Place and Route Design process to stop as soon as the timing requirement is satisfied. This option has no effect if the "Generate Timing Analysis report for each iteration" option is set to True or if using Run Manager to produce multiple place-and-route runs.

## Place & Route Timing Analysis Options

This page lists all strategy options associated with the Place & Route Timing Analysis process.

**Command Line Options (for Place & Route Timing Analysis)** Enables additional command line options for the associated process.

**Number of End Points (for Place & Route Timing Analysis)** Controls the number of endpoints in the critical endpoint summary.

Number of endpoints is a number for the Endpoint Slacks section.

**Number of Paths Per Constraint (for Place & Route Timing Analysis)**

Lists detailed logic and route delays for all constrained paths and nets in the design.

Number of paths per constraint is the total number of paths.

**Number of Paths Per Endpoint (for Place & Route Timing Analysis)**

Controls maximum number of paths that could be reported for each endpoint.

**Number of Unconstrained Paths (for Place & Route Timing Analysis)** Reports paths not covered by a timing preference.

**Report Format (for Place & Route Timing Analysis)** Specifies the report format type.

- ▶ Lattice Standard – Displays timing report format that is similar to formats used in many industry timing tools.
- ▶ Diamond Style – Displays timing report that is similar to Diamond software TRACE report.

**Speed for Hold Analysis** Specifies performance grade for hold analysis. This option allows you to override the default m (minimum) performance grade for hold time analysis, which represents faster silicon than the fastest performance grade of the device being targeted.

**Speed for Setup Analysis** Specifies performance grade for setup analysis. This option allows you to override the default performance grade which runs

setup analysis against the performance grade of the device currently targeted by the project implementation.

**Timing Analysis Options (for Place & Route Timing Analysis)** Specifies the analysis type.

- ▶ Hold Analysis – Performs hold analysis.
- ▶ Standard Setup Analysis – Performs setup time checks.
- ▶ Standard Setup and Hold Analysis – Performs both the Standard Setup Analysis and the Hold Analysis.

## IO Timing Analysis Options

The following option is associated with the IO Timing Analysis process.

**All Performance Grade** Controls whether the I/O timing report (.ior) will give an in-depth analysis on all available performance grades or will just produce a summary report on the worst-case performance grade.

- ▶ True - The I/O Timing Report will summarize the worst-case scenario of all available performance grades.
- ▶ False (default) - The I/O Timing Report will only contain a summary of the worst-case performance grade for the given device.

## Timing Simulation Options

This page lists all strategy options associated with the Timing Simulation process. The options available for user setting are dependent on the target device of your project.

**Generate PUR in the Netlist** When this is set to False, the timing simulation file generation process will not write PUR instance in the Verilog/VHDL back-annotation netlist. Then you have to instantiate PUR in the test bench.

**Generate X for Setup/Hold Violation** When this is set to True, the Timing Simulation process will place X notifiers in the output file on flip-flops with setup and/or hold time violations.

**Multichip Module Prefix** Adds a prefix to module names to make them unique for multi-chip simulation.

**Negative Setup-Hold Times** Allows you to select negative setup time and negative hold time for better accuracy.

The default is True. You can set it to False for those simulators that might not be able to handle negative setup- hold times.

**Retarget Speed Grade** Retargets back annotation to a different performance grade than the one used to create the Uniform Database (.udb) file.

You are limited to those performance grades available for the device used in the UDB file.

**Timing Check With Min Speed Grade** Setting this to True replaces all timing information for back annotation with the minimum timing for all paths.

This option is used for simulation of hold time requirements. Separate simulations are required for hold time verification (-min switch) and delay time verification (normal output).

**Timing Simulation Max Delay between Buffers (ps)** Distributes routing delays by splitting the signal and inserting buffers. The delay value assigned represents the maximum delay number in picoseconds between each buffer (1000 ps by default).

**Verilog Hierarchy Separator** Specifies the hierarchy separator character which will be used in name generation when the design hierarchy is flattened.

You can specify the following two special characters as the hierarchy separator: "/" (back-slash) or "." (period).

Enter the character as is in the edit box. Encapsulate the character with double quotes, for example, "/", ".".

The option is only available for Verilog designs.

## Bitstream Options

This page lists all strategy options associated with the bitstream generation process. The options available for user setting are dependent on the target device of your project.

**Bitstream Mode** Generates bitstream for use in special bitstream update flow.

**Command Line Options** Enables additional command line options for the associated process.

### ES Parts

Generates SMM key per device and introduce a new bitgen flag to specify the ES parts.

**Enable Early IO Wakeup** Enable IO output as soon as possible. (Not applicable for iCE40 UltraPlus)

**Enable Timing Check** When this is set to true and there is timing error in the Place and Route report file, a dialogue box will display before executing bitstream generation.

**Enable Warm Boot** Enables the Warm Boot functionality, provided the design contains an instance of the WARMBOOT primitive. (iCE40UP)

**Initialize EBR Quadrant 0** Write the EBR initialization data into the bitstream for quadrant 0. (iCE40UP)

**Initialize EBR Quadrant 1** Write the EBR initialization data into the bitstream for quadrant 1. (iCE40UP)

**Initialize EBR Quadrant 2** Write the EBR initialization data into the bitstream for quadrant 2. (iCE40UP)

**Initialize EBR Quadrant 3** Write the EBR initialization data into the bitstream for quadrant 3. (iCE40UP)

**IP Evaluation** When enabled, a bitstream will be generated for evaluation purposes when an IP license is not found, but will be limited to a maximum of four hours before the device resets itself. When disabled, a bitstream will not be generated if an IP license is not found (Not applicable for iCE40 UltraPlus).

All the encrypted and authenticated bitstreams can only be programmed using fast configuration.

The following operations are not supported when using raw data frame by frame in programming:

- ▶ Erase, Program, Verify
- ▶ Verify Only

**No header** Do not write the bitstream header section. (iCE40UP)

### **Set All Unused IO No Pullup**

Removes the pullup on the unused I/Os, except Bank 3 I/Os which do not have pullup. (iCE40UP)

### **Oscillator Frequency Range**

Options include Medium and Slow. Fast is not supported for iCE40UP. Only for NVCM configuration, not for programming

Depending on the speed of external PROM, this options adjusts the frequency of the internal oscillator used by the iCE40UP device during configuration. This is only applicable when the iCE40UP device is used in SPI Controller Mode for configuration.

**Output Format** Specifies the type of bitstream to create for an FPGA device.

The following options are available:

- ▶ **Bit File (Binary)** – Generates a binary configuration file (.bin) that contains the default outputs of the Bit Generation process.
- ▶ **Raw Bit File (ASCII)** – Generates an ASCII raw bit text file (.rbt) of ASCII ones and zeros that represent the bits in the bitstream file. If you are using a microprocessor to configure a single FPGA, you can include the Raw Bit file in the source code as a text file to represent the configuration data. The sequence of characters in the Raw Bit file is the same as the bit sequence that will be written into the FPGA.
- ▶ **Hex File (Hexadecimal)** – Generates a Hexadecimal (.hex) PROM data file used for Programming into external non-volatile memory, such as parallel or Serial Peripheral Interface (SPI) Flash devices (iCE40UP only).
- ▶ **NVCM File (Non-volatile Configuration Memory)** – Generates a Non-volatile Configuration Memory (.nvcm). Each line in this file is a separate NVCM instruction for bitmap programming. The exceptions are comment lines (usually the first few lines in the file) which start with the # sign. Comment lines should be ignored when programming the NVCM array. The comment lines contain comments as well as header information (iCE40UP only).

**Register Initialization** Enable register initialization section of the bitstream (Not applicable for iCE40 UltraPlus).

**Run DRC (iCE40UP only)** When this is set to True, the software runs a physical design rule check and saves the output to the Bit Generation report file (.bgn).

Running DRC before a bitstream or JEDEC file is produced will detect any errors that could cause the FPGA to function improperly. If no fatal errors are detected, it will produce a bitstream or JEDEC file. Run DRC is the default.

### **SPI Flash Low Power Mode**

Places the PROM in low-power mode after configuration. (iCE40UP)

This option is applicable only when the iCE40UP device is used as SPI Controller Mode for configuration.

### **Set NVCM Security**

Ensures that the contents of the Non-Volatile Configuration Memory (NVCM) are secure and the configuration data cannot be read out of the device. (iCE40UP)

### **UserCode**

Enables you to specify a USERCODE value to override the current value in the data file.

### **UserCode Format**

Displays the USERCODE value in hexadecimal format only.

**Note**

---

The UserCode is always displayed as plain text, whether or not the bitstream is encrypted.

---

## Constraints Reference Guide

Constraints are instructions applied to design elements that guide the design toward desired results and performance goals. They are critical to achieving timing closure or managing reusable intellectual property (IP). The most common constraints are those for timing and pin assignments, but constraints are also available for placement, routing, and many other functions. In the Radiant software design flow, constraints include logical constraints and HDL attributes.

You can assign constraints using one or both of the following methods:

- ▶ Assign Lattice design (timing) constraints (.PDC) via the Device Constraint editor tool.  
See the [“Device Constraint Editor” on page 242](#) for complete descriptions of each constraint, including syntax rules and examples.
- ▶ Assign Lattice design timing constraints (.LDC) via the [“Pre-Synthesis Constraint Editor / Post-Synthesis Timing Constraint Editor” on page 281](#).
- ▶ Assign HDL or schematic-based attributes using design source files.  
These attributes are used to direct Map and Place & Route.  
See the [“HDL Attributes” on page 805](#) for complete descriptions of each attribute, including conventions and examples.

If you are using the Lattice Synthesis Engine (LSE), constraints will also include Synopsys Design Constraints (SDC) as well as HDL attributes and directives that influence the optimization or structure of the output netlist. See the [“Lattice Synthesis Engine Constraints” on page 824](#) for descriptions of these LSE constraints.

### See Also

- ▶ [“Applying Design Constraints” on page 209](#)
- ▶ [“Integrated Synthesis” on page 340](#)



# HDL Attributes

HDL attributes are constraints that are attached as text to design objects and interpreted by the Radiant software. A design object can be a specific port, component pin, net, instance, instantiation, or even an entire design. An attribute provides information about the object. For example, an attribute might specify where a component in the logical design must be placed in the physical device, or it might specify a frequency constraint for a net that timing-driven place and route will attempt to meet.

The HDL attributes described in this section are those most commonly used as constraints in HDL source files. They generally apply to all designs and are not specific to any architecture.

HDL attributes are typically declared using comment notation in Verilog HDL or the VHDL Attribute keyword..

---

## Note

A comprehensive guide to library element HDL attributes is available in the [FPGA Libraries Reference Guide](#). For specific applications, refer to the technical notes that are available on the [Lattice web site](#). Editing these library element attributes is not recommended, as they are usually generated from an array of choices that are made for module generation using IP Catalog.

---

## BBOX

**Convention** BBOX= x,x

**Description** Indicates the bounding box or the area given in number of rows and columns for a given GRP. The attribute must appear on the same block as the GRP attribute.

**Device Support** All

**Syntax** BBOX= H,W

where *H* is height, *W* is width.

For example, the following parameter indicates a BBOX that is three rows high and seven columns wide.

---

### Figure 37: Example of a BBOX Parameter

BBOX= 3, 7

---

You will see BBOX with the GRP definition below it.

# CLAMP

**Convention** CLAMP = OFF | ON

Default value of CLAMP for OUTPUT = OFF.

Default value of CLAMP for INPUT = ON if vccio is same as I/O standard.

Default value of CLAMP for INPUT = OFF if vccio is some other value than I/O standard.

**Description** The CLAMP option can be enabled for each IO independently. The CLAMP attribute is not supported for LVCMOS I/O types used in an under-drive or over-drive mode.

**Device Support** LFCPNX, LFD2NX, LFMXO5, LIFCL, UT24C, UT24CP

## Note

The LAV-AT device does not support the CLAMP attribute.

**VHDL Syntax** ATTRIBUTE CLAMP: string;  
ATTRIBUTE CLAMP OF [pin\_name]: SIGNAL IS "[mode]";

**VHDL Example Code** ATTRIBUTE CLAMP OF Q: SIGNAL IS "ON";

**Verilog Syntax – Synplify** PinType [pin\_name] /\* synthesis  
CLAMP="[mode]";  
[mode] = OFF | ON

**Verilog Example Code – Synplify** module rtl\_top #(parameter width  
= 8) (DA, DB, CLK, Q);  
output [width-1:0]Q/\* synthesis CLAMP="ON"

**.Idc TCL command** ldc\_set\_port -iobuf {CLAMP=ON} [get\_ports  
Q[1]]

# DIFFDRIVE

**Convention** DIFFDRIVE = 2.0, 3.5, NA

**Description** This attribute sets the differential current drive strength for the MINILVDS output standard. An IO bank can only have differential outputs with the same DIFFDRIVE setting. The default is set to 2.0mA for MIPI and 3.5 for LVDS.

**Device Support** LAV-AT, LFD2NX, LIFCL, UT24C

**VHDL Syntax** `ATTRIBUTE DIFFDRIVE: string;`  
`ATTRIBUTE DIFFDRIVE OF [pin_name]: SIGNAL IS "[diffdrive_strength]";`

**VHDL Example Code** `ATTRIBUTE DIFFDRIVE OF portD: SIGNAL IS`  
`"2.0";`

**Verilog Syntax** `PinType [pin_name] /* synthesis IO_TYPE="[type_name]"`  
`DIFFDRIVE="[diffdrive_strength]"*/;`

**Verilog Example Code** `output mypin /* synthesis`  
`IO_TYPE="MIPI_DPHY" DIFFDRIVE="2.0"*/;`

**.Idc TCL command** `ldc_set_port -iobuf {DIFFDRIVE=2.0}`  
`[get_ports portD[1]]`

## DIFFRESISTOR

**Convention** DIFFRESISTOR = 100 (default), OFF (Available only for differential I/O types).

**Description** Attribute attached to input and output buffers (e.g., IB, OB) and is used to provide differential termination, which is only available for differential I/O types. The differential output termination is only accessible on the PIO primary pads.

**Device Support** LAV-AT, LFD2NX, LIFCL, UT24C

**VHDL Syntax** `ATTRIBUTE DIFFRESISTOR: string;`  
`ATTRIBUTE DIFFRESISTOR OF [pin_name]: SIGNAL IS "[value]";`

**VHDL Example Code** `ATTRIBUTE DIFFRESISTOR OF portD: SIGNAL IS`  
`"100";`

**Verilog Syntax** `PinType [pin_name] /* synthesis IO_TYPE="[type_name]"`  
`DIFFRESISTOR="[value]"*/;`

**Verilog Example Code** `output mypin /* synthesis IO_TYPE="LVDS"`  
`DIFFRESISTOR="100"*/;`

**.Idc TCL command** `ldc_set_port -iobuf {DIFFRESISTOR=100}`  
`[get_ports portD[1]]`

# DRIVE

**Description** Attached to bidirectional and output buffers (e.g., BB, OB, OBZ\_B, OB\_RGB), the drive strength attribute is available for output standards that support programmable drive strength.

The programmable drive available on a pad depends on the VCCIO. Also, not all drive strengths are available on an alternate PIO pad. Both the single-ended driver and differential current source driver have programmable drive strength. Only three drive settings are available when operating at 3.3 volts.

For more information about the supported values of the DRIVE attribute, refer to the following sysI/O User Guides:

- ▶ [FPGA-TN-02067, sysI/O User Guide for Nexus Platform](#)
- ▶ [FPGA-TN-02297, Lattice Avant sysI/O User Guide](#)
- ▶ [FPGA-TN-02068, MachXO3D sysI/O User Guide](#)

**Device Support** All

**VHDL Syntax** ATTRIBUTE DRIVE: string;  
ATTRIBUTE DRIVE OF [pin\_name]: SIGNAL IS "[drive\_strength]";

**VHDL Example Code** ATTRIBUTE DRIVE OF portD: SIGNAL IS "8";

**Verilog Syntax – Synplify** PinType [pin\_name] /\* synthesis  
IO\_TYPE="[type\_name]" DRIVE="[drive\_strength]" PULLMODE="[mode]"  
SLEWRATE="[value]"\*/;  
[drive\_strength] = 2, 4, 6, 8, 12, 16, 20

## Note

Example given for Pin I/O Type configuration.

**Verilog Example Code – Synplify** //output mypin /\* synthesis  
IO\_TYPE="LVTTTL33D" DRIVE="16" PULLMODE="UP" SLEWRATE="FAST"\*/;

**.Idc TCL command** ldc\_set\_port -iobuf {DRIVE=16} [get\_ports  
mypin]

## See Also

- ▶ [IO\\_TYPE](#)

# GRP

**Convention** GRP = <identifier>

**Description** Universal grouping construct. Use the GRP attribute to group blocks within different hierarchies or with no hierarchy.

You can add GRP anchor and bounding box information to the HDL with **BBOX** attribute and anchoring it with a SDC constraint. Alternatively, you can allow a GRP to float within a REGION.

Note that RLOC/GLOC (Region Lock/Group Lock) can only be used with REGION or GRP attributes. The value it takes is a site value on the device itself which can be deciphered as such:

RLOC/GLOC = "R5C19D"

i.e. Row 5, Column 19, Slice D

**Device Support** All

**Syntax** GRP="<GRP\_name>"

[BBOX="<height>,<width>"]

where:

<GRP\_name> is a user-defined name.

<site\_name> is a row/column Slice D location of the target device in the format R<n>C<m>D, an EBR site in the format EBR\_R<n>C<m>, or a DSP site in the format DSP\_R<n>C<m>.

---

**Note:**

The SLICE D location is valid for most devices except Avant.

For the Avant device, you must use SLICE F. Avant has 6 SLICES (A-F), while other devices have 4 SLICES (A-D).

---

<height> is the number of device rows of a rectangular bounding box.

<width> is the number of device columns of a rectangular bounding box.

The VHDL and Verilog examples show anchored GRPs. The current mechanism is to define the BBOX and GRP name in the attribute and the anchor location must be set via the SDC constraint `lsc_set_location`.

**VHDL Syntax** attribute GRP: string;  
attribute GRP of <object>: label is "<GRP\_name>";  
attribute BBOX: string;  
attribute BBOX of <object>: label is "<height>,<width>";

**VHDL Example Code** attribute GRP: string;  
attribute GRP of x: label is "reg\_group";  
attribute BBOX: string;  
attribute BBOX of <object>: label is "9,7";

**Verilog Syntax – Synplify** /\* synthesis GRP= "<GRP\_name>"  
BBOX= "<h,w>"  
\*/;

**Verilog Example Code – Synplify** "module serial\_reg\_custom(D,  
CLK, CE, RST, Q)  
/\* synthesis GRP = "reg\_group" GLOC= "R5C19D" BBOX= "6,4"\*/;  
serial\_reg\_custom inst1A(.D(A), .CLK(CLK), .CE(CE), .RST(RST),  
.Q(adder1\_in1));  
serial\_reg\_custom inst1B(.D(B), .CLK(CLK), .CE(CE), .RST(RST),  
.Q(adder1\_in2));  
serial\_reg\_custom inst1C(.D(adder1\_sum), .CLK(CLK), .CE(CE),  
.RST(RST), .Q(SUM));

### Note

Synthesis directives to preserve hierarchy are typically needed to retain the instances constrained by the GRP attribute.

### .ldc TCL command

```
ldc_create_group -name reg_GROUP -bbox {6 4} [get_cells {inst1A
inst1B inst1C}]
ldc_set_location -site {R5C19D} [ldc_get_groups reg_GROUP]
```

### Setting Anchor location using PDC Constraint

The anchor of a user group has to be the top slice in a PFU. The examples below specify 'F' for Avant {R5C19F} and 'D' in {R5C19D} for other devices.

```
ldc_set_location -site {R5C19F} [ldc_get_groups reg_GROUP]
ldc_set_location -site {R5C19D} [ldc_get_groups reg_GROUP]
```

**GRP Attribute Usage Rules and Restrictions** Observe the following conditions for proper GRP attribute usage:

- ▶ All elements within the GRP block belong to that particular GRP.
- ▶ Nested GRP blocks are considered as unique individual GRPs.
- ▶ All blocks belong to the GRP attached to their nearest ancestor in the hierarchy.
- ▶ Unlike GRP, the mapper will not append the hierarchical path plus the block instance name.

## GSR

**Convention** GSR= value  
GSR=ENABLED | DISABLED

**Description** Enables or disables the global set/reset function. Can be applied to a module or cell.

**Device Support** LAV-AT, LFD2NX, LIFCL, UT24C

**VHDL Syntax** `ATTRIBUTE GSR : string;`  
`ATTRIBUTE GSR OF [module_name]: entity IS "[value]";`

**VHDL Example Code** `ATTRIBUTE GSR : string;`  
`ATTRIBUTE GSR OF behave: entity IS "ENABLED";`

**Verilog Syntax – Synplify** `module [module_name] (<ports>) /* synthesis`  
`GSR= "[value]" */;`

**Verilog Example Code – Synplify** `module pci_top (portA, portB) /*`  
`synthesis GSR = "ENABLED" */;`

#### **.ldc TCL command**

```
ldc_set_attribute GSR=ENABLED
ldc_set_attribute GSR=DISABLED [get_cells {pll}]
```

## HYSTERESIS

**Convention** HYSTERESIS=ON | NA

**Description** The ratioed input buffers have two input hysteresis settings. The HYSTERESIS option can be used to change the amount of hysteresis for the PCI, LVTTTL and LVCMOS input and bidirectional I/O standards.

LVCMOS12/12H and LVCMOS10/10H do not support HYSTERESIS so this setting is always disabled for these input types. HYSTERESIS is likewise not supported for LVCMOS I/O types when used in an under-drive or over-drive mode.

The HYSTERESIS option for each of the input pins can be set independently when hysteresis is supported for the IO\_TYPE assigned to the input pin.

**Device Support** LAV-AT, LFD2NX, LIFCL, UT24C

**VHDL Syntax – Synplify** `ATTRIBUTE HYSTERESIS: string;`  
`ATTRIBUTE HYSTERESIS OF [signal_name]: SIGNAL IS "[ ON | NA]";`

**VHDL Example Code** `ATTRIBUTE HYSTERESIS OF q_lvttl133_17:`  
`SIGNAL IS "ON";`

**Verilog Syntax – Synplify** `/* synthesis HYSTERESIS= "ON" | "NA" */;`

**Verilog Example Code** `/* synthesis HYSTERESIS = "ON" */;`

```
.ldc TCL command   ldc_set_port -iobuf {HYSTERESIS=ON}
[get_ports q_lvttl33_17]
```

## INBUF

**Convention** INBUF= OFF | ON

**Description** INBUF is a global setting. All unused input buffers are disabled when INBUF is OFF to save power. When you need to perform boundary scan testing, you must turn ON the INBUF attribute. Turning ON this INBUF attribute will turn on the input buffers.

**Device Support** All

**VHDL Syntax** ATTRIBUTE INBUF : string;  
ATTRIBUTE INBUF OF [module\_name]: entity IS "[value]";

**VHDL Example Code** ATTRIBUTE INBUF : string;  
ATTRIBUTE INBUF OF behave: entity IS "OFF";

**Verilog Syntax – Synplify** module [module\_name] (ports) /\* synthesis  
INBUF= "[value]" \*/;

**Verilog Example Code – Synplify** module pci\_top (portA, portB) /\*  
synthesis INBUF= "OFF" \*/;

```
.ldc TCL command   ldc_set_port -iobuf {INBUF=OFF} [get_ports
portA]
```

## INIT

**Convention** INIT= value  
INIT=ENABLED | DISABLED

**Description** Initializes the look-up table values for all device families.

**Device Support** All

**VHDL Syntax** ATTRIBUTE INIT : string;  
ATTRIBUTE INIT OF [module\_name]: entity IS "[value]";

**VHDL Example Code** ATTRIBUTE INIT : string;  
ATTRIBUTE INIT OF behave: entity IS "ENABLED";

**Verilog Syntax – Synplify** module [module\_name] (ports) /\* synthesis  
INIT= "[value]" \*/;



**Verilog Example Code – Synplify** module pci\_top (portA, portB) /\*  
 synthesis INIT= "ENABLED" \*/;

**.Idc TCL command** ldc\_set\_port -iobuf {INIT=ENABLED} [get\_ports  
 portA]

## IO\_TYPE

**Convention** IO\_TYPE= buffer type

**Description** This is used to set the I/O standard for an I/O (input, output, and bidirectional buffers, e.g., IB, OB, and BB). Multiple values may be required that differ slightly depending on which element you are using. The VCCIO required to set these IO standards are embedded in the attribute names. There is no separate attribute to set the VCCIO requirements.

This attribute is used in conjunction with the IOBUF constraint. Refer to IOBUF (Input/Output Buffer) to see how global constraints are honored for IO\_TYPE. For valid buffer types, refer to the specific element in the FPGA Libraries Help. See the [Lattice Avant sys/O User Guide](#) and the [sys/O User Guide for Nexus Platform](#) for legal IO\_TYPE for inputs and outputs.

**Table 191: IO\_TYPE Values**

| Device Support                        | Default Value                                                                                      | IO_TYPE User Guide                                                                                                        |
|---------------------------------------|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| LAV-AT                                | LVC MOS33: default value for regular-speed I/Os.<br>LVC MOS18: default value for high-speed I/Os.  | For a more detailed information about Avant IO_TYPE values, refer to the <a href="#">Lattice Avant sys/O User Guide</a> . |
| LFC PN X<br>LFD2NX<br>LIFCL<br>LFMXO5 | LVC MOS33: default value for regular-speed I/Os.<br>LVC MOS18H: default value for high-speed I/Os. | For a more detailed information about IO_TYPE values, refer to the <a href="#">sys/O User Guide for Nexus Platform</a> .  |

**VHDL Syntax** ATTRIBUTE IO\_TYPE : string;  
 ATTRIBUTE IO\_TYPE OF [pin\_name]: SIGNAL IS "[type\_name]";

**VHDL Example Code:**

```
ATTRIBUTE IO_TYPE OF portA: SIGNAL IS "PCI33";
ATTRIBUTE IO_TYPE OF portB: SIGNAL IS "LVC MOS33";
ATTRIBUTE IO_TYPE OF portC: SIGNAL IS "SSTL33_II";
ATTRIBUTE IO_TYPE OF portD: SIGNAL IS "LVC MOS25";
```

**Verilog Syntax – Synplify** PinType [pin\_name] /\* synthesis  
 IO\_TYPE="[type\_name]" DRIVE="[drive\_strength]" PULLMODE="[mode]"

```
SLEWRATE="[value]"/;
[type_name] = (valid I/O type, such as LVCMOS18)
```

### Note

Example given for Pin I/O Type configuration.

**Verilog Example Code – Synplify**    `output [4:0] portA /* synthesis  
IO_TYPE="LVTTTL33" DRIVE="16" PULLMODE="UP" SLEWRATE="FAST"*/;`

**.Idc TCL command**    `ldc_set_port -iobuf {IO_TYPE=LVTTTL33}  
[get_ports portA[1]]`

## LOC

**Convention**    `LOC= site_name (PIN | POS)`

**Description**    Specifies a site location for the component that is created when this block is mapped. Attaching to multiple blocks indicates that these blocks are to be mapped together in the specified site.

When the device is mapped, the Map Design process (**map**) first maps blocks to PLCs without looking at LOC attributes. It then attempts to merge all PLCs with the same LOC attribute into a single PLC, and then it assigns this PLC to the site with the specified site name. If all of the blocks with the LOC attribute cannot be mapped into a single component, MAP groups together as many as possible.

When it encounters a LOC constraint, MAP also writes a LOCATE constraint for the component into the constraint file. The LOCATE constraint locks the component to the site. When you run PAR, the component cannot be unplugged, moved, swapped, or deleted.

The LOC attribute can be attached to anything that will end up on an I/O cell, and to clocks and internal flip-flops, but it should not be attached to combinational logic that will end up on a logic cell. Doing so could fail the generation of a locate constraint. The LOC attribute overrides register ordering.

**Device Support**    All

**VHDL Syntax**    `ATTRIBUTE LOC : string;  
ATTRIBUTE LOC OF [pin_name]: SIGNAL IS "[site_name]";`

**VHDL Example Code**    `ATTRIBUTE LOC : string;  
ATTRIBUTE LOC OF output_vector : SIGNAL IS "H5";`

The following examples show slice locations for packing registers:

**VHDL Example Code for Register Packing**    `ATTRIBUTE LOC : string;`

```
ATTRIBUTE LOC OF inreg : SIGNAL IS "R2C9D R2C9D R2C8D R2C8D
R2C7D R2C7D R2C6D R2C6D R2C5D R2C5D R2C4D R2C4D R2C3D R2C3D
R2C2D R2C2D";
```

**Verilog Syntax – Synplify** PinType [pin\_name] /\* synthesis  
LOC="[site\_name]"\*/;

**Verilog Example Code – Synplify** //input rst /\* synthesis  
LOC="H5" \*/ ;

**.ldc TCL command** ldc\_set\_location -site {H5} [get\_ports rst]

ldc\_define\_attribute -attr loc -value A12 -object\_type port -  
object {rst}

**Table 192: LAV-AT Device IP Site Names**

| IP     | Site Name      |
|--------|----------------|
| MPP    | MPPCIEX8_MPQ45 |
|        | MPPHYX4_MPQ4   |
|        | MPPHYX4_MPQ5   |
|        | MPPCIEX4_MPQ4  |
|        | MPPCIEX8_MPQ23 |
|        | MPPHYX4_MPQ2   |
|        | MPPHYX4_MPQ3   |
|        | MPPCIEX4_MPQ2  |
|        | MPPCIEX8_MPQ01 |
|        | MPPHYX4_MPQ0   |
|        | MPPHYX4_MPQ1   |
|        | MPPCIEX4_MPQ0  |
| DDRPHY | DDRPHY2        |
|        | DDRPHY1        |
|        | DDRPHY0        |
| PLL    | PLL12          |

**Table 192: LAV-AT Device IP Site Names (Continued)**

| IP | Site Name |
|----|-----------|
|    | PLL11     |
|    | PLL10     |
|    | PLL9      |
|    | PLL8      |
|    | PLL7      |
|    | PLL6      |
|    | PLL5      |
|    | PLL4      |
|    | PLL3      |
|    | PLL2      |
|    | PLL1      |
|    | PLL0      |

## NOCLIP

**Convention** NOCLIP=1

**Description** Assigned to a net or an instance, indicates that the net or instance cannot be removed as unused logic.

When the design is mapped, the default MAP setting removes any unused logic from the design. In most cases, you will want to do this, since unused logic takes up device components and routing resources unnecessarily. However, when you want to keep unused logic in the design, place a NOCLIP attribute on selected nets, and the nets on which you place the attribute are protected from removal, along with any valid logic connected to these nets.

For a path to be considered valid, it must have a valid input and a valid output.

Valid path inputs include:

- ▶ An input pad or the input portion of a bidirectional pad.
- ▶ A pullup or pulldown resistor.
- ▶ An oscillator primitive.
- ▶ A logic 1 or logic 0 primitive.
- ▶ A net with a NOCLIP attribute on it.


Valid path outputs include:

- ▶ An output pad or the output portion of a bidirectional pad.
- ▶ A net with a NOCLIP attribute on it.

If a path is not valid, the MAP program removes its logic as unused. To protect all or part of an invalid path from being removed, add a NOCLIP attribute to the appropriate net. The attribute can act as either a valid input or a valid output, depending on what is necessary to complete the path.

The following figure shows an example of how a NOCLIP attribute affects clipping:

**Figure 38: Example of NOCLIP Attribute Affects Clipping**

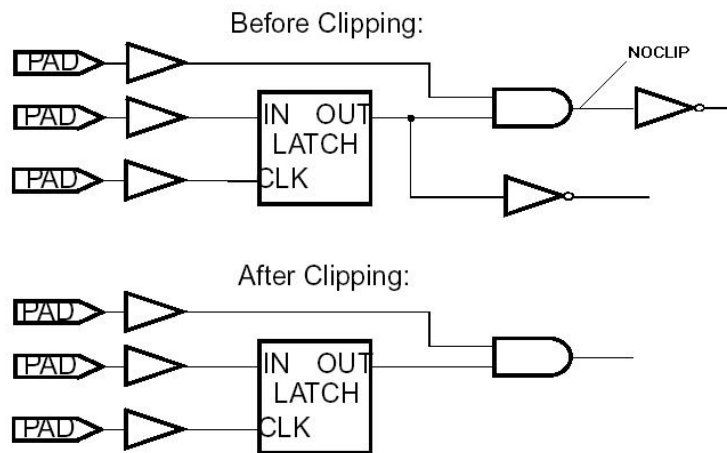

Some notes about using the NOCLIP attribute:

- ▶ If you design an on-chip oscillator (by building one from components in the device instead of using an oscillator primitive), the MAP program assumes the logic is unused and removes it because the oscillator logic does not contain a valid driver. To retain your oscillator logic, protect it by placing NOCLIP on the appropriate nets.
- ▶ If you design a circuit with a feedback loop and the looped signal is not driving any other loads but the loop itself, the loop is eliminated as unused logic. If you want to keep the loop in the design, make sure you protect the loop with a NOCLIP attribute.

#### Device Support All

**Verilog example** `wire net_a /* synthesis syn_keep=1 */ /*  
synthesis NOCLIP=1 */;`

or

`wire net_a /* synthesis syn_keep=1 NOCLIP=1 */;`

"syn\_keep" is a logic synthesis directive. "NOCLIP" applies to physical design. Both need to be specified if you want to keep the net throughout the flow and only use syn\_keep for synthesis cross-probing without NOCLIP.

**VHDL example**

```
signal net_a: std_logic;

attribute syn_keep : boolean;
attribute NOCLIP : boolean;

attribute syn_keep of net_a : signal is true;
attribute NOCLIP of net_a : signal is true;
```

Although NOCLIP is declared as boolean in VHDL, synthesis tool writes NOCLIP=1 in synthesis output.

**.Idc TCL command** `ldc_set_attribute {NOCLIP} [get_nets net_a]`

## NOMERGE

**Convention** NOMERGE= "ON"

**Description** Assigned to a net, specifies that the net cannot be absorbed into a logic block when the design is mapped. This may happen, for example, if the components connected to each side of a net are mapped into the same logic block. The net may then be absorbed into the block containing the components.

If you want to ensure that a net remains outside of a logic block, attach a NOMERGE attribute to the net. The MAP program then maps the net in a way that ensures you do not "lose" the net inside a logic block.

**Device Support** All

**Verilog Syntax** `Output signal_name /* synthesis NOMERGE="ON | OFF" */;`

**Verilog Example Code – Synplify** `output q_lvttl33_17 /* synthesis NOMERGE="ON" */;`

**VHDL Syntax** `ATTRIBUTE NOMERGE: string;  
ATTRIBUTE NOMERGE OF [signal_name]: SIGNAL IS "ON";`

**VHDL Example Code** `ATTRIBUTE NOMERGE OF q_lvttl33_17: SIGNAL IS "ON";`

**.Idc TCL command** `ldc_set_location {NOMERGE} [get_nets q_lvttl33_17]`

**See Also**

▶ [“IO\\_TYPE” on page 813](#)

## OPENDRAIN

**Convention** OPENDRAIN = OFF | ON

**Description** You can assign OPENDRAIN to all the LVCMOS and LVTTTL standards. OFF is the default.

If OPENDRAIN is used on a bidirectional pin or an output pin, to be valid (does not generate design errors) it either must, 1) be a non-differential output buffer with OPENDRAIN attached, or 2) a non-differential outputZ/bidi buffer in which the “I” (input to output buffer) pin is set to GND and “T” (tristate enable) is live whether the OPENDRAIN attribute is passed or not. The “I” and “T” signals connected together, it does not matter. If the “I” and “T” of outputZ are unique signals and the “I” signal is not set to GND, then OPENDRAIN is not valid.

**Device Support** LAV-AT, LFD2NX, LIFCL, UT24C

**VHDL Syntax** ATTRIBUTE OPENDRAIN: string;  
ATTRIBUTE OPENDRAIN OF [signal\_name]: SIGNAL IS "[value]";

**VHDL Example Code** ATTRIBUTE OPENDRAIN OF q\_lvttl133\_17: SIGNAL IS "ON";

**Verilog Syntax** Output signal\_name /\* synthesis OPENDRAIN="ON | OFF" \*/;

**Verilog Example Code** output q\_lvttl133\_17 /\* synthesis OPENDRAIN="ON" \*/;

**.Idc TCL command** ldc\_set\_port -iobuf {OPENDRAIN=ON} [get\_ports {q\_vttl133\_17}]

## PULLMODE

**Convention** PULLMODE= DOWN (default), UP, NONE, I3C, KEEPER, FAILSAFE, 100K, 3P3K, 6P8K, 10K, NA

**Description** Attached to IO buffers, the PULLMODE attribute has the following mode parameters

- ▶ DOWN (default) – Pull down
- ▶ UP – Pull up
- ▶ NONE – No pull up/down

- ▶ **KEEPER** – Retain the last state if bus connected to this IO goes to tri-state.
- ▶ **FAILSAFE** – For differential IOs, uses a weak pullup on the "true" pad and a weak pulldown on the "complement" pad to give a determinate value when undriven.
- ▶ **I3C**
  - ▶ If the BB\_I3C\_B primitive is used, the I3C value will be set for Avant devices. This is for the Avant I3C buffer.
  - ▶ If the BB\_I3C\_A primitive is used, the I3C value will be set for Nexus devices. This is for the Nexus I3C buffer.

The PULLMODE options can be enabled for each I/O independently.

**Device Support** All

**VHDL Syntax** `ATTRIBUTE PULLMODE: string;`  
`ATTRIBUTE PULLMODE OF [pin_name]: SIGNAL IS "[mode]";`

**VHDL Example Code:** `ATTRIBUTE PULLMODE OF md: SIGNAL IS "3P3K";`

**Verilog Syntax – Synplify** `PinType [pin_name] /* synthesis`  
`IO_TYPE="[type_name]" DRIVE="[drive_strength]" PULLMODE="[mode]"`  
`SLEWRATE="[value]";`

### Note

Example given for Pin I/O Type configuration.

**Verilog Example Code – Synplify** `portA /* synthesis`  
`IO_TYPE="LVCMOS33" DRIVE="NA" PULLMODE="3P3K" */;`

**.Idc TCL command** `ldc_set_port -iobuf {PULLMODE=100K}`  
`[get_ports {A[4]}]`

### See Also

- ▶ [“IO\\_TYPE” on page 813](#)

## RBBOX

**Convention** RBBOX = H,W (where *H* is height, *W* is width)

**Description** RBBOX indicates the area size a region. This attribute must appear on the same block as REGION attribute (old attribute is PREGION). Required if REGION exists. This has replaced the old PRBBOX attribute which is also still valid for backwards compatibility.



**Device Support** All

### See Also

► ["REGION" on page 821](#) (attribute)

## REGION

**Convention** REGION = <identifier>

**Description** REGION indicates the region to which a given [GRP](#) belongs. This attribute must appear on a block that has a GRP attribute. This has replaced the old PREGION attribute which is also still valid for backwards compatibility.

Note that RLOC / GLOC (Region Lock / Group Lock) can only be used with REGION or GRP attributes. The value it takes is a site value on the device itself which can be deciphered as such:

RLOC/GLOC = "R5C19D"

i.e. Row 5, Column 19, Slice D

**Device Support** All

**VHDL Syntax** attribute REGION: string;  
 attribute REGION of <object>: label is "<REGION\_name>";  
 attribute RLOC: string;  
 attribute RLOC of <object>: label is "<site>";  
 attribute RBBOX: string;  
 attribute RBBOX of <object>: label is "<height>,<width>";  
 attribute GRP: string;  
 attribute GRP of <object>: label is "<GRP\_name>";  
 attribute GLOC: string;  
 attribute GLOC of <object>: label is "<site>";  
 attribute BBOX: string;  
 attribute BBOX of <object>: label is "<height>,<width>";

**VHDL Example Code:** attribute REGION: string;  
 attribute REGION of x: label is "reg\_group";  
 attribute RLOC: string;  
 attribute RLOC of <x>: label is "R5C19D";  
 attribute RBBOX: string;  
 attribute RBBOX of <x>: label is "20,15";  
 attribute GRP: string;  
 attribute GRP of <x>: label is "reg\_GRP";  
 attribute GLOC: string;  
 attribute GLOC of <x>: label is "R10C20D";  
 attribute BBOX: string;  
 attribute BBOX of <x>: label is "5,5";

**Verilog Syntax – Synplify** /\* synthesis REGION="<REGION\_name>"  
RBBOX="<h,w>" \*/;

// The attribute must appear on the same block as the RBBOX attribute.

**Verilog Example Code Synplify** "module serial\_reg\_custom(D, CLK,  
CE, RST, Q) /\* synthesis REGION="reg\_REGION"  
RLOC= "R5C19D"  
RBBOX= "20,15"  
GRP= "reg\_GRP"  
GLOC="R10C20D"  
BBOX= "5,5"\*/;

```
serial_reg_custom inst1A(.D(A), .CLK(CLK), .CE(CE), .RST(RST),
.Q(adder1_in1));
serial_reg_custom inst1B(.D(B), .CLK(CLK), .CE(CE), .RST(RST),
.Q(adder1_in2));
serial_reg_custom inst1C(.D(adder1_sum), .CLK(CLK), .CE(CE),
.RST(RST), .Q(SUM));

count count_inst(A,CLK,RST) /* synthesis REGION="reg_REGION" */
;
```

#### .ldc TCL command

```
ldc_create_region -name reg_REGION -site R5C19D -width 20 -
height 15
ldc_create_group -name reg_GROUP -bbox {5 5} [get_cells {inst1A
inst1B inst1C}]
ldc_set_location -site {R10C20D} [ldc_get_groups reg_GROUP]
ldc_set_location -region reg_REGION [get_cells {inst1A inst1B
inst1C count_inst}]
```

#### See Also

▶ [“GRP” on page 808](#) (attribute)

## RGB\_TO\_GPIO

**Convention** RGB\_TO\_GPIO = String

**Description** Specific to the iCE40UP device by default, there are three dedicated pins for RGB use. In order to free up these pins for use as general purpose IOs (GPIO), an attribute can be applied to make use of these three pins.

When an IO port is manually located to one of the RGB pins by the user and the RGB primitive is not used for the port signal, the software can automatically configure the port as a GPIO without using this attribute.

This attribute is applicable to the module level in Verilog and architecture level in VHDL.

### Note

1. When an I/O port is manually located to one of the RGB pins by the user and the RGB primitive is not used for the port signal, the software can automatically configure the port as a GPIO without using this attribute.
2. This attribute is not applicable to RTL simulation and post synthesis, but applies to post route simulation. Also, a pull-up is needed in the test bench to avoid a High-Z.

### Device Support ICE40UP

**VHDL Syntax** `ATTRIBUTE RGB_TO_GPIO : string;`  
`ATTRIBUTE RGB_TO_GPIO of [architecture name]: architecture is`  
`"[pin_name]";`

**VHDL Example Code** `ATTRIBUTE RGB_TO_GPIO : string;`  
`ATTRIBUTE RGB_TO_GPIO OF behav : architecture is`  
`"cam_data[0:0], cam_pclk";`

**Verilog Syntax** `/* synthesis RGB_TO_GPIO = "[pin_name]" */;`

**Verilog Example Code** `module abc (cam_pclk, cam_data, q) /*`  
`synthesis RGB_TO_GPIO = "cam_data[0:1], cam_pclk" */ ;`

## SLEWRATE

**Convention** `SLEWRATE = FAST | SLOW | MED`

**Description** Attached to all output buffers (e.g., OB, OBW) and bidirectional buffers, the SLEWRATE attribute mode parameters are FAST, SLOW or MED for all families.

Each I/O pin has an individual slew rate control. This allows designer to specify slew rate control on pin by pin basis. The slew rate controls affects both the rising edge and the falling edges. The default SLEWRATE is MEDIUM.

**Device Support** LAV-AT, LFD2NX, LIFCL, UT24C

**VHDL Syntax** `ATTRIBUTE SLEWRATE: string;`  
`ATTRIBUTE SLEWRATE OF [pin_name]: SIGNAL IS "[value]";`

**VHDL Example Code** `ATTRIBUTE SLEWRATE OF portA: SIGNAL IS`  
`"SLOW";`

**Verilog Syntax** `PinType [pin_name] /* synthesis IO_TYPE="[type_name]"`  
`DRIVE="[drive_strength]" PULLMODE="[mode]" SLEWRATE="[value]" */;`

**Verilog Example Code**    `output [4:0] portA /* synthesis  
IO_TYPE="LVCMOS33" DRIVE="16" PULLMODE="UP" SLEWRATE="FAST" */;`

**.Idc TCL command**    `ldc_set_port -iobuf {SLEWRATE=FAST}  
[get_ports {portA}]`

## USERCODE

**Description**    Defines the 32-bit code used to identify the design.

Note that the TCL command uses a combination of FORMAT and UNIQUE\_ID instead to represent USERCODE with no such keyword. See `ldc_set_attribute` for details.

**Device Support**    All devices except iCE40UP

**.Idc TCL command**    `ldc_set_attribute {FORMAT=HEX CODE=0123ABCD}`

## Lattice Synthesis Engine Constraints

The LSE, enables you to use constraints that are directly interpreted by the synthesis engine. This new category of constraints includes [“Synopsys Design Constraints” on page 824](#), and [“Lattice Synthesis Engine-Supported HDL Attributes” on page 846](#). These constraints influence the optimization or structure of the output netlist.

**See Also**    ▶ [“Integrated Synthesis” on page 340](#)

▶ [“Handling Device Constraints” on page 225](#)

## Synopsys Design Constraints

This section describes the SDC language elements for timing-driven synthesis that are supported by the LSE. When you use LSE, these SDC constraints are saved to a Lattice Design Constraints file (.Idc). A new .Idc file can be created and edited using the Source Editor. You can select the .Idc file to be the active synthesis constraint file for an implementation.

The SDC constraints will drive optimization of the design if LSE's Optimization Goal is set for timing in the active strategy file.

**Considerations about LSE Timing**    The module delay in LSE is based on the primitive level, before logic is packed into a slice. Therefore, the delay might be different from the slice-based MAP or PAR Timing analysis report (.twr). Also, some elements are modeled as black boxes in LSE.

The routing delay algorithm in LSE is different from the estimated routing delay in Map or Place.

The current LSE timing does not take the PLL/DLL frequency or phase shift properties into account. It also does not model the different IO\_TYPE in the PIO. Therefore, it is necessary to adjust the timing constraint. For example, you can explicitly include a timing constraint on the PLL outputs with the phase-shift property. The timing engine will generate the clocks if the logical device data is available.

**See Also** ▶ [“Design Objects” on page 825](#)

- ▶ [“create\\_clock” on page 830](#)
- ▶ [“create\\_generated\\_clock” on page 832](#)
- ▶ [“generate\\_uncertainty” on page 808](#)
- ▶ [“set\\_clock\\_groups” on page 834](#)
- ▶ [“set\\_clock\\_latency” on page 836](#)
- ▶ [“set\\_clock\\_uncertainty” on page 836](#)
- ▶ [“set\\_false\\_path” on page 845](#)
- ▶ [“set\\_input\\_delay” on page 837](#)
- ▶ [“set\\_load” on page 840](#)
- ▶ [“set\\_max\\_delay” on page 840](#)
- ▶ [“set\\_max\\_skew” on page 842](#)
- ▶ [“set\\_min\\_delay” on page 842](#)
- ▶ [“set\\_multicycle\\_path” on page 843](#)
- ▶ [“set\\_output\\_delay” on page 839](#)
- ▶ [“Integrated Synthesis” on page 340](#)
- ▶ [“Handling Device Constraints” on page 225](#)

## Design Objects

Design objects can be referred to in the SDC as a single object, or as a collection of objects. Single objects must be referred to as a collection of a single object. The current implementation of the SDC commands allows only single objects in the collection. The exception to this are the all\_\* commands.

In the examples below, *<target name>* is a regular expression that matches one object only.

## Clock Object

| SDC Collection             | Description                                                                                                                     |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| [get_clocks <target name>] | <target name> is the name of the clock. Clock is either given a name or gets its name from the port/net on which it is defined. |
| [all_clocks]               | Collection of all clocks in the design.                                                                                         |

**Examples:** [get\_clocks clock\_fast]

[all\_clocks]

## Port Object

| SDC Collection             | Description                                            |
|----------------------------|--------------------------------------------------------|
| [get_ports <target name>]: | Collection of a design port that matches <target name> |
| [all_inputs]               | Collection of all design input ports                   |
| [all_outputs]              | Collection of all design output ports                  |

**Examples:** [get\_ports indata\*]

[all\_inputs]

## Cell Object

| SDC Collection             | Description                                                |
|----------------------------|------------------------------------------------------------|
| [get_cells <target name>]: | Collection of a design instance that matches <target name> |

## Net Object

| SDC Collection            | Description                                           |
|---------------------------|-------------------------------------------------------|
| [get_nets <target name>]: | Collection of a design net that matches <target name> |
|                           | Hierarchy is specified using regular expression.      |

## Pin Object

| SDC Collection                           | Description                                           |
|------------------------------------------|-------------------------------------------------------|
| [get_pins <instance name>   <pin name>]: | Collection of a design pin that matches <target name> |
|                                          | Hierarchy is specified using regular expression.      |

The get\_nets command can be used to define the target for a create\_generated\_clock command.

## Wildcard support

Only one wildcard (\*) is supported. In addition, the wildcard should be at the end or beginning of the object name string. For example:

ab\* matches abc, ab, abcdefg, etc.

\*bc matches abc, bbc, debc, etc.

Notes:

1. Wildcard \* can be used in any position of object name such as a\*, \*b, a\*b etc.
2. Wildcard \* can't cross hierarchical separator /. For example, get\_cells sub1/\* only returns sub1/sub2 and doesn't return sub1/sub2/sub1 or sub1/sub2/sub1/sub2 etc.
3. When -hierarchical is set, it will search all levels of the design hierarchy starting at the current instance. For example, in set\_false\_path -hierarchical [get\_cells -hierarchical -filter "is\_ff == true"]: Sets a false path constraint on all flip-flops within the entire design hierarchy. The -hierarchical option ensures that the search includes all levels of the hierarchy..

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## Object Access Commands

The table below summarizes standard SDC access commands and their options.

| Command       | Description                                                                                                                                                                                                                                                                    | Options                                                                   |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| all_clocks    | Use cases: <ul style="list-style-type: none"> <li>▶ List all the clock objects in the design to understand the clocking structure.</li> <li>▶ Apply timing or other constraints to all clocks in the design.</li> <li>▶ Perform timing analysis on all clocks.</li> </ul>      | N/A.                                                                      |
| all_inputs    | Use cases: <ul style="list-style-type: none"> <li>▶ Identify all input ports in the design to understand the input interface.</li> <li>▶ Apply timing or other constraints to all input ports in the design.</li> <li>▶ Perform timing analysis on all input paths.</li> </ul> | -level_sensitive, -edge_triggered, -clock                                 |
| all_registers | <ul style="list-style-type: none"> <li>▶ List all the registers (flip-flops) in the design.</li> <li>▶ Apply timing or other constraints to all registers in the design.</li> <li>▶ Perform timing analysis on all register paths.</li> </ul>                                  | -no_hierarchy, -cells, -data_pins, -clock_pins, -async_pins, -output_pins |
| all_outputs   | <ul style="list-style-type: none"> <li>▶ Identify all output ports in the design to understand the input interface.</li> <li>▶ Apply timing or other constraints to all output ports in the design.</li> <li>▶ Perform timing analysis on all output paths.</li> </ul>         | -level_sensitive, -edge_triggered, -clock                                 |



| Command          | Description                                                                                                                                                                                  | Options                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| current_design   | Specify the current design context. It sets the design that subsequent commands will operate on within the tool.                                                                             | <p>The current_design command does not have specific options or arguments. Once the current design context is set, subsequent commands will operate on that design.</p> <p>For example:</p> <pre># Set the current design to 'top_module' current_design top_module  # Now, subsequent commands will operate on 'top_module' analyze -format verilog {design.sv}</pre> <p>In the example, current_design top_module sets the current design to top_module, and the following commands (analyze and elaborate) will be applied to top_module.</p> |
| current_instance | Sets the current instance within the design hierarchy.                                                                                                                                       | <p>The current_instance command does not have specific options or arguments. It takes the name of the instance you want to set as the current instance.</p> <p>For example:</p> <pre>current_instance &lt;instance name&gt;</pre>                                                                                                                                                                                                                                                                                                                |
| get_cells        | Queries and retrieves a collection of cells (or instances) within the design based on certain criteria.                                                                                      | -hierarchical, -regexp, -nocase, -of_objects                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| get_clocks       | Queries and retrieves a collection of clock objects within the design based on certain criteria.                                                                                             | -regexp, -nocase                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| get_nets         | Queries and retrieves a collection of net objects within the design based on certain criteria. Nets represent the connections between different components, such as gates, cells, and ports. | -hierarchical, -hsc_separator, -regexp, -nocase, -of_objects                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| get_pins         | Query and retrieve a collection of pin objects within the design based on certain criteria. Pins represent the connection points on cells or modules where nets are attached.                | -hierarchical, -hsc_separator, -regexp, -nocase, -of_objects                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| get_ports        | Query and retrieve a collection of port objects within the design based on certain criteria. Ports are the external interfaces of a design, such as input, output, and bidirectional ports.  | -regexp, -nocase                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

**Example** The following example shows how `-of_objects` is used:

---

```
get_pins -of_objects [get_nets {c[2]}]
get_cells -of_objects [get_nets -of_objects [get_pins {c/clock}]]
c
```

---

## create\_clock

Creates a clock and defines its characteristics.

### Note

In LSE timing, interclock domain paths are always blocked for `create_clock`. However, the interclock domain path is still valid for constraints such as `set_false_path` and `set_multicycle_path`.

---

**Syntax** `create_clock -period <period>[-name <clock name>] [-waveform <value1 value2>] [<source_object>] [-add]`

### Arguments

`-name` *name*

The name string specifies the name of the clock. If this parameter is not given, the name of the source object is used as the name of the clock.

`-period` *period\_value*

This value is required and it specifies the clock period in nanoseconds. The value you specify is the minimum time over which the clock waveform repeats. The value specified for the period must be positive as the period of a clock must be greater than zero. The duty cycle of the clock is 50 percent.

`-waveform` {*value1 value2*}

The values are a list of edge values. Only two edges are supported. Floating values are accepted. Value1 must be less than value2, and the difference must be less than the clock period. Note that each value must also be less than the clock period.

*source\_object*

This value is the object on which the clock constraint is defined. The source object can be a port, a pin, or a net object in the design. The object is obtained by using one of the `get_ports` or `get_nets` commands. If you specify a clock constraint in a source object that already has a clock, the new clock replaces the existing one. Only one source object is accepted. Wildcards are accepted as long as the resolution displays one port or net object.

**-add**

This option allows you to define another clock to an object that has an existing clock.

**Example** The following example creates two clocks on ports CK1 and CK2 with a period of 6:

---

```
create_clock -name my_user_clock -period 6 [get_ports CK1]
create_clock -name my_other_user_clock -period 6 [get_ports CK2]
```

---

**Example** The following example creates a clock on port CK3 with a period of 7.1, and has two edges at 0 and 4.1:

---


```
create_clock -period 7.1 -waveform {0 4.1} [get_ports CK3]
```

---

**Example** Radiant Virtual Clocks are external to the FPGA and only trigger flip flops that are outside the FPGA. These clocks do not trigger flip flops from

inside the FPGA and are only used as the clock objects of the constraints with `set_input_delay` and `set_output_delay`.

**Example** In the following example, CLK1 and CLK3 are virtual clocks.

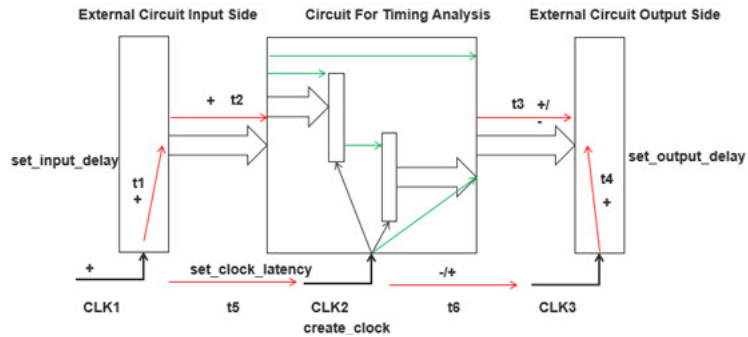

Input and output delay constraints must take external delays into consideration.

Input side:

```
create_clock -period T -name CLK1
create_clock -period T -name CLK2 [get_ports CLK]
set_clock_latency t5 [get_clocks CLK2]
set_input_delay t1 + t2 -clock [get_clocks CLK1] [all_inputs]
```

Output side:

```
create_clock -period T -name CLK3
set_output_delay t3 + t4 - t6 -clock [get_clocks CLK3]
[all_outputs]
```

If there is clock uncertainty:

```
set_clock_uncertainty tu [get_clocks CLK2]
```

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## create\_generated\_clock

Commands to create an internally generated clock object and define its characteristics.

**Syntax** `create_generated_clock` [-name <clock\_name>] -source <source\_object> [-edges {<value1 value2 value3>}] [-edge\_shift {<value1 value2 value3>}] [-divide\_by <factor>] [-multiply\_by <factor>] [-duty\_cycle <percent>] [-invert] [-add] [-master\_clock <clock>] <object\_list>

### Arguments

-name clock\_name

This name string specifies the name of the generated clock (Optional).

-source source\_object

This value is an object on which the source clock of the generated clock is defined.

The source object can be a port, pin or a net object. The period of the generated clock is derived from the clock on the source object using the multiply and divide factors.

**-edges {value1 value2 value3}**

These values are a list of three numbers which correspond to the edge of the source clock from which the generated clock has been obtained (Optional).

This option cannot be used with '-divide\_by', '-multiply\_by' and '-duty\_cycle'.

**-edge\_shift {value1 value2 value3}**

These values are a list of three numbers that represents the amount of shift (Optional).

**-divide\_by factor**

This value specifies the frequency division factor. Default value is 1 (Optional).

The frequency of the generated clock is equal to the frequency of the source clock divided by this factor, if the multiply by factor is not specified..

**-multiply\_by factor**

This value specifies the frequency multiplication number to be used when finding the generated clock frequency. Default value is 1 (Optional).

**-duty\_cycle factor**

This value specifies the duty cycle in percentage of the clock period. The value can be floating point and ranges from 0 to 100. The default value is 50 (Optional).

This option cannot be used with '-divide\_by'.

**-invert**

This option inverts the clock edge (Optional).

**-add**

This option allows defining another clock on an object that already has a generated clock (Optional).

**-master\_clock clock**

This value specifies the master clock for the generated clock object if there are multiple clocks found on the source object (Optional).

**object\_list**

This value is a list of clock source pins, ports, or nets.

### Example1

The following example creates a generated clock on pin pll1/CLKOP with a period twice as long as the period at the reference port CLK:

---

```
create_generated_clock -divide_by 2 -source [get_ports CLK]
[get_pins pll1/CLKOP]
```

---

### Example 2

The following example creates a generated clock at the primary output of myPLL/CLK1 with a period three quarters of the period at the reference pin clk:

---

```
create_generated_clock -divide_by 3 -multiply_by 4 -source
[get_ports clk] [get_pins myPLL/CLK1]
```

---

**Example 3** The following example shows a clock with a duty cycle of 60 percent:

---

```
create_generated_clock -duty_cycle 60 -source [get_ports clk]
[get_pins myPLL/CLK1]
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_clock\_groups

Commands to specify clock groups that are mutually exclusive or asynchronous with each other in a design so that the paths between these clocks are not considered during timing analysis.

**Syntax** set\_clock\_groups [-logically\_exclusive | -physically\_exclusive | -asynchronous] -group [get\_clocks <clock\_objects>] -group [get\_clocks <clock\_objects>]

### Arguments

-logically\_exclusive

This option specifies that clocks are mutually exclusive and will not reach the flip flops at the same time due to logic implementation (Optional).

-physically\_exclusive

This option specifies that clocks are mutually exclusive. Only one clock group is active at any given time (Optional).

-asynchronous

This option specifies that the clock groups are asynchronous to each other. Two clocks are asynchronous with respect to each other if they have no phase relationship at all (Optional).

One option among '-logically\_exclusive', '-physically\_exclusive' and '-physically\_exclusive' is needed and they are mutually exclusive.

#### **-group clock\_objects**

This value specifies the clock objects in a group. At least one '-group' is needed (Optional).

Each group of clocks is exclusive or asynchronous with the clocks which are specified in the other group.

Specifying one group indicates that the clocks in this group are exclusive or asynchronous with all other clocks in the design including one clock which is created in the future.

### **Example 1**

The following example specifies two clock ports (clka and clkb) are asynchronous to each other.

---

```
create_clock -period 10.000 -name clka_port [get_ports clka]
create_clock -period 10.000 -name clkb_port [get_ports clkb]
# Set clka_port and clkb_port to be mutually exclusive clocks.
set_clock_groups -asynchronous -group [get_clocks clka_port] -
group [get_clocks clkb_port]
# The previous line is equivalent to the following two
commands.
set_false_path -from [get_clocks clka_port] -to [get_clocks
clkb_port]
set_false_path -from [get_clocks clkb_port] -to [get_clocks
clka_port]
```

---

### **Example 2**

The following example specifies four clock constraints that won't be active at the same time:

---

```
create_clock -period 10.000 -name clka_port [get_ports clka]
create_clock -period 10.000 -name clkb_port [get_ports clkb]
create_clock -period 10.000 -name clkc_port [get_ports clkc]
set_clock_groups -logically_exclusive -group [get_clocks
{clka_port clkb_port}] -group [get_clocks clkc_port]
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_clock\_latency

Commands to define a clock's source or network latency.

**Syntax** `et_clock_latency [-rise] [-fall] [-early | -late] -source <latency>  
<object_list>`

### Arguments

-rise

This option specifies the latency for the rising clock edge (Optional).

-fall

This option specifies the latency for the falling clock edge (Optional).

-early|-late

This option specifies how early|late the clock edge arrives (Optional).

Option '-early' and '-late' are mutually exclusive.

-source

This option indicates the specified latency as a source latency.

latency

This value specifies the value of latency.

object\_list

This value is a list of clocks. You can also use the keyword '[all\_clocks]' to include all clocks.

### Examples:

---

```
set_clock_latency 3 -source -early [get_clocks clk1]  
set_clock_latency 4 -source -late [all_clocks]
```

---

## set\_clock\_uncertainty

Commands to indicate that the clock of interest has uncertainties in its period.

**Syntax** `set_clock_uncertainty [-setup] [-hold] [-from <clock>] [-to <clock>]  
<uncertainty> [<clock_list>]`

### Arguments

-setup

This option indicates the constraint for setup analysis (Optional).

-hold



This option indicates the constraint for hold analysis (Optional).

-from clock

This value specifies uncertainty source clock and the timer requires the 'from' option to be accompanied by a 'to' option (Optional).

-to clock

This value specifies uncertainty destination clock (Optional).

uncertainty

This value specifies the amount by which the clock period is uncertain.

clock\_list

This value is a list of clocks. You can also use the keyword '[all\_clocks]' to include all clocks (Optional).

One option between '-from' and 'clock\_list' is needed and they are mutually exclusive.

This constraint requires at least one of the clock options. The number given by value, is the amount by which the clock period is uncertain. The timer will use this value to add additional requirement to all paths affected by the selected clock. The timer requires the 'from' option to be accompanied by a 'to' option. The setup option indicates the constraint for setup analysis and the hold constraint for hold analysis.

The timing engine can create uncertainty constraints to account for the jitter of the various clock sources and the clock tree. These constraints will be generated only if there is no specified uncertainty constraint for a clock or a clock pair.

## Examples

The following two examples specify clock uncertainty, one with a from/to.

The first constraint sets the uncertainty of clk1 to half a nanosecond and the second constraint sets the uncertainty to 400 picoseconds when a path is launched by clk2 and captured by clk3.

---

```
set_clock_uncertainty 0.5 [get_clocks clk1]
set_clock_uncertainty 0.4 -from [get_clocks clk2] -to
[get_clocks clk3]
```

---

## set\_input\_delay

Commands to define the arrival time of an input relative to a clock.

**Syntax** set\_input\_delay -clock <clock\_object> [-clock\_fall] [-max | -min] [-add\_delay] <delay\_value> <port\_list>

## Arguments

-clock clock\_object

This value specifies the clock reference to which the specified input delay is related.

-clock\_fall

This option is a switch to specify the falling edge of clock to trigger (Optional).

-max

This option specifies that the delay value is the maximum delay (Optional).

-min

This option specifies that the delay value is the minimum delay (Optional).  
Option '-max' and '-min' are mutually exclusive.

add\_delay

This option is used to define more than one input delay on a given port (Optional).

delay\_value

This value specifies the arrival time in nanoseconds that represents the amount of time for which the signal is available at the specified input after a clock edge.

port\_list

This value provides one or more input ports in the current design to which delay\_value is assigned. You can also use the keyword '[all\_inputs]' to include all input ports.

## Example 1

The following example sets an input delay of 1.2 ns for port data1 relative to the rising edge of CLK1:

---

```
set_input_delay 1.2 -clock [get_clocks CLK1] [get_ports data1]

set_output_delay 4.0 -clock [get_clocks vclk] -add_delay
[get_ports out2]
```

---

## Example 2

The following example sets an input delay of 1.2 ns minimum and 1.5 ns maximum for port data1 relative to the rising edge of CLK1:

---

```
set_input_delay 1.2 -min -clock [get_clocks CLK1] [get_ports data1]
set_input_delay 1.5 -max -clock [get_clocks CLK1] [get_ports data1]
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_output\_delay

Commands to define the output delay of an output relative to a clock.

**Syntax** `set_output_delay -clock <clock_object> [-clock_fall] [-max | -min] [-add_delay] <delay_value> <port_list>`

### Arguments

`-clock clock_object`

This value specifies the clock reference to which the specified output delay is related.

`-clock_fall`

This option is a switch to specify the falling edge of clock to trigger (Optional).

`-max`

This option specifies that the delay value is the maximum delay (Optional).

`-min`

This option specifies that the delay value is the minimum delay (Optional). Option '-max' and '-min' are mutually exclusive.

`-add_delay`

This option is used to define more than one output delay on a given port (Optional).

`delay_value`

This value specifies the amount of time from a reference clock to a primary output port.

`port_list`

This value provides one or more output ports in the current design to which `delay_value` is assigned. You can also use the keyword '[all\_outputs]' to include all output ports.

### Example 1

The following example sets an output delay of 1.2 ns for all outputs relative to CLK1:

---

```
set_output_delay 1.2 -clock [get_clocks CLK1] [get_ports OUT1]
set_output_delay 1.2 -clock [get_clocks CLK1] [all_outputs]
```

---

### Example 2

The following example sets an output delay of 1.2 ns minimum and 1.5 ns maximum for port data1 relative to the rising edge of CLK1:

---

```
set_output_delay 1.2 -min -clock [get_clocks CLK1] [get_ports
data1]
set_output_delay 1.5 -max -clock [get_clocks CLK1] [get_ports
data1]
```

---

**See Also** [“Synopsys Design Constraints” on page 824](#)

## set\_load

Commands to set capacitance on ports.

**Syntax** `set_load <capacitance> <objects>`

**Arguments** *delay\_value*

capacitance

This value specifies the load in capacitance in pF.

objects

This value provides one or more output ports in the current design to which capacitance is assigned. You can also use the keyword '[all\_outputs]' to include all output ports..

**Example** The following example sets a capacitive load of 25 pF for output port OUT:

---

```
set_load 25 [get_ports {out}]
```

---

## set\_max\_delay

Commands to specify the maximum delay for the timing paths.

**Syntax** `set_max_delay`

`[[[-from <port_list|pin_list|instance_list|clock_list>] | [-rise_from <clock_list>] | [-fall_from <clock_list>]]`

```
[[ -to <port_list|pin_list|instance_list|clock_list> ] | [-rise_from <clock_list>] |
[-fall_from <clock_list>]]
[[ -through <port_list|pin_list|instance_list|net_list> ] [-datapath_only]
<delay_value>
```

### Arguments

-from port\_list|pin\_list|instance\_list|clock\_list

This value specifies the timing path start points (Optional).

-to port\_list|pin\_list|instance\_list|clock\_list

This value specifies the timing path end points (Optional).

-through object\_list

This value specifies the timing path pass through points. The timing paths must go through these points (Optional).

-rise\_from|fall\_from clock\_list

Same as '-from' but only applies to clock objects.

Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.

-rise\_to|fall\_to clock\_list

Same as '-to' but only applies to clock objects.

Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive.

At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.

-datapath\_only

This option calculates the Clock-to-Q delay of the first flop, the total delay between the flops, and the setup time of the second flop (Optional).

delay\_value

This value specifies a floating point number in nanoseconds that represents the required maximum delay value for specified paths.

**Examples** The following example sets a maximum delay by constraining all paths from ff1a:CLK to ff2e:D with a delay less than or equal to 5 ns:

---

```
set_max_delay -from [get_cells ff1a] -to [get_cells ff2e] 5.0

set_max_delay -from [get_pins ff1a/CLK] -through [get_pins
and1/B] -to [get_pins ff2e/D] 5.0
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_max\_skew

Commands to define the max skew of a path.

**Syntax** set\_max\_skew <net\_list|pin\_list> <skew\_value>

**Arguments** object\_list

net\_list|pin\_list

This value is a list of pins or nets.

skew\_value

This value controls the delay to the various loads of the net relative to each other.

### Examples

The following example shows that the first constraint requires the maximum difference between the net delays of the loads on the net connected to pin “A” to be less than or equal to 250 picoseconds.

The second constraint requires the difference between the net delays to the various loads of the net “ff1/Q\_c” to be less than or equal to 370 picoseconds:

---

```
set_max_skew [get_pins A] 0.25
set_max_skew [get_nets ff1/Q_c] 0.37
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_min\_delay

Commands to specify the minimum delay for the timing paths.

**Syntax** set\_min\_delay

```
[[ -from <object_list> ] | [ -rise_from <object_list> ] | [ -fall_from <object_list> ] ]
[[ -to <object_list> ] | [ -rise_to <object_list> ] | [ -fall_to <object_list> ] ]
[ -through <object_list> ] <delay_value>
<object_list> = [(get_ports | get_pins | get_nets | get_cells | get_clocks)
<names>]
```

### Arguments

-from port\_list|pin\_list|instance\_list|clock\_list

This value specifies the timing path start points (Optional).

-to port\_list|pin\_list|instance\_list|clock\_list

This value specifies the timing path end points (Optional).

**-through object\_list**

This value specifies the timing path pass through points. The timing paths must go through these points (Optional).

**-rise\_from|fall\_from clock\_list**

Same as '-from' but only applies to clock objects.

Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.

**-rise\_to|fall\_to object\_list**

Same as '-to' but only applies to clock objects.

Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive.

At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.

**delay\_value**

This value specifies a floating point number in nanoseconds that represents the required minimum delay value for specified paths.

**Examples** The following example sets a minimum delay by constraining all paths from ff1a:CLK to ff2e:D with a delay greater than or equal to 5 ns:

---

```
set_min_delay -from [get_cells ff1a] -to [get_cells ff2e] 5.0
set_min_delay -from [get_pins ff1a/CLK] -through [get_pins
and1/B] -to [get_pins ff2e/D] 5.0
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_multicycle\_path

Commands to define a path that takes multiple clock cycles.

**Syntax**

```
set_multicycle_path
[[-from <port_list|pin_list|instance_list|clock_list>] | [-rise_from
<clock_list>] [-fall_from <clock_list>]]
[-to <port_list|pin_list|instance_list|clock_list>] | [-rise_to <clock_list>]
[-fall_to <clock_list>]
[-through <port_list|pin_list|instance_list|net_list>]
[-setup | -hold] [-start | -end] <path_multiplier>
```

**Arguments**

-from port\_list|pin\_list|instance\_list|clock\_list

This value specifies the timing path start point (Optional).

-to port\_list|pin\_list|instance\_list|clock\_list

(Optional) This value specifies the timing path end point (Optional).

-through port\_list|pin\_list|instance\_list|net\_list

(Optional) This value specifies the timing path pass through point. The timing path must go through this object (Optional).

-rise\_from|fall\_from clock\_list

Same as '-from' but only applies to clock objects.

Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.

-rise\_to|fall\_to clock\_list

Same as '-to' but only applies to clock objects.

Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive.

At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.

-setup

This option set Setup multiplier (Optional).

-hold

This option set Hold multiplier (Optional).

Option '-setup' and '-hold' are mutually exclusive.

-start

This option indicates that Multiplier measured against startpoint (Optional).

-end

This option indicates that Multiplier measured against endpoint (Optional).

Option '-start' and '-end' are mutually exclusive.

path\_multiplier

This value specifies a value that represents the number of cycles.

## Examples

In the first example, you are defining a timing path that starts from the cells within reg1 and ends at the cells within reg2. By setting a multicycle path constraint of 3 cycles for the setup analysis, you are instructing the timing analysis tool to allow 3 clock cycles for the setup time from reg1 to reg2..



In the second example, you are defining a timing path that starts at the output pin Q of the flip-flop ff1, goes through the pin B of the AND gate and1, and ends at the data input pin D of the flip-flop ff2. By setting a multicycle path constraint of 3 cycles, you are instructing the timing analysis tool to allow 3 clock cycles for the signal to propagate from ff1/Q to ff2/D through and1/B.

---

```
set_multicycle_path 3 -setup -from [get_cells reg1] -to
[get_cells reg2]
```

```
set_multicycle_path 3 -from [get_pins ff1/Q] -through [get_pins
and1/B] -to [get_pins ff2/D]
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## set\_false\_path

Commands to identify paths that are considered false and excluded from timing analysis.

**Syntax** `set_false_path [-from <port_list|pin_list|instance_list|clock_list> [-to <port_list|pin_list|instance_list|clock_list> [-through <port_list|pin_list|instance_list|net_list> [-rise_from <clock_list>] [-rise_to <clock_list>] [-fall_from <clock_list>] [-fall_to <clock_list>] [-setup] [-hold]`

### Arguments

`-from port_list|pin_list|instance_list|clock_list`

This value specifies the timing path start points (Optional).

`-to port_list|pin_list|instance_list|clock_list`

This value specifies the timing path end points (Optional).

`-through object_list`

This value is a list of through points which the paths should be blocked (Optional).

`-rise_from|fall_from clock_list`

Same as '-from' but only applies to clock objects.

Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.

`-rise_to|fall_to object_list clock_list`

Same as '-to' but only applies to clock objects.

Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive.

At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.

**-setup**

This option indicates to eliminate setup timing analysis for specified timing paths (Optional).

**-hold**

This option indicates to eliminate hold timing analysis for specified timing paths (Optional).

**Example 1**

The following example specifies all paths from clock pins of the registers in clock domain clk1 to data pins of a specific register in clock domain clk2 as false paths:

---

```
set_false_path -from [get_ports clk1] -to [get_cells reg_2]
```

---

**Example 2**

The following example specifies all paths through the net UO/sigA as false:

---

```
set_false_path -through [get_nets UO/sigA]
```

---

**See Also** ▶ [“Synopsys Design Constraints” on page 824](#)

## Lattice Synthesis Engine-Supported HDL Attributes

This section describes the Synplify Lattice Attributes that are supported by the LSE. These attributes are directly interpreted by the engine and influence the optimization or structure of the output netlist.

All HDL attributes have priority over Strategy settings.

**See Also** ▶ [“black\\_box\\_pad\\_pin” on page 848](#)

- ▶ [“full\\_case” on page 850](#)
- ▶ [“loc” on page 851](#)
- ▶ [“ldc\\_define\\_attribute” on page 852](#)
- ▶ [“parallel\\_case” on page 854](#)
- ▶ [“syn\\_black\\_box” on page 856](#)
- ▶ [“syn\\_encoding” on page 857](#)
- ▶ [“syn\\_force\\_pads” on page 861](#)

- ▶ [“syn\\_hier” on page 863](#)
- ▶ [“syn\\_insert\\_pad” on page 864](#)
- ▶ [“syn\\_keep” on page 867](#)
- ▶ [“syn\\_maxfan” on page 869](#)
- ▶ [“syn\\_multstyle” on page 870](#)
- ▶ [“syn\\_noprune” on page 872](#)
- ▶ [“syn\\_preserve” on page 872](#)
- ▶ [“syn\\_ramstyle” on page 875](#)
- ▶ [“syn\\_replicate” on page 877](#)
- ▶ [“syn\\_romstyle” on page 879](#)
- ▶ [“syn\\_srlstyle” on page 881](#)
- ▶ [“syn\\_sharing” on page 884](#)
- ▶ [“syn\\_state\\_machine” on page 886](#)
- ▶ [“syn\\_use\\_carry\\_chain” on page 890](#)
- ▶ [“syn\\_useenables” on page 891](#)
- ▶ [“syn\\_useioff” on page 893](#)
- ▶ [“translate\\_off/translate\\_on” on page 894](#)

## black\_box\_pad\_pin

This attribute specifies pins on a user-defined black box module. The pins are defined as I/O pads that are visible outside of the black box. If there is more than one port that is an I/O pad, the ports are listed inside double-quotes (") separated by commas (,), and without enclosed spaces. This attribute must be used in conjunction with the [syn\\_black\\_box](#) attribute.

**Verilog Syntax**    `object /* synthesis syn_black_box black_box_pad_pin = "portList" */;`

where *object* is a module declaration, and *portList* is a space free, comma-separated list of the black box port names that are I/O pads.

### Verilog Example

---

```

module black_box_pad_pin2 (
    input[4:0] in1,
    input[4:0] in2,
    input clk,
    output[4:0] q
) /* synthesis syn_black_box black_box_pad_pin="in1(4:0),q" */;

reg [4:0] q;
always @(posedge clk)
begin
    q <= in1 + in2;
end
endmodule

module black_box_pad_pin_instan(
    input[4:0] in1,
    input[4:0] in2,
    input[4:0] in3,
    input clk,
    output[5:0] q_out
);

wire [4:0] q;
reg [5:0] q_out;
black_box_pad_pin2 test_123(
    .in1(in1),
    .in2(in2),
    .clk(clk),
    .q(q)
);

always @(posedge clk)
begin
    q_out <= q + in3;
end
endmodule

```

---

**VHDL Syntax**    `attribute black_box_pad_pin of object : architecture is "portList" ;`

The object is the architecture name of a black box, while the data type is string. The portList is a space free, comma-separated list of the black box port names that are I/O pads.

### VHDL Example

---

```
entity BBDLHS is
  port (D: in std_logic;
        E: in std_logic;
        GIN : in std_logic_vector(2 downto 0);
        Q : out std_logic );
end BBDLHS;

architecture BBDLHS_behav of BBDLHS is
end BBDLHS;
attribute syn_black_box : boolean;
attribute syn_black_box of BBDLHS_behav : architecture is true;
attribute black_box_pad_pin : string;
attribute black_box_pad_pin of BBDLHS_behav : architecture is
"GIN(2:0),Q";
begin bl_box_behav;
```

---

## full\_case

Directive. For Verilog designs only. When used with a case, casex, or casez statement, this directive indicates that all possible values have been given, and that no additional hardware is needed to preserve signal values.

**Verilog Syntax**   object /\* synthesis full\_case \*/

### Verilog Example

---

```
module full_case1 (q, in1, in2, in3, in4, sel);
output q;
input in1, in2, in3, in4;
input [3:0] sel;
reg q;

always @(sel or in1 or in2 or in3 or in4)
begin
    casez (sel) /* synthesis full_case */
        4'b11??: q = in4;
        4'b?1??: q = in3;
        4'b???1: q = in1;
        4'b??1?: q = in2;
    endcase
end
endmodule
```

---

## loc

The loc attribute specifies pin locations for Lattice I/Os, instances, and registers, and forward-annotates them to the place-and-route tool. If the attribute is on a bus, the software writes out bit-blasted constraints for forward-annotation.

**Verilog Syntax**   object /\* synthesis loc = "pinLocations" \*/ ;

In the syntax, pin\_locations is a space free, comma-separated list of pin locations.

### Verilog Example

---

```
//I/O pin location
input [3:0]DATA0 /* synthesis loc="p10,p12,p11,p15" */;
//Register pin location
reg data_in_ch1_buf_reg3 /* synthesis loc="R40C47" */;
//Vectored internal bus
reg [3:0] data_in_ch1_reg /*synthesis loc =
"R40C47,R40C46,R40C45,R40C44" */;
```

---

**VHDL Syntax**   attribute loc of object : objectType is "pinLocations" ;

In the syntax, pinLocations is a space free, comma-separated list of pin locations.

### VHDL Example

---

```
entity mycomp is port(DATA0 : in std_logic_vector (3 downto
0));
end entity mycomp;
attribute loc : string;
attribute loc of DATA0 : signal is "p10,p12,p11,p15";
```

---

## ldc\_define\_attribute

The `ldc_define_attribute` Tcl command is used to define synthesis attributes for the LSE flow. Its main entry mechanism is through the Attribute tab of the Pre-Synthesis Constraint Editor tool. When you drag and drop or enter the appropriate values for the attribute options below, it will be echoed as a Tcl command in the .LDC constraint file.

### Usage

`ldc_define_attribute -attr <attr_type> -value <attr_value> -object_type <object type> -object <object> [-disable] [-comment <comment>]`

### Options

- ▶ `-attr`: LSE attributes name, such as "loc"
- ▶ `-value`: LSE attribute value such as "1" and "ENABLED"
- ▶ `-object_type`: the type of object to which the attribute belong, such as "port"
- ▶ `-object`: the specific object to which the attribute apply, such as "clk"
- ▶ `-disable`: the command is disabled
- ▶ `-comment`: comment of the command

### Example

```
ldc_define_attribute -attr loc -value 2 -object_type port -  
object {clk}
```



## ldc\_define\_global\_attribute

Commands to define global LSE attribute

### Syntax:

```
ldc_define_global_attribute -attr <attr_name> -value  
                           <attr_value> [-disable] [-comment <comment>]
```

### Arguments

- ▶ -attr attr\_name: This value indicates LSE attributes name, such as 'syn\_ramstyle'.
- ▶ -value attr\_value: This value indicates LSE attribute value such as 'registers'.
- ▶ -disable: This option indicates that the command is disabled (Optional).
- ▶ -comment: This option specifies comment of the command (Optional).

### Example

```
ldc_define_global_attribute -attr syn_ramstyle -value registers
```

## parallel\_case

Directive. For Verilog designs only. Forces a parallel-multiplexed structure rather than a priority-encoded structure. This is useful because case statements are defined to work in priority order, executing only the first statement with a tag that matches the select value.

If the select bus is driven from outside the current module, the current module has no information about the legal values of select, and the software must create a chain of disabling logic so that a match on a statement tag disables all following statements. However, if you know the legal values of select, you can eliminate extra priority-encoding logic with the `parallel_case` directive.

In the following example, the only legal values of select are 4'b1000, 4'b0100, 4'b0010, and 4'b0001, and only one of the tags can be matched at a time. Specify the `parallel_case` directive so that tag-matching logic can be parallel and independent, instead of chained.

---

### Note

Designers should be aware that it is possible for the priority of overlapping cases in post-synthesis simulation to mismatch with the priority behavior in RTL simulation when using this pragma.

---

**Verilog Syntax** You specify the directive as a comment immediately following the select value of the case statement.

```
object /* synthesis parallel_case */
```

where *object* is a case, casex or casez statement declaration.

## Verilog Example

---

```
module parallel_case1 (q, in1, in2, in3, in4, sel);
output q;
input in1, in2, in3, in4;
input [3:0] sel;
reg q;
always @(sel or in1 or in2 or in3 or in4)
begin
casez (sel) /* synthesis parallel_case */
4'b1???: q = in4;
4'b?1??: q = in3;
4'b???1: q = in1;
4'b??1?: q = in2;
default: q = 'bx;
endcase
end
endmodule
```

---

If the select bus is decoded within the same module as the case statement, the parallelism of the tag matching is determined automatically, and the `parallel_case` directive is unnecessary.

## syn\_black\_box

This attribute specifies that a Verilog module or VHDL architecture declaration is for a black box. Only the module's interface is defined for synthesis. The contents of a black box cannot be optimized during synthesis. A module can be a black box whether it is empty or not. However, the `syn_black_box` attribute cannot be used with the top-level module or architecture of a design. Additionally, the `syn_black_box` attribute is not supported for instances in Verilog or components in VHDL.

### Note:

For Synplify Pro flow, the **syn\_black\_box** attribute works with **syn\_declare\_black\_box** to indicate user-defined black box.

This attribute has an implicit Boolean value of 1 or true.

If any of the ports are I/O pads, add the `black_box_pad_pin` attribute. See [“black\\_box\\_pad\\_pin” on page 848](#).

**Verilog Syntax**    `object /* synthesis syn_black_box */;`

where *object* is a module declaration.

### Verilog Example

```
module bl_box(out,data,clk) /* synthesis syn_black_box */;
```

**VHDL Syntax**    `attribute syn_black_box of object : architecture is true ;`

where *object* is an architecture name. Data type is Boolean.

### VHDL Example

```
entity bl_box is
  port (data : in std_logic_vector (7 downto 0);
        clk : in std_logic;
        out : out std_logic);
end;

architecture bl_box_behav of bl_box is
  attribute syn_black_box : boolean;
  attribute syn_black_box of bl_box_behav : architecture is true;
begin
end bl_box_behav;
```

## syn\_encoding

This attribute specifies the encoding style for a finite state machine (FSM), overriding the default LSE encoding. The default encoding is based on the number of states in the FSM. This attribute takes effect only when LSE infers an FSM. This attribute has no effect when `syn_state_machine` is 0, which blocks inference of an FSM.

Also, the `syn_encoding` attribute is not honored if there is a `syn_preserve` attribute on any of the state machine registers.

Values for `syn_encoding` are as follows:

- ▶ Sequential – More than one bit of the state register can change at a time, but because more than one bit can be hot, the value must be decoded to determine the state. For example: 000, 001, 010, 011, 100
- ▶ Onehot – Only two bits of the state register change (one goes to 0; one goes to 1) and only one of the state registers is hot (driven by a 1) at a time. For example: 0000, 0001, 0010, 0100, 1000
- ▶ Gray – Only one bit of the state register changes at a time, but because more than one bit can be hot, the value must be decoded to determine the state. For example: 000, 001, 011, 010, 110

There can be no more than four states for gray encoding. If the FSM has more than four states, LSE switches to sequential encoding.

- ▶ Safe – If the state machine enters an invalid state, additional logic will drive the state machine into its reset state. The design must have a defined reset state.

Safe encoding can be combined with either sequential or onehot encoding (not with gray encoding) as in:

```
syn_encoding = "safe,onehot"
```

If the `safe` value is given by itself, it combines with the encoding method of a preceding `syn_encoding` statement or the default method.

**Verilog Syntax**    Object /\* synthesis syn\_encoding = "value" \*/;

where *object* is an enumerated type and value is from the list above.

### Verilog Example

---

```
module fsm (clk, reset, x1, outp);
input clk, reset, x1;
output outp;
reg outp;
reg [1:0] state /* synthesis syn_encoding = "onehot" */;
parameter s1 = 2'b00; parameter s2 = 2'b01;
parameter s3 = 2'b10; parameter s4 = 2'b11;

always @(posedge clk)
begin
    if (reset)
        state <= s1;
    else begin
        case (state)
        s1: if (x1 == 1'b1)
            state <= s2;
        else
            state <= s3; s2: state <= s4;
        s3: state <= s4;
        s4: state <= s1;
        endcase
    end
end

always @(state) begin
    case (state)
    s1: outp = 1'b1;
    s2: outp = 1'b1;
    s3: outp = 1'b0;
    s4: outp = 1'b0;
    endcase
end
endmodule
```

---

**VHDL Syntax**    attribute syn\_encoding of object: objectType is "value";

where *object* is an enumerated type and value is from the list above.

**VHDL Example**

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity syn_encoding1 is
  port(
    clk : in std_logic;
    reset: in std_logic;
    en   : in std_logic;
    q    : out std_logic_vector(1 downto 0)
  );
end entity;

architecture behave of syn_encoding1 is
  signal state : std_logic_vector(3 downto 0);
  constant state0 : std_logic_vector(3 downto 0) := "1000";
  constant state1 : std_logic_vector(3 downto 0) := "0100";
  constant state2 : std_logic_vector(3 downto 0) := "0010";
  constant state3 : std_logic_vector(3 downto 0) := "0001";
  attribute syn_encoding : string;
  attribute syn_encoding of state : signal is "safe,onehot";
begin
  process(clk,reset,en)
  begin
    if reset = '1' then
      state <= state0;
      q <= "00";
    elsif clk'event and clk = '1' then
      case state is
        when state0 =>
          if (en = '1') then
            q <= "00";
          end if;
          state <= state1;
        when state1=>
          if (en = '1') then
            q <= "01";
          end if;
          state <= state2;
        when state2 =>
          if (en = '1') then
            q <= "10";
          end if;
          state <= state3;
        when state3 =>
          if (en = '1') then
            q <= "11";
          end if;
          state <= state0;
        when others => null;
      end case;
    end if;
  end process;
end behave;
```

---



## syn\_force\_pads

This attribute prevents unused ports from being optimized away to allow I/O pad insertion on the unused port. This attribute is not supported at the global level. Instead, set the `use_io_insertion` option to control I/O insertion globally.

This attribute is supported in the rtl, and it will override the global `use_io_insertion` option setting on the given input, output, or bidirectional port.

For example, in the following Verilog file, the `syn_force_pads` attribute can be set to 1 on an unused input port (`dataz`), and it will not be optimized away, regardless of the `use_io_insertion` global setting.

**Verilog Syntax**    `object /* synthesis syn_force_pads = {1 | 0} */;`

where *object* is port declaration.

### Verilog Example

---

```
`define DSIZE 9
`define OSIZE 18

module multp9x9(dataout, dataax, dataay, dataz, clk, rst, ce);
    output [`OSIZE-1:0] dataout;
    input  [`DSIZE:0] dataz /* synthesis syn_force_pads = 1*/;
    input  [`DSIZE-1:0] dataax, dataay;
    input  clk, rst, ce;
    reg    [`DSIZE-1:0] dataax_reg, dataay_reg;

    reg    [`OSIZE-1:0] dataout;
    wire    [`OSIZE-1:0] dataout_tmp ;
    assign dataout_tmp = dataax_reg * dataay_reg;

    always @(posedge clk or posedge rst)
    begin
        if (rst)
        begin
            dataax_reg <= 0;
            dataay_reg <= 0;
            dataout <= 0;
        end
        else if (ce == 1'b1)
        begin
            dataax_reg <= dataax;
            dataay_reg <= dataay;
            dataout <= dataout_tmp;
        end
    end
endmodule
```

---

To force I/O pads to be inserted for input ports that do not drive logic, follow the guidelines below.

- ▶ To force I/O pad insertion on an individual port, set the `syn_force_pads` attribute on the port with a value of 1. To disable I/O insertion for a port, set the attribute on the port with a value of 0.

Enable this attribute to preserve user-instantiated pads, insert pads on unconnected ports, insert bidirectional pads on bidirectional ports instead of converting them to input ports, or insert output pads on unconnected outputs.

If you do not set the `syn_force_pads` attribute, the synthesis design optimizes any unconnected I/O buffers away.

**VHDL Syntax** Attribute `syn_force_pads` of object: `objectType` is "true | false"  
;

where *objectType* is Boolean and *object* is signal.

### VHDL Example

---

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_arith.all;
use ieee.std_logic_unsigned.all;

entity multp9x9 is
  port ( dataout : out std_logic_vector(17 downto 0);
        dataax, dataay: in std_logic_vector( 8 downto 0);
        dataz : in std_logic_vector(8 downto 0);
        clk,rst,ce: in std_logic
        );

  attribute syn_force_pads : boolean;
  attribute syn_force_pads of dataz : signal is true;

end multp9x9;

architecture rtl of multp9x9 is

  signal dataax_reg,dataay_reg: std_logic_vector(8 downto 0);
  signal dataout_tmp: std_logic_vector(17 downto 0);
  attribute syn_force_pads of rtl : architecture is true

begin

  dataout_tmp <= dataax_reg * dataay_reg;
  process (clk, rst)
  begin
    if rst = '1' then
      dataax_reg <= (others => '0');
      dataay_reg <= (others => '0');
      dataout <= (others => '0');
    elsif clk'event and clk = '1' then
      if ce = '1' then
        dataax_reg <= dataax;
        dataay_reg <= dataay;
        dataout <= dataout_tmp;
      end if;
    end if;
  end process;

end rtl;
```

---

## syn\_hier

This attribute allows you to control the amount of hierarchical transformation that occurs across boundaries on module or component instances during optimization. This attribute cannot be applied globally. The user must set this attribute on the selective modules to stop cross-boundary optimizations.

**syn\_hier Values** The following value can be used for syn\_hier:

- ▶ **Hard** – Preserves the interface of the design unit with no exceptions. This attribute affects only the specified design units.

**Verilog Syntax** `object /* synthesis syn_hier = "value" */ ;`

where *object* can be a module declaration and *value* can be any of the values described in syn\_hier Values. Check the attribute values to determine where to attach the attribute.

### Verilog Example

---

```
module topl (Q, CLK, RST, LD, CE, D)
  /* synthesis syn_hier = "hard" */;
```

---

**VHDL Syntax** `attribute syn_hier of object : architecture is "value" ;`

where *object* is an architecture name and *value* can be any of the values described in syn\_hier Values. Check the attribute values to determine the level at which to attach the attribute.

### VHDL Example

---

```
architecture struct of cpu is
  attribute syn_hier : string;
  attribute syn_hier of struct: architecture is "hard";
```

---

## syn\_insert\_pad

This attribute removes an existing I/O buffer from a port or net when I/O buffer insertion is enabled.

The `syn_insert_pad` attribute is used when the `use_io_insertion` global option is enabled (when I/O buffers are automatically inserted) to allow users to selectively remove an individual buffer from a port or net.

It can also be used to force an I/O buffer to be inserted on a specific port or net, if the `use_io_insertion` global option is disabled.

- ▶ Setting the attribute to 0 on a port or net removes the I/O buffer (or prevents an I/O buffer from being automatically inserted, if the `use_io_insertion` global option is enabled).
- ▶ Setting the attribute to 1 on a port or net forces an I/O buffer to be inserted if the `use_io_insertion` global option is disabled.

For more information on the `use_io_insertion` option, refer to:

- ▶ [“Synthesis Command Line Options” on page 192](#)
- ▶ [“Use IO Insertion” on page 789](#)

**Verilog Syntax**   `object /* synthesis syn_insert_pad = {1 | 0} */;`

where *object* is a port or net declaration.

### Verilog Example

In the previous example, the input port labeled “rst” will not have an input buffer connected to it in the technology-mapped netlist after LSE is completed.

**VHDL Syntax**   `attribute syn_insert_pad of object : objectType is "true | false" ;`

### VHDL Example

---

```
`define OSIZE 16
`define DSIZE 8

module mac8x8 (dataout, x, y, clk, rst);
    output [`OSIZE:0] dataout;
    input [`DSIZE-1:0] x, y;
    input clk;
    input rst /* synthesis syn_insert_pad = 0 */;
    reg [`OSIZE:0] dataout;
    reg [`DSIZE-1:0] x_reg, y_reg;
    wire [`OSIZE-1:0] multout ;
    wire [`OSIZE:0] sum_out;

    assign multout = x_reg * y_reg;
    assign sum_out = multout + dataout;

    always @(posedge clk or posedge rst)
    begin
        if (rst)
        begin
            x_reg = 0;
            y_reg = 0;
            dataout = 0;
        end
        else
        begin
            x_reg = x;
            y_reg = y;
            dataout = sum_out;
        end
    end
endmodule
```

---

---

```
library ieee;
use ieee.std_logic_1164.all;

entity register_en_reset is
    generic (
        width : integer := 8
    );
    port (
        datain  : in std_logic_vector(width-1 downto 0);
        clk     : in std_logic;
        enable  : in std_logic;
        reset   : in std_logic;
        dataout : out std_logic_vector(width-1 downto 0)
    );

end register_en_reset;

architecture lattice_behav of register_en_reset is
begin
    process (clk, reset)
    begin
        if (reset = '1') then
            dataout <= (others => '0');
        elsif (rising_edge(clk) and enable = '1') then
            dataout <= datain;
        end if;
    end process;
end lattice_behav;
```

---

## syn\_keep

This attribute keeps the specified net intact during optimization and synthesis.

**Verilog Syntax**    `object /* synthesis syn_keep = 1 */ ;`

where *object* is a wire or reg declaration. Make sure that there is a space between the object name and the beginning of the comment slash (/).

### Verilog Example

---

```

module syn_keep1(
    input a,
    input b,
    input clk,
    output q1,
    output q2);
    reg temp1;
    reg temp2;
    reg q1;
    reg q2;
    wire or_result;
    wire keep1 /* synthesis syn_keep=1 */;
    wire keep2 /* synthesis syn_keep=1 */;

    always @(posedge clk)
    begin
        temp1 = a;
        temp2 = b;
    end
    assign or_result = (temp1 | temp2);
    assign keep1 = or_result;
    assign keep2 = or_result;
    always@(posedge clk)
    begin
        q1 = keep1;
        q2 = keep2;
    end
end
endmodule

```

---

**VHDL Syntax**    `attribute syn_keep of object : objectType is true ;`

where *object* is a single or multiple-bit signal.

### VHDL Example

```
library ieee;
use ieee.std_logic_1164.all;

entity syn_keep1 is
  port(
    a : in std_logic;
    b : in std_logic;
    clk: in std_logic;
    q1: out std_logic;
    q2: out std_logic
  );
end entity;

architecture behave of syn_keep1 is
  signal temp1 : std_logic;
  signal temp2 : std_logic;
  signal keep1 : std_logic;
  signal keep2 : std_logic;
  signal or_result : std_logic;
  attribute syn_keep: boolean;
  attribute syn_keep of keep1,keep2: signal is true;
begin
  process(clk)
  begin
    if clk'event and clk = '1' then
      temp1 <= a;
      temp2 <= b;
    end if;
  end process;

  or_result <= (temp1 or temp2);
  keep1 <= or_result;
  keep2 <= or_result;

  process(clk)
  begin
    if clk'event and clk = '1' then
      q1 <= keep1;
      q2 <= keep2;
    end if;
  end process;

end behave;
```

---



## syn\_maxfan

Set fanout limit for an individual input port, net, or register output. This attribute overrides the default (global) fan-out guide.

**Verilog Syntax**   object /\* synthesis syn\_maxfan = "value" \*/ ;

---

### Note

LSE will take integer values for non-integral values to syn\_maxfan attribute.

For example, syn\_maxfan value of 5.1 will be truncated to 5.

---

### Verilog Example

---

```
module test (registered_data_out, clock, data_in);
output [31:0] registered_data_out;
input clock;
input [31:0] data_in /* synthesis syn_maxfan=1000 */;
reg [31:0] registered_data_out /* synthesis syn_maxfan=1000 */;
```

---

**VHDL Syntax**   attribute syn\_maxfan of object : objectType is "value" ;

### VHDL Example

---

```
entity test is
  port (clock : in bit;
        data_in : in bit_vector(31 downto 0);
        registered_data_out: out bit_vector(31 downto 0) );
  attribute syn_maxfan : integer;
  attribute syn_maxfan of data_in : signal is 1000;
```

---

## syn\_multstyle

This attribute specifies whether the multipliers are implemented as dedicated hardware blocks or as logic.

**syn\_multstyle Values** block\_mult | logic

**Value Description Default** block\_mult Implements the multipliers as dedicated hardware blocks.

This attribute only applies to families that use DSP blocks on the device. To override this behavior, specify a value of logic.

**Verilog Syntax** input net /\* synthesis syn\_multstyle = "block\_mult | logic" \*/;

### Verilog Example

---

```

module syn_multstyle1(
    input [7:0] in1,
    input [7:0] in2,
    input rst,
    input clk,
    output [15:0] result);

    reg [7:0] temp1,temp2;
    reg [15:0] result /*synthesis syn_multstyle = "block_mult"*/;
    wire [15:0] product;

    always@(posedge clk ,negedge rst)
    begin
        if(!rst)
        begin
            temp1 = 'b0;
            temp2 = 'b0;
        end
        else
        begin
            temp1 = in1;
            temp2 = in2;
        end
    end

    assign product = temp1*temp2;

    always@(posedge clk, negedge rst)
    begin
        if(!rst)
        begin
            result = 'b0;
        end
        else
        begin
            result = product;
        end
    end
endmodule

```

---

**VHDL Syntax** attribute syn\_multstyle of instance : signal is "block\_mult | logic";

### VHDL Example

---

```
library ieee ;
use ieee.std_logic_1164.all ;
USE ieee.numeric_std.all;

entity mult is
port (clk : in std_logic ;
      a : in std_logic_vector(7 downto 0) ;
      b : in std_logic_vector(7 downto 0) ;
      c : out std_logic_vector(15 downto 0));
end mult ;

architecture rtl of mult is
signal mult_i : std_logic_vector(15 downto 0) ;
attribute syn_multstyle : string ;
attribute syn_multstyle of mult_i : signal is "logic" ;

begin
mult_i <= std_logic_vector(unsigned(a)*unsigned(b)) ;
process(clk)
begin
  if (clk'event and clk = '1') then
    c <= mult_i ;
  end if ;
end process;
end rtl;
```

---

## syn\_noprune

This attribute prevents instance optimization for black-box modules (including technology-specific primitives) with unused output ports. This attribute is not a global attribute and works on the component basis. The user must set the attribute on the instance.

**Verilog Syntax**    `object /* synthesis syn_noprune = 1 */ ;`

where *object* is a module instance. The data type is Boolean.

### Verilog Example

---

```

module top(a1,b1,c1,d1,y1,clk);
output y1;
input a1,b1,c1,d1;
input clk;
wire x2,y2;
reg y1;
syn_noprune u1(a1,b1,c1,d1,x2,y2) /* synthesis syn_noprune=1 */
;

always @(posedge clk)
    y1<= a1;

endmodule

```

---

**VHDL Syntax**    `attribute syn_noprune of object : objectType is true ;`

where the *objectType* is boolean, and *object* is a component.

### VHDL Example

## syn\_preserve

This attribute prevents sequential optimizations such as constant propagation and inverter push-through from removing the specified register. The `syn_encoding` attribute is not honored if there is a `syn_preserve` attribute on any of the state machine registers.

**Note:** Only the objects that are existent in the RTL view netlist (i.e. appearing in Netlist Analyzer) after synthesis will honor the attribute through to the technology mapping.

**Verilog Syntax**    `object /* synthesis syn_preserve = 1 */ ;`

where *object* is a register definition signal or a module.

### Verilog Example

**VHDL Syntax**    `attribute syn_preserve of object : objectType is true ;`

---

```

library ieee;
use ieee.std_logic_1164.all;
entity top is
    port (a1, b1 : in std_logic;
          c1,d1,clk : in std_logic;
          y1 :out std_logic );
end ;
architecture behave of top is
component nopruner
port (a, b, c, d : in std_logic;
      x,y : out std_logic );
end component;
signal x2,y2 : std_logic;
attribute syn_noprune : boolean;
attribute syn_noprune of u1 : label is true;
begin
    u1: nopruner port map(a1, b1, c1, d1, x2, y2);
    process begin
        wait until (clk = '1') and clk'event;
        y1 <= a1;
    end process;
end;

```

---

```

module syn_preserve1(
    input[3:0]in1,
    input[3:0]in2,
    input[3:0]in3,
    input clk,
    output [7:0] result,
    output [3:0] sum
    )/* synthesis syn_preserve= 1*/;

reg [7:0] result/*synthesis syn_multstyle = "block_mult"*/;
reg [3:0] temp1,temp2,temp3;
reg [3:0] sum;

always@(posedge clk)
begin
    temp1 = in1 & in2;
    temp2 = !temp1;
    temp3= temp1 & temp2;
    result = temp3*in3;
    sum = temp3 + in3;
end
endmodule

```

---

where *object* is an output port or an internal signal that holds the value of a state register or architecture.

### VHDL Example

---

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity syn_preserve2 is
  port(
    in1: in std_logic_vector(3 downto 0);
    in2: in std_logic_vector(3 downto 0);
    in3: in std_logic_vector(3 downto 0);
    clk: in std_logic;
    result: out std_logic_vector(7 downto 0);
    sum : out std_logic_vector(3 downto 0)
  );
end entity;

architecture behave of syn_preserve2 is
  signal temp1,temp2,temp3 : std_logic_vector(3 downto 0);
  attribute syn_preserve : boolean;
  attribute syn_preserve of behave: architecture is true;
  attribute syn_multstyle : string;
  attribute syn_multstyle of result: signal is "block_mult";
begin
  process(clk)
  begin
    if clk'event and clk = '1' then
      temp1 <= in1 and in2;
      temp2 <= not temp1;
      temp3 <= temp1 and temp2;
      result <= temp3*in3;
      sum <= temp3 + in3;
    end if;
  end process;
end behave;
```

---

## syn\_ramstyle

The `syn_ramstyle` attribute specifies the implementation to use for an inferred RAM. You apply `syn_ramstyle` globally to a module or RAM instance. To turn off RAM inference, set its value to registers.

The following values can be specified globally or on a module or RAM instance:

- ▶ `registers` – Causes an inferred RAM to be mapped to registers (flip-flops and logic) rather than the technology-specific RAM resources.
- ▶ `distributed` – Causes the RAM to be implemented using the distributed RAM or PFU resources.
- ▶ `block_ram` – Causes the RAM to be implemented using the dedicated RAM resources. If your RAM resources are limited, you can use this attribute to map additional RAMs to registers instead of the dedicated or distributed RAM resources.
- ▶ `large_ram` – Causes the RAM to be implemented using LRAM, which is only supported on LIFCL, LFCPNX, LFD2NX, and LFMXO5 devices. LRAM inference is triggered when the product of width and depth is greater than or equal to 262144. Due to architectural limitations, only single-clock configurations are supported.
- ▶ `no_rw_check` (some modes, but all technologies). – Instructs the synthesis tool to bypass any checks that ensure read and write operations do not overlap or cause data corruption.

Without `no_rw_check`, the synthesis tool inserts bypass logic around the RAM to prevent the mismatch. If you know your design does not read and write to the same address simultaneously, use `no_rw_check` to eliminate bypass logic. Use this value only when you cannot simultaneously read and write to the same RAM location and you want to minimize overhead logic.

### Note:

If the memory size defined (depth x width) is less than thirty registers, then EBRs will not be inferred.

### Verilog Syntax

```
object /* synthesis syn_ramstyle = "string" */ ;
```

where *object* is a register definition (reg) signal. The data type is string.

You can also use the following syntax as an alternative:

```
object; // synthesis syn_ramstyle = "string"
```

### Verilog Example

---

```
module ram4 (datain,dataout,clk);
output [31:0] dataout;
input clk;
input [31:0] datain;
reg [7:0] dataout[31:0] /* synthesis syn_ramstyle="block_ram" */;
```

---

### Verilog Example with Alternative Syntax

---

```
module ram4 (datain,dataout,clk);
output [31:0] dataout;
input clk;
input [31:0] datain;
reg [7:0] dataout[31:0] // synthesis syn_ramstyle="block_ram"
```

---

### VHDL Syntax

attribute `syn_ramstyle` of object : objectType is "string" ;

where *object* is a signal that defines a RAM or a label of a component instance. *Data type* is string.

### VHDL Example

---

```
library ieee;
use ieee.std_logic_1164.all;
entity ram4 is
    port (d : in std_logic_vector(7 downto 0);
          addr : in std_logic_vector(2 downto 0);
          we : in std_logic;
          clk : in std_logic;
          ram_out : out std_logic_vector(7 downto 0) );
end ram4;
library synplify;
architecture rtl of ram4 is
    type mem_type is array (127 downto 0) of std_logic_vector (7
downto 0);
    signal mem : mem_type; -- mem is the signal that defines the
RAM
    attribute syn_ramstyle : string;
    attribute syn_ramstyle of mem : signal is "block_ram";
```

---



## syn\_replicate

This attribute controls replication. While the synthesis tool can automatically replicate registers during optimization, this attribute disables replication either globally or on a per register basis.

**Verilog Syntax**   object /\* synthesis syn\_replicate = 1 | 0 \*/;

**Verilog Example**   For example:

---

```
module syn_replicate1 (en1,en2,clk,in1,in2,q);
    input en1,en2;
    input clk;
    input [6:0]in1,in2;
    output [6:0]q;
    reg [6:0]q;
    reg enc /* synthesis syn_maxfan = 1 syn_replicate = 1*/;

    always @(posedge clk)
        begin
            enc = en1 & en2;
        end

    always @(posedge clk)
        begin
            if (enc)
                q = in1;

            else
                q = in2;
        end
    end
endmodule
```

---

**VHDL Syntax** attribute syn\_replicate of object : objectType is true | false ;

**VHDL Example** For example:

---

```
library ieee;
use ieee.std_logic_1164.all;

entity syn_replicate2 is
  port(
    en1: in std_logic;
    en2: in std_logic;
    clk: in std_logic;
    in1: in std_logic_vector(6 downto 0);
    in2: in std_logic_vector(6 downto 0);
    q: out std_logic_vector(6 downto 0)
  );
end entity;

architecture behave of syn_replicate2 is
  signal enc : std_logic;
  attribute syn_maxfan: integer;
  attribute syn_maxfan of behave : architecture is 1;
  attribute syn_replicate: boolean;
  attribute syn_replicate of enc : signal is false;
begin
  process(clk)
  begin
    if clk'event and clk = '1' then
      enc <= (en1 and en2);
    end if;
  end process;

  process(clk)
  begin
    if enc = '1' then
      q <= in1;
    else
      q <= in2;
    end if;
  end process;
end behave;
```

---

## syn\_romstyle

This attribute allows you to implement ROM architectures using dedicated or distributed ROM. Infer ROM architectures uses a CASE statement in your code.

For the synthesis tool to implement a ROM, at least half of the available addresses in the CASE statement must be assigned a value. For example, consider a ROM with six address bits (64 unique addresses). The case statement for this ROM must specify values for at least 32 of the available addresses. You can apply the `syn_romstyle` attribute globally to the design by adding the attribute to the module or entity.

The following values can be specified globally on a module or ROM instance:

- ▶ **Auto** – Allows the synthesis tool to choose the best implementation to meet the design requirements for speed, size, etc.
- ▶ **Logic** – Causes the ROM to be implemented using the distributed ROM or PFU resources.
- ▶ **EBR** – Causes the ROM to be implemented using the dedicated ROM resources. If your ROM resources are limited, you can use this attribute to map additional ROM to registers instead of the dedicated or distributed RAM resources.

**Verilog Syntax**    `object /* syn_romstyle = "auto(default) | EBR | logic" */ ;`

### Verilog Example

---

```
reg [8:0] z /* synthesis syn_romstyle = "EBR" */;
```

---

**VHDL Syntax**    `attribute syn_romstyle of object : object_type is "auto(default) | EBR | logic" ;`

### VHDL Example

---

```
signal z : std_logic_vector(8 downto 0);
attribute syn_romstyle : string;
attribute syn_romstyle of z : signal is "logic";
```

---

## syn\_rvl\_debug

This attribute highlights debug signals so that they can be easily identified in the user interface.

In the Reveal post-synthesis stage, this attribute tells the synthesis tool to preserve the signal without optimizing it. If it is a bus, the data width is also preserved. The synthesis tool passes the same attribute to the signal in the post-synthesis netlist (\*.vm).

**Verilog Syntax** /\* synthesis syn\_rvl\_debug = 1 \*/;

### Verilog Example

---

```
input clki /*synthesis syn_rvl_debug = 1 */,  
wire clk1 /* synthesis syn_rvl_debug = 1 */;  
reg [39:0] cnt /* synthesis syn_rvl_debug = 1 */;  
reg [31:0] cnti /* synthesis syn_rvl_debug = 1 */;
```

---

**VHDL Syntax** attribute syn\_rvl\_debug of signal : signal is true | false ;

### VHDL Example

---

```
attribute syn_rvl_debug : boolean;  
attribute syn_rvl_debug of direction : signal is true ;  
attribute syn_rvl_debug of countai : signal is true ;
```

---

## syn\_srstyle

This attribute determines how to implement the sequential shift components.

**Verilog Syntax** object /\* synthesis syn\_srstyle = "string",

where *string* can take one of the following values:

- ▶ Registers: seqShift register components are implemented as registers.
- ▶ Distributed: seqShift register components are implemented as distributed RAM.
- ▶ Block\_ram: seqShift register components are implemented as block RAM

If the attribute value set by the user cannot be honored (for example, the user sets the attribute value to "block\_ram", but the selected device does not contain enough available EBR blocks to implement the shift register), LSE will display a message to indicate this.

" | registers | distributed | |block\_ram" \*/ ;

In the above syntax, *object* is a register declaration.

**Note:** If the memory size defined (depth x width) is less than thirty registers, then EBRs will not be inferred.

**Verilog Example** The following example implements seqShift components as distributed memory with any required fabric logic.

---

```

module test_srl(clk, enable, dataIn, result, addr);
input clk, enable;
input [3:0] dataIn;
input [3:0] addr;
output [3:0] result;
reg [3:0] regBank[15:0]
  /* synthesis syn_srstyle="distributed" */;
integer i;
always @(posedge clk) begin
  if (enable == 1) begin
    for (i=15; i>0; i=i-1) begin
      regBank[i] <= regBank[i-1];
    end
    regBank[0] <= dataIn;
  end
end
assign result = regBank[addr];
endmodule

```

---

The following example implements a seqShift for 16x256 bits wide and serial in and serial out register using syn\_srstyle set to block\_ram.

**VHDL Syntax** attribute syn\_srstyle of object : signal is

" registers | distributed |block\_ram " ;

```
// shift left register with 16X256 bits width and serial in and
serial out
module test(clock, arst, sr_en, shiftin, shiftout);
parameter sh_len=16;
parameter sh_width=256;
parameter ARESET_VALUE = {(sh_width){1'b0}};
input clock, arst, sr_en;
input [sh_width-1:0] shiftin;
output [sh_width-1:0] shiftout;
integer i;
reg [sh_width-1:0] sreg [sh_len-1:0] /* synthesis
syn_srlstyle="block_ram" */;
always @(posedge clock or posedge arst)
begin
    if(arst)
        begin
            for(i = 0; i <= sh_len-1; i = i+1)
                sreg[i] <= ARESET_VALUE ;
        end
    else
        begin
            if(sr_en)
                begin
                    sreg[0] <= shiftin;
                    for(i=sh_len-1; i>0; i=i-1)
                        sreg[i] <= sreg[i-1];
                end
            end
        end
    end
    assign shiftout = sreg[sh_len-1];
endmodule
```

---

In the above syntax, *object* is a register.

**VHDL Example** The example below implements seqShift components as distributed memory primitives:

---

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;
entity d_p is
    port (clk : in std_logic;
          data_out : out std_logic_vector(127 downto 0));
end d_p;

architecture rtl of d_p is
    type dataAryType is array(3 downto 0) of
        std_logic_vector(127 downto 0);
    signal h_data_pip_i : dataAryType;
    attribute syn_srlstyle : string;
    attribute syn_srlstyle of h_data_pip_i : signal
    is "distributed";
begin
    process (Clk)
    begin
        if (Clk'Event And Clk = '1') then
            h_data_pip_i <= (h_data_pip_i(2 DOWNTO 0)) &
                h_data_pip_i(3);
        end if;
    end process;
    data_out <= h_data_pip_i(0);
end rtl;
```

---

## syn\_sharing

Directive. Enables or disables the sharing of operator resources during the compilation stage of synthesis.

The `syn_sharing` directive controls resource sharing during the compilation stage of synthesis. This is a compiler-specific optimization that does not affect the mapper, meaning that the mapper might still perform resource sharing optimizations to improve timing, even if `syn_sharing` is disabled.

If you disable resource sharing globally, you can use the `syn_sharing` directive to turn on resource sharing for specific modules or architectures.

**Verilog Syntax** `object /* synthesis syn_sharing="on/1 | off/0" */ ;`

### Verilog Example

---

```

module syn_sharing1 (
    input [7:0] inA1,
    input [7:0] inA2,
    input [7:0] inB1,
    input [7:0] inB2,
    input clk,
    input sel1,
    input sel2,
    input rst,
    output [15:0] product1,
    output [15:0] product2
)/*synthesis syn_sharing = 1*/;

reg [15:0] product1,product2;
wire [15:0] temp1,temp2;
assign temp1 = inA1*inB1;
assign temp2 = inA2*inB2;
always@(posedge clk)
begin
    if(sel1)
    begin
        if (sel2)
            product1 = temp1;
        else
            product1 = temp2;
        end
    else
    begin
        if (sel2)
            product2 = temp1;
        else
            product2 = temp2;
        end
    end
end
endmodule

```

---

**VHDL Syntax** `attribute syn_sharing of object : objectType is "true | false" ;`



## VHDL Example

---

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity syn_sharing2 is
  port(
    inA1 : in std_logic_vector(7 downto 0);
    inA2 : in std_logic_vector(7 downto 0);
    inB1 : in std_logic_vector(7 downto 0);
    inB2 : in std_logic_vector(7 downto 0);
    clk  : in std_logic;
    sel1 : in std_logic;
    sel2 : in std_logic;
    rst  : in std_logic;
    product1 : out std_logic_vector(15 downto 0);
    product2 : out std_logic_vector(15 downto 0)
  );
end entity;

architecture behave of syn_sharing2 is
  signal temp1,temp2: std_logic_vector(15 downto 0);
  attribute syn_sharing : boolean;
  attribute syn_sharing of behave : architecture is false;
begin
  temp1 <= inA1*inB1;
  temp2 <= inA2*inB2;
  process(clk)
  begin
    if clk'event and clk ='1' then
      if sel1 = '1' then
        if sel2 = '1' then
          product1 <= temp1;
        else
          product1 <= temp2;
        end if;
      else
        if sel2 = '1' then
          product2 <= temp1;
        else
          product2 <= temp2;
        end if;
      end if;
    end if;
  end process;
end behave;
```

---

## **syn\_state\_machine**

This attribute enables/disables state-machine optimization on individual state registers in the design. To extract some state machines, use this attribute with a value of 1 on just those individual state-registers to be extracted. If there are state machines in your design that you do not want extracted, use `syn_state_machine` with a value of 0 to override extraction on those individual state registers.

All state machines are usually detected during synthesis. However, on occasion there are cases in which certain state machines are not detected. You can use this attribute to declare those undetected registers as state machines.

The `syn_sharing` attribute only can be used in architecture. The `syn_sharing` attribute cannot be used in entity.

**Verilog Syntax**    `object /* synthesis syn_state_machine = 0 | 1 */;`

where *object* is a state register. Data type is Boolean: 0 does not extract an FSM, 1 extracts an FSM.

### Verilog Example

---

```

module syn_state_machine1 (clk, reset, en, q);
    input clk, reset, en;
    output [1:0] q;
    reg q;
    reg [3:0] state, next_state /* synthesis syn_state_machine = 0
    */;
    parameter state0 = 4'b1000;
    parameter state1 = 4'b0100;
    parameter state2 = 4'b0010;
    parameter state3 = 4'b0001;
    always @(posedge clk or posedge reset)
        begin
            if (reset)
                state <= state0;
            else
                state <= next_state;
        end

    always @(state)
        begin
            case (state)
                state0:
                    begin
                        if (en == 1)
                            q <= 2'b00;
                        next_state <= state1;
                    end

                state1:
                    begin
                        if (en == 1)
                            q <= 2'b01;
                        next_state <= state2;
                    end

                state2:
                    begin
                        if (en == 1)
                            q <= 2'b10;
                        next_state <= state3;
                    end

                state3:
                    begin
                        if (en == 1)
                            q <= 2'b11;
                        next_state <= state0;
                    end
            endcase
        end
    endmodule

```

---

**VHDL Syntax** attribute syn\_state\_machine of object : objectType is true | false ;

where *object* is a signal that holds the value of the state machine.

### **VHDL Example**

---

```
attribute syn_state_machine of current_state: signal is true;
```

---

The following is the source code used for the previous example.

```
library ieee;
use ieee.std_logic_1164.all;
entity syn_statemachine_exp is
port (CLK_0, RESET, IN1 : in std_logic;
      OUT1 : out std_logic_vector (2 downto 0)
      );
end syn_statemachine_exp;

architecture behave of syn_statemachine_exp is
type ST_VALS is (STATE0, STATE1, STATE2, STATE3);
signal STATE, NXT_ST: ST_VALS;
attribute syn_state_machine : boolean;
attribute syn_state_machine of STATE : signal is true;

begin
  process (CLK_0, RESET)
  begin
    if RESET = '1' then
      STATE <= STATE0;
    elsif rising_edge(CLK_0) then
      STATE <= NXT_ST;
    end if;
  end process;

  process (STATE, IN1)
  begin
    case STATE is
      when STATE0 =>
        OUT1 <= "000";
        if IN1 = '1' then NXT_ST <= STATE1;
        else NXT_ST <= STATE0;
        end if;
      when STATE1 =>
        OUT1 <= "001";
        if IN1 = '1' then NXT_ST <= STATE2;
        else NXT_ST <= STATE1;
        end if;
      when STATE2 =>
        OUT1 <= "010";
        if IN1 = '1' then NXT_ST <= STATE3;
        else NXT_ST <= STATE2;
        end if;
      when others =>
        OUT1 <= "XXX"; NXT_ST <= STATE0;
    end case;
  end process;

end behave;
```

---

## syn\_use\_carry\_chain

This attribute is used to turn on or off the carry chain implementation for counters and adders.

**Verilog Syntax**   object /\*synthesis syn\_use\_carry\_chain = {1| 0} \*/;

**Verilog Example**   To use this attribute globally, apply it to the module.

---

```
module test (a, b, clk, rst, d) /* synthesis
syn_use_carry_chain = 1 */;
```

---

**VHDL Syntax**   attribute syn\_use\_carry\_chain of object : objectType is true | false ;

**VHDL Example**

---

```
architecture archtest of test is
signal temp : std_logic;
signal temp1 : std_logic;
signal temp2 : std_logic;
signal temp3 : std_logic;
attribute syn_use_carry_chain : boolean;
attribute syn_use_carry_chain of archtest : architecture is
true;
```

---

## syn\_useenables

This attribute controls the use of clock enables on registers in the design. Exploiting clock enables on registers is usually beneficial. However, in some cases, using clock enable signals may make it challenging to achieve timing closure. This is one reason why the user may want to stop the use of clock enable on the register.

1 means to enable the synthesis of enable signals.

0 means to disable the synthesis of enable signals.

**Verilog Syntax:**   object /\* synthesis syn\_useenables = "0 | 1" \*/;

### Verilog Example

---

```
module syn_useenable1 (Din1,Din2,en,clk,Dout);
    input [7:0] Din1, Din2;
    input clk,en;
    output [7:0] Dout;
    reg [7:0] temp1;
    reg [7:0] Dout /* synthesis syn_useenables = 0*/;
    always@(posedge clk)
        begin
            temp1 <= Din1 & Din2;
        end
    always @(posedge clk)
        begin
            if(en)
                Dout <= temp1;
        end
endmodule
```

---

**VHDL Syntax:** attribute syn\_useenables of object : objectType is "true | false";

### VHDL Example

---

```
library ieee;
use ieee.std_logic_1164.all;

entity syn_useenable2 is
  port(
    Din1 : in std_logic_vector(7 downto 0);
    Din2 : in std_logic_vector(7 downto 0);
    clk  : in std_logic;
    en   : in std_logic;
    Dout : out std_logic_vector(7 downto 0)
  );
end entity;

architecture behave of syn_useenable2 is
  signal temp1 : std_logic_vector(7 downto 0);
  attribute syn_useenables: boolean;
  attribute syn_useenables of Dout: signal is false;
begin
  process(clk)
  begin
    if clk'event and clk = '1' then
      temp1 <= Din1 and Din2;
    end if;
  end process;

  process(clk)
  begin
    if clk'event and clk = '1' then
      if en = '1' then
        Dout <= temp1;
      end if;
    end if;
  end process;
end behave;
```

---



## syn\_useioff

This attribute overrides the default behavior to pack registers into I/O pad cells based on timing requirements for the target Lattice families. Attribute `syn_useioff` is Boolean-valued: 1 enables (default) and 0 disables register packing. You can place this attribute on an individual register or port or apply it globally. When applied globally, the synthesis tool packs all input, output, and I/O registers into I/O pad cells. When applied to a register, the synthesis tool packs the register into the pad cell; and when applied to a port, it packs all registers attached to the port into the pad cell.

The `syn_useioff` attribute can be set on the following ports:

- ▶ Top-level port.
- ▶ Register driving the top-level port.
- ▶ Lower-level port, if the register is specified as part of the port declaration.

**Verilog Syntax**    `object /*synthesis syn_useioff = {1 | 0} */;`

**Verilog Example**    To use this attribute globally, apply it to the module.

---

```
module test (a, b, clk, rst, d) /* synthesis syn_useioff = 1 */;
```

---

To use this attribute on individual ports, apply it to individual port declarations.

---

```
module test (a, b, clk, rst, d);  
input a;  
input b /* synthesis syn_useioff = 1 */;
```

---

**VHDL Syntax**    `attribute syn_useioff of object : objectType is true | false ;`

**VHDL Example**

---

```
architecture archtest of test is  
signal temp : std_logic;  
signal temp1 : std_logic;  
signal temp2 : std_logic;  
signal temp3 : std_logic;  
attribute syn_useioff : boolean;  
attribute syn_useioff of archtest : architecture is true;
```

---

## translate\_off/translate\_on

This attribute allows you to synthesize designs originally written for use with other synthesis tools without needing to modify source code. All source code that is between these two attributes is ignored during synthesis.

**Verilog Syntax**    `/* pragma translate_off */`  
`/* pragma translate_on */`

### Verilog Example

---

```
module real_time (ina, inb, out);
input ina, inb;
output out;
/* synthesis translate_off */
realtime cur_time;
/* synthesis translate_on */
assign out = ina & inb;
endmodule
```

---

**VHDL Syntax**    `pragma translate_off`  
`pragma translate_on`

### VHDL Example

---

```
library ieee;
use ieee.std_logic_1164.all;
entity adder is
    port (a, b, cin:in std_logic;
          sum, cout:out std_logic );
end adder;
architecture behave of adder is
signal a1:std_logic;
--synthesis translate_off
constant a1:std_logic:='0';
--synthesis translate_on
begin
    sum <= (a xor b xor cin);
    cout <= (a and b) or (a and cin) or (b and cin); end behave;
```

---

## Synopsys Design Constraints Timing/ Physical Constraints

This section describes the new physical constraints in the Radiant software that are formatted similar to SDC formats to set physical constraints.

**See Also**    ▶ [“ldc\\_create\\_group” on page 895](#)

▶ [“ldc\\_create\\_region” on page 895](#)

▶ [“ldc\\_create\\_macro” on page 896](#)

- ▶ [“ldc\\_create\\_vref” on page 896](#)
- ▶ [“ldc\\_set\\_location” on page 897](#)
- ▶ [“ldc\\_set\\_vcc” on page 897](#)
- ▶ [“ldc\\_set\\_port” on page 898](#)
- ▶ [“ldc\\_set\\_sysconfig” on page 898](#)
- ▶ [“ldc\\_set\\_attribute” on page 899](#)
- ▶ [“ldc\\_prohibit” on page 900](#)

## ldc\_create\_group

Commands to define a single identifier that refers to a group of objects.

**Syntax** `ldc_create_group -name group_name [-bbox {height width}] <objects>`

### Arguments

- ▶ `-name` - group name  
This value specifies the group name.
- ▶ `-bbox {height width}`  
This value specifies the maximum number of rows (R) and columns (C), of the group's bounding box.  
This option is not applicable to port.
- ▶ `objects`  
Objects named in the group, either port, instance, pin or net.

### Example

```
ldc_create_group -name group1[get_ports{a*}]
```

## ldc\_create\_region

Commands to define a rectangular area.

**Syntax** `ldc_create_region -name <region_name> (-anchor <anchor>|-site <site>) -width <width> -height <height> [-buffer_left <left>] [-buffer_right <right>] [-buffer_top <top>] [-buffer_bottom <bottom>] [-exclusive] [-routing_exclusive]`

### Arguments

- ▶ `-name region_name`: This value specifies the region name.
- ▶ `-anchor anchor`: This value specifies anchor.
- ▶ `-site site`: This value specifies the site name. Option '-anchor' and '-site' are mutually exclusive.

- ▶ **-width width:** This value specifies the width of the placement region in columns.
- ▶ **-height height:** This value specifies the height of the placement region in rows.
- ▶ **-buffer\_left left:** This value specifies the left buffer zone of the routing region (Optional).
- ▶ **-buffer\_right right:** This value specifies the right buffer zone of the routing region (Optional).
- ▶ **-buffer\_top top:** This value specifies the top buffer zone of the routing region (Optional).
- ▶ **-buffer\_bottom bottom:** This value specifies the bottom buffer zone of the routing region (Optional). Options '-buffer\_left', '-buffer\_right', '-buffer\_top' and '-buffer\_bottom' are only for creating macro region. Without these options routing region is identical to placement region.
- ▶ **-exclusive:** This option indicates that the current buffer cannot be used to place and route other logic during the Reuse stage (Optional).
- ▶ **-routing\_exclusive:** This option indicates that the current buffer cannot be used to route other logic during the Reuse stage (Optional). Options '-exclusive' and '-routing\_exclusive' are only for creating macro region.

**Example**

```
ldc_create_region -name top_region -site R17C2D -width 23 -
height 39
```

## ldc\_create\_macro

Commands to define an instance in a design as a macro.

**Syntax** `ldc_create_macro [-name <macro_name>] [-use_pio <ports_list>] <instance>`

**Arguments**

- ▶ **-name macro name:** This value specifies the macro name (Optional).
- ▶ **-use\_pio ports list:** This value specifies macro ports that are directly connected outside of the design (Optional).
- ▶ **instance:** The instance which is define as a macro.

**Example**

```
ldc_create_macro -name macro_top -use_pio {din*} [get_cells
u_top]
```

## ldc\_create\_vref

Commands to define a voltage reference.

**Syntax** `ldc_create_vref -name <vref_name> -site <site_name>`

### Arguments

- ▶ `-name vref_name`: This value specifies voltage reference name.
- ▶ `-site site_name`: This value specifies PIO site of the target device.

### Example

```
ldc_create_vref -name VREF1_BANK_3 -site N21
```

## ldc\_set\_location

Commands to set object location.

**Syntax** `ldc_set_location [-site <site_name>] [-bank <bank_num>] [-region <region_name>] <object>`

### Arguments

- ▶ `-site site_name`: This value specifies name of the site to place object (Optional).
- ▶ `-bank bank_num`: This value specifies number of the bank to place object (Optional).
- ▶ `-region region_name`: This value specifies name of the user defined region to place object (Optional).  
One option among '-site', '-bank' and '-region' is needed and they are mutually exclusive.
- ▶ `Object`: object to be located

### Examples

```
ldc_set_location -site l1 [get_ports clk]
ldc_set_location -region region0 [ldc_get_groups {group1}]
```

## ldc\_set\_vcc

Commands to set the voltage and/or derate for the bank, core or dphy.

### Syntax

```
ldc_set_vcc (-bank <bank_number>|-core|-dphy DPHY0/DPHY1)
            [-derate <derate>] [<voltage>]
```

### Arguments

- ▶ `-bank bank_number`: This value specifies the bank to be set with voltage or voltage derating percent.
- ▶ `-core`: This option indicates that voltage or voltage derating percent is set to core.

- ▶ -dphy DPHY0/DPHY1: This option indicates that voltage or voltage derating percent is set to dphy. Value of option '-dphy' can only be 'DPHY0' or 'DPHY1'. Option '-bank', '-core' and '-dphy' are mutually exclusive.
- ▶ -derate: This value specifies voltage derating percent (Optional).
- ▶ voltage: This value can be any compatible voltage supply to that bank or the core or dphy; for example, 2.5, 3.3 (Optional).  
At least one option between '-derate' and 'voltage' is needed.

### Examples

```
ldc_set_vcc -bank 1 3.3
ldc_set_vcc -dphy DPHY0 -derate -3
```

## ldc\_set\_port

Commands to set port constraint attributes.

**Syntax** `ldc_set_port (-iobuf [-vref <vref_name>]) -sso <key-value list> [ports]`

### Arguments

- ▶ -iobuf: This option indicates that IOBUF attributes are set.
- ▶ -vref vref\_name: This value specifies voltage reference name. It must be bound to -iobuf (Optional).
- ▶ -sso: This option indicates that SSO attributes are set.  
Option '-iobuf' and '-sso' are mutually exclusive.
- ▶ key-value list: This value is a list of attributes. Attributes must be enclosed with curly braces.
- ▶ ports: This value specifies ports to be set. If no port is specified, set constraint to all ports (Optional).

### Example

```
ldc_create_vref -name VERF2 -site R11
ldc_set_port -iobuf -vref VERF2
               {IO_TYPE=HSTL15_I VREF=VREF2_LOAD} [get_ports clk_third]
```

## ldc\_set\_sysconfig

Commands to set sysconfig attributes.

**Syntax** `ldc_set_sysconfig <key-value list>`

### Arguments

- ▶ key-value list: This value is a list of SYSCONFIG attributes. Attributes must be enclosed with curly braces.

**Example**

```
ldc_set_sysconfig {JTAG_PORT=ENABLE PROGRAMN_PORT=ENABLE
MCCLK_FREQ=56.2 DONE_OD=ON}
```

**ldc\_set\_attribute**

Commands to set constraint attributes to the objects.

**Syntax** ldc\_set\_attribute <key-value list> <objects>

**Arguments**

- ▶ key-value list: This value is a list of constraint attributes.
- ▶ objects: This value specifies object(s), to which constraint attributes are set (Optional).  
If no object is specified, attributes are set to design.

**Global attributes:**

- ▶ FORMAT and UNIQUE\_ID is a valid combination to implement USERCODE.
- ▶ FORMATS specifies one of the available formats for codes: binary (BIN), hexadecimal (HEX), text (ASCII), AUTO.
- ▶ CODE For binary or BIN format, specify a 32-bit user code string using only 1 or 0 digits. For hexadecimal or HEX format, specify an eight-character user code string using only 0 through F values. For text or ASCII format, specify a four character user code string using only alpha and numeric values.
- ▶ TEMPERATURE<number> (C|F|K). No <object> specified.

**Net attributes:**

- ▶ GSR\_NET is set to TRUE / FALSE:
  - ▶ TRUE: specify the net to be GSR net (global reset source driver).
  - ▶ FALSE: don't infer the net to be GSR\_NET net. <object> must be net.

**Note**

The default Synthesis strategy is "Force GSR = Auto".

The default Map strategy is "infer GSR = FALSE".

When using "GSR\_NET" constraint, user must change the above two strategies to:

- ▶ Synplify - "Force GSR = False",
- ▶ LSE - "Force GSR = No"
- ▶ MAP - "infer GSR = True"

- ▶ USE\_PRIMARY is set to TRUE / FALSE.
  - ▶ TRUE: sets USE\_PRIMARY net to primary clock resource.

- ▶ FALSE: prohibits USE\_PRIMARY net from using primary clock resource; <object> must be net.
- ▶ USE\_PRIMARY\_REGION: Comma-separated list of integers denoting primary clock region(s). Primary clock regions are numbered from top to bottom, left to right based on their position in the chip and start from 0. <object> must be net.
- ▶ USE\_REGIONAL: This attribute is for the Avant device only to support the regional clock feature. When using this attribute, the Avant device can be divided into regions, and each region has its own clock resources.

USE\_REGIONAL also has TRUE / FALSE options:

- ▶ TRUE: sets USE\_REGIONAL net to primary clock resource.
- ▶ FALSE: prohibits USE\_REGIONAL net from using primary clock resource; <object> must be net.

Generally, PAR can do automatic regional clock selection, but you can also manually assign certain signals to regional clocks. See the following example:

```
ldc_set_attribute USE_REGIONAL=TRUE [get_nets {signal name}]
```

**Note:** GSR NET is not applicable for iCE40 Ultra Plus.

#### Example

```
ldc_set_attribute GSR_NET=TRUE [get_nets {my_gsr}]
```

## ldc\_prohibit

Commands to prohibit the use of a site or all sites in a region.

**Syntax** `ldc_prohibit (-site <site> | -region <region>)`

#### Arguments

- ▶ -site site: This value specifies site name.
- ▶ -region region: This value specifies region name.  
Option '-site' and '-region' are mutually exclusive.

#### Example

```
ldc_prohibit -site AB
ldc_prohibit -region regionA
```



# Lattice Module Reference Guide

IP Catalog provides a variety of modules to assist your design work. These modules cover a variety of common functions and can be customized. They are optimized for Lattice device architectures. Use these modules to speed up your design work and to get the most effective results.

Parameterized Module Instantiation (PMI) is an alternate way to use some of the modules that come with IP Catalog. Instead of using IP Catalog, you directly instantiate a module into your HDL and customize it by setting parameters in the HDL using PMI. As a result, you may find this easier to use than IP Catalog in certain situations.

This guide describes the modules that come with IP Catalog and the related PMI modules. The descriptions mainly cover the options and controls of the configuration dialog boxes for the modules. When there is a related PMI module, the descriptions also include specifications for the PMI module's customizable parameters and ports.

## See Also

- ▶ [“PMI or IP Catalog?” on page 150](#)
- ▶ [“Creating IP Catalog Components” on page 150](#)
- ▶ [“Using PMI” on page 156](#)


## Finding Modules in This Guide

Each module and IP has an associated IP Information page.

The IP information page provides description, devices supported, link to User Guide, and revision history.

**To open the IP Information page for a module or IP:**

- ▶ In either the IP on Local tab, or IP on Server tab, click on the module or IP, and then click on the blue question mark . The IP Information page will appear on the right.

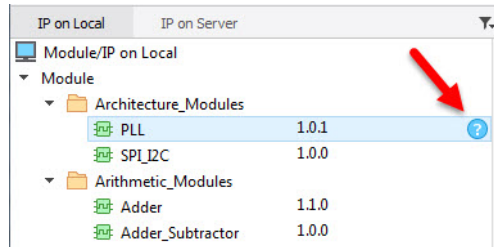

**Parameterized Module Instantiation (PMI)** The following table lists Radiant modules that support PMI. The table contains:

- ▶ PMI module name.
- ▶ IP Catalog module name.
- ▶ Links to the IP User Guides in which the PMI modules are described in detail.
- ▶ Columns that indicate PMI support for iCE40UP, LFCPNX/LFD2NX/LFMXO5/LIFCL/UT24C/UT24CP, and LAV-AT devices.

**Table 193: PMI Modules**

| PMI Module Name   | IP Catalog Module Name | Lattice Radiant Software User Guide           | iCE40UP | LFCPNX<br>LFD2NX,<br>LFMXO5<br>LIFCL<br>UT24C<br>UT24CP | LAV-AT |
|-------------------|------------------------|-----------------------------------------------|---------|---------------------------------------------------------|--------|
| pmi_add           | Adder                  | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |
| pmi_addsub        | Adder Subtractor       | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |
| pmi_complex_mult  | Complex_Mult           | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |
| pmi_counter       | Counter                | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |
| pmi_dsp           | Mult_Accumulate        | <a href="#">Arithmetic Modules User Guide</a> | Yes     | No                                                      | No     |
| pmi_mac           | Mult_Accumulate        | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |
| pmi_multaddsub    | Mult_Add_Sub           | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |
| pmi_multaddsubsum | Mult_Add_Sub_Sum       | <a href="#">Arithmetic Modules User Guide</a> | Yes     | Yes                                                     | Yes    |

**Table 193: PMI Modules (Continued)**

|                           |                   |                                               |     |     |     |
|---------------------------|-------------------|-----------------------------------------------|-----|-----|-----|
| pmi_mult                  | Multiplier        | <a href="#">Arithmetic Modules User Guide</a> | Yes | Yes | Yes |
| pmi_sub                   | Subtractor        | <a href="#">Arithmetic Modules User Guide</a> | Yes | Yes | Yes |
| pmi_fifo                  | FIFO              | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |
| pmi_fifo_dc               | FIFO_DC           | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |
| pmi_distributed_shift_reg | Shift_Register    | <a href="#">Memory Modules User Guide</a>     | No  | Yes | Yes |
| pmi_distributed_dpram     | Distributed_DPRAM | <a href="#">Memory Modules User Guide</a>     | No  | Yes | Yes |
| pmi_distributed_rom       | Distributed_ROM   | <a href="#">Memory Modules User Guide</a>     | No  | Yes | Yes |
| pmi_distributed_spram     | Distributed_SPRAM | <a href="#">Memory Modules User Guide</a>     | No  | Yes | Yes |
| pmi_ram_dp                | RAM_DP            | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |
| pmi_ram_dp_be             | RAM_DP            | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |
| pmi_ram_dp_true           | RAM_DP_True       | <a href="#">Memory Modules User Guide</a>     | No  | Yes | Yes |
| pmi_ram_dq                | RAM_DQ            | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |
| pmi_ram_dq_be             | RAM_DQ            | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |
| pmi_rom                   | ROM               | <a href="#">Memory Modules User Guide</a>     | Yes | Yes | Yes |

**See Also**

- ▶ [“PMI or IP Catalog?” on page 150](#)
- ▶ [“Creating IP Catalog Components” on page 150](#)
- ▶ [“Using PMI” on page 156](#)

## FPGA Libraries Reference Guide

Lattice Semiconductor supports some libraries used in designing FPGAs with different device architectures in a number of CAE synthesis, schematic capture, and simulation platforms. These libraries are the main front-end design libraries for Lattice FPGAs. Logic design primitives in these libraries offer flexibility and efficiency to facilitate building specific applications with Lattice devices.

A specific primitive can be found according to the device family and functional category. Primitives available to each of the following device families are listed according to appropriate functional categories.

- ▶ [“Primitive Library - iCE40UP \(iCE40 UltraPlus\)” on page 945](#)
- ▶ [“Primitive Library - LAV-AT \(Lattice Avant\)” on page 906](#)
- ▶ [“Primitive Library - LFCPNX \(CertusPro-NX\) / UT24CP \(CertusPro-NX-RT\)” on page 915](#)
- ▶ [“Primitive Library - LFD2NX \(Certus-NX\) / UT24C \(Certus-NX-RT\)” on page 921](#)
- ▶ [“Primitive Library - LFMXO4 \(MachXO4\)” on page 927](#)
- ▶ [“Primitive Library - LFMXO5 \(MachXO5-NX\)” on page 933](#)
- ▶ [“Primitive Library - LIFCL \(CrossLink-NX\)” on page 939](#)

The “Alphanumeric Primitives List” section contains descriptions of all available primitives in their alphanumeric order. The following information is provided for each primitive, where applicable:

**Table 1: Information Provided for Each Primitive**

| Fields                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name                      | Primitive name                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Definition                | Brief description of primitive                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Architecture Supported    | List of FPGA families supported by the primitive                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Port Interface Symbol     | <p>Graphic representing the primitive port interface. Data, address, clock, clock enable type ports appear on the left-hand side of the block. Synchronous ports appear on the top of the symbol. Asynchronous control ports appear on the bottom of the symbol. The output ports appear on the right-hand side of the block.</p> <p>Some of the graphic symbols are shown in bus notation for proper layout. Such primitives must be instantiated in expanded bus notation format with each individual bit.</p> |
| Port Description          | List of port names, polarity, and function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Parameters                | List of parameters compatible with the primitive. The first value is usually the default value, if it is not explicitly indicated. Attribute function, range, and port-to-attribute or attribute-to-attribute relationships for the primitive are noted.                                                                                                                                                                                                                                                         |
| Synthesis Inference Rules | Guideline on whether the component can be inferred by supported synthesis tools.                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| User Instantiation Rules  | Guideline on whether the component can be directly instantiated in the design.                                                                                                                                                                                                                                                                                                                                                                                                                                   |

# Primitive Library - LAV-AT (Lattice Avant)

This library includes compatible primitives supported by the LAV-AT devices.

- ▶ [“Flip-Flops” on page 906](#)
- ▶ [“Input/Output Buffer” on page 907](#)
- ▶ [“Memories” on page 907](#)
- ▶ [“Multipliers” on page 907](#)
- ▶ [“Combinatorial Primitives” on page 908](#)
- ▶ [“Clock/PLL” on page 908](#)
- ▶ [“Interfaces” on page 908](#)
- ▶ [“Dual Data Rate Cells” on page 908](#)
- ▶ [“Miscellaneous” on page 909](#)

**Table 1: Flip-Flops**

| Primitive                | Description                                                                                                                           |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">FD1P3BX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                 |
| <a href="#">FD1P3DX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                  |
| <a href="#">FD1P3IX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)          |
| <a href="#">FD1P3JX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)        |
| <a href="#">IFD1P3BX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                           |
| <a href="#">IFD1P3DX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                            |
| <a href="#">IFD1P3IX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Synchronous Clear (Clear Overrides Enable)    |
| <a href="#">IFD1P3JX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Synchronous Preset (Preset Overrides Enable)  |
| <a href="#">OFD1P3BX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                          |
| <a href="#">OFD1P3DX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                           |
| <a href="#">OFD1P3IX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous clear and Positive Level Enable (Clear Overrides Enable)   |
| <a href="#">OFD1P3JX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset Overrides Enable) |

**Table 2: Input/Output Buffer**

| Primitive                | Description                         |
|--------------------------|-------------------------------------|
| <a href="#">BB</a>       | Bidirectional Buffer with Tri-State |
| <a href="#">BB_I3C_B</a> | Bidirectional I3C Buffer Primitive  |
| <a href="#">IB</a>       | Input Buffer                        |
| <a href="#">OB</a>       | Output Buffer                       |
| <a href="#">OBZ</a>      | Output Buffer with Tri-State        |

**Table 3: Memories**

| Primitive                | Description                                                            |
|--------------------------|------------------------------------------------------------------------|
| <a href="#">DP32K</a>    | 32 Kb Dual Port Block RAM                                              |
| <a href="#">DPR16X4A</a> | Distributed Pseudo Dual Port RAM. Synchronous write, asynchronous read |
| <a href="#">DPR32X2</a>  | Distributed Pseudo Dual Port RAM. Synchronous write, asynchronous read |
| <a href="#">FIFO32K</a>  | 32 Kb FIFO using block RAM                                             |
| <a href="#">PDP32K</a>   | 32 Kb pseudo-dual port block RAM                                       |
| <a href="#">PDPSC32K</a> | 32Kb Pseudo Dual Port Single Clock Block RAM                           |
| <a href="#">SP16KA</a>   | 16 Kb Single Port Block RAM                                            |
| <a href="#">SP32K</a>    | 32 Kb Single Port Block RAM                                            |
| <a href="#">SPR16X4A</a> | Distributed Single Port RAM. Synchronous write, asynchronous read      |
| <a href="#">SPR32X2</a>  | Distributed Single Port RAM. Synchronous write, asynchronous read      |

**Table 4: Multipliers**

| Primitive                         | Description                                                                   |
|-----------------------------------|-------------------------------------------------------------------------------|
| <a href="#">DOTPRODADDSUB9X9</a>  | Four 9x9 Multiplier with Optional Input/output registers and adder/subtractor |
| <a href="#">DOTPRODADDSUB9X9A</a> | Four 9x9 Multiplier with Optional Input/output registers and adder/subtractor |
| <a href="#">MULT8X8</a>           | 8x8 Multiplier with Optional Input/Output Registers                           |
| <a href="#">MULT9X9A</a>          | 9x9 Multiplier with Optional Input/Output Registers                           |
| <a href="#">MULT18X18A</a>        | 18x18 Multiplier with Optional Input/Output Registers                         |
| <a href="#">MULTADDSUB18X18A</a>  | 18x18 Multiplier and Adder/Subtractor                                         |

**Table 5: Combinatorial Primitives**

| Primitive               | Description                       |
|-------------------------|-----------------------------------|
| <a href="#">CCU2C</a>   | Carry Chain                       |
| <a href="#">LUT4</a>    | 4-Input Look Up Table             |
| <a href="#">WIDEFN9</a> | 9-Input Single Output Logic Block |

**Table 6: Clock/PLL**

| Primitive                 | Description                                   |
|---------------------------|-----------------------------------------------|
| <a href="#">DCCA</a>      | Dynamic clock control                         |
| <a href="#">DCSA</a>      | Dynamic clock select                          |
| <a href="#">ECLKDIVA</a>  | Wrapper for Clock Divider for Edge Clock      |
| <a href="#">ECLKSYNCA</a> | Wrapper for Clock Synchronizer for Edge Clock |
| <a href="#">OSCE</a>      | High-frequency oscillator                     |
| <a href="#">PLLC</a>      | PLL functional block                          |
| <a href="#">PLLREFCSA</a> | 2:1 mux with dynamic select                   |

**Table 7: Interfaces**

| Primitive             | Description                        |
|-----------------------|------------------------------------|
| <a href="#">MIPIA</a> | Soft version of bidirectional MIPI |

**Table 8: Dual Data Rate Cells**

| Primitive                 | Description                                           |
|---------------------------|-------------------------------------------------------|
| <a href="#">DDRDLA</a>    | DLL for creating the 90° clock delay                  |
| <a href="#">DDRPHY16D</a> | Supports DDR4 and DDR3L protocols with X16 data width |
| <a href="#">DDRPHY32D</a> | Supports DDR4 and DDR3L protocols with X32 data width |
| <a href="#">DDRPHY40D</a> | Supports DDR4 and DDR3L protocols with X40 data width |
| <a href="#">DDRPHY64D</a> | Supports DDR4 and DDR3L protocols with X64 data width |
| <a href="#">DDRPHY72D</a> | Supports DDR4 and DDR3L protocols with X72 data width |
| <a href="#">DDRPHY16E</a> | Supports LPDDR4 protocol with X16 data width          |
| <a href="#">DDRPHY32E</a> | Supports LPDDR4 protocol with X32 data width          |
| <a href="#">DDRPHY64E</a> | Supports LPDDR4 protocol with X64 data width          |



**Table 8: Dual Data Rate Cells**

| Primitive | Description                                                             |
|-----------|-------------------------------------------------------------------------|
| DELAYD    | Input or output delay for SCLK interface with dynamically control delay |
| DELAYE    | Input delay or output delay for SCLK interface with static delay        |
| DELAYF    | Input or output delay for ECLK interface with dynamically control delay |
| DLLDELA   | DDR RX modes to shift input clock phase by 90 degrees                   |
| IDDR71A   | 7:1 LVDS IDDR                                                           |
| IDDRX1A   | Generic DDR with 1X gearing                                             |
| IDDRX2A   | Generic DDR with 2X gearing                                             |
| IDDRX4A   | Generic DDR with 4X gearing                                             |
| IDDRX5A   | Generic DDR with 5X gearing                                             |
| IMONDELAY | ECLK interface with dynamically control delay and edge monitor (IMON)   |
| ODDR71A   | 7:1 LVDS ODDR implementation                                            |
| ODDRX1A   | Generic x1 ODDR                                                         |
| ODDRX2A   | Generic x2 ODDR implementation                                          |
| ODDRX4A   | Generic x4 ODDR implementation                                          |
| ODDRX5A   | Generic x5 ODDR implementation                                          |

**Table 9: Miscellaneous**

| Primitive    | Description                                     |
|--------------|-------------------------------------------------|
| BUF          | Non-Inverting Buffer                            |
| CONFIG_DONE  | CONFIG final done status                        |
| CONFIG_LMMIC | LMMI Slave Primitive                            |
| GSRA         | Global Set/Reset                                |
| INV          | Inverter                                        |
| JTAGA        | Supports JTAG operations                        |
| JTAGH25      | Supports hard JTAG operations                   |
| JTAGH25SOFT  | Supports soft JTAG operations                   |
| SGSR         | Synchronous GSR Primitive                       |
| TSALLB       | Tri-state all PIO outputs and bidirectional PIO |
| VHI          | Logic High Generator                            |
| VLO          | Logic Low Generator                             |
| WDTA         | Watchdog Timer Primitive                        |

## Primitive Library - Certus-KH (LN2-CT)

This library includes compatible primitives supported by the LAV-AT devices.

- ▶ [“Flip-Flops” on page 906](#)
- ▶ [“Input/Output Buffer” on page 907](#)
- ▶ [“Memories” on page 907](#)
- ▶ [“Multipliers” on page 907](#)
- ▶ [“Combinatorial Primitives” on page 908](#)
- ▶ [“Clock/PLL” on page 908](#)
- ▶ [“Interfaces” on page 908](#)
- ▶ [“Dual Data Rate Cells” on page 908](#)
- ▶ [“Miscellaneous” on page 909](#)

**Table 10: Flip-Flops**

| Primitive                | Description                                                                                                                           |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">FD1P3BX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                 |
| <a href="#">FD1P3DX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                  |
| <a href="#">FD1P3IX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)          |
| <a href="#">FD1P3JX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)        |
| <a href="#">IFD1P3BX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                           |
| <a href="#">IFD1P3DX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                            |
| <a href="#">IFD1P3IX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Synchronous Clear (Clear Overrides Enable)    |
| <a href="#">IFD1P3JX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Synchronous Preset (Preset Overrides Enable)  |
| <a href="#">OFD1P3BX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                          |
| <a href="#">OFD1P3DX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                           |
| <a href="#">OFD1P3IX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous clear and Positive Level Enable (Clear Overrides Enable)   |
| <a href="#">OFD1P3JX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset Overrides Enable) |

**Table 11: Input/Output Buffer**

| Primitive                | Description                         |
|--------------------------|-------------------------------------|
| <a href="#">BB</a>       | Bidirectional Buffer with Tri-State |
| <a href="#">BB_I3C_B</a> | Bidirectional I3C Buffer Primitive  |
| <a href="#">IB</a>       | Input Buffer                        |
| <a href="#">OB</a>       | Output Buffer                       |
| <a href="#">OBZ</a>      | Output Buffer with Tri-State        |

**Table 12: Memories**

| Primitive                | Description                                                            |
|--------------------------|------------------------------------------------------------------------|
| <a href="#">DP32K</a>    | 32 Kb Dual Port Block RAM                                              |
| <a href="#">DPR16X4A</a> | Distributed Pseudo Dual Port RAM. Synchronous write, asynchronous read |
| <a href="#">DPR32X2</a>  | Distributed Pseudo Dual Port RAM. Synchronous write, asynchronous read |
| <a href="#">FIFO32K</a>  | 32 Kb FIFO using block RAM                                             |
| <a href="#">PDP32K</a>   | 32 Kb pseudo-dual port block RAM                                       |
| <a href="#">PDPSC32K</a> | 32Kb Pseudo Dual Port Single Clock Block RAM                           |
| <a href="#">SP16KA</a>   | 16 Kb Single Port Block RAM                                            |
| <a href="#">SP32K</a>    | 32 Kb Single Port Block RAM                                            |
| <a href="#">SPR16X4A</a> | Distributed Single Port RAM. Synchronous write, asynchronous read      |
| <a href="#">SPR32X2</a>  | Distributed Single Port RAM. Synchronous write, asynchronous read      |

**Table 13: Multipliers**

| Primitive                         | Description                                                                   |
|-----------------------------------|-------------------------------------------------------------------------------|
| <a href="#">DOTPRODADDSUB9X9</a>  | Four 9x9 Multiplier with Optional Input/output registers and adder/subtractor |
| <a href="#">DOTPRODADDSUB9X9A</a> | Four 9x9 Multiplier with Optional Input/output registers and adder/subtractor |
| <a href="#">MULT8X8</a>           | 8x8 Multiplier with Optional Input/Output Registers                           |
| <a href="#">MULT9X9A</a>          | 9x9 Multiplier with Optional Input/Output Registers                           |
| <a href="#">MULT18X18A</a>        | 18x18 Multiplier with Optional Input/Output Registers                         |
| <a href="#">MULTADDSUB18X18A</a>  | 18x18 Multiplier and Adder/Subtractor                                         |

**Table 14: Combinatorial Primitives**

| Primitive               | Description                       |
|-------------------------|-----------------------------------|
| <a href="#">CCU2C</a>   | Carry Chain                       |
| <a href="#">LUT4</a>    | 4-Input Look Up Table             |
| <a href="#">WIDEFN9</a> | 9-Input Single Output Logic Block |

**Table 15: Clock/PLL**

| Primitive                 | Description                                   |
|---------------------------|-----------------------------------------------|
| <a href="#">DCCA</a>      | Dynamic clock control                         |
| <a href="#">DCSA</a>      | Dynamic clock select                          |
| <a href="#">ECLKDIVA</a>  | Wrapper for Clock Divider for Edge Clock      |
| <a href="#">ECLKSYNCA</a> | Wrapper for Clock Synchronizer for Edge Clock |
| <a href="#">OSCE</a>      | High-frequency oscillator                     |
| <a href="#">PLL</a>       | PLL functional block                          |
| <a href="#">PLLREFCSA</a> | 2:1 mux with dynamic select                   |

**Table 16: Interfaces**

| Primitive             | Description                        |
|-----------------------|------------------------------------|
| <a href="#">MIPIA</a> | Soft version of bidirectional MIPI |

**Table 17: Dual Data Rate Cells**

| Primitive                 | Description                                           |
|---------------------------|-------------------------------------------------------|
| <a href="#">DDRDLA</a>    | DLL for creating the 90° clock delay                  |
| <a href="#">DDRPHY16D</a> | Supports DDR4 and DDR3L protocols with X16 data width |
| <a href="#">DDRPHY32D</a> | Supports DDR4 and DDR3L protocols with X32 data width |
| <a href="#">DDRPHY40D</a> | Supports DDR4 and DDR3L protocols with X40 data width |
| <a href="#">DDRPHY64D</a> | Supports DDR4 and DDR3L protocols with X64 data width |
| <a href="#">DDRPHY72D</a> | Supports DDR4 and DDR3L protocols with X72 data width |
| <a href="#">DDRPHY16E</a> | Supports LPDDR4 protocol with X16 data width          |
| <a href="#">DDRPHY32E</a> | Supports LPDDR4 protocol with X32 data width          |
| <a href="#">DDRPHY64E</a> | Supports LPDDR4 protocol with X64 data width          |

**Table 17: Dual Data Rate Cells**

| Primitive | Description                                                             |
|-----------|-------------------------------------------------------------------------|
| DELAYD    | Input or output delay for SCLK interface with dynamically control delay |
| DELAYE    | Input delay or output delay for SCLK interface with static delay        |
| DELAYF    | Input or output delay for ECLK interface with dynamically control delay |
| DLLDELA   | DDR RX modes to shift input clock phase by 90 degrees                   |
| IDDR71A   | 7:1 LVDS IDDR                                                           |
| IDDRX1A   | Generic DDR with 1X gearing                                             |
| IDDRX2A   | Generic DDR with 2X gearing                                             |
| IDDRX4A   | Generic DDR with 4X gearing                                             |
| IDDRX5A   | Generic DDR with 5X gearing                                             |
| IMONDELAY | ECLK interface with dynamically control delay and edge monitor (IMON)   |
| ODDR71A   | 7:1 LVDS ODDR implementation                                            |
| ODDRX1A   | Generic x1 ODDR                                                         |
| ODDRX2A   | Generic x2 ODDR implementation                                          |
| ODDRX4A   | Generic x4 ODDR implementation                                          |
| ODDRX5A   | Generic x5 ODDR implementation                                          |

**Table 18: Miscellaneous**

| Primitive    | Description                                     |
|--------------|-------------------------------------------------|
| BUF          | Non-Inverting Buffer                            |
| CONFIG_DONE  | CONFIG final done status                        |
| CONFIG_LMMIC | LMMI Slave Primitive                            |
| GSRA         | Global Set/Reset                                |
| INV          | Inverter                                        |
| JTAGA        | Supports JTAG operations                        |
| JTAGH25      | Supports hard JTAG operations                   |
| JTAGH25SOFT  | Supports soft JTAG operations                   |
| SGSR         | Synchronous GSR Primitive                       |
| TSALLB       | Tri-state all PIO outputs and bidirectional PIO |
| VHI          | Logic High Generator                            |
| VLO          | Logic Low Generator                             |
| WDTA         | Watchdog Timer Primitive                        |



# Primitive Library - LFCPNX (CertusPro-NX) / UT24CP (CertusPro-NX-RT)

This library includes compatible primitives supported by the LFCPNX (CertusPro-NX) / UT24CP (CertusPro-NX-RT) device family.

- ▶ [“Adders/Subtractors” on page 915](#)
- ▶ [“Flip-Flops” on page 915](#)
- ▶ [“Input/Output Buffer” on page 916](#)
- ▶ [“Memories” on page 916](#)
- ▶ [“Multipliers” on page 917](#)
- ▶ [“Clock/PLL” on page 917](#)
- ▶ [“Combinatorial Primitives” on page 918](#)
- ▶ [“Interfaces” on page 918](#)
- ▶ [“Dual Data Rate Cells” on page 918](#)
- ▶ [“Oscillators” on page 920](#)
- ▶ [“Miscellaneous” on page 920](#)

**Table 1: Adders/Subtractors**

| Primitive             | Description                |
|-----------------------|----------------------------|
| <a href="#">ACC54</a> | 54-bit Accumulator for DSP |

**Table 2: Flip-Flops**

| Primitive                | Description                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">BFD1P3KX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Synchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O)  |
| <a href="#">BFD1P3LX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Asynchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O) |
| <a href="#">FD1P3BX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                                    |
| <a href="#">FD1P3DX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                                     |
| <a href="#">FD1P3IX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)                             |
| <a href="#">FD1P3JX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)                           |
| <a href="#">IFD1P3BX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                              |
| <a href="#">IFD1P3DX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                               |

**Table 2: Flip-Flops**

| Primitive | Description                                                                                                                           |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------|
| IFD1P3IX  | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)    |
| IFD1P3JX  | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)  |
| OFD1P3BX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                          |
| OFD1P3DX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                           |
| OFD1P3IX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)   |
| OFD1P3JX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable) |

**Table 3: Input/Output Buffer**

| Primitive | Description                                                  |
|-----------|--------------------------------------------------------------|
| BB        | Bidirectional Buffer with Tri-State                          |
| BB_ADC    | Bidirectional Buffer for Analog-to-Digital Converter         |
| BB_CDR    | Bidirectional Buffer for CDR                                 |
| BB_I3C_A  | Input/Output Buffer with User Controllable Pull-Up Resistors |
| DIFFIO18A | Single Ended + Differential I/O block for 1.8V block         |
| IB        | Input Buffer                                                 |
| OB        | Output Buffer                                                |
| OBZ       | Output Buffer with Tri-State                                 |
| SEIO18A   | Single Ended I/O block for 1.8V                              |
| SEIO33    | Single Ended I/O Block for 3.3V                              |

**Table 4: Memories**

| Primitive | Description                                                                   |
|-----------|-------------------------------------------------------------------------------|
| DP16K     | 16 kb Dual Port Block RAM                                                     |
| DPR16X4   | Distributed Pseudo Dual Port RAM with Synchronous Write and Asynchronous Read |
| DPSC512K  | 512 kb Single Clock Dual Port Block RAM                                       |
| FIFO16K   | 16 kb FIFO                                                                    |



**Table 4: Memories**

| Primitive                 | Description                                                              |
|---------------------------|--------------------------------------------------------------------------|
| <a href="#">PDP16K</a>    | 16 kb Pseudo Dual Port Block RAM                                         |
| <a href="#">PDPSC16K</a>  | 16 kb Pseudo Dual Port Single Clock Block RAM                            |
| <a href="#">PDPSC512K</a> | 512 kb Single Clock Pseudo Dual Port Block RAM                           |
| <a href="#">SP16K</a>     | 16 kb Single Port Block RAM                                              |
| <a href="#">SP512K</a>    | 512 kb Single Port Block RAM                                             |
| <a href="#">SPR16X4</a>   | Distributed Single Port RAM with Synchronous Write and Asynchronous Read |

**Table 5: Multipliers**

| Primitive                           | Description                                                       |
|-------------------------------------|-------------------------------------------------------------------|
| <a href="#">ALUREG</a>              | Arithmetic Logic Unit and Register File for RISC-V Soft Processor |
| <a href="#">MULT18X18</a>           | 18x18 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT18X36</a>           | 18x36 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT36X36</a>           | 36x36 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT9X9</a>             | 9x9 Multiplier with Optional Input/Output Registers               |
| <a href="#">MULT18X18</a>           | 18x18 Multiplier and Accumulator                                  |
| <a href="#">MULTADDSUB18X18WIDE</a> | 18x18 Wide Multiplier and Adder/Subtractor                        |
| <a href="#">MULTADDSUB18X36</a>     | 18x36 Multiplier and Adder/Subtractor                             |
| <a href="#">MULTADDSUB36X36</a>     | 36x36 Multiplier and Adder/Subtractor                             |
| <a href="#">MULTADDSUB9X9WIDE</a>   | 9x9 Wide Multiplier and Adder/Subtractor                          |
| <a href="#">MULTPREADD18X18</a>     | 18x18 Multiplier with Pre-Adder                                   |
| <a href="#">MULTPREADD9X9</a>       | 9x9 Multiplier with Pre-Adder                                     |

**Table 6: Clock/PLL**

| Primitive                 | Description                                |
|---------------------------|--------------------------------------------|
| <a href="#">DCC</a>       | Dynamic Clock Control with Positive Enable |
| <a href="#">DCS</a>       | Dynamic Clock Selection                    |
| <a href="#">DIFFCLKIO</a> | Differential to single-end clock buffer.   |
| <a href="#">ECLKDIV</a>   | Clock Divider for Edge Clock Wrapper       |
| <a href="#">ECLKSYNC</a>  | Clock Synchronizer for Edge Clock Wrapper  |
| <a href="#">PCLKDIV</a>   | Clock Divider for Primary Clock            |

**Table 6: Clock/PLL**

| Primitive | Description                            |
|-----------|----------------------------------------|
| PCLKDIVSP | Clock Divider for Primary Clock        |
| PCSREFMUX | Multiplexer of reference clock for PCS |
| PLL       | Phase-Locked Loop                      |
| PLLA      | Phase-Locked Loop                      |
| PLLREFCS  | PLL Dynamic Reference Clock Switching  |

**Table 7: Combinatorial Primitives**

| Primitive | Description                       |
|-----------|-----------------------------------|
| CCU2      | Carry Chain                       |
| LUT4      | 4-Input Look Up Table             |
| WIDEFN9   | 9-Input Single Output Logic Block |

**Table 8: Interfaces**

| Primitive | Description                                                     |
|-----------|-----------------------------------------------------------------|
| I2CFIFO   | Hardened I2C Interface Block                                    |
| MIPI      | Soft MIPI Interface Block                                       |
| MULTIBOOT | Interface for Multiboot Functionality                           |
| PCIELL    | PCIe logical link layer                                         |
| PCSX1     | Wrapper of PCSX1 and MPCS                                       |
| PCSX2     | Wrapper of PCSX2 and MPCS                                       |
| PCSX4     | Wrapper of PCSX4 and MPCS                                       |
| SEDC      | Interface for Soft Error Detection and Correction Functionality |
| SGMIIICDR | Serial Gigabit Media Independent Interface                      |

**Table 9: Dual Data Rate Cells**

| Primitive | Description                                          |
|-----------|------------------------------------------------------|
| DDRDLL    | Delay-Locked Loop Master Block for DDR Functionality |
| DELAYA    | Dynamic Input/Output Delay Element                   |
| DELAYB    | Static Input/Output Delay Element                    |

**Table 9: Dual Data Rate Cells**

| Primitive    | Description                                                                                                   |
|--------------|---------------------------------------------------------------------------------------------------------------|
| DLLDEL       | Delay-Locked Loop Slave Block for DDR Functionality                                                           |
| DQSBUF       | Block generating DQS Signal for Memory DDR Functionality                                                      |
| DQSBUFA      | Block generating DQS Signal for Memory LPDDR4 Functionality                                                   |
| DQSBUF_IVREF | Block generating DQS Signal for Memory DDR4 Functionality                                                     |
| IDDR71       | 7:1 LVDS IDDR                                                                                                 |
| IDDRX1       | Generic X1 IDDR                                                                                               |
| IDDRX2       | Generic X1 IDDR                                                                                               |
| IDDRX2DQ     | DQ Input for DDR2 & DDR3 memory                                                                               |
| IDDRX4       | Generic X4 IDDR                                                                                               |
| IDDRX4DQ     | DQ Input for DDR3 memory                                                                                      |
| IDDRX5       | Generic X5 IDDR                                                                                               |
| ODDR71       | 7:1 LVDS ODDR                                                                                                 |
| ODDRX1       | Generic X1 ODDR                                                                                               |
| ODDRX2       | Generic X2 ODDR                                                                                               |
| ODDRX2DQ     | DQ output for DDR2 & DDR3 memory                                                                              |
| ODDRX2DQS    | DQS Output for DDR2 & DDR3 memory                                                                             |
| ODDRX4       | Generic X4 ODDR                                                                                               |
| ODDRX4DQ     | DQ Input for DDR3 memory                                                                                      |
| ODDRX4DQS    | DQS Output for DDR3 memory                                                                                    |
| ODDRX5       | Generic X5 ODDR                                                                                               |
| OSHX2        | This primitive is used to generate the address and command for DDR3 memory with x2 gearing and write leveling |
| OSHX4        | This primitive is used to generate the address and command for DDR3 memory with x4 gearing and write leveling |
| OUTDELAYA    | Add static and dynamic delay to DOUT and TOUT for write training in LPDDR4 mode                               |
| OUTDELAYB    | Add static delay to DOUT and TOUT for write training in LPDDR4 mode.                                          |
| TSHX2DQ      | DQ tristate control for DDR2 & DDR3 memory                                                                    |
| TSHX2DQS     | DQS tristate control for DDR2 & DDR3 memory                                                                   |
| TSHX4DQ      | DQ tristate control for DDR3 memory                                                                           |
| TSHX4DQS     | DQS tristate control for DDR3 memory                                                                          |

**Table 10: Oscillators**

| Primitive            | Description      |
|----------------------|------------------|
| <a href="#">OSC</a>  | Oscillator Block |
| <a href="#">OSCA</a> | Oscillator Block |

**Table 11: Miscellaneous**

| Primitive                    | Description                                                                 |
|------------------------------|-----------------------------------------------------------------------------|
| <a href="#">ADC</a>          | Analog-to-Digital Converter                                                 |
| <a href="#">BNKREF18</a>     | Bank Reference Block for 1.8V I/O                                           |
| <a href="#">BUF</a>          | Non-Inverting Buffer                                                        |
| <a href="#">CONFIG_LMMIA</a> | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| <a href="#">CRE</a>          | Cryptographic Engine                                                        |
| <a href="#">GSR</a>          | Global Set/Reset                                                            |
| <a href="#">INV</a>          | Inverter                                                                    |
| <a href="#">JTAG</a>         | JTAG Block for Reveal Debugging Tool                                        |
| <a href="#">TSALLA</a>       | Global Tristate Interface                                                   |
| <a href="#">VHI</a>          | Logic High Generator                                                        |
| <a href="#">VLO</a>          | Logic Low Generator                                                         |
| <a href="#">WDT</a>          | Interface for Configuration Watchdog Timer                                  |

# Primitive Library - LFD2NX (Certus-NX) / UT24C (Certus-NX-RT)

This library includes compatible primitives supported by the LFD2NX (Certus-NX) / UT24C (Certus-NX-RT) device family.

- ▶ [“Adders/Subtractors” on page 921](#)
- ▶ [“Flip-Flops” on page 921](#)
- ▶ [“Input/Output Buffer” on page 922](#)
- ▶ [“Memories” on page 922](#)
- ▶ [“Multipliers” on page 923](#)
- ▶ [“Clock/PLL” on page 923](#)
- ▶ [“Combinatorial Primitives” on page 924](#)
- ▶ [“Interfaces” on page 924](#)
- ▶ [“Dual Data Rate Cells” on page 924](#)
- ▶ [“Oscillators” on page 925](#)
- ▶ [“Miscellaneous” on page 926](#)

**Table 1: Adders/Subtractors**

| Primitive             | Description                |
|-----------------------|----------------------------|
| <a href="#">ACC54</a> | 54-bit Accumulator for DSP |

**Table 2: Flip-Flops**

| Primitive                | Description                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">BFD1P3KX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Synchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O)  |
| <a href="#">BFD1P3LX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Asynchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O) |
| <a href="#">FD1P3BX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                                    |
| <a href="#">FD1P3DX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                                     |
| <a href="#">FD1P3IX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)                             |
| <a href="#">FD1P3JX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)                           |
| <a href="#">IFD1P3BX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                              |
| <a href="#">IFD1P3DX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                               |

**Table 2: Flip-Flops**

| Primitive                | Description                                                                                                                           |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">IFD1P3IX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)    |
| <a href="#">IFD1P3JX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)  |
| <a href="#">OFD1P3BX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                          |
| <a href="#">OFD1P3DX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                           |
| <a href="#">OFD1P3IX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)   |
| <a href="#">OFD1P3JX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable) |

**Table 3: Input/Output Buffer**

| Primitive                | Description                                                  |
|--------------------------|--------------------------------------------------------------|
| <a href="#">BB</a>       | Bidirectional Buffer with Tri-State                          |
| <a href="#">BB_ADC</a>   | Bidirectional Buffer for Analog-to-Digital Converter         |
| <a href="#">BB_CDR</a>   | Bidirectional Buffer for CDR                                 |
| <a href="#">BB_I3C_A</a> | Input/Output Buffer with User Controllable Pull-Up Resistors |
| <a href="#">DIFFIO18</a> | Single Ended + Differential I/O block for 1.8V block         |
| <a href="#">IB</a>       | Input Buffer                                                 |
| <a href="#">OB</a>       | Output Buffer                                                |
| <a href="#">OBZ</a>      | Output Buffer with Tri-State                                 |
| <a href="#">SEIO18</a>   | Single Ended I/O block for 1.8V                              |
| <a href="#">SEIO33</a>   | Single Ended I/O Block for 3.3V                              |

**Table 4: Memories**

| Primitive                | Description                                                                   |
|--------------------------|-------------------------------------------------------------------------------|
| <a href="#">DP16K</a>    | 16 kb Dual Port Block RAM                                                     |
| <a href="#">DPR16X4</a>  | Distributed Pseudo Dual Port RAM with Synchronous Write and Asynchronous Read |
| <a href="#">DPSC512K</a> | 512 kb Single Clock Dual Port Block RAM                                       |
| <a href="#">FIFO16K</a>  | 16 kb FIFO                                                                    |

**Table 4: Memories**

| Primitive                 | Description                                                              |
|---------------------------|--------------------------------------------------------------------------|
| <a href="#">PDP16K</a>    | 16 kb Pseudo Dual Port Block RAM                                         |
| <a href="#">PDPSC16K</a>  | 16 kb Pseudo Dual Port Single Clock Block RAM                            |
| <a href="#">PDPSC512K</a> | 512 kb Single Clock Pseudo Dual Port Block RAM                           |
| <a href="#">SP16K</a>     | 16 kb Single Port Block RAM                                              |
| <a href="#">SP512K</a>    | 512 kb Single Port Block RAM                                             |
| <a href="#">SPR16X4</a>   | Distributed Single Port RAM with Synchronous Write and Asynchronous Read |

**Table 5: Multipliers**

| Primitive                           | Description                                                       |
|-------------------------------------|-------------------------------------------------------------------|
| <a href="#">ALUREG</a>              | Arithmetic Logic Unit and Register File for RISC-V Soft Processor |
| <a href="#">MULT18X18</a>           | 18x18 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT18X36</a>           | 18x36 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT36X36</a>           | 36x36 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT9X9</a>             | 9x9 Multiplier with Optional Input/Output Registers               |
| <a href="#">MULTADDSUB18X18</a>     | 18x18 Multiplier and Accumulator                                  |
| <a href="#">MULTADDSUB18X18WIDE</a> | 18x18 Wide Multiplier and Adder/Subtractor                        |
| <a href="#">MULTADDSUB18X36</a>     | 18x36 Multiplier and Adder/Subtractor                             |
| <a href="#">MULTADDSUB36X36</a>     | 36x36 Multiplier and Adder/Subtractor                             |
| <a href="#">MULTADDSUB9X9WIDE</a>   | 9x9 Wide Multiplier and Adder/Subtractor                          |
| <a href="#">MULTPREADD18X18</a>     | 18x18 Multiplier with Pre-Adder                                   |
| <a href="#">MULTPREADD9X9</a>       | 9x9 Multiplier with Pre-Adder                                     |

**Table 6: Clock/PLL**

| Primitive                 | Description                                |
|---------------------------|--------------------------------------------|
| <a href="#">DCC</a>       | Dynamic Clock Control with Positive Enable |
| <a href="#">DCS</a>       | Dynamic Clock Selection                    |
| <a href="#">ECLKDIV</a>   | Clock Divider for Edge Clock Wrapper       |
| <a href="#">ECLKSYNC</a>  | Clock Synchronizer for Edge Clock Wrapper  |
| <a href="#">PCLKDIV</a>   | Clock Divider for Primary Clock            |
| <a href="#">PCLKDIVSP</a> | Clock Divider for Primary Clock            |

**Table 6: Clock/PLL**

| Primitive                | Description                           |
|--------------------------|---------------------------------------|
| <a href="#">PLL</a>      | Phase-Locked Loop                     |
| <a href="#">PLLA</a>     | Phase-Locked Loop                     |
| <a href="#">PLLREFCS</a> | PLL Dynamic Reference Clock Switching |

**Table 7: Combinatorial Primitives**

| Primitive               | Description                       |
|-------------------------|-----------------------------------|
| <a href="#">CCU2</a>    | Carry Chain                       |
| <a href="#">LUT4</a>    | 4-Input Look Up Table             |
| <a href="#">WIDEFN9</a> | 9-Input Single Output Logic Block |

**Table 8: Interfaces**

| Primitive                 | Description                                                     |
|---------------------------|-----------------------------------------------------------------|
| <a href="#">I2CFIFO</a>   | Hardened I2C Interface Block                                    |
| <a href="#">MIPI</a>      | Soft MIPI Interface Block                                       |
| <a href="#">MULTIBOOT</a> | Interface for Multiboot Functionality                           |
| <a href="#">PCIE</a>      | Hardened PCIE Interface                                         |
| <a href="#">SEDC</a>      | Interface for Soft Error Detection and Correction Functionality |
| <a href="#">SGMIICDR</a>  | Serial Gigabit Media Independent Interface                      |

**Table 9: Dual Data Rate Cells**

| Primitive              | Description                                              |
|------------------------|----------------------------------------------------------|
| <a href="#">DDRDLL</a> | Delay-Locked Loop Master Block for DDR Functionality     |
| <a href="#">DELAYA</a> | Dynamic Input/Output Delay Element                       |
| <a href="#">DELAYB</a> | Static Input/Output Delay Element                        |
| <a href="#">DELAYC</a> | Supports edge monitor feature                            |
| <a href="#">DLLDEL</a> | Delay-Locked Loop Slave Block for DDR Functionality      |
| <a href="#">DQSBUF</a> | Block generating DQS Signal for Memory DDR Functionality |
| <a href="#">IDDR71</a> | 7:1 LVDS IDDR                                            |
| <a href="#">IDDRX1</a> | Generic X1 IDDR                                          |



**Table 9: Dual Data Rate Cells**

| Primitive                 | Description                                                                                                   |
|---------------------------|---------------------------------------------------------------------------------------------------------------|
| <a href="#">IDDRX2</a>    | Generic X1 IDDR                                                                                               |
| <a href="#">IDDRX2DQ</a>  | DQ Input for DDR2 & DDR3 memory                                                                               |
| <a href="#">IDDRX4</a>    | Generic X4 IDDR                                                                                               |
| <a href="#">IDDRX4DQ</a>  | DQ Input for DDR3 memory                                                                                      |
| <a href="#">IDDRX5</a>    | Generic X5 IDDR                                                                                               |
| <a href="#">ODDR71</a>    | 7:1 LVDS ODDR                                                                                                 |
| <a href="#">ODDRX1</a>    | Generic X1 ODDR                                                                                               |
| <a href="#">ODDRX2</a>    | Generic X2 ODDR                                                                                               |
| <a href="#">ODDRX2DQ</a>  | DQ output for DDR2 & DDR3 memory                                                                              |
| <a href="#">ODDRX2DQS</a> | DQS Output for DDR2 & DDR3 memory                                                                             |
| <a href="#">ODDRX4</a>    | Generic X4 ODDR                                                                                               |
| <a href="#">ODDRX4DQ</a>  | DQ Input for DDR3 memory                                                                                      |
| <a href="#">ODDRX4DQS</a> | DQS Output for DDR3 memory                                                                                    |
| <a href="#">ODDRX5</a>    | Generic X5 ODDR                                                                                               |
| <a href="#">OSHX2</a>     | This primitive is used to generate the address and command for DDR3 memory with x2 gearing and write leveling |
| <a href="#">OSHX4</a>     | This primitive is used to generate the address and command for DDR3 memory with x4 gearing and write leveling |
| <a href="#">TSHX2DQ</a>   | DQ tristate control for DDR2 & DDR3 memory                                                                    |
| <a href="#">TSHX2DQS</a>  | DQS tristate control for DDR2 & DDR3 memory                                                                   |
| <a href="#">TSHX4DQ</a>   | DQ tristate control for DDR3 memory                                                                           |
| <a href="#">TSHX4DQS</a>  | DQS tristate control for DDR3 memory                                                                          |

**Table 10: Oscillators**

| Primitive            | Description      |
|----------------------|------------------|
| <a href="#">OSC</a>  | Oscillator Block |
| <a href="#">OSCA</a> | Oscillator Block |

**Table 11: Miscellaneous**

| <b>Primitive</b>             | <b>Description</b>                                                          |
|------------------------------|-----------------------------------------------------------------------------|
| <a href="#">ADC</a>          | Analog-to-Digital Converter                                                 |
| <a href="#">BNKREF18</a>     | Bank Reference Block for 1.8V I/O                                           |
| <a href="#">BUF</a>          | Non-Inverting Buffer                                                        |
| <a href="#">CRE</a>          | Cryptographic Engine                                                        |
| <a href="#">CONFIG_LMMI</a>  | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| <a href="#">CONFIG_LMMIG</a> | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| <a href="#">CONFIG_LMMIH</a> | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| <a href="#">GSR</a>          | Global Set/Reset                                                            |
| <a href="#">INV</a>          | Inverter                                                                    |
| <a href="#">JTAG</a>         | JTAG Block for Reveal Debugging Tool                                        |
| <a href="#">TSALLA</a>       | Global Tristate Interface                                                   |
| <a href="#">VHI</a>          | Logic High Generator                                                        |
| <a href="#">VLO</a>          | Logic Low Generator                                                         |
| <a href="#">WDT</a>          | Interface for Configuration Watchdog Timer                                  |

# Primitive Library - LFMXO4 (MachXO4)

This library includes compatible primitives supported by the MachXO4 device family.

- ▶ [“Flip-Flops” on page 927](#)
- ▶ [“Input/Output Buffer” on page 928](#)
- ▶ [“PIC Cells: Flip-Flops \(Input\)” on page 928](#)
- ▶ [“PIC Cells: Flip-Flops \(Output\)” on page 928](#)
- ▶ [“Memory” on page 929](#)
- ▶ [“Miscellaneous Logic” on page 929](#)
- ▶ [“Multiplexers” on page 929](#)
- ▶ [“Read-Only Memory ” on page 929](#)
- ▶ [“Clock/PLL/DLL” on page 930](#)
- ▶ [“Combinatorial Primitives” on page 930](#)
- ▶ [“Dual Data Rate Cells” on page 931](#)
- ▶ [“Miscellaneous” on page 931](#)

**Table 1: Flip-Flops**

| Primitive               | Description                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------|
| <a href="#">FD1P3AX</a> | Positive Edge Triggered D Flip-Flop with Positive Level Enable, GSR Used for Clear                    |
| <a href="#">FD1P3AY</a> | Positive Edge Triggered D Flip-Flop with Positive Level Enable, GSR Used for Preset                   |
| <a href="#">FD1P3BX</a> | Positive-Edge-Triggered D Flip-Flop with Positive-Level Enable and Positive-Level Asynchronous Preset |
| <a href="#">FD1P3DX</a> | Positive-Edge-Triggered D Flip-Flop with Positive-Level Enable and Positive-Level Asynchronous Clear  |
| <a href="#">FD1P3JX</a> | Positive-Edge-Triggered D Flip-Flop with Positive-Level Synchronous Preset and Positive-Level Enable  |
| <a href="#">FD1S3AX</a> | Positive Edge Triggered D Flip-Flop, GSR Used for Clear                                               |
| <a href="#">FD1S3AY</a> | Positive Edge Triggered D Flip-Flop, GSR Used for Preset                                              |
| <a href="#">FD1S3BX</a> | Positive Edge Triggered D Flip-Flop with Positive Level Asynchronous Preset                           |
| <a href="#">FD1S3DX</a> | Positive Edge Triggered D Flip-Flop with Positive Level Asynchronous Clear                            |
| <a href="#">FD1S3IX</a> | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear                             |
| <a href="#">FD1S3JX</a> | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset                            |

**Table 2: Input/Output Buffer**

| Primitive | Description                         |
|-----------|-------------------------------------|
| BB        | Bidirectional Buffer with Tri-state |
| IB        | Input Buffer                        |
| OB        | Output Buffer                       |
| OBZ       | Output Buffer with Tri-state        |

**Table 3: PIC Cells: Flip-Flops (Input)**

| Primitive | Description                                                                                                                                                                 |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IFS1P3BX  | Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Preset, and System Clock (used in input PIC area only)                          |
| IFS1P3DX  | Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Clear, and System Clock (used in input PIC area only)                           |
| IFS1P3IX  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear, Positive Level Enable, and System Clock (Clear overrides Enable) (used in input PIC area only)   |
| IFS1P3JX  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset, Positive Level Enable, and System Clock (Preset overrides Enable) (used in input PIC area only) |

**Table 4: PIC Cells: Flip-Flops (Output)**

| Primitive | Description                                                                                                                                                                  |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFS1P3BX  | Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Preset, and System Clock (used in output PIC area only)                          |
| OFS1P3DX  | Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Clear, and System Clock (used in output PIC area only)                           |
| OFS1P3IX  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear, Positive Level Enable (Clear overrides Enable), and System Clock (used in output PIC area only)   |
| OFS1P3JX  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset, Positive Level Enable (Preset overrides Enable), and System Clock (used in output PIC area only) |

**Table 5: Memory**

| Primitive                | Description                      |
|--------------------------|----------------------------------|
| <a href="#">DP8KC</a>    | 8K True Dual Port Block RAM      |
| <a href="#">DPR16X4C</a> | Distributed Pseudo Dual Port RAM |
| <a href="#">FIFO8KB</a>  | 8K FIFO Block RAM                |
| <a href="#">PDPW8KC</a>  | Pseudo Dual Port Block RAM       |
| <a href="#">SP8KC</a>    | 8K Single Port Block RAM         |
| <a href="#">SPR16X4C</a> | Distributed Single Port RAM      |

**Table 6: Miscellaneous Logic**

| Primitive           | Description          |
|---------------------|----------------------|
| <a href="#">INV</a> | Inverter             |
| <a href="#">VHI</a> | Logic High Generator |
| <a href="#">VLO</a> | Logic Low Generator  |

**Table 7: Multiplexers**

| Primitive               | Description                            |
|-------------------------|----------------------------------------|
| <a href="#">L6MUX21</a> | 2 to 1 Mux                             |
| <a href="#">MUX21</a>   | 2-to-1 Mux                             |
| <a href="#">MUX41</a>   | 4 to 1 Mux                             |
| <a href="#">MUX81</a>   | 8 to 1 Mux                             |
| <a href="#">MUX161</a>  | 16-Input Mux within the PFU (4 Slices) |
| <a href="#">MUX321</a>  | 32-Input Mux within the PFU (8 Slices) |

**Table 8: Read-Only Memory**

| Primitive                 | Description                       |
|---------------------------|-----------------------------------|
| <a href="#">ROM128X1A</a> | ROM128X1A                         |
| <a href="#">ROM64X1A</a>  | 16 Word by 1 Bit Read-Only Memory |

**Table 8: Read-Only Memory**

| Primitive                 | Description                                                                             |
|---------------------------|-----------------------------------------------------------------------------------------|
| <a href="#">ROM256X1A</a> | 256 Word by 1 Bit Positive Edge Triggered Read-Only Memory with Registered Data Outputs |
| <a href="#">ROM32X1A</a>  | 32 Word by 1 Bit Read-Only Memory                                                       |
| <a href="#">ROM64X1A</a>  | 64 Word by 1 Bit Positive Edge Triggered Read-Only Memory with Registered Data Outputs  |

**Table 9: Clock/PLL/DLL**

| Primitive                    | Description                           |
|------------------------------|---------------------------------------|
| <a href="#">CLKDIVC</a>      | Clock Divider                         |
| <a href="#">DCCB</a>         | Dynamic Quadrant Clock Enable/Disable |
| <a href="#">DCMA</a>         | Dynamic Clock Mux                     |
| <a href="#">DLLDELC</a>      | Clock Shifting for ECLK or PCLK       |
| <a href="#">ECLKBRIDGECS</a> | ECLK Bridge Block Clock Select        |
| <a href="#">ECLKSYNCB</a>    | ECLK Stop Block                       |
| <a href="#">EHXPLLJ</a>      | GPLL                                  |
| <a href="#">OSCH</a>         | Oscillator                            |
| <a href="#">PLLREFCSB</a>    | PLL Dynamic Reference Clock Switching |

**Table 10: Combinatorial Primitives**

| Primitive            | Description           |
|----------------------|-----------------------|
| <a href="#">LUT4</a> | 4-Input Look-Up Table |
| <a href="#">LUT5</a> | 5-Input Look Up Table |
| <a href="#">LUT6</a> | 6-Input Look Up Table |
| <a href="#">LUT7</a> | 7-Input Look Up Table |
| <a href="#">LUT8</a> | 8-Input Look Up Table |

**Table 11: Dual Data Rate Cells**

| Primitive | Description                                 |
|-----------|---------------------------------------------|
| DQSDLLC   | Master DLL for Generating Required Delay    |
| IDDRXE    | Input for Generic DDR X1 Using 1:2 Gearing  |
| IDDRX2E   | Input for Generic DDR X2 Using 1:4 Gearing  |
| IDDRX4B   | Input for Generic DDR X4 Using 1:8 Gearing  |
| IDDRX71A  | 7:1 LVDS Input Supporting 1:7 Gearing       |
| ODDRXE    | Output for Generic DDR X1 Using 2:1 Gearing |
| ODDRX2E   | Output for Generic DDR X2 Using 4:1 Gearing |
| ODDRX4B   | Output for Generic DDR X4 Using 8:1 Gearing |
| ODDRX71A  | 7:1 LVDS Output                             |

**Table 12: Miscellaneous**

| Primitive | Description                                                                         |
|-----------|-------------------------------------------------------------------------------------|
| BCINRD    | Dynamic Bank Controller InRD                                                        |
| BCLVDSO   | Dynamic Bank Controller LVDS                                                        |
| CCU2D     | Carry Chain                                                                         |
| CLKFBBUFA | Dummy Feedback Delay Between PLL clk Output and PLL fb Port                         |
| DELAYG    | Delay                                                                               |
| DELAYH    | Fixed Delay in PIO                                                                  |
| EFB       | Embedded function blocks (EFB) interface with the user logic through a WISHBONE bus |
| GSRB      | Specifies the use of the global set/reset routing resources                         |
| INRDB     | Input Reference and Differential Buffer                                             |
| JTAGF     | JTAG (Joint Test Action Group) Controller                                           |
| LVDSOB    | LVDS Output Buffer                                                                  |
| PCNTR     | Power Controller                                                                    |
| SLICEMUX  | 2-Input Mux within the PFU, C0 Used for Selection with Positive Select              |
| PG        | Power Guard                                                                         |
| PUR       | Power Up Set/Reset                                                                  |
| SEDFA     | Soft Error Detect in Basic Mode                                                     |
| SEDFB     | Soft Error Detect in One Shot Mode                                                  |

**Table 12: Miscellaneous**

| Primitive             | Description                                    |
|-----------------------|------------------------------------------------|
| <a href="#">SGSRA</a> | Synchronous Release Global Set/Reset Interface |
| <a href="#">START</a> | Startup Controller                             |
| <a href="#">TSALL</a> | Global Tristate Interface                      |



# Primitive Library - LFMXO5 (MachXO5-NX)

This library includes compatible primitives supported by the LFMXO5 (MachXO5-NX) device family.

- ▶ [“Adders/Subtractors” on page 933](#)
- ▶ [“Flip-Flops” on page 933](#)
- ▶ [“Input/Output Buffer” on page 934](#)
- ▶ [“Memories” on page 934](#)
- ▶ [“Multipliers” on page 935](#)
- ▶ [“Clock/PLL” on page 935](#)
- ▶ [“Combinatorial Primitives” on page 936](#)
- ▶ [“Interfaces” on page 936](#)
- ▶ [“Dual Data Rate Cells” on page 936](#)
- ▶ [“Oscillators” on page 938](#)
- ▶ [“Miscellaneous” on page 938](#)

**Table 1: Adders/Subtractors**

| Primitive             | Description                |
|-----------------------|----------------------------|
| <a href="#">ACC54</a> | 54-bit Accumulator for DSP |

**Table 2: Flip-Flops**

| Primitive                | Description                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">BFD1P3KX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Synchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O)  |
| <a href="#">BFD1P3LX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Asynchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O) |
| <a href="#">FD1P3BX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                                    |
| <a href="#">FD1P3DX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                                     |
| <a href="#">FD1P3IX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)                             |
| <a href="#">FD1P3JX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)                           |
| <a href="#">IFD1P3BX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                              |
| <a href="#">IFD1P3DX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                               |
| <a href="#">IFD1P3IX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)                       |

**Table 2: Flip-Flops**

| Primitive                | Description                                                                                                                           |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">IFD1P3JX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)  |
| <a href="#">OFD1P3BX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                          |
| <a href="#">OFD1P3DX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                           |
| <a href="#">OFD1P3IX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)   |
| <a href="#">OFD1P3JX</a> | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable) |

**Table 3: Input/Output Buffer**

| Primitive                 | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| <a href="#">BB</a>        | Bidirectional Buffer with Tri-State                          |
| <a href="#">BB_ADC</a>    | Bidirectional Buffer for Analog-to-Digital Converter         |
| <a href="#">BB_CDR</a>    | Bidirectional Buffer for CDR                                 |
| <a href="#">BB_I3C_A</a>  | Input/Output Buffer with User Controllable Pull-Up Resistors |
| <a href="#">DIFFIO18</a>  | Single Ended + Differential I/O block for 1.8V block         |
| <a href="#">DIFFIO18A</a> | Single Ended + Differential I/O block for 1.8V block         |
| <a href="#">IB</a>        | Input Buffer                                                 |
| <a href="#">OB</a>        | Output Buffer                                                |
| <a href="#">OBZ</a>       | Output Buffer with Tri-State                                 |
| <a href="#">SEIO18</a>    | Single Ended I/O block for 1.8V                              |
| <a href="#">SEIO18A</a>   | Single Ended I/O block for 1.8V                              |
| <a href="#">SEIO33</a>    | Single Ended I/O Block for 3.3V                              |

**Table 4: Memories**

| Primitive                | Description                                                                   |
|--------------------------|-------------------------------------------------------------------------------|
| <a href="#">DP16K</a>    | 16 kb Dual Port Block RAM                                                     |
| <a href="#">DPR16X4</a>  | Distributed Pseudo Dual Port RAM with Synchronous Write and Asynchronous Read |
| <a href="#">DPSC512K</a> | 512 kb Single Clock Dual Port Block RAM                                       |
| <a href="#">FIFO16K</a>  | 16 kb FIFO                                                                    |

**Table 4: Memories**

| Primitive                 | Description                                                              |
|---------------------------|--------------------------------------------------------------------------|
| <a href="#">PDP16K</a>    | 16 kb Pseudo Dual Port Block RAM                                         |
| <a href="#">PDPSC16K</a>  | 16 kb Pseudo Dual Port Single Clock Block RAM                            |
| <a href="#">PDPSC512K</a> | 512 kb Single Clock Pseudo Dual Port Block RAM                           |
| <a href="#">SP16K</a>     | 16 kb Single Port Block RAM                                              |
| <a href="#">SP512K</a>    | 512 kb Single Port Block RAM                                             |
| <a href="#">SPR16X4</a>   | Distributed Single Port RAM with Synchronous Write and Asynchronous Read |

**Table 5: Multipliers**

| Primitive                           | Description                                                                   |
|-------------------------------------|-------------------------------------------------------------------------------|
| <a href="#">ALUREG</a>              | Wrapper for Arithmetic Logic Unit and Register File for RISC-V Soft Processor |
| <a href="#">MULT18X18</a>           | 18x18 Multiplier with Optional Input/Output Registers                         |
| <a href="#">MULT18X36</a>           | 18x36 Multiplier with Optional Input/Output Registers                         |
| <a href="#">MULT36X36</a>           | 36x36 Multiplier with Optional Input/Output Registers                         |
| <a href="#">MULT9X9</a>             | 9x9 Multiplier with Optional Input/Output Registers                           |
| <a href="#">MULTADDSUB18X18</a>     | 18x18 Multiplier and Accumulator                                              |
| <a href="#">MULTADDSUB18X18WIDE</a> | 18x18 Wide Multiplier and Adder/Subtractor                                    |
| <a href="#">MULTADDSUB18X36</a>     | 18x36 Multiplier and Adder/Subtractor                                         |
| <a href="#">MULTADDSUB36X36</a>     | 36x36 Multiplier and Adder/Subtractor                                         |
| <a href="#">MULTADDSUB9X9WIDE</a>   | 9x9 Wide Multiplier and Adder/Subtractor                                      |
| <a href="#">MULTPREADD18X18</a>     | 18x18 Multiplier with Pre-Adder                                               |
| <a href="#">MULTPREADD9X9</a>       | 9x9 Multiplier with Pre-Adder                                                 |

**Table 6: Clock/PLL**

| Primitive                 | Description                                |
|---------------------------|--------------------------------------------|
| <a href="#">DCC</a>       | Dynamic Clock Control with Positive Enable |
| <a href="#">DCS</a>       | Dynamic Clock Selection                    |
| <a href="#">DIFFCLKIO</a> | Differential to single-end clock buffer.   |
| <a href="#">ECLKDIV</a>   | Clock Divider for Edge Clock Wrapper       |
| <a href="#">ECLKSYNC</a>  | Clock Synchronizer for Edge Clock Wrapper  |
| <a href="#">PCLKDIV</a>   | Clock Divider for Primary Clock            |

**Table 6: Clock/PLL**

| Primitive | Description                            |
|-----------|----------------------------------------|
| PCLKDIVSP | Clock Divider for Primary Clock        |
| PCSREFMUX | Multiplexer of reference clock for PCS |
| PLL       | Phase-Locked Loop                      |
| PLLA      | Phase-Locked Loop                      |
| PLLREFCS  | PLL Dynamic Reference Clock Switching  |

**Table 7: Combinatorial Primitives**

| Primitive | Description                       |
|-----------|-----------------------------------|
| CCU2      | Carry Chain                       |
| LUT4      | 4-Input Look Up Table             |
| WIDEFN9   | 9-Input Single Output Logic Block |

**Table 8: Interfaces**

| Primitive | Description                                                     |
|-----------|-----------------------------------------------------------------|
| I2CFIFO   | Hardened I2C Interface Block                                    |
| MIPI      | Soft MIPI Interface Block                                       |
| MULTIBOOT | Interface for Multiboot Functionality                           |
| PCIELL    | PCIe logical link layer                                         |
| PCSX1     | Wrapper of PCSX1 and MPCS                                       |
| PCSX4     | Wrapper of PCSX4 and MPCS                                       |
| SEDC      | Interface for Soft Error Detection and Correction Functionality |
| SGMIICDR  | Serial Gigabit Media Independent Interface                      |

**Table 9: Dual Data Rate Cells**

| Primitive | Description                                          |
|-----------|------------------------------------------------------|
| DDRDLL    | Delay-Locked Loop Master Block for DDR Functionality |
| DELAYA    | Dynamic Input/Output Delay Element                   |
| DELAYB    | Static Input/Output Delay Element                    |
| DELAYC    | Supports edge monitor feature                        |

**Table 9: Dual Data Rate Cells**

| Primitive    | Description                                                                                                   |
|--------------|---------------------------------------------------------------------------------------------------------------|
| DLLDEL       | Delay-Locked Loop Slave Block for DDR Functionality                                                           |
| DQSBUF       | Block generating DQS Signal for Memory DDR Functionality                                                      |
| DQSBUFA      | Block generating DQS Signal for Memory LPDDR4 Functionality                                                   |
| DQSBUF_IVREF | Block generating DQS Signal for Memory DDR4 Functionality                                                     |
| IDDR71       | 7:1 LVDS IDDR                                                                                                 |
| IDDRX1       | Generic X1 IDDR                                                                                               |
| IDDRX2       | Generic X1 IDDR                                                                                               |
| IDDRX2DQ     | DQ Input for DDR2 & DDR3 memory                                                                               |
| IDDRX4       | Generic X4 IDDR                                                                                               |
| IDDRX4DQ     | DQ Input for DDR3 memory                                                                                      |
| IDDRX5       | Generic X5 IDDR                                                                                               |
| ODDR71       | 7:1 LVDS ODDR                                                                                                 |
| ODDRX1       | Generic X1 ODDR                                                                                               |
| ODDRX2       | Generic X2 ODDR                                                                                               |
| ODDRX2DQ     | DQ output for DDR2 & DDR3 memory                                                                              |
| ODDRX2DQS    | DQS Output for DDR2 & DDR3 memory                                                                             |
| ODDRX4       | Generic X4 ODDR                                                                                               |
| ODDRX4DQ     | DQ Input for DDR3 memory                                                                                      |
| ODDRX4DQS    | DQS Output for DDR3 memory                                                                                    |
| ODDRX5       | Generic X5 ODDR                                                                                               |
| OSHX2        | This primitive is used to generate the address and command for DDR3 memory with x2 gearing and write leveling |
| OSHX4        | This primitive is used to generate the address and command for DDR3 memory with x4 gearing and write leveling |
| OUTDELAYA    | Add static and dynamic delay to DOUT and TOUT for write training in LPDDR4 mode.                              |
| OUTDELAYB    | Add static delay to DOUT and TOUT for write training in LPDDR4 mode.                                          |
| OUTDELAYC    | Add static and dynamic delay to DOUT and TOUT for write training in LPDDR4 mode.                              |
| TSHX2DQ      | DQ tristate control for DDR2 & DDR3 memory                                                                    |
| TSHX2DQS     | DQS tristate control for DDR2 & DDR3 memory                                                                   |
| TSHX4DQ      | DQ tristate control for DDR3 memory                                                                           |
| TSHX4DQS     | DQS tristate control for DDR3 memory                                                                          |

**Table 10: Oscillators**

| Primitive            | Description      |
|----------------------|------------------|
| <a href="#">OSC</a>  | Oscillator Block |
| <a href="#">OSCA</a> | Oscillator Block |

**Table 11: Miscellaneous**

| Primitive                    | Description                                                                 |
|------------------------------|-----------------------------------------------------------------------------|
| <a href="#">ADC</a>          | Analog-to-Digital Converter                                                 |
| <a href="#">BNKREF18</a>     | Bank Reference Block for 1.8V I/O                                           |
| <a href="#">BUF</a>          | Non-Inverting Buffer                                                        |
| <a href="#">CONFIG_LMMIB</a> | Includes Flash access through LMMI                                          |
| <a href="#">CONFIG_LMMIE</a> | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| <a href="#">CONFIG_LMMIF</a> | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| <a href="#">CRE</a>          | Cryptographic Engine                                                        |
| <a href="#">GSR</a>          | Global Set/Reset                                                            |
| <a href="#">INV</a>          | Inverter                                                                    |
| <a href="#">JTAG</a>         | JTAG Block for Reveal Debugging Tool                                        |
| <a href="#">TSALLA</a>       | Global Tristate Interface                                                   |
| <a href="#">VHI</a>          | Logic High Generator                                                        |
| <a href="#">VLO</a>          | Logic Low Generator                                                         |
| <a href="#">WDT</a>          | Interface for Configuration Watchdog Timer                                  |

## Primitive Library - LIFCL (CrossLink-NX)

This library includes compatible primitives supported by the LIFCL (CrossLink-NX) device family.

- ▶ [“Adders/Subtractors” on page 939](#)
- ▶ [“Flip-Flops” on page 939](#)
- ▶ [“Input/Output Buffer” on page 940](#)
- ▶ [“Memories” on page 940](#)
- ▶ [“Multipliers” on page 941](#)
- ▶ [“Clock/PLL” on page 941](#)
- ▶ [“Combinatorial Primitives” on page 942](#)
- ▶ [“Interfaces” on page 942](#)
- ▶ [“Dual Data Rate Cells” on page 942](#)
- ▶ [“Oscillators” on page 943](#)
- ▶ [“Miscellaneous” on page 944](#)

**Table 1: Adders/Subtractors**

| Primitive             | Description                |
|-----------------------|----------------------------|
| <a href="#">ACC54</a> | 54-bit Accumulator for DSP |

**Table 2: Flip-Flops**

| Primitive                | Description                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">BFD1P3KX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Synchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O)  |
| <a href="#">BFD1P3LX</a> | Positive Edge Triggered Bidirectional D-Flip Flop with Positive Level Enable and Asynchronous Set/Reset for Input/Output/Tri-State Signals (to/from I/O) |
| <a href="#">FD1P3BX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                                    |
| <a href="#">FD1P3DX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                                     |
| <a href="#">FD1P3IX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)                             |
| <a href="#">FD1P3JX</a>  | Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)                           |
| <a href="#">IFD1P3BX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                                              |
| <a href="#">IFD1P3DX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                                               |
| <a href="#">IFD1P3IX</a> | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)                       |

**Table 2: Flip-Flops**

| Primitive | Description                                                                                                                           |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------|
| IFD1P3JX  | Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable)  |
| OFD1P3BX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset                          |
| OFD1P3DX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear                           |
| OFD1P3IX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear overrides Enable)   |
| OFD1P3JX  | Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset overrides Enable) |

**Table 3: Input/Output Buffer**

| Primitive   | Description                                          |
|-------------|------------------------------------------------------|
| BB          | Bidirectional Buffer with Tri-State                  |
| BB_ADC      | Single-Ended I/O Block for 1.8V                      |
| BB_CDR      | Single-Ended I/O Block for 1.8V                      |
| BB_I3C_A    | Single-Ended I/O Block for 3.3V                      |
| BB_PROGRAMN | Single-Ended I/O Block for PROGRAMN                  |
| DIFFIO18    | Single Ended + Differential I/O block for 1.8V block |
| IB          | Input Buffer                                         |
| OB          | Output Buffer                                        |
| OBZ         | Output Buffer with Tri-State                         |
| SEIO18      | Single Ended I/O block for 1.8V                      |
| SEIO33      | Single Ended I/O Block for 3.3V                      |

**Table 4: Memories**

| Primitive | Description                                                                   |
|-----------|-------------------------------------------------------------------------------|
| DP16K     | 16 kb Dual Port Block RAM                                                     |
| DPR16X4   | Distributed Pseudo Dual Port RAM with Synchronous Write and Asynchronous Read |
| DPSC512K  | 512 kb Single Clock Dual Port Block RAM                                       |
| FIFO16K   | 16 kb FIFO                                                                    |



**Table 4: Memories**

| Primitive                 | Description                                                              |
|---------------------------|--------------------------------------------------------------------------|
| <a href="#">PDP16K</a>    | 16 kb Pseudo Dual Port Block RAM                                         |
| <a href="#">PDPSC16K</a>  | 16 kb Pseudo Dual Port Single Clock Block RAM                            |
| <a href="#">PDPSC512K</a> | 512 kb Single Clock Pseudo Dual Port Block RAM                           |
| <a href="#">SP16K</a>     | 16 kb Single Port Block RAM                                              |
| <a href="#">SP512K</a>    | 512 kb Single Port Block RAM                                             |
| <a href="#">SPR16X4</a>   | Distributed Single Port RAM with Synchronous Write and Asynchronous Read |

**Table 5: Multipliers**

| Primitive                           | Description                                                       |
|-------------------------------------|-------------------------------------------------------------------|
| <a href="#">ALUREG</a>              | Arithmetic Logic Unit and Register File for RISC-V Soft Processor |
| <a href="#">MULT18X18</a>           | 18x18 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT18X36</a>           | 18x36 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT36X36</a>           | 36x36 Multiplier with Optional Input/Output Registers             |
| <a href="#">MULT9X9</a>             | 9x9 Multiplier with Optional Input/Output Registers               |
| <a href="#">MULTADDSUB18X18</a>     | 18x18 Multiplier and Accumulator                                  |
| <a href="#">MULTADDSUB18X18WIDE</a> | 18x18 Wide Multiplier and Adder/Subtractor                        |
| <a href="#">MULTADDSUB18X36</a>     | 18x36 Multiplier and Adder/Subtractor                             |
| <a href="#">MULTADDSUB36X36</a>     | 36x36 Multiplier and Adder/Subtractor                             |
| <a href="#">MULTADDSUB9X9WIDE</a>   | 9x9 Wide Multiplier and Adder/Subtractor                          |
| <a href="#">MULTPREADD18X18</a>     | 18x18 Multiplier with Pre-Adder                                   |
| <a href="#">MULTPREADD9X9</a>       | 9x9 Multiplier with Pre-Adder                                     |

**Table 6: Clock/PLL**

| Primitive                 | Description                                |
|---------------------------|--------------------------------------------|
| <a href="#">DCC</a>       | Dynamic Clock Control with Positive Enable |
| <a href="#">DCS</a>       | Dynamic Clock Selection                    |
| <a href="#">ECLKDIV</a>   | Clock Divider for Edge Clock Wrapper       |
| <a href="#">ECLKSYNC</a>  | Clock Synchronizer for Edge Clock Wrapper  |
| <a href="#">PCLKDIV</a>   | Clock Divider for Primary Clock            |
| <a href="#">PCLKDIVSP</a> | Clock Divider for Primary Clock            |

**Table 6: Clock/PLL**

| Primitive                | Description                           |
|--------------------------|---------------------------------------|
| <a href="#">PLL</a>      | Phase-Locked Loop                     |
| <a href="#">PLLA</a>     | Phase-Locked Loop                     |
| <a href="#">PLLREFCS</a> | PLL Dynamic Reference Clock Switching |

**Table 7: Combinatorial Primitives**

| Primitive               | Description                       |
|-------------------------|-----------------------------------|
| <a href="#">CCU2</a>    | Carry Chain                       |
| <a href="#">LUT4</a>    | 4-Input Look Up Table             |
| <a href="#">WIDEFN9</a> | 9-Input Single Output Logic Block |

**Table 8: Interfaces**

| Primitive                 | Description                                                     |
|---------------------------|-----------------------------------------------------------------|
| <a href="#">DPHY</a>      | Hardened MIPI DPHY Interface Block                              |
| <a href="#">I2CFIFO</a>   | Hardened I2C Interface Block                                    |
| <a href="#">MIPI</a>      | Soft MIPI Interface Block                                       |
| <a href="#">MULTIBOOT</a> | Interface for Multiboot Functionality                           |
| <a href="#">PCIE</a>      | Hardened PCIE Interface                                         |
| <a href="#">SEDC</a>      | Interface for Soft Error Detection and Correction Functionality |
| <a href="#">SGMIICDR</a>  | Serial Gigabit Media Independent Interface                      |

**Table 9: Dual Data Rate Cells**

| Primitive              | Description                                              |
|------------------------|----------------------------------------------------------|
| <a href="#">DDRDLL</a> | Delay-Locked Loop Master Block for DDR Functionality     |
| <a href="#">DELAYA</a> | Dynamic Input/Output Delay Element                       |
| <a href="#">DELAYB</a> | Static Input/Output Delay Element                        |
| <a href="#">DELAYC</a> | Supports edge monitor feature                            |
| <a href="#">DLLDEL</a> | Delay-Locked Loop Slave Block for DDR Functionality      |
| <a href="#">DQSBUF</a> | Block generating DQS Signal for Memory DDR Functionality |
| <a href="#">IDDR71</a> | 7:1 LVDS IDDR                                            |

**Table 9: Dual Data Rate Cells**

| Primitive | Description                                                                                                   |
|-----------|---------------------------------------------------------------------------------------------------------------|
| IDDRX1    | Generic X1 IDDR                                                                                               |
| IDDRX2    | Generic X1 IDDR                                                                                               |
| IDDRX2DQ  | DQ Input for DDR2 & DDR3 memory                                                                               |
| IDDRX4    | Generic X4 IDDR                                                                                               |
| IDDRX4DQ  | DQ Input for DDR3 memory                                                                                      |
| IDDRX5    | Generic X5 IDDR                                                                                               |
| ODDR71    | 7:1 LVDS ODDR                                                                                                 |
| ODDRX1    | Generic X1 ODDR                                                                                               |
| ODDRX2    | Generic X2 ODDR                                                                                               |
| ODDRX2DQ  | DQ output for DDR2 & DDR3 memory                                                                              |
| ODDRX2DQS | DQS Output for DDR2 & DDR3 memory                                                                             |
| ODDRX4    | Generic X4 ODDR                                                                                               |
| ODDRX4DQ  | DQ Input for DDR3 memory                                                                                      |
| ODDRX4DQS | DQS Output for DDR3 memory                                                                                    |
| ODDRX5    | Generic X5 ODDR                                                                                               |
| OSHX2     | This primitive is used to generate the address and command for DDR3 memory with x2 gearing and write leveling |
| OSHX4     | This primitive is used to generate the address and command for DDR3 memory with x4 gearing and write leveling |
| TSHX2DQ   | DQ tristate control for DDR2 & DDR3 memory                                                                    |
| TSHX2DQS  | DQS tristate control for DDR2 & DDR3 memory                                                                   |
| TSHX4DQ   | DQ tristate control for DDR3 memory                                                                           |
| TSHX4DQS  | DQS tristate control for DDR3 memory                                                                          |

**Table 10: Oscillators**

| Primitive | Description               |
|-----------|---------------------------|
| OSC       | Oscillator Block          |
| OSCA      | Oscillator Block          |
| OSCD      | High-frequency oscillator |
| OSCD      | High-frequency oscillator |
| OSHX2     | High-frequency oscillator |

**Table 11: Miscellaneous**

| Primitive    | Description                                                                 |
|--------------|-----------------------------------------------------------------------------|
| ADC          | Analog-to-Digital Converter                                                 |
| AON          | Always On                                                                   |
| AON          |                                                                             |
| AON          | Always On                                                                   |
| BNKREF18     | Bank Reference Block for 1.8V I/O                                           |
| BUF          | Non-Inverting Buffer                                                        |
| CRE          | Cryptographic Engine                                                        |
| CONFIG_LMMI  | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| CONFIG_LMMIA | LMMI (Lattice Memory Mapped Interface) interface to the configuration block |
| GSR          | Global Set/Reset                                                            |
| INV          | Inverter                                                                    |
| JTAG         | JTAG Block for Reveal Debugging Tool                                        |
| TSALLA       | Global Tristate Interface                                                   |
| USB23        | The software interface of USB2.0 & USB3.0 hard IP                           |
| USB23        | USB23 Interface                                                             |
| USB23        | USB23 Interface                                                             |
| VHI          | Logic High Generator                                                        |
| VLO          | Logic Low Generator                                                         |
| WDT          | Interface for Configuration Watchdog Timer                                  |

# Primitive Library - iCE40UP (iCE40 UltraPlus)

This library includes compatible primitives supported by the iCE40UP (iCE40 UltraPlus) device family. For further information, a variety of technical notes for the iCE40 UltraPlus family are available on the Lattice website.

- ▶ [“Adders/Subtractors” on page 945](#)
- ▶ [“Flip-Flops” on page 945](#)
- ▶ [“Input/Output Buffer” on page 946](#)
- ▶ [“Memory” on page 946](#)
- ▶ [“Multiplier” on page 946](#)
- ▶ [“PIC Cells” on page 946](#)
- ▶ [“Special Cells” on page 947](#)
  - ▶ [“Clock/PLL” on page 947](#)
  - ▶ [“Combinatorial Primitives” on page 947](#)
  - ▶ [“Interfaces” on page 947](#)
  - ▶ [“Oscillators” on page 947](#)
  - ▶ [“Miscellaneous” on page 948](#)

**Table 1: Adders/Subtractors**

| Primitive              | Description                                                                                             |
|------------------------|---------------------------------------------------------------------------------------------------------|
| <a href="#">CCU2_B</a> | Carry Chain.                                                                                            |
| <a href="#">FA2</a>    | Carry chain two bit full adder.<br>USER INSTANTIATION: Not Recommended; prefer RTL synthesis inference. |

**Table 2: Flip-Flops**

| Primitive               | Description                                                                                                                     |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">FD1P3BZ</a> | Positive edge triggered D flip-flop with positive level enable and positive level asynchronous preset.                          |
| <a href="#">FD1P3DZ</a> | Positive edge triggered D flip-flop with positive level enable and positive level asynchronous clear.                           |
| <a href="#">FD1P3IZ</a> | Positive edge triggered D flip-flop with positive level synchronous clear and positive level enable (clear overrides enable).   |
| <a href="#">FD1P3JZ</a> | Positive edge triggered D flip-flop with positive level synchronous preset and positive level enable (enable overrides preset). |
| <a href="#">FD1P3XZ</a> | Positive edge triggered D flip-flop with synchronous or asynchronous set/reset.                                                 |

**Table 3: Input/Output Buffer**

| Primitive              | Description                                                                                                      |
|------------------------|------------------------------------------------------------------------------------------------------------------|
| <a href="#">BB_B</a>   | Bidirectional I/O buffer with tri-state.                                                                         |
| <a href="#">IB</a>     | Input buffer.                                                                                                    |
| <a href="#">OB</a>     | Output buffer.                                                                                                   |
| <a href="#">OBZ_B</a>  | Output buffer with tristate.                                                                                     |
| <a href="#">OB_RGB</a> | Output Buffer.<br>USER INSTANTIATION: Illegal. Please refer to <a href="#">RGB</a> and <a href="#">RGB1P8V</a> . |

**Table 4: Memory**

| Primitive              | Description                                                                                                                                                                                                  |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">EBR_B</a>  | 4 Kb pseudo-dual port block ram with configurable write/read width & optional bitstream initialization.<br>USER INSTANTIATION: Not recommended; prefer either RTL synthesis inference or IP Generation Tool. |
| <a href="#">PDP4K</a>  | 4Kb pseudo-dual port block RAM.                                                                                                                                                                              |
| <a href="#">SP256K</a> | Single Port RAM that can be configured in 16K x 16 mode. This block can be cascaded using logic implemented in fabric to create larger memories.                                                             |
| <a href="#">VFB_B</a>  | 256Kb single port RAM.<br>USER INSTANTIATION: Not recommended. Please refer to <a href="#">SP256K</a> .                                                                                                      |

**Table 5: Multiplier**

| Primitive             | Description                                                                                                                   |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">MAC16</a> | DSP block capable of being configured as a multiplier, adder, subtractor, accumulator, multiply-adder or multiply-subtractor. |

**Table 6: PIC Cells**

| Primitive                | Description                                                           |
|--------------------------|-----------------------------------------------------------------------|
| <a href="#">IFD1P3AZ</a> | Positive edge triggered input D flip-flop with positive level enable. |
| <a href="#">IOL_B</a>    | Input/output registers, for both single data and double data rate.    |

## Special Cells

**Table 7: Clock/PLL**

| Primitive | Description                                                                                                    |
|-----------|----------------------------------------------------------------------------------------------------------------|
| PLL_B     | Phase locked loop. <b>For internal use.</b><br>USER INSTANTIATION: Not recommended; prefer IP Generation Tool. |

**Table 8: Combinatorial Primitives**

| Primitive | Description            |
|-----------|------------------------|
| LUT4      | 4-Input Look Up Table. |

**Table 9: Interfaces**

| Primitive | Description                                                     |
|-----------|-----------------------------------------------------------------|
| I2C_B     | The iCE40 UltraPlus device supports two I2C hard IP primitives. |
| BB_I3C    | I/O with user controllable pull up resistors.                   |
| SPI_B     | Hard SPI interface.                                             |

**Table 10: Oscillators**

| Primitive  | Description                                                                                                                                                                                                         |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HSOSC      | High-frequency oscillator. Generates 48MHz nominal clock, $\pm 10\%$ , with user programmable divider. Can drive global clock network or fabric routing.                                                            |
| HSOSC1P8V  | High-frequency oscillator. Generates 48MHz nominal clock, $\pm 10\%$ , with user programmable divider. Can drive global clock network or fabric routing. For use when VPP_2V5 is connected to a voltage below 2.3V. |
| I2C_B      | High-frequency oscillator. Generates 48MHz nominal clock, $\pm 10\%$ , with user programmable divider. Can drive global clock network or fabric routing.                                                            |
| LSOSC      | Low-frequency oscillator. Generates 10KHz nominal clock, $\pm 10\%$ . Can drive global clock network or fabric routing.                                                                                             |
| LSOSC1P8V  | Low-frequency oscillator. Generates 10KHz nominal clock, $\pm 10\%$ . Can drive global clock network or fabric routing. For use when VPP_2V5 is connected to a voltage below 2.3V.                                  |
| LSOSC_CORE | Low-frequency oscillator. Generates 10KHz nominal clock, $\pm 10\%$ . Can drive global clock network or fabric routing.                                                                                             |

**Table 11: Miscellaneous**

| Primitive | Description                                                                                                          |
|-----------|----------------------------------------------------------------------------------------------------------------------|
| BB_OD     | Input/Output buffer.                                                                                                 |
| BUF       | Non-inverting buffer.<br>USER INSTANTIATION: Yes; refer to Template Editor.                                          |
| FILTER    | Adds a 50ns delay to a signal.                                                                                       |
| INV       | Inverter.                                                                                                            |
| OFD1P3AZ  | Positive edge triggered output D flip-flop with positive level enable.                                               |
| RGB       | RGB LED drive module, containing three open drain I/O pins for RGB LED outputs.                                      |
| RGB1P8V   | RGB LED drive module, containing three open drain I/O pins for RGB LED outputs.<br>Trim bits are driven from Fabric. |
| RGB_CORE  | RGB LED drive module, containing three open drain I/O pins for RGB LED outputs.                                      |
| RGBPWM    | Generates the PWM signals for the RGB LED drivers.                                                                   |
| VHI       | Logic High Generator.                                                                                                |
| VLO       | Logic Low Generator.                                                                                                 |
| WARMBOOT  | Allows for loading a different configuration during run time.                                                        |

## iCECube2 Primitives vs. Radiant Software Primitives

For complete information on updating iCECube2 Primitives for iCE40 UltraPlus devices to Radiant Software Primitives for iCE40 UltraPlus devices, refer to the [Migrating iCEcube2 iCE40 UltraPlus Designs to Lattice Radiant 2.0 Software](#) document.



# Alphanumeric Primitives List

This section lists all the Radiant library primitives in alphanumeric order.

- ▶ [“ACC54” on page 957](#)
- ▶ [“ADC” on page 961](#)
- ▶ [“ALUREG” on page 965](#)
- ▶ [“AON” on page 967](#)
- ▶ [“BB” on page 969](#)
- ▶ [“BB\\_ADC” on page 970](#)
- ▶ [“BB\\_B” on page 971](#)
- ▶ [“BB\\_CDR” on page 972](#)
- ▶ [“BB\\_I3C” on page 972](#)
- ▶ [“BB\\_I3C\\_A” on page 974](#)
- ▶ [“BB\\_I3C\\_B” on page 975](#)
- ▶ [“BB\\_OD” on page 976](#)
- ▶ [“BB\\_PROGRAMN” on page 977](#)
- ▶ [“BCINRD” on page 978](#)
- ▶ [“BCLVDSO” on page 979](#)
- ▶ [“BFD1P3KX” on page 980](#)
- ▶ [“BFD1P3LX” on page 982](#)
- ▶ [“BNKREF18” on page 984](#)
- ▶ [“BUF” on page 985](#)
- ▶ [“CCU2” on page 986](#)
- ▶ [“CCU2\\_B” on page 988](#)
- ▶ [“CCU2C” on page 993](#)
- ▶ [“CCU2D” on page 995](#)
- ▶ [“CLKDIVC” on page 996](#)
- ▶ [“CLKFBBUFA” on page 998](#)
- ▶ [“CONFIG\\_DONE” on page 1001](#)
- ▶ [“CONFIG\\_LMMI” on page 999](#)
- ▶ [“CONFIG\\_LMMIA” on page 1000](#)
- ▶ [“CONFIG\\_LMMIB” on page 1001](#)
- ▶ [“CONFIG\\_LMMIC” on page 1002](#)
- ▶ [“CONFIG\\_LMMIE” on page 1003](#)
- ▶ [“CONFIG\\_LMMIF” on page 1005](#)
- ▶ [“CONFIG\\_LMMIG” on page 1006](#)
- ▶ [“CONFIG\\_LMMIH” on page 1007](#)

- ▶ [“CRE” on page 1008](#)
- ▶ [“CREA” on page 1014](#)
- ▶ [“DCC” on page 1016](#)
- ▶ [“DCCA” on page 1017](#)
- ▶ [“DCCB” on page 1018](#)
- ▶ [“DCMA” on page 1020](#)
- ▶ [“DCS” on page 1021](#)
- ▶ [“DCSA” on page 1023](#)
- ▶ [“DDRDLL” on page 1024](#)
- ▶ [“DDRDLA” on page 1026](#)
- ▶ [“DDRPHY16D” on page 1027](#)
- ▶ [“DDRPHY16E” on page 1034](#)
- ▶ [“DDRPHY32D” on page 1040](#)
- ▶ [“DDRPHY32E” on page 1049](#)
- ▶ [“DDRPHY40D” on page 1056](#)
- ▶ [“DDRPHY64D” on page 1066](#)
- ▶ [“DDRPHY64E” on page 1079](#)
- ▶ [“DDRPHY72D” on page 1090](#)
- ▶ [“DELAYA” on page 1103](#)
- ▶ [“DELAYB” on page 1106](#)
- ▶ [“DELAYC” on page 1108](#)
- ▶ [“DELAYD” on page 1111](#)
- ▶ [“DELAYE” on page 1112](#)
- ▶ [“DELAYF” on page 1113](#)
- ▶ [“DELAYG” on page 1115](#)
- ▶ [“DELAYH” on page 1116](#)
- ▶ [“DIFFCLKIO” on page 1117](#)
- ▶ [“DIFFIO18” on page 1118](#)
- ▶ [“DIFFIO18A” on page 1120](#)
- ▶ [“DLLDEL” on page 1121](#)
- ▶ [“DLLDELA” on page 1123](#)
- ▶ [“DLLDELC” on page 1124](#)
- ▶ [“DOTPRODADDSUB9X9” on page 1125](#)
- ▶ [“DOTPRODADDSUB9X9A” on page 1131](#)
- ▶ [“DP16K” on page 1137](#)
- ▶ [“DP32K” on page 1140](#)

- ▶ [“DP8KC” on page 1143](#)
- ▶ [“DPR16X4C” on page 1146](#)
- ▶ [“DPHY” on page 1148](#)
- ▶ [“DPR16X4” on page 1160](#)
- ▶ [“DPR16X4A” on page 1162](#)
- ▶ [“DPR32X2” on page 1163](#)
- ▶ [“DPSC512K” on page 1164](#)
- ▶ [“DQSBUF” on page 1167](#)
- ▶ [“DQSBUFA” on page 1172](#)
- ▶ [“DQSBUF\\_IVREF” on page 1176](#)
- ▶ [“DQSDLLC” on page 1180](#)
- ▶ [“EBR\\_B” on page 1182](#)
- ▶ [“ECLKBRIDGECS” on page 1184](#)
- ▶ [“ECLKDIV” on page 1186](#)
- ▶ [“ECLKDIVA” on page 1187](#)
- ▶ [“ECLKSYNC” on page 1188](#)
- ▶ [“ECLKSYNCA” on page 1189](#)
- ▶ [“ECLKSYNCB” on page 1190](#)
- ▶ [“EFB” on page 1192](#)
- ▶ [“EHXPLLJ” on page 1199](#)
- ▶ [“FA2” on page 1204](#)
- ▶ [“FD1P3BX” on page 1209](#)
- ▶ [“FD1P3BZ” on page 1211](#)
- ▶ [“FD1P3DX” on page 1212](#)
- ▶ [“FD1P3DZ” on page 1214](#)
- ▶ [“FD1P3AX” on page 1215](#)
- ▶ [“FD1P3AY” on page 1216](#)
- ▶ [“FD1P3IX” on page 1217](#)
- ▶ [“FD1P3IZ” on page 1219](#)
- ▶ [“FD1P3JX” on page 1220](#)
- ▶ [“FD1P3JZ” on page 1222](#)
- ▶ [“FD1P3XZ” on page 1223](#)
- ▶ [“FD1S3AX” on page 1223](#)
- ▶ [“FD1S3AY” on page 1225](#)
- ▶ [“FD1S3BX” on page 1226](#)

- ▶ [“FD1S3DX” on page 1227](#)
- ▶ [“FD1S3IX” on page 1228](#)
- ▶ [“FD1S3JX” on page 1229](#)
- ▶ [“FIFO8KB” on page 1230](#)
- ▶ [“FIFO16K” on page 1233](#)
- ▶ [“FIFO32K” on page 1235](#)
- ▶ [“FILTER” on page 1238](#)
- ▶ [“GSR” on page 1238](#)
- ▶ [“GSRA” on page 1240](#)
- ▶ [“GSRB” on page 1240](#)
- ▶ [“HSOSC” on page 1241](#)
- ▶ [“HSOSC1P8V” on page 1242](#)
- ▶ [“I2C\\_B” on page 1243](#)
- ▶ [“I2CFIFO” on page 1244](#)
- ▶ [“IB” on page 1249](#)
- ▶ [“IDDR71” on page 1250](#)
- ▶ [“IDDR71A” on page 1251](#)
- ▶ [“IDDRX1” on page 1253](#)
- ▶ [“IDDRX1A” on page 1254](#)
- ▶ [“IDDRX2” on page 1255](#)
- ▶ [“IDDRX2A” on page 1256](#)
- ▶ [“IDDRX2DQ” on page 1258](#)
- ▶ [“IDDRX4” on page 1259](#)
- ▶ [“IDDRX4A” on page 1260](#)
- ▶ [“IDDRX4B” on page 1262](#)
- ▶ [“IDDRX4DQ” on page 1263](#)
- ▶ [“IDDRX5” on page 1264](#)
- ▶ [“IDDRX5A” on page 1266](#)
- ▶ [“IDDRX71A” on page 1267](#)
- ▶ [“IDDRXE” on page 1268](#)
- ▶ [“IDDRX2E” on page 1269](#)
- ▶ [“IFD1P3AZ” on page 1270](#)
- ▶ [“IFD1P3BX” on page 1271](#)
- ▶ [“IFD1P3DX” on page 1273](#)
- ▶ [“IFD1P3IX” on page 1275](#)
- ▶ [“IFD1P3JX” on page 1277](#)

- ▶ “IFS1P3BX” on page 1278
- ▶ “IFS1P3DX” on page 1280
- ▶ “IFS1P3IX” on page 1281
- ▶ “IFS1P3JX” on page 1283
- ▶ “IMONDELAY” on page 1284
- ▶ “INV” on page 1286
- ▶ “INRDB” on page 1287
- ▶ “IOL\_B” on page 1288
- ▶ “JTAG” on page 1289
- ▶ “JTAGA” on page 1292
- ▶ “JTAGF” on page 1294
- ▶ “JTAGH25” on page 1296
- ▶ “JTAGH25SOFT” on page 1298
- ▶ “L6MUX21” on page 1301
- ▶ “LSOSC” on page 1302
- ▶ “LSOSC1P8V” on page 1302
- ▶ “LSOSC\_CORE” on page 1303
- ▶ “LVDSOB” on page 1304
- ▶ “LUT4” on page 1305
- ▶ “LUT5” on page 1307
- ▶ “LUT6” on page 1308
- ▶ “LUT7” on page 1310
- ▶ “LUT8” on page 1311
- ▶ “MAC16” on page 1312
- ▶ “MIPI” on page 1318
- ▶ “MIPIA” on page 1319
- ▶ “MULT18X18” on page 1321
- ▶ “MULT18X18A” on page 1323
- ▶ “MULT18X36” on page 1324
- ▶ “MULT36X36” on page 1326
- ▶ “MULT8X8” on page 1328
- ▶ “MULT9X9” on page 1330
- ▶ “MULT9X9A” on page 1332
- ▶ “MULTADDSUB18X18” on page 1334
- ▶ “MULTADDSUB18X18A” on page 1337
- ▶ “MULTADDSUB18X18WIDE” on page 1342

- ▶ [“MULTADDSUB18X36” on page 1346](#)
- ▶ [“MULTADDSUB36X36” on page 1349](#)
- ▶ [“MULTADDSUB9X9WIDE” on page 1352](#)
- ▶ [“MULTIBOOT” on page 1357](#)
- ▶ [“MULTPREADD18X18” on page 1358](#)
- ▶ [“MULTPREADD9X9” on page 1361](#)
- ▶ [“MUX21” on page 1363](#)
- ▶ [“MUX41” on page 1364](#)
- ▶ [“MUX81” on page 1364](#)
- ▶ [“MUX161” on page 1365](#)
- ▶ [“MUX321” on page 1367](#)
- ▶ [“OB” on page 1369](#)
- ▶ [“OB\\_RGB” on page 1370](#)
- ▶ [“OBZ” on page 1371](#)
- ▶ [“OBZ\\_B” on page 1372](#)
- ▶ [“ODDR71” on page 1373](#)
- ▶ [“ODDR71A” on page 1374](#)
- ▶ [“ODDRXE” on page 1376](#)
- ▶ [“ODDRX1” on page 1377](#)
- ▶ [“ODDRX1A” on page 1378](#)
- ▶ [“ODDRX2” on page 1379](#)
- ▶ [“ODDRX2A” on page 1381](#)
- ▶ [“ODDRX2DQ” on page 1383](#)
- ▶ [“ODDRX2DQS” on page 1385](#)
- ▶ [“ODDRX4” on page 1386](#)
- ▶ [“ODDRX4A” on page 1387](#)
- ▶ [“ODDRX4B” on page 1389](#)
- ▶ [“ODDRX4DQ” on page 1391](#)
- ▶ [“ODDRX4DQS” on page 1392](#)
- ▶ [“ODDRX5” on page 1393](#)
- ▶ [“ODDRX5A” on page 1395](#)
- ▶ [“ODDRX71A” on page 1396](#)
- ▶ [“OFD1P3AZ” on page 1397](#)
- ▶ [“OFD1P3BX” on page 1399](#)
- ▶ [“OFD1P3DX” on page 1400](#)
- ▶ [“OFD1P3IX” on page 1402](#)

- ▶ [“OFD1P3JX” on page 1403](#)
- ▶ [“OFS1P3BX” on page 1405](#)
- ▶ [“OFS1P3DX” on page 1406](#)
- ▶ [“OFS1P3IX” on page 1408](#)
- ▶ [“OFS1P3JX” on page 1409](#)
- ▶ [“OSC” on page 1411](#)
- ▶ [“OSCA” on page 1414](#)
- ▶ [“OSCE” on page 1416](#)
- ▶ [“OSCD” on page 1417](#)
- ▶ [“OSCH” on page 1418](#)
- ▶ [“OSHX2” on page 1420](#)
- ▶ [“OSHX4” on page 1421](#)
- ▶ [“OUTDELAYA” on page 1423](#)
- ▶ [“OUTDELAYB” on page 1424](#)
- ▶ [“OUTDELAYC” on page 1425](#)
- ▶ [“PCIE” on page 1427](#)
- ▶ [“PCIELL” on page 1465](#)
- ▶ [“PCLKDIV” on page 1470](#)
- ▶ [“PCLKDIVSP” on page 1472](#)
- ▶ [“PCNTR” on page 1473](#)
- ▶ [“PCSREFMUX” on page 1475](#)
- ▶ [“PCSX1” on page 1476](#)
- ▶ [“PCSX2” on page 1486](#)
- ▶ [“PCSX4” on page 1503](#)
- ▶ [“PDP4K” on page 1531](#)
- ▶ [“PDP16K” on page 1533](#)
- ▶ [“PDP32K” on page 1536](#)
- ▶ [“PDPSC16K” on page 1540](#)
- ▶ [“PDPSC32K” on page 1543](#)
- ▶ [“PDPSC512K” on page 1546](#)
- ▶ [“PG” on page 1548](#)
- ▶ [“PDPW8KC” on page 1550](#)
- ▶ [“PLL” on page 1553](#)
- ▶ [“PLLA” on page 1565](#)
- ▶ [“PLL\\_B” on page 1578](#)
- ▶ [“PLLC” on page 1586](#)

- ▶ [“PLLREFCS” on page 1592](#)
- ▶ [“PLLREFCSA” on page 1593](#)
- ▶ [“PLLREFCSB” on page 1594](#)
- ▶ [“PUR” on page 1595](#)
- ▶ [“RGB” on page 1596](#)
- ▶ [“RGB1P8V” on page 1597](#)
- ▶ [“RGB\\_CORE” on page 1599](#)
- ▶ [“RGBPWM” on page 1601](#)
- ▶ [“ROM128X1A” on page 1603](#)
- ▶ [“ROM16X1A” on page 1604](#)
- ▶ [“ROM256X1A” on page 1604](#)
- ▶ [“ROM32X1A” on page 1605](#)
- ▶ [“ROM64X1A” on page 1606](#)
- ▶ [“SEDC” on page 1607](#)
- ▶ [“SEDCA” on page 1609](#)
- ▶ [“SEDFA” on page 1610](#)
- ▶ [“SEDFB” on page 1612](#)
- ▶ [“SEIO18” on page 1613](#)
- ▶ [“SEIO18A” on page 1614](#)
- ▶ [“SEIO33” on page 1616](#)
- ▶ [“SGMIICDR” on page 1618](#)
- ▶ [“SGSR” on page 1623](#)
- ▶ [“SGSRA” on page 1623](#)
- ▶ [“SLICEMUX” on page 1624](#)
- ▶ [“SP16K” on page 1625](#)
- ▶ [“SP16KA” on page 1628](#)
- ▶ [“SP32K” on page 1630](#)
- ▶ [“SP256K” on page 1633](#)
- ▶ [“SP512K” on page 1634](#)
- ▶ [“SPI\\_B” on page 1638](#)
- ▶ [“SPR16X4” on page 1641](#)
- ▶ [“SPR16X4A” on page 1642](#)
- ▶ [“SPR16X4C” on page 1643](#)
- ▶ [“SPR32X2” on page 1644](#)
- ▶ [“START” on page 1645](#)
- ▶ [“TSALL” on page 1646](#)




- ▶ [“TSALLA” on page 1647](#)
- ▶ [“TSALLB” on page 1648](#)
- ▶ [“TSHX2DQ” on page 1648](#)
- ▶ [“TSHX2DQS” on page 1650](#)
- ▶ [“TSHX4DQ” on page 1651](#)
- ▶ [“TSHX4DQS” on page 1652](#)
- ▶ [“USB23” on page 1653](#)
- ▶ [“VFB\\_B” on page 1657](#)
- ▶ [“VHI” on page 1659](#)
- ▶ [“VLO” on page 1659](#)
- ▶ [“WARMBOOT” on page 1660](#)
- ▶ [“WDT” on page 1661](#)
- ▶ [“WDTA” on page 1662](#)
- ▶ [“WIDEFN9” on page 1663](#)

## **ACC54**

54-bit Accumulator component for DSP

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

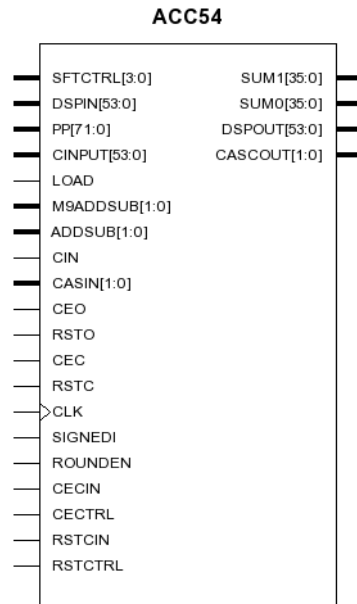**Table 1: Input Ports**

| Name      | Range | Description                                              |
|-----------|-------|----------------------------------------------------------|
| SFTCTRL   | 3:0   | Arithmetical right shift 0 - 15                          |
| DSPIN     | 53:0  | Previous ACC54 data in                                   |
| PP        | 71:0  | Input form 4 groups of REG18                             |
| CIN[53:0] | 53:0  | Input form 4 groups of REG18                             |
| LOAD      | 1     | Dynamic load control for C register                      |
| M9ADDSUB  | 1:0   | Dynamic add/sub control for state 1 adder. 1=subtraction |
| ADDSUB    | 1:0   | Dynamic add/sub control for 54-bit adder                 |
| CIN       | 1     | Carry in from CIB                                        |
| CASIN     | 1:0   | Carry in from previous ACC54                             |
| CEO       | 1     | Clock enable for output register                         |
| RSTO      | 1     | Synchronous reset for output register                    |
| CEC       | 1     | Clock enable for C register                              |
| RSTC      | 1     | Synchronous reset for C register                         |
| CLK       | 1     | Clock for output register                                |
| SIGNEDI   | 1     | Signed input                                             |
| ROUNDEN   | 1     | 1=ACCU54 round enable                                    |

**Table 1: Input Ports (Continued)**

| Name    | Range | Description                                                |
|---------|-------|------------------------------------------------------------|
| CECIN   | 1     | Input carryin enable                                       |
| CECTRL  | 1     | Input control (addsub, m9addsub, signed, and loadc) enable |
| RSTCIN  | 1     | Input carryin reset                                        |
| RSTCTRL | 1     | Input control (addsub, m9addsub, signed, and loadc) reset  |

**Table 2: Output Ports**

| Name    | Range | Description                |
|---------|-------|----------------------------|
| SUM1    | 35:0  | Results Output to CIB      |
| SUM0    | 35:0  | Results Output to CIB      |
| DSPOUT  | 53:0  | Output to next ACC54       |
| CASCOUT | 1:0   | Carry output to next ACC54 |

**Table 3: Parameters**

| Name            | Values                                                                                                                                      | Description                                                |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| SIGN            | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                                                                                  | Static sign operation enable for ACCU54: Enable            |
| M9ADDSUB_CTRL   | "ADDITION" ( <i>default</i> )<br>"ADDSUB"<br>"SUBADD"<br>"SUBTRACTION"                                                                      | Static add/sub control for stage 1 adder<br>1: Subtraction |
| ADDSUB_CTRL     | "ADD_ADD_CTRL_54_BIT_ADDER" ( <i>default</i> )<br>"SUB_ADD_CTRL_54_BIT_ADDER"<br>"ADD_SUB_CTRL_54_BIT_ADDER"<br>"SUB_SUB_CTRL_54_BIT_ADDER" | Static add/sub control for 54-bit adder                    |
| STATICOPCODE_EN | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                                                                                  | 1: Static opcode enable                                    |
| OUTREGBYPS      | "BYPASS" ( <i>default</i> )<br>"REGISTER"                                                                                                   | 1: Output register bypass                                  |
| GSR             | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                                                                                  | 1: GSR enable                                              |
| PROGCONST       | "0'b00000000000000000000000000000000" ( <i>default</i> )                                                                                    | Constant value for C                                       |
| CONSTSEL        | "BYPASS" ( <i>default</i> )<br>"SELECT"                                                                                                     | 1: Select constant value for C                             |
| DSPCASCADE      | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                                                                                  | 1: DSP cascaded enable                                     |
| ACC108CASCADE   | "BYPASSCASCADE" ( <i>default</i> )<br>"CASCADE2ACCU54TOFORMACCU108"                                                                         | 1: cascade two ACCU54 to form ACCU108                      |

**Table 3: Parameters (Continued)**

| <b>Name</b>        | <b>Values</b>                                                                                  | <b>Description</b>                  |
|--------------------|------------------------------------------------------------------------------------------------|-------------------------------------|
| ACCUMODE           | "MODE0" (default)<br>"MODE1"<br>"MODE2"<br>"MODE3"<br>"MODE4"<br>"MODE5"<br>"MODE6"<br>"MODE7" | Accumulator mode                    |
| ACCUBYPS           | "USED" (default)<br>"BYPASS"                                                                   | 1: Bypass ACC54                     |
| CREGBYPS1          | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass C register 1              |
| CREGBYPS2          | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass C register 2              |
| CREGBYPS3          | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass C register 3              |
| CINREGBYPS1        | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass Cin register 1            |
| CINREGBYPS2        | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass Cin register 2            |
| CINREGBYPS3        | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass Cin register 3            |
| LOADREGBYPS1       | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass load register 1           |
| LOADREGBYPS2       | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass load register 2           |
| LOADREGBYPS3       | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass load register 3           |
| M9ADDSUBREGBYPS1   | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass M9AddSub register 1       |
| M9ADDSUBREGBYPS2   | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass M9AddSub register 2       |
| M9ADDSUBREGBYPS3   | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass M9AddSub register 3       |
| ADDSUBSIGNREGBYPS1 | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass AddSubSign register 1     |
| ADDSUBSIGNREGBYPS2 | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass AddSubSign register 2     |
| ADDSUBSIGNREGBYPS3 | "REGISTER" (default)<br>"BYPASS"                                                               | 1: Bypass AddSubSign register 3     |
| ROUNDHALFUP        | "DISABLED" (default)<br>"ENABLED"                                                              | 1: ACCU54 round half up mode enable |

**Table 3: Parameters (Continued)**


| Name           | Values                                                                                                                                                                                                                                                                                                                                | Description                                            |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| ROUNDRTZI      | "ROUND_TO_ZERO" ( <i>default</i> )<br>"ROUND_TO_INFINITE"                                                                                                                                                                                                                                                                             | 0: ACCU54 round to zero<br>1: ACCU54 round to infinite |
| ROUNDBIT       | "ROUND_TO_BIT0" ( <i>default</i> )<br>"ROUND_TO_BIT1"<br>"ROUND_TO_BIT2"<br>"ROUND_TO_BIT3"<br>"ROUND_TO_BIT4"<br>"ROUND_TO_BIT5"<br>"ROUND_TO_BIT6"<br>"ROUND_TO_BIT7"<br>"ROUND_TO_BIT8"<br>"ROUND_TO_BIT9"<br>"ROUND_TO_BIT10"<br>"ROUND_TO_BIT11"<br>"ROUND_TO_BIT12"<br>"ROUND_TO_BIT13"<br>"ROUND_TO_BIT14"<br>"ROUND_TO_BIT15" | 0000: round to bit0<br>...<br>1111: round too bit15    |
| CASCOUTREGBYPS | "REGISTER" ( <i>default</i> )<br>"BYPASS"                                                                                                                                                                                                                                                                                             | 1: DSP cascaded enable                                 |
| SFTEN          | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                                                                                                                                                                                                                                                                            | Shift enable                                           |
| RESET          | "SYNC" ( <i>default</i> )                                                                                                                                                                                                                                                                                                             |                                                        |

## ADC

Wrapper for Analog-to-Digital Converter

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

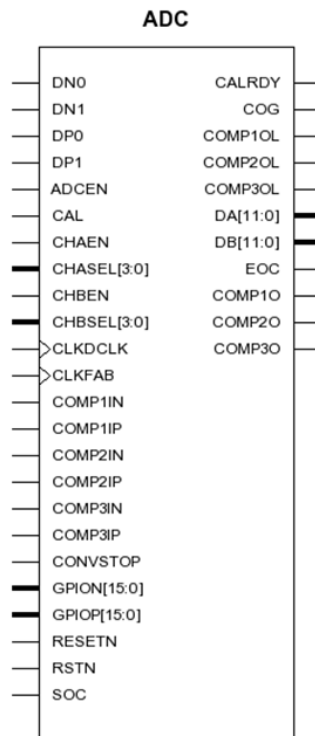**Table 4: Input Ports**

| Name    | Range | Description                                      |
|---------|-------|--------------------------------------------------|
| DN0     | 1     | Designated analog input positive ports           |
| DN1     | 1     | Designated analog input positive ports           |
| DP0     | 1     | Designated analog input negative ports           |
| DP1     | 1     | Designated analog input negative ports           |
| ADCEN   | 1     | Whole ADC enable signal                          |
| CAL     | 1     | ADC calibration control                          |
| CHAEN   | 1     | Channel A enable                                 |
| CHASEL  | 3:0   | Channel A ADC input selection                    |
| CHBEN   | 1     | Channel B enable                                 |
| CHBSEL  | 3:0   | Channel B ADC input selection                    |
| CLKDCLK | 1     | Clock input to ADC macro                         |
| CLKFAB  | 1     | Clock input from fabric                          |
| COMP1IN | 1     | First comparator positive external bonding input |

**Table 4: Input Ports (Continued)**

| Name     | Range | Description                                       |
|----------|-------|---------------------------------------------------|
| COMP1IP  | 1     | First comparator negative external bonding input  |
| COMP2IN  | 1     | Second comparator positive external bonding input |
| COMP2IP  | 1     | Second comparator negative external bonding input |
| COMP3IN  | 1     | Third comparator positive external bonding input  |
| COMP3IP  | 1     | Third comparator negative external bonding input  |
| CONVSTOP | 1     | Stop on-going conversion control                  |
| GPION    | 15:0  | Negative input ports                              |
| GPIOP    | 15:0  | Positive input ports                              |
| RESETN   | 1     | ADC hardware reset                                |
| RSTN     | 1     | Reset                                             |
| SOC      | 1     | Start of conversion                               |

**Table 5: Output Ports**

| Name    | Range | Description                 |
|---------|-------|-----------------------------|
| CALRDY  | 1     | End of calibration          |
| COG     | 1     | Conversion on-going signal  |
| COMP1OL | 1     | Comparator 1 latched output |
| COMP2OL | 1     | Comparator 2 latched output |
| COMP3OL | 1     | Comparator 3 latched output |
| DA      | 11:0  | 12-bit ADC channel A output |
| DB      | 11:0  | 12-bit ADC channel B output |
| EOC     | 1     | End of conversion           |
| COMP1O  | 1     | Comparator 1 output         |
| COMP2O  | 1     | Comparator 2 output         |
| COMP3O  | 1     | Comparator 3 output         |

**Table 6: Parameters**

| Name        | Values                                     | Description                        |
|-------------|--------------------------------------------|------------------------------------|
| ADC_ENP     | "ENABLED" ( <i>default</i> )<br>"DISABLED" | ADC enabling signal by MIB         |
| CLK_DIV     | "2" ( <i>default</i> )                     | DCLK divider control               |
| CTLCOMP SW1 | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Internal comparator switch control |

**Table 6: Parameters (Continued)**

| Name        | Values                                                                 | Description                                                                                     |
|-------------|------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| CTLCOMP2SW2 | "DISABLED" (default)<br>"ENABLED"                                      | Internal comparator switch control                                                              |
| CTLCOMP2SW3 | "DISABLED" (default)<br>"ENABLED"                                      | Internal comparator switch control                                                              |
| DF          | "STRAIGHT_BINARY" (default)<br>"TWOS_COMPLEMENT"                       | Output data format control between straight binary and 2's complement coding                    |
| EN_COMP1    | "ENABLED" (default)<br>"DISABLED"                                      | Auxiliary Comparator 1 enable                                                                   |
| EN_COMP2    | "ENABLED" (default)<br>"DISABLED"                                      | Auxiliary Comparator 2 enable                                                                   |
| EN_COMP3    | "ENABLED" (default)<br>"DISABLED"                                      | Auxiliary Comparator 3 enable                                                                   |
| OMA         | "BIPOLAR" (default)<br>"UNIPOLAR"                                      | Channel A Analog input bi-polar/uni-polar configuration                                         |
| OMB         | "BIPOLAR" (default)<br>"UNIPOLAR"                                      | Channel B Analog input bi-polar/uni-polar configuration                                         |
| REFBUFAEN   | "DISABLED" (default)<br>"ENABLED"                                      | Channel A internal reference buffer enable                                                      |
| REFBUFEN    | "DISABLED" (default)<br>"ENABLED"                                      | Channel B internal reference buffer enable                                                      |
| SLEEP       | "DISABLED" (default)<br>"ENABLED"                                      | Sleep mode enable                                                                               |
| VREFACFG    | "1P0_TO_1P2" (default)<br>"1P2_TO_1P4"<br>"1P4_TO_1P6"<br>"1P6_TO_1P8" | Channel A external reference voltage level selection                                            |
| VREFASEL    | "EXTERNAL" (default)<br>"INTERNAL"                                     | Channel A reference voltage input configuration between internal and external reference voltage |
| VREFBCFG    | "1P0_TO_1P2" (default)<br>"1P2_TO_1P4"<br>"1P4_TO_1P6"<br>"1P6_TO_1P8" | Channel B external reference voltage level selection                                            |
| VREFBSEL    | "EXTERNAL" (default)<br>"INTERNAL"                                     | Channel B reference voltage input configuration between internal and external reference voltage |

LIFCL 17K devices have ADC usage restriction. GPIOP[4, 10, 11, 12, 15] and GPION[4, 10, 11, 12, 15] are not available.

The ADC macro is composed of two blocks: the external IP and its wrapper.

The external IP consists of two ADCs and three continuous-time comparators. Two ADCs convert unipolar or bipolar input signal into 12-bit resolution data with maximum 1MSPS (Mega Samples Per Second) conversion speed



sequentially or simultaneously. This XML covers the wrapper for ADC IP block.

## ALUREG

Wrapper for Arithmetic Logic Unit and Register File for RISC-V Soft Processor

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5TD
- ▶ LFMXO5T
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

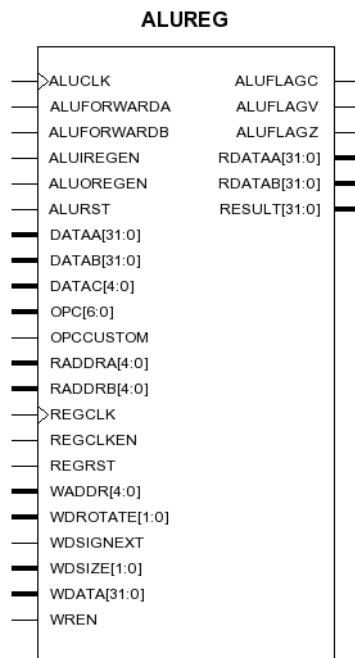


**Table 7: Input Ports**

| Name        | Range | Description                            |
|-------------|-------|----------------------------------------|
| ALUCLK      | 1     | Input clock of ALU                     |
| ALUFORWARDA | 1     | ALU result forwarding to data_a enable |

**Table 7: Input Ports (Continued)**

| Name        | Range | Description                                                         |
|-------------|-------|---------------------------------------------------------------------|
| ALUFORWARDB | 1     | ALU result forwarding to data_b enable                              |
| ALUIREGEN   | 1     | ALU input register data update enable                               |
| ALUOREGEN   | 1i    | ALU output register data update enable                              |
| ALURST      | 1     | Active-high reset for ALU                                           |
| DATAA       | 31:0  | Data input of port-A of ALU                                         |
| DATAB       | 31:0  | Data input of port-B of ALU                                         |
| DATAAC      | 4:0   | Data input of port-C of ALU                                         |
| OPC         | 6:0   | Opcode of the ALU                                                   |
| OPCCUSTOM   | 1     | Enable signal for Lattice custom operation                          |
| RADDRA      | 4:0   | Read address port-A for reg-file                                    |
| RADDRB      | 4:0   | Read Address port-B for reg-file                                    |
| REGCLK      | 1     | Input clock of REG_FILE                                             |
| REGCLKEN    | 1     | Clock enable input for REG_FILE                                     |
| REGRST      | 1     | Active-high reset of REG_FILE                                       |
| WADDR       | 4:0   | Write Address for REG_FILE                                          |
| WDROTATE    | 1     | Write Data rotated per byte before writing into REG_FILE            |
| WDSIGNEXT   | 1     | If asserted, to sign extend the MSB bits of sized bytes             |
| WDSIZE      | 1     | Write Data size per byte after rotated before writing into REG_FILE |
| WDATA       | 31:0  | Write Data for REG_FILE                                             |
| WREN        | 1     | Write Enable for REG_FILE                                           |

**Table 8: Output Ports**

| Name     | Range | Description                                           |
|----------|-------|-------------------------------------------------------|
| ALUFLAGC | 1     | ALU arithmetic flag status of carry out/borrow in bit |
| ALUFLAGV | 1     | ALU arithmetic flag status of overflow bit            |
| ALUFLAGZ | 1     | ALU arithmetic flag status of result zero bit         |
| RDATAA   | 31:0  | Read Data from port-A of REG_FILE                     |
| RDATAB   | 31:0  | Read Data from port-B of REG_FILE                     |
| RESULT   | 31:0  | Output result from ALU                                |

**Table 9: Parameters**


| Name             | Values                            | Description                                                                      |
|------------------|-----------------------------------|----------------------------------------------------------------------------------|
| ALURST_ACTIVELOW | "DISABLE" (default)<br>"ENABLE"   | ALU reset active low                                                             |
| GSR              | "ENABLED" (default)<br>"DISABLED" | Global reset signal to reset all flops in ALUREG                                 |
| INREG            | "DISABLE" (default)<br>"ENABLE"   | Input registers of ALU                                                           |
| MULFXP_ROUND     | "ENABLED" (default)<br>"DISABLED" | Static config bit to enable FXP (fixed point) multiplication of half rounding up |
| OUTREG           | "DISABLE" (default)<br>"ENABLE"   | Control the output registers of ALU                                              |
| REGRST_ACTIVELOW | "DISABLE" (default)<br>"ENABLE"   | Active-low reset of REG_FILE                                                     |
| RETAIN           | "ENABLED" (default)<br>"DISABLED" | Data retained                                                                    |
| RFASYNC_RD       | "SYNC_RD" (default)<br>"ASYNC_RD" | Asynchronous read                                                                |
| RFR0_RO          | "R0READONLY" (default)            | Read-only register                                                               |
| RFUNALIA_WR      | "DISABLE" (default)<br>"ENABLE"   | Unaligned Write                                                                  |
| RFWCLK_INV       | "SIG" (default)<br>"INV"          | Invert the clk affecting only the writing into the REG_FILE                      |

## AON

Always On

Architectures supported:

- ▶ LIFCL-33U

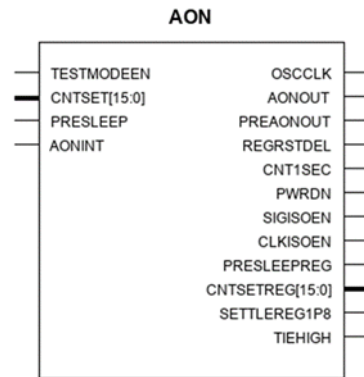**Table 10: Input Ports**

| Name       | Range | Description               |
|------------|-------|---------------------------|
| TESTMODEEN |       | Enable test mode          |
| CNTSET     | 15:0  | AON timer counting edges  |
| PRESLEEP   |       | FPGA ready to sleep       |
| AONINT     |       | External interrupt of AON |

**Table 11: Output Ports**


| Name         | Range | Description                                    |
|--------------|-------|------------------------------------------------|
| OSCCLK       |       | AON built in oscillator output                 |
| AONOUT       |       | AON output to control FPGA power               |
| PREAONOUT    |       | FPGA power down in test mode                   |
| REGRSTDEL    |       | Power down internal state signal for test mode |
| CNT1SEC      |       | Power down internal state signal for test mode |
| PWRDN        |       | Power down internal state signal for test mode |
| SIGISOEN     |       | Power down internal state signal for test mode |
| CLKISOEN     |       | Power down internal state signal for test mode |
| PRESLEEPREG  |       | Power down internal state signal for test mode |
| CNTSETREG    | 15:0  | Power down internal state signal for test mode |
| SETTLEREG1P8 |       | Power down internal state signal for test mode |
| TIEHIGH      |       | Power down internal state signal for test mode |

**BB**

Bidirectional Buffer with Tri-state

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ LFMXO4
- ▶ UT24C
- ▶ UT24CP

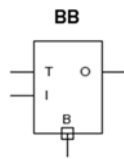**Table 12: Input Ports**

| Name | Description       |
|------|-------------------|
| I    | Data to pad       |
| T    | Tri-state control |

**Table 13: Output Ports**

| Name | Description   |
|------|---------------|
| O    | Data from pad |

**Table 14: Bidirectional Ports**

| Name | Description       |
|------|-------------------|
| B    | Connection to pad |

**Table 15: Truth Table**

| Inputs |   | Outputs | Bidirectional |
|--------|---|---------|---------------|
| I      | T | O       | B             |
| X      | 1 | U       | Z             |
| X      | 1 | 1       | 1             |
| X      | 1 | 0       | 0             |
| 0      | 0 | 0       | 0             |
| 1      | 0 | 1       | 1             |

X = Don't care


U = Unknown

## BB\_ADC

Single-Ended I/O Block for 1.8 V

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

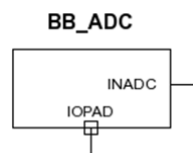**Table 16: Output Ports**

| Name  | Description   |
|-------|---------------|
| INADC | Output to ADC |

**Table 17: Bidirectional Ports**


| Name  | Description       |
|-------|-------------------|
| IOPAD | IO Pad connection |

**BB\_B**

Bidirectional I/O Buffer with Tri-state

Architectures supported:

- ▶ iCE40 UltraPlus

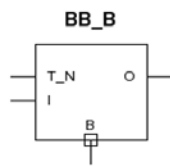**Table 18: Input Ports**

| Name | Description                                           |
|------|-------------------------------------------------------|
| T_N  | Tri-state control, active low meaning T_N = 0 ' O = Z |
| I    | Data to pad                                           |

**Table 19: Output Ports**

| Name | Description   |
|------|---------------|
| O    | Data from pad |

**Table 20: Bidirectional Ports**

| Name | Description       |
|------|-------------------|
| B    | Connection to pad |

**Table 21: Truth Table**

| Inputs |     | Outputs | Bidirectional |
|--------|-----|---------|---------------|
| I      | T_N | O       | B             |
| X      | 0   | U       | Z             |
| X      | 0   | 1       | 1             |
| X      | 0   | 0       | 0             |
| 0      | 1   | 0       | 0             |
| 1      | 1   | 1       | 1             |

X = Don't care

U = Unknown

## BB\_CDR

Single-Ended I/O Block for 1.8V

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

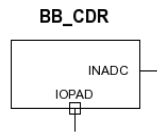


**Table 22: Output Ports**

| Name  | Description   |
|-------|---------------|
| INADC | Output to ADC |

**Table 23: Bidirectional Ports**

| Name  | Description       |
|-------|-------------------|
| IOPAD | IO Pad connection |


## BB\_I3C

I/O with User Controllable Pull-Up Resistors

Architectures supported:

- ▶ iCE40 UltraPlus

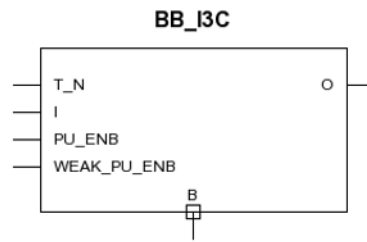

**Table 24: Input Ports**

| Name        | Description                  |
|-------------|------------------------------|
| PU_ENB      | Pull-up enable               |
| WEAK_PU_ENB | Weak pull-up enable          |
| T_N         | Tri-state control active low |
| I           | Data to pad                  |

**Table 25: Output Ports**

| Name | Description   |
|------|---------------|
| O    | Data from pad |

**Table 26: Bidirectional Ports**

| Name | Description |
|------|-------------|
| B    | Pad         |

**Table 27: Parameters**

| Name     | Values                        |
|----------|-------------------------------|
| PULLMODE | "100K" ( <i>default</i> )     |
|          | "3P3K"                        |
|          | "6P8K"                        |
|          | "10K"                         |
|          | "NA"                          |
| IO_TYPE  | "LVCMOS33" ( <i>default</i> ) |
|          | "LVCMOS25"                    |
|          | "LVCMOS18"                    |
|          | "LVCMOS12"                    |
|          | "LVDSE"                       |

**Table 27: Parameters (Continued)**

| Name       | Values                                                                      |
|------------|-----------------------------------------------------------------------------|
| BANK_VCCIO | "3.3" ( <i>default</i> )<br>"2.5"<br>"1.8"<br>"1.2"                         |
| DRIVE      | "6" ( <i>default</i> )<br>"NA"<br>"2"<br>"4"<br>"6"<br>"10"<br>"12"<br>"16" |


LVDSE for BIDI may not be supported, but for stability-sake, better to leave it as an option to make it 1:1 with PIO physical cell model. LCT table will correctly stop LDVSE from going through for I3C.

## BB\_I3C\_A

Single-Ended I/O Block for 3.3V

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

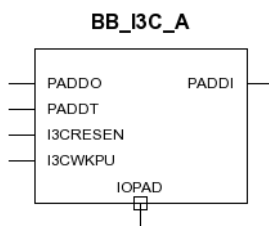**Table 28: Input Ports**

| Name     | Description                              |
|----------|------------------------------------------|
| PADD0    | Data output from fabric to IO pad        |
| PADDT    | Data tri-state control; high = tri-state |
| I3CRESEN | I3C resistor enable                      |
| I3CWKPU  | I3C weak pullup enable                   |

**Table 29: Output Ports**

| Name  | Description                      |
|-------|----------------------------------|
| PADDI | Data input from IO pad to fabric |

**Table 30: Bidirectional Ports**


| Name  | Description       |
|-------|-------------------|
| IOPAD | IO Pad connection |

## BB\_I3C\_B

Bidirectional I3C Buffer Primitive

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

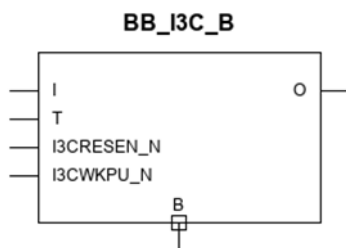**Table 31: Input Ports**

| Name       | Range | Type    | Active State | Description                                  |
|------------|-------|---------|--------------|----------------------------------------------|
| I          | 1     | Data    |              | Input of I3C Bidirectional Buffer            |
| T          | 1     | Control |              | Tristate control of I3C Bidirectional Buffer |
| I3CRESEN_N | 1     | Control | Active Low   | Resistor Enable control                      |
| I3CWKPU_N  | 1     | Control | Active Low   | Weak PULLUP control                          |

**Table 32: Output Ports**

| Name | Range | Type | Active State | Description                        |
|------|-------|------|--------------|------------------------------------|
| O    | 1     |      |              | Output of I3C Bidirectional Buffer |

**Table 33: Bidirectional Ports**


| Name | Range | Type | Active State | Description |
|------|-------|------|--------------|-------------|
| B    |       |      |              | IOPAD       |

## BB\_OD

Input/Output Buffer

Architectures supported:

- ▶ iCE40 UltraPlus

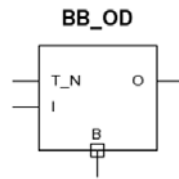**Table 34: Input Ports**

| Name | Description                   |
|------|-------------------------------|
| T_N  | Tri-state control, active low |
| I    | Data to pad                   |

**Table 35: Output Ports**

| Name | Description   |
|------|---------------|
| O    | Data from pad |

**Table 36: Bidirectional Ports**

| Name | Description       |
|------|-------------------|
| B    | Connection to pad |

**Table 37: Truth Table**

| Inputs |     | Outputs | Bidirectional |
|--------|-----|---------|---------------|
| I      | T_N | O       | B             |
| X      | 0   | U       | Z             |
| X      | 0   | 1       | 1             |
| X      | 0   | 0       | 0             |
| 0      | 1   | 0       | 0             |
| 1      | 1   | Z       | Z             |

X = Don't care

 
U = Unknown

## BB\_PROGRAMN

Single-Ended I/O Block for PROGRAMN

Architectures supported:

▶ LIFCL-33

**Table 38: Input Ports**

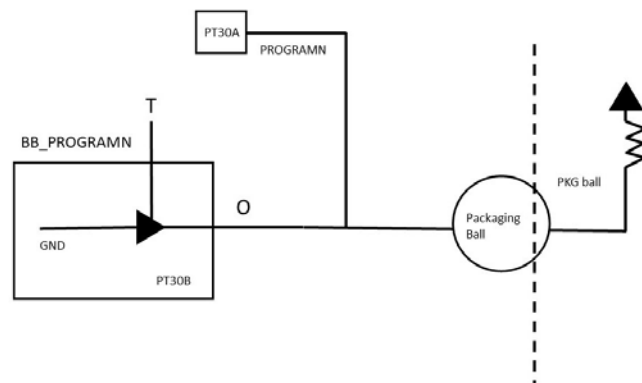
| Name | Description       |
|------|-------------------|
| T    | Tri-state control |

**Table 39: Output Ports**

| Name | Description   |
|------|---------------|
| O    | Data from pad |

**Table 40: Truth Table**

| Output | Description                                 |
|--------|---------------------------------------------|
| T = 0  | Reset the PROGRAMN FPGA.                    |
| T = 1  | Release reset that allows the FPGA to boot. |

**Figure 1: BB\_PROGRAMN Diagram**

## BCINRD

Dynamic Bank Controller InRD

Architectures Supported:

► LFMXO4

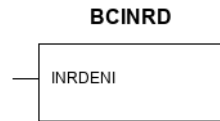


**Table 41: Input Ports**

| Name    | Range | Description                                    |
|---------|-------|------------------------------------------------|
| INRDENI | 1     | Dynamic signal to enable and disable bank InRD |

**Table 42: Parameters**

| Name   | Values                                    | Description                                        |
|--------|-------------------------------------------|----------------------------------------------------|
| BANKID | "0" (default),<br>"1", "2", "3", "4", "5" | Bank ID to indicate the control of a specific bank |

### Description

The dynamic bank controller is used to power down banks InRD (Input Referenced and Differential) and LVDS outputs. The dynamic bank controller is represented with two primitives: BCINRD and [BCLVDSO](#). The INRDENI input is the dynamic signal to enable and disable bank InRD.

For more information, refer to related technical notes on the Lattice web site:

## BCLVDSO

Dynamic Bank Controller LVDS

Architectures Supported:

► LFMXO4

 


**Table 43: Input Ports**

| Name    | Range | Description                                    |
|---------|-------|------------------------------------------------|
| LVDSENI | 1     | Dynamic signal to enable and disable bank InRD |

**Description**

The dynamic bank controller is used to power down banks InRD (Input Referenced and Differential) and LVDS outputs. The dynamic bank controller is represented with two primitives: BCLVDSO and [BCINRD](#). The LVDSENI input is the dynamic signal to enable and disable bank InRD.

For more information, refer to related technical notes on the Lattice web site:


**BFD1P3KX**

Positive Edge Triggered Bidirectional D Flip-Flop with Positive Level Enable and Synchronous Set/Reset for Input/Output/Tri-state Signals (to/from IO)

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

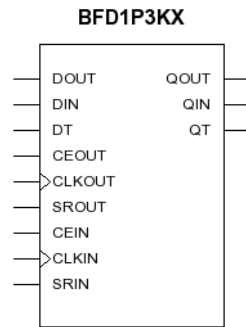

**Table 44: Input Ports**


| Name   | Description                                |
|--------|--------------------------------------------|
| DOUT   | Data out from fabric                       |
| DIN    | Data in from I/O                           |
| DT     | Tri-state in from fabric                   |
| CEOUT  | Output/Tri-state clock enable, active high |
| CLKOUT | Output/Tri-state clock                     |
| SROUT  | Output/Tri-state set/reset                 |
| CEIN   | Input clock enable, active high            |
| CLKIN  | Input clock                                |
| SRIN   | Input set/reset                            |

**Table 45: Output Ports**

| Name | Description         |
|------|---------------------|
| QOUT | Data out to IO      |
| QIN  | Data in to fabric   |
| QT   | Tri-state out to IO |

**Table 46: Parameters**


| Name   | Values                            | Description                                               |
|--------|-----------------------------------|-----------------------------------------------------------|
| GSR    | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset                                   |
| OUTSET | "RESET" (default)<br>"SET"        | Controls the set/reset behavior of the output register    |
| INSET  | "RESET" (default)<br>"SET"        | Controls the set/reset behavior of the input register     |
| TSSET  | "RESET" (default)<br>"SET"        | Controls the set/reset behavior of the tri-state register |

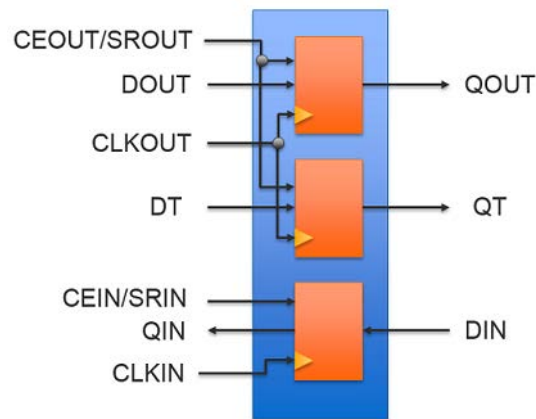

When INSET/OUTSET/TSSET = "SET", truth table is the same as \*FD1P3JX.

When INSET/OUTSET/TSSET = "RESET", truth table is the same as \*FD1P3IX.

CEOUT/CEIN, SROUT/SRIN, CLKOUT/CLKIN must be driven by the same signal, with the exception that they may be driven by the logical inversion of one another.

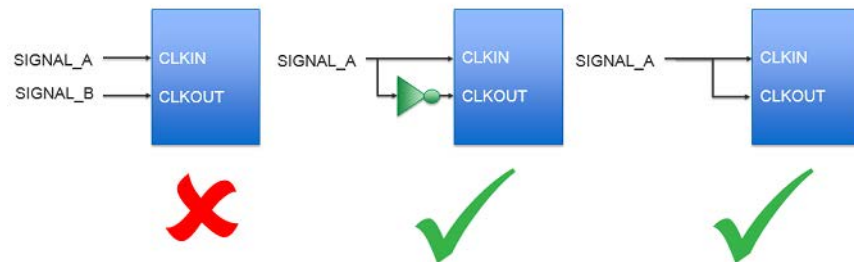

## BFD1P3LX

Positive Edge Triggered Bidirectional D Flip-Flop with Positive Level Enable and Asynchronous Set/Reset, for Input/Output/Tri-state Signals (to/from IO)

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C

▶ UT24CP

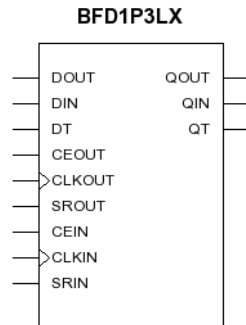


**Table 47: Input Ports**

| Name   | Description                                |
|--------|--------------------------------------------|
| DOUT   | Data out from fabric                       |
| DIN    | Data in from I/O                           |
| DT     | Tri-state in from fabric                   |
| CEOUT  | Output/Tri-state clock enable, active high |
| CLKOUT | Output/Tri-state clock                     |
| SROUT  | Output/Tri-state set/reset                 |
| CEIN   | Input clock enable, active high            |
| CLKIN  | Input clock                                |
| SRIN   | Input set/reset                            |

**Table 48: Output Ports**


| Name | Description         |
|------|---------------------|
| QOUT | Data out to IO      |
| QIN  | Data in to fabric   |
| QT   | Tri-state out to IO |

**Table 49: Parameters**

| Name   | Values                                     | Description                                            |
|--------|--------------------------------------------|--------------------------------------------------------|
| GSR    | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset                                |
| OUTSET | "RESET" ( <i>default</i> )<br>"SET"        | Controls the set/reset behavior of the output register |

**Table 49: Parameters (Continued)**


| Name  | Values                     | Description                                               |
|-------|----------------------------|-----------------------------------------------------------|
| INSET | "RESET" (default)<br>"SET" | Controls the set/reset behavior of the input register     |
| TSSET | "RESET" (default)<br>"SET" | Controls the set/reset behavior of the tri-state register |

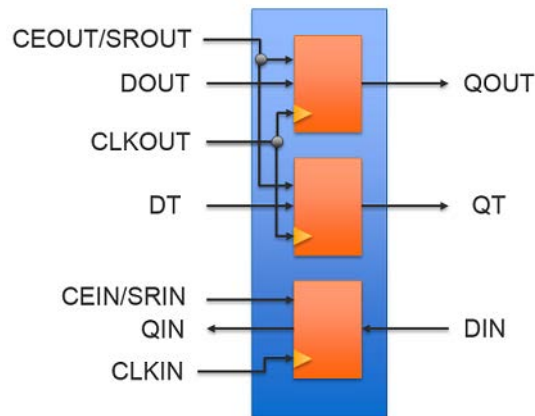

When INSET/OUTSET/TSSET = "SET", truth table is the same as \*FD1P3BX.

When INSET/OUTSET/TSSET = "RESET", truth table is the same as \*FD1P3DX.

CEOUT/CEIN, SROUT/SRIN, CLKOUT/CLKIN must be driven by the same signal, with the exception that they may be driven by the logical inversion of one another.

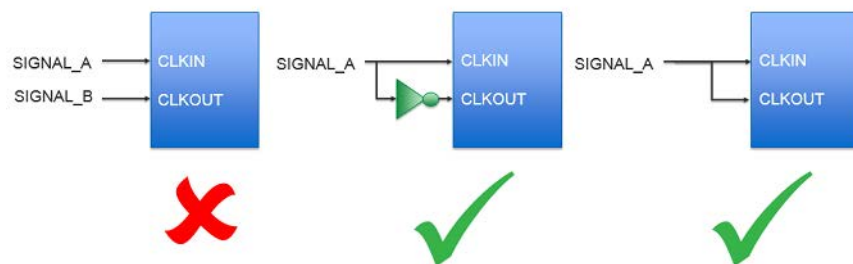


## BNKREF18

Bankref Block for IOS18

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX

- ▶ LFMXO5
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

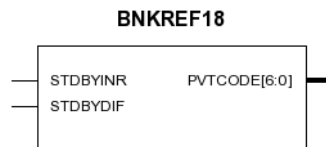**Table 50: Input Ports**

| Name     | Description                                 |
|----------|---------------------------------------------|
| STDBYINR | Standby inr to BANKREF: 0: standby; 1: work |
| STDBYDIF | CIB standby signal to SLVS/LVDS biases      |

**Table 51: Output Ports**

| Name    | Description                            |
|---------|----------------------------------------|
| PVTCODE | Process, Voltage, and Temperature Code |

**Table 52: Parameters**

| Name           | Values                            | Description                                               |
|----------------|-----------------------------------|-----------------------------------------------------------|
| BANK           | "0'b0000" (default)               | Virtual attribute, used to tell placer where to place it. |
| STANDBY_DIFFIO | "DISABLED" (default)<br>"ENABLED" | Enables SLVS/LVDS output standby mode                     |
| STANDBY_INR    | "DISABLED" (default)<br>"ENABLED" | Enables INR standby mode: 0 off; 1 on                     |


## BUF

Non-Inverting Buffer

Architectures supported:

- ▶ iCE40 UltraPlus

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

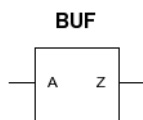**Table 53: Input Ports**

| Name | Description          |
|------|----------------------|
| A    | BUF function input A |

**Table 54: Output Ports**

| Name | Description  |
|------|--------------|
| Z    | BUF output Z |


## CCU2

Carry Chain

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65

- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

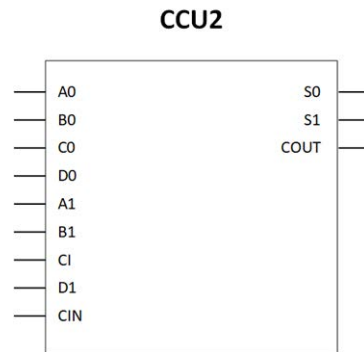**Table 55: Input Ports**

| Name | Description                        |
|------|------------------------------------|
| A0   | Input bit 0 for non-operand signal |
| B0   | Input bit 0 of the first operand   |
| C0   | Input bit 0 of the second operand  |
| D0   | Input bit 0 of the third operand   |
| A1   | Input bit 1 for non-operand signal |
| B1   | Input bit 1 of the first operand   |
| C1   | Input bit 1 of the second operand  |
| D1   | Input bit 1 of the third operand   |
| CIN  | Carry in                           |

**Table 56: Output Ports**

| Name | Description             |
|------|-------------------------|
| S0   | Output bit 0 of the sum |
| S1   | Output bit 1 of the sum |
| COUT | Carry out               |

**Table 57: Parameters**


| Name   | Values             | Description           |
|--------|--------------------|-----------------------|
| INIT0  | "0x0000" (default) | Initialization data 0 |
| INIT1  | "0x1111" (default) | Initialization data 1 |
| INJECT | "YES" (default)    | Inject                |

## CCU2\_B

Carry Chain

Architectures supported:

- ▶ iCE40 UltraPlus

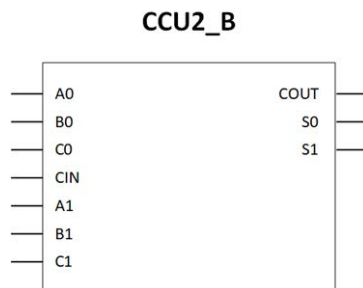**Table 58: Input Ports**

| Name | Description                        |
|------|------------------------------------|
| A0   | Input bit 0 for non-operand signal |
| B0   | Input bit 0 of the first operand   |
| C0   | Input bit 0 of the second operand  |
| CIN  | Carry in                           |
| A1   | Input bit 1 for non-operand signal |
| B1   | Input bit 1 of the first operand   |
| C1   | Input bit 1 of the second operand  |

**Table 59: Output Ports**

| Name | Description |
|------|-------------|
| COUT | Carry out   |

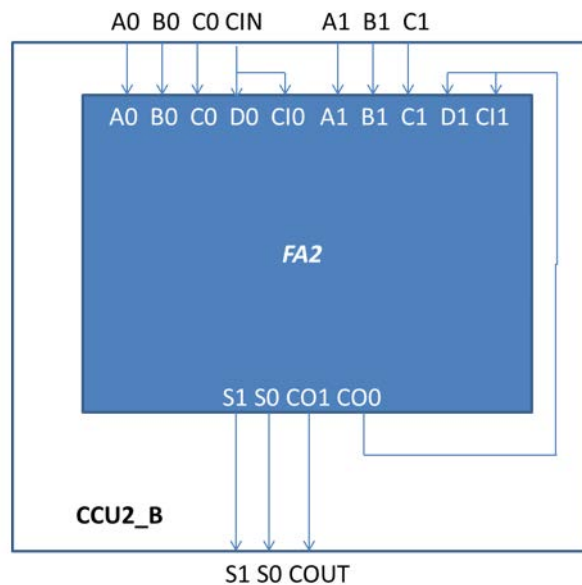


**Table 59: Output Ports (Continued)**

| Name | Description             |
|------|-------------------------|
| S0   | Output bit 0 of the sum |
| S1   | Output bit 1 of the sum |

**Table 60: Parameters**

| Name  | Values                                           | Description           |
|-------|--------------------------------------------------|-----------------------|
| INIT0 | Hexadecimal value<br>"0xc33c" ( <i>default</i> ) | Initialization data 0 |
| INIT1 | Hexadecimal value<br>"0xc33c" ( <i>default</i> ) | Initialization data 1 |



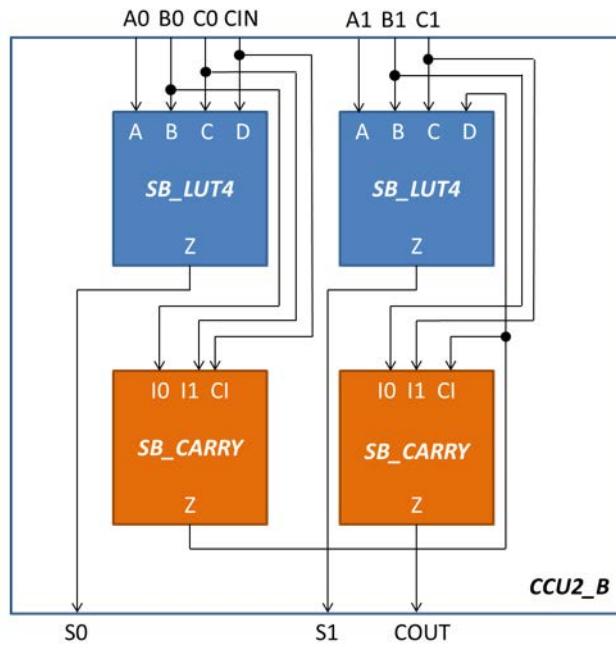


Table 61: Truth Table

| Inputs |    |    |    |     | Outputs |    |      |
|--------|----|----|----|-----|---------|----|------|
| B1     | B0 | C1 | C0 | CIN | S1      | S0 | COUT |
| 0      | 0  | 0  | 0  | 0   | 0       | 0  | 0    |
| 0      | 0  | 0  | 0  | 1   | 0       | 1  | 0    |
| 0      | 0  | 0  | 1  | 0   | 0       | 1  | 0    |
| 0      | 0  | 0  | 1  | 1   | 1       | 0  | 0    |
| 0      | 0  | 1  | 0  | 0   | 1       | 0  | 0    |
| 0      | 0  | 1  | 0  | 1   | 1       | 1  | 0    |
| 0      | 0  | 1  | 1  | 0   | 1       | 1  | 0    |
| 0      | 0  | 1  | 1  | 1   | 0       | 0  | 1    |
| 0      | 1  | 0  | 0  | 0   | 0       | 1  | 0    |
| 0      | 1  | 0  | 0  | 1   | 1       | 0  | 0    |
| 0      | 1  | 0  | 1  | 0   | 1       | 0  | 0    |
| 0      | 1  | 0  | 1  | 1   | 1       | 1  | 0    |
| 0      | 1  | 1  | 0  | 0   | 1       | 1  | 0    |
| 0      | 1  | 1  | 0  | 1   | 0       | 0  | 1    |
| 0      | 1  | 1  | 1  | 0   | 0       | 0  | 1    |
| 0      | 1  | 1  | 1  | 1   | 0       | 1  | 1    |

**Table 61: Truth Table (Continued)**

| Inputs |    |    |    |     | Outputs |    |      |
|--------|----|----|----|-----|---------|----|------|
| B1     | B0 | C1 | C0 | CIN | S1      | S0 | COUT |
| 1      | 0  | 0  | 0  | 0   | 1       | 0  | 0    |
| 1      | 0  | 0  | 0  | 1   | 1       | 1  | 0    |
| 1      | 0  | 0  | 1  | 0   | 1       | 1  | 0    |
| 1      | 0  | 0  | 1  | 1   | 0       | 0  | 1    |
| 1      | 0  | 1  | 0  | 0   | 0       | 0  | 1    |
| 1      | 0  | 1  | 0  | 1   | 0       | 1  | 1    |
| 1      | 0  | 1  | 1  | 0   | 0       | 1  | 1    |
| 1      | 0  | 1  | 1  | 1   | 1       | 0  | 1    |
| 1      | 1  | 0  | 0  | 0   | 1       | 1  | 0    |
| 1      | 1  | 0  | 0  | 1   | 0       | 0  | 1    |
| 1      | 1  | 0  | 1  | 0   | 0       | 0  | 1    |
| 1      | 1  | 0  | 1  | 1   | 0       | 1  | 1    |
| 1      | 1  | 1  | 0  | 0   | 0       | 1  | 1    |
| 1      | 1  | 1  | 0  | 1   | 1       | 0  | 1    |
| 1      | 1  | 1  | 1  | 0   | 1       | 0  | 1    |
| 1      | 1  | 1  | 1  | 1   | 1       | 1  | 1    |

**Note:**

This is the truth table for an example full adder using CCU2\_B. B1, B0 and C1, C0 are used as operands, while A1, A0 are not used and are tied to ground.

**Rules & Restrictions**

COUT can only go to D input of LUT above it or next CIN.

To drive VHI to the carry-in “half” a CCU2 must be used. This is done by driving B0 or C0 or both (if S0 can be a don’t care value) to VHI and leaving CIN floating. Your real CCU2 will then start with B1, C1 and the carry-in will be VHI.

To drive VLO to the carry-in “half” a CCU2 must be used. This is done by driving VLO for B0 and C0 and leaving CIN floating. Your real CCU2 starts with B1, C1 and CIN1 will be driven by VLO.

If you want to bring out last COUT to fabric, simply connect COUT to whatever is your fabric logic. MAP and Placer will work to insert a LUT and

place it in the appropriate location automatically (thus ensuring rule 1 is followed).

See examples below that takes into account the above rules.

---

**Note:**

The examples below do not make use of the A0 or A1 ports as they are not needed for carry-chain functionality.

---

**Burning half a CCU2 for carry-chain:**

```
CCU2_B counter_12_add_4_0 (  
    .B0(GND_net),  
    .C0(GND_net),  
    .CIN(),  
    .B1(firstB),  
    .C1(firstC),  
    .COUT(firstCarry),  
    .S0(),  
    .S1(firstSum)  
);
```

**Using LUT to bring last Carry Out:**

```
CCU2_B counter_12_add_4_7 (  
    .B0(GND_net),  
    .C0(out_c_5),  
    .CIN(COUT_prev),  
    .B1(GND_net),  
    .C1(out_c_6),  
    .COUT(LAST_CARRY),  
    .S0(n40),  
    .S1(n39)  
);  
  
LUT lutInst(  
    .D(LAST_CARRY),  
    .F(CARRYOUT_TO_FABRIC)  
); //eqn : F=D
```

**Using CCU2 to bring last Carry Out:**

**Why it works:** Last Sum = GND XOR GND XOR CIN\_PREV = lastCarryOut.

```
CCU2_B counter_12_add_4_9 (  
    .B0(GND_net),  
    .C0(out_c_7),  
    .CIN(COUT_prev),  
    .B1(GND_net),  
    .C1(GND_net),  
    .COUT(),  
    .S0(n40),  
    .S1(lastCarryOut)  
);
```

## CCU2C

Carry Chain

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

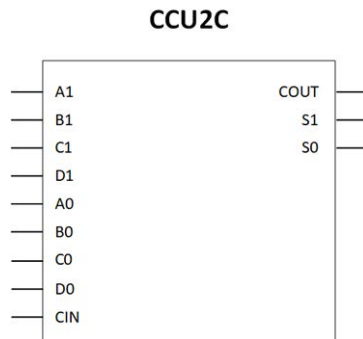


**Table 62: Input Ports**

| Name | Type    | Description       |
|------|---------|-------------------|
| A1   | Data    | Function input A1 |
| B1   | Data    | Function input B1 |
| C1   | Control | Function input C1 |
| D1   | Control | Function input D1 |
| A0   | Data    | Function input A0 |
| B0   | Data    | Function input B0 |
| C0   | Control | Function input C0 |
| D0   | Control | Function input D0 |
| CIN  | Control | Carry in          |

**Table 63: Output Ports**


| Name | Description  |
|------|--------------|
| COUT | Carry out    |
| S1   | Sum 1 output |
| S0   | Sum 0 output |

**Table 64: Parameters**

| Name    | Values                  | Description                |
|---------|-------------------------|----------------------------|
| INJECT0 | "YES" (default)<br>"NO" | INJECT0                    |
| INJECT1 | "YES" (default)<br>"NO" | INJECT1                    |
| INIT0   | "0x0000" (default)      | CCU2 initialization data 0 |
| INIT1   | "0x1111" (default)      | CCU2 initialization data 1 |

- ▶ At the beginning of the carry chain, CIN must always be tied to a constant 0.
- ▶ At the beginning of the carry chain, if a CIN is desired (either a constant 1 or a live signal), use one of the A/B/C/D pins and adjust the INIT equation accordingly.
- ▶ At the beginning of the carry chain, CIN is a "don't care", but it MUST be connected to low for synthesis netlist purpose. All the inputs must have known values.
- ▶ In Avant, it is not required to consume a half-slice at the beginning of the carry chain. If the CIN is desired (either constant or a live signal), use the C0 pin and adjust the INIT0 equation as provided in the table for first bit.
- ▶ In general, COUT must only drive CIN except at the end of a shift chain. At the end of a chain, COUT may connect directly to other design logic. If the chain ends halfway through a CCU2, the carry out value may be brought out through S1 by setting INIT1 to 0x000.

#### Logical Diagram of CCU2C

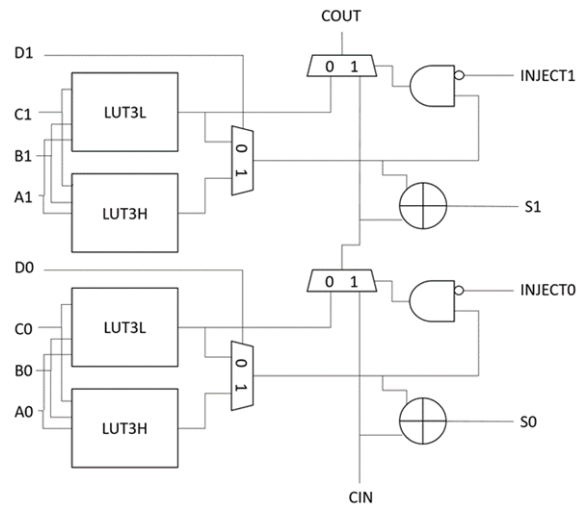

## CCU2D

Carry Chain

Architectures Supported:

▶ LFMXO4

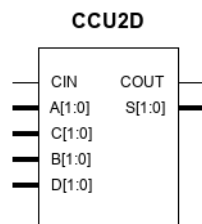


**Table 65: Input Ports**

| Name | Range | Description                        |
|------|-------|------------------------------------|
| CIN  | 1     | Carry in                           |
| A1   | 1     | Input bit 1 for non-operand signal |
| B1   | 1     | Input bit 1 of the first operand   |
| C1   | 1     | Input bit 1 of the second operand  |

**Table 65: Input Ports**

| Name | Range | Description                        |
|------|-------|------------------------------------|
| D1   | 1     | Function input D1                  |
| A0   | 1     | Input bit 0 for non-operand signal |
| B0   | 1     | Input bit 0 of the first operand   |
| C0   | 1     | Function input C0                  |
| D0   | 1     | Function input D0                  |

**Table 66: Output Ports**

| Name | Range | Description             |
|------|-------|-------------------------|
| S1   | 1     | Output bit 1 of the sum |
| S0   | 1     | Output bit 0 of the sum |
| COUT | 1     | Carry out               |

**Table 67: Parameters**

| Name      | Values   | Description                 |
|-----------|----------|-----------------------------|
| INIT0     | "0x0000" | CCU2D initialization data 0 |
| INIT1     | "0x0000" | CCU2D initialization data 1 |
| INJECT1_0 | "YES"    | INJECT0                     |
| INJECT1_1 | "YES"    | INJECT1                     |

## CLKDIVC

Clock Divider

Architectures Supported:

▶ LFMXO4

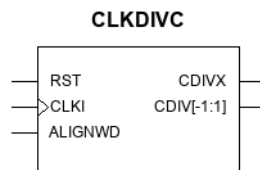




**Table 68: Input Ports**


| Name    | Range | Description                                                                                                                  |
|---------|-------|------------------------------------------------------------------------------------------------------------------------------|
| RST     | 1     | Asserting the RST signal asynchronously forces all outputs low. De-asserting RST synchronously allows all outputs to toggle. |
| CLKI    | 1     | Input clock.                                                                                                                 |
| ALIGNWD | 1     | This signal is used for word alignment.                                                                                      |

**Table 69: Output Ports**

| Name  | Range | Description                             |
|-------|-------|-----------------------------------------|
| CDIVX | 1     | Divide by 2.0, 3.5, or 4.0 output port. |
| CDIV  | -1:1  | Divide by 1 output port.                |

The CLKDIV, or “clock divider” block, generates clock outputs one half, divided by three and a half or one quarter of the frequency of the input clock. It also generates an output clock of the same frequency as the input clock. All the outputs match input to output delay.

CLKDIV takes its inputs from the outputs of ECLK muxes. The divided outputs of the CLKDIV drive the primary clock center muxes directly and are also available on CIB ports for distribution to routing or secondary high fan out nets. The figure below represents the block diagram of CLKDIV:

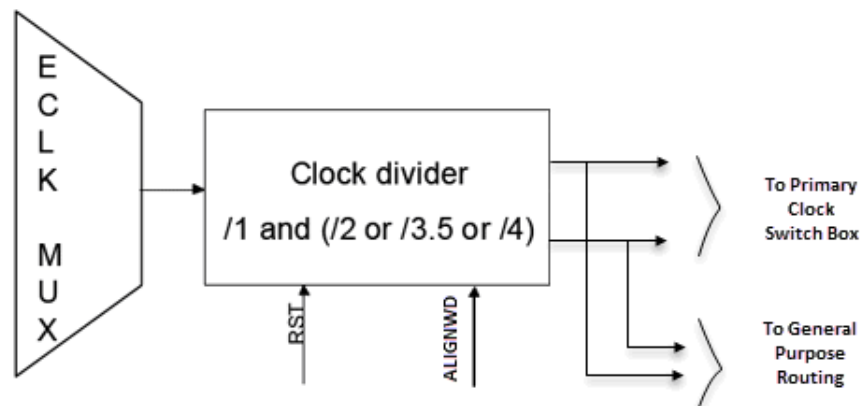

## CLKFBBUFA

Dummy Feedback Delay Between PLL clk Output and PLL fb Port

Architectures Supported:

- ▶ LFMXO4

CLKFBBUFA

 


Table 70: Input Ports

| Name | Range | Description                                  |
|------|-------|----------------------------------------------|
| A    | 1     | Clock input coming from the PLL CLKOP output |

Table 71: Output Ports

| Name | Range | Description                       |
|------|-------|-----------------------------------|
| Z    | 1     | Delayed output to the PLL fb port |

### Description

The CLKFBBUFA is the dummy feedback path from the PLL clk output to the PLL feedback port to cancel out clock path variation over PVT.

## CONFIG\_DONE

CONFIG final done status

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

CONFIG\_DONE



**Table 72: Output Ports**

| Name    | Description              |
|---------|--------------------------|
| CFGDONE | CONFIG final done status |

## CONFIG\_LMMI

LMMI (Lattice Memory Mapped Interface) interface to the configuration block

Architectures supported:

- ▶ LFD2NX

**Table 73: Input Ports**

| Name            | Description               |
|-----------------|---------------------------|
| LMMICLK         | Clock for LMMI interface  |
| LMMIREQUEST     | Start transaction         |
| LMMIWRRD_N      | 1=write, 0=read           |
| LMMIOFFSET[7:0] | Register offset           |
| LMMIWDATA[7:0]  | Write data                |
| LMMIRESETN      | Reset the LMMI interface  |
| RSTSMCLK        | Reset SMCLK               |
| SMCLK           | Configuration block clock |

**Table 74: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA[7:0] | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 75: Parameters**

| Name    | Values                  | Description               | Inferable |
|---------|-------------------------|---------------------------|-----------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface | No        |

## CONFIG\_LMMIA

LMMI (Lattice Memory Mapped Interface) interface to the configuration block

Architectures supported:

- ▶ LFCPNX
- ▶ LIFCL-33, LIFCL-33U
- ▶ UT24CP

### CONFIG\_LMMIA

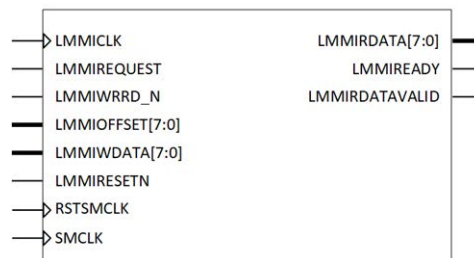


**Table 76: Input Ports**

| Name            | Description               |
|-----------------|---------------------------|
| LMMICK          | Clock for LMMI interface  |
| LMMIREQUEST     | Start transaction         |
| LMMIWRRD_N      | 1=write, 0=read           |
| LMMIOFFSET[7:0] | Register offset           |
| LMMIWDATA[7:0]  | Write data                |
| LMMIRESETN      | Reset the LMMI interface  |
| RSTSMCLK        | Reset SMCLK               |
| SMCLK           | Configuration block clock |

**Table 77: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA[7:0] | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 78: Parameters**


| Name    | Values                  | Description               | Inferable |
|---------|-------------------------|---------------------------|-----------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface | No        |

## CONFIG\_LMMIB

Includes Flash access through LMMI

Architectures supported:

- ▶ LFMXO5-25

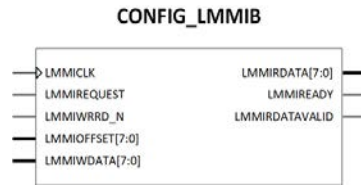**Table 79: Input Ports**

| Name        | Description              |
|-------------|--------------------------|
| LMMICKL     | Clock for LMMI interface |
| LMMIREQUEST | Start transaction        |
| LMMIWRRD_N  | 1=write, 0=read          |
| LMMIOFFSET  | Register offset          |
| LMMIWDATA   | Write data               |

**Table 80: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA      | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 81: Parameters**


| Name    | Values                  | Description               |
|---------|-------------------------|---------------------------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface |

## CONFIG\_LMMIC

LMMI Slave Primitive

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT-10

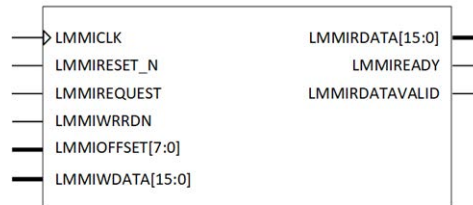**CONFIG\_LMMIC****Table 82: Input Ports**

| Name        | Range | Description       |
|-------------|-------|-------------------|
| LMMICLK     | 1     | LMMI Clock        |
| LMMIRESET_N | 1     | LMMI Resetn       |
| LMMIREQUEST | 1     | LMMI Request      |
| LMMIWRRDN   | 1     | LMMI Write Enable |
| LMMIOFFSET  | 7:0   | LMMI Offset       |
| LMMIWDATA   | 15:0  | LMMI Write Data   |

**Table 83: Output Ports**


| Name           | Range | Description          |
|----------------|-------|----------------------|
| LMMIRDATA      | 15:0  | LMMI Read Data       |
| LMMIRDATAVALID | 1     | LMMI Read Data Valid |
| LMMIREADY      | 1     | LMMI Slave Ready     |

**CONFIG\_LMMIE**

LMMI (Lattice Memory Mapped Interface) interface to the configuration block

Architectures supported:

- ▶ LFMXO5-100T

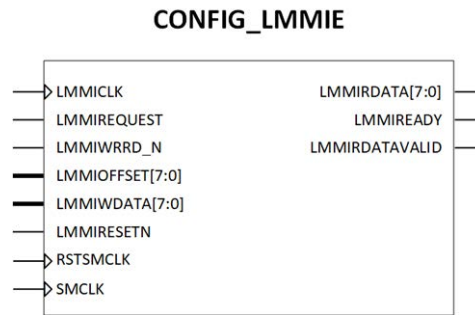**Table 84: Input Ports**

| Name            | Description               |
|-----------------|---------------------------|
| LMMICLK         | Clock for LMMI interface  |
| LMMIREQUEST     | Start transaction         |
| LMMIWRRD_N      | 1=write, 0=read           |
| LMMIOFFSET[7:0] | Register offset           |
| LMMIWDATA[7:0]  | Write data                |
| LMMIRESETN      | Reset the LMMI interface  |
| RSTSMCLK        | Reset SMCLK               |
| SMCLK           | Configuration block clock |

**Table 85: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA[7:0] | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 86: Parameters**

| Name    | Values                  | Description               | Inferable |
|---------|-------------------------|---------------------------|-----------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface | No        |



## CONFIG\_LMMIF

LMMI (Lattice Memory Mapped Interface) interface to the configuration block

Architectures supported:

- ▶ LFMXO5-35T
- ▶ LFMXO5-65T

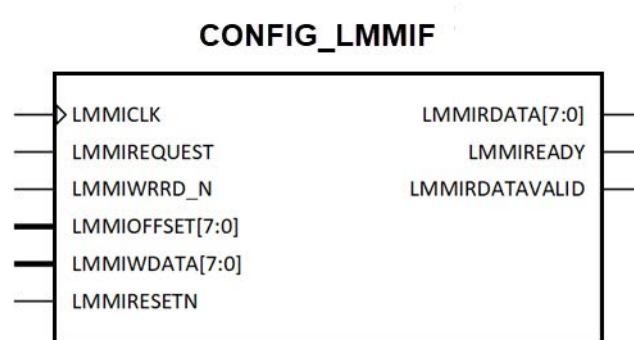


**Table 87: Input Ports**

| Name            | Description              |
|-----------------|--------------------------|
| LMMICLK         | Clock for LMMI interface |
| LMMIREQUEST     | Start transaction        |
| LMMIWRRD_N      | 1=write, 0=read          |
| LMMIOFFSET[7:0] | Register offset          |
| LMMIWDATA[7:0]  | Write data               |
| LMMIRESETN      | Reset the LMMI interface |

**Table 88: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA[7:0] | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 89: Parameters**


| Name    | Values                  | Description               | Inferable |
|---------|-------------------------|---------------------------|-----------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface | No        |

## CONFIG\_LMMIG

LMMI (Lattice Memory Mapped Interface) interface to the configuration block

Architectures supported:

- ▶ LFD2NX-15
- ▶ LFD2NX-25

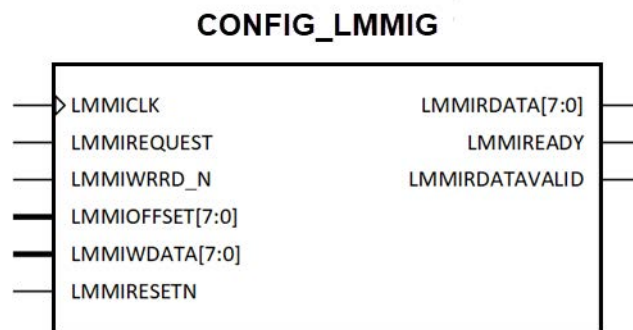**Table 90: Input Ports**

| Name            | Description              |
|-----------------|--------------------------|
| LMMICK          | Clock for LMMI interface |
| LMMIREQUEST     | Start transaction        |
| LMMIWRRD_N      | 1=write, 0=read          |
| LMMIOFFSET[7:0] | Register offset          |
| LMMIWDATA[7:0]  | Write data               |
| LMMIRESETN      | Reset the LMMI interface |

**Table 91: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA[7:0] | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 92: Parameters**


| Name    | Values                  | Description               | Inferable |
|---------|-------------------------|---------------------------|-----------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface | No        |

## CONFIG\_LMMIH

LMMI (Lattice Memory Mapped Interface) interface to the configuration block

Architectures supported:

- ▶ LFD2NX-35
- ▶ LFD2NX-65

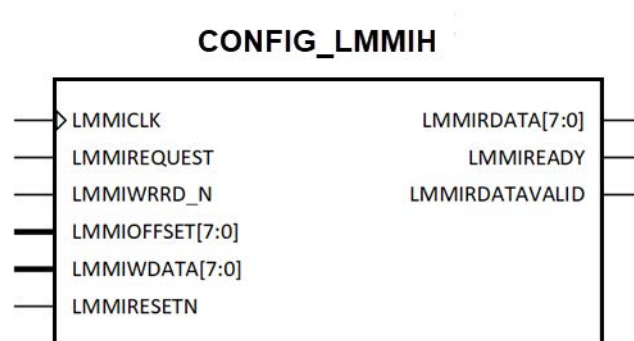**Table 93: Input Ports**

| Name        | Description              |
|-------------|--------------------------|
| LMMICLK     | Clock for LMMI interface |
| LMMIREQUEST | Start transaction        |

**Table 93: Input Ports**

| Name            | Description              |
|-----------------|--------------------------|
| LMMIWRRD_N      | 1=write, 0=read          |
| LMMIOFFSET[7:0] | Register offset          |
| LMMIWDATA[7:0]  | Write data               |
| LMMIRESETN      | Reset the LMMI interface |

**Table 94: Output Ports**

| Name           | Description                                                    |
|----------------|----------------------------------------------------------------|
| LMMIRDATA[7:0] | Read data                                                      |
| LMMIREADY      | LMMI ready signal                                              |
| LMMIRDATAVALID | Read transaction is complete and LMMIRDATA contains valid data |

**Table 95: Parameters**

| Name    | Values                  | Description               | Inferable |
|---------|-------------------------|---------------------------|-----------|
| LMMI_EN | "DIS" (default)<br>"EN" | Enable the LMMI interface | No        |

## CRE

Cryptographic Engine


### Note:

CRE is only available with the CRE Control Pack.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5-25
- ▶ LFMXO5T
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T

- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

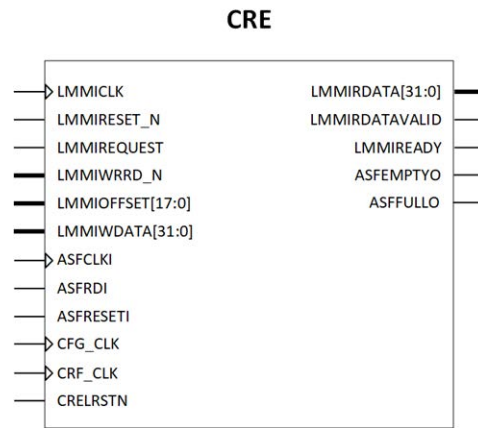**Table 96: Input Ports**

| Name        | Range | Description              |
|-------------|-------|--------------------------|
| LMMICKL     | 1     | Clock for LMMI interface |
| LMMIRESET_N | 1     | LMMI Resetrn             |
| LMMIREQUEST | 1     | Start transaction        |
| LMMIWRRD_N  | 1     | Write = HIGH, Read = LOW |
| LMMIOFFSET  | 17:0  | Register offset          |
| LMMIWDATA   | 31:0  | Write data               |
| ASFCLKI     | 1     | Clock for ASF            |
| ASFRDI      | 1     | Read strobe              |
| ASFRESETI   | 1     | Resets the ASF logic     |
| ASFWRI      | 1     | Write strobe             |
| CFG_CLK     | 1     | Config clock             |
| CRE_CLK     | 1     | CRE clock                |
| CRELRSTN    | 1     | CRE Resetrn              |

**Table 97: Output Ports**

| Name           | Range | Description                                                    |
|----------------|-------|----------------------------------------------------------------|
| LMMIRDATA      | 31:0  | Read data                                                      |
| LMMIRDATAVALID | 1     | Read transaction is complete and LMMIRDATA contains valid data |
| LMMIREADY      | 1     | LMMI ready signal                                              |
| ASFEMPTYO      | 1     | Indicates FIFO is empty                                        |
| ASFFULLO       | 1     | Indicates FIFO is full                                         |

**Table 98: Parameters**


| Name        | Values                                 | Description                     |
|-------------|----------------------------------------|---------------------------------|
| CRE_DISABLE | ENABLED ( <i>default</i> )<br>DISABLED | Disable CRE                     |
| GSR         | ENABLED ( <i>default</i> )<br>DISABLED | Enable Global Set/Reset Control |
| OTP_EN      | ENABLED<br>DISABLED ( <i>default</i> ) | Enable OTP                      |

## CREA

Controls security registers to provide the security capability

Architectures supported:

- ▶ LAV-AT-ES1

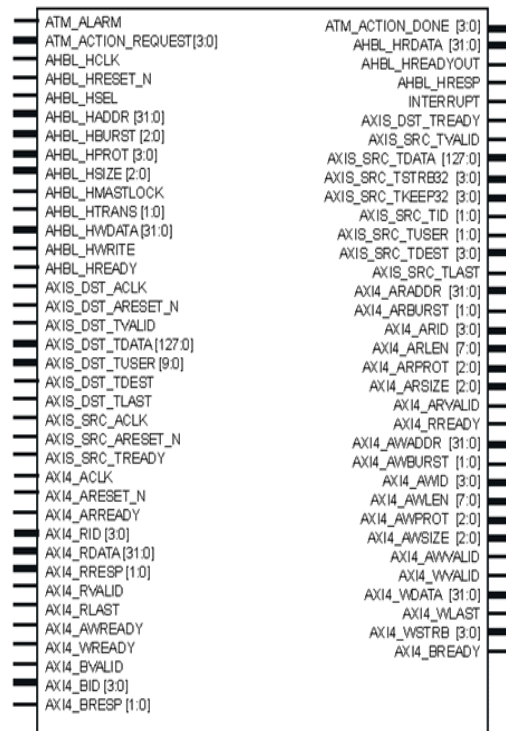**Table 99: Input Ports**

| Name               | Range | Description                                                                                                  |
|--------------------|-------|--------------------------------------------------------------------------------------------------------------|
| ATM_ALARM          | 1     | ATM Alarm                                                                                                    |
| ATM_ACTION_REQUEST | 3:0   | ATM ACTION Request                                                                                           |
| AHBL_HCLK          | 1     | Bus Clock                                                                                                    |
| AHBL_HRESET_N      | 1     | Reset Active Low                                                                                             |
| AHBL_HSEL          | 1     | Slave select indicates current transfer is intended for selected slave                                       |
| AHBL_HADDR         | 31:0  | Address bus                                                                                                  |
| AHBL_HBURST        | 2:0   | Indicates single or burst transfer - 4,8,and 16                                                              |
| AHBL_HPROT         | 3:0   | Protection control signals about bus access                                                                  |
| AHBL_HSIZE         | 2:0   | Size of the transfer                                                                                         |
| AHBL_HMASTLOCK     | 1     | When HIGH, this signal indicates that the current transfer is part of a locked sequence.                     |
| AHBL_HTRANS        | 1:0   | Indicates transfer type - idle, busy, nonsequential, sequential                                              |
| AHBL_HWDATA        | 31:0  | Write data bus                                                                                               |
| AHBL_HWRITE        | 1     | Indicates transfer direction - high write / low read                                                         |
| AHBL_HREADY        | 1     | When HIGH, the HREADY signal indicates to the master and all slaves, that the previous transfer is complete. |

**Table 99: Input Ports (Continued)**

| Name              | Range | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AXIS_DST_ACLK     | 1     | Clock signal                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| AXIS_DST_ARESET_N | 1     | Reset signal (active low)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| AXIS_DST_TVALID   | 1     | Indicates tdata[127:0] is valid when asserted (1b). When de-asserted (0b) the data on tdata is invalid.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| AXIS_DST_TDATA    | 127:0 | 128-bit stream data input for AES High Speed, and 32-bit for DPA resistant, valid when tvalid is high (1b). Depending on the tuser bits, this bus contains payload or control data such as keys, IVs, etc. For all transfers, all bytes on this bus are valid.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| AXIS_DST_TUSER    | 9:0   | <p>10-bit for AES High Speed as follows:</p> <p>Bit[0] aad_in_done, indicates tdata[127:0] is the last AAD data when 1b.</p> <p>Bit[1] indicates ctrl_av when 1b (for stand-alone mode only).</p> <p>Bit[2] indicates tdata[127:0] is mode_in data (for stand-alone mode only).</p> <p>Bit[3] indicates tdata[127:0] is key_in[127:0] data (for stand-alone mode only).</p> <p>Bit[4] indicates tdata[127:0] is key_in[255:127] data (for stand-alone mode only).</p> <p>Bit[5] indicates tdata[127:0] is key2_in[127:0] data (for stand-alone mode only).</p> <p>Bit[6] indicates tdata[127:0] is key2_in[255:127] data (for stand-alone mode only).</p> <p>Bit[7] indicates tdata[127:0] is hash_key_in[127:0] data (for stand-alone mode only).</p> <p>Bit[8] indicates tdata[127:0] is iv_in[127:0] data.</p> <p>Bit[9] indicates tdata[127:0] is length_in[127:0] data {aad_len[63:0], ct_len[63:0]}.</p> <p>All tuser[9:1] bits zero means tdata[127:0] is payload data.</p> <p>Not used for DPA resistant.</p> |
| AXIS_DST_TDEST    | 1     | <p>Selects data destination</p> <p>0 - DPA resistant</p> <p>1 - High Speed AES</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| AXIS_DST_TLAST    | 1     | Indicates the last data word of a transfer. This signal must be asserted high (1b) when the last packet data is provided on the tdata bus                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| AXIS_SRC_ACLK     | 1     | Clock signal. All signals are sampled on rising edge                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| AXIS_SRC_ARESET_N | 1     | Reset signal (active low)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| AXIS_SRC_TREADY   | 1     | Indicates that the slave is ready to accept the data on tdata. Data transfer will occur when both tvalid and tready are asserted.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| AXI4_ACLK         | 1     | Clock signal                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| AXI4_ARESET_N     | 1     | Reset signal (active low)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |



**Table 99: Input Ports (Continued)**

| Name         | Range | Description                                                                                                                  |
|--------------|-------|------------------------------------------------------------------------------------------------------------------------------|
| AXI4_ARREADY | 1     | This signal indicates that the slave is ready to accept an address and associated control signals.                           |
| AXI4_RID     | 3:0   | This signal is the identification tag for the read data group of signals generated by the slave.                             |
| AXI4_RDATA   | 31:0  | Read data                                                                                                                    |
| AXI4_RRESP   | 1:0   | This signal indicates the status of the read transfer.<br>2'b00 : OKAY<br>2'b01 : EXOKAY<br>2'b10 : SLVERR<br>2'b11 : DECERR |
| AXI4_RVALID  | 1     | This signal indicates that the channel is signaling the required read data.                                                  |
| AXI4_RLAST   | 1     | This signal indicates the last transfer in a read burst.                                                                     |
| AXI4_AWREADY | 1     | This signal indicates that the slave is ready to accept an address and associated control signals.                           |
| AXI4_WREADY  | 1     | This signal indicates that the slave can accept the write data.                                                              |
| AXI4_BVALID  | 1     | This signal indicates that the channel is signaling a valid write response.                                                  |
| AXI4_BID     | 3:0   | This signal is the ID tag of the write response.                                                                             |
| AXI4_BRESP   | 1:0   | This signal indicates the status of the write transaction.                                                                   |

**Table 100: Output Ports**

| Name            | Range | Description                                                                                                                                        |
|-----------------|-------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| ATM_ACTION_DONE | 3:0   | ATM Action Done                                                                                                                                    |
| AHBL_HRDATA     | 31:0  | Read data bus                                                                                                                                      |
| AHBL_HREADYOUT  | 1     | When HIGH, the HREADYOUT signal indicates that a transfer has finished on the bus. This signal can be driven LOW to extend a transfer.             |
| AHBL_HRESP      | 1     | When low, it indicates transfer is ok when high, it indicates transfer is error                                                                    |
| INTERRUPT       | 1     | Interrupt output signal                                                                                                                            |
| AXIS_DST_TREADY | 1     | Indicates that the security engine is ready to accept the data on tdata[127:0]. Data transfer will occur when both tvalid and tready are asserted. |

**Table 100: Output Ports (Continued)**

| Name             | Range | Description                                                                                                                                                                                                                                                         |
|------------------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AXIS_SRC_TVALID  | 1     | Indicates tdata[127:0] is valid when asserted (1b). When de-asserted (0b) the data on tdata[127:0] is invalid.<br><br>Data transfer will occur when both tvalid and tready are asserted.                                                                            |
| AXIS_SRC_TDATA   | 127:0 | 128-bit stream data output from the AES High Speed, and 32-bit for DPA resistant, valid when tvalid is high (1b). Depending on the tuser[1:0] bits, this bus contains payload data, IV data or TAG data.<br><br>For all transfers, all bytes on this bus are valid. |
| AXIS_SRC_TSTRB32 | 3:0   | 32-bit word qualifier indicates data word or position word. Valid values are 0x0 or 0x1 for data from DPA resistant core, 0x0 or 0xF for data from AES High Speed core.                                                                                             |
| AXIS_SRC_TKEEP32 | 3:0   | 32-bit word qualifier indicates data word or position word. Valid values are 0x0 or 0x1 for data from DPA resistant core, 0x0 or 0xF for data from AES High Speed core.                                                                                             |
| AXIS_SRC_TID     | 1:0   | Indicates the master which initiated the transaction.<br><br>DPA resistant: 0x0 = DMA, 0x2 = CPU<br>AES High Speed - 0x3                                                                                                                                            |
| AXIS_SRC_TUSER   | 1:0   | AES High Speed:<br>0x0 - payload data<br>0x1 - IV data<br>0x2 - TAG data<br><br>DPA resistant:<br>0x0 - payload data                                                                                                                                                |
| AXIS_SRC_TDEST   | 1:0   | Determined by parameter passed to Security APIs                                                                                                                                                                                                                     |
| AXIS_SRC_TLAST   | 1     | Indicates the last data word of a transfer. This signal must be asserted high (1b) when the last packet data is provided on the tdata bus.                                                                                                                          |
| AXI4_ARADDR      | 31:0  | The read address gives the address of the first transfer in a read burst transaction.                                                                                                                                                                               |
| AXI4_ARBURST     | 1:0   | The burst type and the size information determine how the address for each transfer within the burst is calculated.<br>2'b00 : FIXED<br>2'b01 : INCR<br>2'b10 : WRAP<br>2'b11 : Reserved                                                                            |
| AXI4_ARID        | 3:0   | This signal is the identification tag for the read address group of signals.                                                                                                                                                                                        |
| AXI4_ARLEN       | 7:0   | This signal indicates the exact number of transfers in a burst. 1 to beat INCR bursts supported.<br><br>WRAP burst lengths of 2, 4, 8, and 16 are supported.                                                                                                        |

**Table 100: Output Ports (Continued)**

| Name         | Range | Description                                                                                                                                                                                                                          |
|--------------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AXI4_ARPROT  | 2:0   | This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access.                                                                                    |
| AXI4_ARSIZE  | 2:0   | This signal indicates the size of each transfer in the burst. Byte sizes of 1 - 4 are supported.                                                                                                                                     |
| AXI4_ARVALID | 1     | This signal indicates that the channel is signaling valid read address and control information.                                                                                                                                      |
| AXI4_RREADY  | 1     | This signal indicates that the master can accept the read data and response information.                                                                                                                                             |
| AXI4_AWADDR  | 31:0  | The write address gives the address of the first transfer in a write burst transaction.                                                                                                                                              |
| AXI4_AWBURST | 1:0   | The burst type and the size information, determine how the address for each transfer within the burst is calculated. This field is encoded as follows:<br>2'b00 : FIXED<br>2'b01 : INCR<br>2'b10 : WRAP<br>2'b11 : Reserved          |
| AXI4_AWID    | 3:0   | This signal is the identification tag for the write address group of signals.                                                                                                                                                        |
| AXI4_AWLEN   | 7:0   | The burst length gives the exact number of transfers in a burst. This information determines the number of data transfers associated with the address. 1 to beat INCR bursts supported. 2, 4, 8, or 16 length WRAP bursts supported. |
| AXI4_AWPROT  | 2:0   | This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access.                                                                                    |
| AXI4_AWSIZE  | 2:0   | This signal indicates the size of each transfer in the burst. 1 - 4-byte sizes are supported.                                                                                                                                        |
| AXI4_AWVALID | 1     | This signal indicates that the channel is signaling valid write address and control information.                                                                                                                                     |

**Table 100: Output Ports (Continued)**

| Name        | Range | Description                                                                                                                      |
|-------------|-------|----------------------------------------------------------------------------------------------------------------------------------|
| AXI4_WVALID | 1     | This signal indicates that valid write data and strobes are available.                                                           |
| AXI4_WDATA  | 31:0  | Write data.                                                                                                                      |
| AXI4_WLAST  | 1     | This signal indicates the last transfer in a write burst.                                                                        |
| AXI4_WSTRB  | 3:0   | This signal indicates which byte lanes hold valid data. There is one write strobe bit for each eight bits of the write data bus. |
| AXI4_BREADY | 1     | This signal indicates that the master can accept a write response.                                                               |

**Table 101: Parameters**

| Name                    | Values                            | Description                     |
|-------------------------|-----------------------------------|---------------------------------|
| BITSTREAM_AUTH          | "DISABLED" (default)<br>"ENABLED" | Enable JTAG 1                   |
| BBRAM_PUBKEY_REVO<br>KE | "DISABLED" (default)<br>"ENABLED" | Enable BBRRAM Public Key Revoke |
| BBRAM                   | "DISABLED"<br>"ENABLED" (default) | Enable BBRRAM                   |
| ERASE_KEY_PIN           | "DISABLED" (default)<br>"ENABLED" | Enable Key Pin Erase            |


## DCC

Dynamic Clock Control with Positive Enable

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T

- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

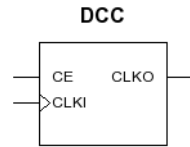**Table 102: Input Ports**

| Name | Description  |
|------|--------------|
| CLKI | Clock in     |
| CE   | Clock enable |

**Table 103: Output Ports**

| Name | Description                                      |
|------|--------------------------------------------------|
| CLKO | Clock out. Zero when CE is 0. CLKI when CE is 1. |

**Table 104: Parameters**


| Name  | Values                 | Description                                                                        |
|-------|------------------------|------------------------------------------------------------------------------------|
| DCCEN | "0" ( <i>default</i> ) | Enables dynamic control.                                                           |
|       | "1"                    | "0": CLKO = CLKI regardless of the CE input.<br>"1": CLKO depends on the CE input. |

## DCCA

Dynamic clock control

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

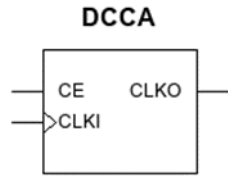**Table 105: Input Ports**

| Name | Description  |
|------|--------------|
| CLKI | Input clock  |
| CE   | Clock enable |

**Table 106: Output Ports**


| Name | Description  |
|------|--------------|
| CLKO | Output clock |

## DCCB

Dynamic Quadrant Clock Enable/Disable

Architectures Supported:

▶ LFMXO4

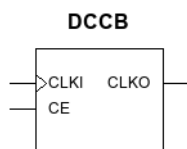**Table 107: Input Ports**

| Name | Range | Description  |
|------|-------|--------------|
| CLKI | 1     | Input clock  |
| CE   | 1     | Clock enable |

**Table 108: Output Ports**

| Name | Range | Description  |
|------|-------|--------------|
| CLKO | 1     | Output clock |

DCCB is the dynamic quadrant clock enable/disable primitive. In each quadrant, the dynamic quadrant clock enable/disable is available on the output of the center mux for the primary clocks CLK[5:0]. The dynamic quadrant clock enable/disable feature lets the internal logic control the quadrant primary clock network. When a clock network is disabled, all the logic fed by the clock network does not toggle, reducing the overall power consumption of the device. You need to instantiate a primitive (DCCB) in order to control the enable/disable function.

### DCCB Usage with VHDL

#### Library Instantiation

```
library lattice;
use lattice.components.all;
```

#### Component Declaration

```
component DCCA
  port (CLKI : in std_logic;
        CE   : in std_logic;
        CLKO : out std_logic);
end component;
```

#### DCCB Instantiation

```
I1: DCCA
  port map (CLKI => CLKI;
            CE   => CE;
            CLKO => CLKO);
end component;
```

### DCCB Usage with Verilog HDL

#### Component Declaration

```
module DCCA (CLKI,
             CE,
             CLKO);

  input CLKI;
  input CE;
  output CLKO;
endmodule
```

#### DCCB Instantiation

```
DCCA I1 (.CLKI (CLKI),
         .CE   (CE),
         .CLKO (CLKO));
```

## DCMA

Dynamic Clock Mux

Architectures Supported:

▶ LFMXO4

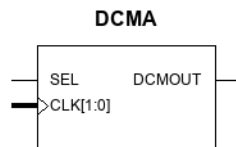


**Table 109: Input Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| CLK  | 1:0   | Input clock           |
| SEL  | 1     | Clock select from CIB |

**Table 110: Output Ports**

| Name   | Range | Description                       |
|--------|-------|-----------------------------------|
| DCMOUT | 1     | Output from the primary clock mux |

### Description

DCMA is a clock buffer incorporating a multiplexer function, whose output switches between the two clock inputs. It is not recommended that you route the PLL feedback signals through the multiplexer, because the PLL will lose lock.

### DCMA Usage with VHDL

#### Library Instantiation

```
library lattice;
use lattice.components.all;
```

#### Component Declaration

```
component DCMA
  port (CLK0    : in std_logic;
        CLK1    : in std_logic;
        SEL     : in std_logic;
```



```
        DCMOUT :out std_logic);  
end component;
```

### DCMA Instantiation

```
I1: DCMA  
    port map (CLK0 => CLK0,  
              CLK1 => CLK1,  
              SEL  => SEL,  
              DCMOUT => DCMOUT);  
end component;
```

## DCMA Usage with Verilog HDL

### Component Declaration

```
module DCMA (CLK0, CLK1, SEL, DCMOUT);  
input CLK0;  
input CLK1;  
input SEL;  
output DCMOUT;  
endmodule
```

### DCMA Instantiation


```
DCMA I1 (.CLK0 (CLK0);  
        .CLK1 (CLK1);  
        .SEL  (SEL);  
        .DCMOUT (DCMOUT));
```

## DCS

### Dynamic Clock Selection

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

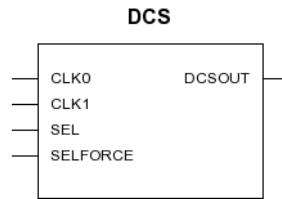**Table 111: Input Ports**

| Name     | Description                                  |
|----------|----------------------------------------------|
| CLK0     | Input clock to the edge bridge clock select. |
| CLK1     | Input clock to the edge bridge clock select. |
| SEL      | From CIB, edge bridge clock select.          |
| SELFORCE | Force enable                                 |

**Table 112: Output Ports**

| Name   | Description  |
|--------|--------------|
| DCSOUT | Output clock |

**Table 113: Parameters**


| Name    | Values         | Description                                     | Output<br>(SEL = 0) | Output<br>(SEL = 1) |
|---------|----------------|-------------------------------------------------|---------------------|---------------------|
| DCSMODE | "VCC"          | VCC                                             | 1                   | 1                   |
|         | "GND"          | VSS                                             | 0                   | 0                   |
|         | "DCS"          | Falling edge triggered,<br>latched state is low | CLK0                | CLK1                |
|         | "DCS_1"        | Rising edge triggered,<br>latched state is high | CLK0                | CLK1                |
|         | "BUFGCECLK1"   | SEL is active high,<br>disabled output is low   | 0                   | CLK1                |
|         | "BUFGCECLK1_1" | SEL is active high,<br>disabled output is high  | 1                   | CLK1                |
|         | "BUFGCECLK0"   | SEL is active low,<br>disabled output is low    | CLK0                | 0                   |
|         | "BUFGCECLK0_1" | SEL is active low,<br>disabled output is high   | CLK0                | 1                   |
|         | "BUF0"         | Buffer for CLK0                                 | CLK0                | CLK0                |
|         | "BUF1"         | Buffer for CLK1                                 | CLK1                | CLK1                |

## DCSA

Dynamic clock select

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

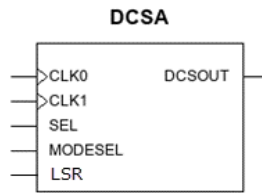**Table 114: Input Ports**

| Name    | Description                                          |
|---------|------------------------------------------------------|
| CLK0    | Input clock 0                                        |
| CLK1    | Input clock 1                                        |
| SEL     | Select between CLK0 and CLK1                         |
| MODESEL | Select between glitchless (0) and non-glitchless (1) |
| LSR     | Local Set/Reset                                      |

**Table 115: Output Ports**

| Name   | Description  |
|--------|--------------|
| DCSOUT | Output clock |

**Table 116: Parameters**

| Name    | Values                                                                                                                    | Description |
|---------|---------------------------------------------------------------------------------------------------------------------------|-------------|
| DCSMODE | "CLK0" (default)<br>"CLK1"<br>"NEG"<br>"POS"<br>"CLK0_LOW"<br>"CLK0_HIGH"<br>"CLK1_LOW"<br>"CLK1_HIGH"<br>"LOW"<br>"HIGH" | DCS Mode    |


## DDRDLL

Delay-Locked Loop Master Block for DDR Functionality

Architectures supported:

- ▶ LFCPNX

- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

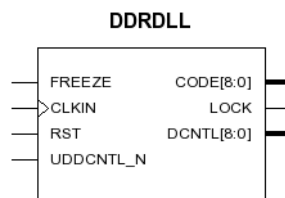**Table 117: Input Ports**

| Name      | Description                             |
|-----------|-----------------------------------------|
| FREEZE    | Signal used to freeze or release        |
| CLKIN     | Input clock                             |
| RST       | Reset                                   |
| UDDCNTL_N | Update control to update the delay code |

**Table 118: Output Ports**

| Name       | Description                                                                                    |
|------------|------------------------------------------------------------------------------------------------|
| CODE[8:0]  | The delay codes from the DDRDLL to be used to delay input of DQS, DLLDEL and output of LPDDR4. |
| LOCK       | Lock output                                                                                    |
| DCNTL[8:0] | The delay codes from the DDRDLL available for the user IP.                                     |

**Table 119: Parameters**

| Name | Values                            | Description                       |
|------|-----------------------------------|-----------------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | GSRN signal enable/disable select |

**Table 119: Parameters (Continued)**

| Name            | Values                                                          | Description                                                                                                                                          |
|-----------------|-----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| ENA_ROUNDOFF    | "ENABLED" (default)<br>"DISABLED"                               | DLL counter round-off select.<br>0: Disable round-off<br>1: Enable round-off, more stable code                                                       |
| FORCE_MAX_DELAY | "CODE_OR_LOCK_FROM_DLL_LOOP" (default)<br>"FORCE_LOCK_AND_CODE" | DLL control code forcing.<br>0: Code/lock generated from DLL loop<br>1: Force lock and code is set to maximum of 255 for lower input frequency mode. |


DDRDLL can generate a phase shift code (90 degree) according to its running frequency and provide this code to every individual DQS block and DLLDEL slave delay element located in two adjacent sides if available.

## DDRDLLA

DLL for creating the 90° clock delay

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

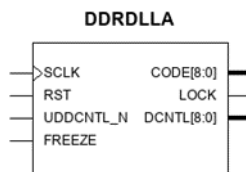**Table 120: Input Ports**

| Name      | Range | Type    | Active State | Description                                                                                                                                     |
|-----------|-------|---------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| SCLK      | 1     | Data    | High         | Clock input                                                                                                                                     |
| RST       | 1     | Control | High         | Reset input                                                                                                                                     |
| UDDCNTL_N | 1     | Control | Low          | Update control to update the delay code.<br>0: the delay code out of the DDRDLL is updated. Should not be active during a read or a write cycle |
| FREEZE    | 1     | Control | High         | Releases the DDRDLL input clock                                                                                                                 |

**Table 121: Output Ports**

| Name  | Range | Type | Active State | Description                                                                                   |
|-------|-------|------|--------------|-----------------------------------------------------------------------------------------------|
| CODE  | 8:0   | Data | High         | The delay codes from the DDRDLL to be used to delay input of DQS, DLLDEL and output of LPDDR4 |
| LOCK  | 1     | Data | High         | Lock output to indicate the DDRDLL has valid delay output                                     |
| DCNTL | 8:0   | Data | High         | The delay codes from the DDRDLL available for the user IP                                     |

**Table 122: Parameters**

| Name                 | Values                    | Description                                                                                                                                                            |
|----------------------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CODE_LOCK_GENERATION | "DLL_LOOP"<br>"FORCE_MAX" | DLL control code forcing.<br>"DLL_LOOP": Code/lock generated from DLL loop<br>"FORCE_MAX": Force lock and code is set to maximum of 255 for lower input frequency mode |
| ROUNDOFF             | "ENABLED"<br>"DISABLED"   | DLL counter round-off select.<br>"ENABLED": Enable round-off, more stable code<br>"DISABLED": Disable round-off                                                        |
| DIV                  | "1"<br>"2"                | Clock divider                                                                                                                                                          |
| GSR                  | "ENABLED"<br>"DISABLED"   | Enable or disable GSR feature                                                                                                                                          |

## DDRPHY16D

Supports DDR4 and DDR3L protocols with X16 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                          |                                 |
|--------------------------|---------------------------------|
| PHYCLK                   | DFI_RDDATA0 [63:0]              |
| SCLK                     | DFI_RDDATA1 [63:0]              |
| PCLK                     | DFI_RDDATA_DBI0 [7:0]           |
| RESET                    | DFI_RDDATA_DBI1 [7:0]           |
| DFI_RDDATA_EN            | DFI_RDDATA_VALID0               |
| DFI_RDDATA_EN_P2         | DFI_RDDATA_VALID1               |
| DFI_WRDATA_EN            | DFI_RDDATA_VALID0_P2            |
| DFI_WRDATA_EN_P2         | DFI_RDDATA_VALID1_P2            |
| DFI_WRDATA0 [63:0]       | DFI_PHYUPD_REQ                  |
| DFI_WRDATA1 [63:0]       | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA_MASK0 [7:0]   | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_MASK1 [7:0]   | DFIIT_COMPLETE                  |
| DFI_PHYUPD_ACK           | AXB_READY                       |
| DFI_CTRLUPD_REQ          | AXB_RDATA [31:0]                |
| DFI_DRAM_CLK_DISABLE     | PHY_OUT_DQ0 [7:0]               |
| DFI_ADDRESS [19:0]       | PHY_OUT_DQ1 [7:0]               |
| DFI_WRDATA_CS [1:0]      | PHY_OUT_DQ_OEN0 [7:0]           |
| DFI_RDDATA_CS [1:0]      | PHY_OUT_DQ_OEN1 [7:0]           |
| DFI_RAS_N                | PHY_OUT_DM0                     |
| DFI_CAS_N                | PHY_OUT_DM1                     |
| DFI_ACT_N                | PHY_OUT_DM_OEN0                 |
| DFI_WE_N                 | PHY_OUT_DM_OEN1                 |
| DFI_BANK [2:0]           | PHY_OUT_DQS0                    |
| DFI_BG [2:0]             | PHY_OUT_DQS1                    |
| DFI_CID                  | PHY_OUT_DQS_OEN0                |
| DFI_CS_N [1:0]           | PHY_OUT_DQS_OEN1                |
| DFI_CKE [1:0]            | DQ_READ0 [7:0]                  |
| DFI_ODT [1:0]            | DQ_READ1 [7:0]                  |
| DFI_ADDRESS_P1 [19:0]    | DM_READ0                        |
| DFI_WRDATA_CS_P1 [1:0]   | DM_READ1                        |
| DFI_RDDATA_CS_P1 [1:0]   | DQS_READ0                       |
| DFI_RAS_N_P1             | DQS_READ1                       |
| DFI_CAS_N_P1             | DQ_IE0 [7:0]                    |
| DFI_ACT_N_P1             | DQ_IE1 [7:0]                    |
| DFI_WE_N_P1              | DM_IE0                          |
| DFI_BANK_P1 [2:0]        | DM_IE1                          |
| DFI_BG_P1 [2:0]          | DQS_IE0                         |
| DFI_CID_P1               | DQS_IE1                         |
| DFI_CS_N_P1 [1:0]        | VREF_OUTPUT_ENABLE0             |
| DFI_CKE_P1 [1:0]         | VREF_OUTPUT_ENABLE1             |
| DFI_ODT_P1 [1:0]         | VREF_VALUE0 [6:0]               |
| TURN_ON_IE               | VREF_VALUE1 [6:0]               |
| TURN_OFF_ADRCTRL_DRIVERS | CA_OUT_CLK0                     |
| AXB_SEL                  | CA_OUT_CLK1                     |
| AXB_RESET_N              | CA_OUT_RST_N                    |
| AXB_ADDR [6:0]           | CA_OUT_A0                       |
| AXB_WRITE                | CA_OUT_A1                       |
| AXB_WDATA [31:0]         | CA_OUT_A2                       |
| PHY_IN_DQ0 [7:0]         | CA_OUT_A3                       |
| PHY_IN_DQ1 [7:0]         | CA_OUT_A4                       |
| PHY_IN_DM0               | CA_OUT_A5                       |
| PHY_IN_DM1               | CA_OUT_A6                       |
| PHY_IN_DQS0              | CA_OUT_A7                       |
| PHY_IN_DQS1              | CA_OUT_A8                       |
| DFI_ADDRESS_P2 [19:0]    | CA_OUT_A9                       |
| DFI_WRDATA_CS_P2 [1:0]   | CA_OUT_A10                      |
| DFI_RDDATA_CS_P2 [1:0]   | CA_OUT_A11                      |
| DFI_RAS_N_P2             | CA_OUT_A12                      |
| DFI_CAS_N_P2             | CA_OUT_A13                      |
| DFI_ACT_N_P2             | CA_OUT_A14                      |
| DFI_WE_N_P2              | CA_OUT_A15                      |
| DFI_BANK_P2 [2:0]        | CA_OUT_A16                      |
| DFI_BG_P2 [2:0]          | CA_OUT_CS_N [1:0]               |
| DFI_CID_P2               | CA_OUT_CKE [1:0]                |
| DFI_CS_N_P2 [1:0]        | CA_OUT_BA2                      |
| DFI_CKE_P2 [1:0]         | CA_OUT_BA1                      |
| DFI_ODT_P2 [1:0]         | CA_OUT_BA0                      |
| DFI_ADDRESS_P3 [19:0]    | CA_OUT_RAS_N                    |
| DFI_WRDATA_CS_P3 [1:0]   | CA_OUT_CAS_N                    |
| DFI_RDDATA_CS_P3 [1:0]   | CA_OUT_WE_N                     |
| DFI_RAS_N_P3             | CA_OUT_ODT [1:0]                |
| DFI_CAS_N_P3             | CA_OUT_CS_OEN                   |
| DFI_ACT_N_P3             | CA_OUT_CLK_OEN0                 |
| DFI_WE_N_P3              | CA_OUT_CLK_OEN1                 |
| DFI_BANK_P3 [2:0]        | VREF_CA_VALUE [6:0]             |
| DFI_BG_P3 [2:0]          | UPDATE                          |
| DFI_CID_P3               | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| DFI_CS_N_P3 [1:0]        | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| DFI_CKE_P3 [1:0]         | ADRCTRL_DRIVERS_OEN             |
| DFI_ODT_P3 [1:0]         | RECEIVER_EN0                    |
|                          | RECEIVER_EN1                    |

Table 123: Input Ports

| Name   | Range | Description             |
|--------|-------|-------------------------|
| PHYCLK | 1     | DDR Clock               |
| SCLK   | 1     | Primary Clock           |
| PCLK   | 1     | AXB Bus Interface Clock |
| RESET  | 1     | Reset                   |



**Table 123: Input Ports (Continued)**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>                   |
|----------------------|--------------|--------------------------------------|
| DFI_RDDATA_EN        | 1            | DDRPHY Read Data Enable              |
| DFI_RDDATA_EN_P2     | 1            | DDRPHY Read Data Enable P2P3         |
| DFI_WRDATA_EN        | 1            | DDRPHY Write Data Enable             |
| DFI_WRDATA_EN_P2     | 1            | DDRPHY Write Data Enable P2P3        |
| DFI_WRDATA0          | 63:0         | DDRPHY Write Data                    |
| DFI_WRDATA1          | 63:0         | DDRPHY Write Data                    |
| DFI_WRDATA_MASK0     | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK1     | 7:0          | DDRPHY Write Data Mask               |
| DFI_PHYUPD_ACK       | 1            | DDRPHY PHY update acknowledge        |
| DFI_CTRLUPD_REQ      | 1            | DDRPHY PHY update request            |
| DFI_DRAM_CLK_DISABLE | 1            | DRAM clock disable                   |
| DFI_ADDRESS          | 19:0         | DDRPHY address                       |
| DFI_WRDATA_CS        | 1:0          | DDRPHY Write Data Chip Select        |
| DFI_RDDATA_CS        | 1:0          | DDRPHY Read Data Chip Select         |
| DFI_RAS_N            | 1            | DDRPHY RAS Enable                    |
| DFI_CAS_N            | 1            | DDRPHY CAS Enable                    |
| DFI_ACT_N            | 1            | DDRPHY ACT                           |
| DFI_WE_N             | 1            | DDRPHY Write Enable                  |
| DFI_BANK             | 2:0          | DDRPHY Bank Address                  |
| DFI_BG               | 2:0          | DDRPHY Bank Group                    |
| DFI_CID              | 1            | DDRPHY Chip ID                       |
| DFI_CS_N             | 1:0          | DDRPHY Chip Select                   |
| DFI_CKE              | 1:0          | DDRPHY Clock Enable                  |
| DFI_ODT              | 1:0          | DDRPHY ODT                           |
| DFI_ADDRESS_P1       | 19:0         | DDRPHY Phase1 Address                |
| DFI_WRDATA_CS_P1     | 1:0          | DDRPHY Write Data Chip Select Phase1 |
| DFI_RDDATA_CS_P1     | 1:0          | DDRPHY Read Data Chip Select Phase1  |
| DFI_RAS_N_P1         | 1            | DDRPHY RAS Enable Phase1             |
| DFI_CAS_N_P1         | 1            | DDRPHY CAS Enable Phase1             |
| DFI_ACT_N_P1         | 1            | DDRPHY ACT Phase1                    |
| DFI_WE_N_P1          | 1            | DDRPHY Write Enable Phase1           |
| DFI_BANK_P1          | 2:0          | DDRPHY Bank Address Phase1           |

**Table 123: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_BG_P1                | 2:0          | DDRRPHY Bank Group Phase1                                |
| DFI_CID_P1               | 1            | DDRRPHY Chip ID Phase1                                   |
| DFI_CS_N_P1              | 1:0          | DDRRPHY Chip Select Phase1                               |
| DFI_CKE_P1               | 1:0          | DDRRPHY Clock Enable Phase1                              |
| DFI_ODT_P1               | 1:0          | DDRRPHY ODT Phase1                                       |
| DFI_RESET_N              | 1            | DDRRPHY DFI Reset                                        |
| TURN_ON_IE               | 1            | DDRRPHY Enable                                           |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |
| PHY_IN_DQ0               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ1               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DM0               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM1               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DQS0              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS1              | 1            | DQS data strobe to PHY                                   |
| DFI_ADDRESS_P2           | 19:0         | DDRRPHY Phase2 Address                                   |
| DFI_WRDATA_CS_P2         | 1:0          | DDRRPHY Write Data Chip Select Phase2                    |
| DFI_RDDATA_CS_P2         | 1:0          | DDRRPHY Read Data Chip Select Phase2                     |
| DFI_RAS_N_P2             | 1            | DDRRPHY RAS Enable Phase2                                |
| DFI_CAS_N_P2             | 1            | DDRRPHY CAS Enable Phase2                                |
| DFI_ACT_N_P2             | 1            | DDRRPHY ACT Phase2                                       |
| DFI_WE_N_P2              | 1            | DDRRPHY Write Enable Phase2                              |
| DFI_BANK_P2              | 2:0          | DDRRPHY Bank Address Phase2                              |
| DFI_BG_P2                | 2:0          | DDRRPHY Bank Group Phase2                                |
| DFI_CID_P2               | 1            | DDRRPHY Chip ID Phase2                                   |
| DFI_CS_N_P2              | 1:0          | DDRRPHY Chip Select Phase2                               |
| DFI_CKE_P2               | 1:0          | DDRRPHY Clock Enable Phase2                              |

**Table 123: Input Ports (Continued)**

| Name             | Range | Description                          |
|------------------|-------|--------------------------------------|
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3   | 19:0  | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_RAS_N_P3     | 1     | DDRPHY RAS Enable Phase3             |
| DFI_CAS_N_P3     | 1     | DDRPHY CAS Enable Phase3             |
| DFI_ACT_N_P3     | 1     | DDRPHY ACT Phase3                    |
| DFI_WE_N_P3      | 1     | DDRPHY Write Enable Phase3           |
| DFI_BANK_P3      | 2:0   | DDRPHY Bank Address Phase3           |
| DFI_BG_P3        | 2:0   | DDRPHY Bank Group Phase3             |
| DFI_CID_P3       | 1     | DDRPHY Chip ID Phase3                |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                    |

**Table 124: Output Ports**

| Name                 | Range | Description                       |
|----------------------|-------|-----------------------------------|
| DFI_RDDATA0          | 63:0  | DDRPHY Read Data                  |
| DFI_RDDATA1          | 63:0  | DDRPHY Read Data                  |
| DFI_RDDATA_DBI0      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI1      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_VALID0    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID1    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1     | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0   | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1     | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1     | DDRPHY Initialization Complete    |
| AXB_READY            | 1     | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0  | AXB bus interface: Read Data      |

**Table 124: Output Ports (Continued)**

| <b>Name</b>         | <b>Range</b> | <b>Description</b>                                                                                    |
|---------------------|--------------|-------------------------------------------------------------------------------------------------------|
| PHY_OUT_DQ0         | 7:0          | DQ data bus from PHY                                                                                  |
| PHY_OUT_DQ1         | 7:0          | DQ data bus from PHY                                                                                  |
| PHY_OUT_DQ_OEN0     | 7:0          | Enable for DQ output from PHY                                                                         |
| PHY_OUT_DQ_OEN1     | 7:0          | Enable for DQ output from PHY                                                                         |
| PHY_OUT_DM0         | 1            | DM (Data Mask) from PHY                                                                               |
| PHY_OUT_DM1         | 1            | DM (Data Mask) from PHY                                                                               |
| PHY_OUT_DM_OEN0     | 1            | Enable for DM output from PHY                                                                         |
| PHY_OUT_DM_OEN1     | 1            | Enable for DM output from PHY                                                                         |
| PHY_OUT_DQS0        | 1            | DQS data strobe from PHY                                                                              |
| PHY_OUT_DQS1        | 1            | DQS data strobe from PHY                                                                              |
| PHY_OUT_DQS_OEN0    | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN1    | 1            | Enable for DQS output from PHY                                                                        |
| DQ_READ0            | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ1            | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DM_READ0            | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ1            | 1            | FPGA IO ODT enable for data mask                                                                      |
| DQS_READ0           | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ1           | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQ_IE0              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE1              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| VREF_OUTPUT_ENABLE0 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_OUTPUT_ENABLE1 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_VALUE0         | 6:0          | Vref value set for each byte lane - width can be customized                                           |

**Table 124: Output Ports (Continued)**

| Name          | Range | Description                                                 |
|---------------|-------|-------------------------------------------------------------|
| VREF_VALUE1   | 6:0   | Vref value set for each byte lane - width can be customized |
| CA_OUT_CLK0   | 1     | DRAM clock output from PHY                                  |
| CA_OUT_CLK1   | 1     | DRAM clock output from PHY                                  |
| CA_OUT_RST_N  | 1     | DRAM reset output from PHY                                  |
| CA_OUT_A0     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A1     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A2     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A3     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A4     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A5     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A6     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A7     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A8     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A9     | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A10    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A11    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A12    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A13    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A14    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A15    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_A16    | 1     | DRAM MA output from PHY                                     |
| CA_OUT_CS_N   | 1:0   | DRAM CS_N output from PHY                                   |
| CA_OUT_CKE    | 1:0   | DRAM CKE output from PHY                                    |
| CA_OUT_BA2    | 1     | DRAM BA output from PHY                                     |
| CA_OUT_BA1    | 1     | DRAM BA output from PHY                                     |
| CA_OUT_BA0    | 1     | DRAM BA output from PHY                                     |
| CA_OUT_RAS_N  | 1     | DRAM RAS_N output from PHY                                  |
| CA_OUT_CAS_N  | 1     | DRAM CAS_N output from PHY                                  |
| CA_OUT_WE_N   | 1     | DRAM WE_N output from PHY                                   |
| CA_OUT_ODT    | 1:0   | DRAM ODT output from PHY                                    |
| CA_OUT_CS_OEN | 1     | DDR5 mode register bit                                      |

**Table 124: Output Ports (Continued)**

| Name                                | Range | Description                                                                                   |
|-------------------------------------|-------|-----------------------------------------------------------------------------------------------|
| CA_OUT_CLK_OEN0                     | 1     | Disable MCLK output                                                                           |
| CA_OUT_CLK_OEN1                     | 1     | Disable MCLK output                                                                           |
| VREF_CA_VALUE                       | 6:0   | VREF value driven for CA IOs                                                                  |
| UPDATE                              | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV<br>R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE        | 1     | VREF output enable                                                                            |
| ADRCtrl_DRIVERS_OEN                 | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 125: Parameters**

| Name          | Values                                                   | Type                                                                                                        |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| RATE          | "HALF" (default)<br>"FULL"                               | DDR rate                                                                                                    |
| PROTOCOL      | "DDR3L" (default)<br>"DDR4"                              | DDR protocol                                                                                                |
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor<br>(virtual attribute)                                                                    |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY16E

Supports LPDDR4 protocol with X16 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

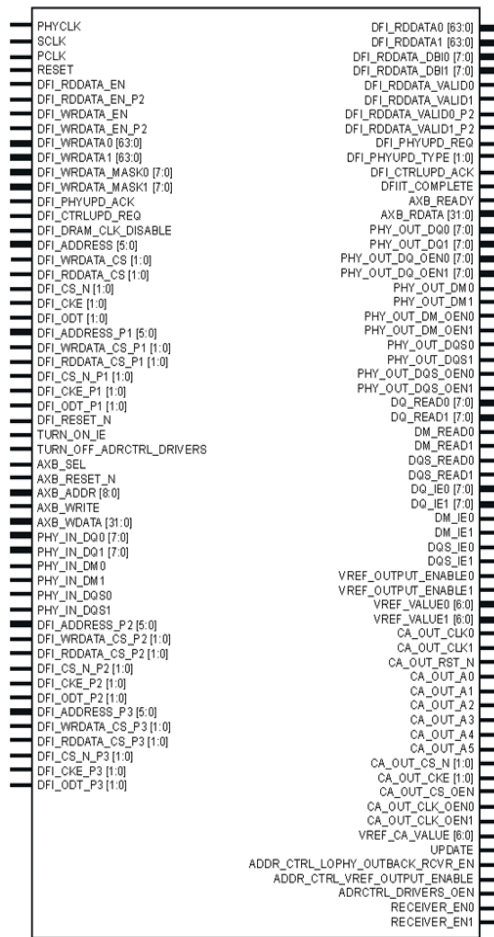


Table 126: Input Ports

| Name             | Range | Description                   |
|------------------|-------|-------------------------------|
| PHYCLK           | 1     | DDR Clock                     |
| SCLK             | 1     | Primary Clock                 |
| PCLK             | 1     | AXB Bus Interface Clock       |
| RESET            | 1     | Reset                         |
| DFI_RDDATA_EN    | 1     | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2 | 1     | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN    | 1     | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2 | 1     | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA1      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA_MASK0 | 7:0   | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK1 | 7:0   | DDRPHY Write Data Mask        |

**Table 126: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_PHYUPD_ACK           | 1            | DDRPHY PHY update acknowledge                            |
| DFI_CTRLUPD_REQ          | 1            | DDRPHY PHY update request                                |
| DFI_DRAM_CLK_DISABLE     | 1            | DRAM clock disable                                       |
| DFI_ADDRESS              | 5:0          | DDRPHY address                                           |
| DFI_WRDATA_CS            | 1:0          | DDRPHY Write Data Chip Select                            |
| DFI_RDDATA_CS            | 1:0          | DDRPHY Read Data Chip Select                             |
| DFI_CS_N                 | 1:0          | DDRPHY Chip Select                                       |
| DFI_CKE                  | 1:0          | DDRPHY Clock Enable                                      |
| DFI_ODT                  | 1:0          | DDRPHY ODT                                               |
| DFI_ADDRESS_P1           | 5:0          | DDRPHY Phase1 Address                                    |
| DFI_WRDATA_CS_P1         | 1:0          | DDRPHY Write Data Chip Select Phase1                     |
| DFI_RDDATA_CS_P1         | 1:0          | DDRPHY Read Data Chip Select Phase1                      |
| DFI_CS_N_P1              | 1:0          | DDRPHY Chip Select Phase1                                |
| DFI_CKE_P1               | 1:0          | DDRPHY Clock Enable Phase1                               |
| DFI_ODT_P1               | 1:0          | DDRPHY ODT Phase1                                        |
| DFI_RESET_N              | 1            | DDRPHY DFI Reset                                         |
| TURN_ON_IE               | 1            | DDRPHY Enable                                            |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |
| PHY_IN_DQ0               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ1               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DM0               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM1               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DQS0              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS1              | 1            | DQS data strobe to PHY                                   |
| DFI_ADDRESS_P2           | 5:0          | DDRPHY Phase2 Address                                    |
| DFI_WRDATA_CS_P2         | 1:0          | DDRPHY Write Data Chip Select Phase2                     |



**Table 126: Input Ports (Continued)**

| Name             | Range | Description                          |
|------------------|-------|--------------------------------------|
| DFI_RDDATA_CS_P2 | 1:0   | DDRPHY Read Data Chip Select Phase2  |
| DFI_CS_N_P2      | 1:0   | DDRPHY Chip Select Phase2            |
| DFI_CKE_P2       | 1:0   | DDRPHY Clock Enable Phase2           |
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3   | 19:0  | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                    |

**Table 127: Output Ports**

| Name                 | Range | Description                       |
|----------------------|-------|-----------------------------------|
| DFI_RDDATA0          | 63:0  | DDRPHY Read Data                  |
| DFI_RDDATA1          | 63:0  | DDRPHY Read Data                  |
| DFI_RDDATA_DBI0      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI1      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_VALID0    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID1    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1     | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0   | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1     | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1     | DDRPHY Initialization Complete    |
| AXB_READY            | 1     | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0  | AXB bus interface: Read Data      |
| PHY_OUT_DQ0          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ1          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ_OEN0      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN1      | 7:0   | Enable for DQ output from PHY     |

**Table 127: Output Ports (Continued)**

| <b>Name</b>         | <b>Range</b> | <b>Description</b>                                                                                    |
|---------------------|--------------|-------------------------------------------------------------------------------------------------------|
| PHY_OUT_DM0         | 1            | DM (Data Mask) from PHY                                                                               |
| PHY_OUT_DM1         | 1            | DM (Data Mask) from PHY                                                                               |
| PHY_OUT_DM_OEN0     | 1            | Enable for DM output from PHY                                                                         |
| PHY_OUT_DM_OEN1     | 1            | Enable for DM output from PHY                                                                         |
| PHY_OUT_DQS0        | 1            | DQS data strobe from PHY                                                                              |
| PHY_OUT_DQS1        | 1            | DQS data strobe from PHY                                                                              |
| PHY_OUT_DQS_OEN0    | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN1    | 1            | Enable for DQS output from PHY                                                                        |
| DQ_READ0            | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ1            | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DM_READ0            | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ1            | 1            | FPGA IO ODT enable for data mask                                                                      |
| DQS_READ0           | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ1           | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQ_IE0              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE1              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| VREF_OUTPUT_ENABLE0 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_OUTPUT_ENABLE1 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_VALUE0         | 6:0          | Vref value set for each byte lane - width can be customized                                           |
| VREF_VALUE1         | 6:0          | Vref value set for each byte lane - width can be customized                                           |
| CA_OUT_CLK0         | 1            | DRAM clock output from PHY                                                                            |
| CA_OUT_CLK1         | 1            | DRAM clock output from PHY                                                                            |

**Table 127: Output Ports (Continued)**

| Name                             | Range | Description                                                                                   |
|----------------------------------|-------|-----------------------------------------------------------------------------------------------|
| CA_OUT_RST_N                     | 1     | DRAM reset output from PHY                                                                    |
| CA_OUT_A0                        | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A1                        | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A2                        | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A3                        | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A4                        | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A5                        | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_CS_N                      | 1:0   | DRAM CS_N output from PHY                                                                     |
| CA_OUT_CKE                       | 1:0   | DRAM CKE output from PHY                                                                      |
| CA_OUT_CS_OEN                    | 1     | DDR5 mode register bit                                                                        |
| CA_OUT_CLK_OEN0                  | 1     | Disable MCLK output                                                                           |
| CA_OUT_CLK_OEN1                  | 1     | Disable MCLK output                                                                           |
| VREF_CA_VALUE                    | 6:0   | VREF value driven for CA IOs                                                                  |
| UPDATE                           | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV_R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE     | 1     | VREF output enable                                                                            |
| ADRCtrl_DRIVERS_OEN              | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 128: Parameters**

| Name     | Values                     | Description  |
|----------|----------------------------|--------------|
| RATE     | "HALF" (default)<br>"FULL" | DDR rate     |
| PROTOCOL | "LPDDR4" (default)         | DDR protocol |

**Table 128: Parameters (Continued)**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY32D

Supports DDR4 and DDR3L protocols with X32 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                             |                                 |
|-----------------------------|---------------------------------|
| PHYCLK                      | DFI_RDDATA [0-3] [63:0]         |
| SCLK                        | DFI_RDDATA_DBI [0-3] [7:0]      |
| PCLK                        | DFI_RDDATA_VALID [0-3]          |
| RESET                       | DFI_RDDATA_VALID_P2 [0-3]       |
| DFI_RDDATA_EN [0-2]         | DFI_PHYUPD_REQ                  |
| DFI_WRDATA_EN [0-2]         | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA [0-3] [63:0]     | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_MASK [0-3] [7:0] | DFIIT_COMPLETE                  |
| DFI_PHYUPD_ACK              | AXB_READY                       |
| DFI_CTRLUPD_REQ             | AXB_RDATA [31:0]                |
| DFI_DRAM_CLK_DISABLE        | PHY_OUT_DQ [0-3] [7:0]          |
| DFI_ADDRESS [19:0]          | PHY_OUT_DQ_OEN [0-3] [7:0]      |
| DFI_WRDATA_CS [1:0]         | PHY_OUT_DM [0-3]                |
| DFI_RDDATA_CS [1:0]         | PHY_OUT_DM_OEN [0-3]            |
| DFI_RAS_N                   | PHY_OUT_DQS [0-3]               |
| DFI_CAS_N                   | PHY_OUT_DQS_OEN [0-3]           |
| DFI_ACT_N                   | DQ_READ [0-3] [7:0]             |
| DFI_WE_N                    | DM_READ [0-3]                   |
| DFI_BANK [2:0]              | DQS_READ [0-3]                  |
| DFI_BG [2:0]                | DQ_IE [0-3] [7:0]               |
| DFI_CID                     | DM_IE [0-3]                     |
| DFI_CS_N [1:0]              | DQS_IE [0-3]                    |
| DFI_CKE [1:0]               | VREF_OUTPUT_ENABLE [0-3]        |
| DFI_ODT [1:0]               | VREF_VALUE [0-3] [6:0]          |
| DFI_ADDRESS_P1 [19:0]       | CA_OUT_CLK [0-1]                |
| DFI_WRDATA_CS_P1 [1:0]      | CA_OUT_RST_N                    |
| DFI_RDDATA_CS_P1 [1:0]      | CA_OUT_A [0-16]                 |
| DFI_RAS_N_P1                | CA_OUT_CS_N [1:0]               |
| DFI_CAS_N_P1                | CA_OUT_CKE [1:0]                |
| DFI_ACT_N_P1                | CA_OUT_BA [0-2]                 |
| DFI_WE_N_P1                 | CA_OUT_RAS_N                    |
| DFI_BANK_P1 [2:0]           | CA_OUT_CAS_N                    |
| DFI_BG_P1 [2:0]             | CA_OUT_WE_N                     |
| DFI_CID_P1                  | CA_OUT_ODT [1:0]                |
| DFI_CS_N_P1 [1:0]           | CA_OUT_CS_OEN                   |
| DFI_CKE_P1 [1:0]            | CA_OUT_CLK_OEN [0-1]            |
| DFI_ODT_P1 [1:0]            | VREF_CA_VALUE [6:0]             |
| DFI_RESET_N                 | UPDATE                          |
| TURN_ON_IE                  | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| TURN_OFF_ADDRCTRL_DRIVERS   | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| AXB_SEL                     | ADDRCTRL_DRIVERS_OEN            |
| AXB_RESET_N                 | RECEIVER_EN [0-3]               |
| AXB_ADDR [8:0]              |                                 |
| AXB_WRITE                   |                                 |
| AXB_WDATA [31:0]            |                                 |
| PHY_IN_DQ [0-3] [7:0]       |                                 |
| PHY_IN_DM [0-3]             |                                 |
| PHY_IN_DQS [0-3]            |                                 |
| DFI_ADDRESS_P2 [19:0]       |                                 |
| DFI_WRDATA_CS_P2 [1:0]      |                                 |
| DFI_RDDATA_CS_P2 [1:0]      |                                 |
| DFI_RAS_N_P2                |                                 |
| DFI_CAS_N_P2                |                                 |
| DFI_ACT_N_P2                |                                 |
| DFI_WE_N_P2                 |                                 |
| DFI_BANK_P2 [2:0]           |                                 |
| DFI_BG_P2 [2:0]             |                                 |
| DFI_CID_P2                  |                                 |
| DFI_CS_N_P2 [1:0]           |                                 |
| DFI_CKE_P2 [1:0]            |                                 |

Table 129: Input Ports

| Name             | Range | Description                   |
|------------------|-------|-------------------------------|
| PHYCLK           | 1     | DDR Clock                     |
| SCLK             | 1     | Primary Clock                 |
| PCLK             | 1     | AXB Bus Interface Clock       |
| RESET            | 1     | Reset                         |
| DFI_RDDATA_EN    | 1     | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2 | 1     | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN    | 1     | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2 | 1     | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA1      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA2      | 63:0  | DDRPHY Write Data             |

**Table 129: Input Ports (Continued)**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>                   |
|----------------------|--------------|--------------------------------------|
| DFI_WRDATA3          | 63:0         | DDRPHY Write Data                    |
| DFI_WRDATA_MASK0     | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK1     | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK2     | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK3     | 7:0          | DDRPHY Write Data Mask               |
| DFI_PHYUPD_ACK       | 1            | DDRPHY PHY update acknowledge        |
| DFI_CTRLUPD_REQ      | 1            | DDRPHY PHY update request            |
| DFI_DRAM_CLK_DISABLE | 1            | DRAM clock disable                   |
| DFI_ADDRESS          | 19:0         | DDRPHY address                       |
| DFI_WRDATA_CS        | 1:0          | DDRPHY Write Data Chip Select        |
| DFI_RDDATA_CS        | 1:0          | DDRPHY Read Data Chip Select         |
| DFI_RAS_N            | 1            | DDRPHY RAS Enable                    |
| DFI_CAS_N            | 1            | DDRPHY CAS Enable                    |
| DFI_ACT_N            | 1            | DDRPHY ACT                           |
| DFI_WE_N             | 1            | DDRPHY Write Enable                  |
| DFI_BANK             | 2:0          | DDRPHY Bank Address                  |
| DFI_BG               | 2:0          | DDRPHY Bank Group                    |
| DFI_CID              | 1            | DDRPHY Chip ID                       |
| DFI_CS_N             | 1:0          | DDRPHY Chip Select                   |
| DFI_CKE              | 1:0          | DDRPHY Clock Enable                  |
| DFI_ODT              | 1:0          | DDRPHY ODT                           |
| DFI_ADDRESS_P1       | 19:0         | DDRPHY Phase1 Address                |
| DFI_WRDATA_CS_P1     | 1:0          | DDRPHY Write Data Chip Select Phase1 |
| DFI_RDDATA_CS_P1     | 1:0          | DDRPHY Read Data Chip Select Phase1  |
| DFI_RAS_N_P1         | 1            | DDRPHY RAS Enable Phase1             |
| DFI_CAS_N_P1         | 1            | DDRPHY CAS Enable Phase1             |
| DFI_ACT_N_P1         | 1            | DDRPHY ACT Phase1                    |
| DFI_WE_N_P1          | 1            | DDRPHY Write Enable Phase1           |
| DFI_BANK_P1          | 2:0          | DDRPHY Bank Address Phase1           |
| DFI_BG_P1            | 2:0          | DDRPHY Bank Group Phase1             |
| DFI_CID_P1           | 1            | DDRPHY Chip ID Phase1                |
| DFI_CS_N_P1          | 1:0          | DDRPHY Chip Select Phase1            |

**Table 129: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_CKE_P1               | 1:0          | DDRPHY Clock Enable Phase1                               |
| DFI_ODT_P1               | 1:0          | DDRPHY ODT Phase1                                        |
| DFI_RESET_N              | 1            | DDRPHY DFI Reset                                         |
| TURN_ON_IE               | 1            | DDRPHY Enable                                            |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |
| PHY_IN_DQ0               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ1               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ2               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ3               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DM0               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM1               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM2               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM3               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DQS0              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS1              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS2              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS3              | 1            | DQS data strobe to PHY                                   |
| DFI_ADDRESS_P2           | 19:0         | DDRPHY Phase2 Address                                    |
| DFI_WRDATA_CS_P2         | 1:0          | DDRPHY Write Data Chip Select Phase2                     |
| DFI_RDDATA_CS_P2         | 1:0          | DDRPHY Read Data Chip Select Phase2                      |
| DFI_RAS_N_P2             | 1            | DDRPHY RAS Enable Phase2                                 |
| DFI_CAS_N_P2             | 1            | DDRPHY CAS Enable Phase2                                 |
| DFI_ACT_N_P2             | 1            | DDRPHY ACT Phase2                                        |
| DFI_WE_N_P2              | 1            | DDRPHY Write Enable Phase2                               |
| DFI_BANK_P2              | 2:0          | DDRPHY Bank Address Phase2                               |
| DFI_BG_P2                | 2:0          | DDRPHY Bank Group Phase2                                 |

**Table 129: Input Ports (Continued)**

| Name             | Range | Description                          |
|------------------|-------|--------------------------------------|
| DFI_CID_P2       | 1     | DDRPHY Chip ID Phase2                |
| DFI_CS_N_P2      | 1:0   | DDRPHY Chip Select Phase2            |
| DFI_CKE_P2       | 1:0   | DDRPHY Clock Enable Phase2           |
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3   | 19:0  | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_RAS_N_P3     | 1     | DDRPHY RAS Enable Phase3             |
| DFI_CAS_N_P3     | 1     | DDRPHY CAS Enable Phase3             |
| DFI_ACT_N_P3     | 1     | DDRPHY ACT Phase3                    |
| DFI_WE_N_P3      | 1     | DDRPHY Write Enable Phase3           |
| DFI_BANK_P3      | 2:0   | DDRPHY Bank Address Phase3           |
| DFI_BG_P3        | 2:0   | DDRPHY Bank Group Phase3             |
| DFI_CID_P3       | 1     | DDRPHY Chip ID Phase3                |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                    |

**Table 130: Output Ports**

| Name              | Range | Description            |
|-------------------|-------|------------------------|
| DFI_RDDATA0       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA1       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA2       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA3       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA_DBI0   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI1   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI2   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI3   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_VALID0 | 1     | DDRPHY Read Data Valid |
| DFI_RDDATA_VALID1 | 1     | DDRPHY Read Data Valid |
| DFI_RDDATA_VALID2 | 1     | DDRPHY Read Data Valid |



**Table 130: Output Ports (Continued)**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>                |
|----------------------|--------------|-----------------------------------|
| DFI_RDDATA_VALID3    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID2_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID3_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1            | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0          | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1            | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1            | DDRPHY Initialization Complete    |
| AXB_READY            | 1            | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0         | AXB bus interface: Read Data      |
| PHY_OUT_DQ0          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ1          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ2          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ3          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ_OEN0      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN1      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN2      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN3      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DM0          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM1          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM2          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM3          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM_OEN0      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DM_OEN1      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DM_OEN2      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DM_OEN3      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DQS0         | 1            | DQS data strobe from PHY          |
| PHY_OUT_DQS1         | 1            | DQS data strobe from PHY          |
| PHY_OUT_DQS2         | 1            | DQS data strobe from PHY          |
| PHY_OUT_DQS3         | 1            | DQS data strobe from PHY          |
| PHY_OUT_DQS_OEN0     | 1            | Enable for DQS output from PHY    |

**Table 130: Output Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                                                                                    |
|------------------|--------------|-------------------------------------------------------------------------------------------------------|
| PHY_OUT_DQS_OEN1 | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN2 | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN3 | 1            | Enable for DQS output from PHY                                                                        |
| DQ_READ0         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ1         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ2         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ3         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DM_READ0         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ1         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ2         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ3         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DQS_READ0        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ1        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ2        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ3        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQ_IE0           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE1           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE2           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE3           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE2           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE3           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0          | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1          | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE2          | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |

**Table 130: Output Ports (Continued)**

| <b>Name</b>         | <b>Range</b> | <b>Description</b>                                                 |
|---------------------|--------------|--------------------------------------------------------------------|
| DQS_IE3             | 1            | Optional dynamic input enable for DQS IO receivers during reads    |
| VREF_OUTPUT_ENABLE0 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE1 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE2 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE3 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_VALUE0         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE1         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE2         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE3         | 6:0          | Vref value set for each byte lane - width can be customized        |
| CA_OUT_CLK0         | 1            | DRAM clock output from PHY                                         |
| CA_OUT_CLK1         | 1            | DRAM clock output from PHY                                         |
| CA_OUT_RST_N        | 1            | DRAM reset output from PHY                                         |
| CA_OUT_A0           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A1           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A2           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A3           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A4           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A5           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A6           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A7           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A8           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A9           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A10          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A11          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A12          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A13          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A14          | 1            | DRAM MA output from PHY                                            |

**Table 130: Output Ports (Continued)**

| Name                                | Range | Description                                                                                   |
|-------------------------------------|-------|-----------------------------------------------------------------------------------------------|
| CA_OUT_A15                          | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A16                          | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_CS_N                         | 1:0   | DRAM CS_N output from PHY                                                                     |
| CA_OUT_CKE                          | 1:0   | DRAM CKE output from PHY                                                                      |
| CA_OUT_BA2                          | 1     | DRAM BA output from PHY                                                                       |
| CA_OUT_BA1                          | 1     | DRAM BA output from PHY                                                                       |
| CA_OUT_BA0                          | 1     | DRAM BA output from PHY                                                                       |
| CA_OUT_RAS_N                        | 1     | DRAM RAS_N output from PHY                                                                    |
| CA_OUT_CAS_N                        | 1     | DRAM CAS_N output from PHY                                                                    |
| CA_OUT_WE_N                         | 1     | DRAM WE_N output from PHY                                                                     |
| CA_OUT_ODT                          | 1:0   | DRAM ODT output from PHY                                                                      |
| CA_OUT_CS_OEN                       | 1     | DDR5 mode register bit                                                                        |
| CA_OUT_CLK_OEN0                     | 1     | Disable mclk output                                                                           |
| CA_OUT_CLK_OEN1                     | 1     | Disable mclk output                                                                           |
| VREF_CA_VALUE                       | 6:0   | VREF value driven for CA IOs                                                                  |
| UPDATE                              | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV<br>R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE        | 1     | VREF output enable                                                                            |
| ADRCTRL_DRIVERS_OEN                 | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN2                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN3                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 131: Parameters**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| RATE          | "HALF" (default)<br>"FULL"                               | DDR rate                                                                                                    |
| PROTOCOL      | "DDR3L" (default)<br>"DDR4"                              | DDR protocol                                                                                                |
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY32E

Supports LPDDR4 protocol with X32 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                             |                                 |
|-----------------------------|---------------------------------|
| PHYCLK                      | DFI_RDDATA [0-3] [63:0]         |
| SCLK                        | DFI_RDDATA_DBI [0-3] [7:0]      |
| PCLK                        | DFI_RDDATA_VALID [0-3]          |
| RESET                       | DFI_RDDATA_VALID_P2 [0-3]       |
| DFI_RDDATA_EN               | DFI_PHYUPD_REQ                  |
| DFI_RDDATA_EN_P2            | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA_EN               | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_EN_P2            | DFIIT_COMPLETE                  |
| DFI_WRDATA [0-3] [63:0]     | AXB_READY                       |
| DFI_WRDATA_MASK [0-3] [7:0] | AXB_RDATA [31:0]                |
| DFI_PHYUPD_ACK              | PHY_OUT_DQ [0-3] [7:0]          |
| DFI_CTRLUPD_REQ             | PHY_OUT_DQ_OEN [0-3] [7:0]      |
| DFI_DRAM_CLK_DISABLE        | PHY_OUT_DM [0-3]                |
| DFI_ADDRESS [5:0]           | PHY_OUT_DM_OEN [0-3]            |
| DFI_WRDATA_CS [1:0]         | PHY_OUT_DQS [0-3]               |
| DFI_RDDATA_CS [1:0]         | PHY_OUT_DQS_OEN [0-3]           |
| DFI_CS_N [1:0]              | DQ_READ [0-3] [7:0]             |
| DFI_CKE [1:0]               | DM_READ [0-3]                   |
| DFI_ODT [1:0]               | DQS_READ [0-3]                  |
| DFI_ADDRESS_P1 [5:0]        | DQ_IE [0-3] [7:0]               |
| DFI_WRDATA_CS_P1 [1:0]      | DM_IE [0-3]                     |
| DFI_RDDATA_CS_P1 [1:0]      | DQS_IE [0-3]                    |
| DFI_CS_N_P1 [1:0]           | VREF_OUTPUT_ENABLE [0-3]        |
| DFI_CKE_P1 [1:0]            | VREF_VALUE [0-3] [6:0]          |
| DFI_ODT_P1 [1:0]            | CA_OUT_CLK [0-1]                |
| DFI_RESET_N                 | CA_OUT_RST_N                    |
| TURN_ON_IE                  | CA_OUT_A [0-16]                 |
| TURN_OFF_ADRCTRL_DRIVERS    | CA_OUT_CS_N [1:0]               |
| AXB_SEL                     | CA_OUT_CKE [1:0]                |
| AXB_RESET_N                 | CA_OUT_BA [0-2]                 |
| AXB_ADDR [8:0]              | CA_OUT_RAS_N                    |
| AXB_WRITE                   | CA_OUT_CAS_N                    |
| AXB_WDATA [31:0]            | CA_OUT_WE_N                     |
| PHY_IN_DQ [0-3] [7:0]       | CA_OUT_ODT [1:0]                |
| PHY_IN_DM [0-3]             | CA_OUT_CS_OEN                   |
| PHY_IN_DQS [0-3]            | CA_OUT_CLK_OEN [0-1]            |
| DFI_ADDRESS_P2 [5:0]        | VREF_CA_VALUE [6:0]             |
| DFI_WRDATA_CS_P2 [1:0]      | UPDATE                          |
| DFI_RDDATA_CS_P2 [1:0]      | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| DFI_CS_N_P2 [1:0]           | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| DFI_CKE_P2 [1:0]            | ADRCTRL_DRIVERS_OEN             |
| DFI_ODT_P2 [1:0]            | RECEIVER_EN [0-3]               |
| DFI_ADDRESS_P3 [5:0]        |                                 |
| DFI_WRDATA_CS_P3 [1:0]      |                                 |
| DFI_RDDATA_CS_P3 [1:0]      |                                 |
| DFI_CS_N_P3 [1:0]           |                                 |
| DFI_CKE_P3 [1:0]            |                                 |
| DFI_ODT_P3 [1:0]            |                                 |

Table 132: Input Ports

| Name             | Range | Description                   |
|------------------|-------|-------------------------------|
| PHYCLK           | 1     | DDR Clock                     |
| SCLK             | 1     | Primary Clock                 |
| PCLK             | 1     | AXB Bus Interface Clock       |
| RESET            | 1     | Reset                         |
| DFI_RDDATA_EN    | 1     | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2 | 1     | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN    | 1     | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2 | 1     | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA1      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA2      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA3      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA_MASK0 | 7:0   | DDRPHY Write Data Mask        |

**Table 132: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_WRDATA_MASK1         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK2         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK3         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_PHYUPD_ACK           | 1            | DDRPHY PHY update acknowledge                            |
| DFI_CTRLUPD_REQ          | 1            | DDRPHY PHY update request                                |
| DFI_DRAM_CLK_DISABLE     | 1            | DRAM clock disable                                       |
| DFI_ADDRESS              | 5:0          | DDRPHY address                                           |
| DFI_WRDATA_CS            | 1:0          | DDRPHY Write Data Chip Select                            |
| DFI_RDDATA_CS            | 1:0          | DDRPHY Read Data Chip Select                             |
| DFI_CS_N                 | 1:0          | DDRPHY Chip Select                                       |
| DFI_CKE                  | 1:0          | DDRPHY Clock Enable                                      |
| DFI_ODT                  | 1:0          | DDRPHY ODT                                               |
| DFI_ADDRESS_P1           | 5:0          | DDRPHY Phase1 Address                                    |
| DFI_WRDATA_CS_P1         | 1:0          | DDRPHY Write Data Chip Select Phase1                     |
| DFI_RDDATA_CS_P1         | 1:0          | DDRPHY Read Data Chip Select Phase1                      |
| DFI_CS_N_P1              | 1:0          | DDRPHY Chip Select Phase1                                |
| DFI_CKE_P1               | 1:0          | DDRPHY Clock Enable Phase1                               |
| DFI_ODT_P1               | 1:0          | DDRPHY ODT Phase1                                        |
| DFI_RESET_N              | 1            | DDRPHY DFI Reset                                         |
| TURN_ON_IE               | 1            | DDRPHY Enable                                            |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |
| PHY_IN_DQ0               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ1               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ2               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ3               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DM0               | 1            | DBI (Data Bus Inversion enable) to PHY                   |

**Table 132: Input Ports (Continued)**

| Name             | Range | Description                            |
|------------------|-------|----------------------------------------|
| PHY_IN_DM1       | 1     | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM2       | 1     | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM3       | 1     | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DQS0      | 1     | DQS data strobe to PHY                 |
| PHY_IN_DQS1      | 1     | DQS data strobe to PHY                 |
| PHY_IN_DQS2      | 1     | DQS data strobe to PHY                 |
| PHY_IN_DQS3      | 1     | DQS data strobe to PHY                 |
| DFI_ADDRESS_P2   | 5:0   | DDRPHY Phase2 Address                  |
| DFI_WRDATA_CS_P2 | 1:0   | DDRPHY Write Data Chip Select Phase2   |
| DFI_RDDATA_CS_P2 | 1:0   | DDRPHY Read Data Chip Select Phase2    |
| DFI_CS_N_P2      | 1:0   | DDRPHY Chip Select Phase2              |
| DFI_CKE_P2       | 1:0   | DDRPHY Clock Enable Phase2             |
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                      |
| DFI_ADDRESS_P3   | 5:0   | DDRPHY Phase3 Address                  |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3   |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3              |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3             |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                      |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3    |

**Table 133: Output Ports**

| Name              | Range | Description            |
|-------------------|-------|------------------------|
| DFI_RDDATA0       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA1       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA2       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA3       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA_DBI0   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI1   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI2   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI3   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_VALID0 | 1     | DDRPHY Read Data Valid |



**Table 133: Output Ports (Continued)**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>                |
|----------------------|--------------|-----------------------------------|
| DFI_RDDATA_VALID1    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID2    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID3    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID2_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID3_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1            | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0          | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1            | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1            | DDRPHY Initialization Complete    |
| AXB_READY            | 1            | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0         | AXB bus interface: Read Data      |
| PHY_OUT_DQ0          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ1          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ2          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ3          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ_OEN0      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN1      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN2      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN3      | 7:0          | Enable for DQ output from PHY     |
| PHY_OUT_DM0          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM1          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM2          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM3          | 1            | DM (Data Mask) from PHY           |
| PHY_OUT_DM_OEN0      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DM_OEN1      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DM_OEN2      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DM_OEN3      | 1            | Enable for DM output from PHY     |
| PHY_OUT_DQS0         | 1            | DQS data strobe from PHY          |
| PHY_OUT_DQS1         | 1            | DQS data strobe from PHY          |
| PHY_OUT_DQS2         | 1            | DQS data strobe from PHY          |

**Table 133: Output Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                                                                                    |
|------------------|--------------|-------------------------------------------------------------------------------------------------------|
| PHY_OUT_DQS3     | 1            | DQS data strobe from PHY                                                                              |
| PHY_OUT_DQS_OEN0 | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN1 | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN2 | 1            | Enable for DQS output from PHY                                                                        |
| PHY_OUT_DQS_OEN3 | 1            | Enable for DQS output from PHY                                                                        |
| DQ_READ0         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ1         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ2         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DQ_READ3         | 7:0          | FPGA IO ODT Enable For Data                                                                           |
| DM_READ0         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ1         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ2         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DM_READ3         | 1            | FPGA IO ODT enable for data mask                                                                      |
| DQS_READ0        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ1        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ2        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ3        | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQ_IE0           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE1           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE2           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE3           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE2           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE3           | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0          | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |

**Table 133: Output Ports (Continued)**

| Name                | Range | Description                                                        |
|---------------------|-------|--------------------------------------------------------------------|
| DQS_IE1             | 1     | Optional dynamic input enable for DQS IO receivers during reads    |
| DQS_IE2             | 1     | Optional dynamic input enable for DQS IO receivers during reads    |
| DQS_IE3             | 1     | Optional dynamic input enable for DQS IO receivers during reads    |
| VREF_OUTPUT_ENABLE0 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE1 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE2 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE3 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_VALUE0         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE1         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE2         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE3         | 6:0   | Vref value set for each byte lane - width can be customized        |
| CA_OUT_CLK0         | 1     | DRAM clock output from PHY                                         |
| CA_OUT_CLK1         | 1     | DRAM clock output from PHY                                         |
| CA_OUT_RST_N        | 1     | DRAM reset output from PHY                                         |
| CA_OUT_A0           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A1           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A2           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A3           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A4           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A5           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_CS_N         | 1:0   | DRAM CS_N output from PHY                                          |
| CA_OUT_CKE          | 1:0   | DRAM CKE output from PHY                                           |
| CA_OUT_CS_OEN       | 1     | DDR5 mode register bit                                             |
| CA_OUT_CLK_OEN0     | 1     | Disable mclk output                                                |
| CA_OUT_CLK_OEN1     | 1     | Disable mclk output                                                |
| VREF_CA_VALUE       | 6:0   | VREF value driven for CA IOs                                       |

**Table 133: Output Ports (Continued)**

| Name                                | Range | Description                                                                                   |
|-------------------------------------|-------|-----------------------------------------------------------------------------------------------|
| UPDATE                              | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV<br>R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE        | 1     | VREF output enable                                                                            |
| ADRCTRL_DRIVERS_OEN                 | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN2                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN3                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 134: Parameters**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| RATE          | "HALF" (default)<br>"FULL"                               | DDR rate                                                                                                    |
| PROTOCOL      | "LPDDR4" (default)                                       | DDR protocol                                                                                                |
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY40D

Supports DDR4 and DDR3L protocols with X40 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                            |                                 |
|----------------------------|---------------------------------|
| PHYCLK                     | DFI_RDDATA[0-4] [63:0]          |
| SCLK                       | DFI_RDDATA_DBI[0-4] [7:0]       |
| PCLK                       | DFI_RDDATA_VALID [0-4]          |
| RESET                      | DFI_RDDATA_VALID_P2 [0-4]       |
| DFI_RDDATA_EN              | DFI_PHYUPD_REQ                  |
| DFI_RDDATA_EN_P2           | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA_EN              | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_EN_P2           | DFIIT_COMPLETE                  |
| DFI_WRDATA[0-4] [63:0]     | AXB_READY                       |
| DFI_WRDATA_MASK[0-4] [7:0] | AXB_RDATA[31:0]                 |
| DFI_PHYUPD_ACK             | PHY_OUT_DQ [0-4] [7:0]          |
| DFI_CTRLUPD_REQ            | PHY_OUT_DQ_OEN [0-4] [7:0]      |
| DFI_DRAM_CLK_DISABLE       | PHY_OUT_DM [0-4]                |
| DFI_ADDRESS [19:0]         | PHY_OUT_DM_OEN [0-4]            |
| DFI_WRDATA_CS [1:0]        | PHY_OUT_DQS [0-4]               |
| DFI_RDDATA_CS [1:0]        | PHY_OUT_DQS_OEN [0-4]           |
| DFI_RAS_N                  | DQ_READ [0-4] [7:0]             |
| DFI_CAS_N                  | DM_READ [0-4]                   |
| DFI_ACT_N                  | DQS_READ [0-4]                  |
| DFI_WE_N                   | DQ_IE [0-4] [7:0]               |
| DFI_BANK [2:0]             | DM_IE [0-4]                     |
| DFI_BG [2:0]               | DQS_IE [0-4]                    |
| DFI_CID                    | VREF_OUTPUT_ENABLE [0-4]        |
| DFI_CS_N [1:0]             | VREF_VALUE [0-4] [6:0]          |
| DFI_CKE [1:0]              | CA_OUT_CLK [0-1]                |
| DFI_ODT [1:0]              | CA_OUT_RST_N                    |
| DFI_ADDRESS_P1 [19:0]      | CA_OUT_A[0-16]                  |
| DFI_WRDATA_CS_P1 [1:0]     | CA_OUT_CS_N [1:0]               |
| DFI_RDDATA_CS_P1 [1:0]     | CA_OUT_CKE [1:0]                |
| DFI_RAS_N_P1               | CA_OUT_BA2                      |
| DFI_CAS_N_P1               | CA_OUT_BA1                      |
| DFI_ACT_N_P1               | CA_OUT_BA0                      |
| DFI_WE_N_P1                | CA_OUT_RAS_N                    |
| DFI_BANK_P1 [2:0]          | CA_OUT_CAS_N                    |
| DFI_BG_P1 [2:0]            | CA_OUT_WE_N                     |
| DFI_CID_P1                 | CA_OUT_ODT [1:0]                |
| DFI_CS_N_P1 [1:0]          | CA_OUT_CS_OEN                   |
| DFI_CKE_P1 [1:0]           | CA_OUT_CLK_OEN0                 |
| DFI_ODT_P1 [1:0]           | CA_OUT_CLK_OEN1                 |
| DFI_RESET_N                | VREF_CA_VALUE [6:0]             |
| TURN_ON_IE                 | UPDATE                          |
| TURN_OFF_ADRCTRL_DRIVERS   | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| AXB_SEL                    | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| AXB_RESET_N                | ADRCTRL_DRIVERS_OEN             |
| AXB_ADDR [8:0]             | RECEIVER_EN [0-4]               |
| AXB_WRITE                  |                                 |
| AXB_WDATA [31:0]           |                                 |
| PHY_IN_DQ [0-4] [7:0]      |                                 |
| PHY_IN_DM [0-4]            |                                 |
| PHY_IN_DQS [0-4]           |                                 |
| DFI_ADDRESS_P2 [19:0]      |                                 |
| DFI_WRDATA_CS_P2 [1:0]     |                                 |
| DFI_RDDATA_CS_P2 [1:0]     |                                 |
| DFI_RAS_N_P2               |                                 |
| DFI_CAS_N_P2               |                                 |
| DFI_ACT_N_P2               |                                 |
| DFI_WE_N_P2                |                                 |
| DFI_BANK_P2 [2:0]          |                                 |
| DFI_BG_P2 [2:0]            |                                 |
| DFI_CID_P2                 |                                 |
| DFI_CS_N_P2 [1:0]          |                                 |
| DFI_CKE_P2 [1:0]           |                                 |

Table 135: Input Ports

| Name             | Range | Description                   |
|------------------|-------|-------------------------------|
| PHYCLK           | 1     | DDR Clock                     |
| SCLK             | 1     | Primary Clock                 |
| PCLK             | 1     | AXB Bus Interface Clock       |
| RESET            | 1     | Reset                         |
| DFI_RDDATA_EN    | 1     | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2 | 1     | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN    | 1     | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2 | 1     | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA1      | 63:0  | DDRPHY Write Data             |

**Table 135: Input Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                   |
|------------------|--------------|--------------------------------------|
| DFI_WRDATA2      | 63:0         | DDRPHY Write Data                    |
| DFI_WRDATA3      | 63:0         | DDRPHY Write Data                    |
| DFI_WRDATA4      | 63:0         | DDRPHY Write Data                    |
| DFI_WRDATA_MASK0 | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK1 | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK2 | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK3 | 7:0          | DDRPHY Write Data Mask               |
| DFI_WRDATA_MASK4 | 7:0          | DDRPHY Write Data Mask               |
| DFI_PHYUPD_ACK   | 1            | DDRPHY PHY update acknowledge        |
| DFI_CTRLUPD_REQ  | 1            | DDRPHY PHY update request            |
| DFI_ADDRESS      | 19:0         | DDRPHY address                       |
| DFI_WRDATA_CS    | 1:0          | DDRPHY Write Data Chip Select        |
| DFI_RDDATA_CS    | 1:0          | DDRPHY Read Data Chip Select         |
| DFI_RAS_N        | 1            | DDRPHY RAS Enable                    |
| DFI_CAS_N        | 1            | DDRPHY CAS Enable                    |
| DFI_ACT_N        | 1            | DDRPHY ACT                           |
| DFI_WE_N         | 1            | DDRPHY Write Enable                  |
| DFI_BANK         | 2:0          | DDRPHY Bank Address                  |
| DFI_BG           | 2:0          | DDRPHY Bank Group                    |
| DFI_CID          | 1            | DDRPHY Chip ID                       |
| DFI_CS_N         | 1:0          | DDRPHY Chip Select                   |
| DFI_CKE          | 1:0          | DDRPHY Clock Enable                  |
| DFI_ODT          | 1:0          | DDRPHY ODT                           |
| DFI_ADDRESS_P1   | 19:0         | DDRPHY Phase1 Address                |
| DFI_WRDATA_CS_P1 | 1:0          | DDRPHY Write Data Chip Select Phase1 |
| DFI_RDDATA_CS_P1 | 1:0          | DDRPHY Read Data Chip Select Phase1  |
| DFI_RAS_N_P1     | 1            | DDRPHY RAS Enable Phase1             |
| DFI_CAS_N_P1     | 1            | DDRPHY CAS Enable Phase1             |
| DFI_ACT_N_P1     | 1            | DDRPHY ACT Phase1                    |
| DFI_WE_N_P1      | 1            | DDRPHY Write Enable Phase1           |
| DFI_BANK_P1      | 2:0          | DDRPHY Bank Address Phase1           |
| DFI_BG_P1        | 2:0          | DDRPHY Bank Group Phase1             |

**Table 135: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_CID_P1               | 1            | DDRRPHY Chip ID Phase1                                   |
| DFI_CS_N_P1              | 1:0          | DDRRPHY Chip Select Phase1                               |
| DFI_CKE_P1               | 1:0          | DDRRPHY Clock Enable Phase1                              |
| DFI_ODT_P1               | 1:0          | DDRRPHY ODT Phase1                                       |
| DFI_RESET_N              | 1            | DDRRPHY DFI Reset                                        |
| TURN_ON_IE               | 1            | DDRRPHY Enable                                           |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |
| PHY_IN_DQ0               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ1               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ2               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ3               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ4               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DM0               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM1               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM2               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM3               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DM4               | 1            | DBI (Data Bus Inversion enable) to PHY                   |
| PHY_IN_DQS0              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS1              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS2              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS3              | 1            | DQS data strobe to PHY                                   |
| PHY_IN_DQS4              | 1            | DQS data strobe to PHY                                   |
| DFI_ADDRESS_P2           | 19:0         | DDRRPHY Phase2 Address                                   |
| DFI_WRDATA_CS_P2         | 1:0          | DDRRPHY Write Data Chip Select Phase2                    |
| DFI_RDDATA_CS_P2         | 1:0          | DDRRPHY Read Data Chip Select Phase2                     |
| DFI_RAS_N_P2             | 1            | DDRRPHY RAS Enable Phase2                                |

**Table 135: Input Ports (Continued)**

| Name                 | Range | Description                          |
|----------------------|-------|--------------------------------------|
| DFI_CAS_N_P2         | 1     | DDRPHY CAS Enable Phase2             |
| DFI_ACT_N_P2         | 1     | DDRPHY ACT Phase2                    |
| DFI_WE_N_P2          | 1     | DDRPHY Write Enable Phase2           |
| DFI_BANK_P2          | 2:0   | DDRPHY Bank Address Phase2           |
| DFI_BG_P2            | 2:0   | DDRPHY Bank Group Phase2             |
| DFI_CID_P2           | 1     | DDRPHY Chip ID Phase2                |
| DFI_CS_N_P2          | 1:0   | DDRPHY Chip Select Phase2            |
| DFI_CKE_P2           | 1:0   | DDRPHY Clock Enable Phase2           |
| DFI_ODT_P2           | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3       | 19:0  | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3     | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3     | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_RAS_N_P3         | 1     | DDRPHY RAS Enable Phase3             |
| DFI_CAS_N_P3         | 1     | DDRPHY CAS Enable Phase3             |
| DFI_ACT_N_P3         | 1     | DDRPHY ACT Phase3                    |
| DFI_WE_N_P3          | 1     | DDRPHY Write Enable Phase3           |
| DFI_BANK_P3          | 2:0   | DDRPHY Bank Address Phase3           |
| DFI_BG_P3            | 2:0   | DDRPHY Bank Group Phase3             |
| DFI_CID_P3           | 1     | DDRPHY Chip ID Phase3                |
| DFI_CS_N_P3          | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3           | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3           | 1:0   | DDRPHY ODT Phase3                    |
| DFI_DRAM_CLK_DISABLE | 1     | DRAM clock disable                   |

**Table 136: Output Ports**

| Name        | Range | Description      |
|-------------|-------|------------------|
| DFI_RDDATA0 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA1 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA2 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA3 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA4 | 63:0  | DDRPHY Read Data |



**Table 136: Output Ports (Continued)**

| Name                 | Range | Description                       |
|----------------------|-------|-----------------------------------|
| DFI_RDDATA_DBI0      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI1      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI2      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI3      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI4      | 7:0   | DDRPHY Read Data DBI              |
| DFI_RDDATA_VALID0    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID1    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID2    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID3    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID4    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID2_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID3_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID4_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1     | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0   | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1     | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1     | DDRPHY Initialization Complete    |
| AXB_READY            | 1     | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0  | AXB bus interface: Read Data      |
| PHY_OUT_DQ0          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ1          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ2          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ3          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ4          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ_OEN0      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN1      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN2      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN3      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN4      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DM0          | 1     | DM (Data Mask) from PHY           |

**Table 136: Output Ports (Continued)**

| Name             | Range | Description                        |
|------------------|-------|------------------------------------|
| PHY_OUT_DM1      | 1     | DM (Data Mask) from PHY            |
| PHY_OUT_DM2      | 1     | DM (Data Mask) from PHY            |
| PHY_OUT_DM3      | 1     | DM (Data Mask) from PHY            |
| PHY_OUT_DM4      | 1     | DM (Data Mask) from PHY            |
| PHY_OUT_DM_OEN0  | 1     | Enable for DM output from PHY      |
| PHY_OUT_DM_OEN1  | 1     | Enable for DM output from PHY      |
| PHY_OUT_DM_OEN2  | 1     | Enable for DM output from PHY      |
| PHY_OUT_DM_OEN3  | 1     | Enable for DM output from PHY      |
| PHY_OUT_DM_OEN4  | 1     | Enable for DM output from PHY      |
| PHY_OUT_DQS0     | 1     | DQS data strobe from PHY           |
| PHY_OUT_DQS1     | 1     | DQS data strobe from PHY           |
| PHY_OUT_DQS2     | 1     | DQS data strobe from PHY           |
| PHY_OUT_DQS3     | 1     | DQS data strobe from PHY           |
| PHY_OUT_DQS4     | 1     | DQS data strobe from PHY           |
| PHY_OUT_DQS_OEN0 | 1     | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN1 | 1     | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN2 | 1     | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN3 | 1     | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN4 | 1     | Enable for DQS output from PHY     |
| DQ_READ0         | 7:0   | FPGA IO ODT Enable For Data        |
| DQ_READ1         | 7:0   | FPGA IO ODT Enable For Data        |
| DQ_READ2         | 7:0   | FPGA IO ODT Enable For Data        |
| DQ_READ3         | 7:0   | FPGA IO ODT Enable For Data        |
| DQ_READ4         | 7:0   | FPGA IO ODT Enable For Data        |
| DM_READ0         | 1     | FPGA IO ODT enable for data mask   |
| DM_READ1         | 1     | FPGA IO ODT enable for data mask   |
| DM_READ2         | 1     | FPGA IO ODT enable for data mask   |
| DM_READ3         | 1     | FPGA IO ODT enable for data mask   |
| DM_READ4         | 1     | FPGA IO ODT enable for data mask   |
| DQS_READ0        | 1     | FPGA IO ODT enable for data strobe |
| DQS_READ1        | 1     | FPGA IO ODT enable for data strobe |
| DQS_READ2        | 1     | FPGA IO ODT enable for data strobe |

**Table 136: Output Ports (Continued)**

| <b>Name</b>         | <b>Range</b> | <b>Description</b>                                                                                    |
|---------------------|--------------|-------------------------------------------------------------------------------------------------------|
| DQS_READ3           | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ4           | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQ_IE0              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE1              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE2              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE3              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE4              | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE2              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE3              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE4              | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE2             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE3             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE4             | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| VREF_OUTPUT_ENABLE0 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_OUTPUT_ENABLE1 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_OUTPUT_ENABLE2 | 1            | Global control input to enable/disable VREF generation if required                                    |
| VREF_OUTPUT_ENABLE3 | 1            | Global control input to enable/disable VREF generation if required                                    |

**Table 136: Output Ports (Continued)**

| <b>Name</b>         | <b>Range</b> | <b>Description</b>                                                 |
|---------------------|--------------|--------------------------------------------------------------------|
| VREF_OUTPUT_ENABLE4 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_VALUE0         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE1         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE2         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE3         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE4         | 6:0          | Vref value set for each byte lane - width can be customized        |
| CA_OUT_CLK0         | 1            | DRAM clock output from PHY                                         |
| CA_OUT_CLK1         | 1            | DRAM clock output from PHY                                         |
| CA_OUT_RST_N        | 1            | DRAM reset output from PHY                                         |
| CA_OUT_A0           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A1           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A2           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A3           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A4           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A5           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A6           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A7           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A8           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A9           | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A10          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A11          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A12          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A13          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A14          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A15          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_A16          | 1            | DRAM MA output from PHY                                            |
| CA_OUT_CS_N         | 1:0          | DRAM CS_N output from PHY                                          |
| CA_OUT_CKE          | 1:0          | DRAM CKE output from PHY                                           |
| CA_OUT_BA2          | 1            | DRAM BA output from PHY                                            |

**Table 136: Output Ports (Continued)**

| Name                             | Range | Description                                                                                   |
|----------------------------------|-------|-----------------------------------------------------------------------------------------------|
| CA_OUT_BA1                       | 1     | DRAM BA output from PHY                                                                       |
| CA_OUT_BA0                       | 1     | DRAM BA output from PHY                                                                       |
| CA_OUT_RAS_N                     | 1     | DRAM RAS_N output from PHY                                                                    |
| CA_OUT_CAS_N                     | 1     | DRAM CAS_N output from PHY                                                                    |
| CA_OUT_WE_N                      | 1     | DRAM WE_N output from PHY                                                                     |
| CA_OUT_ODT                       | 1:0   | DRAM ODT output from PHY                                                                      |
| CA_OUT_CS_OEN                    | 1     | DDR5 mode register bit                                                                        |
| CA_OUT_CLK_OEN0                  | 1     | Disable MCLK output                                                                           |
| CA_OUT_CLK_OEN1                  | 1     | Disable MCLK output                                                                           |
| VREF_CA_VALUE                    | 6:0   | VREF value driven for CA IOs                                                                  |
| UPDATE                           | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV_R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE     | 1     | VREF output enable                                                                            |
| ADRCTRL_DRIVERS_OEN              | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN2                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN3                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN4                     | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 137: Parameters**

| Name     | Values                      | Description  |
|----------|-----------------------------|--------------|
| RATE     | "HALF" (default)<br>"FULL"  | DDR rate     |
| PROTOCOL | "DDR3L" (default)<br>"DDR4" | DDR protocol |

**Table 137: Parameters (Continued)**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY64D

Supports DDR4 and DDR3L protocols with X64 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                           |                                 |
|---------------------------|---------------------------------|
| PHYCLK                    | DFI_RDDATA[0-7] [63:0]          |
| SCLK                      | DFI_RDDATA_DBI [ 0-7] [7:0]     |
| PCLK                      | DFI_RDDATA_VALID [0-7]          |
| RESET                     | DFI_RDDATA_VALID_P2 [0-7]       |
| DFI_RDDATA_EN             | DFI_PHYUPD_REQ                  |
| DFI_RDDATA_EN_P2          | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA_EN             | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_EN_P2          | DFIIT_COMPLETE                  |
| DFI_WRDATA[0-7][63:0]     | AXB_READY                       |
| DFI_WRDATA_MASK[0-7][7:0] | AXB_RDATA [31:0]                |
| DFI_PHYUPD_ACK            | PHY_OUT_DQ [ 0-7] [7:0]         |
| DFI_CTRLUPD_REQ           | PHY_OUT_DQ_OEN [0-7] [7:0]      |
| DFI_DRAM_CLK_DISABLE      | PHY_OUT_DM [ 0-7]               |
| DFI_ADDRESS [19:0]        | PHY_OUT_DM_OEN [ 0-7]           |
| DFI_WRDATA_CS [1:0]       | PHY_OUT_DQS [ 0-7]              |
| DFI_RDDATA_CS [1:0]       | PHY_OUT_DQS_OEN [ 0-7]          |
| DFI_RAS_N                 | DQ_READ [ 0-7] [7:0]            |
| DFI_CAS_N                 | DM_READ [ 0-7]                  |
| DFI_ACT_N                 | DQS_READ [ 0-7]                 |
| DFI_WE_N                  | DQ_IE [0-7] [7:0]               |
| DFI_BANK [2:0]            | DM_IE [0-7]                     |
| DFI_BG [2:0]              | DQS_IE [0-7]                    |
| DFI_CID                   | VREF_OUTPUT_ENABLE [0-7]        |
| DFI_CS_N [1:0]            | VREF_VALUE [0-7] [6:0]          |
| DFI_CKE [1:0]             | CA_OUT_CLK [0-1]                |
| DFI_ODT [1:0]             | CA_OUT_RST_N                    |
| DFI_ADDRESS_P1 [19:0]     | CA_OUT_A [0-16]                 |
| DFI_WRDATA_CS_P1 [1:0]    | CA_OUT_CS_N [1:0]               |
| DFI_RDDATA_CS_P1 [1:0]    | CA_OUT_CKE [1:0]                |
| DFI_RAS_N_P1              | CA_OUT_BA2                      |
| DFI_CAS_N_P1              | CA_OUT_BA1                      |
| DFI_ACT_N_P1              | CA_OUT_BA0                      |
| DFI_WE_N_P1               | CA_OUT_RAS_N                    |
| DFI_BANK_P1 [2:0]         | CA_OUT_CAS_N                    |
| DFI_BG_P1 [2:0]           | CA_OUT_WE_N                     |
| DFI_CID_P1                | CA_OUT_ODT [1:0]                |
| DFI_CS_N_P1 [1:0]         | CA_OUT_CS_OEN                   |
| DFI_CKE_P1 [1:0]          | CA_OUT_CLK_OEN0                 |
| DFI_ODT_P1 [1:0]          | CA_OUT_CLK_OEN1                 |
| DFI_RESET_N               | VREF_CA_VALUE [6:0]             |
| TURN_ON_IE                | UPDATE                          |
| TURN_OFF_ADRCTRL_DRIVERS  | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| AXB_SEL                   | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| AXB_RESET_N               | ADRCTRL_DRIVERS_OEN             |
| AXB_ADDR [8:0]            | RECEIVER_EN [0-7]               |
| AXB_WRITE                 |                                 |
| AXB_WDATA [31:0]          |                                 |
| PHY_IN_DQ [0-7][7:0]      |                                 |
| PHY_IN_DM [0-7]           |                                 |
| PHY_IN_DQS [0-7]          |                                 |
| DFI_ADDRESS_P2 [19:0]     |                                 |
| DFI_WRDATA_CS_P2 [1:0]    |                                 |
| DFI_RDDATA_CS_P2 [1:0]    |                                 |
| DFI_RAS_N_P2              |                                 |
| DFI_CAS_N_P2              |                                 |
| DFI_ACT_N_P2              |                                 |
| DFI_WE_N_P2               |                                 |
| DFI_BANK_P2 [2:0]         |                                 |
| DFI_BG_P2 [2:0]           |                                 |
| DFI_CID_P2                |                                 |
| DFI_CS_N_P2 [1:0]         |                                 |
| DFI_CKE_P2 [1:0]          |                                 |
| DFI_ODT_P2 [1:0]          |                                 |
| DFI_ADDRESS_P3 [19:0]     |                                 |
| DFI_WRDATA_CS_P3 [1:0]    |                                 |
| DFI_RDDATA_CS_P3 [1:0]    |                                 |
| DFI_RAS_N_P3              |                                 |
| DFI_CAS_N_P3              |                                 |
| DFI_ACT_N_P3              |                                 |
| DFI_WE_N_P3               |                                 |
| DFI_BANK_P3 [2:0]         |                                 |
| DFI_BG_P3 [2:0]           |                                 |
| DFI_CID_P3                |                                 |
| DFI_CS_N_P3 [1:0]         |                                 |
| DFI_CKE_P3 [1:0]          |                                 |
| DFI_ODT_P3 [1:0]          |                                 |

**Table 138: Input Ports**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>            |
|----------------------|--------------|-------------------------------|
| PHYCLK               | 1            | DDR Clock                     |
| SCLK                 | 1            | Primary Clock                 |
| PCLK                 | 1            | AXB Bus Interface Clock       |
| RESET                | 1            | Reset                         |
| DFI_RDDATA_EN        | 1            | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2     | 1            | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN        | 1            | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2     | 1            | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA1          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA2          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA3          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA4          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA5          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA6          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA7          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA_MASK0     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK1     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK2     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK3     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK4     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK5     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK6     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK7     | 7:0          | DDRPHY Write Data Mask        |
| DFI_PHYUPD_ACK       | 1            | DDRPHY PHY update acknowledge |
| DFI_CTRLUPD_REQ      | 1            | DDRPHY PHY update request     |
| DFI_DRAM_CLK_DISABLE | 1            | DRAM clock disable            |
| DFI_ADDRESS          | 19:0         | DDRPHY address                |
| DFI_WRDATA_CS        | 1:0          | DDRPHY Write Data Chip Select |
| DFI_RDDATA_CS        | 1:0          | DDRPHY Read Data Chip Select  |
| DFI_RAS_N            | 1            | DDRPHY RAS Enable             |
| DFI_CAS_N            | 1            | DDRPHY CAS Enable             |



**Table 138: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_ACT_N                | 1            | DDRPHY ACT                                               |
| DFI_WE_N                 | 1            | DDRPHY Write Enable                                      |
| DFI_BANK                 | 2:0          | DDRPHY Bank Address                                      |
| DFI_BG                   | 2:0          | DDRPHY Bank Group                                        |
| DFI_CID                  | 1            | DDRPHY Chip ID                                           |
| DFI_CS_N                 | 1:0          | DDRPHY Chip Select                                       |
| DFI_CKE                  | 1:0          | DDRPHY Clock Enable                                      |
| DFI_ODT                  | 1:0          | DDRPHY ODT                                               |
| DFI_ADDRESS_P1           | 19:0         | DDRPHY Phase1 Address                                    |
| DFI_WRDATA_CS_P1         | 1:0          | DDRPHY Write Data Chip Select Phase1                     |
| DFI_RDDATA_CS_P1         | 1:0          | DDRPHY Read Data Chip Select Phase1                      |
| DFI_RAS_N_P1             | 1            | DDRPHY RAS Enable Phase1                                 |
| DFI_CAS_N_P1             | 1            | DDRPHY CAS Enable Phase1                                 |
| DFI_ACT_N_P1             | 1            | DDRPHY ACT Phase1                                        |
| DFI_WE_N_P1              | 1            | DDRPHY Write Enable Phase1                               |
| DFI_BANK_P1              | 2:0          | DDRPHY Bank Address Phase1                               |
| DFI_BG_P1                | 2:0          | DDRPHY Bank Group Phase1                                 |
| DFI_CID_P1               | 1            | DDRPHY Chip ID Phase1                                    |
| DFI_CS_N_P1              | 1:0          | DDRPHY Chip Select Phase1                                |
| DFI_CKE_P1               | 1:0          | DDRPHY Clock Enable Phase1                               |
| DFI_ODT_P1               | 1:0          | DDRPHY ODT Phase1                                        |
| DFI_RESET_N              | 1            | DDRPHY DFI Reset                                         |
| TURN_ON_IE               | 1            | DDRPHY Enable                                            |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |
| PHY_IN_DQ0               | 7:0          | DQ Data Bus to PHY                                       |
| PHY_IN_DQ1               | 7:0          | DQ Data Bus to PHY                                       |

**Table 138: Input Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                     |
|------------------|--------------|----------------------------------------|
| PHY_IN_DQ2       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ3       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ4       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ5       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ6       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ7       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DM0       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM1       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM2       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM3       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM4       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM5       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM6       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM7       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DQS0      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS1      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS2      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS3      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS4      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS5      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS6      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS7      | 1            | DQS data strobe to PHY                 |
| DFI_ADDRESS_P2   | 19:0         | DDRRPHY Phase2 Address                 |
| DFI_WRDATA_CS_P2 | 1:0          | DDRRPHY Write Data Chip Select Phase2  |
| DFI_RDDATA_CS_P2 | 1:0          | DDRRPHY Read Data Chip Select Phase2   |
| DFI_RAS_N_P2     | 1            | DDRRPHY RAS Enable Phase2              |
| DFI_CAS_N_P2     | 1            | DDRRPHY CAS Enable Phase2              |
| DFI_ACT_N_P2     | 1            | DDRRPHY ACT Phase2                     |
| DFI_WE_N_P2      | 1            | DDRRPHY Write Enable Phase2            |
| DFI_BANK_P2      | 2:0          | DDRRPHY Bank Address Phase2            |
| DFI_BG_P2        | 2:0          | DDRRPHY Bank Group Phase2              |
| DFI_CID_P2       | 1            | DDRRPHY Chip ID Phase2                 |

**Table 138: Input Ports (Continued)**

| Name             | Range | Description                          |
|------------------|-------|--------------------------------------|
| DFI_CS_N_P2      | 1:0   | DDRPHY Chip Select Phase2            |
| DFI_CKE_P2       | 1:0   | DDRPHY Clock Enable Phase2           |
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3   | 19:0  | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_RAS_N_P3     | 1     | DDRPHY RAS Enable Phase3             |
| DFI_CAS_N_P3     | 1     | DDRPHY CAS Enable Phase3             |
| DFI_ACT_N_P3     | 1     | DDRPHY ACT Phase3                    |
| DFI_WE_N_P3      | 1     | DDRPHY Write Enable Phase3           |
| DFI_BANK_P3      | 2:0   | DDRPHY Bank Address Phase3           |
| DFI_BG_P3        | 2:0   | DDRPHY Bank Group Phase3             |
| DFI_CID_P3       | 1     | DDRPHY Chip ID Phase3                |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                    |

**Table 139: Output Ports**

| Name            | Range | Description          |
|-----------------|-------|----------------------|
| DFI_RDDATA0     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA1     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA2     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA3     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA4     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA5     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA6     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA7     | 63:0  | DDRPHY Read Data     |
| DFI_RDDATA_DBI0 | 7:0   | DDRPHY Read Data DBI |
| DFI_RDDATA_DBI1 | 7:0   | DDRPHY Read Data DBI |
| DFI_RDDATA_DBI2 | 7:0   | DDRPHY Read Data DBI |
| DFI_RDDATA_DBI3 | 7:0   | DDRPHY Read Data DBI |

**Table 139: Output Ports (Continued)**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>                |
|----------------------|--------------|-----------------------------------|
| DFI_RDDATA_DBI4      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI5      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI6      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI7      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_VALID0    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID1    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID2    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID3    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID4    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID5    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID6    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID7    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID2_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID3_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID4_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID5_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID6_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID7_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1            | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0          | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1            | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1            | DDRPHY Initialization Complete    |
| AXB_READY            | 1            | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0         | AXB bus interface: Read Data      |
| PHY_OUT_DQ0          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ1          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ2          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ3          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ4          | 7:0          | DQ data bus from PHY              |
| PHY_OUT_DQ5          | 7:0          | DQ data bus from PHY              |

**Table 139: Output Ports (Continued)**

| <b>Name</b>     | <b>Range</b> | <b>Description</b>            |
|-----------------|--------------|-------------------------------|
| PHY_OUT_DQ6     | 7:0          | DQ data bus from PHY          |
| PHY_OUT_DQ7     | 7:0          | DQ data bus from PHY          |
| PHY_OUT_DQ_OEN0 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN1 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN2 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN3 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN4 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN5 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN6 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DQ_OEN7 | 7:0          | Enable for DQ output from PHY |
| PHY_OUT_DM0     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM1     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM2     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM3     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM4     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM5     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM6     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM7     | 1            | DM (Data Mask) from PHY       |
| PHY_OUT_DM_OEN0 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN1 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN2 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN3 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN4 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN5 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN6 | 1            | Enable for DM output from PHY |
| PHY_OUT_DM_OEN7 | 1            | Enable for DM output from PHY |
| PHY_OUT_DQS0    | 1            | DQS data strobe from PHY      |
| PHY_OUT_DQS1    | 1            | DQS data strobe from PHY      |
| PHY_OUT_DQS2    | 1            | DQS data strobe from PHY      |
| PHY_OUT_DQS3    | 1            | DQS data strobe from PHY      |
| PHY_OUT_DQS4    | 1            | DQS data strobe from PHY      |
| PHY_OUT_DQS5    | 1            | DQS data strobe from PHY      |

**Table 139: Output Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                 |
|------------------|--------------|------------------------------------|
| PHY_OUT_DQS6     | 1            | DQS data strobe from PHY           |
| PHY_OUT_DQS7     | 1            | DQS data strobe from PHY           |
| PHY_OUT_DQS_OEN0 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN1 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN2 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN3 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN4 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN5 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN6 | 1            | Enable for DQS output from PHY     |
| PHY_OUT_DQS_OEN7 | 1            | Enable for DQS output from PHY     |
| DQ_READ0         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ1         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ2         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ3         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ4         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ5         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ6         | 7:0          | FPGA IO ODT Enable For Data        |
| DQ_READ7         | 7:0          | FPGA IO ODT Enable For Data        |
| DM_READ0         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ1         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ2         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ3         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ4         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ5         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ6         | 1            | FPGA IO ODT enable for data mask   |
| DM_READ7         | 1            | FPGA IO ODT enable for data mask   |
| DQS_READ0        | 1            | FPGA IO ODT enable for data strobe |
| DQS_READ1        | 1            | FPGA IO ODT enable for data strobe |
| DQS_READ2        | 1            | FPGA IO ODT enable for data strobe |
| DQS_READ3        | 1            | FPGA IO ODT enable for data strobe |
| DQS_READ4        | 1            | FPGA IO ODT enable for data strobe |
| DQS_READ5        | 1            | FPGA IO ODT enable for data strobe |

**Table 139: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                                                                    |
|-------------|--------------|-------------------------------------------------------------------------------------------------------|
| DQS_READ6   | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQS_READ7   | 1            | FPGA IO ODT enable for data strobe                                                                    |
| DQ_IE0      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE1      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE2      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE3      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE4      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE5      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE6      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE7      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE2      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE3      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE4      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE5      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE6      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE7      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE2     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |

**Table 139: Output Ports (Continued)**

| <b>Name</b>         | <b>Range</b> | <b>Description</b>                                                 |
|---------------------|--------------|--------------------------------------------------------------------|
| DQS_IE3             | 1            | Optional dynamic input enable for DQS IO receivers during reads    |
| DQS_IE4             | 1            | Optional dynamic input enable for DQS IO receivers during reads    |
| DQS_IE5             | 1            | Optional dynamic input enable for DQS IO receivers during reads    |
| DQS_IE6             | 1            | Optional dynamic input enable for DQS IO receivers during reads    |
| DQS_IE7             | 1            | Optional dynamic input enable for DQS IO receivers during reads    |
| VREF_OUTPUT_ENABLE0 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE1 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE2 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE3 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE4 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE5 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE6 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE7 | 1            | Global control input to enable/disable VREF generation if required |
| VREF_VALUE0         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE1         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE2         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE3         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE4         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE5         | 6:0          | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE6         | 6:0          | Vref value set for each byte lane - width can be customized        |



**Table 139: Output Ports (Continued)**

| <b>Name</b>   | <b>Range</b> | <b>Description</b>                                          |
|---------------|--------------|-------------------------------------------------------------|
| VREF_VALUE7   | 6:0          | Vref value set for each byte lane - width can be customized |
| CA_OUT_CLK0   | 1            | DRAM clock output from PHY                                  |
| CA_OUT_CLK1   | 1            | DRAM clock output from PHY                                  |
| CA_OUT_RST_N  | 1            | DRAM reset output from PHY                                  |
| CA_OUT_A0     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A1     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A2     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A3     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A4     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A5     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A6     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A7     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A8     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A9     | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A10    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A11    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A12    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A13    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A14    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A15    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_A16    | 1            | DRAM MA output from PHY                                     |
| CA_OUT_CS_N   | 1:0          | DRAM CS_N output from PHY                                   |
| CA_OUT_CKE    | 1:0          | DRAM CKE output from PHY                                    |
| CA_OUT_BA2    | 1            | DRAM BA output from PHY                                     |
| CA_OUT_BA1    | 1            | DRAM BA output from PHY                                     |
| CA_OUT_BA0    | 1            | DRAM BA output from PHY                                     |
| CA_OUT_RAS_N  | 1            | DRAM RAS_N output from PHY                                  |
| CA_OUT_CAS_N  | 1            | DRAM CAS_N output from PHY                                  |
| CA_OUT_WE_N   | 1            | DRAM WE_N output from PHY                                   |
| CA_OUT_ODT    | 1:0          | DRAM ODT output from PHY                                    |
| CA_OUT_CS_OEN | 1            | DDR5 mode register bit                                      |

**Table 139: Output Ports (Continued)**

| Name                                | Range | Description                                                                                   |
|-------------------------------------|-------|-----------------------------------------------------------------------------------------------|
| CA_OUT_CLK_OEN0                     | 1     | Disable MCLK output                                                                           |
| CA_OUT_CLK_OEN1                     | 1     | Disable MCLK output                                                                           |
| VREF_CA_VALUE                       | 6:0   | VREF value driven for CA IOs                                                                  |
| UPDATE                              | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV<br>R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE        | 1     | VREF output enable                                                                            |
| ADRCtrl_DRIVERS_OEN                 | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN2                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN3                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN4                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN5                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN6                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN7                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 140: Parameters**

| Name     | Values                      | Description  |
|----------|-----------------------------|--------------|
| RATE     | "HALF" (default)<br>"FULL"  | DDR rate     |
| PROTOCOL | "DDR3L" (default)<br>"DDR4" | DDR protocol |

**Table 140: Parameters (Continued)**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY64E

Supports LPDDR4 protocol with X64 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                             |                                 |
|-----------------------------|---------------------------------|
| PHYCLK                      | DFI_RDDATA [0-7] [63:0]         |
| SCLK                        | DFI_RDDATA_DBI [0-7] [7:0]      |
| PCLK                        | DFI_RDDATA_VALID [0-7]          |
| RESET                       | DFI_RDDATA_VALID_P2 [0-7]       |
| DFI_RDDATA_EN               | DFI_PHYUPD_REQ                  |
| DFI_RDDATA_EN_P2            | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA_EN               | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_EN_P2            | DFIIT_COMPLETE                  |
| DFI_WRDATA [0-7] [63:0]     | AXB_READY                       |
| DFI_WRDATA_MASK [0-7] [7:0] | AXB_RDATA [31:0]                |
| DFI_PHYUPD_ACK              | PHY_OUT_DQ [0-7] [7:0]          |
| DFI_CTRLUPD_REQ             | PHY_OUT_DQ_OEN [0-7] [7:0]      |
| DFI_DRAM_CLK_DISABLE        | PHY_OUT_DM [0-7]                |
| DFI_ADDRESS [5:0]           | PHY_OUT_DM_OEN [0-7]            |
| DFI_WRDATA_CS [1:0]         | PHY_OUT_DQS [0-7]               |
| DFI_RDDATA_CS [1:0]         | PHY_OUT_DQS_OEN [0-7]           |
| DFI_CS_N [1:0]              | DQ_READ [0-7] [7:0]             |
| DFI_CKE [1:0]               | DM_READ [0-7]                   |
| DFI_ODT [1:0]               | DQS_READ [0-7]                  |
| DFI_ADDRESS_P1 [5:0]        | DQ_IE [0-7] [7:0]               |
| DFI_WRDATA_CS_P1 [1:0]      | DM_IE [0-7]                     |
| DFI_RDDATA_CS_P1 [1:0]      | DQS_IE [0-7]                    |
| DFI_CS_N_P1 [1:0]           | VREF_OUTPUT_ENABLE [0-7]        |
| DFI_CKE_P1 [1:0]            | VREF_VALUE [0-7] [6:0]          |
| DFI_ODT_P1 [1:0]            | CA_OUT_CLK [0-1]                |
| DFI_RESET_N                 | CA_OUT_RST_N                    |
| TURN_ON_IE                  | CA_OUT_A0                       |
| TURN_OFF_ADRCTRL_DRIVERS    | CA_OUT_CS_N [1:0]               |
| AXB_SEL                     | CA_OUT_CKE [1:0]                |
| AXB_RESET_N                 | CA_OUT_CS_OEN                   |
| AXB_ADDR [8:0]              | CA_OUT_CLK_OEN [0-1]            |
| AXB_WRITE                   | VREF_CA_VALUE [6:0]             |
| AXB_WDATA [31:0]            | UPDATE                          |
| PHY_IN_DQ [0-7] [7:0]       | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| PHY_IN_DM [0-7]             | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| PHY_IN_DQS [0-7]            | ADRCTRL_DRIVERS_OEN             |
| DFI_ADDRESS_P2 [5:0]        | RECEIVER_EN [0-7]               |
| DFI_WRDATA_CS_P2 [1:0]      |                                 |
| DFI_RDDATA_CS_P2 [1:0]      |                                 |
| DFI_CS_N_P2 [1:0]           |                                 |
| DFI_CKE_P2 [1:0]            |                                 |
| DFI_ODT_P2 [1:0]            |                                 |
| DFI_ADDRESS_P3 [5:0]        |                                 |
| DFI_WRDATA_CS_P3 [1:0]      |                                 |
| DFI_RDDATA_CS_P3 [1:0]      |                                 |
| DFI_CS_N_P3 [1:0]           |                                 |
| DFI_CKE_P3 [1:0]            |                                 |
| DFI_ODT_P3 [1:0]            |                                 |

Table 141: Input Ports

| Name             | Range | Description                   |
|------------------|-------|-------------------------------|
| PHYCLK           | 1     | DDR Clock                     |
| SCLK             | 1     | Primary Clock                 |
| PCLK             | 1     | AXB Bus Interface Clock       |
| RESET            | 1     | Reset                         |
| DFI_RDDATA_EN    | 1     | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2 | 1     | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN    | 1     | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2 | 1     | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA1      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA2      | 63:0  | DDRPHY Write Data             |
| DFI_WRDATA3      | 63:0  | DDRPHY Write Data             |

**Table 141: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_WRDATA4              | 63:0         | DDRPHY Write Data                                        |
| DFI_WRDATA5              | 63:0         | DDRPHY Write Data                                        |
| DFI_WRDATA6              | 63:0         | DDRPHY Write Data                                        |
| DFI_WRDATA7              | 63:0         | DDRPHY Write Data                                        |
| DFI_WRDATA_MASK0         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK1         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK2         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK3         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK4         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK5         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK6         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_WRDATA_MASK7         | 7:0          | DDRPHY Write Data Mask                                   |
| DFI_PHYUPD_ACK           | 1            | DDRPHY PHY update acknowledge                            |
| DFI_CTRLUPD_REQ          | 1            | DDRPHY PHY update request                                |
| DFI_DRAM_CLK_DISABLE     | 1            | DRAM clock disable                                       |
| DFI_ADDRESS              | 5:0          | DDRPHY address                                           |
| DFI_WRDATA_CS            | 1:0          | DDRPHY Write Data Chip Select                            |
| DFI_RDDATA_CS            | 1:0          | DDRPHY Read Data Chip Select                             |
| DFI_CS_N                 | 1:0          | DDRPHY Chip Select                                       |
| DFI_CKE                  | 1:0          | DDRPHY Clock Enable                                      |
| DFI_ODT                  | 1:0          | DDRPHY ODT                                               |
| DFI_ADDRESS_P1           | 5:0          | DDRPHY Phase1 Address                                    |
| DFI_WRDATA_CS_P1         | 1:0          | DDRPHY Write Data Chip Select Phase1                     |
| DFI_RDDATA_CS_P1         | 1:0          | DDRPHY Read Data Chip Select Phase1                      |
| DFI_CS_N_P1              | 1:0          | DDRPHY Chip Select Phase1                                |
| DFI_CKE_P1               | 1:0          | DDRPHY Clock Enable Phase1                               |
| DFI_ODT_P1               | 1:0          | DDRPHY ODT Phase1                                        |
| DFI_RESET_N              | 1            | DDRPHY DFI Reset                                         |
| TURN_ON_IE               | 1            | DDRPHY Enable                                            |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |

**Table 141: Input Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                     |
|------------------|--------------|----------------------------------------|
| AXB_RESET_N      | 1            | AXB Bus Interface: Reset               |
| AXB_ADDR         | 8:0          | AXB Bus Interface: Address             |
| AXB_WRITE        | 1            | AXB Bus Interface: Write Enable        |
| AXB_WDATA        | 31:0         | AXB Bus Interface: Write Data          |
| PHY_IN_DQ0       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ1       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ2       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ3       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ4       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ5       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ6       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ7       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DM0       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM1       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM2       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM3       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM4       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM5       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM6       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM7       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DQS0      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS1      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS2      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS3      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS4      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS5      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS6      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS7      | 1            | DQS data strobe to PHY                 |
| DFI_ADDRESS_P2   | 5:0          | DDRPHY Phase2 Address                  |
| DFI_WRDATA_CS_P2 | 1:0          | DDRPHY Write Data Chip Select Phase2   |
| DFI_RDDATA_CS_P2 | 1:0          | DDRPHY Read Data Chip Select Phase2    |
| DFI_CS_N_P2      | 1:0          | DDRPHY Chip Select Phase2              |

**Table 141: Input Ports (Continued)**

| Name             | Range | Description                          |
|------------------|-------|--------------------------------------|
| DFI_CKE_P2       | 1:0   | DDRPHY Clock Enable Phase2           |
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3   | 5:0   | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                    |

**Table 142: Output Ports**

| Name              | Range | Description            |
|-------------------|-------|------------------------|
| DFI_RDDATA0       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA1       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA2       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA3       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA4       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA5       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA6       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA7       | 63:0  | DDRPHY Read Data       |
| DFI_RDDATA_DBI0   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI1   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI2   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI3   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI4   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI5   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI6   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_DBI7   | 7:0   | DDRPHY Read Data DBI   |
| DFI_RDDATA_VALID0 | 1     | DDRPHY Read Data Valid |
| DFI_RDDATA_VALID1 | 1     | DDRPHY Read Data Valid |
| DFI_RDDATA_VALID2 | 1     | DDRPHY Read Data Valid |
| DFI_RDDATA_VALID3 | 1     | DDRPHY Read Data Valid |

**Table 142: Output Ports (Continued)**

| Name                 | Range | Description                       |
|----------------------|-------|-----------------------------------|
| DFI_RDDATA_VALID4    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID5    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID6    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID7    | 1     | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID2_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID3_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID4_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID5_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID6_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID7_P2 | 1     | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1     | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0   | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1     | DDRPHY Control Update Acknowledge |
| DFIIT_COMPLETE       | 1     | DDRPHY Initialization Complete    |
| AXB_READY            | 1     | AXB bus interface: Read Enable    |
| AXB_RDATA            | 31:0  | AXB bus interface: Read Data      |
| PHY_OUT_DQ0          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ1          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ2          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ3          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ4          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ5          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ6          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ7          | 7:0   | DQ data bus from PHY              |
| PHY_OUT_DQ_OEN0      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN1      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN2      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN3      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN4      | 7:0   | Enable for DQ output from PHY     |
| PHY_OUT_DQ_OEN5      | 7:0   | Enable for DQ output from PHY     |



**Table 142: Output Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>             |
|------------------|--------------|--------------------------------|
| PHY_OUT_DQ_OEN6  | 7:0          | Enable for DQ output from PHY  |
| PHY_OUT_DQ_OEN7  | 7:0          | Enable for DQ output from PHY  |
| PHY_OUT_DM0      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM1      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM2      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM3      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM4      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM5      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM6      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM7      | 1            | DM (Data Mask) from PHY        |
| PHY_OUT_DM_OEN0  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN1  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN2  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN3  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN4  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN5  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN6  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN7  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DQS0     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS1     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS2     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS3     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS4     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS5     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS6     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS7     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS_OEN0 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN1 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN2 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN3 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN4 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN5 | 1            | Enable for DQS output from PHY |

**Table 142: Output Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                                             |
|------------------|--------------|----------------------------------------------------------------|
| PHY_OUT_DQS_OEN6 | 1            | Enable for DQS output from PHY                                 |
| PHY_OUT_DQS_OEN7 | 1            | Enable for DQS output from PHY                                 |
| DQ_READ0         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ1         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ2         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ3         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ4         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ5         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ6         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ7         | 7:0          | FPGA IO ODT Enable For Data                                    |
| DM_READ0         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ1         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ2         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ3         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ4         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ5         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ6         | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ7         | 1            | FPGA IO ODT enable for data mask                               |
| DQS_READ0        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ1        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ2        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ3        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ4        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ5        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ6        | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ7        | 1            | FPGA IO ODT enable for data strobe                             |
| DQ_IE0           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE1           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE2           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE3           | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |

**Table 142: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                                                                    |
|-------------|--------------|-------------------------------------------------------------------------------------------------------|
| DQ_IE4      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE5      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE6      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE7      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE2      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE3      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE4      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE5      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE6      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE7      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE2     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE3     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE4     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE5     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE6     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE7     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |

**Table 142: Output Ports (Continued)**

| Name                | Range | Description                                                        |
|---------------------|-------|--------------------------------------------------------------------|
| VREF_OUTPUT_ENABLE0 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE1 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE2 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE3 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE4 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE5 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE6 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE7 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_VALUE0         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE1         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE2         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE3         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE4         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE5         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE6         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE7         | 6:0   | Vref value set for each byte lane - width can be customized        |
| CA_OUT_CLK0         | 1     | DRAM clock output from PHY                                         |
| CA_OUT_CLK1         | 1     | DRAM clock output from PHY                                         |
| CA_OUT_RST_N        | 1     | DRAM reset output from PHY                                         |
| CA_OUT_A0           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A1           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A2           | 1     | DRAM MA output from PHY                                            |
| CA_OUT_A3           | 1     | DRAM MA output from PHY                                            |

**Table 142: Output Ports (Continued)**

| Name                                | Range | Description                                                                                   |
|-------------------------------------|-------|-----------------------------------------------------------------------------------------------|
| CA_OUT_A4                           | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_A5                           | 1     | DRAM MA output from PHY                                                                       |
| CA_OUT_CS_N                         | 1:0   | DRAM CS_N output from PHY                                                                     |
| CA_OUT_CKE                          | 1:0   | DRAM CKE output from PHY                                                                      |
| CA_OUT_CS_OEN                       | 1     | DDR5 mode register bit                                                                        |
| CA_OUT_CLK_OEN0                     | 1     | Disable MCLK output                                                                           |
| CA_OUT_CLK_OEN1                     | 1     | Disable MCLK output                                                                           |
| VREF_CA_VALUE                       | 6:0   | VREF value driven for CA IOs                                                                  |
| UPDATE                              | 1     | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring  |
| ADDR_CTRL_LOPHY_OUTBACK_RCV<br>R_EN | 1     | Used to enable loopback test on Address/Control/Clock (CA) IOs                                |
| ADDR_CTRL_VREF_OUTPUT_ENABLE        | 1     | VREF output enable                                                                            |
| ADRCtrl_DRIVERS_OEN                 | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN2                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN3                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN4                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN5                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN6                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN7                        | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 143: Parameters**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| RATE          | "HALF" (default)<br>"FULL"                               | DDR rate                                                                                                    |
| PROTOCOL      | "LPDDR4" (default)                                       | DDR protocol                                                                                                |
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DDRPHY72D

Supports DDR4 and DDR3L protocols with X72 data width

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

|                             |                                 |
|-----------------------------|---------------------------------|
| PHYCLK                      | DFI_RDDATA [0-8] [63:0]         |
| SCLK                        | DFI_RDDATA_DBI [0-8] [7:0]      |
| PCLK                        | DFI_RDDATA_VALID [0-8]          |
| RESET                       | DFI_RDDATA_VALID_P2 [0-8]       |
| DFI_RDDATA_EN               | DFI_PHYUPD_REQ                  |
| DFI_RDDATA_EN_P2            | DFI_PHYUPD_TYPE [1:0]           |
| DFI_WRDATA_EN               | DFI_CTRLUPD_ACK                 |
| DFI_WRDATA_EN_P2            | DFIIT_COMPLETE                  |
| DFI_WRDATA [0-8] [63:0]     | AXB_READY                       |
| DFI_WRDATA_MASK [0-8] [7:0] | AXB_RDATA [31:0]                |
| DFI_PHYUPD_ACK              | PHY_OUT_DQ [0-8] [7:0]          |
| DFI_CTRLUPD_REQ             | PHY_OUT_DQ_OEN [0-8] [7:0]      |
| DFI_DRAM_CLK_DISABLE        | PHY_OUT_DM [0-8]                |
| DFI_ADDRESS [19:0]          | PHY_OUT_DM_OEN [0-8]            |
| DFI_WRDATA_CS [1:0]         | PHY_OUT_DQS [0-8]               |
| DFI_RDDATA_CS [1:0]         | PHY_OUT_DQS_OEN [0-8]           |
| DFI_RAS_N                   | DQ_READ [0-8] [7:0]             |
| DFI_CAS_N                   | DM_READ [0-8]                   |
| DFI_ACT_N                   | DQS_READ [0-8]                  |
| DFI_WE_N                    | DQ_IE [0-8] [7:0]               |
| DFI_BANK [2:0]              | DM_IE [0-8]                     |
| DFI_BG [2:0]                | DQS_IE [0-8]                    |
| DFI_CID                     | VREF_OUTPUT_ENABLE [0-8]        |
| DFI_CS_N [1:0]              | VREF_VALUE [0-8] [6:0]          |
| DFI_CKE [1:0]               | CA_OUT_CLK [0-1]                |
| DFI_ODT [1:0]               | CA_OUT_RST_N                    |
| DFI_ADDRESS_P1 [19:0]       | CA_OUT_A [0-16]                 |
| DFI_WRDATA_CS_P1 [1:0]      | CA_OUT_CS_N [1:0]               |
| DFI_RDDATA_CS_P1 [1:0]      | CA_OUT_CKE [1:0]                |
| DFI_RAS_N_P1                | CA_OUT_BA2                      |
| DFI_CAS_N_P1                | CA_OUT_BA1                      |
| DFI_ACT_N_P1                | CA_OUT_BA0                      |
| DFI_WE_N_P1                 | CA_OUT_RAS_N                    |
| DFI_BANK_P1 [2:0]           | CA_OUT_CAS_N                    |
| DFI_BG_P1 [2:0]             | CA_OUT_WE_N                     |
| DFI_CID_P1                  | CA_OUT_ODT [1:0]                |
| DFI_CS_N_P1 [1:0]           | CA_OUT_CS_OEN                   |
| DFI_CKE_P1 [1:0]            | CA_OUT_CLK_OEN [0-1]            |
| DFI_ODT_P1 [1:0]            | DFI_CTRLUPD_ACK                 |
| DFI_RESET_N                 | VREF_CA_VALUE [6:0]             |
| TURN_ON_IE                  | UPDATE                          |
| TURN_OFF_ADRCTRL_DRIVERS    | ADDR_CTRL_LOPHY_OUTBACK_RCVR_EN |
| AXB_SEL                     | ADDR_CTRL_VREF_OUTPUT_ENABLE    |
| AXB_RESET_N                 | ADRCTRL_DRIVERS_OEN             |
| AXB_ADDR [8:0]              | RECEIVER_EN [0-8]               |
| AXB_WRITE                   |                                 |
| AXB_WDATA [31:0]            |                                 |
| PHY_IN_DQ [0-8] [7:0]       |                                 |
| PHY_IN_DM [0-8]             |                                 |
| PHY_IN_DQS [0-8]            |                                 |
| DFI_ADDRESS_P2 [19:0]       |                                 |
| DFI_WRDATA_CS_P2 [1:0]      |                                 |
| DFI_RDDATA_CS_P2 [1:0]      |                                 |
| DFI_RAS_N_P2                |                                 |
| DFI_CAS_N_P2                |                                 |
| DFI_ACT_N_P2                |                                 |
| DFI_WE_N_P2                 |                                 |
| DFI_BANK_P2 [2:0]           |                                 |
| DFI_BG_P2 [2:0]             |                                 |
| DFI_CID_P2                  |                                 |
| DFI_CS_N_P2 [1:0]           |                                 |
| DFI_CKE_P2 [1:0]            |                                 |
| DFI_ODT_P2 [1:0]            |                                 |
| DFI_ADDRESS_P3 [19:0]       |                                 |
| DFI_WRDATA_CS_P3 [1:0]      |                                 |
| DFI_RDDATA_CS_P3 [1:0]      |                                 |
| DFI_RAS_N_P3                |                                 |
| DFI_CAS_N_P3                |                                 |
| DFI_ACT_N_P3                |                                 |
| DFI_WE_N_P3                 |                                 |
| DFI_BANK_P3 [2:0]           |                                 |
| DFI_BG_P3 [2:0]             |                                 |
| DFI_CID_P3                  |                                 |
| DFI_CS_N_P3 [1:0]           |                                 |
| DFI_CKE_P3 [1:0]            |                                 |
| DFI_ODT_P3 [1:0]            |                                 |

**Table 144: Input Ports**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>            |
|----------------------|--------------|-------------------------------|
| PHYCLK               | 1            | DDR Clock                     |
| SCLK                 | 1            | Primary Clock                 |
| PCLK                 | 1            | AXB Bus Interface Clock       |
| RESET                | 1            | Reset                         |
| DFI_RDDATA_EN        | 1            | DDRPHY Read Data Enable       |
| DFI_RDDATA_EN_P2     | 1            | DDRPHY Read Data Enable P2P3  |
| DFI_WRDATA_EN        | 1            | DDRPHY Write Data Enable      |
| DFI_WRDATA_EN_P2     | 1            | DDRPHY Write Data Enable P2P3 |
| DFI_WRDATA0          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA1          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA2          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA3          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA4          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA5          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA6          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA7          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA8          | 63:0         | DDRPHY Write Data             |
| DFI_WRDATA_MASK0     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK1     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK2     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK3     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK4     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK5     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK6     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK7     | 7:0          | DDRPHY Write Data Mask        |
| DFI_WRDATA_MASK8     | 7:0          | DDRPHY Write Data Mask        |
| DFI_PHYUPD_ACK       | 1            | DDRPHY PHY update acknowledge |
| DFI_CTRLUPD_REQ      | 1            | DDRPHY PHY update request     |
| DFI_DRAM_CLK_DISABLE | 1            | DRAM clock disable            |
| DFI_ADDRESS          | 19:0         | DDRPHY address                |
| DFI_WRDATA_CS        | 1:0          | DDRPHY Write Data Chip Select |
| DFI_RDDATA_CS        | 1:0          | DDRPHY Read Data Chip Select  |



**Table 144: Input Ports (Continued)**

| <b>Name</b>              | <b>Range</b> | <b>Description</b>                                       |
|--------------------------|--------------|----------------------------------------------------------|
| DFI_RAS_N                | 1            | DDRPHY RAS Enable                                        |
| DFI_CAS_N                | 1            | DDRPHY CAS Enable                                        |
| DFI_ACT_N                | 1            | DDRPHY ACT                                               |
| DFI_WE_N                 | 1            | DDRPHY Write Enable                                      |
| DFI_BANK                 | 2:0          | DDRPHY Bank Address                                      |
| DFI_BG                   | 2:0          | DDRPHY Bank Group                                        |
| DFI_CID                  | 1            | DDRPHY Chip ID                                           |
| DFI_CS_N                 | 1:0          | DDRPHY Chip Select                                       |
| DFI_CKE                  | 1:0          | DDRPHY Clock Enable                                      |
| DFI_ODT                  | 1:0          | DDRPHY ODT                                               |
| DFI_ADDRESS_P1           | 19:0         | DDRPHY Phase1 Address                                    |
| DFI_WRDATA_CS_P1         | 1:0          | DDRPHY Write Data Chip Select Phase1                     |
| DFI_RDDATA_CS_P1         | 1:0          | DDRPHY Read Data Chip Select Phase1                      |
| DFI_RAS_N_P1             | 1            | DDRPHY RAS Enable Phase1                                 |
| DFI_CAS_N_P1             | 1            | DDRPHY CAS Enable Phase1                                 |
| DFI_ACT_N_P1             | 1            | DDRPHY ACT Phase1                                        |
| DFI_WE_N_P1              | 1            | DDRPHY Write Enable Phase1                               |
| DFI_BANK_P1              | 2:0          | DDRPHY Bank Address Phase1                               |
| DFI_BG_P1                | 2:0          | DDRPHY Bank Group Phase1                                 |
| DFI_CID_P1               | 1            | DDRPHY Chip ID Phase1                                    |
| DFI_CS_N_P1              | 1:0          | DDRPHY Chip Select Phase1                                |
| DFI_CKE_P1               | 1:0          | DDRPHY Clock Enable Phase1                               |
| DFI_ODT_P1               | 1:0          | DDRPHY ODT Phase1                                        |
| DFI_RESET_N              | 1            | DDRPHY DFI Reset                                         |
| TURN_ON_IE               | 1            | DDRPHY Enable                                            |
| TURN_OFF_ADRCTRL_DRIVERS | 1            | CIB Input control to tristate DDRPHY command address pad |
| AXB_SEL                  | 1            | AXB Bus Interface: Select                                |
| AXB_RESET_N              | 1            | AXB Bus Interface: Reset                                 |
| AXB_ADDR                 | 8:0          | AXB Bus Interface: Address                               |
| AXB_WRITE                | 1            | AXB Bus Interface: Write Enable                          |
| AXB_WDATA                | 31:0         | AXB Bus Interface: Write Data                            |

**Table 144: Input Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>                     |
|------------------|--------------|----------------------------------------|
| PHY_IN_DQ0       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ1       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ2       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ3       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ4       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ5       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ6       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ7       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DQ8       | 7:0          | DQ Data Bus to PHY                     |
| PHY_IN_DM0       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM1       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM2       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM3       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM4       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM5       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM6       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM7       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DM8       | 1            | DBI (Data Bus Inversion enable) to PHY |
| PHY_IN_DQS0      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS1      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS2      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS3      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS4      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS5      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS6      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS7      | 1            | DQS data strobe to PHY                 |
| PHY_IN_DQS8      | 1            | DQS data strobe to PHY                 |
| DFI_ADDRESS_P2   | 19:0         | DDRPHY Phase2 Address                  |
| DFI_WRDATA_CS_P2 | 1:0          | DDRPHY Write Data Chip Select Phase2   |
| DFI_RDDATA_CS_P2 | 1:0          | DDRPHY Read Data Chip Select Phase2    |
| DFI_RAS_N_P2     | 1            | DDRPHY RAS Enable Phase2               |
| DFI_CAS_N_P2     | 1            | DDRPHY CAS Enable Phase2               |

**Table 144: Input Ports (Continued)**

| Name             | Range | Description                          |
|------------------|-------|--------------------------------------|
| DFI_ACT_N_P2     | 1     | DDRPHY ACT Phase2                    |
| DFI_WE_N_P2      | 1     | DDRPHY Write Enable Phase2           |
| DFI_BANK_P2      | 2:0   | DDRPHY Bank Address Phase2           |
| DFI_BG_P2        | 2:0   | DDRPHY Bank Group Phase2             |
| DFI_CID_P2       | 1     | DDRPHY Chip ID Phase2                |
| DFI_CS_N_P2      | 1:0   | DDRPHY Chip Select Phase2            |
| DFI_CKE_P2       | 1:0   | DDRPHY Clock Enable Phase2           |
| DFI_ODT_P2       | 1:0   | DDRPHY ODT Phase2                    |
| DFI_ADDRESS_P3   | 19:0  | DDRPHY Phase3 Address                |
| DFI_WRDATA_CS_P3 | 1:0   | DDRPHY Write Data Chip Select Phase3 |
| DFI_RDDATA_CS_P3 | 1:0   | DDRPHY Read Data Chip Select Phase3  |
| DFI_RAS_N_P3     | 1     | DDRPHY RAS Enable Phase3             |
| DFI_CAS_N_P3     | 1     | DDRPHY CAS Enable Phase3             |
| DFI_ACT_N_P3     | 1     | DDRPHY ACT Phase3                    |
| DFI_WE_N_P3      | 1     | DDRPHY Write Enable Phase3           |
| DFI_BANK_P3      | 2:0   | DDRPHY Bank Address Phase3           |
| DFI_BG_P3        | 2:0   | DDRPHY Bank Group Phase3             |
| DFI_CID_P3       | 1     | DDRPHY Chip ID Phase3                |
| DFI_CS_N_P3      | 1:0   | DDRPHY Chip Select Phase3            |
| DFI_CKE_P3       | 1:0   | DDRPHY Clock Enable Phase3           |
| DFI_ODT_P3       | 1:0   | DDRPHY ODT Phase3                    |

**Table 145: Output Ports**

| Name        | Range | Description      |
|-------------|-------|------------------|
| DFI_RDDATA0 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA1 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA2 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA3 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA4 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA5 | 63:0  | DDRPHY Read Data |
| DFI_RDDATA6 | 63:0  | DDRPHY Read Data |

**Table 145: Output Ports (Continued)**

| <b>Name</b>          | <b>Range</b> | <b>Description</b>                |
|----------------------|--------------|-----------------------------------|
| DFI_RDDATA7          | 63:0         | DDRPHY Read Data                  |
| DFI_RDDATA8          | 63:0         | DDRPHY Read Data                  |
| DFI_RDDATA_DBI0      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI1      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI2      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI3      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI4      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI5      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI6      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI7      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_DBI8      | 7:0          | DDRPHY Read Data DBI              |
| DFI_RDDATA_VALID0    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID1    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID2    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID3    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID4    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID5    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID6    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID7    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID8    | 1            | DDRPHY Read Data Valid            |
| DFI_RDDATA_VALID0_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID1_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID2_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID3_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID4_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID5_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID6_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID7_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_RDDATA_VALID8_P2 | 1            | DDRPHY Read Data Valid P2P3       |
| DFI_PHYUPD_REQ       | 1            | DDRPHY PHY Update Request         |
| DFI_PHYUPD_TYPE      | 1:0          | DDRPHY PHY Update Type            |
| DFI_CTRLUPD_ACK      | 1            | DDRPHY Control Update Acknowledge |

**Table 145: Output Ports (Continued)**

| <b>Name</b>     | <b>Range</b> | <b>Description</b>              |
|-----------------|--------------|---------------------------------|
| DFIIT_COMPLETE  | 1            | DDRRPHY Initialization Complete |
| AXB_READY       | 1            | AXB bus interface: Read Enable  |
| AXB_RDATA       | 31:0         | AXB bus interface: Read Data    |
| PHY_OUT_DQ0     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ1     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ2     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ3     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ4     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ5     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ6     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ7     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ8     | 7:0          | DQ data bus from PHY            |
| PHY_OUT_DQ_OEN0 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN1 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN2 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN3 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN4 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN5 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN6 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN7 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DQ_OEN8 | 7:0          | Enable for DQ output from PHY   |
| PHY_OUT_DM0     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM1     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM2     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM3     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM4     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM5     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM6     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM7     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM8     | 1            | DM (Data Mask) from PHY         |
| PHY_OUT_DM_OEN0 | 1            | Enable for DM output from PHY   |
| PHY_OUT_DM_OEN1 | 1            | Enable for DM output from PHY   |

**Table 145: Output Ports (Continued)**

| <b>Name</b>      | <b>Range</b> | <b>Description</b>             |
|------------------|--------------|--------------------------------|
| PHY_OUT_DM_OEN2  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN3  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN4  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN5  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN6  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN7  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DM_OEN8  | 1            | Enable for DM output from PHY  |
| PHY_OUT_DQS0     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS1     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS2     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS3     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS4     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS5     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS6     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS7     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS8     | 1            | DQS data strobe from PHY       |
| PHY_OUT_DQS_OEN0 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN1 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN2 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN3 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN4 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN5 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN6 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN7 | 1            | Enable for DQS output from PHY |
| PHY_OUT_DQS_OEN8 | 1            | Enable for DQS output from PHY |
| DQ_READ0         | 7:0          | FPGA IO ODT Enable For Data    |
| DQ_READ1         | 7:0          | FPGA IO ODT Enable For Data    |
| DQ_READ2         | 7:0          | FPGA IO ODT Enable For Data    |
| DQ_READ3         | 7:0          | FPGA IO ODT Enable For Data    |
| DQ_READ4         | 7:0          | FPGA IO ODT Enable For Data    |
| DQ_READ5         | 7:0          | FPGA IO ODT Enable For Data    |
| DQ_READ6         | 7:0          | FPGA IO ODT Enable For Data    |

**Table 145: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                             |
|-------------|--------------|----------------------------------------------------------------|
| DQ_READ7    | 7:0          | FPGA IO ODT Enable For Data                                    |
| DQ_READ8    | 7:0          | FPGA IO ODT Enable For Data                                    |
| DM_READ0    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ1    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ2    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ3    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ4    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ5    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ6    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ7    | 1            | FPGA IO ODT enable for data mask                               |
| DM_READ8    | 1            | FPGA IO ODT enable for data mask                               |
| DQS_READ0   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ1   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ2   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ3   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ4   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ5   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ6   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ7   | 1            | FPGA IO ODT enable for data strobe                             |
| DQS_READ8   | 1            | FPGA IO ODT enable for data strobe                             |
| DQ_IE0      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE1      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE2      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE3      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE4      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE5      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |
| DQ_IE6      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads |

**Table 145: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                                                                    |
|-------------|--------------|-------------------------------------------------------------------------------------------------------|
| DQ_IE7      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DQ_IE8      | 7:0          | Optional dynamic input enable for DQ IO receivers during reads                                        |
| DM_IE0      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE1      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE2      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE3      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE4      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE5      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE6      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE7      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DM_IE8      | 1            | Optional dynamic input enable for DM/DBI IO receivers during reads (00,01,10 controlled by PHY/CTRLR) |
| DQS_IE0     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE1     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE2     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE3     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE4     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE5     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE6     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE7     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |
| DQS_IE8     | 1            | Optional dynamic input enable for DQS IO receivers during reads                                       |



**Table 145: Output Ports (Continued)**

| Name                | Range | Description                                                        |
|---------------------|-------|--------------------------------------------------------------------|
| VREF_OUTPUT_ENABLE0 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE1 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE2 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE3 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE4 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE5 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE6 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE7 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_OUTPUT_ENABLE8 | 1     | Global control input to enable/disable VREF generation if required |
| VREF_VALUE0         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE1         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE2         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE3         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE4         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE5         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE6         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE7         | 6:0   | Vref value set for each byte lane - width can be customized        |
| VREF_VALUE8         | 6:0   | Vref value set for each byte lane - width can be customized        |
| CA_OUT_CLK0         | 1     | DRAM clock output from PHY                                         |
| CA_OUT_CLK1         | 1     | DRAM clock output from PHY                                         |
| CA_OUT_RST_N        | 1     | DRAM reset output from PHY                                         |
| CA_OUT_A0           | 1     | DRAM MA output from PHY                                            |

**Table 145: Output Ports (Continued)**

| <b>Name</b>                         | <b>Range</b> | <b>Description</b>                                                                           |
|-------------------------------------|--------------|----------------------------------------------------------------------------------------------|
| CA_OUT_A1                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A2                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A3                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A4                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A5                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A6                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A7                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A8                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A9                           | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A10                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A11                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A12                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A13                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A14                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A15                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_A16                          | 1            | DRAM MA output from PHY                                                                      |
| CA_OUT_CS_N                         | 1:0          | DRAM CS_N output from PHY                                                                    |
| CA_OUT_CKE                          | 1:0          | DRAM CKE output from PHY                                                                     |
| CA_OUT_BA2                          | 1            | DRAM BA output from PHY                                                                      |
| CA_OUT_BA1                          | 1            | DRAM BA output from PHY                                                                      |
| CA_OUT_BA0                          | 1            | DRAM BA output from PHY                                                                      |
| CA_OUT_RAS_N                        | 1            | DRAM RAS_N output from PHY                                                                   |
| CA_OUT_CAS_N                        | 1            | DRAM CAS_N output from PHY                                                                   |
| CA_OUT_WE_N                         | 1            | DRAM WE_N output from PHY                                                                    |
| CA_OUT_ODT                          | 1:0          | DRAM ODT output from PHY                                                                     |
| CA_OUT_CS_OEN                       | 1            | DDR5 mode register bit                                                                       |
| CA_OUT_CLK_OEN0                     | 1            | Disable MCLK output                                                                          |
| CA_OUT_CLK_OEN1                     | 1            | Disable MCLK output                                                                          |
| VREF_CA_VALUE                       | 6:0          | VREF value driven for CA IOs                                                                 |
| UPDATE                              | 1            | Pulsed to indicate that the last TX & RX calibrated trim value may be driven on the pad-ring |
| ADDR_CTRL_LOPHY_OUTBACK_RCV<br>R_EN | 1            | Used to enable loopback test on Address/Control/Clock (CA) IOs                               |

**Table 145: Output Ports (Continued)**

| Name                         | Range | Description                                                                                   |
|------------------------------|-------|-----------------------------------------------------------------------------------------------|
| ADDR_CTRL_VREF_OUTPUT_ENABLE | 1     | VREF output enable                                                                            |
| ADRCTRL_DRIVERS_OEN          | 1     | DDRPHY IP tristate output to PIC DDRPHY command address tristate control DDRPHY_TO            |
| RECEIVER_EN0                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN1                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN2                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN3                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN4                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN5                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN6                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN7                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |
| RECEIVER_EN8                 | 1     | IO will connect to stdby_inr_cib to support memory & non-memory; Bank based & User Controlled |

**Table 146: Parameters**

| Name          | Values                                                   | Description                                                                                                 |
|---------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| RATE          | "HALF" (default)<br>"FULL"                               | DDR rate                                                                                                    |
| PROTOCOL      | "DDR3L" (default)<br>"DDR4"                              | DDR protocol                                                                                                |
| EXT_RES       | "PER_BANK" (default)<br>"PER_DDRPHY"                     | External Resistor for PVT Cal                                                                               |
| IO_CAL_UPDATE | "CONTINUOUS" (default)<br>"ONE TIME"<br>"CONTROL_UPDATE" | Continuous IO calibration update<br>One-time IO calibration update<br>User-controlled IO calibration update |

## DELAYA

Dynamic Input/Output Delay Element.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

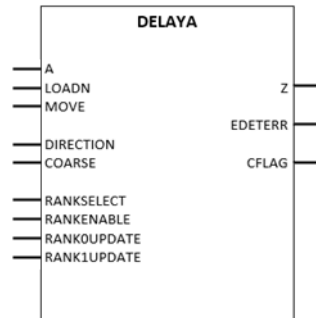


**Table 147: Input Ports**

| Name        | Description                                                                                                  |
|-------------|--------------------------------------------------------------------------------------------------------------|
| A           | Data input from pin or output register block.                                                                |
| LOADN       | 0 resets to default delay setting.                                                                           |
| MOVE        | A pulse changes delay setting. The DIRECTION pin is sampled at falling edge of MOVE.                         |
| DIRECTION   | 1 to decrease delay and 0 to increase delay.                                                                 |
| COARSE[1:0] | Dynamic coarse delay control:<br>00: No coarse delay<br>01: 800 ps delay<br>10: 1600 ps delay<br>11: Invalid |
| RANKSELECT  | 0 - Select delay rank 0<br>1 - Select delay rank 1                                                           |
| RANKENABLE  | 0 - Select bypassed actual path delay code<br>1 - Select registered actual path delay code                   |

**Table 147: Input Ports (Continued)**

| Name        | Description                                                     |
|-------------|-----------------------------------------------------------------|
| RANK0UPDATE | 0 - Rank-0 registers not enabled<br>1 - Enable Rank-0 registers |
| RANK1UPDATE | 0 - Rank-1 registers not enabled<br>1 - Enable Rank-1 registers |

**Table 148: Output Ports**

| Name    | Description                                                                                             |
|---------|---------------------------------------------------------------------------------------------------------|
| Z       | Delayed data to input register block or to pin.                                                         |
| EDETERR | Error detected when using the edge monitor logic.                                                       |
| CFLAG   | Flag indicating the delay counter has reached the max (when moving up) or min (when moving down) value. |

**Table 149: Parameters**

| Attribute         | Values                                                                                                                                                                                                                            | Description                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DEL_MODE          | "USER_DEFINED" ( <i>default</i> )<br>"SCLK_ZEROHOLD"<br>"ECLK_ALIGNED"<br>"ECLK_CENTERED"<br>"SCLK_ALIGNED"<br>"SCLK_CENTERED"<br>"DQS_CMD_CLK"<br>"DQS_ALIGNED_X2"<br>"DQS_ALIGNED_X4"<br>"DQS_CENTERED_X2"<br>"DQS_CENTERED_X4" | Sets the delay mode.<br><br>DQS_CMD_CLK is only for the DDR Memory CMD and CLK outputs.<br><br>DQS_ALIGNED_X2/X4 is shared by DQS generic and the DDR memory inputs.<br><br>DQS_CENTERED_X2/X4 is used for DQS generic inputs.<br><br>When DEL_MODE is not "USER_DEFINED," DEL_VALUE and COARSE_DELAY are set to a value based on DEL_MODE and device performance. MAP will use fixed values for these components during the MAP. |
| DEL_VALUE         | "0" ( <i>default</i> )                                                                                                                                                                                                            | Sets delay value when DEL_MODE is set to USER_DEFINED. Step is 12.5 ps.                                                                                                                                                                                                                                                                                                                                                           |
| COARSE_DELAY_MODE | "STATIC" ( <i>default</i> )<br>"DYNAMIC"                                                                                                                                                                                          | Selects coarse delay code control:<br>0 - Selects from MC1 (STATIC)<br>1 - Selects from CIB (DYNAMIC)                                                                                                                                                                                                                                                                                                                             |
| COARSE_DELAY      | "0NS" ( <i>default</i> )<br>"0P8NS"<br>"1P6NS"                                                                                                                                                                                    | Coarse delay setting for lol delay cell.                                                                                                                                                                                                                                                                                                                                                                                          |

**Table 149: Parameters (Continued)**

| Attribute     | Values                                     | Description                                                  |
|---------------|--------------------------------------------|--------------------------------------------------------------|
| EDGE_MONITOR  | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Enables edge monitor when in IDDR X2, X7to1, X4, or X5 mode. |
| WAIT_FOR_EDGE | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Used for SPI4.2 implementation.                              |

This primitive can be used to delay the input data from the input pin to the IDDR, IREG, or FPGA OR to delay the output data from the ODDR, OREG, or FPGA fabric to the output pin. DELAYA is useful to adjust for any skews amongst the input or output data buses. DELAYA can also be used to generate skew between the bits of an output bus to reduce SSO noise.

DELAYA can be used with IDDR, ODDR, or SDR modules, as well as on the direct input to the FPGA. DELAYA is shared by the input and output paths, and so it can only be used to delay the input data or the output data on a given pin.

The data input to this primitive can be delayed using:

- ▶ Pre-determined delay value (for Zero Hold time, delay based on Interface Type)
- ▶ Fixed Delay values entered by user

The delay can also be dynamically updated using counter up and down controls.

You can optionally bypass DELAYA completely as well.

By default, DELAYA is configured to factory delay settings based on the clocking structure. You can overwrite the DELAYA setting using the MOVE and DIRECTION control inputs. The LOADN pin will reset the delay back to the default value.

 
## DELAYB

Static Input/Output Delay Element.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL

- ▶ UT24C
- ▶ UT24CP

**Table 150: Input Ports**

| Name | Description                                   |
|------|-----------------------------------------------|
| A    | Data input from pin or output register block. |

**Table 151: Output Ports**

| Name | Description                                     |
|------|-------------------------------------------------|
| Z    | Delayed data to input register block or to pin. |

**Table 152: Parameters**

| Attribute    | Values                                                                                                                                                                                                                   | Description                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COARSE_DELAY | "0NS" (default)<br>"0P8NS"<br>"1P6NS"                                                                                                                                                                                    | Coarse delay setting for lol delay cell.                                                                                                                                                                                                                                                                                                                                                                          |
| DEL_VALUE    | "0" (default)                                                                                                                                                                                                            | Sets delay value when DEL_MODE is set to USER_DEFINED. Step is 12.5 ps.                                                                                                                                                                                                                                                                                                                                           |
| DEL_MODE     | "USER_DEFINED" (default)<br>"SCLK_ZEROHOLD"<br>"ECLK_ALIGNED"<br>"ECLK_CENTERED"<br>"SCLK_ALIGNED"<br>"SCLK_CENTERED"<br>"DQS_CMD_CLK"<br>"DQS_ALIGNED_X2"<br>"DQS_ALIGNED_X4"<br>"DQS_CENTERED_X2"<br>"DQS_CENTERED_X4" | Sets the delay mode.<br>DQS_CMD_CLK is only for the DDR Memory CMD and CLK outputs.<br>DQS_ALIGNED_X2/X4 is shared by DQS generic and the DDR memory inputs.<br>DQS_CENTERED_X2/X4 is used for DQS generic inputs.<br>When DEL_MODE is not "USER_DEFINED," DEL_VALUE and COARSE_DELAY are set to a value based on DEL_MODE and device performance. MAP will use fixed values for these components during the MAP. |
| GSR          | "ENABLED" (default)<br>"DISABLED"                                                                                                                                                                                        | Enable global set/reset.                                                                                                                                                                                                                                                                                                                                                                                          |

This primitive can be used to delay the input data from the input pin to the IDDR, IREG, or FPGA OR to delay the output data from the ODDR, OREG, or FPGA fabric to the output pin. DELAYB is useful to adjust for any skews

amongst the input or output data buses. DELAYB can also be used to generate skew between the bits of an output bus to reduce SSO noise.

DELAYB can be used with IDDR, ODDR, or SDR modules, as well as on the direct input to the FPGA. DELAYB is shared by the input and output paths, and so it can only be used to delay the input data or the output data on a given pin.

The data input to this primitive can be delayed using:

- ▶ Predetermined delay value (for Zero Hold time, delay based on Interface Type)
- ▶ Fixed Delay values entered by user

The delay can also be dynamically updated using counter up and down controls.

You can optionally bypass DELAYB completely as well.

By default, DELAYB is configured to factory delay settings based on the clocking structure. You cannot change the delay when using this module.


## DELAYC

Supports edge monitor feature

Architectures supported:

- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C

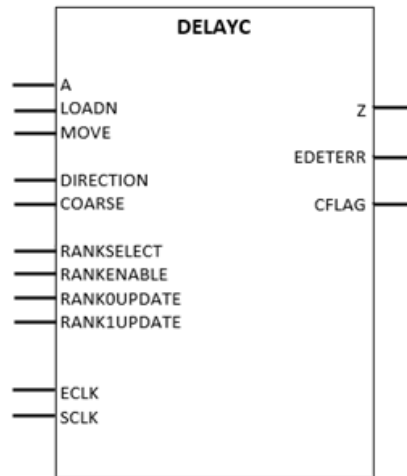

**Table 153: Input Ports**

| Name        | Description                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------|
| A           | Data input from pin or output register block '0' on LOADN will reset to default delay setting                        |
| LOAD_N      | '0' on LOADN will reset to default delay setting                                                                     |
| MOVE        | "Pulse" on MOVE will change delay setting. DIRECTION will be sampled at falling edge of MOVE.                        |
| DIRECTION   | '1' to decrease delay and '0' to increase delay                                                                      |
| COARSE[1:0] | Dynamic coarse delay control (2 bits)<br>00: no coarse delay<br>01: 800 ps delay<br>10: 1600 ps delay<br>11: invalid |
| RANKSELECT  | Select which rank<br>0 - Select delay rank 0<br>1 - Select delay rank 1                                              |
| RANKENABLE  | Enable rank register<br>0 - Select bypassed actual path delay code<br>1 - Select registered actual path delay code   |
| RANK0UPADTE | Enable RANK0 register<br>0 - Rank-0 registers not enabled<br>1 - Enable Rank-0 registers                             |

**Table 153: Input Ports (Continued)**

| Name        | Description                                                                              |
|-------------|------------------------------------------------------------------------------------------|
| RANK1UPADTE | Enable RANK1 register<br>0 - Rank-1 registers not enabled<br>1 - Enable Rank-1 registers |
| ECLK        | Fast edge clock                                                                          |
| SCLK        | Primary clock input (divide-by-2 of ECLK)                                                |

**Table 154: Output Ports**

| Name    | Description                                                                                            |
|---------|--------------------------------------------------------------------------------------------------------|
| Z       | Delayed data to input register block or to pin                                                         |
| EDETERR | Error detected when using the edge monitor logic                                                       |
| CFLAG   | Flag indicating the delay counter has reached the max (when moving up) or min (when moving down) value |

**Table 155: Parameters**

| Attribute         | Values                                                                                                                                                                                                                            | Description                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DEL_MODE          | "USER_DEFINED" ( <i>default</i> )<br>"SCLK_ZEROHOLD"<br>"ECLK_ALIGNED"<br>"ECLK_CENTERED"<br>"SCLK_ALIGNED"<br>"SCLK_CENTERED"<br>"DQS_CMD_CLK"<br>"DQS_ALIGNED_X2"<br>"DQS_ALIGNED_X4"<br>"DQS_CENTERED_X2"<br>"DQS_CENTERED_X4" | Sets the delay mode.<br>DQS_CMD_CLK is only for the DDR Memory CMD and CLK outputs.<br>DQS_ALIGNED_X2/X4 is shared by DQS generic and the DDR memory inputs.<br>DQS_CENTERED_X2/X4 is used for DQS generic inputs.<br>When DEL_MODE is not "USER_DEFINED," DEL_VALUE and COARSE_DELAY are set to a value based on DEL_MODE and device performance. MAP will use fixed values for these components during the MAP. |
| DEL_VALUE         | "0" ( <i>default</i> )                                                                                                                                                                                                            | Sets delay value when DEL_MODE is set to USER_DEFINED. Step is 12.5 ps.                                                                                                                                                                                                                                                                                                                                           |
| COARSE_DELAY_MODE | "STATIC" ( <i>default</i> )<br>"DYNAMIC"                                                                                                                                                                                          | Selects coarse delay code control:<br>0 - Selects from MC1 (STATIC)<br>1 - Selects from CIB (DYNAMIC)                                                                                                                                                                                                                                                                                                             |
| COARSE_DELAY      | "0NS" ( <i>default</i> )<br>"0P8NS"<br>"1P6NS"                                                                                                                                                                                    | Coarse delay setting for lol delay cell.                                                                                                                                                                                                                                                                                                                                                                          |

**Table 155: Parameters (Continued)**


| Attribute     | Values                                     | Description                                                  |
|---------------|--------------------------------------------|--------------------------------------------------------------|
| EDGE_MONITOR  | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Enables edge monitor when in IDDR X2, X7to1, X4, or X5 mode. |
| WAIT_FOR_EDGE | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Used for SPI4.2 implementation.                              |
| GSR           | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset.                                     |

## DELAYD

Input or output delay for SCLK interface with dynamically control delay.

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

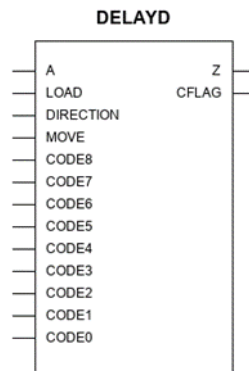**Table 156: Input Ports**

| Name      | Range | Type    | Active State | Description                                                                   |
|-----------|-------|---------|--------------|-------------------------------------------------------------------------------|
| A         | 1     | Data    | High         | Data input from pin                                                           |
| LOAD      | 1     | Control | High         | LOAD is set to 1 to reset to delay setting (DEL_VALUE)                        |
| MOVE      | 1     | Control | High         | MOVE will change delay setting. DIR will be sampled at "falling edge" of MOVE |
| DIRECTION | 1     | Control | High         | DIRECTION<br>1 to decrease delay<br>0 to increase delay                       |

**Table 156: (Continued)Input Ports**

| Name  | Range | Type | Active State | Description            |
|-------|-------|------|--------------|------------------------|
| CODE8 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE7 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE6 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE5 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE4 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE3 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE2 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE1 | 1     | Data | High         | Delay Code from DDRDLL |
| CODE0 | 1     | Data | High         | Delay Code from DDRDLL |

**Table 157: Output Ports**

| Name  | Range | Type | Active State | Description                                                                                        |
|-------|-------|------|--------------|----------------------------------------------------------------------------------------------------|
| Z     | 1     | Flag | High         | Delay Output                                                                                       |
| CFLAG | 1     | Flag | High         | Flag indicating the delay counter has reached max (when moving up) or min (when moving down) value |

**Table 158: Parameters**


| Name       | Values                                                         | Description               |
|------------|----------------------------------------------------------------|---------------------------|
| DEL_MODE   | USER_DEFINED<br>SCLK_ZEROHOLD<br>SCLK_ALIGNED<br>SCLK_CENTERED | Set delay mode            |
| DEL_VALUE  | "0" to "511"                                                   | Static Delay Value        |
| DEL_SOURCE | "DEL_VALUE"<br>"DDRDLL"                                        | Static Delay Value Source |

## DELAYE

Input delay or output delay for SCLK interface with static delay.

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

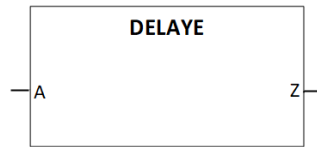**Table 159: Input Ports**

| Name | Range | Type | Active State | Description         |
|------|-------|------|--------------|---------------------|
| A    | 1     | Data | High         | Data input from pin |

**Table 160: Output Ports**

| Name | Range | Type | Active State | Description  |
|------|-------|------|--------------|--------------|
| Z    | 1     | Flag | High         | Delay Output |

**Table 161: Parameters**


| Name      | Values                                                         | Description        |
|-----------|----------------------------------------------------------------|--------------------|
| DEL_MODE  | USER_DEFINED<br>SCLK_ZEROHOLD<br>SCLK_ALIGNED<br>SCLK_CENTERED | Set delay mode     |
| DEL_VALUE | "0" to "511"                                                   | Static Delay Value |

## DELAYF

Input or output delay for ECLK interface with dynamically control delay

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

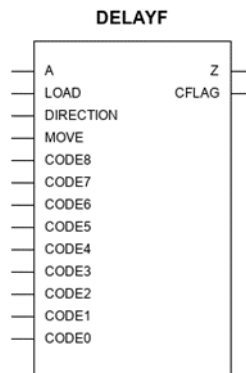**Table 162: Input Ports**

| Name      | Range | Type    | Active State | Description                                                                   |
|-----------|-------|---------|--------------|-------------------------------------------------------------------------------|
| A         | 1     | Data    | High         | Data input from pin                                                           |
| LOAD      | 1     | Control | High         | LOAD is set to 0 to reset to delay setting (DEL_VALUE)                        |
| MOVE      | 1     | Control | High         | MOVE will change delay setting. DIR will be sampled at "falling edge" of MOVE |
| DIRECTION | 1     | Control | High         | DIRECTION<br>1 to decrease delay<br>0 to increase delay                       |
| CODE8     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE7     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE6     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE5     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE4     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE3     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE2     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE1     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |
| CODE0     | 1     | Data    | High         | Delay Code from DDRDLL                                                        |

**Table 163: Output Ports**

| Name  | Range | Type | Action State | Description                                                                                        |
|-------|-------|------|--------------|----------------------------------------------------------------------------------------------------|
| Z     | 1     | Data | High         | Delay Output                                                                                       |
| CFLAG | 1     | Flag | High         | Flag indicating the delay counter has reached max (when moving up) or min (when moving down) value |

**Table 164: Parameters**


| Name       | Values                                        | Description               |
|------------|-----------------------------------------------|---------------------------|
| DEL_MODE   | USER_DEFINED<br>ECLK_ALIGNED<br>ECLK_CENTERED | Set delay mode            |
| DEL_VALUE  | "0" to "511"                                  | Static Delay Value        |
| DEL_SOURCE | "DEL_VALUE"<br>"DDRDLL"                       | Static Delay Value Source |

## DELAYG

Dynamic Delay for Bottom Bank

Architectures Supported:

▶ LFMXO4

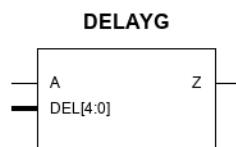**Table 165: Input Ports**

| Name | Range | Description                   |
|------|-------|-------------------------------|
| A    | 1     | Data Input A                  |
| DEL  | 4:0   | Dynamic delay inputs from CIB |

**Table 166: Output Ports**

| Name | Range | Description       |
|------|-------|-------------------|
| Z    | 1     | Output with delay |


**Description**

DELAYG is the dynamic delay for VPIC\_RX, IOLA and IOLC cells in bottom side only. It can be used for x2, x4 and 7:1 applications. Refer to the following technical note for more details:

**DELAYH****Fixed Delay in PIO**

Architectures Supported:

▶ LFMXO4

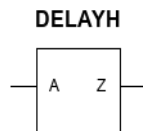**Table 167: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A    | 1     | Data input  |

**Table 168: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Z    | 1     | Data output |



**Table 169: Parameters**

| Name      | Values                                                                                                                        | Description        |
|-----------|-------------------------------------------------------------------------------------------------------------------------------|--------------------|
| DEL_MODE  | "SCLK_ZEROHOLD",<br>"ECLK_ALIGNED",<br>"ECLK_CENTERED",<br>"SCLK_ALIGNED",<br>"SCLK_CENTERED",<br>"USER_DEFINED"<br>(default) | Set delay mode     |
| DEL_VALUE | "DELAY0" (default),<br>"DELAY1", "DELAY2", ...,<br>"DELAY31"                                                                  | Static Delay Value |

**Description**


DELAYH is the fix delay in PIO for all banks and all sides. It can be used for all IO registers and DDR types.

**DIFFCLKIO**

Differential to single-end clock buffer.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

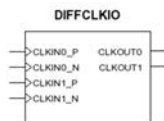**Table 170: Input Ports**

| Name     | Description                    |
|----------|--------------------------------|
| CLKIN0_P | 1st diff reference clock input |
| CLKIN0_N | 1st diff reference clock input |
| CLKIN1_P | 2nd diff reference clock input |
| CLKIN1_N | 2nd diff reference clock input |

**Table 171: Output Ports**

| Name    | Description                 |
|---------|-----------------------------|
| CLKOUT0 | 1st single end clock output |
| CLKOUT1 | 2nd single end clock output |

**Table 172: Parameters**

| Name      | Values                            | Description                               |
|-----------|-----------------------------------|-------------------------------------------|
| TERM_RD   | "ENABLED" (default)<br>"DISABLED" | Differential termination resistor control |
| WEAK_BIAS | "DISABLED" (default)<br>"ENABLED" | Internal weak bias enable control         |

## DIFFIO18

Single Ended + Differential I/O block for 1.8V block

Architectures supported:

- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5D
- ▶ LFMXO5-25
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C

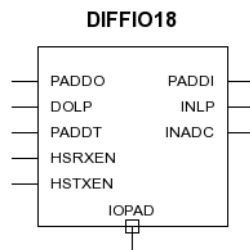


**Table 173: Input Ports**

| Name   | Description                              |
|--------|------------------------------------------|
| PADD0  | Data output from fabric to IO pad        |
| DOLP   | Data output for MIPI low-power mode      |
| PADDT  | Data tri-state control; high = tri-state |
| HSRXEN | RX enable for MIPI high-speed mode       |
| HSTXEN | TX enable for MIPI high-speed mode       |

**Table 174: Output Ports**

| Name  | Description                        |
|-------|------------------------------------|
| PADDI | Data input from IO pad to fabric   |
| INLP  | Data input for MIPI low-power mode |
| INADC | Output to ADC                      |

**Table 175: Bidirectional Ports**

| Name  | Description       |
|-------|-------------------|
| IOPAD | IO Pad connection |

**Table 176: Parameters**

| Name     | Values                                                       | Description                      |
|----------|--------------------------------------------------------------|----------------------------------|
| PULLMODE | "DOWN" (default)<br>"NONE"<br>"UP"<br>"KEEPER"<br>"FAILSAFE" | Enables pullup and pulldown mode |
| ENADC_IN | "DISABLED" (default)<br>"ENABLED"                            | Enables pad A path to adc block  |
| MIPI     | "DISABLED" (default)<br>"ENABLED"                            | Enable MIPI_DPHY IO TYPE         |

## DIFFIO18A

Single Ended + Differential I/O block for 1.8V block

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

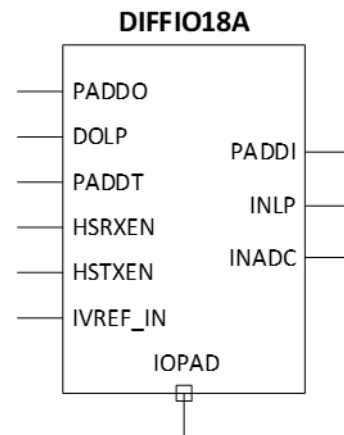


**Table 177: Input Ports**

| Name     | Description                                                                                                                                                                                                                                                                                                                                          |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PADD0    | HS Data out to PAD                                                                                                                                                                                                                                                                                                                                   |
| DOLP     | LP Data out to PAD                                                                                                                                                                                                                                                                                                                                   |
| PADDT    | Tri-state input signals to IO A,<br>0: driver output enabled<br>1: diver enabled to tri-state(high-Z) output                                                                                                                                                                                                                                         |
| HSRXEN   | Enable signal for HSRX termination ibuf_rd:0 disable; 1 enable                                                                                                                                                                                                                                                                                       |
| HSTXEN   | Enable signal for HSTX termination                                                                                                                                                                                                                                                                                                                   |
| IVREF_IN | Internal Receiver Reference Voltage Input. Each bank will support 3 VREF analog input voltages for flexibility to receive three different referenced input levels on the same bank. VREFs are used to set the threshold for the referenced input receiver. Each referenced receiver has a programmable option to select VREF1/2 and a internal VREF. |

**Table 178: Output Ports**

| Name  | Description                           |
|-------|---------------------------------------|
| PADDI | Data in                               |
| INLP  | MIPI LP RX output                     |
| INADC | Output to ADC through switch from PAD |

**Table 179: Bidirectional Ports**

| Name  | Description                                             |
|-------|---------------------------------------------------------|
| IOPAD | A virtual port, which is connected to the external pad. |

**Table 180: Parameters**

| Name     | Values                             | Description                     |
|----------|------------------------------------|---------------------------------|
| PULLMODE | "DOWN" (default)<br>"NONE"<br>"UP" | Pull mode                       |
| ENADC_IN | "DISABLED" (default)<br>"ENABLED"  | Enables pad A path to adc block |
| MIPI     | "DISABLED" (default)<br>"ENABLED"  | MIPI usage                      |


## DLLDEL

Slave delay elements are used to support generic DDR RX modes to shift input clock phase by 90 degrees.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T

- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

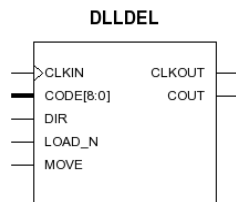**Table 181: Input Ports**

| Name      | Description                                                                                  |
|-----------|----------------------------------------------------------------------------------------------|
| CLKIN     | Input clock                                                                                  |
| CODE[8:0] | Code control                                                                                 |
| DIR       | Direction                                                                                    |
| LOAD_N    | '0' on LOADN will reset to default delay setting                                             |
| MOVE      | "Pulse" on MOVE will change delay setting. DIRECTION will be sampled at falling edge of MOVE |

**Table 182: Output Ports**

| Name   | Description            |
|--------|------------------------|
| CLKOUT | Output clock to fabric |
| COUT   | Carry out              |

**Table 183: Parameters**

| Name   | Values      | Description                                                                                                                                                                                                                                                  |
|--------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ADJUST | 0 (default) | Offset for slave delay adjustment. mc1_adjust[9] is the sign bit.<br><br>Examples:<br>mc1_adjust[9:0] = 0_000000000: adds 0 units of delay<br>mc1_adjust[9:0] = 0_000000010: adds 2 units of delay<br>mc1_adjust[9:0] = 0_111111111: adds 511 units of delay |

**Table 183: Parameters (Continued)**


| Name       | Values                            | Description                                                                                                                                                                   |
|------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DEL_ADJUST | "PLUS" (default)<br>"MINUS"       | Sign bit for mc1_adjust, bit [9].<br>The DEL_ADJUST and ADJUST are set to a value based on device performance. MAP will use fixed values for these components during the MAP. |
| ENABLE     | "ENABLED" (default)<br>"DISABLED" | Enables the block and ties off the clk output when not using this block.                                                                                                      |

## DLLDELA

DDR RX modes to shift input clock phase by 90 degrees

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

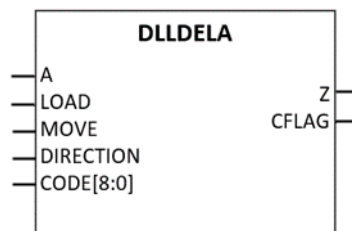**Table 184: Input Ports**

| Name      | Range | Type    | Active State | Description                                                                  |
|-----------|-------|---------|--------------|------------------------------------------------------------------------------|
| A         | 1     | Data    | High         | Data input from pin                                                          |
| LOAD      | 1     | Control | High         | LOAD is set to 1 to reset to default delay setting                           |
| MOVE      | 1     | Control | High         | MOVE will change delay setting. DIR will be sampled at "rising edge" of MOVE |
| DIRECTION | 1     | Control | High         | DIRECTION<br>1 to decrease delay<br>0 to increase delay                      |
| CODE      | 9     | Control | High         | Delay code from DDRDLL                                                       |

**Table 185: Output Ports**

| Name  | Range | Type | Active State | Description                                                                                        |
|-------|-------|------|--------------|----------------------------------------------------------------------------------------------------|
| Z     | 1     | Data | High         | Delayed data to input register block                                                               |
| CFLAG | 1     | Flag | High         | Flag indicating the delay counter has reached max (when moving up) or min (when moving down) value |

**Table 186: Parameters**


| Name      | Values                  | Description                                                                                                                                                            |
|-----------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DEL_ADJ   | "PLUS"<br>"MINUS"       | DLL control code forcing.<br>"DLL_LOOP": Code/lock generated from DLL loop<br>"FORCE_MAX": Force lock and code is set to maximum of 511 for lower input frequency mode |
| DEL_VALUE | "0" to "511"            | Offset for slave delay adjustment                                                                                                                                      |
| GSR       | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature                                                                                                                                          |

## DLLDELC

Clock Shifting for ECLK or PCLK

Architectures Supported:

- ▶ LFMXO4

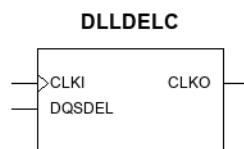**Table 187: Input Ports**

| Name   | Range | Description                       |
|--------|-------|-----------------------------------|
| CLKI   | 1     | clk input from I/O buffer         |
| DQSDEL | 1     | Dynamic delay inputs from DQSDLLC |



**Table 188: Output Ports**

| Name | Range | Description             |
|------|-------|-------------------------|
| CLKO | 1     | Clock output with delay |

**Table 189: Parameters**

| Name    | Values           | Description                                                           |
|---------|------------------|-----------------------------------------------------------------------|
| DEL_ADJ | "PLUS" (default) | DEL_ADJUST and ADJUST are set to a value based on device performance. |
| DEL_VAL | "0"              | Static Delay Value                                                    |

**Description**


DLLDELC is the generic input clock shifting using DQSDEL from DQSDLL. For more details such as application examples, refer to the related technical notes on the Lattice web site.

**DOTPRODADDSUB9X9**

Four 9x9 Multiplier with Optional Input/output registers and adder/subtractor

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

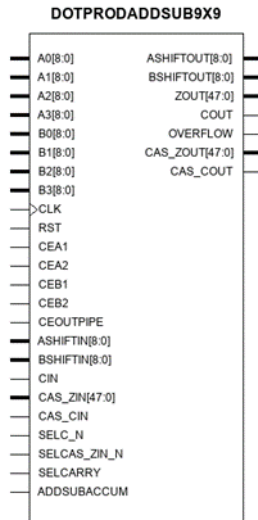**Table 190: Input Ports**

| Name      | Range | Type         | Active State | Description                               |
|-----------|-------|--------------|--------------|-------------------------------------------|
| A0        | 8:0   | Data         | Active high  | Operand A0                                |
| B0        | 8:0   | Data         | Active high  | Operand B0                                |
| A1        | 8:0   | Data         | Active high  | Operand A1                                |
| B1        | 8:0   | Data         | Active high  | Operand B1                                |
| A2        | 8:0   | Data         | Active high  | Operand A2                                |
| B2        | 8:0   | Data         | Active high  | Operand B2                                |
| A3        | 8:0   | Data         | Active high  | Operand A3                                |
| B3        | 8:0   | Data         | Active high  | Operand B3                                |
| CLK       | 1     | Clock        | Active high  | Clock                                     |
| RST       | 1     | Reset        | Active high  | Synchronous reset for all registers       |
| CEA1      | 1     | Clock Enable | Active high  | Input A register clock enable, stage one  |
| CEA2      | 1     | Clock Enable | Active high  | Input A register clock enable, stage two  |
| CEB1      | 1     | Clock Enable | Active high  | Input B register clock enable, stage one  |
| CEB2      | 1     | Clock Enable | Active high  | Input B register clock enable, stage two  |
| CEOUTPIPE | 1     | Clock Enable | Active high  | Pipeline and output register clock enable |
| ASHIFTIN  | 8:0   | Data         | Active high  | Operand A shift chain input               |
| BSHIFTIN  | 8:0   | Data         | Active high  | Operand B shift chain input               |
| CIN       | 1     | Control      | Active high  | Carry in                                  |

**Table 190: Input Ports (Continued)**

| Name         | Range | Type    | Active State | Description                                                                 |
|--------------|-------|---------|--------------|-----------------------------------------------------------------------------|
| CAS_ZIN      | 47:0  | Control | Active low   | Cascade input                                                               |
| CAS_CIN      | 1     | Control | Active low   | Cascade carry in                                                            |
| SELC_N       | 1     | Control | Active high  | Select between C or accumulator output for input to the accumulator         |
| SELCAS_ZIN_N | 1     | Control | Active low   | Select between CAS_ZIN or accumulator output for input to the accumulator   |
| SELCARRY     | 1     | Control | Active high  | Select between CIN or accumulator output Z[47] for input to the accumulator |
| ADDSUBACCUM  | 1     | Control | Active high  | Add/sub control for accumulator, 0=add, 1=subtract                          |

**Table 191: Output Ports**

| Name      | Range | Type    | Active State | Description                                      |
|-----------|-------|---------|--------------|--------------------------------------------------|
| ASHIFTOUT | 8:0   | Control | Active high  | Operand A shift chain output                     |
| BSHIFTOUT | 8:0   | Control | Active high  | Operand B shift chain output                     |
| ZOUT      | 47:0  | Control | Active high  | Multiplication/accumulator output result         |
| COUT      | 1     | Control | Active high  | Carry out                                        |
| OVERFLOW  | 1     | Flag    | Active high  | Overflow flag                                    |
| CAS_ZOUT  | 47:0  | Control | Active low   | Cascade multiplication/accumulator output result |
| CAS_COUT  | 1     | Control | Active low   | Cascade carry out                                |

**Table 192: Parameters**

| Name       | Values                                                          | Description         |
|------------|-----------------------------------------------------------------|---------------------|
| REGINPUTA0 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A0 |
| REGINPUTB0 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B0 |


**Table 192: Parameters (Continued)**


| <b>Name</b>   | <b>Values</b>                                                   | <b>Description</b>       |
|---------------|-----------------------------------------------------------------|--------------------------|
| REGSHIFTOUTA0 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A0 |
| REGSHIFTOUTB0 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B0 |
| SHIFTINPUTA0  | "DISABLED" (default)<br>"ENABLED"                               | Shift input A0           |
| SHIFTINPUTB0  | "DISABLED" (default)<br>"ENABLED"                               | Shift input B0           |
| REGINPUTA1    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A1      |
| REGINPUTB1    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B1      |
| REGSHIFTOUTA1 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A1 |
| REGSHIFTOUTB1 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B1 |
| SHIFTINPUTA1  | "DISABLED" (default)<br>"ENABLED"                               | Shift input A1           |
| SHIFTINPUTB1  | "DISABLED" (default)<br>"ENABLED"                               | Shift input B1           |
| REGINPUTA2    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A2      |
| REGINPUTB2    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B2      |
| REGSHIFTOUTA2 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A2 |

**Table 192: Parameters (Continued)**

| Name             | Values                                                          | Description                                                                  |
|------------------|-----------------------------------------------------------------|------------------------------------------------------------------------------|
| REGSHIFTOUTB2    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B2                                                     |
| RESETMODE        | "SYNC" (default)<br>"ASYNC"                                     | Synchronous/asynchronous reset control                                       |
| SHIFTINPUTA2     | "DISABLED" (default)<br>"ENABLED"                               | Shift input A2                                                               |
| SHIFTINPUTB2     | "DISABLED" (default)<br>"ENABLED"                               | Shift input B2                                                               |
| REGINPUTA3       | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A3                                                          |
| REGINPUTB3       | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B3                                                          |
| REGSHIFTOUTA3    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A3                                                     |
| REGSHIFTOUTB3    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B3                                                     |
| SHIFTINPUTA3     | "DISABLED" (default)<br>"ENABLED"                               | Shift input A3                                                               |
| SHIFTINPUTB3     | "DISABLED" (default)<br>"ENABLED"                               | Shift input B3                                                               |
| REGPIPE          | "REGISTERED" (default)<br>"BYPASSED"                            | Register pipeline                                                            |
| REGOUTPUT        | "REGISTERED" (default)<br>"BYPASSED"                            | Register output                                                              |
| REGCAS_ZOUT      | "REGISTERED" (default)<br>"BYPASSED"                            | Register CAS_COUT and CAS_ZOUT[47:0]                                         |
| REGACCUMCONTROLS | "REGISTERED" (default)<br>"BYPASSED"                            | Register accumulator controls (CIN, SELCARRY, SELCAS_ZIN, ADDSUBACCUM, SELC) |
| ACCUM_EN         | "DISABLED" (default)<br>"ENABLED"                               | Enable accumulator                                                           |

| Name            | Values                                            | Description                                                               |
|-----------------|---------------------------------------------------|---------------------------------------------------------------------------|
| CAS_ZIN_EN      | "DISABLED" (default)<br>"ENABLED"                 | Enable dynamic CAS_ZIN for accumulator input (1) or tie to constant 0 (0) |
| CAS_CIN_EN      | "DISABLED" (default)<br>"ENABLED"                 | Use CAS_CIN for carry input                                               |
| ROUNDMODE       | "ROUND_TO_ZERO" (default)<br>"ROUND_TO_INFINITY"  | Rounding mode                                                             |
| SATURATION      | "DISABLED" (default)<br>"TO_NEG_MAX"<br>"TO_ZERO" | Saturation enable                                                         |
| SATURATION_BITS | "48" (default)<br>"3-48"                          | Saturation bits                                                           |
| GSR             | "DISABLED" (default)<br>"ENABLED"                 | Enable global set/reset                                                   |

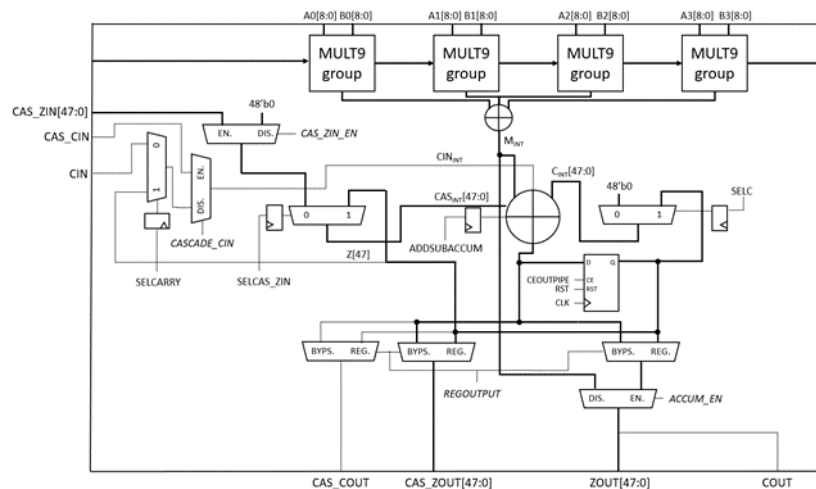

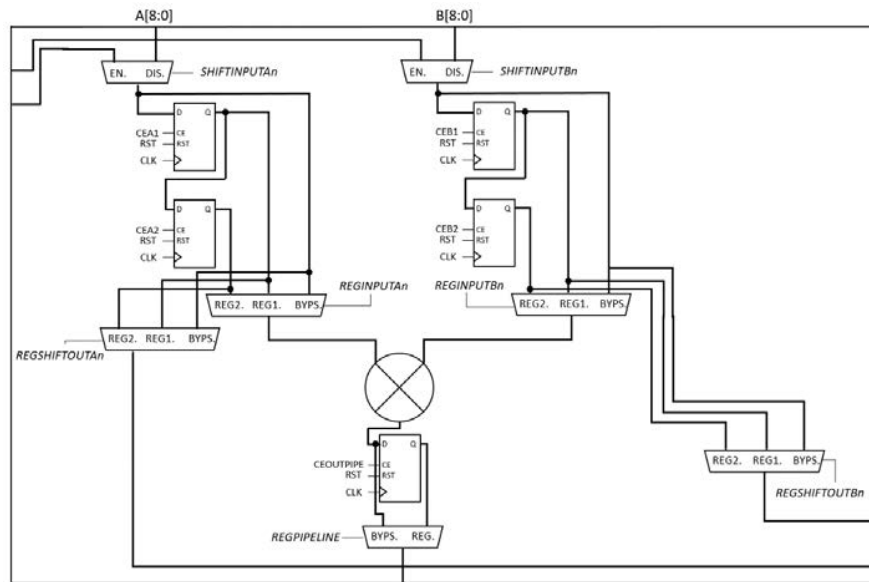

When the accumulator is enabled, it implements the function:

$$M\_INT = (A\_0 * B\_0 + (A\_1 * B\_1) + (A\_2 * B\_2) + (A\_3 * B\_3)$$

$$Z\_out = CAS\_INT + C\_INT + CIN\_INT +/- M\_INT$$

When the accumulator is disabled, it implements the function:

$$Z\_OUT = (A\_0 * B\_0) + (A\_1 * B\_1) + (A\_2 * B\_2) + (A\_3 * B\_3)$$

See the first diagram for the internal node corresponding to the above terms.


Although not shown in the above diagram, the register for accumulator inputs CIN, CAS\_ZIN\_EN, SELCAS\_ZIN, and ADDSUBACCUM is bypassable with the parameter REGACCUMCONTROLS.

## **DOTPRODADDSUB9X9A**

Four 9x9 Multiplier with Optional Input/output registers and adder/subtractor

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

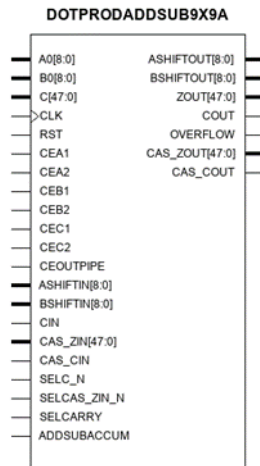**Table 193: Input Ports**

| Name      | Range | Type         | Active State | Description                                                         |
|-----------|-------|--------------|--------------|---------------------------------------------------------------------|
| A0        | 8:0   | Data         | Active high  | Operand A0                                                          |
| B0        | 8:0   | Data         | Active high  | Operand B0                                                          |
| CLK       | 1     | Clock        | Active high  | Clock                                                               |
| RST       | 1     | Reset        | Active high  | Synchronous reset for all registers                                 |
| CEA1      | 1     | Clock Enable | Active high  | Input A register clock enable, stage one                            |
| CEA2      | 1     | Clock Enable | Active high  | Input A register clock enable, stage two                            |
| CEB1      | 1     | Clock Enable | Active high  | Input B register clock enable, stage one                            |
| CEB2      | 1     | Clock Enable | Active high  | Input B register clock enable, stage two                            |
| CEOUTPIPE | 1     | Clock Enable | Active high  | Pipeline and output register clock enable                           |
| C         | 47:0  | Control      | Active high  | Operand C                                                           |
| CEC1      | 1     | Clock Enable | Active high  | Input C register clock enable, stage one                            |
| CEC2      | 1     | Clock Enable | Active high  | Input C register clock enable, stage two                            |
| ASHIFTIN  | 8:0   | Data         | Active high  | Operand A shift chain input                                         |
| BSHIFTIN  | 8:0   | Data         | Active high  | Operand B shift chain input                                         |
| CIN       | 1     | Control      | Active high  | Carry in                                                            |
| CAS_ZIN   | 47:0  | Control      | Active low   | Cascade input                                                       |
| CAS_CIN   | 1     | Control      | Active low   | Cascade carry in                                                    |
| SELC_N    | 1     | Control      | Active high  | Select between C or accumulator output for input to the accumulator |



**Table 193: Input Ports (Continued)**

| Name         | Range | Type    | Active State | Description                                                                 |
|--------------|-------|---------|--------------|-----------------------------------------------------------------------------|
| SELCAS_ZIN_N | 1     | Control | Active low   | Select between CAS_ZIN or accumulator output for input to the accumulator   |
| SELCARRY     | 1     | Control | Active high  | Select between CIN or accumulator output Z[47] for input to the accumulator |
| ADDSUBACCUM  | 1     | Control | Active high  | Add/sub control for accumulator, 0=add, 1=subtract                          |

**Table 194: Output Ports**

| Name      | Range | Type    | Active State | Description                                      |
|-----------|-------|---------|--------------|--------------------------------------------------|
| ASHIFTOUT | 8:0   | Control | Active high  | Operand A shift chain output                     |
| BSHIFTOUT | 8:0   | Control | Active high  | Operand B shift chain output                     |
| ZOUT      | 47:0  | Control | Active high  | Multiplication/accumulator output result         |
| COUT      | 1     | Control | Active high  | Carry out                                        |
| OVERFLOW  | 1     | Flag    | Active high  | Overflow flag                                    |
| CAS_ZOUT  | 47:0  | Control | Active low   | Cascade multiplication/accumulator output result |
| CAS_COUT  | 1     | Control | Active low   | Cascade carry out                                |

**Table 195: Parameters**

| Name          | Values                                                          | Description              |
|---------------|-----------------------------------------------------------------|--------------------------|
| REGINPUTA0    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A0      |
| REGINPUTB0    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B0      |
| REGSHIFTOUTA0 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A0 |
| REGSHIFTOUTB0 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B0 |

**Table 195: Parameters (Continued)**

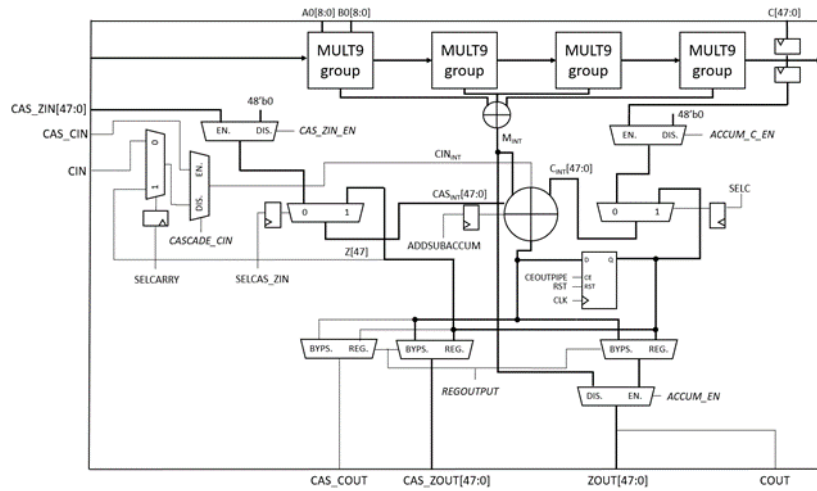
| <b>Name</b>   | <b>Values</b>                                                   | <b>Description</b>       |
|---------------|-----------------------------------------------------------------|--------------------------|
| SHIFTINPUTA0  | "DISABLED" (default)<br>"ENABLED"                               | Shift input A0           |
| SHIFTINPUTB0  | "DISABLED" (default)<br>"ENABLED"                               | Shift input B0           |
| REGINPUTA1    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A1      |
| REGINPUTB1    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B1      |
| REGSHIFTOUTA1 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A1 |
| REGSHIFTOUTB1 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B1 |
| REGINPUTA2    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A2      |
| REGINPUTB2    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B2      |
| REGSHIFTOUTA2 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A2 |
| REGSHIFTOUTB2 | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B2 |
| REGINPUTA3    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A3      |
| REGINPUTB3    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B3      |

**Table 195: Parameters (Continued)**


| Name             | Values                                                          | Description                                                                  |
|------------------|-----------------------------------------------------------------|------------------------------------------------------------------------------|
| REGSHIFTOUTA3    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A3                                                     |
| REGSHIFTOUTB3    | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B3                                                     |
| REGINPUTC        | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand C                                                           |
| REGPIPE          | "REGISTERED" (default)<br>"BYPASSED"                            | Register pipeline                                                            |
| REGOUTPUT        | "REGISTERED" (default)<br>"BYPASSED"                            | Register output                                                              |
| REGCAS_ZOUT      | "REGISTERED" (default)<br>"BYPASSED"                            | Register CAS_COUT and CAS_ZOUT[47:0]                                         |
| REGACCUMCONTROLS | "REGISTERED" (default)<br>"BYPASSED"                            | Register accumulator controls (CIN, SELCARRY, SELCAS_ZIN, ADDSUBACCUM, SELC) |
| RESETMODE        | "SYNC" (default)<br>"ASYN"                                      | Synchronous/asynchronous reset control                                       |
| ACCUM_EN         | "DISABLED" (default)<br>"ENABLED"                               | Enable accumulator                                                           |
| ACCUM_C_EN       | "DISABLED" (default)<br>"ENABLED"                               | Enable dynamic C for accumulator input (1) or tie to constant 0 (0)          |
| CAS_ZIN_EN       | "DISABLED" (default)<br>"ENABLED"                               | Enable dynamic CAS_ZIN for accumulator input (1) or tie to constant 0 (0)    |
| CAS_CIN_EN       | "DISABLED" (default)<br>"ENABLED"                               | Use CAS_CIN for carry input                                                  |
| ROUNDMODE        | "ROUND_TO_ZERO" (default)<br>"ROUND_TO_INFINITY"                | Rounding mode                                                                |
| SATURATION       | "DISABLED" (default)<br>"TO_NEG_MAX"<br>"TO_ZERO"               | Saturation enable                                                            |

**Table 195: Parameters (Continued)**

| Name            | Values                            | Description             |
|-----------------|-----------------------------------|-------------------------|
| SATURATION_BITS | "48" (default)<br>"3-48"          | Saturation bits         |
| GSR             | "DISABLED" (default)<br>"ENABLED" | Enable global set/reset |

**Note:**

The function of "MULT9 group" in the above diagram is shown below.

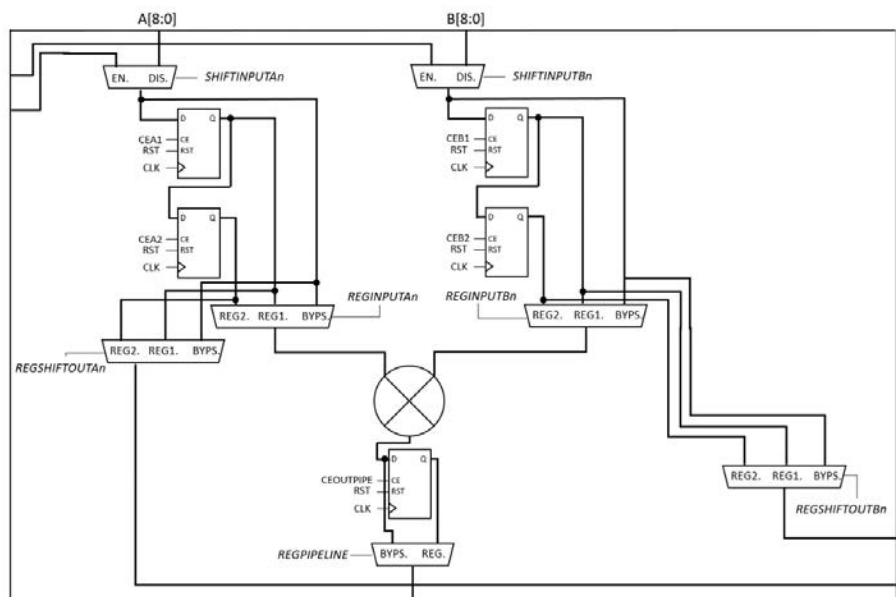

When the accumulator is enabled, it implements the function:

$$M\_INT = (A\_0 * B\_0) + (A\_1 * B\_1) + (A\_2 * B\_2) + (A\_3 * B\_3)$$

$$Z\_out = CAS\_INT + C\_INT + CIN\_INT +/- M\_INT$$

When the accumulator is disabled, it implements the function:

$$Z\_out = (A\_0 * B\_0) + (A\_1 * B\_1) + (A\_2 * B\_2) + (A\_3 * B\_3)$$

See the first diagram for the internal node corresponding to the above terms.


Although not shown in the above diagram, the register for accumulator inputs CIN, CAS\_ZIN\_EN, SELCAS\_ZIN, and ADDSUBACCUM is bypassable with the parameter REGACCUMCONTROLS.

## DP16K

16Kb Dual Port Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

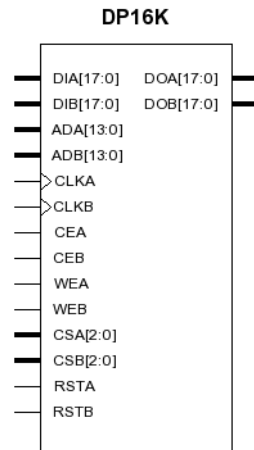**Table 196: Input Ports**

| Name      | Description                  |
|-----------|------------------------------|
| DIA[17:0] | Port A data in               |
| DIB[17:0] | Port B data in               |
| ADA[13:0] | Port A address               |
| ADB[13:0] | Port B address               |
| CLKA      | Port A clock                 |
| CLKB      | Port B clock                 |
| CEA       | Port A clock enable          |
| CEB       | Port B clock enable          |
| WEA       | Port A write enable          |
| WEB       | Port A write enable          |
| CSA[2:0]  | Port A chip select           |
| CSB[2:0]  | Port B chip select           |
| RSTA      | Port A output register reset |
| RSTB      | Port B output register reset |

**Table 197: Output Ports**

| Name      | Description     |
|-----------|-----------------|
| DOA[17:0] | Port A data out |
| DOB[17:0] | Port B data out |

**Table 198: Parameters**


| Name                    | Values                                                                  | Description                                      |
|-------------------------|-------------------------------------------------------------------------|--------------------------------------------------|
| DATA_WIDTH_A            | "X18" ( <i>default</i> )<br>"X9"<br>"X4"<br>"X2"<br>"X1"                | Port A data width                                |
| DATA_WIDTH_B            | "X18" ( <i>default</i> )<br>"X9"<br>"X4"<br>"X2"<br>"X1"                | Port B data width                                |
| OUTREG_A                | "BYPASSED" ( <i>default</i> )<br>"USED"                                 | Register port A output                           |
| OUTREG_B                | "BYPASSED" ( <i>default</i> )<br>"USED"                                 | Register port B output                           |
| GSR                     | "ENABLED" ( <i>default</i> )<br>"DISABLED"                              | Enable global set/reset for the output registers |
| RESETMODE_A             | "SYNC" ( <i>default</i> )<br>"ASYNC"                                    | Port A synchronous/asynchronous reset control    |
| RESETMODE_B             | "SYNC" ( <i>default</i> )<br>"ASYNC"                                    | Port B synchronous/asynchronous reset control    |
| INITVAL_00...INITVAL_3F | Hex string, 320 bits,<br>must include the "0x"<br>prefix                | EBR initialization data                          |
| CSDECODE_A              | 000 ( <i>default</i> )<br>001<br>010<br>011<br>100<br>101<br>110<br>111 | Port A chip select active setting                |
| CSDECODE_B              | 000 ( <i>default</i> )<br>001<br>010<br>011<br>100<br>101<br>110<br>111 | Port B chip select active setting                |
| ASYNC_RST_RELEASE_A     | "SYNC" ( <i>default</i> )<br>"ASYNC"                                    | Port A synchronous/asynchronous reset release    |

**Table 198: Parameters (Continued)**

| Name                | Values                                       | Description                                   |
|---------------------|----------------------------------------------|-----------------------------------------------|
| ASYNC_RST_RELEASE_B | "SYNC" (default)<br>"ASYNC"                  | Port B synchronous/asynchronous reset release |
| INIT_DATA           | "STATIC" (default)<br>"DYNAMIC"<br>"NO_INIT" |                                               |

It is **not** legal to drive the two clocks such that their active edges switch simultaneously.

All inputs (except the register control signals) and all outputs are registered in the following manner:

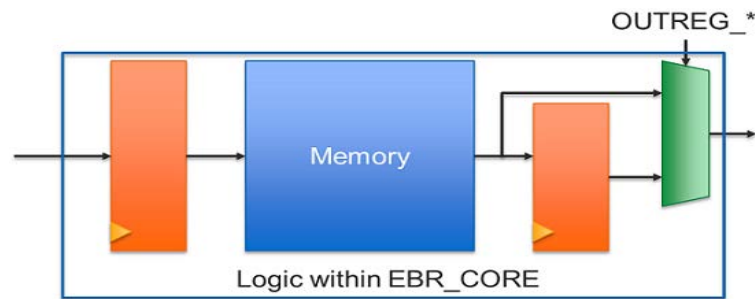

Port assignments for different data widths follow the table below:

| Data Width | Input Data | Output Data | Address A<br>(MSB to LSB) | Address B<br>(MSB to LSB) |
|------------|------------|-------------|---------------------------|---------------------------|
| 16Kx1      | DI[0]      | DO[0]       | ADA[13:0]                 | ADB[13:0]                 |
| 8Kx2       | DI[1:0]    | DO[1:0]     | ADA[13:1]                 | ADB[13:1]                 |
| 4Kx4       | DI[3:0]    | DO[3:0]     | ADA[13:2]                 | ADB[13:2]                 |
| 2Kx9       | DI[8:0]    | DO[8:0]     | ADA[13:3]                 | ADB[13:3]                 |
| 1Kx18      | DI[17:0]   | DO[17:0]    | ADA[13:4]                 | ADB[13:4]                 |


## DP32K

32 Kb Dual Port Block RAM

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

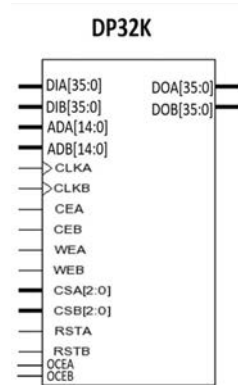

**Table 199: Input Ports**

| Name | Range | Type         | Active State | Description                                |
|------|-------|--------------|--------------|--------------------------------------------|
| DIA  | 35:0  | Data         | Active High  | A-port Data Inputs                         |
| DIB  | 35:0  | Data         | Active High  | B-port Data Inputs                         |
| ADA  | 14:0  | Addr         | Active High  | A-port Address                             |
| ADB  | 14:0  | Addr         | Active High  | B-port Address                             |
| CLKA | 1     | Clock        | Rising Edge  | A-port Clock Input                         |
| CLKB | 1     | Clock        | Rising Edge  | B-port Clock Input                         |
| CEA  | 1     | Clock Enable | Active High  | A-port Clock Enable                        |
| CEB  | 1     | Clock Enable | Active High  | B-port Clock Enable                        |
| OCEA | 1     | Control      | Active High  | A-port Output Clock Register Enable        |
| OCEB | 1     | Control      | Active High  | B-port Output Clock Register Enable        |
| WEA  | 1     | Control      | Active High  | A-port Write Enable<br>1: Write<br>0: Read |
| WEB  | 1     | Control      | Active High  | B-port Write Enable<br>1: Write<br>0: Read |
| CSA  | 2:0   | Control      | Active High  | A-port Cascade Select                      |
| CSB  | 2:0   | Control      | Active High  | B-port Cascade Select                      |
| RSTA | 1     | Reset        | Active High  | A-port output registers reset              |
| RSTB | 1     | Reset        | Active High  | B-port output registers reset              |

**Table 200: Output Ports**

| Name | Range | Type | Active State | Description        |
|------|-------|------|--------------|--------------------|
| DOA  | 35:0  | Data | Active High  | A-port Data Output |
| DOB  | 35:0  | Data | Active High  | B-port Data Output |

**Table 201: Parameters**

| Name         | Values                                                                         | Description                                      |
|--------------|--------------------------------------------------------------------------------|--------------------------------------------------|
| DATA_WIDTH_A | "X36"(default)<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"                        | Port A data width                                |
| DATA_WIDTH_B | "X36"(default)<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"                        | Port B data width                                |
| OUTREG_A     | "BYPASSED" (default)<br>"USED"                                                 | Register port A output                           |
| OUTREG_B     | "BYPASSED" (default)<br>"USED"                                                 | Register port B output                           |
| GSR          | "ENABLED" (default)<br>"DISABLED"                                              | Enable global set/reset for the output registers |
| RESETMODE_A  | "SYNC" (default)<br>"ASYNC"                                                    | Port A sync/async reset control                  |
| RESETMODE_B  | "SYNC" (default)<br>"ASYNC"                                                    | Port B sync/async reset control                  |
| CSDECODE_A   | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Port A chip select active setting                |

**Table 201: Parameters (Continued)**

|                         |                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CSDECODE_B              | "000" (default)                                    | Port B chip select active setting                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                         | "001"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "010"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "011"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "100"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "101"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "110"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "111"                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| ASYNC_RST_RELEASE_A     | "SYNC" (default)                                   | Port A sync/async reset release                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "ASYNC"                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| ASYNC_RST_RELEASE_B     | "SYNC" (default)                                   | Port B sync/async reset release                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                         | "ASYNC"                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| INITVAL_00...INITVAL_7F | Hex string, 320 bits, must include the "0x" prefix | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| INIT_DATA               | "STATIC" (default)                                 | <p>Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.</p> <p>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.</p> <p>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled.</p> |
|                         | "DYNAMIC"                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

**Note:**


If writing and reading at the same address simultaneously, the behavior is not guaranteed (i.e. either the read or write may happen first).

**DP8KC**

8K True Dual Port Block RAM

Architectures Supported:

- ▶ LFMXO4

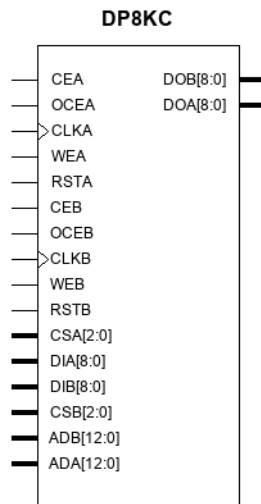**Table 202: Input Ports**

| Name | Range | Description                    |
|------|-------|--------------------------------|
| CEA  | 1     | Clock enable for port CLKA     |
| OCEA | 1     | Output clock enable for port A |
| CLKA | 1     | Clock for port A               |
| WEA  | 1     | Write enable for port A        |
| RSTA | 1     | Reset for port A               |
| CEB  | 1     | Positive clock enable          |
| OCEB | 1     | Output clock enable for port B |
| CLKB | 1     | Clock for port B               |
| WEB  | 1     | Write enable for port B        |
| RSTB | 1     | Reset for port B               |
| CSA  | 2:0   | Chip select for port A         |
| DIA  | 8:0]  | Input data port A (up to 9)    |
| DIB  | 8:0]  | Input data port B (up to 9)    |
| CSB  | 2:0   | Chip select for port B         |
| ADB  | 12:0  | Address bus port B (up to 13)  |
| ADA  | 12:0  | Address bus port A (up to 13)  |

**Table 203: Output Ports**

| Name | Range | Description                  |
|------|-------|------------------------------|
| DOB  | 8:0   | Output data port B (up to 9) |
| DOA  | 8:0   | Output data port A (up to 9) |

**Table 204: Parameters**

| Name                    | Values                                                          | Description                                                                                                                                                                                                                                                                       |
|-------------------------|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DATA_WIDTH_A            | "1, 2, 3, 4, 9" ( <i>default</i> )                              | Port A data width                                                                                                                                                                                                                                                                 |
| DATA_WIDTH_B            | "1, 2, 3, 4, 9" ( <i>default</i> )                              | Port B data width                                                                                                                                                                                                                                                                 |
| REGMODE_A               | "NOREG" ( <i>default</i> ),<br>"OUTREG"                         | Port A register mode for<br>pipelining                                                                                                                                                                                                                                            |
| REGMODE_B               | "NOREG" ( <i>default</i> ),<br>"OUTREG"                         | Port B register mode for<br>pipelining                                                                                                                                                                                                                                            |
| CSDECODE_A              | "0b000"                                                         | Port A chip select active setting                                                                                                                                                                                                                                                 |
| CSDECODE_B              | "0b000"                                                         | Port B chip select active setting                                                                                                                                                                                                                                                 |
| WRITEMODE_A             | "NORMAL" ( <i>default</i> ),<br>"WRITETHROUGH",<br>"READBEFORE" | Port A Read/Write mode.<br>Attached to a dual- and single-<br>port RAM primitive.<br>WRITEMODE_A is used for<br>dual-port RAM primitives and<br>refer to the A port.                                                                                                              |
| WRITEMODE_B             | "NORMAL" ( <i>default</i> ),<br>"WRITETHROUGH",<br>"READBEFORE" | Port B Read/Write mode.<br>Attached to a dual- and single-<br>port RAM primitive.<br>WRITEMODE_B are used for<br>dual-port RAM primitives and<br>refer to the B port.                                                                                                             |
| GSR                     | "ENABLED" ( <i>default</i> ),<br>"DISABLED"                     | Enable global set/reset.                                                                                                                                                                                                                                                          |
| RESETMODE               | "SYNC" ( <i>default</i> ),<br>"ASYNC"                           | The reset type. This attribute is<br>attached to a block RAM-type<br>primitive that has a memory size<br>smaller than 9 bits. When set to<br>SYNC, the memory reset is<br>synchronized with the clock.<br>When set to ASYNC, the<br>memory reset is asynchronous<br>to the clock. |
| ASYNC_RESET_REL<br>EASE | "SYNC" ( <i>default</i> ),<br>"ASYNC"                           | Reset release when the reset<br>mode is ASYNC.                                                                                                                                                                                                                                    |

**Table 204: Parameters**

| Name                        | Values                                                                                                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INIT_DATA                   | "STATIC" ( <i>default</i> ),<br>"DYNAMIC"                                                              | Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.<br><br>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.<br><br>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled. |
| INITVAL_00 to<br>INITVAL_1F | "0x00000000000000000000<br>00000000000000000000<br>00000000000000000000<br>00000000000000000000<br>00" | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## DPR16X4C

PFU-based distributed Pseudo Dual Port RAM

Architectures Supported:

- ▶ LFMXO4

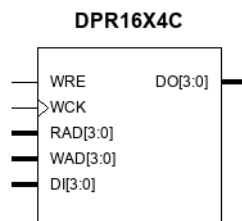


**Table 205: Input Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b> |
|-------------|--------------|--------------------|
| DI3         | 1            | Write data         |
| DI2         | 1            | Write data         |
| DI1         | 1            | Write data         |
| DI0         | 1            | Write data         |
| WAD3        | 1            | Write address      |
| WAD2        | 1            | Write address      |
| WAD1        | 1            | Write address      |
| WAD0        | 1            | Write address      |
| WCK         | 1            | Write clock        |
| WRE         |              | Write enable       |
| RAD3        |              | Read address       |
| RAD2        |              | Read address       |
| RAD1        |              | Read address       |
| RAD0        |              | Read address       |

**Table 206: Output Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b> |
|-------------|--------------|--------------------|
| DO3         | 1            | Read data          |
| DO2         | 1            | Read data          |
| DO1         | 1            | Read data          |
| DO0         | 1            | Read data          |

**Table 207: Parameters**

| <b>Name</b> | <b>Values</b>        | <b>Description</b>       |
|-------------|----------------------|--------------------------|
| INITVAL     | "0x0000000000000000" | RAM initialization value |

## DPHY

The MIPI wrapper IP is used for MIPI DPHY v1.2: 4 channels DPHY with VCC= 0.9V/1.0V

### Warning

---

You should not try to use this primitive directly. Instead, use the related IP in IP Catalog. The following information is for reference only.

---

Architectures supported:

▶ LIFCL-40, LIFCL-17



|             | DPHY          |
|-------------|---------------|
| LMMA0LC     | LMMA0LC10     |
| LMMA0LC1N   | LMMA0LC1N10   |
| LMMA0QUEST  | LMMA0QUEST10  |
| LMMA0PWRD_N | LMMA0PWRD_N10 |
| LMMA0PWRD1N | LMMA0PWRD1N10 |
| LMMA0QAT010 | LMMA0QAT01010 |
| DM0TX01     | DM0TX0110     |
| SC0L0N      | SC0L0N10      |
| PC0P0Y      | PC0P0Y10      |
| PC0LL       | PC0LL10       |
| SC0CL0N     | SC0CL0N10     |
| UPR0M00     | UPR0M0010     |
| UPR0MTX0    | UPR0MTX010    |
| UPR0M01N    | UPR0M01N10    |
| UT0D0       | UT0D010       |
| UT0D0N      | UT0D0N10      |
| UE00101N    | UE00101N10    |
| UE00102N    | UE00102N10    |
| UE00103N    | UE00103N10    |
| UE00104N    | UE00104N10    |
| UE00105N    | UE00105N10    |
| UE00106N    | UE00106N10    |
| UE00107N    | UE00107N10    |
| UE00108N    | UE00108N10    |
| UE00109N    | UE00109N10    |
| UE00110N    | UE00110N10    |
| UE00111N    | UE00111N10    |
| UE00112N    | UE00112N10    |
| UE00113N    | UE00113N10    |
| UE00114N    | UE00114N10    |
| UE00115N    | UE00115N10    |
| UE00116N    | UE00116N10    |
| UE00117N    | UE00117N10    |
| UE00118N    | UE00118N10    |
| UE00119N    | UE00119N10    |
| UE00120N    | UE00120N10    |
| UE00121N    | UE00121N10    |
| UE00122N    | UE00122N10    |
| UE00123N    | UE00123N10    |
| UE00124N    | UE00124N10    |
| UE00125N    | UE00125N10    |
| UE00126N    | UE00126N10    |
| UE00127N    | UE00127N10    |
| UE00128N    | UE00128N10    |
| UE00129N    | UE00129N10    |
| UE00130N    | UE00130N10    |
| UE00131N    | UE00131N10    |
| UE00132N    | UE00132N10    |
| UE00133N    | UE00133N10    |
| UE00134N    | UE00134N10    |
| UE00135N    | UE00135N10    |
| UE00136N    | UE00136N10    |
| UE00137N    | UE00137N10    |
| UE00138N    | UE00138N10    |
| UE00139N    | UE00139N10    |
| UE00140N    | UE00140N10    |
| UE00141N    | UE00141N10    |
| UE00142N    | UE00142N10    |
| UE00143N    | UE00143N10    |
| UE00144N    | UE00144N10    |
| UE00145N    | UE00145N10    |
| UE00146N    | UE00146N10    |
| UE00147N    | UE00147N10    |
| UE00148N    | UE00148N10    |
| UE00149N    | UE00149N10    |
| UE00150N    | UE00150N10    |
| UE00151N    | UE00151N10    |
| UE00152N    | UE00152N10    |
| UE00153N    | UE00153N10    |
| UE00154N    | UE00154N10    |
| UE00155N    | UE00155N10    |
| UE00156N    | UE00156N10    |
| UE00157N    | UE00157N10    |
| UE00158N    | UE00158N10    |
| UE00159N    | UE00159N10    |
| UE00160N    | UE00160N10    |
| UE00161N    | UE00161N10    |
| UE00162N    | UE00162N10    |
| UE00163N    | UE00163N10    |
| UE00164N    | UE00164N10    |
| UE00165N    | UE00165N10    |
| UE00166N    | UE00166N10    |
| UE00167N    | UE00167N10    |
| UE00168N    | UE00168N10    |
| UE00169N    | UE00169N10    |
| UE00170N    | UE00170N10    |
| UE00171N    | UE00171N10    |
| UE00172N    | UE00172N10    |
| UE00173N    | UE00173N10    |
| UE00174N    | UE00174N10    |
| UE00175N    | UE00175N10    |
| UE00176N    | UE00176N10    |
| UE00177N    | UE00177N10    |
| UE00178N    | UE00178N10    |
| UE00179N    | UE00179N10    |
| UE00180N    | UE00180N10    |
| UE00181N    | UE00181N10    |
| UE00182N    | UE00182N10    |
| UE00183N    | UE00183N10    |
| UE00184N    | UE00184N10    |
| UE00185N    | UE00185N10    |
| UE00186N    | UE00186N10    |
| UE00187N    | UE00187N10    |
| UE00188N    | UE00188N10    |
| UE00189N    | UE00189N10    |
| UE00190N    | UE00190N10    |
| UE00191N    | UE00191N10    |
| UE00192N    | UE00192N10    |
| UE00193N    | UE00193N10    |
| UE00194N    | UE00194N10    |
| UE00195N    | UE00195N10    |
| UE00196N    | UE00196N10    |
| UE00197N    | UE00197N10    |
| UE00198N    | UE00198N10    |
| UE00199N    | UE00199N10    |
| UE00200N    | UE00200N10    |
| UE00201N    | UE00201N10    |
| UE00202N    | UE00202N10    |
| UE00203N    | UE00203N10    |
| UE00204N    | UE00204N10    |
| UE00205N    | UE00205N10    |
| UE00206N    | UE00206N10    |
| UE00207N    | UE00207N10    |
| UE00208N    | UE00208N10    |
| UE00209N    | UE00209N10    |
| UE00210N    | UE00210N10    |
| UE00211N    | UE00211N10    |
| UE00212N    | UE00212N10    |
| UE00213N    | UE00213N10    |
| UE00214N    | UE00214N10    |
| UE00215N    | UE00215N10    |
| UE00216N    | UE00216N10    |
| UE00217N    | UE00          |

**Table 208: Input Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                  |
|-------------|--------------|-------------------------------------|
| LMMICLK     | 1            | LMMI clock                          |
| LMMIRESET_N | 1            | LMMI reset                          |
| LMMIREQUEST | 1            | LMMI Request                        |
| LMMIWRRD_N  | 1            | LMMI Write High / Read Low          |
| LMMIOFFSET  | 4:0          | LMMI address                        |
| LMMIWDATA   | 3:0          | LMMI data                           |
| BITCKEXT    | 1            | Bit-rate clock input                |
| CLKREF      | 1            | Reference clock                     |
| PDDPHY      | 1            | Power down input for PHY            |
| PDPLL       | 1            | Input signals                       |
| SCCLKIN     | 1            | Scan mode clock input               |
| UED0THEN    | 1            | Enable D0 txhsen                    |
| UFRXMODE    | 1            | Force RX mode                       |
| UTXMDTX     | 1            | Force TX stop mode                  |
| URXCKINE    | 1            | Escape mode CLK for RX              |
| UTDIS       | 1            | Turn Disable                        |
| UTXCKE      | 1            | Escape mode Transmit Clock          |
| UDE0D0TN    | 1            | Low Power Transmitter Enable Signal |
| UDE1D1TN    | 1            | Low Power Transmitter Enable Signal |
| UDE2D2TN    | 1            | Low Power Transmitter Enable Signal |
| UDE3D3TN    | 1            | Low Power Transmitter Enable Signal |
| UDE4CKTN    | 1            | Low Power Transmitter Enable Signal |
| UDE5D0RN    | 1            | Low Power Receiver Enable Signal    |
| UDE6D1RN    | 1            | Low Power Receiver Enable Signal    |
| UDE7D2RN    | 1            | Low Power Receiver Enable Signal    |
| UTXDHS      | 31:0         | Data to MIPI clock fabric           |
| UTXENER     | 1            | Deserializer token detector         |
| UTXRD0EN    | 1            | Deserializer Enable Signal          |
| UTRD0SEN    | 1            | Serializer Enable Signal            |
| UTXSKD0N    | 1            | High Speed Receiver Enable Signal   |
| UTXTGE0     | 1            | Escape mode Transmit Request        |
| UTXTGE1     | 1            | Escape mode Transmit Request        |

**Table 208: Input Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                          |
|-------------|--------------|---------------------------------------------|
| UTXTGE2     | 1            | Escape mode Transmit Request                |
| UTXTGE3     | 1            | Escape mode Transmit Request                |
| UTXULPSE    | 1            | Escape mode Transmit Ultra Low Power State  |
| UTXUPSEX    | 1            | Escape Mode ULP Exit Sequence               |
| UTXVDE      | 1            | Escape mode Transmit Data Valid             |
| UTXWVDHS    | 3:0          | High-Speed Receive Data Valid               |
| U1ENTHEN    | 1            | High Speed Receiver Enable Signal           |
| U1FRXMD     | 1            | Force RX Mode                               |
| U1FTXST     | 1            | Force TX Stop Mode                          |
| U1TDIS      | 1            | Turn Disable                                |
| U1TREQ      | 1            | Turn Request                                |
| U1TDE0D3    | 1            | Low Power Receiver Enable Signal            |
| U1TDE1CK    | 1            | Low Power Receiver Enable Signal            |
| U1TDE2D0    | 1            | Low Power Contention Detector Enable Signal |
| U1TDE3D1    | 1            | Low Power Contention Detector Enable Signal |
| U1TDE4D2    | 1            | Low Power Contention Detector Enable Signal |
| U1TDE5D3    | 1            | Low Power Contention Detector Enable Signal |
| U1TDE6      | 1            | Low Power Contention Detector Enable Signal |
| U1TDE7      | 1            | Low Power Contention Detector Enable Signal |
| U1TXDHS     | 31:0         | High-Speed Receive Data                     |
| U1TXLPD     | 1            | Escape mode Transmit Low Power Data         |
| U1TXREQ     | 1            | Deserializer Enable Signal                  |
| U1TXREQH    | 1            | Escape mode Transmit Request                |
| U1TXSK      | 1            | High Speed Receiver Enable Signal           |
| U1TXTGE0    | 1            | Escape mode Transmit Trigger                |
| U1TXTGE1    | 1            | Escape mode Transmit Trigger                |
| U1TXTGE2    | 1            | Escape mode Transmit Trigger                |
| U1TXTGE3    | 1            | Escape mode Transmit Trigger                |
| U1TXUPSE    | 1            | Escape mode Transmit Ultra Low Power State  |
| U1TXUPSX    | 1            | Escape Mode ULP Exit Sequence               |
| U1TXVDE     | 1            | Escape mode Transmit Data Valid             |
| U1TXWVHS    | 3:0          | High-Speed Receive Data Valid               |

**Table 208: Input Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                        |
|-------------|--------------|-------------------------------------------|
| U2END2      | 1            | High Speed Transmitter Enable Signal      |
| U2FRXMD     | 1            | Force RX Mode                             |
| U2FTXST     | 1            | Force TX Stop Mode                        |
| U2TDIS      | 1            | Turn Disable                              |
| U2TREQ      | 1            | Turn Request                              |
| U2TDE0D0    | 1            | High Speed Transmitter Power Down         |
| U2TDE1D1    | 1            | High Speed Transmitter Power Down         |
| U2TDE2D2    | 1            | High Speed Transmitter Power Down         |
| U2TDE3D3    | 1            | High Speed Transmitter Power Down         |
| U2TDE4CK    | 1            | Escape mode Transmit Data                 |
| U2TDE5D0    | 1            | High Speed Transmitter Power Down         |
| U2TDE6D1    | 1            | High Speed Transmitter Power Down         |
| U2TDE7D2    | 1            | High Speed Transmitter Power Down         |
| U2TXDHS     | 31:0         | High-Speed Receive Data                   |
| U2TPDTE     | 1            | High Speed Transmitter Enable Signal      |
| U2TXREQ     | 1            | Deserializer Enable Signal                |
| U2TXREQH    | 1            | Serializer Enable Signal                  |
| U2TXSKC     | 1            | High Speed Receiver Enable Signal         |
| U2TXTGE0    | 1            | Escape mode Transmit Request              |
| U2TXTGE1    | 1            | Escape mode Transmit Request              |
| U2TXTGE2    | 1            | Escape mode Transmit Request              |
| U2TXTGE3    | 1            | Escape mode Transmit Request              |
| U2TXUPSE    | 1            | Serializer Enable Signal                  |
| U2TXUPSX    | 1            | Escape Mode ULP Exit Sequence             |
| U2TXVDE     | 1            | Escape mode Receive Data Valid            |
| U2TXWVHS    | 3:0          | High-Speed Receive Data Valid             |
| U3END3      | 1            | High Speed Transmitter Enable Signal      |
| U3FRXMD     | 1            | Force RX Mode                             |
| U3FTXST     | 1            | Force TX Stop Mode                        |
| U3TDISD2    | 1            | Low Power Transmitter Positive Data Input |
| U3TREQD2    | 1            | Low Power Transmitter Negative Data Input |
| U3TDE0D3    | 1            | Escape mode Transmit Data                 |

**Table 208: Input Ports (Continued)**

| Name     | Range | Description                                |
|----------|-------|--------------------------------------------|
| U3TDE1D0 | 1     | Escape mode Transmit Data                  |
| U3TDE2D1 | 1     | Escape mode Transmit Data                  |
| U3TDE3D2 | 1     | Escape mode Transmit Data                  |
| U3TDE4D3 | 1     | Escape mode Transmit Data                  |
| U3TDE5CK | 1     | Escape mode Transmit Data                  |
| U3TDE6   | 1     | Escape mode Transmit Data                  |
| U3TDE7   | 1     | Escape mode Transmit Data                  |
| U3TXDHS  | 31:0  | High-Speed Receive Data                    |
| U3TXLPDT | 1     | Escape mode Transmit Low Power Data        |
| U3TXREQ  | 1     | Deserializer Enable Signal                 |
| U3TXREQH | 1     | Serializer Enable Signal                   |
| U3TXSKC  | 1     | High Speed Receiver Enable Signal          |
| U3TXTGE0 | 1     | Escape mode Transmit Trigger               |
| U3TXTGE1 | 1     | Escape mode Transmit Trigger               |
| U3TXTGE2 | 1     | Escape mode Transmit Trigger               |
| U3TXTGE3 | 1     | Escape mode Transmit Trigger               |
| U3TXULPS | 1     | Escape mode Transmit Ultra Low Power State |
| U3TXUPSX | 1     | Escape Mode ULP Exit Sequence              |
| U3TXVD3  | 1     | Escape mode Transmit Data Valid            |
| U3TXWVHS | 3:0   | High-Speed Receive Data Valid              |
| UCENCK   | 1     | High Speed Transmitter Enable Signal       |
| UCTXREQH | 1     | High Speed Transmitter Clock Gate Signal   |
| UCTXUPSC | 1     | High Speed Receiver Enable Signal          |
| UCTXUPSX | 1     | Escape Mode ULP Exit Sequence              |
| LTSTEN   | 1     | Enable signal for LPTX VOH debug test mode |
| LTSTLANE | 1     | Lane select signal in LPTX VOH debug test  |
| UTRNREQ  | 1     | Turn Around Request                        |

**Table 209: Output Ports**

| Name           | Range | Description                                                    |
|----------------|-------|----------------------------------------------------------------|
| LMMIRDATA      | 3:0   | Read data                                                      |
| LMMIRDATAVALID | 1     | Read transaction is complete and LMMIRDATA contains valid data |

**Table 209: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                          |
|-------------|--------------|---------------------------------------------|
| LMMIREADY   | 1            | LMMI ready signal                           |
| D0ACTIVE    | 1            | Data Lane 0 Active                          |
| D0BYTCNT    | 9:0          | Data Lane 0 Byte Count                      |
| D0ERRCNT    | 9:0          | Data Lane 0 Error Count                     |
| D0PASS      | 1            | Data Lane 0 Pass                            |
| D0VALID     | 1            | Data Lane 0 Valid                           |
| D1ACTIVE    | 1            | Data Lane 1 Active                          |
| D1BYTCNT    | 9:0          | Data Lane 1 Byte Count                      |
| D1ERRCNT    | 9:0          | Data Lane 1 Error Count                     |
| D1PASS      | 1            | Data Lane 1 Pass                            |
| D1VALID     | 1            | Data Lane 1 Valid                           |
| D2ACTIVE    | 1            | Data Lane 2 Active                          |
| D2BYTCNT    | 9:0          | Data Lane 2 Byte Count                      |
| D2ERRCNT    | 9:0          | Data Lane 2 Error Count                     |
| D2PASS      | 1            | Data Lane 2 Pass                            |
| D2VALID     | 1            | Data Lane 2 Valid                           |
| D3ACTIVE    | 1            | Data Lane 3 Active                          |
| D3BYTCNT    | 9:0          | Data Lane 3 Byte Count                      |
| D3ERRCNT    | 9:0          | Data Lane 3 Error Count                     |
| D3PASS      | 1            | Data Lane 3 Pass                            |
| D3VALID     | 1            | Data Lane 3 Valid                           |
| DCTSTOUT    | 9:0          | D-PHY core debug output port                |
| LOCK        | 1            | Lock indicator                              |
| UDIR        | 1            | PHY Direction Indicator                     |
| UERCLP0     | 1            | Ultra Edge Receiver Clock Lane Plus 0       |
| UERCLP1     | 1            | Ultra Edge Receiver Clock Lane Plus 1       |
| UERCTRL     | 1            | Ultra Edge Receiver Control                 |
| UERE        | 1            | Ultra Edge Receiver Enable                  |
| UERSTHS     | 1            | Ultra Edge Receiver Reset High-Speed        |
| UERSSHs     | 1            | Ultra Edge Receiver Settle State High-Speed |
| UERSE       | 1            | Ultra Edge Receiver Sync Enable             |
| URXACTHS    | 1            | Ultra Receiver Active High-Speed            |

**Table 209: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                |
|-------------|--------------|---------------------------------------------------|
| URXCKE      | 1            | Ultra Receiver Clock Enable                       |
| URXDE       | 7:0          | Ultra Receiver Data Enable                        |
| URXDHS      | 15:0         | Ultra Receiver Data High-Speed                    |
| URXLPDTE    | 1            | Ultra Receiver Low-Power Data Termination Enable  |
| URXSKCHS    | 1            | Ultra Receiver Skip Check High-Speed              |
| URXDRX      | 1            | Ultra Receiver Data Receive                       |
| URXSHS      | 3:0          | Ultra Receiver Start High-Speed                   |
| URE0D3DP    | 1            | Ultra Receiver Ultra-Low Power State Enable       |
| URE1D3DN    | 1            | Ultra Receiver Valid Data Enable                  |
| URE2CKDP    | 1            | Ultra Receiver Valid Data High-Speed              |
| URE3CKDN    | 1            | Ultra Receiver Data Lane 0 Positive               |
| URXULPSE    | 1            | Ultra Receiver Data Lane 0 Negative               |
| URXVDE      | 1            | Ultra Receiver Clock Lane Positive                |
| URXVDHS     | 3:0          | Ultra Receiver Clock Lane Negative                |
| USSTT       | 1            | Ultra System Start Test Trigger                   |
| UTXRRS      | 1            | Ultra Transmitter Reset Request Status            |
| UTXRYP      | 1            | Ultra Transmitter Ready Positive                  |
| UTXRYSK     | 1            | Ultra Transmitter Ready Skip                      |
| UUSAN       | 1            | Ultra User System Acknowledge Negative            |
| U1DIR       | 1            | Ultra PHY 1 Direction                             |
| U1ERCLP0    | 1            | Ultra PHY 1 Edge Receiver Clock Lane Plus 0       |
| U1ERCLP1    | 1            | Ultra PHY 1 Edge Receiver Clock Lane Plus 1       |
| U1ERCTRL    | 1            | Ultra PHY 1 Edge Receiver Control                 |
| U1ERE       | 1            | Ultra PHY 1 Edge Receiver Enable                  |
| U1ERSTHS    | 1            | Ultra PHY 1 Edge Receiver Reset High-Speed        |
| U1ERSSHS    | 1            | Ultra PHY 1 Edge Receiver Settle State High-Speed |
| U1ERSE      | 1            | Ultra PHY 1 Edge Receiver Sync Enable             |
| U1RXATHS    | 1            | Ultra PHY 1 Receiver Active High-Speed            |
| U1RXCKE     | 1            | Ultra PHY 1 Receiver Clock Enable                 |
| U1RXDE      | 7:0          | Ultra PHY 1 Receiver Data Enable                  |
| U1RXDHS     | 15:0         | Ultra PHY 1 Receiver Data High-Speed              |
| U1RXDTE     | 1            | Ultra PHY 1 Receiver Data Termination Enable      |

**Table 209: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                |
|-------------|--------------|---------------------------------------------------|
| U1RXSKS     | 1            | Ultra PHY 1 Receiver Skip Start                   |
| U1RXSK      | 1            | Ultra PHY 1 Receiver Skip                         |
| U1RXSHS     | 3:0          | Ultra PHY 1 Receiver Start High-Speed             |
| U1RE0D      | 1            | Ultra PHY 1 Receiver ULP State Enable             |
| U1RE1CN     | 1            | Ultra PHY 1 Receiver Valid Data Enable            |
| U1RE2D      | 1            | Ultra PHY 1 Receiver Valid Data High-Speed        |
| U1RE3N      | 1            | Ultra PHY 1 Receiver Data Lane 0                  |
| U1RXUPSE    | 1            | Ultra PHY 1 Receiver Clock Lane Negative          |
| U1RXVDE     | 1            | Ultra PHY 1 Receiver Data Lane 1                  |
| U1RXVDHS    | 3:0          | Ultra PHY 1 Receiver Data Lane 1 Negative         |
| U1SSTT      | 1            | Ultra PHY 1 System Start Test Trigger             |
| U1TXRYE     | 1            | Ultra PHY 1 Transmitter Ready Enable              |
| U1TXRY      | 1            | Ultra PHY 1 Transmitter Ready                     |
| U1TXRYSK    | 1            | Ultra PHY 1 Transmitter Ready Skip                |
| U1USAN      | 1            | Ultra PHY 1 User System Acknowledge Negative      |
| U2DIR       | 1            | Ultra PHY 2 Direction                             |
| U2ERCLP0    | 1            | Ultra PHY 2 Edge Receiver Clock Lane Plus 0       |
| U2ERCLP1    | 1            | Ultra PHY 2 Edge Receiver Clock Lane Plus 1       |
| U2ERCTRL    | 1            | Ultra PHY 2 Edge Receiver Control                 |
| U2ERE       | 1            | Ultra PHY 2 Edge Receiver Enable                  |
| U2ERSTHS    | 1            | Ultra PHY 2 Edge Receiver Reset High-Speed        |
| U2ERSSHS    | 1            | Ultra PHY 2 Edge Receiver Settle State High-Speed |
| U2ERSE      | 1            | Ultra PHY 2 Edge Receiver Sync Enable             |
| U2RXACHS    | 1            | Ultra PHY 2 Receiver Active High-Speed            |
| U2RXCKE     | 1            | Ultra PHY 2 Receiver Clock Enable                 |
| U2RXDE      | 7:0          | Ultra PHY 2 Receiver Data Enable                  |
| U2RXDHS     | 15:0         | Ultra PHY 2 Receiver Data High-Speed              |
| U2RPDTE     | 1            | Ultra PHY 2 Receiver Data Termination Enable      |
| U2RXSK      | 1            | Ultra PHY 2 Receiver Skip                         |
| U2RXSKC     | 1            | Ultra PHY 2 Receiver Skip Check                   |
| U2RXSHS     | 3:0          | Ultra PHY 2 Receiver Start High-Speed             |
| U2RE0D2     | 1            | Ultra PHY 2 Receiver Data Lane 0                  |



**Table 209: Output Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                |
|-------------|--------------|---------------------------------------------------|
| U2RE1D2     | 1            | Ultra PHY 2 Receiver Data Lane 1                  |
| U2RE2D3     | 1            | Ultra PHY 2 Receiver Data Lane 2                  |
| U2RE3D3     | 1            | Ultra PHY 2 Receiver Data Lane 3                  |
| U2RXUPSE    | 1            | Ultra PHY 2 Receiver ULP State Enable             |
| U2RXVDE     | 1            | Ultra PHY 2 Receiver Valid Data Enable            |
| U2RXVDHS    | 3:0          | Ultra PHY 2 Receiver Valid Data High-Speed        |
| U2SSTT      | 1            | Ultra PHY 2 System Start Test Trigger             |
| U2TXRYE     | 1            | Ultra PHY 2 Transmitter Ready Enable              |
| U2TXRYH     | 1            | Ultra PHY 2 Transmitter Ready High                |
| U2TXRYSK    | 1            | Ultra PHY 2 Transmitter Ready Skip                |
| U2USAN      | 1            | Ultra PHY 2 User System Acknowledge Negative      |
| U3DIR       | 1            | Ultra PHY 3 Direction                             |
| U3ERCLP0    | 1            | Ultra PHY 3 Edge Receiver Clock Lane Plus 0       |
| U3ERCLP1    | 1            | Ultra PHY 3 Edge Receiver Clock Lane Plus 1       |
| U3ERCTRL    | 1            | Ultra PHY 3 Edge Receiver Control                 |
| U3ERE       | 1            | Ultra PHY 3 Edge Receiver Enable                  |
| U3ERSTHS    | 1            | Ultra PHY 3 Edge Receiver Reset High-Speed        |
| U3ERSSHS    | 1            | Ultra PHY 3 Edge Receiver Settle State High-Speed |
| U3ERSE      | 1            | Ultra PHY 3 Edge Receiver Sync Enable             |
| U3RXATHS    | 1            | Ultra PHY 3 Receiver Active High-Speed            |
| U3RXCKE     | 1            | Ultra PHY 3 Receiver Clock Enable                 |
| U3RXDE      | 7:0          | Ultra PHY 3 Receiver Data Enable                  |
| U3RXDHS     | 15:0         | Ultra PHY 3 Receiver Data High-Speed              |
| U3RPDTE     | 1            | Ultra PHY 3 Receiver Data Termination Enable      |
| U3RXSK      | 1            | Ultra PHY 3 Receiver Skip                         |
| U3RXSKC     | 1            | Ultra PHY 3 Receiver Skip Check                   |
| U3RXSHS     | 3:0          | Ultra PHY 3 Receiver Start High-Speed             |
| U3RE0CK     | 1            | Ultra PHY 3 Receiver Clock Lane Positive          |
| U3RE1CK     | 1            | Ultra PHY 3 Receiver Clock Lane Negative          |
| U3RE2       | 1            | Ultra PHY 3 Receiver Data Lane 2                  |
| U3RE3       | 1            | Ultra PHY 3 Receiver Data Lane 3                  |
| U3RXUPSE    | 1            | Ultra PHY 3 Receiver ULP State Enable             |

**Table 209: Output Ports (Continued)**

| Name     | Range | Description                                    |
|----------|-------|------------------------------------------------|
| U3RXVDE  | 1     | Ultra PHY 3 Receiver Valid Data Enable         |
| U3RXVDHS | 3:0   | Ultra PHY 3 Receiver Valid Data High-Speed     |
| U3SSTT   | 1     | Ultra PHY 3 System Start Test Trigger          |
| U3TXRY   | 1     | Ultra PHY 3 Transmitter Ready                  |
| U3TXRYHS | 1     | Ultra PHY 3 Transmitter Ready High-Speed       |
| U3TXRYSK | 1     | Ultra PHY 3 Transmitter Ready Skip             |
| U3USAN   | 1     | Ultra PHY 3 User System Acknowledge Negative   |
| UCRXCKAT | 1     | Ultra Common Receiver Clock Active Termination |
| UCRXUCKN | 1     | Ultra Common Receiver Clock Negative           |
| UCSSTT   | 1     | Ultra Common System Start Test Trigger         |
| UCUSAN   | 1     | Ultra Common User System Acknowledge Negative  |
| URWDCKHS | 1     | Ultra Receiver Write Data Clock High-Speed     |
| UTWDCKHS | 1     | Ultra Transmitter Write Data Clock High-Speed  |
| UCRXWCHS | 1     | Ultra Common Receiver Write Clock High-Speed   |
| CLKLBACT | 1     | Clock Lane Low-Power Bias Active               |

**Table 210: Bidirectional Ports**

| Name | Range | Description          |
|------|-------|----------------------|
| CKN  | 1     | Clock Positive       |
| CKP  | 1     | Clock Negative       |
| DN0  | 1     | Data Lane 0 Positive |
| DN1  | 1     | Data Lane 0 Negative |
| DN2  | 1     | Data Lane 1 Positive |
| DN3  | 1     | Data Lane 1 Negative |
| DP0  | 1     | Data Lane 2 Positive |
| DP1  | 1     | Data Lane 2 Negative |
| DP2  | 1     | Data Lane 3 Positive |
| DP3  | 1     | Data Lane 3 Negative |

**Table 211: Parameters**


| Name          | Values                                                               | Description                                                                                                                                             |
|---------------|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| GSR           | "ENABLED" (default)<br>"DISABLED"                                    | Enable or disable GSR feature                                                                                                                           |
| AUTO_PD_EN    | "POWERED_UP" (default)<br>"POWERED_DOWN"                             | Powers down inactive lanes reported by CFG_NUM_LANES input bus                                                                                          |
| CFG_NUM_LANES | "ONE_LANE" (default)<br>"TWO_LANES"<br>"THREE_LANES"<br>"FOUR_LANES" | Sets the number of active lanes                                                                                                                         |
| CM            | 0'b00000000 (default)                                                | PLL dividers should be set to produce the required high speed BITCLK to be used for testing                                                             |
| CN            | 0'b00000 (default)                                                   | PLL dividers should be set to produce the required high speed BITCLK to be used for testing                                                             |
| CO            | 0'b000 (default)                                                     | PLL dividers should be set to produce the required high speed BITCLK to be used for testing                                                             |
| CONT_CLK_MODE | "DISABLED" (default)<br>"ENABLED"                                    | This static input pin enables the slave clock lane feature to maintain HS reception state during continuous clock mode operation, despite line glitches |
| DESKEW_EN     | "DISABLED" (default)<br>"ENABLED"                                    | Enables Deskew feature that modifies ERRSYNC/NOSYNC behavior                                                                                            |
| DSI_CSI       | "CSI2_APP" (default)<br>"DSI_APP"                                    | Selects the PHY IP Application                                                                                                                          |
| EN_CIL        | "CIL_ENABLED" (default)<br>"CIL_BYPASSED"                            | This signal should start with 1b1 then move to 1b0 to reset internal registers when in CIL Bypass mode                                                  |
| HSEL          | "DISABLED" (default)<br>"ENABLED"                                    | High Speed Select                                                                                                                                       |
| LANE0_SEL     | "LANE_0" (default)<br>"LANE_1"<br>"LANE_2"<br>"LANE_3"               | This input determines which lane will act as data lane0 in HS Operation mode                                                                            |
| LOCK_BYP      | "GATE_TXBYTECLKHS" (default)<br>"NOT_GATE_TXBYTECLKHS"               | When clock lane exits from ULPS, this input determines if the PLL LOCK signal will be used to gate the TxByteClkHS                                      |
| MASTER_SLAVE  | "SLAVE" (default)<br>"MASTER"                                        | Should be set to 1 for HS-TX and LP-TX Tests and set to 0 for remaining tests                                                                           |
| PLLCLKBYPASS  | "REGISTERED" (default)<br>"BYPASSED"                                 | PLL Clock bypass                                                                                                                                        |
| RSEL          | 0'b00 (default)                                                      | Receiver Select                                                                                                                                         |

| Name               | Values                                     | Description                                                                                                   |
|--------------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| RXCDRP             | 0'b00 (default)                            | On-chip termination control bits for manual calibration of HS-RX                                              |
| RXDATAWIDTHHS      | 0'b00 (default)                            | One-time programming bits that adjust the threshold voltage of LP-CD default setting 2b01                     |
| RXLPRP             | 0'b000 (default)                           | High-Speed Receive Data Width Select                                                                          |
| TEST_ENBL          | 0'b0000000 (default)                       | Enable TEST_PATTERN                                                                                           |
| TEST_PATTERN       | 0'b000000000000000000000000 (default)      | 32-bit BIST pattern to check loopback.                                                                        |
| TST                | 0'b1001 (default)<br>0000                  | PLL charge pump current control                                                                               |
| TXDATAWIDTHHS      | 0'b00 (default)                            | High-Speed Transmit Data Width Select                                                                         |
| U_PRG_HS_PREPARE   | 0'b00 (default)                            | Bits used to program T_HS_PREPARE time in the beginning of high speed transmission mode                       |
| U_PRG_HS_TRAIL     | 0'b000000 (default)                        | Bits used to program T_HS_TRAIL time in the end of high speed transmission mode                               |
| U_PRG_HS_ZERO      | 0'b000000 (default)                        | Bits used to program T_HS_ZERO time in the beginning of high speed transmission mode                          |
| U_PRG_RXHS_SETTLE  | 0'b000000 (default)                        | Bits used to program T_HS_SETTLE. HS-RX waits for Time-out T_HS_SETTLE in order to neglect transition effects |
| UC_PRG_HS_PREPARE  | "1P0_TXCLKESC" (default)<br>"1P5_TXCLKESC" | High-Speed Prepare Time                                                                                       |
| UC_PRG_HS_TRAIL    | 0'b00000 (default)                         | High-Speed Zero Time                                                                                          |
| UC_PRG_HS_ZERO     | 0'b0000000 (default)                       | High-Speed Trail Time                                                                                         |
| UC_PRG_RXHS_SETTLE | 0'b000000 (default)                        | Receiver High-Speed Settle Time                                                                               |

## Distributed Pseudo Dual Port RAM with Synchronous Write and Asynchronous Read

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T

- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

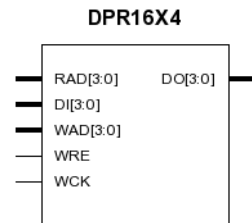**Table 212: Input Ports**

| Name     | Description   |
|----------|---------------|
| DI[3:0]  | Data in       |
| WAD[3:0] | Write address |
| WCK      | Write clock   |
| WRE      | Write enable  |
| RAD[3:0] | Read address  |

**Table 213: Output Ports**

| Name    | Description |
|---------|-------------|
| DO[3:0] | Data out    |

**Table 214: Parameters**

| Name    | Values                                  | Description                        |
|---------|-----------------------------------------|------------------------------------|
| INITVAL | "0x0000000000000000" ( <i>default</i> ) | 16-digit hex string, 64 bits total |

**Table 215: INIT Setting**

| Address   | Bit Index 3 | Bit Index 2 | Bit Index 1 | Bit Index 0 |
|-----------|-------------|-------------|-------------|-------------|
| Address 0 | INIT[48]    | INIT[32]    | INIT[16]    | INIT[0]     |
| Address 1 | INIT[49]    | INIT[33]    | INIT[17]    | INIT[1]     |
| Address 2 | INIT[50]    | INIT[34]    | INIT[18]    | INIT[2]     |
| Address 3 | INIT[51]    | INIT[35]    | INIT[19]    | INIT[3]     |
| Address 4 | INIT[52]    | INIT[36]    | INIT[20]    | INIT[4]     |
| Address 5 | INIT[53]    | INIT[37]    | INIT[21]    | INIT[5]     |

**Table 215: INIT Setting (Continued)**

| Address    | Bit Index 3 | Bit Index 2 | Bit Index 1 | Bit Index 0 |
|------------|-------------|-------------|-------------|-------------|
| Address 6  | INIT[54]    | INIT[38]    | INIT[22]    | INIT[6]     |
| Address 7  | INIT[55]    | INIT[39]    | INIT[23]    | INIT[7]     |
| Address 8  | INIT[56]    | INIT[40]    | INIT[24]    | INIT[8]     |
| Address 9  | INIT[57]    | INIT[41]    | INIT[25]    | INIT[9]     |
| Address 10 | INIT[58]    | INIT[42]    | INIT[26]    | INIT[10]    |
| Address 11 | INIT[59]    | INIT[43]    | INIT[27]    | INIT[11]    |
| Address 12 | INIT[60]    | INIT[44]    | INIT[28]    | INIT[12]    |
| Address 13 | INIT[60]    | INIT[45]    | INIT[29]    | INIT[13]    |
| Address 14 | INIT[62]    | INIT[46]    | INIT[30]    | INIT[14]    |
| Address 15 | INIT[63]    | INIT[47]    | INIT[31]    | INIT[15]    |

For the output to be Data = Address (Address 0 = Data 0 and so on), the INIT must be:

INIT = 0xFF00F0F0CCCCAAAA

LUT3.INIT = "FF00"

LUT2.INIT = "F0F0"

LUT1.INIT = "CCCC"


LUT0.INIT = "AAAA"

## DPR16X4A

Distributed Pseudo Dual Port RAM. Synchronous write, asynchronous read

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

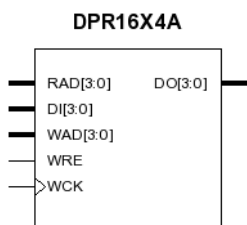**Table 216: Input Ports**

| Name | Range | Type    | Description   |
|------|-------|---------|---------------|
| RAD  | 3:0   | Addr    | Read address  |
| DI   | 3:0   | Data    | Write data    |
| WAD  | 3:0   | Addr    | Write address |
| WRE  | 1     | Control | Write enable  |
| WCK  | 1     | Clock   | Write clock   |

**Table 217: Output Ports**

| Name | Range | Type | Description |
|------|-------|------|-------------|
| DO   | 3:0   | Data | Read data   |

**Table 218: Parameters**


| Name    | Values                         | Description              |
|---------|--------------------------------|--------------------------|
| INITVAL | "0x0000000000000000" (default) | RAM initialization value |

## DPR32X2

Distributed Pseudo Dual Port RAM. Synchronous write, asynchronous read

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

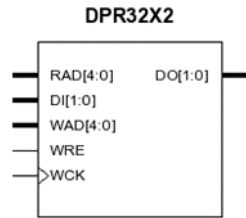**Table 219: Input Ports**

| Name | Range | Type    | Description   |
|------|-------|---------|---------------|
| RAD  | 4:0   | Addr    | Read address  |
| DI   | 1:0   | Data    | Write data    |
| WAD  | 4:0   | Addr    | Write address |
| WRE  | 1     | Control | Write enable  |
| WCK  | 1     | Clock   | Write clock   |

**Table 220: Output Ports**

| Name | Range | Type | Description |
|------|-------|------|-------------|
| DO   | 1:0   | Data | Read data   |

**Table 221: Parameters**

| Name    | Values                         | Description              |
|---------|--------------------------------|--------------------------|
| INITVAL | "0x0000000000000000" (default) | RAM initialization value |

## DPSC512K


512Kb Single Clock Dual Port Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35



- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

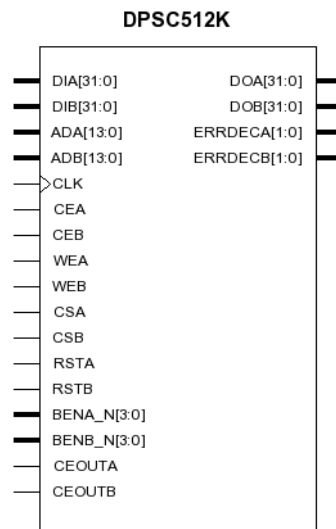**Table 222: Input Ports**

| Name      | Description                  |
|-----------|------------------------------|
| DIA[31:0] | Port A data in               |
| DIB[31:0] | Port B data in               |
| ADA[13:0] | Port A address               |
| ADB[13:0] | Port B address               |
| CLK       | Clock                        |
| CEA       | Port A clock enable          |
| CEB       | Port B clock enable          |
| WEA       | Port A write enable          |
| WEB       | Port A write enable          |
| CSA       | Port A chip select           |
| CSB       | Port B chip select           |
| RSTA      | Port A output register reset |

**Table 222: Input Ports (Continued)**

| Name        | Description                                                                                                    |
|-------------|----------------------------------------------------------------------------------------------------------------|
| RSTB        | Port B output register reset                                                                                   |
| BENA_N[3:0] | Write byte enable, 0=write 1=disable. BENA_N[3] corresponds to the MSB of DI, BENA_N[0] corresponds to the LSB |
| BENB_N[3:0] | Write byte enable, 0=write 1=disable. BENB_N[3] corresponds to the MSB of DI, BENB_N[0] corresponds to the LSB |
| CEOUTA      | Port A output register clock enable                                                                            |
| CEOUTB      | Port B output register clock enable                                                                            |


**Table 223: Output Ports**

| Name         | Description                       |
|--------------|-----------------------------------|
| DOA[31:0]    | Port A data out                   |
| DOB[31:0]    | Port B data out                   |
| ERRDECA[1:0] | Port A one and two bit error flag |
| ERRDECB[1:0] | Port B one and two bit error flag |

**Table 224: Parameters**

| Name                    | Values                                              | Description                       |
|-------------------------|-----------------------------------------------------|-----------------------------------|
| OUTREG_A                | "NO_REG" ( <i>default</i> )<br>"OUT_REG"            | Register output A                 |
| OUTREG_B                | "NO_REG" ( <i>default</i> )<br>"OUT_REG"            | Register output B                 |
| GSR                     | "ENABLED" ( <i>default</i> )<br>"DISABLED"          | Enable global set/reset           |
| RESETMODE               | "SYNC" ( <i>default</i> )<br>"ASYNC"                | Reset async/sync control          |
| INITVAL_00...INITVAL_7F | Hex string, 5120 bits, must include the "0x" prefix | LRAM initialization data          |
| ASYNC_RESET_RELEASE     | "SYNC" ( <i>default</i> )<br>"ASYNC"                | Reset release async/sync          |
| ECC_BYTE_SEL            | "ECC_EN" ( <i>default</i> )<br>"BYTE_EN"            | Enable ECC or Byte-enable support |

All inputs (except the register control signals) and all outputs are registered in the following manner:

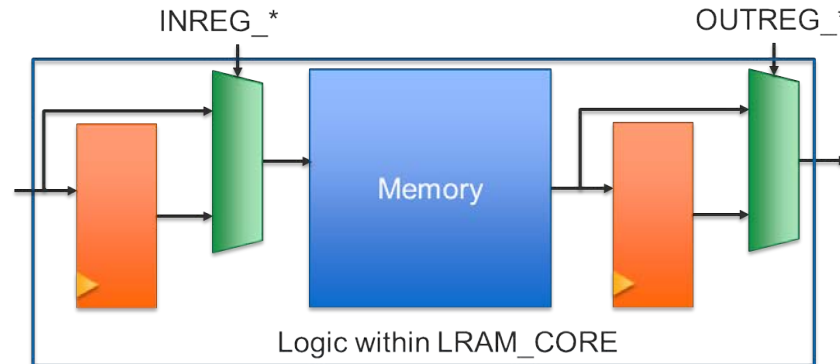


## DQSBUF

To support DDR memory interfaces (DDR2/3, LPDDR2/3), the DQS strobe signal from the memory must be used to capture the data (DQ) in the PIC registers during memory reads.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40, LIFCL-17
- ▶ UT24C
- ▶ UT24CP

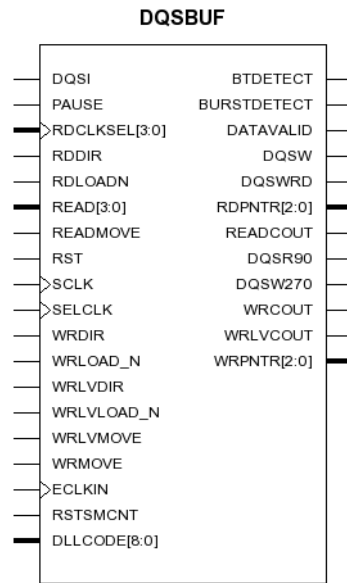**Table 225: Input Ports**

| Name          | Description                                                                                                                                                                                                                                                                                                                                                                          |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DQSI          | DQS signal from IO through the PIC                                                                                                                                                                                                                                                                                                                                                   |
| PAUSE         | To stop ECLK for DDR3 Write leveling and DLL code update                                                                                                                                                                                                                                                                                                                             |
| RDCLKSEL[3:0] | Select read clock source and polarity control (from CIB)                                                                                                                                                                                                                                                                                                                             |
| RDDIR         | 0 to increase the code, 1to decrease the code for DDR read                                                                                                                                                                                                                                                                                                                           |
| RDLOADN       | 1b0 - When mc1_mt_en_read=1b1 and read_load_n=1b0 the read_move pulse needs to be generated to the load the preload value consisting of the {mc1_sign_read,mc1_s_read[8:0]} value; 1b1 - When counter has preload value, read_move pulse can be used to increment and decrement the counter based on the read_direction signal's value and mc1_mt_en_write should be set 1b1.        |
| READ[3:0]     | Read signal for DDR read mode (from CIB)                                                                                                                                                                                                                                                                                                                                             |
| READMOVE      | Move pulse needs to be at least 1 sclk cycle and should be greater than 5ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the read_direction port.                                                                                                                 |
| RST           | DQS reset control for both DDR/CDR modes (from CIB)                                                                                                                                                                                                                                                                                                                                  |
| SCLK          | SCLK from SCLK tree (CIB)                                                                                                                                                                                                                                                                                                                                                            |
| SELCLK        | Select the clock to be used between the output of the read section's delay cell or sclk                                                                                                                                                                                                                                                                                              |
| WRDIR         | 0 - to increase the code, 1 - to decrease the code for DDR write                                                                                                                                                                                                                                                                                                                     |
| WRLOAD_N      | 1b0 - When mc1_mt_en_write=1b1 and write_load_n=1b0 the write_move pulse needs to be generated to the load the preload value consisting of the {mc1_sign_write,mc1_s_write[8:0]} value; 1b1 - When counter has preload value, write_move pulse can be used to increment and decrement the counter based on the write_direction signal's value and mc1_mt_en_write should be set 1b1. |

**Table 225: Input Ports (Continued)**

| Name         | Description                                                                                                                                                                                                                                                                    |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WRLVDIR      | 0 - to increase the code, 1 - to decrease the code for DDR write leveling                                                                                                                                                                                                      |
| WRLVLOAD_N   | 1b0 - 9-bit counter in reset operation; 1b1 - When mc1_mt_en_write_leveling=1b1 and write_leveling_load_n=1b1 the counter can be incremented/decremented based on the direction signal using the write_leveling_move signal                                                    |
| WRLVMOVE     | Move pulse needs to be at least 1 sclk cycle and should be greater than 5ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the write_leveling_direction port. |
| WRMOVE       | Move pulse needs to be at least 1 sclk cycle and should be greater than 5ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the write_direction port.          |
| ECLKIN       | ECLK from 4 different ECLK tree output                                                                                                                                                                                                                                         |
| RSTSMCNT     | Signal to reset the smoothing counters used for the Read, Write, and Write leveling delays.                                                                                                                                                                                    |
| DLLCODE[8:0] | DLL code selected from the DLL code routing mux                                                                                                                                                                                                                                |

**Table 226: Output Ports**

| Name        | Description                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------|
| BTDETECT    | READ burst detect output (to CIB)                                                                                                   |
| BURSTDetect | The burst_det_sclk signal is generated using burst_det and is asserted on the rising edge of SCLK                                   |
| DATAVALID   | Data Valid Flag for READ mode (to CIB)                                                                                              |
| DQSW        | ECLK phase shifted or delayed, goes to the dqsw tree through the PIC                                                                |
| DQSWRD      | The read training clock adjusted in the write section. The read_clk_sel[3:0] determines the selected delay and read enable position |
| RDPNTR[2:0] | FIFO control READ pointer (3-bits) to FIFO in PIC (through each tree to IOL)                                                        |
| READCOUT    | Margin test output flag for READ to indicate the underflow or overflow                                                              |
| DQSR90      | DQSI phase shifted or delayed by 90 degree output (through DQSR tree to IOL)                                                        |
| DQSW270     | ECLK phase shifted or delayed by 270 degree output (through DQSW270 tree to IOL)                                                    |
| WRCOUT      | Margin test output flag for WRITE to indicate the underflow or overflow                                                             |
| WRLVCOUT    | Margin test output flag for WRITE LEVELING to indicate the underflow or overflow                                                    |
| WRPNTR[2:0] | FIFO control WRITE pointer (3-bits) to FIFO in PIC (through each tree to IOL)                                                       |

**Table 227: Parameters**

| Name        | Values                                     | Description                       |
|-------------|--------------------------------------------|-----------------------------------|
| GSR         | "ENABLED" ( <i>default</i> )<br>"DISABLED" | GSRN signal enable/disable select |
| ENABLE_FIFO | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Enable FIFO control               |

**Table 227: Parameters (Continued)**

| Name                 | Values                                                                        | Description                                                                                                                                                                                                                                                                                                                              |
|----------------------|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FORCE_READ           | "DISABLED" (default)<br>"ENABLED"                                             |                                                                                                                                                                                                                                                                                                                                          |
| FREE_WHEEL           | "DDR" (default)<br>"GDDR"                                                     | FIFO mode select                                                                                                                                                                                                                                                                                                                         |
| MODX                 | "NOT_USED" (default)<br>"MDDR2_WL_DDR2"<br>"MDDR2_WL_DDR3"<br>"MDDR4_WL_DDR3" | DQS mode selection for different DDRX2 modes: WL = 0T: MDDR2 mode (DDR2/DDR3) without WL; WL = 1T: MDDR2 mode (DDR3) with WL                                                                                                                                                                                                             |
| MT_EN_READ           | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for READ mode<br>1 - Enable                                                                                                                                                                                                                                                                                      |
| MT_EN_WRITE          | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for WRITE mode<br>1 - Enable                                                                                                                                                                                                                                                                                     |
| MT_EN_WRITE_LEVELING | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for WRITE LEVELING mode<br>1 - Enable                                                                                                                                                                                                                                                                            |
| RD_PNTR              | 0'b000 (default)                                                              | FIFO control READ pointer (3-bits) to FIFO in PIC (through each tree to IOL)                                                                                                                                                                                                                                                             |
| READ_ENABLE          | "DISABLED" (default)<br>"ENABLED"                                             | DQS delay enable for read                                                                                                                                                                                                                                                                                                                |
| RX_CENTERED          | "ENABLED" (default)<br>"DISABLED"                                             | When RX_CENTERED is ENABLED, this allows the DQSBUF to pass the DLLCODE and allow 90 degree shift on DQSR90.<br><br>When RX_CENTERED is DISABLED, this tells the DQSBUF to gate the DLLCODE, effectively keeping DQSR90 at 0 delay (or 0 degrees).                                                                                       |
| S_READ               | 0 (default)                                                                   | Offset for READ slave delay adjustment. For example:<br><ul style="list-style-type: none"> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_00000000 = +0: add 0 unit delay</li> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_00000010 = +2: add 2 unit delay</li> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_11111111 = +255: add 255 unit delay</li> </ul> |

**Table 227: Parameters (Continued)**

| Name                       | Values                                             | Description                                                                                                                                                                                                                                                                                                                                               |
|----------------------------|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S_WRITE                    | 0 (default)                                        | Offset for WRITE slave delay adjustment. For example: <ul style="list-style-type: none"> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_11111111 = -1: subtract 1 unit delay</li> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_00000001 = -255: subtract 255 unit delay</li> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_00000000 = -256: subtract 256 unit delay</li> </ul> |
| SIGN_READ                  | "POSITIVE" (default)<br>"COMPLEMENT"               | Sign bit for READ slave delay adjustment.<br>0: Positive [Addition]<br>1: Complement [Subtraction]                                                                                                                                                                                                                                                        |
| SIGN_WRITE                 | "POSITIVE" (default)<br>"COMPLEMENT"               | Sign bit for WRITE slave delay adjustment.<br>0: Positive [Addition]<br>1: Complement [Subtraction]                                                                                                                                                                                                                                                       |
| UPDATE_QU                  | "UP1_AND_UP0_SAME" (default)<br>"UP1_AHEAD_OF_UP0" | Update 0/1 timing relationship control adjustment.<br>0: update1 ahead of update0 one cycle<br>1: update1 and update0 same                                                                                                                                                                                                                                |
| WRITE_ENABLE               | "DISABLED" (default)<br>"ENABLED"                  | DQS delay enable for write                                                                                                                                                                                                                                                                                                                                |
| SEL_READ_BIT_ENABLE_CYCLES | "NORMAL" (default)<br>"DELAYED_0P5_ECLK"           | Used to select the cycle latency for the read enable signal generated by the read[3:0] bits and read_clk_sel[3:0].                                                                                                                                                                                                                                        |
| BYPASS_WR_LEVEL_SMTH_LATCH | "SMOOTHING_PATH" (default)<br>"BYPASS_PATH"        | 1b0: Select the write leveling smoothing path<br>1b1: Select the write leveling smoothing bypass path, counter control based on Sapphire                                                                                                                                                                                                                  |
| BYPASS_WR_SMTH_LATCH       | "SMOOTHING_PATH" (default)<br>"BYPASS_PATH"        | 1b0: Select the write smoothing path<br>1b1: Select the write smoothing bypass path, counter control based on Sapphire                                                                                                                                                                                                                                    |
| BYPASS_READ_SMTH_LATCH     | "SMOOTHING_PATH" (default)<br>"BYPASS_PATH"        | 1b0: Select the read smoothing path<br>1b1: Select the read smoothing bypass path, counter control based on Sapphire                                                                                                                                                                                                                                      |

**Note:**

The SIGN\_READ, S\_READ, SIGN\_WRITE, and S\_WRITE are all set to a value based on device performance. MAP will use fixed values for these components during the MAP.

To support DDR memory interfaces (DDR2/3, LPDDR2/3), the DQS strobe signal from the memory must be used to capture the data (DQ) in the PIC registers during memory reads.

**DQSBUFA**

Block generating DQS Signal for Memory LPDDR4 Functionality

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ UT24CP

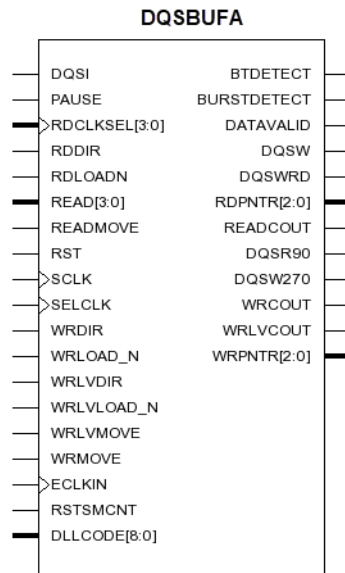


**Table 228: Input Ports**

| Name          | Description                                              |
|---------------|----------------------------------------------------------|
| DQSI          | DQS signal from IO through the PIC                       |
| PAUSE         | To stop ECLK for DDR3 Write leveling and DLL code update |
| RDCLKSEL[3:0] | Select read clock source and polarity control (from CIB) |



**Table 228: Input Ports (Continued)**

| Name         | Description                                                                                                                                                                                                                                                                                                                                                                          |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RDDIR        | 0 to increase the code, 1 to decrease the code for DDR read                                                                                                                                                                                                                                                                                                                          |
| RDLOADN      | 1b0 - When mc1_mt_en_read=1b1 and read_load_n=1b0 the read_move pulse needs to be generated to the load the preload value consisting of the {mc1_sign_read,mc1_s_read[8:0]} value; 1b1 - When counter has preload value, read_move pulse can be used to increment and decrement the counter based on the read_direction signal's value and mc1_mt_en_write should be set 1b1.        |
| READ[3:0]    | Read signal for DDR read mode (from CIB)                                                                                                                                                                                                                                                                                                                                             |
| READMOVE     | Move pulse needs to be at least 1 sclk cycle and should be greater than 5ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the read_direction port.                                                                                                                 |
| RST          | DQS reset control for both DDR/CDR modes (from CIB)                                                                                                                                                                                                                                                                                                                                  |
| SCLK         | SCLK from SCLK tree (CIB)                                                                                                                                                                                                                                                                                                                                                            |
| SELCLK       | Select the clock to be used between the output of the read section's delay cell or sclk                                                                                                                                                                                                                                                                                              |
| WRDIR        | 0 - to increase the code, 1 - to decrease the code for DDR write                                                                                                                                                                                                                                                                                                                     |
| WRLOAD_N     | 1b0 - When mc1_mt_en_write=1b1 and write_load_n=1b0 the write_move pulse needs to be generated to the load the preload value consisting of the {mc1_sign_write,mc1_s_write[8:0]} value; 1b1 - When counter has preload value, write_move pulse can be used to increment and decrement the counter based on the write_direction signal's value and mc1_mt_en_write should be set 1b1. |
| WRLVDIR      | 0 - to increase the code, 1 - to decrease the code for DDR write leveling                                                                                                                                                                                                                                                                                                            |
| WRLVLOAD_N   | 1b0 - 9-bit counter in reset operation; 1b1 - When mc1_mt_en_write_leveling=1b1 and write_leveling_load_n=1b1 the counter can be incremented/decremented based on the direction signal using the write_leveling_move signal                                                                                                                                                          |
| WRLVMOVE     | Move pulse needs to be at least 1 sclk cycle and should be greater than 5ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the write_leveling_direction port.                                                                                                       |
| WRMOVE       | Move pulse needs to be at least 1 sclk cycle and should be greater than 5ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the write_direction port.                                                                                                                |
| ECLKIN       | ECLK from 4 different ECLK tree output                                                                                                                                                                                                                                                                                                                                               |
| RSTSMCNT     | Signal to reset the smoothing counters used for the Read, Write, and Write leveling delays.                                                                                                                                                                                                                                                                                          |
| DLLCODE[8:0] | DLL code selected from the DLL code routing mux                                                                                                                                                                                                                                                                                                                                      |

**Table 229: Output Ports**

| Name        | Description                                                                                       |
|-------------|---------------------------------------------------------------------------------------------------|
| BTDETECT    | READ burst detect output (to CIB)                                                                 |
| BURSTDetect | The burst_det_sclk signal is generated using burst_det and is asserted on the rising edge of SCLK |
| DATAVALID   | Data Valid Flag for READ mode (to CIB)                                                            |

**Table 229: Output Ports (Continued)**

| Name        | Description                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------|
| DQSW        | ECLK phase shifted or delayed, goes to the dqsw tree through the PIC                                                                |
| DQSWRD      | The read training clock adjusted in the write section. The read_clk_sel[3:0] determines the selected delay and read enable position |
| RDPNTR[2:0] | FIFO control READ pointer (3-bits) to FIFO in PIC (through each tree to IOL)                                                        |
| READCOUT    | Margin test output flag for READ to indicate the underflow or overflow                                                              |
| DQSR90      | DQSI phase shifted or delayed by 90 degree output (through DQSR tree to IOL)                                                        |
| DQSW270     | ECLK phase shifted or delayed by 270 degree output (through DQSW270 tree to IOL)                                                    |
| WRCOUT      | Margin test output flag for WRITE to indicate the underflow or overflow                                                             |
| WRLVCOUT    | Margin test output flag for WRITE LEVELING to indicate the underflow or overflow                                                    |
| WRPNTR[2:0] | FIFO control WRITE pointer (3-bits) to FIFO in PIC (through each tree to IOL)                                                       |

**Table 230: Parameters**

| Name                 | Values                                                                        | Description                                                                                                                  |
|----------------------|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| GSR                  | "ENABLED" (default)<br>"DISABLED"                                             | GSRN signal enable/disable select                                                                                            |
| ENABLE_FIFO          | "DISABLED" (default)<br>"ENABLED"                                             | Enable FIFO control                                                                                                          |
| FORCE_READ           | "DISABLED" (default)<br>"ENABLED"                                             |                                                                                                                              |
| FREE_WHEEL           | "DDR" (default)<br>"GDDR"                                                     | FIFO mode select                                                                                                             |
| MODX                 | "NOT_USED" (default)<br>"MDDR2_WL_DDR2"<br>"MDDR2_WL_DDR3"<br>"MDDR4_WL_DDR3" | DQS mode selection for different DDRX2 modes: WL = 0T: MDDR2 mode (DDR2/DDR3) without WL; WL = 1T: MDDR2 mode (DDR3) with WL |
| MT_EN_READ           | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for READ mode<br>1 - Enable                                                                          |
| MT_EN_WRITE          | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for WRITE mode<br>1 - Enable                                                                         |
| MT_EN_WRITE_LEVELING | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for WRITE LEVELING mode<br>1 - Enable                                                                |
| RD_PNTR              | 0'b000 (default)                                                              | FIFO control READ pointer (3-bits) to FIFO in PIC (through each tree to IOL)                                                 |
| READ_ENABLE          | "DISABLED" (default)<br>"ENABLED"                                             | DQS delay enable for read                                                                                                    |

**Table 230: Parameters (Continued)**

| Name                       | Values                                                      | Description                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RX_CENTERED                | "ENABLED" ( <i>default</i> )<br>"DISABLED"                  | For GDDR-DQS RX Centered mode [delay code = 0]                                                                                                                                                                                                                                                                                                               |
| S_READ                     | 0 ( <i>default</i> )                                        | Offset for READ slave delay adjustment. For example:<br><ul style="list-style-type: none"> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_00000000 = +0: add 0 unit delay</li> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_00000010 = +2: add 2 unit delay</li> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_11111111 = +255: add 255 unit delay</li> </ul>                     |
| S_WRITE                    | 0 ( <i>default</i> )                                        | Offset for WRITE slave delay adjustment. For example:<br><ul style="list-style-type: none"> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_11111111 = -1: subtract 1 unit delay</li> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_00000001 = -255: subtract 255 unit delay</li> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_00000000 = -256: subtract 256 unit delay</li> </ul> |
| SIGN_READ                  | "POSITIVE" ( <i>default</i> )<br>"COMPLEMENT"               | Sign bit for READ slave delay adjustment.<br>0: Positive [Addition]<br>1: Complement [Subtraction]                                                                                                                                                                                                                                                           |
| SIGN_WRITE                 | "POSITIVE" ( <i>default</i> )<br>"COMPLEMENT"               | Sign bit for WRITE slave delay adjustment.<br>0: Positive [Addition]<br>1: Complement [Subtraction]                                                                                                                                                                                                                                                          |
| UPDATE_QU                  | "UP1_AND_UP0_SAME" ( <i>default</i> )<br>"UP1_AHEAD_OF_UP0" | Update 0/1 timing relationship control adjustment.<br>0: update1 ahead of update0 one cycle<br>1: update1 and update0 same                                                                                                                                                                                                                                   |
| WRITE_ENABLE               | "DISABLED" ( <i>default</i> )<br>"ENABLED"                  | DQS delay enable for write                                                                                                                                                                                                                                                                                                                                   |
| SEL_READ_BIT_ENABLE_CYCLES | "NORMAL" ( <i>default</i> )<br>"DELAYED_0P5_ECLK"           | Used to select the cycle latency for the read enable signal generated by the read[3:0] bits and read_clk_sel[3:0].                                                                                                                                                                                                                                           |

**Table 230: Parameters (Continued)**

| Name                       | Values                                               | Description                                                                                                                                  |
|----------------------------|------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| BYPASS_WR_LEVEL_SMTH_LATCH | "SMOOTHING_PATH" ( <i>default</i> )<br>"BYPASS_PATH" | 1b0: Select the write leveling smoothing path<br><br>1b1: Select the write leveling smoothing bypass path, counter control based on Sapphire |
| BYPASS_WR_SMTH_LATCH       | "SMOOTHING_PATH" ( <i>default</i> )<br>"BYPASS_PATH" | 1b0: Select the write smoothing path<br><br>1b1: Select the write smoothing bypass path, counter control based on Sapphire                   |
| BYPASS_READ_SMTH_LATCH     | "SMOOTHING_PATH" ( <i>default</i> )<br>"BYPASS_PATH" | 1b0: Select the read smoothing path<br><br>1b1: Select the read smoothing bypass path, counter control based on Sapphire                     |
| LPDDR4_BL16_EN             | "DISABLED" ( <i>default</i> )<br>"ENABLED"           | Training burst length of DQS setting.<br><br>Enabled: Enable burst length of 16<br><br>Disabled: Enable burst length of 8                    |

**Note:**


The SIGN\_READ, S\_READ, SIGN\_WRITE, and S\_WRITE are all set to a value based on device performance. MAP will use fixed values for these components during the MAP.

**DQSBUF\_IVREF**

To support DDR4 memory interfaces, the DQS strobe signal from the memory must be used to capture the data (DQ) in the PIC registers during memory reads, and the LPDDR4 internal VREF generator should be used to generated trained reference voltage for LPDDR4 IO buffers. DQSBUF\_IVREF combines the functions together.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

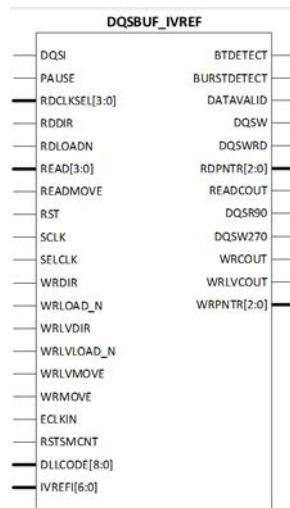**Table 231: Input Ports**

| Name          | Description                                                                                                                                                                                                                                                                                                                                                                             |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DQSI          | DQS signal from IO through the PIC                                                                                                                                                                                                                                                                                                                                                      |
| PAUSE         | To stop ECLK for DDR3 Write leveling and DLL code update                                                                                                                                                                                                                                                                                                                                |
| RDCLKSEL[3:0] | Select read clock source and polarity control (from CIB)                                                                                                                                                                                                                                                                                                                                |
| RDDIR         | 0 to increase the code, 1to decrease the code for DDR read                                                                                                                                                                                                                                                                                                                              |
| RDLOADN       | 1b0 - When mc1_mt_en_read=1b1 and read_load_n=1b0 the read_move pulse needs to be generated to the load the preload value consisting of the {mc1_sign_read,mc1_s_read[8:0]} value.<br>1b1 - When counter has preload value, read_move pulse can be used to increment and decrement the counter based on the read_direction signal's value and mc1_mt_en_write should be set 1b1.        |
| READ[3:0]     | Read signal for DDR read mode (from CIB)                                                                                                                                                                                                                                                                                                                                                |
| READMOVE      | Move pulse needs to be at least 1 sclk cycle and should be greater than 5 ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the read_direction port.                                                                                                                   |
| RST           | DQS reset control for both DDR/CDR modes (from CIB)                                                                                                                                                                                                                                                                                                                                     |
| SCLK          | SCLK from SCLK tree (CIB)                                                                                                                                                                                                                                                                                                                                                               |
| SELCLK        | Select the clock to be used between the output of the read section's delay cell or sclk                                                                                                                                                                                                                                                                                                 |
| WRDIR         | 0 - to increase the code<br>1 - to decrease the code for DDR write                                                                                                                                                                                                                                                                                                                      |
| WRLOAD_N      | 1b0 - When mc1_mt_en_write=1b1 and write_load_n=1b0 the write_move pulse needs to be generated to the load the preload value consisting of the {mc1_sign_write,mc1_s_write[8:0]} value.<br>1b1 - When counter has preload value, write_move pulse can be used to increment and decrement the counter based on the write_direction signal's value and mc1_mt_en_write should be set 1b1. |
| WRLVDIR       | 0 - to increase the code<br>1 - to decrease the code for DDR write leveling                                                                                                                                                                                                                                                                                                             |

**Table 231: Input Ports (Continued)**

| Name         | Description                                                                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WRLVLOAD_N   | 1b0 - 9-bit counter in reset operation<br>1b1 - When mc1_mt_en_write_leveling=1b1 and write_leveling_load_n=1b1 the counter can be incremented/decremented based on the direction signal using the write_leveling_move signal                                                   |
| WRLVMOVE     | Move pulse needs to be at least 1 sclk cycle and should be greater than 5 ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the write_leveling_direction port. |
| WRMOVE       | Move pulse needs to be at least 1 sclk cycle and should be greater than 5 ns at TT corner. Pulse is used along with the eclk to generate the internal "mov" signal to update the counter by one value. The count up or down is determined by the write_direction port.          |
| ECLKIN       | ECLK from 4 different ECLK tree output                                                                                                                                                                                                                                          |
| RSTSMCNT     | Signal to reset the smoothing counters used for the Read, Write, and Write leveling delays.                                                                                                                                                                                     |
| DLLCODE[8:0] | DLL code selected from the DLL code routing mux                                                                                                                                                                                                                                 |
| IVREFI[6:0]  | VREF output control from cib. The step size is 5 mV.                                                                                                                                                                                                                            |

**Table 232: Output Ports**

| Name        | Description                                                                                       |
|-------------|---------------------------------------------------------------------------------------------------|
| BTDETECT    | READ burst detect output (to CIB)                                                                 |
| BURSTDetect | The burst_det_sclk signal is generated using burst_det and is asserted on the rising edge of SCLK |
| DATAVALID   | The burst_det_sclk signal is generated using burst_det and is asserted on the rising edge of SCLK |
| DQSW        | ECLK phase shifted or delayed, goes to the dqsw tree through the PIC                              |
| DQSWRD      | ECLK phase shifted or delayed, goes to the dqsw tree through the PIC                              |
| RDPNTR[2:0] | FIFO control READ pointer (3-bits) to FIFO in PIC (through each tree to IOL)                      |
| READCOUT    | Margin test output flag for READ to indicate the underflow or overflow                            |
| DQSR90      | DQSI phase shifted or delayed by 90 degree output (through DQSR tree to IOL)                      |
| DQSW270     | ECLK phase shifted or delayed by 270 degree output (through DQSW270 tree to IOL)                  |
| WRCOUT      | Margin test output flag for WRITE to indicate the underflow or overflow                           |
| WRLVCOUT    | Margin test output flag for WRITE to indicate the underflow or overflow                           |
| WRPNTR[2:0] | FIFO control WRITE pointer (3-bits) to FIFO in PIC (through each tree to IOL)                     |

**Table 233: Parameters**

| Name        | Values                            | Description                       |
|-------------|-----------------------------------|-----------------------------------|
| GSR         | "ENABLED" (default)<br>"DISABLED" | GSRN signal enable/disable select |
| ENABLE_FIFO | "DISABLED" (default)<br>"ENABLED" | Enable FIFO control               |

**Table 233: Parameters (Continued)**

| Name                 | Values                                                                        | Description                                                                                                                                                                                                                                                                                                                                               |
|----------------------|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FORCE_READ           | "DISABLED" (default)<br>"ENABLED"                                             |                                                                                                                                                                                                                                                                                                                                                           |
| FREE_WHEEL           | "DDR" (default)<br>"GDDR"                                                     | FIFO mode select                                                                                                                                                                                                                                                                                                                                          |
| MODX                 | "NOT_USED" (default)<br>"MDDR2_WL_DDR2"<br>"MDDR2_WL_DDR3"<br>"MDDR4_WL_DDR3" | DQS mode selection for different DDRX2 modes: WL = 0T: MDDR2 mode (DDR2/DDR3) without WL; WL = 1T: MDDR2 mode (DDR3) with WL                                                                                                                                                                                                                              |
| MT_EN_READ           | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for READ mode<br>1 - Enable                                                                                                                                                                                                                                                                                                       |
| MT_EN_WRITE          | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for WRITE mode<br>1 - Enable                                                                                                                                                                                                                                                                                                      |
| MT_EN_WRITE_LEVELING | "DISABLED" (default)<br>"ENABLED"                                             | 0 - Disable margin test for WRITE LEVELING mode<br>1 - Enable                                                                                                                                                                                                                                                                                             |
| RD_PNTR              | 0'b000 (default)                                                              | FIFO control READ pointer (3 bits) to FIFO in PIC (through each tree to IOL)                                                                                                                                                                                                                                                                              |
| READ_ENABLE          | "DISABLED" (default)<br>"ENABLED"                                             | DQS delay enable for read                                                                                                                                                                                                                                                                                                                                 |
| RX_CENTERED          | "ENABLED" (default)<br>"DISABLED"                                             | For GDDR-DQS RX Centered mode [delay code = 0]                                                                                                                                                                                                                                                                                                            |
| S_READ               | 0 (default)                                                                   | Offset for READ slave delay adjustment. For example: <ul style="list-style-type: none"> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_00000000 = +0: add 0 unit delay</li> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_00000010 = +2: add 2 unit delay</li> <li>▶ {mc1_sign_rd, mc1_s_rd[7:0]} = 0_11111111 = +255: add 255 unit delay</li> </ul>                     |
| S_WRITE              | 0 (default)                                                                   | Offset for WRITE slave delay adjustment. For example: <ul style="list-style-type: none"> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_11111111 = -1: subtract 1 unit delay</li> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_00000001 = -255: subtract 255 unit delay</li> <li>▶ {mc1_sign_wr, mc1_s_wr[7:0]} = 1_00000000 = -256: subtract 256 unit delay</li> </ul> |

**Table 233: Parameters (Continued)**

| Name                       | Values                                                      | Description                                                                                                                                  |
|----------------------------|-------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| SIGN_READ                  | "POSITIVE" ( <i>default</i> )<br>"COMPLEMENT"               | Sign bit for READ slave delay adjustment.<br><br>0: Positive [Addition]<br>1: Complement [Subtraction]                                       |
| SIGN_WRITE                 | "POSITIVE" ( <i>default</i> )<br>"COMPLEMENT"               | Sign bit for WRITE slave delay adjustment.<br><br>0: Positive [Addition]<br>1: Complement [Subtraction]                                      |
| UPDATE_QU                  | "UP1_AND_UP0_SAME" ( <i>default</i> )<br>"UP1_AHEAD_OF_UP0" | Update 0/1 timing relationship control adjustment.<br><br>0: update1 ahead of update0 one cycle<br>1: update1 and update0 same               |
| WRITE_ENABLE               | "DISABLED" ( <i>default</i> )<br>"ENABLED"                  | DQS delay enable for write                                                                                                                   |
| SEL_READ_BIT_ENABLE_CYCLES | "NORMAL" ( <i>default</i> )<br>"DELAYED_0P5_ECLK"           | Used to select the cycle latency for the read enable signal generated by the read[3:0] bits and read_clk_sel[3:0].                           |
| BYPASS_WR_LEVEL_SMTH_LATCH | "SMOOTHING_PATH" ( <i>default</i> )<br>"BYPASS_PATH"        | 1b0: Select the write leveling smoothing path<br><br>1b1: Select the write leveling smoothing bypass path, counter control based on Sapphire |
| BYPASS_WR_SMTH_LATCH       | "SMOOTHING_PATH" ( <i>default</i> )<br>"BYPASS_PATH"        | 1b0: Select the write smoothing path<br><br>1b1: Select the write smoothing bypass path, counter control based on Sapphire                   |
| BYPASS_READ_SMTH_LATCH     | "SMOOTHING_PATH" ( <i>default</i> )<br>"BYPASS_PATH"        | 1b0: Select the read smoothing path<br><br>1b1: Select the read smoothing bypass path, counter control based on Sapphire                     |
| LPDDR4_BL16_EN             | "DISABLED" ( <i>default</i> )<br>"ENABLED"                  | Training burst length of DQS setting.<br><br>Enabled: Enable burst length of 16<br>Disabled: Enable burst length of 8                        |

To support DDR4 memory interfaces, the DQS strobe signal from the memory must be used to capture the data (DQ) in the PIC registers during memory reads, and the LPDDR3 internal VREF generator should be used to generated trained reference voltage for LPDDR4 IO buffers. DQSBUF\_IVREF combines the functions together.

## DQSDLLC

Master DLL for Generating Required Delay



Architectures Supported:

▶ LFMXO4

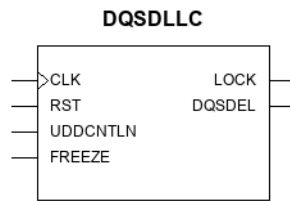


**Table 234: Input Ports**

| Name     | Range | Description                                          |
|----------|-------|------------------------------------------------------|
| CLK      |       | Clock from the CIB.                                  |
| RST      |       | DLL reset control.                                   |
| UDDCNTLN |       | Hold/update control to delay code before adjustment. |
| FREEZE   |       | Signal used to freeze or release DLL input CLK.      |

**Table 235: Output Ports**

| Name   | Range | Description                                                                                              |
|--------|-------|----------------------------------------------------------------------------------------------------------|
| LOCK   |       | DLL delay control code to slave delay cells. Connected to DQSDEL of the <a href="#">DQSBUFH</a> element. |
| DQSDEL |       | DLL lock signal.                                                                                         |

**Table 236: Parameters**

| Name             | Values                                                  | Description                                                                  |
|------------------|---------------------------------------------------------|------------------------------------------------------------------------------|
| DEL_ADJ          | "PLUS" (default),<br>MINUS                              | DEL_ADJUST and ADJUST are set to a value based on device performance.        |
| DEL_VAL          | integers 0-127 (PLUS),<br>1-128 (MINUS)<br>(default: 0) | Static Delay Value                                                           |
| LOCK_SENSITIVITY | "LOW" (default),<br>"HIGH"                              | Selects greater or less sensitivity to the jitter.                           |
| FIN              | value range supported by<br>DLL (default: "100.0")      | Specifies the input frequency (MHz) designation for a PLL/<br>DLL primitive. |
| FORCE_MAX_DELAY  | :"NO" (default),<br>"YES"                               | DLL control code forcing.                                                    |
| GSR              | "ENABLED" (default),<br>"DISABLED"                      | Enable or disable GSR feature                                                |

**Description**

DQSDLLC is the master DLL to generate required delay.

**EBR\_B**

4 Kb pseudo-dual port block ram with configurable write/read width and optional bitstream initialization.

Architectures supported:

▶ iCE40 UltraPlus

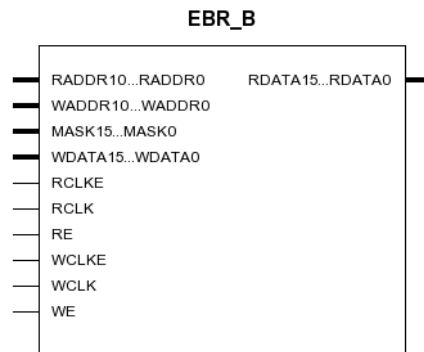


**Table 237: Input Ports**

| Name               | Description        |
|--------------------|--------------------|
| RADDR10...RADDR0   | Read address       |
| WADDR10...WADDR0   | Write address      |
| MASK_N15...MASK_N0 | Write mask         |
| WDATA15...WDATA0   | Write data         |
| RCLKE              | Read clock enable  |
| RCLK               | Read clock         |
| RE                 | Read enable        |
| WCLKE              | Write clock enable |
| WCLK               | Write clock        |
| WE                 | Write enable       |

**Table 238: Output Ports**

| Name             | Description |
|------------------|-------------|
| RDATA15...RDATA0 | Read data   |

### Table 239: Parameters

| Name   | Values                                                                         | Description            |
|--------|--------------------------------------------------------------------------------|------------------------|
| INIT_0 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 0 |
| INIT_1 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 1 |
| INIT_2 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 2 |
| INIT_3 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 3 |
| INIT_4 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 4 |
| INIT_5 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 5 |
| INIT_6 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 6 |
| INIT_7 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 7 |
| INIT_8 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 8 |
| INIT_9 | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization value 9 |
| INIT_A | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization data A  |
| INIT_B | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization data B  |
| INIT_C | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization data C  |
| INIT_D | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization data D  |

| Name         | Values                                                                         | Description               |
|--------------|--------------------------------------------------------------------------------|---------------------------|
| INIT_E       | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization data E     |
| INIT_F       | "0x0000000000000000000000000000000000000000000000000000000000000000" (default) | Initialization data F     |
| DATA_WIDTH_W | "2" (default), "4", "8", "16"                                                  | Write data width in bits. |
| DATA_WIDTH_R | "2" (default), "4", "8", "16"                                                  | Read data width in bits.  |

# ECLKBRIDGES

## ECLK Bridge Block Clock Select

▶ LFMX04



### Table 241: Output Ports

### Description

ECLK high speed bridge eases the design of high speed video or DDRX4 mode applications. It takes the high speed edge clocks sources from both sides (top and bottom). The bridge enhances the communication of ECLKs across the die. The bridge is supported for devices equal to or above 1200 LUTs.

## **ECLKBRIDGECS Usage with VHDL**

### **Library Instantiation**

```
library lattice;
use lattice.components.all;
```

### **Component Declaration**

```
component ECLKBRIDGECS
    port (CLK0    : in std_logic;
          CLK1    : in std_logic;
          SEL     : in std_logic;
          ECSOUT  : out std_logic);
end component;
```

### **ECLKBRIDGECS Instantiation**

```
I1: ECLKBRIDGECS
    port map (CLK0    => CLK0;
              CLK1    => CLK1;
              SEL     => SEL;
              ECSOUT  => ECSOUT);
end component;
```

## **ECLKBRIDGECS Usage with Verilog HDL**

### **Component Declaration**

```
module ECLKBRIDGECS (CLK0,
                     CLK1,
                     SEL,
                     ECSOUT);

    input CLK0;
    input CLK1;
    input SEL;
    output ECSOUT;
endmodule
```

### **ECLKBRIDGECS Instantiation**

```
ECLKBRIDGECS I1 (.CLK0 (CLK0),
                  .CLK1 (CLK1),
                  .SEL   (SEL),
```

```
.ECSOUT (ECSOUT));
```

For more information and usage, refer to the related technical notes on the Lattice web site.

## ECLKDIV

Wrapper for Clock Divider for Edge Clock

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP



**Table 242: Input Ports**

| Name   | Description                   |
|--------|-------------------------------|
| ECLKIN | Clock signal after the DLLDEL |
| DIVRST | ECLKDIV reset                 |
| SLIP   | Slip output                   |

**Table 243: Output Ports**

| Name   | Description         |
|--------|---------------------|
| DIVOUT | Output divided ECLK |

**Table 244: Parameters**


| Name     | Values                                            | Description      |
|----------|---------------------------------------------------|------------------|
| ECLK_DIV | "DISABLE" (default)<br>"2"<br>"3P5"<br>"4"<br>"5" | Clock Divider    |
| GSR      | "ENABLED" (default)<br>"DISABLED"                 | Global set/reset |

## ECLKDIVA

Wrapper for Clock Divider for Edge Clock

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

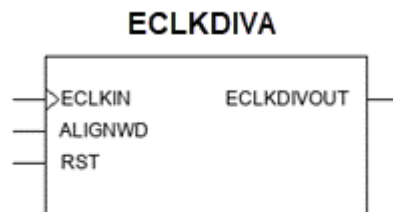**Table 245: Input Ports**

| Name    | Description                            |
|---------|----------------------------------------|
| ECLKIN  | Clock signal after the DLLDEL          |
| ALIGNWD | Align word function inside the ECLKDIV |
| RST     | ECLKDIV reset                          |

**Table 246: Output Ports**

| Name       | Description         |
|------------|---------------------|
| ECLKDIVOUT | Output divided ECLK |

**Table 247: Parameters**

| Name       | Values                               | Description           |
|------------|--------------------------------------|-----------------------|
| CLK_DIV    | "2" (default)<br>"3P5"<br>"4"<br>"5" | Clock Divider         |
| ALIGN      | "ENABLED" (default)<br>"DISABLED"    | Align                 |
| RATE       | "HALF" (default)<br>"FULL"           | DDR Rate              |
| PHYBY4_SEL | "ENABLED" (default)<br>"DISABLED"    | PHYCLKDIV by 4 enable |
| GSR        | "ENABLED" (default)<br>"DISABLED"    | Global set/reset      |


## ECLKSYNC

Wrapper for Clock Synchronizer for Edge Clock

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

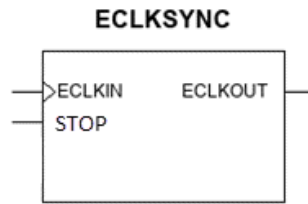

**Table 248: Input Ports**

| Name   | Description                           |
|--------|---------------------------------------|
| ECLKIN | Clock signal after the DLLDEL         |
| STOP   | Control signal to stop the edge clock |

**Table 249: Output Ports**

| Name    | Description                    |
|---------|--------------------------------|
| ECLKOUT | Output ECLK after the ECLKSYNC |

**Table 250: Parameters**

| Name    | Values                          | Description         |
|---------|---------------------------------|---------------------|
| STOP_EN | "DISABLE" (default)<br>"ENABLE" | Stop enable control |

**Note:**


SYNC = 1 to SYNC = 0, it takes 4 clock cycles before ECLKIN appears in ECLKOUT.  
 SYNC = 0 to SYNC = 1, after 4 clock cycles, ECLKOUT goes to 0.

**ECLKSYNCA**

Wrapper for Clock Synchronizer for Edge Clock

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

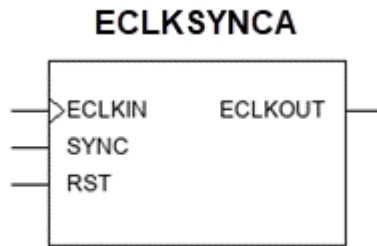**Table 251: Input Ports**

| Name   | Description                   |
|--------|-------------------------------|
| ECLKIN | Clock signal after the DLLDEL |
| SYNC   | ECLK sync function            |
| RST    | ECLKSYNC reset function       |

**Table 252: Output Ports**

| Name    | Description                    |
|---------|--------------------------------|
| ECLKOUT | Output ECLK after the ECLKSYNC |

**Note:****ECLKSYNCB**

ECLK Stop Block

Architectures Supported:

▶ LFMXO4

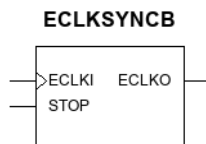


**Table 253: Input Ports**

| Name  | Range | Description                                                                        |
|-------|-------|------------------------------------------------------------------------------------|
| ECLKI | 1     | Edge clock input to the stop clock                                                 |
| STOP  | 1     | Control signal to stop the edge clock to synchronize the signals derived from ECLK |

**Table 254: Output Ports**

| Name  | Range | Description                           |
|-------|-------|---------------------------------------|
| ECLKO | 1     | Edge clock output from the stop clock |

**Description**

ECLKSYNCB is the optional ECLK synchronization for DDR\_MEM (DDR memory mode), DDR2\_MEM (DDR2 memory mode), and DDR3\_MEM (DDR3 memory mode).

- ▶ E and EA: DDR\_MEM, DDR2\_MEM, and DDR3\_MEM (left/right/top)

**ECLKSYNCB Usage with VHDL****Library Instantiation**

```
library lattice;
use lattice.components.all;
```

**Component Declaration**

```
component ECLKSYNCB
  port (ECLKI : in std_logic;
        STOP  : in std_logic;
        ECLKO : out std_logic);
end component;
```

**ECLKSYNCB Instantiation**

```
I1: ECLKSYNCB
  port map (ECLKI => ECLKI,
            STOP  => STOP,
            ECLKO => ECLKO);
end component;
```

**ECLKSYNCB Usage with Verilog HDL****Component Declaration**

```
module ECLKSYNCB (ECLKI, STOP, ECLKO);
```

```
input ECLKI;  
input STOP;  
output ECLKO;  
endmodule
```

### **ECLKSYNCB Instantiation**

```
ECLKSYNCB I1 (.ECLKI (ECLKI);  
              .STOP (STOP);  
              .ECLKO (ECLKO));
```


For more information and usage, refer to the related technical notes on the Lattice web site.

## **EFB**

Embedded Function Block

Architectures Supported:

▶ LFMXO4

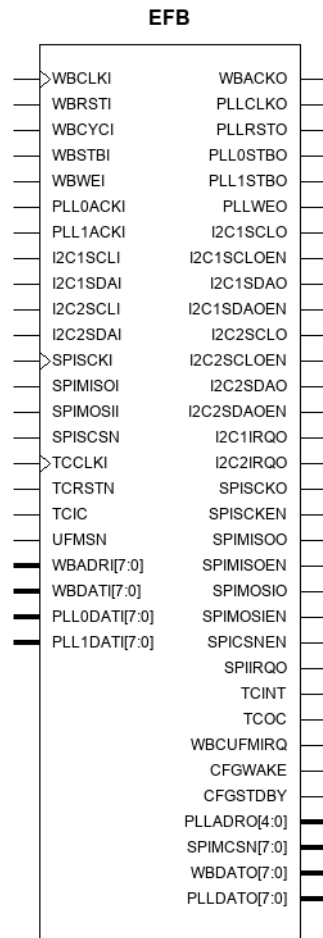**Table 255: Input Ports**

| Name    | Range | Description                 |
|---------|-------|-----------------------------|
| WBCLKI  | 1     | Wishbone Clock Input        |
| WBRSTI  | 1     | Wishbone Reset Input        |
| WBCYCI  | 1     | Wishbone Cycle Input        |
| WBSTBI  | 1     | Wishbone Strobe Input       |
| WBWEI   | 1     | Wishbone Write Enable Input |
| WBADRI7 | 1     | Wishbone Address Input      |
| WBADRI6 | 1     | Wishbone Address Input      |
| WBADRI5 | 1     | Wishbone Address Input      |
| WBADRI4 | 1     | Wishbone Address Input      |

**Table 255: Input Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                        |
|-------------|--------------|-------------------------------------------|
| WBADRI3     | 1            | Wishbone Address Input                    |
| WBADRI2     | 1            | Wishbone Address Input                    |
| WBADRI1     | 1            | Wishbone Address Input                    |
| WBADRI0     | 1            | Wishbone Address Input                    |
| WBDATI7     | 1            | Wishbone Data Input                       |
| WBDATI6     | 1            | Wishbone Data Input                       |
| WBDATI5     | 1            | Wishbone Data Input                       |
| WBDATI4     | 1            | Wishbone Data Input                       |
| WBDATI3     | 1            | Wishbone Data Input                       |
| WBDATI2     | 1            | Wishbone Data Input                       |
| WBDATI1     | 1            | Wishbone Data Input                       |
| WBDATI0     | 1            | Wishbone Data Input                       |
| PLL0DATI7   | 1            | PLL0 Data Input                           |
| PLL0DATI6   | 1            | PLL0 Data Input                           |
| PLL0DATI5   | 1            | PLL0 Data Input                           |
| PLL0DATI4   | 1            | PLL0 Data Input                           |
| PLL0DATI3   | 1            | PLL0 Data Input                           |
| PLL0DATI2   | 1            | PLL0 Data Input                           |
| PLL0DATI1   | 1            | PLL0 Data Input                           |
| PLL0DATI0   | 1            | PLL0 Data Input                           |
| PLL0ACKI    | 1            | PLL0 Acknowledge Input                    |
| PLL1DATI7   | 1            | PLL1 Data Input                           |
| PLL1DATI6   | 1            | PLL1 Data Input                           |
| PLL1DATI5   | 1            | PLL1 Data Input                           |
| PLL1DATI4   | 1            | PLL1 Data Input                           |
| PLL1DATI3   | 1            | PLL1 Data Input                           |
| PLL1DATI2   | 1            | PLL1 Data Input                           |
| PLL1DATI1   | 1            | PLL1 Data Input                           |
| PLL1DATI0   | 1            | PLL1 Data Input                           |
| PLL1ACKI    | 1            | PLL1 Acknowledge Input                    |
| I2C1SCLI    | 1            | I <sup>2</sup> C Bus 1 Serial Clock Input |
| I2C1SDAI    | 1            | I <sup>2</sup> C Bus 1 Serial Data Input  |

**Table 255: Input Ports**

| Name     | Range | Description                               |
|----------|-------|-------------------------------------------|
| I2C2SCLI | 1     | I <sup>2</sup> C Bus 2 Serial Clock Input |
| I2C2SDAI | 1     | I <sup>2</sup> C Bus 2 Serial Data Input  |
| SPISCKI  | 1     | SPI Serial Clock Input                    |
| SPIMISOI | 1     | SPI Master-In Slave-Out Input             |
| SPIMOSII | 1     | SPI Master-Out Slave-In Input             |
| SPISCSN  | 1     | SPI Chip Select                           |
| TCCLKI   | 1     | Timer/Counter Clock Input                 |
| TCRSTN   | 1     | Timer/Counter Reset                       |
| TCIC     | 1     | Timer/Counter Input Capture signal        |
| UFMSN    | 1     | Slave SPI configuration port              |

**Table 256: Output Ports**

| Name     | Range | Description                 |
|----------|-------|-----------------------------|
| WBDATO7  | 1     | Wishbone Data Output        |
| WBDATO6  | 1     | Wishbone Data Output        |
| WBDATO5  | 1     | Wishbone Data Output        |
| WBDATO4  | 1     | Wishbone Data Output        |
| WBDATO3  | 1     | Wishbone Data Output        |
| WBDATO2  | 1     | Wishbone Data Output        |
| WBDATO1  | 1     | Wishbone Data Output        |
| WBDATO0  | 1     | Wishbone Data Output        |
| WBACKO   | 1     | Wishbone Acknowledge Output |
| PLLCLKO  | 1     | PLL Clock Output            |
| PLLRSTO  | 1     | PLL Reset Output            |
| PLL0STBO | 1     | PLL0 Strobe Output          |
| PLL1STBO | 1     | PLL1 Strobe Output          |
| PLLWEO   | 1     | PLL Write Enable Output     |
| PLLADRO4 | 1     | PLL Address Output          |
| PLLADRO3 | 1     | PLL Address Output          |
| PLLADRO2 | 1     | PLL Address Output          |
| PLLADRO1 | 1     | PLL Address Output          |
| PLLADRO0 | 1     | PLL Address Output          |

**Table 256: Output Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                            |
|-------------|--------------|-----------------------------------------------|
| PLLDATO7    | 1            | PLL Data Output                               |
| PLLDATO6    | 1            | PLL Data Output                               |
| PLLDATO5    | 1            | PLL Data Output                               |
| PLLDATO4    | 1            | PLL Data Output                               |
| PLLDATO3    | 1            | PLL Data Output                               |
| PLLDATO2    | 1            | PLL Data Output                               |
| PLLDATO1    | 1            | PLL Data Output                               |
| PLLDATO0    | 1            | PLL Data Output                               |
| I2C1SCLO    | 1            | I <sup>2</sup> C Serial Clock Output          |
| I2C1SCLOEN  | 1            | Output Enable for I <sup>2</sup> C clock line |
| I2C1SDAO    | 1            | I <sup>2</sup> C Serial Data Output           |
| I2C1SDAOEN  | 1            | Output Enable for I <sup>2</sup> C data line  |
| I2C2SCLO    | 1            | I <sup>2</sup> C Serial Clock Output          |
| I2C2SCLOEN  | 1            | Output Enable for I <sup>2</sup> C clock line |
| I2C2SDAO    | 1            | I <sup>2</sup> C Serial Data Output           |
| I2C2SDAOEN  | 1            | Output Enable for I <sup>2</sup> C data line  |
| I2C1IRQO    | 1            | Interrupt Request Output                      |
| I2C2IRQO    | 1            | Interrupt Request Output                      |
| SPISCKO     | 1            | SPI Serial Clock Output                       |
| SPISCKEN    | 1            | Output Enable for SPI clock                   |
| SPIMISOO    | 1            | SPI Master-In Slave-Out Output                |
| SPIMISOEN   | 1            | Output Enable for MISO line                   |
| SPIMOSIO    | 1            | SPI Master-Out Slave-In Output                |
| SPIMOSIEN   | 1            | Output Enable for MOSI line                   |
| SPIMCSN0    | 1            | SPI Chip Select Output                        |
| SPIMCSN1    | 1            | SPI Chip Select Output                        |
| SPIMCSN2    | 1            | SPI Chip Select Output                        |
| SPIMCSN3    | 1            | SPI Chip Select Output                        |
| SPIMCSN4    | 1            | SPI Chip Select Output                        |
| SPIMCSN5    | 1            | SPI Chip Select Output                        |
| SPIMCSN6    | 1            | SPI Chip Select Output                        |
| SPIMCSN7    | 1            | SPI Chip Select Output                        |



**Table 256: Output Ports**

| Name      | Range | Description                        |
|-----------|-------|------------------------------------|
| SPICSNEN  | 1     | Output Enable for chip select line |
| SPIIRQO   | 1     | SPI Interrupt Request Output       |
| TCINT     | 1     | Timer Interrupt Output             |
| TCOC      | 1     | Timer Output Compare signal        |
| WBCUFMIRQ | 1     | Wishbone Custom Frame Interrupt    |
| CFGWAKE   | 1     | Configuration Wake signal          |
| CFGSTDBY  | 1     | Configuration Standby signal       |

**Table 257: Parameters**

| Name                 | Value                 | Description                                                                       |
|----------------------|-----------------------|-----------------------------------------------------------------------------------|
| EFB_I2C1             | "DISABLED" (default)  | Enables I2C Primary User Port                                                     |
| EFB_I2C2             | "DISABLED" (default)  | Enables I2C Secondary User Port                                                   |
| EFB_SPI              | "DISABLED" (default)  | Enables the SPI Port                                                              |
| EFB_TC               | "DISABLED" (default)  | Enables Timer/Counter port                                                        |
| EFB_TC_PORTMODE      | "NO_WB" (default)     | Determined by T/C Static and Dynamic radio buttons                                |
| EFB_UFM              | "DISABLED" (default)  | Indicates that the user wants to use one of UFM0, UFM1, UFM2, UFM3, CFG0, or CFG1 |
| EFB_WB_CLK_FREQ      | "50.0" (default)      | Used by SPI and I2C to derive frequency                                           |
| DEV_DENSITY          | "015" (default)       | Specifies the device density                                                      |
| UFM_INIT_PAGES       | "0" (default)         | Specifies the number of pages with initialization data                            |
| UFM_INIT_START_PAGE  | "0" (default)         | Software calculates and displays the starting page of the init data               |
| UFM_INIT_ALL_ZEROS   | "ENABLED" (default)   | Specifies that UFM is initialized with all 0s                                     |
| UFM_INIT_FILE_NAME   | "NONE" (default)      | Uploads the UFM Initialization data file, where x holds value between 0 to 1      |
| UFM_INIT_FILE_FORMAT | "HEX" (default)       | Specifies the selection of file format, either Binary or Hexadecimal              |
| I2C1_ADDRESSING      | "7BIT" (default)      | Specifies the addressing scheme for i2c module                                    |
| I2C2_ADDRESSING      | "7BIT" (default)      | Specifies the addressing scheme for i2c module                                    |
| I2C1_SLAVE_ADDR      | "0b1000001" (default) | Specifies a default slave address during i2c hard IP generation                   |
| I2C2_SLAVE_ADDR      | "0b1000010" (default) | Specifies a default slave address during i2c hard IP generation                   |

**Table 257: Parameters (Continued)**

| Name                | Value                | Description                                                                                                                          |
|---------------------|----------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| I2C1_BUS_PERF       | "100kHz" (default)   | Master only. No software DRC for Master/Slave mode                                                                                   |
| I2C2_BUS_PERF       | "100kHz" (default)   | Master only. No software DRC for Master/Slave mode                                                                                   |
| I2C1_CLK_DIVIDER    | "1" (default)        | Read-Only display of I2C1_CLK_DIVIDER value                                                                                          |
| I2C2_CLK_DIVIDER    | "1" (default)        | Read-Only display of I2C2_CLK_DIVIDER value                                                                                          |
| I2C1_GEN_CALL       | "DISABLED" (default) | Enables the generic call response in Slave                                                                                           |
| I2C2_GEN_CALL       | "DISABLED" (default) | Enables the generic call response in Slave                                                                                           |
| I2C1_WAKEUP         | "DISABLED" (default) | Enables/disables the i2c core to send a wake up signal to the on chip power manager                                                  |
| I2C2_WAKEUP         | "DISABLED" (default) | Enables/disables the i2c core to send a wake up signal to the on chip power manager                                                  |
| SPI_MODE            | "SLAVE" (default)    | Allows you to select between Slave or Both mode for the initial state of the SPI block                                               |
| SPI_CLK_DIVIDER     | "1" (default)        | Allows you to specify a desired master clock frequency                                                                               |
| SPI_LSB_FIRST       | "DISABLED" (default) | Allows for programmable data order                                                                                                   |
| SPI_CLK_INV         | "DISABLED" (default) | Allows to program the clock polarity used to sample and output data withing the SPI core                                             |
| SPI_PHASE_ADJ       | "DISABLED" (default) | Allows you to specify a phase change to match the application                                                                        |
| SPI_SLAVE_HANDSHAKE | "DISABLED" (default) | Enables the core to insert certain values into the data stream to inform the external master when data can be sent                   |
| SPI_INTR_TXRDY      | "DISABLED" (default) | The core has configurable reset generation for data buffer conditions                                                                |
| SPI_INTR_RXRDY      | "DISABLED" (default) | The core has configurable reset generation for data buffer conditions                                                                |
| SPI_INTR_TXOVR      | "DISABLED" (default) | The core has configurable reset generation for data buffer conditions                                                                |
| SPI_INTR_RXOVR      | "DISABLED" (default) | The core has configurable reset generation for data buffer conditions                                                                |
| SPI_WAKEUP          | "DISABLED" (default) | Allows you to enable this feature where the core can optionally provide a wakeup signal to the device to resume from low-power modes |
| TC_MODE             | "CTCM" (default)     | Timer/Counter Mode Setting                                                                                                           |
| TC_SCLK_SEL         | "PCLOCK" (default)   | Timer/Counter Input Clock Setting                                                                                                    |
| TC_CCLK_SEL         | "1" (default)        | Timer/Counter Input Clock Divider Setting                                                                                            |
| GSR                 | "ENABLED" (default)  | Enables or disables the Global Set/Reset                                                                                             |

**Table 257: Parameters (Continued)**

| Name        | Value                | Description                                 |
|-------------|----------------------|---------------------------------------------|
| TC_TOP_SET  | "65535" (default)    | Specifies the Timer/Counter Top Set value   |
| TC_OCR_SET  | "32767" (default)    | Specified the Timer/Counter OCR Set value   |
| TC_OC_MODE  | "TOGGLE" (default)   | Mode Selection on TC_OC waveform generation |
| TC_RESETN   | "ENABLED" (default)  | Timer/Counter reset enable                  |
| TC_TOP_SEL  | "ON" (default)       | Sets Top Counter value                      |
| TC_OV_INT   | "OFF" (default)      | Timer/Counter overflow interrupt request    |
| TC_OCR_INT  | "OFF" (default)      | Timer/Counter interrupt request             |
| TC_ICR_INT  | "OFF" (default)      | The input capture interrupt                 |
| TC_OVERFLOW | "ENABLED" (default)  | Enables Timer/Counter for an overflow tag   |
| TC_ICAPTURE | "DISABLED" (default) | Enables Timer/Counter for input capture     |

**Description**

The EFB primitive has seven explicit interfaces: WISHBONE, SPI, I2C (Primary), I2C (Secondary), Timer/Counter, and two PLLs.


For detailed information regarding the GUI, interface, and usage regarding each EFB interface, refer to the related technical note on the Lattice web site.

**EHXPLLJ**

GPLL

Architectures Supported:

- ▶ LFMX04

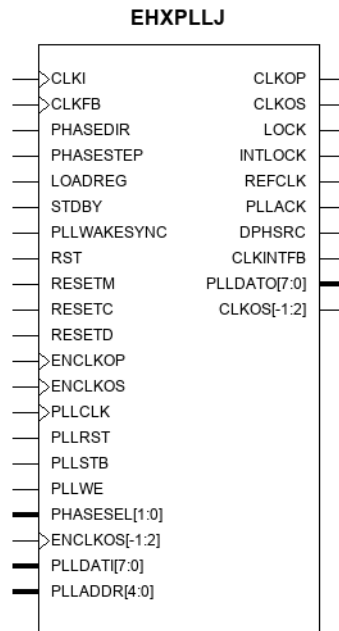**Table 258: Input Ports**

| Name        | Range | Description                                        |
|-------------|-------|----------------------------------------------------|
| CLKI        | 1     | Primary clock input to the PLL                     |
| CLKFB       | 1     | Clock feedback input                               |
| PHASESEL    | 1:0   | Phase selection control                            |
| PHASEDIR    | 1     | Phase direction control                            |
| PHASESTEP   | 1     | Phase step signal                                  |
| LOADREG     | 1     | Loads configuration registers into the PLL         |
| STDBY       | 1     | Standby control                                    |
| PLLWAKESYNC | 1     | Synchronization signal for waking PLL from standby |
| RST         | 1     | Reset                                              |
| RESETM      | 1     | Reset for the PLL main logic                       |
| RESETC      | 1     | Reset for the PLL clock                            |
| RESETD      | 1     | Reset for the PLL divider                          |
| ENCLKOP     | 1     | Enable output for primary PLL clock                |
| ENCLKOS     | -1:2  | Enable output for secondary PLL clock              |
| PLLCLK      | 1     | PLL clock signal                                   |
| PLLRST      | 1     | PLL reset signal                                   |

**Table 258: Input Ports**

| Name    | Range | Description             |
|---------|-------|-------------------------|
| PLLSTB  | 1     | PLL strobe signal       |
| PLLWE   | 1     | PLL write enable signal |
| PLLDATI | 7:0   | PLL data input bus      |
| PLLADDR | 4:0   | PLL address input bus   |

**Table 259: Output Ports**

| Name     | Range | Description                                        |
|----------|-------|----------------------------------------------------|
| CLKOP    | 1     | Primary PLL clock output                           |
| CLKOS    | -1:2  | Secondary PLL clock output                         |
| LOCK     | 1     | Indicates PLL has achieved lock on the input clock |
| INTLOCK  | 1     | Internal lock signal                               |
| REFCLK   | 1     | Reference clock input                              |
| CLKINTFB | 1     | Internal feedback clock                            |
| DPHSRC   | 1     | Dynamic phase source selection                     |
| PLLDATO  | 7:0   | PLL data output bus                                |
| PLLACK   | 1     | PLL acknowledge signal                             |

**Table 260: Parameters**

| Name           | Values                         | Description            |
|----------------|--------------------------------|------------------------|
| FREQ_PIN_CLKI  | "10" to "400" (default 100)    | CLKI frequency (MHz)   |
| FREQ_PIN_CLKOP | "3.125" to "400" (default 100) | CLKOP frequency (MHz)  |
| CLKI_DIV       | "1" (default) to "128"         | CLKI divider setting   |
| CLKFB_DIV      | "1" (default) to "128"         | CLKFB divider setting  |
| CLKOP_DIV      | "1" to "128" (default "8")     | CLKOP divider setting  |
| CLKOS_DIV      | "1" to "128" (default "8")     | CLKOS divider setting  |
| CLKOS2_DIV     | "1" to "128" (default "8")     | CLKOS2 divider setting |

**Table 260: Parameters**

| Name                | Values                                | Description                |
|---------------------|---------------------------------------|----------------------------|
| CLKOS3_DIV          | "1" to "128" (default "8")            | CLKOS3 divider setting     |
| CLOCK_ENABLE_POR TS | "ENABLED",<br>"DISABLED"<br>(default) | Clock enable ports         |
| CLKOP_ENABLE        | "ENABLED"<br>(default),<br>"DISABLED" | CLKOP enable               |
| CLKOS_ENABLE        | "ENABLED"<br>(default),<br>"DISABLED" | CLKOS enable               |
| CLKOS2_ENABLE       | "ENABLED"<br>(default),<br>"DISABLED" | CLKOS2 enable              |
| CLKOS3_ENABLE       | "ENABLED"<br>(default),<br>"DISABLED" | CLKOS3 enable              |
| VCO_BYPASS_A0       | "ENABLE",<br>"DISABLED"<br>(default)  | VCO bypass A0              |
| VCO_BYPASS_B0       | "ENABLE",<br>"DISABLED"<br>(default)  | VCO bypass B0              |
| VCO_BYPASS_C0       | "ENABLE",<br>"DISABLED"<br>(default)  | VCO bypass C0              |
| VCO_BYPASS_D0       | "ENABLE",<br>"DISABLED"<br>(default)  | VCO bypass D0              |
| CLKOP_CPHASE        | "0" (default) to "127"                | CLKOP coarse phase adjust  |
| CLKOS_CPHASE        | "0" (default) to "127"                | CLKOS coarse phase adjust  |
| CLKOS2_CPHASE       | "0" (default) to "127"                | CLKOS2 coarse phase adjust |
| CLKOS3_CPHASE       | "0" (default) to "127"                | CLKOS3 coarse phase adjust |
| CLKOP_FPHASE        | "0" (default) to "7"                  | CLKOP fine phase adjust    |
| CLKOS_FPHASE        | "0" (default) to "7"                  | CLKOS fine phase adjust    |
| CLKOS2_FPHASE       | "0" (default) to "7"                  | CLKOS2 fine phase adjust   |
| CLKOS3_FPHASE       | "0" (default) to "7"                  | CLKOS3 fine phase adjust   |

**Table 260: Parameters**

| Name             | Values                                                                                                                              | Description                                                  |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| FEEDBK_PATH      | "CLKOP" (default),<br>"CLKOS",<br>"CLKOS2",<br>"CLKOS3",<br>"INT_DIVA",<br>"INT_DIVB",<br>"INT_DIVC",<br>"INT_DIVD",<br>"USERCLOCK" | Feedback mode                                                |
| FRACN_ENABLE     | "ENABLE",<br>"DISABLED" (default)                                                                                                   | Fractional-N divider enable                                  |
| FRACN_DIV        | "0" to "65535" (default 0)                                                                                                          | Fractional-N divider                                         |
| CLKOP_TRIM_DELAY | "0" (default), "1", "2", "4"                                                                                                        | CLKOP duty trim polarity delay                               |
| CLKOS_TRIM_POL   | "RISING" (default),<br>"FALLING"                                                                                                    | CLKOS duty trim polarity                                     |
| CLKOS_TRIM_DELAY | "0" (default), "1", "2", "4"                                                                                                        | CLKOS duty trim polarity delay                               |
| PLL_USE_WB       | "ENABLE",<br>"DISABLED" (default)                                                                                                   | Enables Wishbone interface for PLL configuration and control |
| PREDIVIDER_MUXA1 | "0" (default) to "3"                                                                                                                | Selects input source for pre-divider A                       |
| PREDIVIDER_MUXB1 | "0" (default) to "3"                                                                                                                | Selects input source for pre-divider B                       |
| PREDIVIDER_MUXC1 | "0" (default) to "3"                                                                                                                | Selects input source for pre-divider C                       |
| PREDIVIDER_MUXD1 | "0" (default) to "3"                                                                                                                | Selects input source for pre-divider D                       |
| OUTDIVIDER_MUXA2 | "DIVA" (default),<br>"REFCLK"                                                                                                       | Selects output source for divider A                          |
| OUTDIVIDER_MUXB2 | "DIVB" (default),<br>"REFCLK"                                                                                                       | Selects output source for divider B                          |
| OUTDIVIDER_MUXC2 | "DIVC" (default),<br>"REFCLK"                                                                                                       | Selects output source for divider C                          |
| OUTDIVIDER_MUXD2 | "DIVD" (default),<br>"REFCLK"                                                                                                       | Selects output source for divider D                          |
| PLL_LOCK_MODE    | "0" (default) to "7"                                                                                                                | Defines the lock detection mode for PLL                      |
| STDBY_ENABLE     | "ENABLED",<br>"DISABLED" (default)                                                                                                  | Enables standby mode for low-power operation                 |

**Table 260: Parameters**

| Name          | Values                                | Description                                     |
|---------------|---------------------------------------|-------------------------------------------------|
| DPHASE_SOURCE | "ENABLED",<br>"DISABLED"<br>(default) | Selects the source for dynamic phase adjustment |
| INTFB_WAKE    | "ENABLED",<br>"DISABLED"<br>(default) | Enables internal feedback wake-up mechanism     |
| PLL_RST_ENA   | "ENABLED",<br>"DISABLED"<br>(default) | Enables PLL reset functionality                 |
| MRST_ENA      | "ENABLED",<br>"DISABLED"<br>(default) | Enables main logic reset                        |
| DCRST_ENA     | "ENABLED",<br>"DISABLED"<br>(default) | Enables clock divider reset                     |
| DDRST_ENA     | "ENABLED",<br>"DISABLED"<br>(default) | Enables data path reset                         |

**Description**

A wrapper will be used around the primitive for configurations without the dynamic control or other ports. The EHXPLLJ primitive uses a single reference clock input.

For detailed information, refer to the related technical note on the Lattice web site.


**FA2**

Carry chain 2-bit full adder

Architectures supported:

- ▶ iCE40 UltraPlus

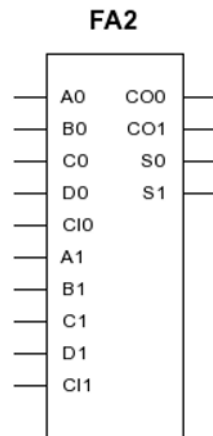

**Table 261: Input Ports**

| Name | Description         |
|------|---------------------|
| A0   | Non-operand A bit 0 |
| B0   | Operand B bit 0     |
| C0   | Operand C bit 0     |
| D0   | Operand D bit 0     |
| CI0  | Carry-in 0          |
| A1   | Non-operand A bit 1 |
| B1   | Operand B bit 1     |
| C1   | Operand C bit 1     |
| D1   | Operand D bit 1     |
| CI1  | Carry-in 1          |

**Table 262: Output Ports**

| Name | Description             |
|------|-------------------------|
| CO0  | Carry-out 0             |
| CO1  | Carry-out 1             |
| S0   | Output bit 0 of the sum |
| S1   | Output bit 1 of the sum |

**Table 263: Parameters**

| Name  | Values                      | Description        |
|-------|-----------------------------|--------------------|
| INIT0 | "0xc33c" ( <i>default</i> ) | Hexadecimal value. |
| INIT1 | "0xc33c" ( <i>default</i> ) | Hexadecimal value. |

**Table 264: Truth Table**

| Inputs |    |      |    |    |      | Outputs |     |    |    |     |     |
|--------|----|------|----|----|------|---------|-----|----|----|-----|-----|
| B1     | C1 | D1   | BO | CO | DO   | CI1     | CI0 | S1 | SO | CO1 | CO0 |
| 0      | 0  | =CI1 | 0  | 0  | =CI0 | =CO0    | 0   | 0  | 0  | 0   | 0   |
| 0      | 0  | =CI1 | 0  | 0  | =CI0 | =CO0    | 1   | 0  | 1  | 0   | 0   |
| 0      | 0  | =CI1 | 0  | 1  | =CI0 | =CO0    | 0   | 0  | 1  | 0   | 0   |
| 0      | 0  | =CI1 | 0  | 1  | =CI0 | =CO0    | 1   | 1  | 0  | 0   | 1   |
| 0      | 1  | =CI1 | 0  | 0  | =CI0 | =CO0    | 0   | 1  | 0  | 0   | 0   |
| 0      | 1  | =CI1 | 0  | 0  | =CI0 | =CO0    | 1   | 1  | 1  | 0   | 0   |
| 0      | 1  | =CI1 | 0  | 1  | =CI0 | =CO0    | 0   | 1  | 1  | 0   | 0   |
| 0      | 1  | =CI1 | 0  | 1  | =CI0 | =CO0    | 1   | 0  | 0  | 1   | 1   |
| 0      | 0  | =CI1 | 1  | 0  | =CI0 | =CO0    | 0   | 0  | 1  | 0   | 0   |
| 0      | 0  | =CI1 | 1  | 0  | =CI0 | =CO0    | 1   | 1  | 0  | 0   | 1   |
| 0      | 0  | =CI1 | 1  | 1  | =CI0 | =CO0    | 0   | 1  | 0  | 0   | 1   |
| 0      | 0  | =CI1 | 1  | 1  | =CI0 | =CO0    | 1   | 1  | 1  | 0   | 1   |
| 0      | 1  | =CI1 | 1  | 0  | =CI0 | =CO0    | 0   | 1  | 1  | 0   | 0   |
| 0      | 1  | =CI1 | 1  | 0  | =CI0 | =CO0    | 1   | 0  | 0  | 1   | 1   |
| 0      | 1  | =CI1 | 1  | 1  | =CI0 | =CO0    | 0   | 0  | 0  | 1   | 1   |
| 0      | 1  | =CI1 | 1  | 1  | =CI0 | =CO0    | 1   | 0  | 1  | 1   | 1   |
| 1      | 0  | =CI1 | 0  | 0  | =CI0 | =CO0    | 0   | 1  | 0  | 0   |     |
| 1      | 0  | =CI1 | 0  | 0  | =CI0 | =CO0    | 1   | 1  | 1  | 0   | 0   |
| 1      | 0  | =CI1 | 0  | 1  | =CI0 | =CO0    | 0   | 1  | 1  | 0   | 0   |
| 1      | 0  | =CI1 | 0  | 1  | =CI0 | =CO0    | 1   | 0  | 0  | 1   | 1   |
| 1      | 1  | =CI1 | 0  | 0  | =CI0 | =CO0    | 0   | 0  | 0  | 1   | 0   |
| 1      | 1  | =CI1 | 0  | 0  | =CI0 | =CO0    | 1   | 0  | 1  | 1   | 0   |
| 1      | 1  | =CI1 | 0  | 1  | =CI0 | =CO0    | 0   | 0  | 1  | 1   | 0   |
| 1      | 1  | =CI1 | 0  | 1  | =CI0 | =CO0    | 1   | 1  | 0  | 1   | 1   |
| 1      | 0  | =CI1 | 1  | 0  | =CI0 | =CO0    | 0   | 1  | 1  | 0   | 0   |
| 1      | 0  | =CI1 | 1  | 0  | =CI0 | =CO0    | 1   | 0  | 0  | 1   | 1   |
| 1      | 0  | =CI1 | 1  | 1  | =CI0 | =CO0    | 0   | 0  | 0  | 1   | 1   |
| 1      | 0  | =CI1 | 1  | 1  | =CI0 | =CO0    | 1   | 0  | 1  | 1   | 1   |
| 1      | 1  | =CI1 | 1  | 0  | =CI0 | =CO0    | 0   | 0  | 1  | 1   | 0   |
| 1      | 1  | =CI1 | 1  | 0  | =CI0 | =CO0    | 1   | 1  | 0  | 1   | 1   |

**Table 264: Truth Table (Continued)**

| Inputs |    |      |    |    |      | Outputs |     |    |    |     |     |
|--------|----|------|----|----|------|---------|-----|----|----|-----|-----|
| B1     | C1 | D1   | BO | CO | DO   | CI1     | CI0 | S1 | SO | CO1 | CO0 |
| 1      | 1  | =CI1 | 1  | 1  | =CI0 | =CO0    | 0   | 1  | 0  | 1   | 1   |
| 1      | 1  | =CI1 | 1  | 1  | =CI0 | =CO0    | 1   | 1  | 1  | 1   | 1   |

**Note:**

In the Truth Table, ports A0 and A1 are tied low or are unconnected.

## Rules and restrictions:

- ▶ Carry-out (CO0, CO1) can only go to D input of LUT above it or next (CI0, CI1).
- ▶ To drive VHI to the first carry-in, CI0, do not tie CI0 to 1 or VHI. Instead, leave it dangling. Bitgen will ensure that CI0 will correctly be VHI as expected.
- ▶ To drive VLO to the first carry-in, CI0 should be left dangling and half a FA2 must be used. This is done by grounding B0 and C0 and leaving D0 floating. This will ensure that CI1 will correctly be VLO as expected and the second half of FA2 can be used normally.
- ▶ If you want to bring out last carry-out (CO0, CO1) to fabric, simply connect the carry-out to whatever is your fabric logic. Map and Placer will work to insert a LUT and place it in the appropriate location automatically (thus ensuring the first rule is followed).

See Figure 2, Figure 3, and Figure 4, below, that take into account the above rules. The examples below do not make use of the A0 or A1 ports as they are not needed for 2-bit full-adder functionality.

**Figure 2: Burning Half an FA2 for Carry-Chain**

```

FA2 counter_12_add_4_1 (
    .B0(GND_net), .C0(GND_net),
    .B1(VCC_net), .C1(out_c_0),
    .D1(n192), .CI1(n192),
    .CO0(n192), .CO1(n78),
    .S1(n45)
);

FA2 counter_12_add_4_9 (
    .B0(GND_net), .C0(out_c_7),
    .D0(n84), .CI0(n84),
    .B1(GND_net), .C1(GND_net),
    .D1(n204), .CI1(n204),
    .CO0(n204), .S0(n38)
);

FA2 counter_12_add_4_7 (
    .B0(GND_net), .C0(out_c_5),
    .D0(n82), .CI0(n82),
    .B1(GND_net), .C1(out_c_6),
    .D1(n201), .CI1(n201),
    .CO0(n201), .CO1(n84),
    .S0(n40), .S1(n39)
);

FA2 counter_12_add_4_5 (
    .B0(GND_net), .C0(out_c_3),
    .D0(n80), .CI0(n80),
    .B1(GND_net), .C1(out_c_4),
    .D1(n198), .CI1(n198),
    .CO0(n198), .CO1(n82),
    .S0(n42), .S1(nn41)
);

FA2 counter_12_add_4_3 (
    .B0(GND_net), .C0(out_c_1),
    .D0(n78), .CI0(n78),
    .B1(GND_net), .C1(out_c_2),
    .D1(n195), .CI1(n195),
    .CO0(n195), .CO1(n80),
    .S0(n44), .S1(nn43)
);

```

**Figure 3: Using LUT to Bring Last Carry Out**

```

FA2 counter_12_add_4_7 (
    .B0(GND_net),
    .C0(out_c_5),
    .D0(n82),
    .CI0(n82),
    .B1(GND_net),
    .C1(out_c_6),
    .D1(n201),
    .CI1(n201),
    .CO0(n201),
    .CO1(LAST_CARRY),
    .S0(n40),
    .S1(n39)
);

LUT lutInst(
    .D(LAST_CARRY),
    .F(CARRYOUT_TO_FABRIC)
); //eqn : F=D

```

**Figure 4: Using FA2 to Bring Last Carry Out**

```

FA2 counter_12_add_4_9 (
    .B0(GND_net),
    .C0(out_c_7),
    .D0(n84),
    .CI0(n84),
    .B1(GND_net),
    .C1(GND_net),
    .S1(CARRYOUT_TO_FABRIC),
    .D1(lastCarryOut),
    .CI1(lastCarryOut),
    .CO0(lastCarryOut),
    .S0(n38)
);

```


## FD1P3BX

Positive-Edge-Triggered D Flip-Flop with Positive-Level Enable and Positive-Level Asynchronous Preset

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5

- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

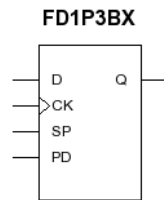**Table 265: Input Ports**

| Name | Description  |
|------|--------------|
| D    | Data in      |
| SP   | Clock enable |
| CK   | Clock        |
| PD   | Preset       |

**Table 266: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 267: Parameters**

| Name | Values                                     | Description             |
|------|--------------------------------------------|-------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset |

**Table 268: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 1      |

**Table 268: Truth Table (Continued)**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care


When GSR = 0, Q = 1 (D = SP = CK = PD = X)

## FD1P3BZ

Positive-Edge-Triggered D Flip-Flop with Positive-Level Enable and Positive-Level Asynchronous Preset

Architectures supported:

▶ iCE40 UltraPlus

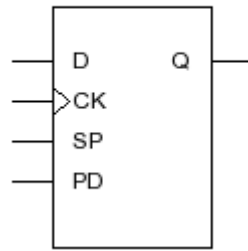**FD1P3BZ****Table 269: Input Ports**

| Name | Description               |
|------|---------------------------|
| D    | Data in                   |
| CK   | Clock                     |
| SP   | Clock enable, active high |
| PD   | Preset, active high       |

**Table 270: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 271: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 1      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

**FD1P3DX**


Positive-Edge-Triggered D Flip-Flop with Positive-Level Enable and Positive-Level Asynchronous Clear

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX



- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

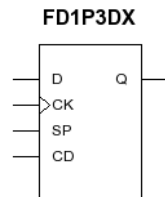**Table 272: Input Ports**

| Name | Description  |
|------|--------------|
| D    | Data in      |
| SP   | Clock enable |
| CK   | Clock        |
| CD   | Clear        |

**Table 273: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 274: Parameters**

| Name | Values                                 | Description              |
|------|----------------------------------------|--------------------------|
| GSR  | ENABLED ( <i>default</i> )<br>DISABLED | Enable global set/reset. |

**Table 275: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care


When GSR = 0, Q = 0 (D = SP = CK = CD = X)

## FD1P3DZ

Positive-Edge-Triggered D Flip-flop with Positive-Level Enable and Positive-Level Asynchronous Clear

Architectures supported:

▶ iCE40 UltraPlus

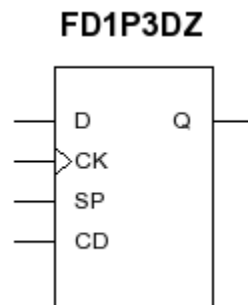**Table 276: Input Ports**

| Name | Description  |
|------|--------------|
| D    | Data in      |
| SP   | Clock enable |
| CK   | Clock        |
| CD   | Clear        |

**Table 277: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 278: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |


X = Don't care

**FD1P3AX**

Positive Edge Triggered D Flip-Flop with Positive Level Enable, GSR Used for Clear

Architectures Supported:

▶ LFMXO4

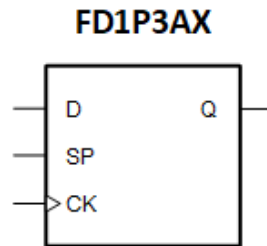**Table 279: Input Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| D    | 1     | Data Input            |
| SP   | 1     | Positive Clock Enable |
| CK   | 1     | Clock Input           |

**Table 280: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 281: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 282: Truth Table**

| Inputs |    |    | Outputs |
|--------|----|----|---------|
| D      | SP | CK | Q       |
| X      | 0  | X  | Q       |
| 0      | 1  | ↑  | 0       |
| 1      | 1  | ↑  | 1       |

X = Don't care

When GSR=0, Q=0 (D=SP=CK=X)

## FD1P3AY

Positive Edge Triggered D Flip-Flop with Positive Level Enable, GSR Used for Preset

Architectures Supported:

▶ LFMXO4

 


**Table 283: Input Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| D    | 1     | Data Input            |
| SP   | 1     | Positive Clock Enable |
| CK   | 1     | Clock Input           |

**Table 284: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 285: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 286: Truth Table**

| Inputs |    |    | Outputs |
|--------|----|----|---------|
| D      | SP | CK | Q       |
| X      | 0  | X  | Q       |
| 0      | 1  | ↑  | 0       |
| 1      | 1  | ↑  | 1       |

X = Don't care


When GSR=0, Q=1 (D=SP=CK=X)

## FD1P3IX

Positive-Edge-Triggered D Flip-Flop with Positive-Level Synchronous Clear and Positive-Level Enable

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

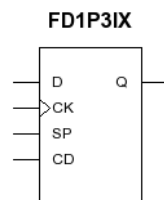**Table 287: Input Ports**

| Name | Description                                               |
|------|-----------------------------------------------------------|
| D    | Data in                                                   |
| SP   | Clock enable                                              |
| CK   | Clock                                                     |
| CD   | Clear, active high. Clock enable must be active to clear. |

**Table 288: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 289: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

**Table 290: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | ↑  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care


When GSR = 0, Q = 0 (D = SP = CK = CD = X)

## FD1P3IZ

Positive-Edge-Triggered D Flip-Flop with Positive-Level Synchronous Clear and Positive-Level Enable

Architectures supported:

▶ iCE40 UltraPlus

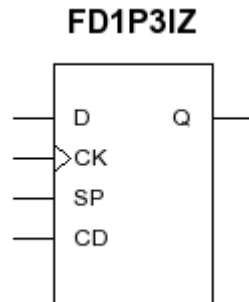**Table 291: Input Ports**

| Name | Description                                               |
|------|-----------------------------------------------------------|
| D    | Data in                                                   |
| SP   | Clock enable, active high                                 |
| CK   | Clock                                                     |
| CD   | Clear, active high. Clock enable must be active to clear. |

**Table 292: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 293: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | 1  | ↑  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

Clear overrides enable.


## FD1P3JX

Positive-Edge-Triggered D Flip-Flop with Positive-Level Synchronous Preset and Positive-Level Enable

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

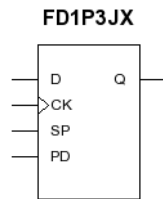

**Table 294: Input Ports**

| Name | Description  |
|------|--------------|
| D    | Data in      |
| SP   | Clock enable |
| CK   | Clock        |
| PD   | Preset       |

**Table 295: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 296: Parameters**

| Name | Values                            | Description             |
|------|-----------------------------------|-------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |

**Table 297: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | ↑  | 1  | 1      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

When GSR = 0, Q = 1 (D = SP = CK = PD = X)

Preset overrides enable.

## FD1P3JZ

Positive-Edge-triggered D Flip-flop with Positive-level Synchronous Preset and Positive-level Enable

Architectures supported:

▶ iCE40 UltraPlus

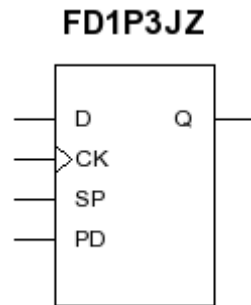


**Table 298: Input Ports**

| Name | Description                                                 |
|------|-------------------------------------------------------------|
| D    | Data in                                                     |
| SP   | Clock enable, active high                                   |
| CK   | Clock                                                       |
| PD   | Preset, active high. Clock enable must be active to preset. |

**Table 299: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 300: FD1P3JZ Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | 1  | ↑  | 1  | 1      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

Preset overrides enable.

## FD1P3XZ

Positive-Edge-triggered D Flip-flop with Synchronous or Asynchronous Set/reset

Architectures supported:

▶ iCE40 UltraPlus

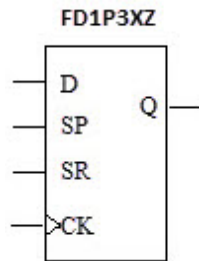


**Table 301: Input Ports**

| Name | Description               |
|------|---------------------------|
| D    | Data in                   |
| SP   | Clock enable, active high |
| CK   | Clock                     |
| SR   | Set/reset, active high    |

**Table 302: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 303: Parameters**


| Name   | Values                                      |
|--------|---------------------------------------------|
| REGSET | "RESET" ( <i>default</i> ),<br>"SET"        |
| SRMODE | "CE_OVER_LSR" ( <i>default</i> ),<br>"ASYN" |

## FD1S3AX

Positive Edge Triggered D Flip-Flop, GSR Used for Clear

Architectures Supported:

▶ LFMXO4

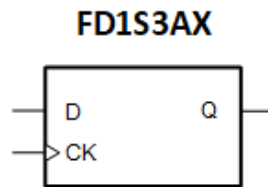**Table 304: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D    | 1     | Data Input  |
| CK   | 1     | Clock Input |

**Table 305: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 306: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 307: Truth Table**

| Inputs |    | Outputs |
|--------|----|---------|
| D      | CK | Q       |
| 0      | ↑  | 0       |
| 1      | ↑  | 1       |

X = Don't care

When GSR=0, Q=0 (D=CK=X)

## FD1S3AY

Positive Edge Triggered D Flip-Flop, GSR Used for Preset

Architectures Supported:

▶ LFMX04

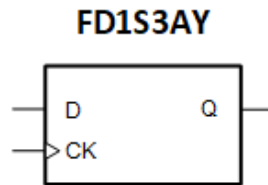


**Table 308: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D    | 1     | Data Input  |
| CK   | 1     | Clock Input |

**Table 309: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 310: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

I

**Table 311: Truth Table**

| Inputs |    | Outputs |
|--------|----|---------|
| D      | CK | Q       |
| 0      | ↑  | 0       |
| 1      | ↑  | 1       |

X = Don't care

When GSR=0, Q=1 (D=CK=X)

## FD1S3BX

Positive Edge Triggered D Flip-Flop with Positive Level Asynchronous Preset

Architectures Supported:

▶ LFMXO4

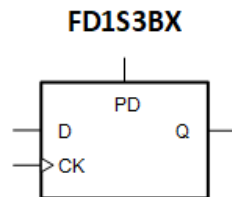


**Table 312: Input Ports**

| Name | Range | Description         |
|------|-------|---------------------|
| D    | 1     | Data Input          |
| CK   | 1     | Clock Input         |
| PD   | 1     | Asynchronous Preset |

**Table 313: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 314: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 315: Truth Table**

| Inputs |    |    | Outputs |
|--------|----|----|---------|
| D      | CK | PD | Q       |
| X      | X  | 1  | 1       |
| 0      | ↑  | 0  | 0       |
| 1      | ↑  | X  | 1       |

X = Don't care


When GSR=0, Q=1 (D=CK=PD=X)

## FD1S3DX

Positive Edge Triggered D Flip-Flop with Positive Level Asynchronous Clear

Architectures Supported:

▶ LFMXO4

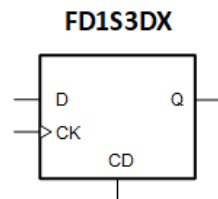**Table 316: Input Ports**

| Name | Range | Description        |
|------|-------|--------------------|
| D    | 1     | Data Input         |
| CK   | 1     | Clock Input        |
| CD   | 1     | Asynchronous Reset |

**Table 317: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 318: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 319: Truth Table**

| Inputs |    |    | Outputs |
|--------|----|----|---------|
| D      | CK | CD | Q       |
| X      | X  | 1  | 0       |
| 0      | ↑  | 0  | 0       |
| 1      | ↑  | 0  | 1       |

X = Don't care


When GSR=0, Q=0 (D=CK=CD=X)

## FD1S3IX

Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear

Architectures Supported:

▶ LFMXO4

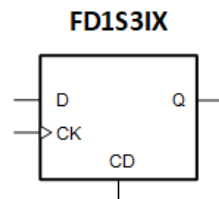**Table 320: Input Ports**

| Name | Range | Description        |
|------|-------|--------------------|
| D    | 1     | Data Input         |
| CK   | 1     | Clock Input        |
| CD   | 1     | Asynchronous Reset |



**Table 321: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 322: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 323: Truth Table**

| Inputs |    |    | Outputs |
|--------|----|----|---------|
| D      | CK | CD | Q       |
| X      | ↑  | 1  | 0       |
| 0      | ↑  | 0  | 0       |
| 1      | ↑  | 0  | 1       |

X = Don't care

When GSR=0, Q=0 (D=CK=CD=X)

## FD1S3JX

Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset

Architectures Supported:

▶ LFMXO4

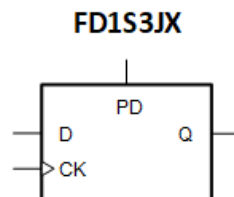


**Table 324: Input Ports**

| Name | Range | Description        |
|------|-------|--------------------|
| D    | 1     | Data Input         |
| CK   | 1     | Clock Input        |
| PD   | 1     | Asynchronous Reset |

**Table 325: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 326: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Table 327: Truth Table**

| Inputs |    |    | Outputs |
|--------|----|----|---------|
| D      | CK | PD | Q       |
| X      | ↑  | 1  | 1       |
| 0      | ↑  | 0  | 0       |
| 1      | ↑  | X  | 1       |

X = Don't care


When GSR=0, Q=1 (D=CK=PD=X)

## FIFO8KB

8K FIFO Block RAM

Architecture Supported:

▶ LFMXO4

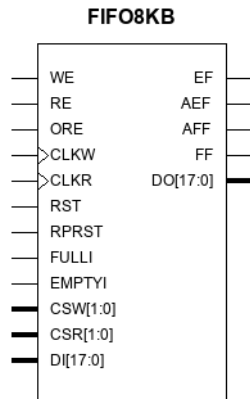**Table 328: Input Ports**

| Name   | Range | Description              |
|--------|-------|--------------------------|
| WE     | 1     | Write clock enable       |
| RE     | 1     | Read clock enable        |
| ORE    | 1     | Read output clock enable |
| CLKW   | 11    | Write clock              |
| CLKR   | 1     | Read clock               |
| RST    | 1     | Reset write pointers     |
| RPRST  | 1     | Reset read pointers      |
| FULLI  | 1     | Chip select write        |
| EMPTYI | 1     | Chip select read         |
| CSW    | 1:0   | Chip select write        |
| CSR    | 1:0   | Chip select read         |
| DI     | 17:0  | Write data               |

**Table 329: Output Ports**

| Name | Range | Description       |
|------|-------|-------------------|
| EF   | 1     | Empty flag        |
| AEF  | 1     | Almost empty flag |
| AFF  | 1     | Almost full flag  |

**Table 329: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| FF   | 1     | Full flag   |
| DO   | 17:0  | Read data   |

**Table 330: Parameters**

| Name               | Values                             | Description                                                                                                                                                                                                                                                        |
|--------------------|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DATA_WIDTH_W       | "1", "2", "4", "9", "18" (default) | Write data word width. Attached to a memory type primitive.                                                                                                                                                                                                        |
| DATA_WIDTH_R       | "1", "2", "4", "9", "18" (default) | Read data word width. Attached to a memory type primitive.                                                                                                                                                                                                         |
| REGMODE            | "NOREG" (default), "OUTREG"        | Specifies the register mode for pipelining.                                                                                                                                                                                                                        |
| RESETMODE          | "SYNC" (default), "ASYN"           | Specifies the reset type. This attribute is attached to a block RAM-type primitive that has a memory size smaller than 9 bits. When set to SYNC, the memory reset is synchronized with the clock. When set to ASYN, the memory reset is asynchronous to the clock. |
| CSDECODE_W         | "0b00"                             | Attached to a single-port block RAM primitive. The CSDECODE value determines the decoding value of CS[2:0]. A value set to "000" means that the memory is selected if CS[2:0]=1'B000. This is tied with Write operations.                                          |
| CSDECODE_R         | "0b00"                             | Attached to a single-port block RAM primitive. The CSDECODE value determines the decoding value of CS[2:0]. A value set to "000" means that the memory is selected if CS[2:0]=1'B000. This is tied with Read operations.                                           |
| GSR                | "DISABLED" (default), "ENABLED"    | Enables or disables the Global Set/Reset (GSR) for all registered primitives. Applicable to registers, PLLs, and memories such as SP8KA and DP8KA.                                                                                                                 |
| RESETMODE          | "ASYN" (default), "SYNC"           | Reset type. This attribute is attached to a block RAM-type primitive that has a memory size smaller than 9 bits. When set to SYNC, the memory reset is synchronized with the clock. When set to ASYN, the memory reset is asynchronous to the clock.               |
| ASYN_RESET_RELEASE | "SYNC" (default), "ASYN"           | Reset release when the reset mode is ASYN.                                                                                                                                                                                                                         |
| AEPOINTER          | "0b0000000000000000"               | Almost Empty Flag Pointer                                                                                                                                                                                                                                          |
| AEPOINTER1         | "0b0000000000000000"               | Almost Empty Flag Pointer 1                                                                                                                                                                                                                                        |
| AFPOINTER          | "0b0000000000000000"               | Almost Full Flag Pointer                                                                                                                                                                                                                                           |
| AFPOINTER1         | "0b0000000000000000"               | Almost Full Flag Pointer 1                                                                                                                                                                                                                                         |

**Table 330: Parameters**


| Name         | Values               | Description                                     |
|--------------|----------------------|-------------------------------------------------|
| FULLPOINTER  | "0b0000000000000000" | Full Flag Pointer. Attached to a FIFO primitive |
| FULLPOINTER1 | "0b0000000000000000" | Full Flag Pointer 1                             |

## FIFO16K

16 Kb FIFO using block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

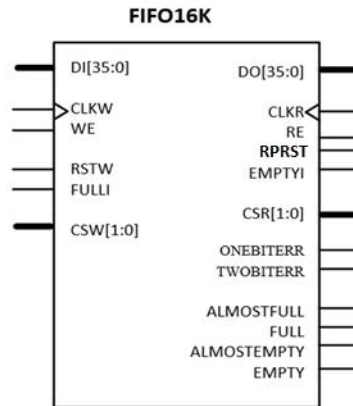**Table 331: Input Ports**

| Name     | Description                                                   |
|----------|---------------------------------------------------------------|
| DI[35:0] | Input data                                                    |
| CLKW     | Write clock. Active on the rising edge. Has polarity control. |
| WE       | Write enable. Active high. Has polarity control.              |
| FULLI    | Write inhibit. Active high. Has polarity control.             |
| CSW[1:0] | Write cascade select. Active high. Has polarity control.      |
| RSTW     | Write reset. Active high. Has polarity control.               |
| CLKR     | Read clock. Active on the rising edge. Has polarity control.  |
| RE       | Read enable. Active high. Has polarity control.               |
| EMPTYI   | Read inhibit. Active high. Has polarity control.              |
| CSR[1:0] | Read cascade select. Active high. Has polarity control.       |
| RPRST    | Read point reset. Active high. Has polarity control.          |

**Table 332: Output Ports**

| Name        | Description                       |
|-------------|-----------------------------------|
| DO[35:0]    | Output data                       |
| ONEBITERR   | ECC error flag for a 1-bit error. |
| TWOBITERR   | ECC error flag for a 2-bit error. |
| ALMOSTFULL  | Almost full flag                  |
| FULL        | Full flag                         |
| ALMOSTEMPTY | Almost empty flag                 |
| EMPTY       | Empty flag                        |

**Table 333: Parameters**


| Name              | Values                                                                     | Description                                                   |
|-------------------|----------------------------------------------------------------------------|---------------------------------------------------------------|
| DATA_WIDTH_W      | "X36" ( <i>default</i> )<br>"X32"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Specifies the Data Word Width                                 |
| DATA_WIDTH_R      | "X36" ( <i>default</i> )<br>"X32"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Specifies the Data Word Width                                 |
| OUTREG            | "BYPASSED"<br>( <i>default</i> )<br>"USED"                                 | Output register                                               |
| GSR               | "ENABLED" ( <i>default</i> )<br>"DISABLED"                                 | Enable or disable GSR feature                                 |
| RESETMODE         | "SYNC" ( <i>default</i> )<br>"ASYNC"                                       | Specifies the reset type                                      |
| ASYNC_RST_RELEASE | "SYNC" ( <i>default</i> )<br>"ASYNC"                                       | Reset release sync/async control                              |
| ECC               | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                 | Enable ECC                                                    |
| CSDECODE_W        | 00 ( <i>default</i> )<br>01<br>10<br>11                                    | Attached to a single-port block RAM primitive                 |
| CSDECODE_R        | 00 ( <i>default</i> )<br>01<br>10<br>11                                    | Attached to a single-port block RAM primitive                 |
| FULLBITS          | 0b1000000000000000<br>( <i>default</i> )                                   | Specifies the FIFO size for FULL flag. By default, it is 18k. |
| ALMOST_FULL       | 0b0000000000000000<br>( <i>default</i> )                                   | The value must be less than FULLBITS.                         |
| ALMOST_EMPTY      | 0b0000000000000000<br>( <i>default</i> )                                   | The value must be greater than 0.                             |

## FIFO32K

32 Kb FIFO using block RAM

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

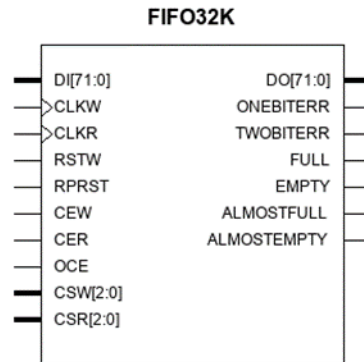**Table 334: Input Ports**

| Name  | Range | Type    | Active State | Description                  |
|-------|-------|---------|--------------|------------------------------|
| DI    | 71:0  | Data    | Active High  | Data Inputs                  |
| CLKW  | 1     | Clock   | Rising Edge  | Write Clock Input            |
| CLKR  | 1     | Clock   | Rising Edge  | Read Clock Input             |
| RSTW  | 1     | Control | Active High  | Write Reset                  |
| RPRST | 1     | Control | Active High  | Read point reset             |
| CEW   | 1     | Control | Active High  | Write Clock Enable           |
| CER   | 1     | Control | Active High  | Read Clock Enable            |
| OCE   | 1     | Control | Active High  | Output Register Clock Enable |
| CSW   | 2:0   | Control | Active High  | Write Cascade Select         |
| CSR   | 2:0   | Control | Active High  | Read Cascade Select          |

**Table 335: Output Ports**

| Name      | Range | Type | Active State | Description           |
|-----------|-------|------|--------------|-----------------------|
| DO        | 71:0  | Data | Active High  | Data Output           |
| ONEBITERR | 1     | Data | Active High  | Single Bit Error Flag |
| TWOBITERR | 1     | Data | Active High  | Double Bit Error Flag |
| FULL      | 1     | Data | Active High  | Full Flag             |
| EMPTY     | 1     | Data | Active High  | Empty Flag            |



**Table 335: Output Ports (Continued)**

| Name        | Range | Type | Active State | Description       |
|-------------|-------|------|--------------|-------------------|
| ALMOSTFULL  | 1     | Data | Active High  | Almost Full Flag  |
| ALMOSTEMPTY | 1     | Data | Active High  | Almost Empty Flag |

**Table 336: Parameters**

| Name              | Values                                                                     | Description                                                        |
|-------------------|----------------------------------------------------------------------------|--------------------------------------------------------------------|
| ALMOST_EMPTY      | "0b0000000000000000"(default)                                              | The value must be greater than 0                                   |
| ALMOST_FULL       | "0b0000000000000000"(default)                                              | The value must be less than FULLBITS                               |
| ASYNC_RST_RELEASE | "SYNC" (default)<br>"ASYNC"                                                | Reset release sync/async control                                   |
| CSDECODE_R        | "000"                                                                      | Read chip select active setting, 0=active high<br>1=active low     |
| CSDECODE_W        | "000"                                                                      | Write chip select active level, 0=active high 1=active low         |
| DATA_WIDTH_R      | "X72" (default)<br>"X64"<br>"X36"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Read port width                                                    |
| DATA_WIDTH_W      | "X72" (default)<br>"X64"<br>"X36"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Write port width                                                   |
| ECC               | "DISABLED" (default)<br>"ENABLED"                                          | Enable ECC                                                         |
| FULLBITS          | "0b1000000000000000"(default)                                              | Specifies the FIFO size for FULL flag; by default FIFO size is 36K |
| FWFT              | "DISABLED" (default)                                                       | First Word Fall Through Mode                                       |

**Table 336: Parameters (Continued)**


| Name      | Values                            | Description                                      |
|-----------|-----------------------------------|--------------------------------------------------|
| GSR       | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset for the output registers |
| OUTREG    | "BYPASSED" (default)<br>"USED"    | Register output                                  |
| RESETMODE | "SYNC" (default)<br>"ASYNC"       | Synchronous/asynchronous reset control           |

## FILTER

Adds a 50-ns delay to a signal

Architectures supported:

- ▶ iCE40 UltraPlus

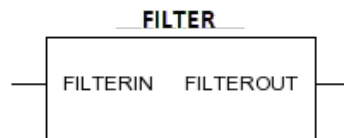**Table 337: Input Ports**

| Name     | Description  |
|----------|--------------|
| FILTERIN | Filter input |

**Table 338: Output Ports**

| Name      | Description   |
|-----------|---------------|
| FILTEROUT | Filter output |


## GSR

Wrapper for Global Set/Reset

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5

- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

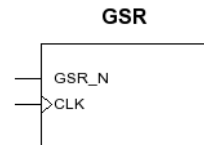**Table 339: Input Ports**

| Name  | Description              |
|-------|--------------------------|
| GSR_N | User GSR input           |
| CLK   | User clock for sync mode |

**Table 340: Parameters**

| Name     | Values                      | Description                 |
|----------|-----------------------------|-----------------------------|
| SYNCMODE | "ASYNC" (default)<br>"SYNC" | Synchronization Mode Select |

GSR is used to reset or set all register elements in your design. The GSR component can be connected to a net from an input buffer or an internally generated net. It is active LOW and when pulsed will set or reset all flip-flops, latches, registers, and counters to the same state as the local set or reset functionality. When input GSR is HIGH, the global signal is released at the positive edge of the clock (CLK) if SYNCMODE is SYNC; otherwise, the signal is released asynchronously.

It is not necessary to connect signals for GSR to any register elements explicitly. The function will be implicitly connected globally. The functionality of the GSR for sequential cells without a local set or reset are described in the appropriate primitive description.

In general, The GSR instantiation in testbench is required when RTL design is composed of Lattice Components/Primitives that requires a GSR net connection in its simulation model. Some of examples of these components are IO/DDR, Registers, DSP, and Hard Ips (like PCIe, SGMII, DPHY). It is also required if a Netlist simulation (post-synthesis and post-route) is performed as it contains synthesized and translated primitives from the User RTL. The best place to add the GSR is the testbench, do not instantiate the GSR primitive in the RTL unless it is needed.

## GSRA

Global Set/Reset

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

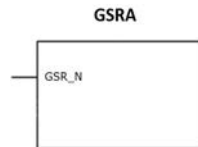


**Table 341: Input Ports**

| Name  | Description                  |
|-------|------------------------------|
| GSR_N | User GSR input, asynchronous |

### Note:

The GSRA primitive needs to be instantiated in the user design.

## GSRB

Global Set/Reset Interface

Architectures Supported:

- ▶ LFMXO4

 


**Table 342: Input Ports**

| Name | Range | Description                             |
|------|-------|-----------------------------------------|
| GSR  | 1     | Set all register elements in the design |

### Description

GSRB is used to reset or set all register elements in your design. The GSR component can be connected to a net from an input buffer or an internally generated net. It is active LOW and when pulsed will set or reset all flip-flops, latches, registers, and counters to the same state as the local set or reset functionality.

It is not necessary to connect signals for GSR to any register elements explicitly. The function will be implicitly connected globally. The functionality of the GSR for sequential cells without a local set or reset are described in the appropriate library help page.

## HSOSC

High-frequency oscillator. Generates 48-MHz nominal clock, +/- 10 percent, with user-programmable divider. Can drive global clock network or fabric routing.

Architectures supported:

- ▶ iCE40 UltraPlus

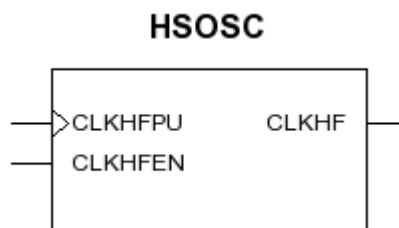


**Table 343: Input Ports**

| Name    | Description                                                                                      |
|---------|--------------------------------------------------------------------------------------------------|
| CLKHFPU | Power up the oscillator. After power up, output will be stable after 100 $\mu$ s. Active high.   |
| CLKHFEN | Enable the clock output. Enable should be low for the 100- $\mu$ s power-up period. Active high. |

**Table 344: Output Ports**

| Name  | Description       |
|-------|-------------------|
| CLKHF | Oscillator output |

**Table 345: Parameters**

| Name      | Values                                                      | Description                                                                                     |
|-----------|-------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| CLKHF_DIV | "0'b00" ( <i>default</i> )<br>"0'b01"<br>"0'b10"<br>"0'b11" | Clock divider selection:<br>0'b00 = 48 MHz<br>0'b01 = 24 MHz<br>0'b10 = 12 MHz<br>0'b11 = 6 MHz |


Same as: SB\_HFOSC

## HSOSC1P8V

High-frequency oscillator. Generates 48-MHz nominal clock, +/- 10 percent, with user-programmable divider. Can drive global clock network or fabric routing. For use when VPP\_2V5 is connected to a voltage below 2.3 V.

Architectures supported:

- ▶ iCE40 UltraPlus

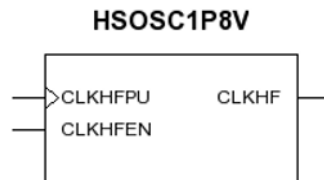**Table 346: Input Ports**

| Name    | Description                                                                                     |
|---------|-------------------------------------------------------------------------------------------------|
| CLKHFPU | Power up the oscillator. After power up, output will be stable after 100 $\mu$ s. Active high   |
| CLKHFEN | Enable the clock output. Enable should be low for the 100- $\mu$ s power up period. Active high |

**Table 347: Output Ports**

| Name  | Description       |
|-------|-------------------|
| CLKHF | Oscillator output |

**Table 348: Parameters**


| Name      | Values                                        | Description                                                                               |
|-----------|-----------------------------------------------|-------------------------------------------------------------------------------------------|
| CLKHF_DIV | 0'b00" (default),<br>"0'b01", "0'b10", "0'b11 | Clock divider selection. 0'b00 = 48 MHz, 0'b01 = 24 MHz, 0'b10 = 12 MHz,<br>0'b11 = 6 MHz |

## I2C\_B

Hard I2C interface

Architectures supported:

- ▶ iCE40 UltraPlus

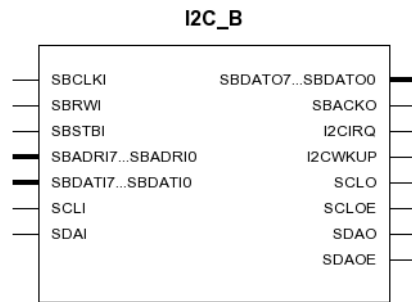**Table 349: Input Ports**

| Name    | Description                                   |
|---------|-----------------------------------------------|
| SBCLKI  | System clock input                            |
| SBRWI   | System read/write input                       |
| SBSTBI  | Strobe signal                                 |
| SBADRI7 | SBADRI0 (System bus control register address) |
| SBDATI7 | SBDATI0 (System data input)                   |
| SCLI    | Serial clock input                            |
| SDAI    | Serial data input                             |

**Table 350: Output Ports**

| Name              | Description                             |
|-------------------|-----------------------------------------|
| SBDAT07...SBDAT00 | System data output                      |
| SBACKO            | System acknowledgment                   |
| I2CIRQ            | I2C interrupt output                    |
| I2CWKUP           | I2C wakeup from standby signal          |
| SCLO              | Serial clock output                     |
| SCLOE             | Serial clock output enable, active high |
| SDAO              | Serial data output                      |
| SDAOE             | Serial data output enable, active high  |

**Table 351: Parameters**

| Name                 | Values                                        | Description                                                                                                                                    |
|----------------------|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| I2C_SLAVE_INIT_ADDR  | "0'b1111100001" (default),<br>"0'b1111100010" | Upper bits [9:2] can be changed through control registers. Lower bits [1:0] are fixed to 01 in the upper left and 10 in the upper right        |
| BUS_ADDR74           | "0'b0001" (default),<br>"0'b0011"             | Fixed value. Upper left corner should be 0'b0001, upper right corner should be 0'b0011. SBADRI[7:4] should match this value to activate the IP |
| I2C_CLK_DIVIDER      | "0" (default), "1...1023"                     | Ratio of SBCLKI/SCLO                                                                                                                           |
| SDA_INPUT_DELAYED    | "0" (default), "1"                            | Add 50-ns delay to the SDAI signal                                                                                                             |
| SDA_OUTPUT_DELAYED   | "0" (default), "1"                            | Add 50-ns delay to the SDAO signal                                                                                                             |
| FREQUENCY_PIN_SBCLKI | "NONE" (default)                              | SDC constraint entry on SBCLKI port of I2C.                                                                                                    |

SAME AS: SB\_I2C

## I2CFIFO


Wrapper for Hardened I2C Interface Block

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65



- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

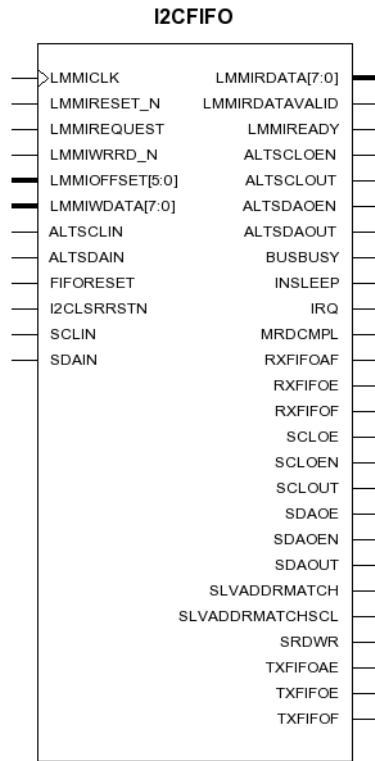**Table 352: Input Ports**

| Name            | Description                         |
|-----------------|-------------------------------------|
| LMMICKL         | LMMI Clock                          |
| LMMIRESET_N     | LMMI Reset (Active Low)             |
| LMMIREQUEST     | LMMI Request                        |
| LMMIWRRD_N      | LMMI Write/Read Select (Active Low) |
| LMMIOFFSET[5:0] | LMMI Address Offset                 |
| LMMIWDATA[7:0]  | LMMI Write Data                     |

**Table 352: (Continued) Input Ports**

| Name       | Description                                       |
|------------|---------------------------------------------------|
| ALTSCLIN   | Alternate I <sup>2</sup> C Clock Input            |
| ALTSDAIN   | Alternate I <sup>2</sup> C Data Input             |
| FIFORESET  | FIFO Reset                                        |
| I2CLSRRSTN | I <sup>2</sup> C Level Shifter Reset (Active Low) |
| SCLIN      | I <sup>2</sup> C Clock Input                      |
| SDAIN      | I <sup>2</sup> C Data Input                       |

**Table 353: Output Ports**

| Name            | Description                                    |
|-----------------|------------------------------------------------|
| LMMIRDATA[7:0]  | LMMI Read Data                                 |
| LMMIRDATAVALID  | LMMI Read Data Valid                           |
| LMMIREADY       | LMMI Ready                                     |
| ALTSCLOEN       | Alternate I <sup>2</sup> C Clock Output Enable |
| ALTSCLOUT       | Alternate I <sup>2</sup> C Clock Output        |
| ALTSDAOEN       | Alternate I <sup>2</sup> C Data Output Enable  |
| ALTSDAOUT       | Alternate I <sup>2</sup> C Data Output         |
| BUSBUSY         | Bus Busy Indicator                             |
| INSLEEP         | In Sleep Mode                                  |
| IRQ             | Interrupt Request                              |
| MRDCMPL         | Master Read Complete                           |
| RXFIFOAF        | RX FIFO Almost Full                            |
| RXFIFOE         | RX FIFO Empty                                  |
| RXFIFO          | RX FIFO Full                                   |
| SCLOE           | I <sup>2</sup> C Clock Output Enable           |
| SCLOEN          | I <sup>2</sup> C Clock Output Enable Control   |
| SCLOUT          | I <sup>2</sup> C Clock Output                  |
| SDAOE           | I <sup>2</sup> C Data Output Enable            |
| SDAOEN          | I <sup>2</sup> C Data Output Enable Control    |
| SDAOUT          | I <sup>2</sup> C Data Output                   |
| SLVADDRMATCH    | Slave Address Match                            |
| SLVADDRMATCHSCL | Slave Address Match with SCL Hold              |

**Table 353: Output Ports (Continued)**

| Name     | Description                |
|----------|----------------------------|
| SRDWR    | Slave Read/Write Indicator |
| TXFIFOAE | TX FIFO Almost Empty       |
| TXFIFOE  | TX FIFO Empty              |
| TXFIFO F | TX FIFO Full               |

**Table 354: Parameters**

| Name            | Values                                                      | Description                                          |
|-----------------|-------------------------------------------------------------|------------------------------------------------------|
| BRNBASEDELAY    | 0'b0000 ( <i>default</i> )                                  | Burn-In Base Delay                                   |
| CR1CKDIS        | "EN" ( <i>default</i> )<br>"DIS"                            | Control Register 1 Clock Disable                     |
| CR1FIFOMODE     | "REG" ( <i>default</i> )<br>"FIFO"                          | Control Register 1 FIFO Mode                         |
| CR1GCEN         | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 1 General Call Enable               |
| CR1I2CEN        | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 1 I <sup>2</sup> C Enable           |
| CR1SDADELSEL    | "NDLY0" ( <i>default</i> )<br>"NDLY1"<br>"NDLY2"<br>"NDLY4" | Control Register 1 SDA Delay Select                  |
| CR1SLPCLKEN     | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 1 Sleep Clock Enable                |
| CR2CORERSTN     | "DIS" ( <i>default</i> )<br>"RST"                           | Control Register 2 Core Reset (Active Low)           |
| CR2HARDTIE      | "TIE" ( <i>default</i> )<br>"NOTIE"                         | Control Register 2 Hard Tie Enable                   |
| CR2INTCLREN     | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 2 Interrupt Clear Enable            |
| CR2MRDCMPLWKUP  | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 2 Master Read Complete Wakeup       |
| CR2RXFIFOAFWKUP | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 2 RX FIFO Almost Full Wakeup        |
| CR2SLVADDRWKUP  | "DIS" ( <i>default</i> )<br>"EN"                            | Control Register 2 Slave Address Match Wakeup        |
| GSR             | "ENABLED" ( <i>default</i> )<br>"DISABLED"                  | Global Status Register                               |
| I2CRXFIFOAFVAL  | 0'b000000 ( <i>default</i> )                                | I <sup>2</sup> C RX FIFO Almost Full Threshold Value |

**Table 354: Parameters (Continued)**

| <b>Name</b>            | <b>Values</b>                       | <b>Description</b>                                    |
|------------------------|-------------------------------------|-------------------------------------------------------|
| I2CSLVADDRA            | 0'b000000000000 ( <i>default</i> )  | I <sup>2</sup> C Slave Address A                      |
| I2CTXFIFOAEVAL         | 0'b0000 ( <i>default</i> )          | I <sup>2</sup> C TX FIFO Almost Empty Threshold Value |
| INTARBLIE              | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt Arbitration Lost Enable                     |
| INTBUSFREEIE           | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt Bus Free Enable                             |
| INTHGCIIE              | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt General Call Enable                         |
| INTMRDCMPLIE           | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt Master Read Complete Enable                 |
| INTRNACKIEORRSVD       | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt NACK Received or Reserved                   |
| INTRSVDORTROEIE        | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt Reserved or TX FIFO Overrun Enable          |
| INTRSVDORTRRDYIE       | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt Reserved or TX Ready Enable                 |
| INTRXOVERFIEORRSVD     | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt RX FIFO Overflow or Reserved                |
| INTRXUNDERFIE          | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt RX FIFO Underflow Enable                    |
| INTTXOVERFIE           | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt TX FIFO Overflow Enable                     |
| INTTXSERRIEORRSVD      | "DIS" ( <i>default</i> )<br>"EN"    | Interrupt TX Slave Error or Reserved                  |
| LMMI_EXTRA_ONE         | "DIS" ( <i>default</i> )<br>"EN"    | LMMI Extra Signal One                                 |
| LMMI_EXTRA_TWO         | "DIS" ( <i>default</i> )<br>"EN"    | LMMI Extra Signal Two                                 |
| NCRALTIOEN             | "FABRIC" ( <i>default</i> )<br>"IO" | Non-Control Register Alternate I/O Enable             |
| NCRFILTERDIS           | "EN" ( <i>default</i> )<br>"DIS"    | Non-Control Register Filter Disable                   |
| NCRSDAINDLYEN          | "DIS" ( <i>default</i> )<br>"EN"    | Non-Control Register SDA Input Delay Enable           |
| NCRSDAOUTDLYEN         | "DIS" ( <i>default</i> )<br>"EN"    | Non-Control Register SDA Output Delay Enable          |
| NONUSRTESTSOFTTRIMEN   | "DIS" ( <i>default</i> )<br>"EN"    | Non-User Test Soft Trim Enable                        |
| NONUSRTSTSOFTTRIMVALUE | 0'b000 ( <i>default</i> )           | Non-User Test Soft Trim Value                         |

**Table 354: Parameters (Continued)**


| Name          | Values                                            | Description                        |
|---------------|---------------------------------------------------|------------------------------------|
| REGI2CBR      | 0'b000000000000 ( <i>default</i> )                | I <sup>2</sup> C Bit Rate Register |
| TSPTIMERVALUE | 0'b10010010111 ( <i>default</i> )<br>000000000000 | Timestamp Timer Value              |

## IB

Input Buffer

Architectures supported:

- ▶ iCE40 UltraPlus
- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

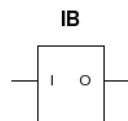**Table 355: Input Ports**

| Name | Description   |
|------|---------------|
| I    | Data from pad |

**Table 356: Output Ports**

| Name | Description    |
|------|----------------|
| O    | Data to fabric |

In iCE40 UltraPlus, refer to Source Template.

**Table 357: Truth Table**


| Input | Output |
|-------|--------|
| I     | O      |
| 1     | 1      |
| 0     | 0      |
| Z     | U      |

## IDDR71

7:1 LVDS IDDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

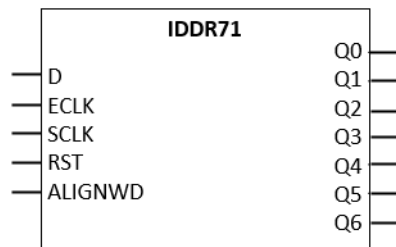

This primitive is used for 7:1 LVDS input implementation.

**Table 358: Input Ports**

| Name    | Description                                 |
|---------|---------------------------------------------|
| D       | DDR data input                              |
| ECLK    | Fast edge clock                             |
| SCLK    | Primary clock input (divide-by-3.5 of ECLK) |
| RST     | Reset to DDR registers                      |
| ALIGNWD | Shifts word alignment by one bit            |

**Table 359: Output Ports**

| Name   | Description |
|--------|-------------|
| Q[6:0] | Output data |

**Table 360: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**IDDR71A**

7:1 LVDS input side implementation

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

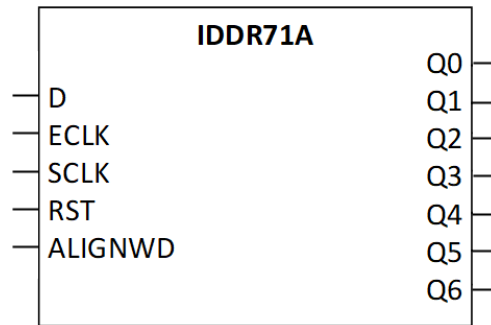**Table 361: Input Ports**

| Name    | Range | Type    | Active State | Description                                                                |
|---------|-------|---------|--------------|----------------------------------------------------------------------------|
| D       | 1     | Data    | High         | DDR data input                                                             |
| ECLK    | 1     | Clock   | Rising Edge  | Fast edge clock                                                            |
| SCLK    | 1     | Clock   | Rising Edge  | Primary clock input<br>(divide-by-3.5 of ECLK)                             |
| RST     | 1     | Control | High         | Reset to DDR registers                                                     |
| ALIGNWD | 1     | Control | High         | This signal is used for word alignment. It will shift the word by one bit. |

**Table 362: Output Ports**

| Name              | Range | Type | Active State | Description                       |
|-------------------|-------|------|--------------|-----------------------------------|
| Q0, Q2,<br>Q4, Q6 | 4     | Data | High         | Data at the positive edge of ECLK |
| Q1, Q3, Q5        | 3     | Data | High         | Data at the negative edge of ECLK |

**Table 363: Parameters**

| Name | Value                   | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |



**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**IDDRX1**

Generic X1 IDDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

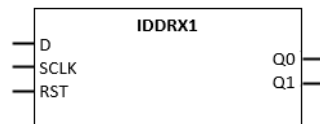

This primitive is used for the Generic x1 IDDR implementation.

**Table 364: Input Ports**

| Name | Description            |
|------|------------------------|
| D    | DDR data input         |
| SCLK | Primary clock input    |
| RST  | Reset to DDR registers |

**Table 365: Output Ports**

| Name | Description                            |
|------|----------------------------------------|
| Q0   | Data at the positive edge of the clock |
| Q1   | Data at the negative edge of the clock |

**Table 366: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## IDDRX1A

Generic DDR with 1X gearing

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

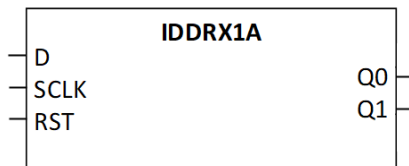**Table 367: Input Ports**

| Name | Range | Type    | Active State | Description            |
|------|-------|---------|--------------|------------------------|
| D    | 1     | Data    | High         | DDR data input         |
| SCLK | 1     | Clock   | Rising Edge  | Primary clock input    |
| RST  | 1     | Control | High         | Reset to DDR registers |

**Table 368: Output Ports**

| Name | Range | Type | Active State | Description                            |
|------|-------|------|--------------|----------------------------------------|
| Q0   | 1     | Data | High         | Data at the positive edge of the clock |
| Q1   | 1     | Data | High         | Data at the negative edge of the clock |

**Table 369: Parameters**


| Name | Value      | Description                   |
|------|------------|-------------------------------|
| GSR  | "ENABLED"  | Enable or disable GSR feature |
|      | "DISABLED" |                               |

## IDDRX2

Generic X2 IDDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

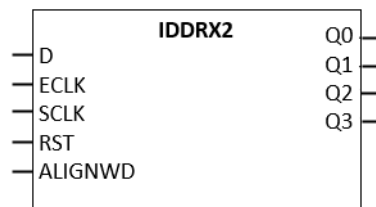

This primitive is used for the generic X2 IDDR implementation.

**Table 370: Input Ports**

| Name | Range | Description                                |
|------|-------|--------------------------------------------|
| D    | 1     | DDR data input.                            |
| SCLK | 1     | Primary clock input (divide-by-2 of ECLK). |
| RST  | 1     | Reset to DDR registers.                    |

**Table 370: Input Ports (Continued)**

| Name    | Range | Description                       |
|---------|-------|-----------------------------------|
| ECLK    | 1     | Fast edge clock.                  |
| ALIGNWD | 1     | Shifts word alignment by one bit. |

**Table 371: Output Ports**

| Name | Range | Description                                                                                                                               |
|------|-------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Q    | 3:0   | Parallel data output. Q0, Q2 are the data at the positive edges of the input ECLK. Q1 and Q3 are the data at negative edge of input ECLK. |

**Table 372: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**IDDRX2A**

Generic DDR with 2X gearing

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

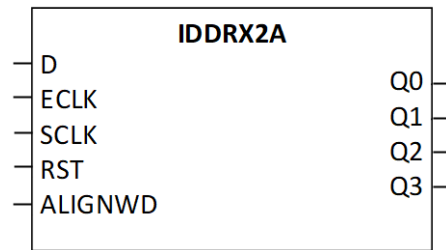**Table 373: Input Ports**

| Name    | Range | Type    | Active State | Description                                                                |
|---------|-------|---------|--------------|----------------------------------------------------------------------------|
| D       | 1     | Data    | High         | DDR data input                                                             |
| ECLK    | 1     | Clock   | Rising Edge  | Fast edge clock                                                            |
| SCLK    | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-2 of ECLK)                                  |
| RST     | 1     | Control | High         | Reset to DDR registers                                                     |
| ALIGNWD | 1     | Control | High         | This signal is used for word alignment. It will shift the word by one bit. |

**Table 374: Output Ports**

| Name   | Range | Type | Active State | Description                       |
|--------|-------|------|--------------|-----------------------------------|
| Q0, Q2 | 2     | Data | High         | Data at the positive edge of ECLK |
| Q1, Q3 | 2     | Data | High         | Data at the negative edge of ECLK |

**Table 375: Parameters**

| Name | Value                   | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

## IDDRX2DQ

DQ Input for DDR2 and DDR3 Memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

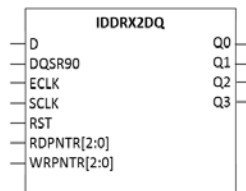

This primitive is used to implement DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces.

**Table 376: Input Ports**

| Name   | Range | Description                                                         |
|--------|-------|---------------------------------------------------------------------|
| D      | 1     | DDR data input.                                                     |
| DQSR90 | 1     | DQS clock input.                                                    |
| ECLK   | 1     | Fast edge clock.                                                    |
| SCLK   | 1     | Primary clock input (divide-by-2 of ECLK).                          |
| RST    | 1     | Reset to DDR registers.                                             |
| RDPNTR | 2:0   | Read pointer from the DQSBUF module used to transfer data to ECLK.  |
| WRPNTR | 2:0   | Write pointer from the DQSBUF module used to transfer data to ECLK. |

**Table 377: Output Ports**

| Name | Range | Description                                                                                                                                  |
|------|-------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Q    | 3:0   | Parallel data output. Q0 and Q2 are the data at the positive edges of the input ECLK. Q1 and Q3 are the data at negative edge of input ECLK. |

**Table 378: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## IDDRX4

Generic X4 IDDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

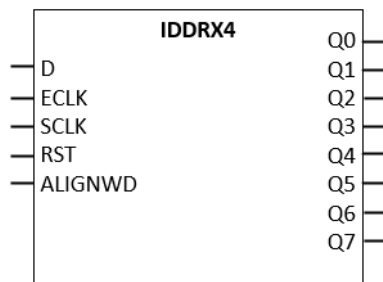

This primitive is used for the Generic x4 IDDR implementation.

**Table 379: Input Ports**

| Name | Range | Description                                |
|------|-------|--------------------------------------------|
| D    | 1     | DDR data input.                            |
| SCLK | 1     | Primary clock input (divide-by-4 of ECLK). |

**Table 379: Input Ports**

| Name    | Range | Description                       |
|---------|-------|-----------------------------------|
| RST     | 1     | Reset to DDR registers.           |
| ECLK    | 1     | Fast edge clock.                  |
| ALIGNWD | 1     | Shifts word alignment by one bit. |

**Table 380: Output Ports**

| Name | Range | Description                                                                                                                                       |
|------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Q    | 7:0   | Parallel data output. Q0, Q2, Q4, Q6 are the data at the positive edges of the input ECLK. Q1, Q3, Q5, Q7 are data at negative edge of input ECLK |

**Table 381: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.


**IDDRX4A**

Generic DDR with 4X gearing

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

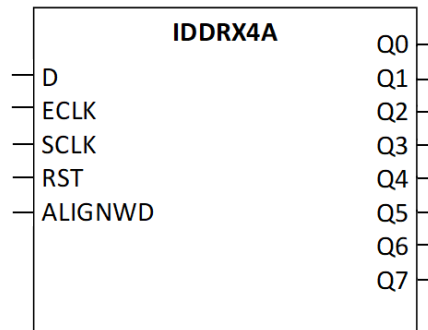

**Table 382: Input Ports**

| Name    | Range | Type    | Active State | Description                                                                |
|---------|-------|---------|--------------|----------------------------------------------------------------------------|
| D       | 1     | Data    | High         | DDR data input                                                             |
| ECLK    | 1     | Clock   | Rising Edge  | Fast edge clock                                                            |
| SCLK    | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-4 of ECLK)                                  |
| RST     | 1     | Control | High         | Reset to DDR registers                                                     |
| ALIGNWD | 1     | Control | High         | This signal is used for word alignment. It will shift the word by one bit. |

**Table 383: Output Ports**

| Name           | Range | Type | Active State | Description                       |
|----------------|-------|------|--------------|-----------------------------------|
| Q0, Q2, Q4, Q6 | 4     | Data | High         | Data at the positive edge of ECLK |
| Q1, Q3, Q5, Q7 | 4     | Data | High         | Data at the negative edge of ECLK |

**Table 384: Parameters**

| Name | Value                   | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**IDDRX4B**

Input for Generic DDR X4 Using 1:8 Gearing

Architectures Supported:

- ▶ LFMXO4

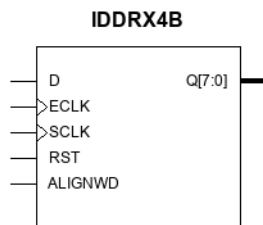**Table 385: Input Ports**

| Name    | Range | Description                                                                                 |
|---------|-------|---------------------------------------------------------------------------------------------|
| D       | 1     | DDR input from sysIO buffer.                                                                |
| ECLK    | 1     | Clock connected to the high speed edge clock tree.                                          |
| SCLK    | 1     | Clock connected to the system clock.                                                        |
| RST     | 1     | RESET to this block from CIB.                                                               |
| ALIGNWD | 1     | Data alignment signal used for word alignment.<br>Each operation shifts alignment by 1 bit. |

**Table 386: Output Ports**

| Name | Range | Description                                   |
|------|-------|-----------------------------------------------|
| Q0   | 1     | Data available at the same edge of the clock. |
| Q1   | 1     | Data available at the same edge of the clock. |
| Q2   | 1     | Data available at the same edge of the clock. |

**Table 386: Output Ports**

| Name | Range | Description                                   |
|------|-------|-----------------------------------------------|
| Q3   | 1     | Data available at the same edge of the clock. |
| Q4   | 1     | Data available at the same edge of the clock. |
| Q5   | 1     | Data available at the same edge of the clock. |
| Q6   | 1     | Data available at the same edge of the clock. |
| Q7   | 1     | Data available at the same edge of the clock. |

**Table 387: Parameters**

| Name | Values                             | Description                    |
|------|------------------------------------|--------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature. |

**Description**


IDDRX4B is the input for generic DDR X4 using 1:8 gearing. It uses the VPIC\_RX hardware cell. It is used for bottom bank only.

**IDDRX4DQ**

DQ Input for DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

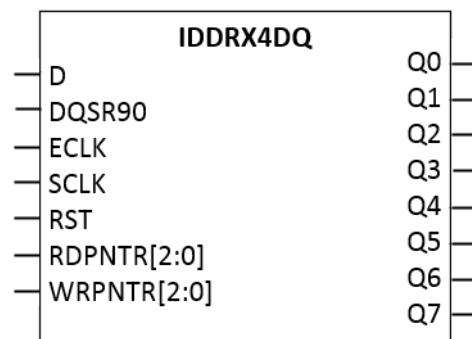

This primitive is used to implement DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces at higher speeds.

**Table 388: Input Ports**

| Name   | Range | Description                                                         |
|--------|-------|---------------------------------------------------------------------|
| D      | 1     | DDR data input.                                                     |
| DQSR90 | 1     | DQS clock input.                                                    |
| ECLK   | 1     | Fast edge clock.                                                    |
| SCLK   | 1     | Primary clock input (divide-by-4 of ECLK).                          |
| RST    | 1     | Reset to DDR registers.                                             |
| RDPNTR | 2:0   | Read pointer from the DQSBUF module used to transfer data to ECLK.  |
| WRPNTR | 2:0   | Write pointer from the DQSBUF module used to transfer data to ECLK. |

**Table 389: Output Ports**

| Name | Range | Description                                                                                                                                        |
|------|-------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Q    | 7:0   | Parallel data output. Q0, Q2, Q4, Q6 are the data at the positive edges of the input ECLK. Q1, Q3, Q5, Q7 are data at negative edge of input ECLK. |

**Table 390: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |


## IDDRX5

Generic X5 IDDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T

- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

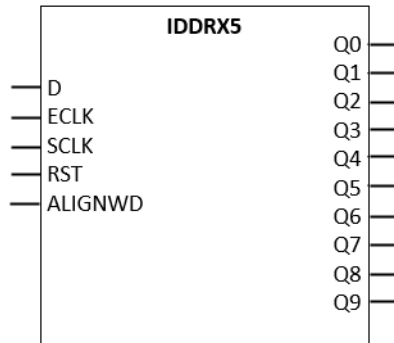

This primitive is used for the Generic x5 IDDR implementation.

**Table 391: Input Ports**

| Name    | Range | Description                                |
|---------|-------|--------------------------------------------|
| D       | 1     | DDR data input.                            |
| ECLK    | 1     | Fast edge clock.                           |
| SCLK    | 1     | Primary clock input (divide-by-5 of ECLK). |
| RST     | 1     | Reset to DDR registers.                    |
| ALIGNWD | 1     | Shifts word alignment by one bit.          |

**Table 392: Output Ports**

| Name | Range | Description                                                                                                                                                |
|------|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Q    | 9:0   | Parallel data output. Q0, Q2, Q4, Q6, Q8 are the data at the positive edges of the input ECLK. Q1, Q3, Q5, Q7, Q9 are data at negative edge of input ECLK. |

**Table 393: Parameters**

| Name | Values                            | Description              |
|------|-----------------------------------|--------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset. |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**IDDRX5A**

Generic DDR with 5X gearing

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

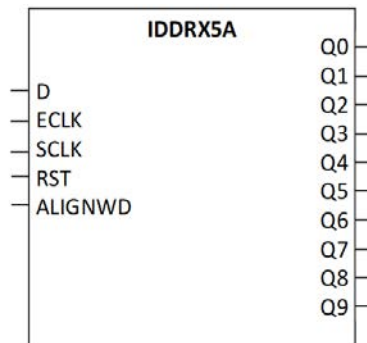


**Table 394: Input Ports**

| Name    | Range | Type    | Active State | Description                                                                |
|---------|-------|---------|--------------|----------------------------------------------------------------------------|
| D       | 1     | Data    | High         | DDR data input                                                             |
| ECLK    | 1     | Clock   | Rising Edge  | Fast edge clock                                                            |
| SCLK    | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-5 of ECLK)                                  |
| RST     | 1     | Control | High         | Reset to DDR registers                                                     |
| ALIGNWD | 1     | Control | High         | This signal is used for word alignment. It will shift the word by one bit. |

**Table 395: Output Ports**

| Name                  | Range | Type | Active State | Description                       |
|-----------------------|-------|------|--------------|-----------------------------------|
| Q0, Q2,<br>Q4, Q6, Q8 | 5     | Data | High         | Data at the positive edge of ECLK |
| Q1, Q3,<br>Q5, Q7, Q9 | 5     | Data | High         | Data at the negative edge of ECLK |

**Table 396: Parameters**

| Name | Value                   | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**IDDRX71A**

7:1 LVDS Input Supporting 1:7 Gearing

Architectures Supported:

- ▶ LFMXO4

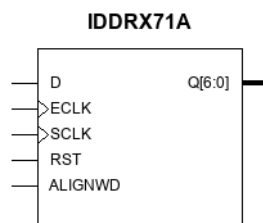


**Table 397: Input Ports**

| Name    | Range | Description                                                                         |
|---------|-------|-------------------------------------------------------------------------------------|
| D       | 1     | DDR input from sysIO buffer.                                                        |
| ECLK    | 1     | Edge clock.                                                                         |
| SCLK    | 1     | Clock connected to the system clock.                                                |
| RST     | 1     | RESET for this block.                                                               |
| ALIGNWD | 1     | Data alignment signal used for 7:1 LVDS. Each operation shifts alignment by 2 bits. |

**Table 398: Output Ports**

| Name | Range | Description              |
|------|-------|--------------------------|
| Q    | 6:0   | 1:7 LVDS output signals. |

**Table 399: Parameters**

| Name | Values                           | Description                  |
|------|----------------------------------|------------------------------|
| GSR  | "ENABLED" (default),<br>DISABLED | Enable/disable global reset. |

**Description**

IDDRX71A is the 7:1 LVDS input supporting 1:7 gearing. It is used for bottom bank only. IDDRX71A includes the SLIP circuitry.

For more information and usage, refer to the related technical note on the Lattice web site.

**IDDRXE**

Input for Generic DDR X1 Using 1:2 Gearing

Architectures Supported:

- ▶ LFMXO4

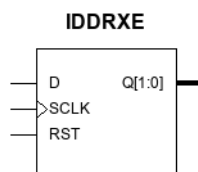




**Table 400: Input Ports**

| Name | Range | Description                         |
|------|-------|-------------------------------------|
| D    | 1     | DDR input from sysIO buffer         |
| SCLK | 1     | Clock connected to the system clock |
| RST  | 1     | RESET for this block                |

**Table 401: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q0   | 1     | Data at the positive edge of the clock |
| Q1   | 1     | Data at the negative edge of the clock |

**Table 402: Parameters**

| Name | Values                            | Description             |
|------|-----------------------------------|-------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |

**Description**

IDDRXE is the input for generic DDR X1 using 1:2 gearing. It uses the mPIC (base pic) or PIC (memory pic) hardware cell. It is used for all sides.

For more information and usage, refer to the related technical note on the Lattice web site.

**IDDRX2E**

Input for Generic DDR X2 Using 1:4 Gearing

Architectures Supported:

- ▶ LFMXO4

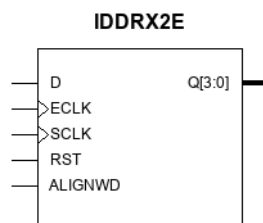


**Table 403: Input Ports**

| Name    | Range | Description                                                                                   |
|---------|-------|-----------------------------------------------------------------------------------------------|
| D       | 1     | DDR input from sysIO buffer.                                                                  |
| ECLK    | 1     | Clock connected to the high speed edge clock tree.                                            |
| SCLK    | 1     | Clock connected to the system clock.                                                          |
| RST     | 1     | RESET to this block from CIB.                                                                 |
| ALIGNWD | 1     | Data alignment signal used for word alignment. Each operation shifts word alignment by 1 bit. |

**Table 404: Output Ports**

| Name | Range | Description                                   |
|------|-------|-----------------------------------------------|
| Q0   | 1     | Data available at the same edge of the clock. |
| Q1   | 1     | Data available at the same edge of the clock. |
| Q2   | 1     | Data available at the same edge of the clock. |
| Q3   | 1     | Data available at the same edge of the clock. |

**Table 405: Parameters**

| Name | Values                             | Description             |
|------|------------------------------------|-------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable global set/reset |

**Description**

IDDRX2E is the input for generic DDR X2 using 1:4 gearing. It uses the VPIC\_RX hardware cell. It is used for bottom bank only.


For more information and usage, refer to the related technical note on the Lattice web site.

**IFD1P3AZ**

Positive Edge Triggered Input D Flip-Flop with Positive Level Enable

Architectures supported:

- ▶ iCE40 UltraPlus

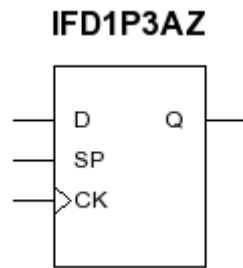**Table 406: Input Ports**

| Name | Description               |
|------|---------------------------|
| D    | Data in                   |
| SP   | Clock enable, active high |
| CK   | Clock                     |

**Table 407: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data out    |

**Table 408: Truth Table**

| Inputs |    |    | Output |
|--------|----|----|--------|
| D      | SP | CK | Q      |
| X      | 0  | X  | Q      |
| 0      | 1  | ↑  | 0      |
| 1      | 1  | ↑  | 1      |

X = Don't care


## IFD1P3BX

Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset

Architectures supported:

▶ LAV-AT-ES1

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

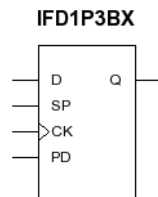**Table 409: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| CK   | 1     | Clock   | Rising Edge  | Clock Input           |
| SP   | 1     | Control | High         | Positive Clock Enable |
| PD   | 1     | Control | High         | Asynchronous Preset   |

**Table 410: Output Ports**

| Name | Range | Type | Active State | Description |
|------|-------|------|--------------|-------------|
| Q    | 1     |      | High         | Data Output |

**Table 411: Parameters**

| Name | Values                                     | Description                   |
|------|--------------------------------------------|-------------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable or disable GSR feature |

**Note:**

Any IO driving an IO register may **only** drive that IO register and nothing else.

**Table 412: Truth Table**

| Inputs |    |    |    | Outputs |
|--------|----|----|----|---------|
| D      | SP | CK | PD | Q       |
| X      | 0  | X  | 0  | Q       |
| X      | X  | X  | 1  | 1       |
| 0      | 1  | ↑  | 0  | 0       |
| 1      | 1  | ↑  | 0  | 1       |

X = Don't Care


When GSR = 0, Q = 1 (D = SP = CK = PD = X)

**IFD1P3DX**

Positive Edge Triggered Input D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

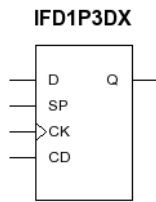**Table 413: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| CK   | 1     | Clock   | Rising Edge  | Clock Input           |
| SP   | 1     | Control | High         | Positive Clock Enable |
| CD   | 1     | Control | High         | Asynchronous Reset    |

**Table 414: Output Ports**

| Name | Range | Type | Active State | Description |
|------|-------|------|--------------|-------------|
| Q    | 1     |      | High         | Data Output |

**Table 415: Parameters**

| Name | Values                                     | Description                   |
|------|--------------------------------------------|-------------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable or disable GSR feature |

**Note:**

Any IO driving an IO register may **only** drive that IO register and nothing else.

**Table 416: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 0      |

**Table 416: Truth Table**

| Inputs |   |   |   | Output |
|--------|---|---|---|--------|
| 0      | 1 | ↑ | 0 | 0      |
| 1      | 1 | ↑ | 0 | 1      |

X = Don't care

When GSR = 0, Q = 0 (D = SP = CK = CD = X)

## IFD1P3IX

Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Clear and Positive Level Enable (Clear Overrides Enable)

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

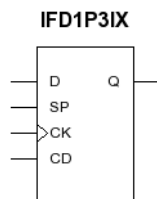


**Table 417: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| CK   | 1     | Clock   | Rising Edge  | Clock Input           |
| SP   | 1     | Control | High         | Positive Clock Enable |
| CD   | 1     | Control | High         | Synchronous Reset     |

**Table 418: Output Ports**

| Name | Range | Type | Active State | Description |
|------|-------|------|--------------|-------------|
| Q    | 1     |      | High         | Data Output |

**Table 419: Parameters**

| Name | Values                                     | Description                   |
|------|--------------------------------------------|-------------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable or disable GSR feature |

**Note:**

Any IO driving an IO register may **only** drive that IO register and nothing else.

**Table 420: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | ↑  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

When GSR = 0, Q = 0 (D = SP = CK = CD = X)



## IFD1P3JX

Positive Edge Triggered Input D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset Overrides Enable)

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

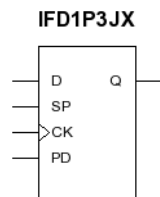


**Table 421: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| CK   | 1     | Clock   | Rising Edge  | Clock Input           |
| SP   | 1     | Control | High         | Positive Clock Enable |
| PD   | 1     | Control | High         | Synchronous Preset    |

**Table 422: Output Ports**

| Name | Range | Type | Active State | Description |
|------|-------|------|--------------|-------------|
| Q    | 1     |      | High         | Data Output |

**Table 423: Parameters**

| Name | Values                                     | Description                   |
|------|--------------------------------------------|-------------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable or disable GSR feature |

**Note:**

Any IO driving an IO register may **only** drive that IO register and nothing else.

**Table 424: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | ↑  | 1  | 1      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

When GSR = 0, Q = 1 (D = SP = CK = PD = X)

**IFS1P3BX**

Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Preset, and System Clock (used in input PIC area only)

Architectures Supported:

- ▶ LFMXO4

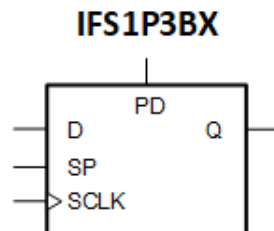


**Table 425: Input Ports**

| Name | Range | Description         |
|------|-------|---------------------|
| D    | 1     | Data in             |
| SP   | 1     | Clock enable        |
| SCLK | 1     | Primary clock input |
| PD   | 1     | Preset              |

**Table 426: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 427: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Description**

This primitive must be paired with an input or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 428: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | PD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | X    | 1  | 1       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care

When GSR=0, Q=1 (D=SP=SCLK=PD=X)

## IFS1P3DX

Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Clear, and System Clock (used in input PIC area only)

Architectures Supported:

▶ LFMXO4

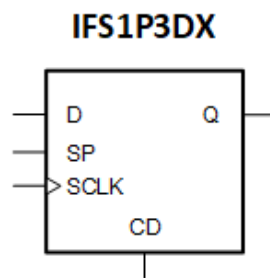


**Table 429: Input Ports**

| Name | Range | Description         |
|------|-------|---------------------|
| D    | 1     | Data in             |
| SP   | 1     | Clock enable        |
| SCLK | 1     | Primary clock input |
| CD   | 1     | Clear               |

**Table 430: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 431: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

## Description

This primitive must be paired with an input or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 432: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | CD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | X    | 1  | 0       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care

When GSR=0, Q=0 (D=SP=SCLK=CD=X)

## IFS1P3IX

Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear, Positive Level Enable, and System Clock (Clear overrides Enable) (used in input PIC area only)

Architectures Supported:

- ▶ LFMXO4

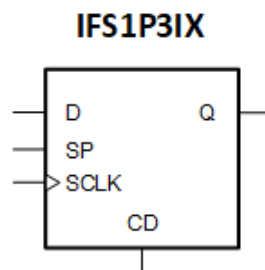


**Table 433: Input Ports**

| Name | Range | Description         |
|------|-------|---------------------|
| D    | 1     | Data in             |
| SP   | 1     | Clock enable        |
| SCLK | 1     | Primary clock input |
| CD   | 1     | Clear               |

**Table 434: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 435: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Description**

This primitive must be paired with an input or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 436: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | CD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | ↑    | 1  | 0       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care

When GSR=0, Q=0 (D=SP=SCLK=CD=X)

## IFS1P3JX

Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset, Positive Level Enable, and System Clock (Preset overrides Enable) (used in input PIC area only)

Architectures Supported:

▶ LFMX04

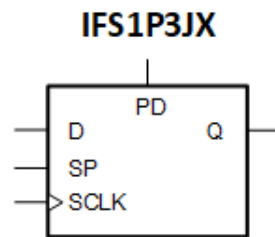


**Table 437: Input Ports**

| Name | Range | Description         |
|------|-------|---------------------|
| D    | 1     | Data in             |
| SP   | 1     | Clock enable        |
| SCLK | 1     | Primary clock input |
| PD   | 1     | Preset              |

**Table 438: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data Output |

**Table 439: Parameters**

| Name | Values                             | Description                   |
|------|------------------------------------|-------------------------------|
| GSR  | "ENABLED" (default),<br>"DISABLED" | Enable or disable GSR feature |

**Description**

This primitive must be paired with an input or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 440: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | PD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | ↑    | 1  | 1       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care

When GSR=0, Q=1 (D=SP=SCLK=PD=X)


**IMONDELAY**

ECLK interface with dynamically control delay and edge monitor (IMON)

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

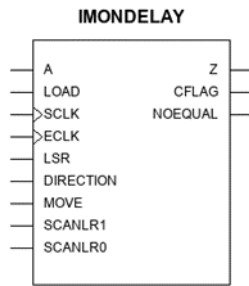

**Table 441: Input Ports**

| Name      | Range | Type    | Active State | Description                                             |
|-----------|-------|---------|--------------|---------------------------------------------------------|
| A         | 1     | Data    | High         | Data input from pin                                     |
| SCLK      | 1     | Clock   | High         | Primary clock for IREG/IDDR                             |
| ECLK      | 1     | Clock   | Rising Edge  | Fast Edge Clock                                         |
| LSR       | 1     | Reset   | High         | Local Set/Reset                                         |
| LOAD      | 1     | Control | High         |                                                         |
| DIRECTION | 1     | Control | High         | DIRECTION<br>1 to decrease delay<br>0 to increase delay |
| MOVE      | 1     | Control | High         |                                                         |
| SCANLR1   | 1     | Control | High         | Edge Monitor Window Adjustment                          |
| SCANLR0   | 1     | Control | High         | Edge Monitor Window Adjustment                          |

**Table 442: Output Ports**

| Name    | Range | Type | Active State | Description                                                                                        |
|---------|-------|------|--------------|----------------------------------------------------------------------------------------------------|
| Z       | 1     | Data | High         | Delayed data to input register block                                                               |
| CFLAG   | 1     | Flag | High         | Flag indicating the delay counter has reached max (when moving up) or min (when moving down) value |
| NOEQUAL | 1     | Flag | High         | Equal Flag                                                                                         |

**Table 443: Parameters**

| Name       | Values                                        | Description                    |
|------------|-----------------------------------------------|--------------------------------|
| DEL_MODE   | USER_DEFINED<br>ECLK_ALIGNED<br>ECLK_CENTERED | Set delay mode                 |
| DEL_VALUE  | "0" to "511"                                  | Static Delay Value             |
| DEL_ADJUST | "0" to "15"                                   | Static Delay Window Adjustment |

**Note:**


IMONDELAY drives only IDDRX2, IDDRX4, IDDRX5 or IDDR71 components.

**INV**

Inverter

Architectures supported:

- ▶ iCE40 UltraPlus
- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

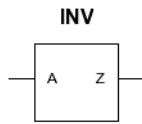**Table 444: Input Ports**

| Name | Description      |
|------|------------------|
| A    | Function input A |

**Table 445: Output Ports**


| Name | Description                       |
|------|-----------------------------------|
| Z    | Delayed output to the PLL fb port |

## INRDB

Input Reference and Differential Buffer

Architectures Supported:

▶ LFMXO4

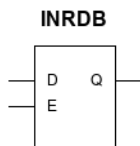**Table 446: Input Ports**

| Name | Range | Description  |
|------|-------|--------------|
| D    | 1     | Data input D |
| E    | 1     | Data input E |

**Table 447: Output Ports**

| Name | Range | Description   |
|------|-------|---------------|
| Q    | 1     | Data output Q |

**Description**

The INRDB primitive is used to support post-PAR simulation of Dynamic Bank Controller. The Dynamic Bank Controller signals to the IO are hardwired and cannot be changed for the simulation, so the INRDB and [LVDSOB](#) primitives are defined to support the simulation.


For more information, refer to the related technical note on the Lattice web site.

**IOL\_B**

Input/Output Registers, for Both Single Data and Double Data Rate

Architectures supported:

- ▶ iCE40 UltraPlus

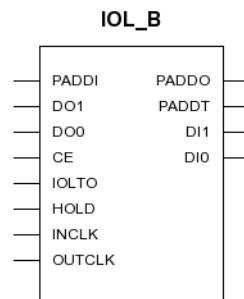**Table 448: Input Ports**

| Name   | Description                   |
|--------|-------------------------------|
| PADDI  | Data from pad                 |
| DO1    | Data to pad                   |
| DO0    | Data to pad                   |
| CE     | Clock enable                  |
| IOLTO  | Tri-state enable (active low) |
| HOLD   | Hold DI0 state                |
| INCLK  | Input clock                   |
| OUTCLK | Output clock                  |

**Table 449: Output Ports**

| Name  | Description              |
|-------|--------------------------|
| PADDO | Data to pad              |
| PADDT | Tri-state control to pad |
| DI1   | Data from pad            |
| DI0   | Data from pad            |

**Table 450: Parameters**


| Name    | Values                                                                 | Description                                                                                                                                                       |
|---------|------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LATCHIN | "NONE_REG" (default),<br>"LATCH_REG",<br>"LATCH_BYPASS",<br>"NONE_DDR" | NONE REG = no latch, just register, LATCH_REG = latch DI0 when HOLD is asserted, LATCH_BYPASS = latch non-registered DO0, and NONE DDR = No latch, DDR operation. |
| DDROUT  | "NO" (default),<br>"YES"                                               | Select double data rate output                                                                                                                                    |

## JTAG

JTAG Block for Reveal Debugging Tool

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

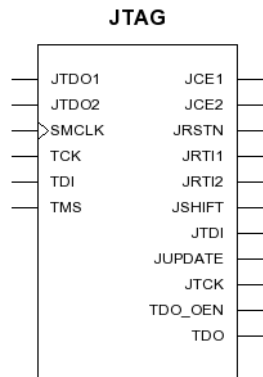**Table 451: Input Ports**

| Name  | Description                                                                                                                                                                                                       |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JTDO1 | JTAG Test Data Output one (scans output bus entering JTAG block), for internal logic to control non-disruptive re-configuration through JTAG port, JTAG serial interface to the device.                           |
| JTDO2 | JTAG Test Data Output two                                                                                                                                                                                         |
| SMCLK | Configuration Block Clock                                                                                                                                                                                         |
| TCK   | Test Clock, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TCK pin.<br>Clocks registers and TAP Controller.                       |
| TDI   | Test Data Input, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TDI pin.                                                          |
| TMS   | Test Mode Select, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TMS pin.<br>Controls state machine switching for TAP Controller. |

**Table 452: Output Ports**

| Name | Description                                              |
|------|----------------------------------------------------------|
| JCE1 | JTAG Clock Enable one (BS is to boundary scan ring (L2). |
| JCE2 | JTAG Clock Enable two                                    |

**Table 452: Output Ports (Continued)**

| <b>Name</b> | <b>Description</b>                                                                                                                                                                    |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JRSTN       | JTAG ResetN<br>Active low reset signal. Set low initially and then remains high after initialization.                                                                                 |
| JRTI1       | JTAG Run-Test/Idle one                                                                                                                                                                |
| JRTI2       | JTAG Run-Test/Idle two                                                                                                                                                                |
| JSHIFT      | JTAG Shift.<br>Signal goes high when TAP Controller State is Shift-DR.                                                                                                                |
| JTDI        | JTAG Test Data Input, for internal logic to control non-disruptive re-configuration through JTAG port<br>Signal is coming from TDI input and going into the FPGA fabric.              |
| JUPDATE     | JTAG Update.<br>Signal goes high when TAP controller state is Update-DR.                                                                                                              |
| JTCK        | JTAG Test Clock (connects to TCK), for internal logic to control non-disruptive re-configuration through JTAG port<br>Signal is coming from TCK input and going into the FPGA fabric. |
| TDO_OEN     | TAP Data Output Enable (OE to TDO)                                                                                                                                                    |
| TDO         | Test Data Output, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly to the pad of device TDO pin.                               |

**Table 453: Parameters**

| Name       | Values                        | Description                                                                                                                                                                                                     |
|------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MCER1EXIST | "NEXIST" (default)<br>"EXIST" | <p>"DISABLED": TDO is driven by TDI (bypass register) when the IP_A or IPTEST_A instruction is sent.</p> <p>"ENABLED": TDO is driven by JTDO1 (ER1 register) when the IP_A or IPTEST_A instruction is sent.</p> |
| MCER2EXIST | "NEXIST" (default)<br>"EXIST" | <p>"DISABLED": TDO is driven by TDI (bypass register) when the IP_B or IPTEST_B instruction is sent.</p> <p>"ENABLED": TDO is driven by JTDO2 (ER2 register) when the IP_B or IPTEST_B instruction is sent.</p> |

## JTAGA

Supports JTAG operations

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

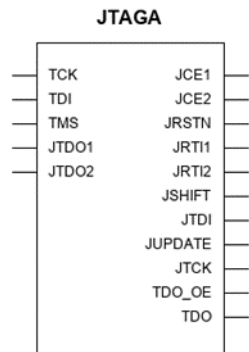




**Table 454: Input Ports**

| Name  | Range | Description                                                                                                                                                                                                           |
|-------|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCK   | 1     | Test Clock, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TCK pin.<br><br>Clocks registers and TAP Controller.                       |
| TDI   | 1     | Test Data Input, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TDI pin.                                                              |
| TMS   | 1     | Test Mode Select, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TMS pin.<br><br>Controls state machine switching for TAP Controller. |
| JTDO1 | 1     | JTAG Test Data Output one (scans output bus entering JTAG block), for internal logic to control non-disruptive re-configuration through JTAG port, JTAG serial interface to the device.                               |
| JTDO2 | 1     | JTAG Test Data Out two                                                                                                                                                                                                |

**Table 455: Output Ports**

| Name    | Range | Description                                                                                                                                                                  |
|---------|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JCE1    | 1     | JTAG Clock Enable one (BS is to boundary scan ring (L2).                                                                                                                     |
| JCE2    | 1     | JTAG Clock Enable two                                                                                                                                                        |
| JRSTN   | 1     | JTAG ResetN<br><br>Active low reset signal. Set low initially and then remains high after initialization.                                                                    |
| JRTI1   | 1     | JTAG Run-Test/Idle one                                                                                                                                                       |
| JRTI2   | 1     | JTAG Run-Test/Idle two                                                                                                                                                       |
| JSHIFT  | 1     | JTAG Shift.<br><br>Signal goes high when TAP Controller State is Shift-DR.                                                                                                   |
| JTDI    | 1     | JTAG Test Data Input, for internal logic to control non-disruptive re-configuration through JTAG port<br><br>Signal is coming from TDI input and going into the FPGA fabric. |
| JUPDATE | 1     | JTAG Update.<br><br>Signal goes high when TAP controller state is Update-DR.                                                                                                 |

**Table 455: Output Ports (Continued)**

| Name   | Range | Description                                                                                                                                                                               |
|--------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JTCK   | 1     | JTAG Test Clock (connects to TCK), for internal logic to control non-disruptive re-configuration through JTAG port<br><br>Signal is coming from TCK input and going into the FPGA fabric. |
| TDO_OE | 1     | TAP Data Output Enable                                                                                                                                                                    |
| TDO    | 1     | Test Data Output, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly to the pad of device TDO pin.                                   |

**Table 456: Parameters**

| Name | Values                            | Description   |
|------|-----------------------------------|---------------|
| ER1  | "DISABLED" (default)<br>"ENABLED" | Enable JTAG 1 |
| ER2  | "DISABLED" (default)<br>"ENABLED" | Enable JTAG 2 |

## JTAGF

JTAG (Joint Test Action Group) Controller

Architectures Supported:

- ▶ LFMXO4

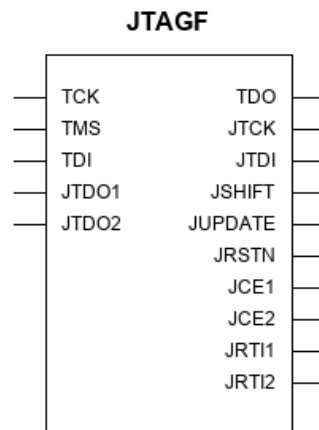


**Table 457: Input Ports**

| Name  | Range | Description             |
|-------|-------|-------------------------|
| TCK   | 1     | Test Clock              |
| TMS   | 1     | Test Mode Select        |
| TDI   | 1     | Test Data Input         |
| JTDO1 | 1     | JTAG Test Data Output 1 |
| JTDO2 | 1     | JTAG Test Data Output 2 |

**Table 458: Output Ports**

| Name    | Range | Description          |
|---------|-------|----------------------|
| TDO     | 1     | Test Data Output     |
| JTDI    | 1     | JTAG Test Data Input |
| JTCK    | 1     | JTAG Test Clock      |
| JRTI1   | 1     | JTAG Run-Test/Idle 1 |
| JRTI2   | 1     | JTAG Run-Test/Idle 2 |
| JSHIFT  | 1     | JTAG Shift           |
| JRSTN   | 1     | JTAG Reset           |
| JUPDATE | 1     | JTAG Update.         |
| JCE1    | 1     | JTAG Clock Enable 1  |
| JCE2    | 1     | JTAG Clock Enable 2  |

**Table 459: Parameters**

| Name | Values                            | Description   |
|------|-----------------------------------|---------------|
| ER1  | "ENABLED" (default)<br>"DISABLED" | Enable JTAG 1 |
| ER2  | "ENABLED" (default)<br>"DISABLED" | Enable JTAG 2 |

**Description**

The JTAGF primitive is used to provide access to internal JTAG signals from within the FPGA fabric. This is used for some cores, such as REVEAL, and other purposes. It is not a component an ordinary user would normally use directly.

## JTAGH25

Supports hard JTAG operations

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

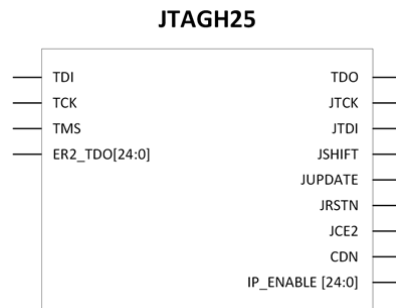


**Table 460: Input Ports**

| Name    | Range | Description                                                                                                                                                                                                       |
|---------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TDI     | 1     | Test Data Input, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TDI pin.                                                          |
| TCK     | 1     | Test Clock, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TCK pin.<br>Clocks registers and TAP Controller.                       |
| TMS     | 1     | Test Mode Select, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TMS pin.<br>Controls state machine switching for TAP Controller. |
| ER2_TDO | 24:0  | Input data to be shifted out of TDO.                                                                                                                                                                              |

**Table 461: Output Ports**

| Name      | Range | Description                                                                                                                                                                           |
|-----------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TDO       | 1     | Test Data Output, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly to the pad of device TDO pin.                               |
| JTCK      | 1     | JTAG Test Clock (connects to TCK), for internal logic to control non-disruptive re-configuration through JTAG port<br>Signal is coming from TCK input and going into the FPGA fabric. |
| JTDI      | 1     | JTAG Test Data Input, for internal logic to control non-disruptive re-configuration through JTAG port<br>Signal is coming from TDI input and going into the FPGA fabric.              |
| JSHIFT    | 1     | JTAG Shift.<br>Signal goes high when TAP Controller State is Shift-DR.                                                                                                                |
| JUPDATE   | 1     | JTAG Update.<br>Signal goes high when TAP controller state is Update-DR.                                                                                                              |
| JRSTN     | 1     | JTAG ResetN<br>Active low reset signal. Set low initially and then remains high after initialization.                                                                                 |
| JCE2      | 1     | JTAG Clock Enable two                                                                                                                                                                 |
| CDN       | 1     | JTAG RTI1                                                                                                                                                                             |
| IP_ENABLE | 24:0  | JTAG RTI2                                                                                                                                                                             |

**Table 462: Parameters**

| Name          | Values    | Description                     |
|---------------|-----------|---------------------------------|
| LSCC_FAMILY   | "AVANT"   | String in both Verilog and VHDL |
| JTAGHUB_ID    | "0x43"    | String in both Verilog and VHDL |
| IP_ENABLE_VAL | "0x00000" | String in both Verilog and VHDL |
| HUB_00        | "0b0"     | String in both Verilog and VHDL |
| HUB_01        | "0b0"     | String in both Verilog and VHDL |
| HUB_02        | "0b0"     | String in both Verilog and VHDL |
| HUB_03        | "0b0"     | String in both Verilog and VHDL |
| HUB_04        | "0b0"     | String in both Verilog and VHDL |
| HUB_05        | "0b0"     | String in both Verilog and VHDL |

**Table 462: Parameters (Continued)**


| <b>Name</b> | <b>Values</b> | <b>Description</b>              |
|-------------|---------------|---------------------------------|
| HUB_06      | "0b0"         | String in both Verilog and VHDL |
| HUB_07      | "0b0"         | String in both Verilog and VHDL |
| HUB_08      | "0b0"         | String in both Verilog and VHDL |
| HUB_09      | "0b0"         | String in both Verilog and VHDL |
| HUB_10      | "0b0"         | String in both Verilog and VHDL |
| HUB_11      | "0b0"         | String in both Verilog and VHDL |
| HUB_12      | "0b0"         | String in both Verilog and VHDL |
| HUB_13      | "0b0"         | String in both Verilog and VHDL |
| HUB_14      | "0b0"         | String in both Verilog and VHDL |
| HUB_15      | "0b0"         | String in both Verilog and VHDL |
| HUB_16      | "0b0"         | String in both Verilog and VHDL |
| HUB_17      | "0b0"         | String in both Verilog and VHDL |
| HUB_18      | "0b0"         | String in both Verilog and VHDL |
| HUB_19      | "0b0"         | String in both Verilog and VHDL |
| HUB_20      | "0b0"         | String in both Verilog and VHDL |
| HUB_21      | "0b0"         | String in both Verilog and VHDL |
| HUB_22      | "0b0"         | String in both Verilog and VHDL |
| HUB_23      | "0b0"         | String in both Verilog and VHDL |
| HUB_24      | "0b0"         | String in both Verilog and VHDL |

## JTAGH25SOFT

Supports soft JTAG operations

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

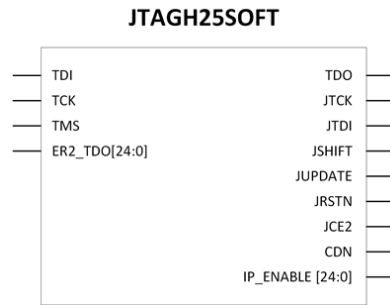**Table 463: Input Ports**

| Name    | Range | Description                                                                                                                                                                                                       |
|---------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TDI     | 1     | TAP Data Input                                                                                                                                                                                                    |
| TCK     | 1     | Test Clock, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TCK pin.<br>Clocks registers and TAP Controller.                       |
| TMS     | 1     | Test Mode Select, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly from the pad of device TMS pin.<br>Controls state machine switching for TAP Controller. |
| ER2_TDO | 24:0  | Input data to be shifted out of TDO                                                                                                                                                                               |

**Table 464: Output Ports**

| Name    | Range | Description                                                                                                                                                              |
|---------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TDO     | 1     | Test Data Output, one of the pins for the Test Access Port (TAP), JTAG serial interface to the device, connected directly to the pad of device TDO pin.                  |
| JTCK    | 1     | JTAG Clock                                                                                                                                                               |
| JTDI    | 1     | JTAG Test Data Input, for internal logic to control non-disruptive re-configuration through JTAG port<br>Signal is coming from TDI input and going into the FPGA fabric. |
| JSHIFT  | 1     | JTAG Shift.<br>Signal goes high when TAP Controller State is Shift-DR.                                                                                                   |
| JUPDATE | 1     | JTAG Update.<br>Signal goes high when TAP controller state is Update-DR.                                                                                                 |

**Table 464: Output Ports (Continued)**

| Name      | Range | Description                                                                                           |
|-----------|-------|-------------------------------------------------------------------------------------------------------|
| JRSTN     | 1     | JTAG ResetN<br>Active low reset signal. Set low initially and then remains high after initialization. |
| JCE2      | 1     | JTAG Clock Enable two                                                                                 |
| CDN       | 1     | JTAG RTI1                                                                                             |
| IP_ENABLE | 24:0  | JTAG RTI2                                                                                             |

**Table 465: Parameters**

| Name          | Values    | Description                     |
|---------------|-----------|---------------------------------|
| LSCC_FAMILY   | "AVANT"   | String in both Verilog and VHDL |
| JTAGHUB_ID    | "0x43"    | String in both Verilog and VHDL |
| IP_ENABLE_VAL | "0x00000" | String in both Verilog and VHDL |
| HUB_00        | "0b0"     | String in both Verilog and VHDL |
| HUB_01        | "0b0"     | String in both Verilog and VHDL |
| HUB_02        | "0b0"     | String in both Verilog and VHDL |
| HUB_03        | "0b0"     | String in both Verilog and VHDL |
| HUB_04        | "0b0"     | String in both Verilog and VHDL |
| HUB_05        | "0b0"     | String in both Verilog and VHDL |
| HUB_06        | "0b0"     | String in both Verilog and VHDL |
| HUB_07        | "0b0"     | String in both Verilog and VHDL |
| HUB_08        | "0b0"     | String in both Verilog and VHDL |
| HUB_09        | "0b0"     | String in both Verilog and VHDL |
| HUB_10        | "0b0"     | String in both Verilog and VHDL |
| HUB_11        | "0b0"     | String in both Verilog and VHDL |
| HUB_12        | "0b0"     | String in both Verilog and VHDL |
| HUB_13        | "0b0"     | String in both Verilog and VHDL |
| HUB_14        | "0b0"     | String in both Verilog and VHDL |
| HUB_15        | "0b0"     | String in both Verilog and VHDL |
| HUB_16        | "0b0"     | String in both Verilog and VHDL |
| HUB_17        | "0b0"     | String in both Verilog and VHDL |
| HUB_18        | "0b0"     | String in both Verilog and VHDL |



**Table 465: Parameters (Continued)**


| Name   | Values | Description                     |
|--------|--------|---------------------------------|
| HUB_19 | "0b0"  | String in both Verilog and VHDL |
| HUB_20 | "0b0"  | String in both Verilog and VHDL |
| HUB_21 | "0b0"  | String in both Verilog and VHDL |
| HUB_22 | "0b0"  | String in both Verilog and VHDL |
| HUB_23 | "0b0"  | String in both Verilog and VHDL |
| HUB_24 | "0b0"  | String in both Verilog and VHDL |

## L6MUX21

2 to 1 Mux

Architectures Supported:

▶ LFMXO4

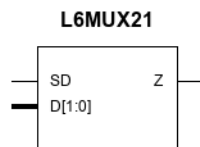**Table 466: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| SD   | 1     | Data select |
| D0   | 1     | Data input  |
| D1   | 1     | Data input  |

**Table 467: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 1     | Multiplication result |

## LSOSC

Low-frequency oscillator. Generates 10-kHz nominal clock, +/- 10 percent. Can drive global clock network or fabric routing.

Architectures supported:

- ▶ iCE40 UltraPlus

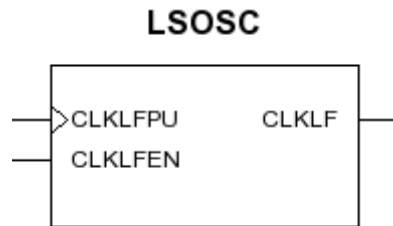


**Table 468: Input Ports**

| Name    | Description                                                                                      |
|---------|--------------------------------------------------------------------------------------------------|
| CLKLFPU | Power up the oscillator. After power up, output will be stable after 100 $\mu$ s. Active high.   |
| CLKLFEN | Enable the clock output. Enable should be low for the 100- $\mu$ s power-up period. Active high. |

**Table 469: Output Ports**

| Name  | Description       |
|-------|-------------------|
| CLKLF | Oscillator output |


SAME AS: SB\_LFOSC

## LSOSC1P8V

Low-frequency oscillator. Generates 10-kHz nominal clock, +/- 10 percent. Can drive global clock network or fabric routing. For use when VPP\_2V5 is connected to a voltage below 2.3 V.

Architectures supported:

- ▶ iCE40 UltraPlus

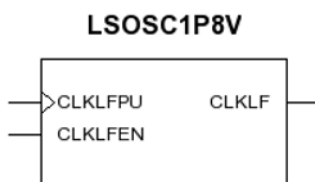**Table 470: Input Ports**

| Name    | Description                                                                                      |
|---------|--------------------------------------------------------------------------------------------------|
| CLKLFPU | Power up the oscillator. After power up, output will be stable after 100 $\mu$ s. Active high.   |
| CLKLFEN | Enable the clock output. Enable should be low for the 100- $\mu$ s power-up period. Active high. |

**Table 471: Output Ports**

| Name  | Description       |
|-------|-------------------|
| CLKLF | Oscillator output |

## LSOSC\_CORE

Low-frequency oscillator. Generates 10-kHz nominal clock, +/- 10 percent. Can drive global clock network or fabric routing.

Architectures supported:

- ▶ iCE40 UltraPlus

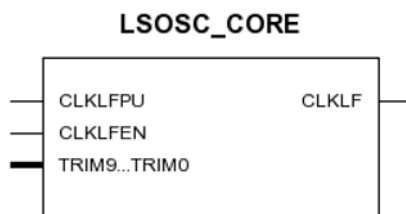


**Table 472: Input Ports**

| Name          | Description                                                                                      |
|---------------|--------------------------------------------------------------------------------------------------|
| CLKLFPU       | Power up the oscillator. After power up, output will be stable after 100 $\mu$ s. Active high.   |
| CLKLFEN       | Enable the clock output. Enable should be low for the 100- $\mu$ s power-up period. Active high. |
| TRIM9...TRIM0 | Trim bit ports to trim output PWM signals. Pre-set value.                                        |

**Table 473: Output Ports**

| Name  | Description       |
|-------|-------------------|
| CLKLF | Oscillator output |

**Table 474: Parameters**


| Name         | Values                           | Description                                                                                                |
|--------------|----------------------------------|------------------------------------------------------------------------------------------------------------|
| FABRIC_TRIME | "DISABLE" (default),<br>"ENABLE" | Trim bits source selection. ENABLE - Trim bits sourced from Fabric, DISABLE - Trim bits sourced from NVCM. |

## LVDSOB

LVDS Output Buffer

Architectures Supported:

- ▶ LFMXO4

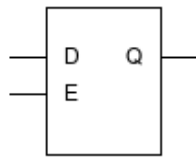**LVDSOB****Table 475: Input Ports**

| Name | Range | Description  |
|------|-------|--------------|
| D    | 1     | Data input D |
| E    | 1     | Data input E |

**Table 476: Output Ports**

| Name | Range | Description   |
|------|-------|---------------|
| Q    | 1     | Data output Q |

**Description**

The LVDSOB primitive is used to support post-PAR simulation of Dynamic Bank Controller. The Dynamic Bank Controller signals to the IO are hardwired and cannot be changed for the simulation, so the LVDSOB and [INRDB](#) primitives are defined to support the simulation.

For more information, refer to the related technical note on the Lattice web site.


**LUT4**

4-Input Look-Up Table

Architectures supported:

- ▶ iCE40 UltraPlus
- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C

## ▶ UT24CP

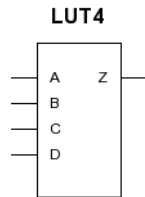**Table 477: Input Ports**

| Name | Description |
|------|-------------|
| A    | LUT input A |
| B    | LUT input B |
| C    | LUT input C |
| D    | LUT input D |

**Table 478: Output Ports**

| Name | Description  |
|------|--------------|
| Z    | LUT output Z |

**Table 479: Parameters**

| Name | Values   | Description |
|------|----------|-------------|
| INIT | "0x0000" | Interface   |

**Note:**

The programming of the LUT4 (that is, the 0 or 1 value of each memory location within the LUT4) is determined by the value assigned with INIT. The value is expressed in hexadecimal code. Highest memory locations are in the most significant hex digit, the lowest in the least significant digit.

**Table 480: Truth Table**

| Inputs |   |   |   | Output  |
|--------|---|---|---|---------|
| D      | C | B | A | Z       |
| 0      | 0 | 0 | 0 | INIT[0] |
| 0      | 0 | 0 | 1 | INIT[1] |
| 0      | 0 | 1 | 0 | INIT[2] |
| 0      | 0 | 1 | 1 | INIT[3] |

**Table 480: Truth Table (Continued)**


| Inputs |   |   |   | Output   |
|--------|---|---|---|----------|
| D      | C | B | A | Z        |
| 0      | 1 | 0 | 0 | INIT[4]  |
| 0      | 1 | 0 | 1 | INIT[5]  |
| 0      | 1 | 1 | 0 | INIT[6]  |
| 0      | 1 | 1 | 1 | INIT[7]  |
| 1      | 0 | 0 | 0 | INIT[8]  |
| 1      | 0 | 0 | 1 | INIT[9]  |
| 1      | 0 | 1 | 0 | INIT[10] |
| 1      | 0 | 1 | 1 | INIT[11] |
| 1      | 1 | 0 | 0 | INIT[12] |
| 1      | 1 | 0 | 1 | INIT[13] |
| 1      | 1 | 1 | 0 | INIT[14] |
| 1      | 1 | 1 | 1 | INIT[15] |

## LUT5

5-Input Look Up Table

Architectures Supported:

▶ LFMXO4

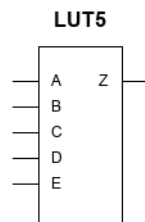**Table 481: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A    | 1     | LUT input A |
| B    | 1     | LUT input B |
| C    | 1     | LUT input C |

**Table 481: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D    | 1     | LUT input D |
| E    | 1     | LUT input E |

**Table 482: Output Ports**

| Name | Range | Description  |
|------|-------|--------------|
| Z    | 1     | LUT output Z |

**Table 483: Parameters**

| Name                 | Values   | Description |
|----------------------|----------|-------------|
| <a href="#">INIT</a> | "0x0000" | Interface   |

**Description**

LUT5 defines the programmed state of a LUT5 primitive of a Slice. While this primitive is typically targeted by logic synthesis tools, it can also be instantiated in HDL source for intimate control over LUT5 programming. The contents of the look up table are addressed by the 5 input pins to access 1 of 32 locations.

The programming of the LUT5 (that is, the 0 or 1 value of each memory location within the LUT5) is determined by the value assigned with INIT. The value is expressed in hexadecimal code. Highest memory locations are in the most significant hex digit, the lowest in the least significant digit.

For more information on INIT attribute usage, see the [LUT4](#) topic.


**LUT6**

6-Input Look Up Table

Architectures Supported:

- ▶ LFMXO4

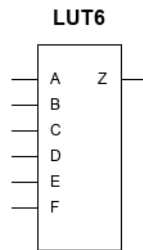

**Table 484: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A    | 1     | LUT input A |
| B    | 1     | LUT input B |
| C    | 1     | LUT input C |
| D    | 1     | LUT input D |
| E    | 1     | LUT input E |
| F    | 1     | LUT input F |

**Table 485: Output Ports**

| Name | Range | Description  |
|------|-------|--------------|
| Z    | 1     | LUT output Z |

**Table 486: Parameters**

| Name                 | Values               | Description |
|----------------------|----------------------|-------------|
| <a href="#">INIT</a> | "0x0000000000000000" | Interface   |

**Description**

LUT6 defines the programmed state of a LUT6 primitive of a Slice. While this primitive is typically targeted by logic synthesis tools, it can also be instantiated in HDL source for intimate control over LUT6 programming. The contents of the look up table are addressed by the 6 input pins to access 1 of 64 locations.

The programming of the LUT6 (that is, the 0 or 1 value of each memory location within the LUT6) is determined by the value assigned with INIT. The value is expressed in hexadecimal code. Highest memory locations are in the most significant hex digit, the lowest in the least significant digit.

For more information on INIT attribute usage, see the [LUT4](#) topic.

## LUT7

7-Input Look Up Table

Architectures Supported:

▶ LFMXO4

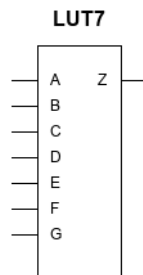


**Table 487: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A    | 1     | LUT input A |
| B    | 1     | LUT input B |
| C    | 1     | LUT input C |
| D    | 1     | LUT input D |
| E    | 1     | LUT input E |
| F    | 1     | LUT input F |
| G    | 1     | LUT input G |

**Table 488: Output Ports**

| Name | Range | Description  |
|------|-------|--------------|
| Z    | 1     | LUT output Z |

**Table 489: Parameters**

| Name                 | Values                               | Description |
|----------------------|--------------------------------------|-------------|
| <a href="#">INIT</a> | "0x00000000000000000000000000000000" | Interface   |

### Description

LUT7 defines the programmed state of a LUT7 primitive of a Slice. While this primitive is typically targeted by logic synthesis tools, it can also be instantiated in HDL source for intimate control over LUT7 programming. The contents of the look up table are addressed by the 7 input pins to access 1 of 128 locations.

The programming of the LUT7 (that is, the 0 or 1 value of each memory location within the LUT7) is determined by the value assigned with INIT. The value is expressed in hexadecimal code. Highest memory locations are in the most significant hex digit, the lowest in the least significant digit.

For more information on INIT attribute usage, see the [LUT4](#) topic.

## LUT8

8-Input Look Up Table

Architectures Supported:

▶ LFMXO4

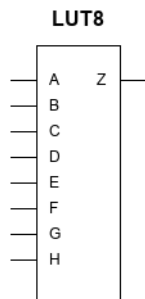


**Table 490: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A    | 1     | LUT input A |
| B    | 1     | LUT input B |
| C    | 1     | LUT input C |
| D    | 1     | LUT input D |
| E    | 1     | LUT input E |
| F    | 1     | LUT input F |
| G    | 1     | LUT input G |
| H    | 1     | LUT input H |


| Name | Range | Description  |
|------|-------|--------------|
| Z    | 1     | LUT output Z |

| Name | Values                                                                     | Description |
|------|----------------------------------------------------------------------------|-------------|
| INIT | "0x00000000000000000000<br>0000000000000000000000<br>00000000000000000000" | Interface   |

LUT8 defines the programmed state of a LUT8 primitive of a Slice. While this primitive is typically targeted by logic synthesis tools, it can also be instantiated in HDL source for intimate control over LUT8 programming. The contents of the look up table are addressed by the 8 input pins to access 1 of 256 locations.

DSP block capable of being configured as a multiplier, adder, subtractor, accumulator, multiply-adder, or multiply-subtractor.

▶ iCE40 UltraPlus

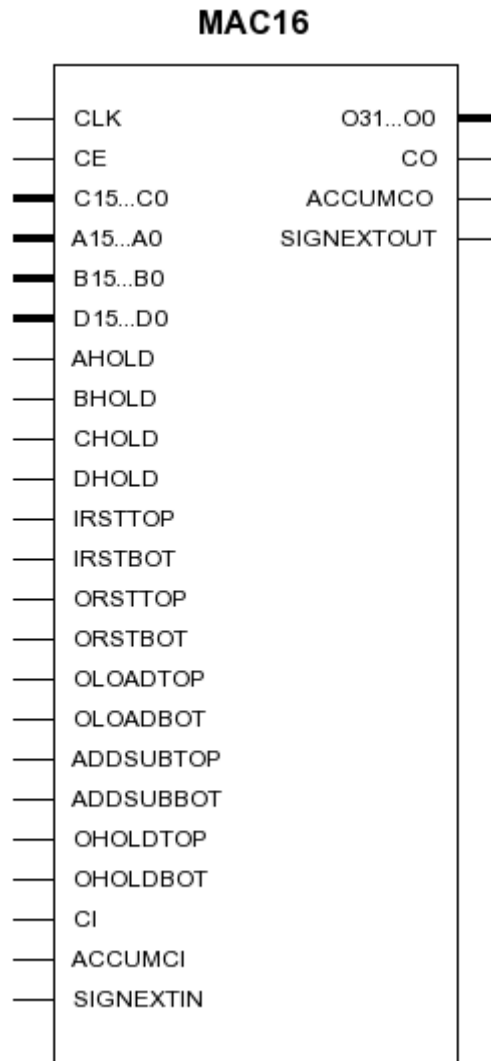**Table 493: Input Ports**

| Name     | Description                                                                                         |
|----------|-----------------------------------------------------------------------------------------------------|
| CLK      | Clock input. Applies to all clocked elements in the MAC16A block.                                   |
| CE       | Clock Enable input. Active High.                                                                    |
| C15...C0 | Input to the C Register/Direct input to the adder accumulator.                                      |
| A15...A0 | Input to the A Register/Direct input to the multiplier blocks/Direct input to the adder accumulator |
| B15...B0 | Input to the B Register/Direct input to the multiplier blocks/Direct input to the adder accumulator |
| D15...D0 | Input to the D Register/Direct input to the adder accumulator.                                      |

**Table 493: Input Ports (Continued)**

| <b>Name</b> | <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AHOLD       | Hold A registers Data. Controls data flow into the input register A. Active High. 0 - Update (load) register at next active clock edge. 1 - Hold (retain) current register value, regardless of clock.                                                                                                                                                                                                                                        |
| BHOLD       | Hold B registers Data. Controls data flow into the B input register. Active High. 0 - Update (load) register at next active clock edge. 1 - Hold (retain) current register value, regardless of clock.                                                                                                                                                                                                                                        |
| CHOLD       | Hold C registers Data. Controls data flow into the C input register. Active High. 0 - Update (load) register at next active clock edge. 1 - Hold (retain) current register value, regardless of clock.                                                                                                                                                                                                                                        |
| DHOLD       | Hold D registers Data. Controls data flow into the D input register. Active High. 0 - Update (load) register at next active clock edge. 1 - Hold (retain) current register value, regardless of clock.                                                                                                                                                                                                                                        |
| IRSTTOP     | Reset input to the A and C input registers, and the pipeline registers in the upper half of the multiplier block. Active High.                                                                                                                                                                                                                                                                                                                |
| IRSTBOT     | Reset input to the B and C input registers, and the pipeline registers in the lower half of the multiplier block, and the 32-bit multiplier result pipeline register. Active High.                                                                                                                                                                                                                                                            |
| ORSTTOP     | Reset the high-order bits of the accumulator register ([31:16]). Active High.                                                                                                                                                                                                                                                                                                                                                                 |
| ORSTBOT     | Reset the low-order accumulator register bits ([15:0]). Active High.                                                                                                                                                                                                                                                                                                                                                                          |
| OLOADTOP    | High-order Accumulator Register Accumulate/Load. Controls whether the accumulator register accepts the output of the adder/subtractor or whether the register is loaded with the value from Input C (or Register C, if configured). 0 - Accumulator Register [31:16] loaded with output from adder/subtractor. 1 - Accumulator Register [31:16] loaded with Input C or Register C, depending on primitive parameter value.                    |
| OLOADBOT    | Low-order Accumulator Register Accumulate/Load. Controls whether the low-order accumulator register bits (15:0] accepts the output of the adder/subtractor or whether the register is loaded with the value from Input D (or Register D, if configured). 0 - Accumulator Register [15:0] loaded with output from adder/subtractor. 1 - Accumulator Register [15:0] loaded with Input D or Register D, depending on primitive parameter value. |
| ADDSUBTOP   | High-order Add/Subtract. Controls whether the adder/subtractor adds or subtracts. 0 - Add: $W+X+HCl$ 1 - Subtract: $W-X-HCl$ .                                                                                                                                                                                                                                                                                                                |
| ADDSUBBOT   | Low-order Add/Subtract. Controls whether the adder/subtractor adds or subtracts. 0 - Add: $Y+Z+LCI$ 1 - Subtract: $Y-Z-LCI$ .                                                                                                                                                                                                                                                                                                                 |
| OHOLDTOP    | High-order Accumulator Register Hold. Controls data flow into the high-order ([31:16]) bits of the accumulator. 0 - Update (load) register at next active clock edge. 1 - Hold (retain) current register value, regardless of clock.                                                                                                                                                                                                          |

**Table 493: Input Ports (Continued)**

| Name      | Description                                                                                                                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OHOLDBOT  | Low-order Accumulator Register Hold. Controls data flow into the high-order ([15:0]) bits of the accumulator. 0 - Update (load) register at next active clock edge. 1 - Hold (retain) current register value, regardless of clock. |
| CI        | Carry/borrow input from lower logic tile.                                                                                                                                                                                          |
| ACCUMCI   | Cascade carry/borrow input from lower MAC16 block.                                                                                                                                                                                 |
| SIGNEXTIN | Sign extension input from lower MAC16 block.                                                                                                                                                                                       |

**Table 494: Output Ports**

| Name       | Description                                                                        |
|------------|------------------------------------------------------------------------------------|
| O31...O0   | 32-bit MAC16 output.                                                               |
| O[31:0]    | 32-bit result of a 16x16 multiply operation or a 32-bit adder/accumulate function. |
| O[31:16]   | 16-bit result of an 8x8 multiply operation or a 32-bit adder/accumulate function.  |
| O[15:0]    | 16-bit result of an 8x8 multiply operation or a 32-bit adder/accumulate function). |
| CO         | Carry/borrow output to higher logic tile.                                          |
| ACCUMCO    | Cascade carry/borrow output to higher MAC16 block.                                 |
| SIGNEXTOUT | Sign extension output to higher MAC16 block.                                       |


**Table 495: Parameters**

| Name             | Values                   | Description                                                           |
|------------------|--------------------------|-----------------------------------------------------------------------|
| NEG_TRIGGER      | "0'b0" (default), "0'b1" | Controls input clock polarity.                                        |
| A_REG            | "0'b0" (default), "0'b1" | Input A register Control, 0'b1 = registered (C1)                      |
| B_REG            | "0'b0" (default), "0'b1" | Input B register Control, 0'b1 = registered (C2)                      |
| C_REG            | "0'b0" (default), "0'b1" | Input C register Control, 0'b1 = registered (C0)                      |
| D_REG            | "0'b0" (default), "0'b1" | Input D register Control, 0'b1 = registered (C3)                      |
| TOP_8x8_MULT_REG | "0'b0" (default), "0'b1" | Top 8x8 multiplier output register control, 0'b1 = registered (C4)    |
| BOT_8x8_MULT_REG | "0'b0" (default), "0'b1" | Bottom 8x8 multiplier output register control, 0'b1 = registered (C5) |

**Table 495: Parameters (Continued)**

| Name                     | Values                                       | Description                                                                                                                                                                                  |
|--------------------------|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PIPELINE_16x16_MULT_REG1 | "0'b0" (default), "0'b1"                     | 16x16 intermediate register control, 0'b1 = registered (C6)                                                                                                                                  |
| PIPELINE_16x16_MULT_REG2 | "0'b0" (default), "0'b1"                     | 6x16 multiplier pipeline register control, 0'b1 = registered (C7)                                                                                                                            |
| TOPOUTPUT_SELECT         | "0'b00" (default), "0'b01", "0'b10", "0'b11" | Selects top output O[31:16], 0'b00 = top accumulator, 0'b01 = top accumulator (registered), 0'b10 = top mult8x8, 0'b11 = mult16x16 (C8, C9)                                                  |
| TOPADDSUB_LOWERINPUT     | "0'b00" (default), "0'b01", "0'b10", "0'b11" | Selects lower input for the upper adder/subtractor, 0'b00 = input A, 0'b01 = top mult8x8, 0'b10 = mult16x16, 0'b11 = sign extend from lower adder/subtractor (C10, C11)                      |
| TOPADDSUB_UPPERINPUT     | "0'b0" (default), "0'b1"                     | Selects upper input for the upper adder/subtractor, 0'b0 = accumulate, 0'b1 = input C (C12)                                                                                                  |
| TOPADDSUB_CARRYSELECT    | "0'b00" (default), "0'b01", "0'b10", "0'b11" | Carry/borrow input select to upper adder/subtractor, 0'b00 = constant 0, 0'b01 = constant 1, 0'b10 = carry from lower adder/subtractor, 0'b11 = carry from lower adder/subtractor (C13, C14) |
| BOTOUTPUT_SELECT         | "0'b00" (default), "0'b01", "0'b10", "0'b11" | Selects lower output O[15:0], 0'b00 = bottom adder/subtractor, 0'b01 = bottom adder/subtractor (registered), 0'b10 = bottom mult8x8, 0'b11 = mult16x16 (C15, C16)                            |
| BOTADDSUB_LOWERINPUT     | "0'b00" (default), "0'b01", "0'b10", "0'b11" | Selects lower input for the lower adder/subtractor, 0'b00 = input B, 0'b01 = bottom mult8x8, 0'b10 = mult16x16, 0'b11 = sign extend from previous MAC16 (C17, C18)                           |
| BOTADDSUB_UPPERINPUT     | "0'b0" (default), "0'b1"                     | Selects upper input for the lower adder/subtractor, 0'b0 = accumulate, 0'b1 = input C (C19)                                                                                                  |
| BOTADDSUB_CARRYSELECT    | "0'b00" (default), "0'b01", "0'b10", "0'b11" | Carry/borrow input select to lower adder/subtractor, 0'b00 = constant 0, 0'b01 = constant 1, 0'b10 = ACCUMCI, 0'b11 = CI (C20, C21)                                                          |
| MODE_8x8                 | "0'b0" (default), "0'b1"                     | Selects 8x8 Multiplier mode and 8x8 Low-Power Multiplier Blocking Option, 0'b1 = 8x8 mode (C22)                                                                                              |
| A_SIGNED                 | "0'b0" (default), "0'b1"                     | Indicates whether multiplier input A is signed or unsigned, 0'b1 = signed                                                                                                                    |
| B_SIGNED                 | "0'b0" (default), "0'b1"                     | Indicates whether multiplier input B is signed or unsigned. 0'b1 = signed                                                                                                                    |

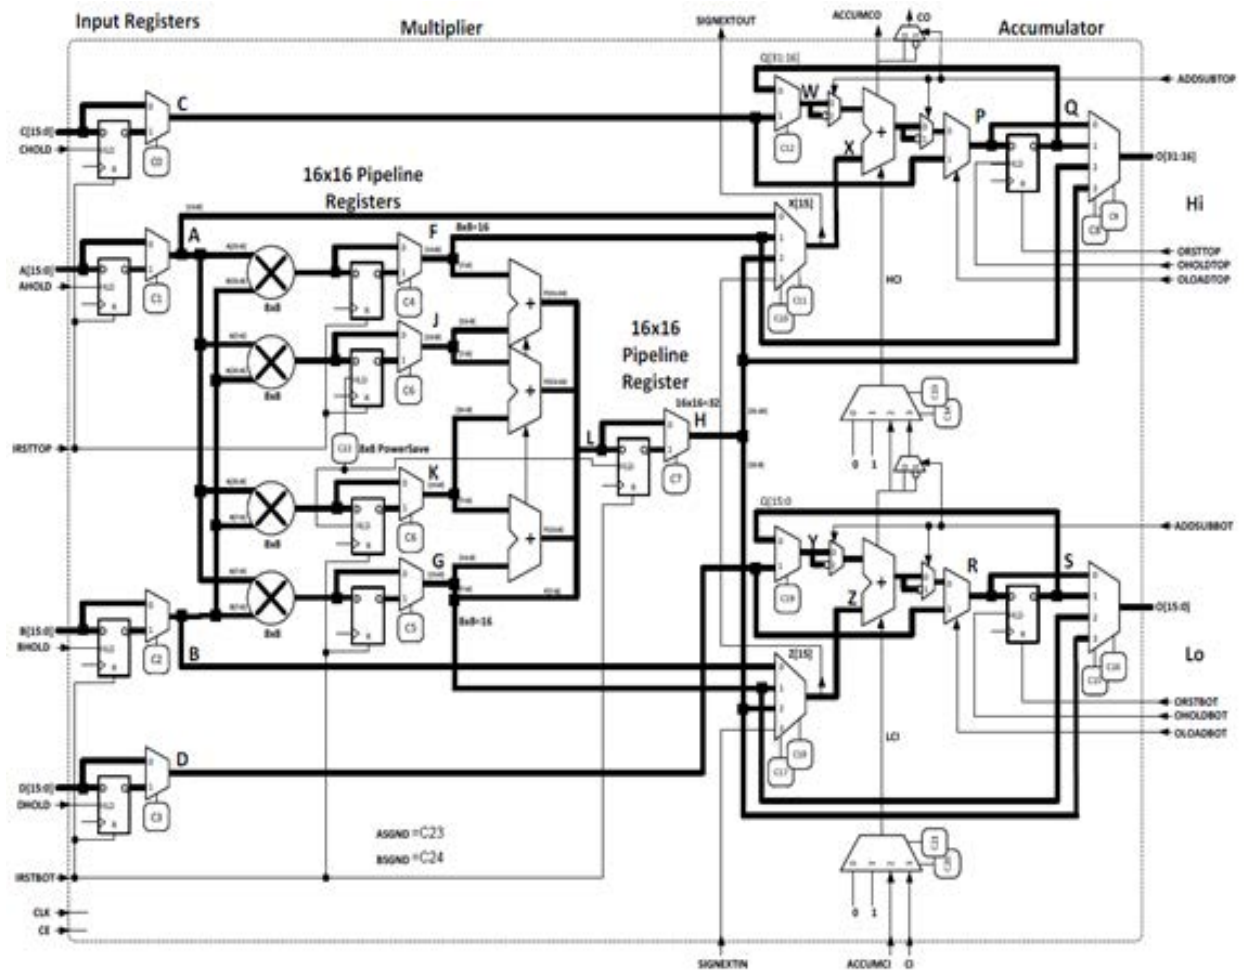

**Note:**

SAME AS: SB\_MAC16

**Rules & Restrictions:**

As noted by pin description, ACCUMCO and SIGNEXTIN can only come from previous MAC16's ACCUMCO and SIGNEXTOUT.

Failure to do so will cause connectivity DRC error.

If MODE\_8x8 is 1, then PIPELINE\_16x16\_MULT\_REG1 and PIPELINE\_16x16\_MULT\_REG2 must be 0'b0.

**Note:**

If the operation is 8x8, then these PIPELINE attributes are irrelevant. However, we have to be strict because we don't know the intended use of the DSP. If operation is truly 16x16, then this illegal combination setting would cause an incorrect operation.

## MIPI

Soft MIPI Interface Block

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

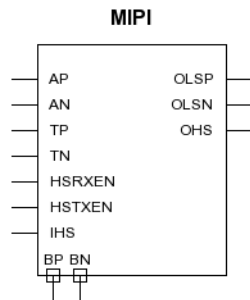


**Table 496: Input Ports**

| Name   | Range | Description                                             |
|--------|-------|---------------------------------------------------------|
| AP     | 1     | LP Data for P-port                                      |
| AN     | 1     | LP Data for N-port                                      |
| TP     | 1     | LP Tri-sate control for P-port                          |
| TN     | 1     | LP Tri-sate control for N-por                           |
| HSRXEN | 1     | HSRXEN for MIPI RX: 0 disable; 1 enable                 |
| HSTXEN | 1     | HSTXEN for MIPI TX to support BIDI: 0 disable, 1 enable |
| IHS    | 1     | Internal Horizontal Sync                                |

**Table 497: Output Ports**

| Name | Range | Description                      |
|------|-------|----------------------------------|
| OLSP | 1     | Low Power MIPI output for P-port |
| OLSN | 1     | Low Power MIPI output for N-port |
| OHS  | 1     | High Speed output                |

**Table 498: Bidirectional Ports**

| Name | Range | Description      |
|------|-------|------------------|
| BP   | 1     | IOPAD for P-por  |
| BN   | 1     | IOPAD for N-port |

**Table 499: Parameters**


| Name    | Values      | Description                                                                                           |
|---------|-------------|-------------------------------------------------------------------------------------------------------|
| MIPI_ID | 0 (default) | The MIPI_ID is used to place 2 PIO in a pair of PIO.<br>0 is not used for MIPI<br>>0 is for MIPI pair |

## MIPIA

Soft version of bidirectional MIPI

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

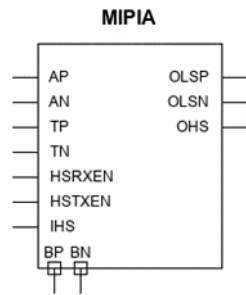**Table 500: Input Ports**

| Name   | Range | Type    | Description                                             |
|--------|-------|---------|---------------------------------------------------------|
| BP     | 1     | Data    | IOPAD for P-port                                        |
| BN     | 1     | Data    | IOPAD for N-port                                        |
| AP     | 1     | Data    | LP Data for P-port                                      |
| AN     | 1     | Data    | LP Data for N-port                                      |
| TP     | 1     | Control | LP Tri-sate control for P-port                          |
| TN     | 1     | Control | LP Tri-sate control for N-port                          |
| HSRXEN | 1     | Control | HSRXEN for MIPI RX: 0 disable; 1 enable                 |
| HSTXEN | 1     | Control | HSTXEN for MIPI TX to support BIDI: 0 disable, 1 enable |
| IHS    | 1     | Data    | Internal Horizontal Sync                                |

**Table 501: Output Ports**

| Name | Range | Type  | Description                      |
|------|-------|-------|----------------------------------|
| OLSP | 1     | Clock | Low Power MIPI output for P-port |
| OLSN | 1     | Clock | Low Power MIPI output for N-port |
| OHS  | 1     | Clock | High Speed output                |

**Table 502: Parameters**

| Name    | Values                       | Description                                                                                           |
|---------|------------------------------|-------------------------------------------------------------------------------------------------------|
| MIPI_ID | "0" (default)<br>Any integer | The MIPI_ID is used to place 2 PIO in a pair of PIO.<br>0 is not used for MIPI<br>>0 is for MIPI pair |

## MULT18X18

18x18 Multiplier with Optional Input/Output Registers

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

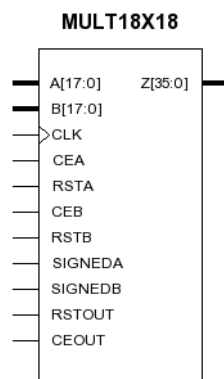


**Table 503: Input Ports**

| Name    | Range | Description           |
|---------|-------|-----------------------|
| A       | 17:0  | Operand A             |
| B       | 17:0  | Operand B             |
| CLK     | 1     | Clock                 |
| CEA     | 1     | Input A enable        |
| RSTA    | 1     | Input A reset         |
| CEB     | 1     | Input clock enable    |
| RSTB    | 1     | Input register reset  |
| SIGNEDA | 1     | Operand A signed      |
| SIGNEDB | 1     | Operand B signed      |
| RSTOUT  | 1     | Output register reset |
| CEOUT   | 1     | Output clock enable   |

**Table 504: Output Ports**


| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 35:0  | Multiplication result |

**Table 505: Parameters**

| Name      | Values                            | Description             |
|-----------|-----------------------------------|-------------------------|
| REGINPUTA | "REGISTER" (default)<br>"BYPASS"  | Register operand A      |
| REGINPUTB | "REGISTER" (default)<br>"BYPASS"  | Register operand B      |
| REGOUTPUT | "REGISTER" (default)<br>"BYPASS"  | Register output         |
| GSR       | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |
| RESETMODE | "SYNC" (default)                  | Reset type              |

**Note:**

Implements  $Z[35:0] = A[17:0] \times B[17:0]$ .

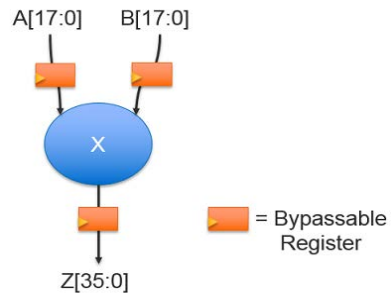

## MULT18X18A

18x18 Multiplier with Optional Input/Output Registers

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

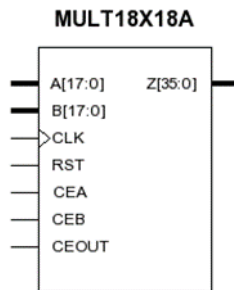


**Table 506: Input Ports**

| Name  | Range | Type         | Description                         |
|-------|-------|--------------|-------------------------------------|
| A     | 17:0  | Data         | Operand A                           |
| B     | 17:0  | Data         | Operand B                           |
| CLK   | 1     | Clock        | Clock                               |
| RST   | 1     | Reset        | Synchronous reset for all registers |
| CEA   | 1     | Clock Enable | Input A register clock enable       |
| CEB   | 1     | Clock Enable | Input B register clock enable       |
| CEOUT | 1     | Clock Enable | Output register clock enable        |

**Table 507: Output Ports**

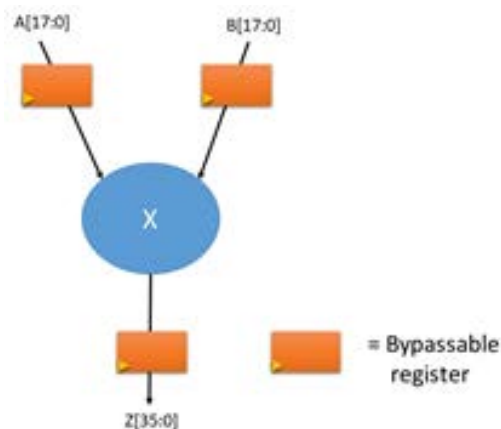
| Name | Range | Type    | Description           |
|------|-------|---------|-----------------------|
| Z    | 35:0  | Control | Multiplication result |

**Table 508: Parameters**

| Name      | Values                               | Description                            |
|-----------|--------------------------------------|----------------------------------------|
| REGINPUTA | "REGISTERED" (default)<br>"BYPASSED" | Register operand A                     |
| REGINPUTB | "REGISTERED" (default)<br>"BYPASSED" | Register operand B                     |
| REGOUTPUT | "REGISTERED" (default)<br>"BYPASSED" | Register output                        |
| RESETMODE | "SYNC" (default)<br>"ASYNC"          | Synchronous/asynchronous reset control |
| GSR       | "DISABLED" (default)<br>"ENABLED"    | Enable global set/reset                |

**Note:**

Implements the function  $Z[35:0] = A[17:0] * B[17:0]$

**MULT18X36**

18x36 Multiplier with Optional Input/Output Register



Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

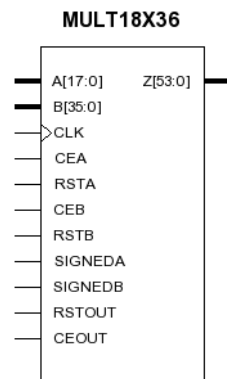


**Table 509: Input Ports**

| Name    | Range | Description           |
|---------|-------|-----------------------|
| A       | 17:0  | Operand A             |
| B       | 35:0  | Operand B             |
| CLK     | 1     | Clock                 |
| CEA     | 1     | Input clock enable    |
| RSTA    | 1     | Input register reset  |
| CEB     | 1     | Input clock enable    |
| RSTB    | 1     | Input register reset  |
| SIGNEDA | 1     | Operand A signed      |
| SIGNEDB | 1     | Operand B signed      |
| RSTOUT  | 1     | Output register reset |
| CEOUT   | 1     | Output clock enable   |

**Table 510: Output Ports**

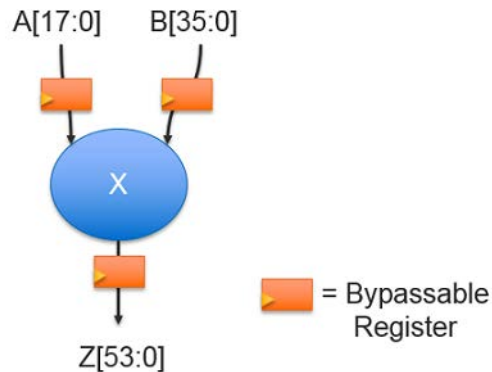
| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 53:0  | Multiplication result |

**Table 511: Parameters**

| Name      | Values                            | Description             |
|-----------|-----------------------------------|-------------------------|
| REGINPUTA | "REGISTER" (default)<br>"BYPASS"  | Register operand A      |
| REGINPUTB | "REGISTER" (default)<br>"BYPASS"  | Register operand B      |
| REGOUTPUT | "REGISTER" (default)<br>"BYPASS"  | Register output         |
| GSR       | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |
| RESETMODE | "SYNC" (default)                  | Reset type              |

**Note:**

Implements  $Z[53:0] = A[17:0] \times B[35:0]$ .


**MULT36X36**

36x36 Multiplier with Optional Input/Output Registers

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5

- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

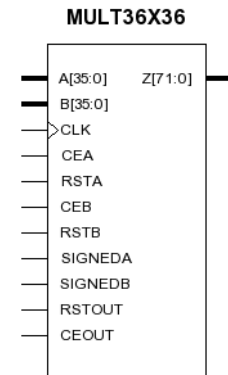**Table 512: Input Ports**

| Name    | Range | Description            |
|---------|-------|------------------------|
| A       | 35:0  | Operand A              |
| B       | 35:0  | Operand B              |
| CLK     | 1     | Clock                  |
| CEA     | 1     | Input A clock enable   |
| RSTA    | 1     | Input A register reset |
| CEB     | 1     | Input B clock enable   |
| RSTB    | 1     | Input B register reset |
| SIGNEDA | 1     | Operand A signed       |
| SIGNEDB | 1     | Operand B signed       |
| RSTOUT  | 1     | Output register reset  |
| CEOUT   | 1     | Output clock enable    |

**Table 513: Output Ports**

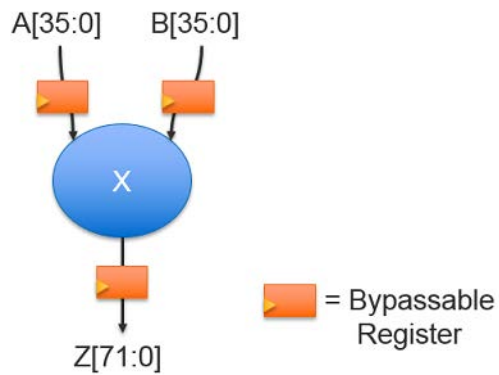
| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 71:0  | Multiplication result |

**Table 514: Parameters**

| Name      | Values                            | Description             |
|-----------|-----------------------------------|-------------------------|
| REGINPUTA | "REGISTER" (default)<br>"BYPASS"  | Register operand A      |
| REGINPUTB | "REGISTER" (default)<br>"BYPASS"  | Register operand B      |
| REGOUTPUT | "REGISTER" (default)<br>"BYPASS"  | Register output         |
| GSR       | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |
| RESETMODE | "SYNC" (default)                  | Reset type              |

**Note:**


Implements  $Z[71:0] = A[35:0] \times B[35:0]$ .

**MULT8X8**

8x8 Multiplier with Optional Input/Output Registers

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

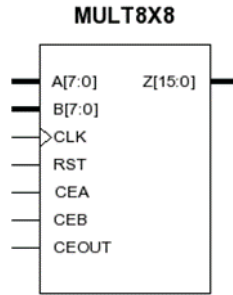**Table 515: Input Ports**

| Name  | Range | Type         | Description                         |
|-------|-------|--------------|-------------------------------------|
| A     | 7:0   | Data         | Operand A                           |
| B     | 7:0   | Data         | Operand B                           |
| CLK   | 1     | Clock        | Clock                               |
| RST   | 1     | Reset        | Synchronous reset for all registers |
| CEA   | 1     | Clock Enable | Input A register clock enable       |
| CEB   | 1     | Clock Enable | Input B register clock enable       |
| CEOUT | 1     | Clock Enable | Output register clock enable        |

**Table 516: Output Ports**

| Name | Range | Type    | Description           |
|------|-------|---------|-----------------------|
| Z    | 15:0  | Control | Multiplication result |

**Table 517: Parameters**

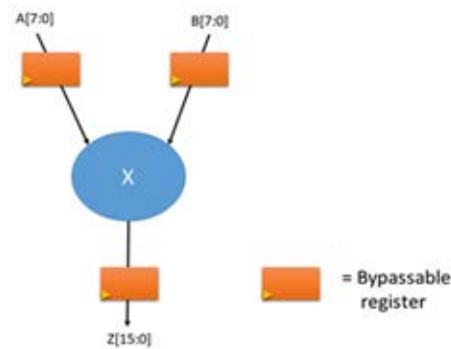
| Name      | Values                               | Description        |
|-----------|--------------------------------------|--------------------|
| REGINPUTA | "REGISTERED" (default)<br>"BYPASSED" | Register operand A |
| REGINPUTB | "REGISTERED" (default)<br>"BYPASSED" | Register operand B |

**Table 517: Parameters (Continued)**

| Name      | Values                               | Description                            |
|-----------|--------------------------------------|----------------------------------------|
| REGOUTPUT | "REGISTERED" (default)<br>"BYPASSED" | Register output                        |
| RESETMODE | "SYNC" (default)<br>"ASYNC"          | Synchronous/asynchronous reset control |
| GSR       | "DISABLED" (default)<br>"ENABLED"    | Enable global set/reset                |

**Note:**


Implements the function  $Z[15:0] = A[7:0] * B[7:0]$

**MULT9X9**

9x9 Multiplier with Optional Input/Output Registers

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

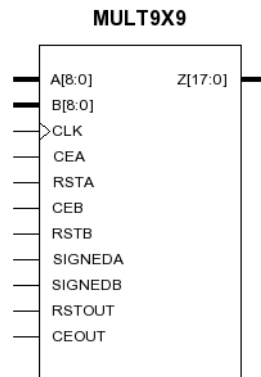**Table 518: Input Ports**

| Name    | Range | Description           |
|---------|-------|-----------------------|
| A       | 8:0   | Operand A             |
| B       | 8:0   | Operand B             |
| CLK     | 1     | Clock                 |
| CEA     | 1     | Input A clock enable  |
| RSTA    | 1     | Input A reset         |
| CEB     | 1     | Input B clock enable  |
| RSTB    | 1     | Input B reset         |
| SIGNEDA | 1     | Operand A signed      |
| SIGNEDB | 1     | Operand B signed      |
| RSTOUT  | 1     | Output register reset |
| CEOUT   | 1     | Output clock enable   |

**Table 519: Output Ports**

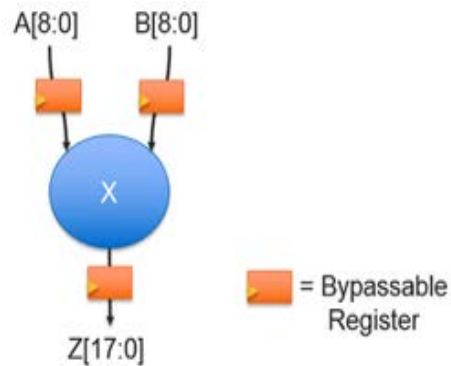
| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 17:0  | Multiplication result |

**Table 520: Parameters**

| Name      | Values                            | Description                                                                      |
|-----------|-----------------------------------|----------------------------------------------------------------------------------|
| REGINPUTA | "REGISTER" (default)<br>"BYPASS"  | Register operand A                                                               |
| REGINPUTB | "REGISTER" (default)<br>"BYPASS"  | Register operand B                                                               |
| REGOUTPUT | "REGISTER" (default)<br>"BYPASS"  | Register output                                                                  |
| GSR       | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset                                                          |
| RESETMODE | "SYNC" (default)                  | Synchronous/asynchronous reset control.<br>Reset release is always asynchronous. |

**Note:**

Implements  $Z[17:0] = A[8:0] \times B[8:0]$


**MULT9X9A**

9x9 Multiplier with Optional Input/Output Registers

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

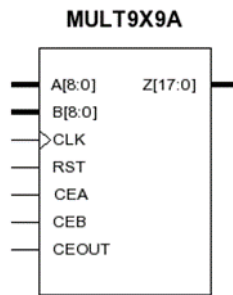

**Table 521: Input Ports**

| Name  | Range | Type         | Description                         |
|-------|-------|--------------|-------------------------------------|
| A     | 8:0   | Data         | Operand A                           |
| B     | 8:0   | Data         | Operand B                           |
| CLK   | 1     | Clock        | Clock                               |
| RST   | 1     | Reset        | Synchronous reset for all registers |
| CEA   | 1     | Clock Enable | Input A register clock enable       |
| CEB   | 1     | Clock Enable | Input B register clock enable       |
| CEOUT | 1     | Clock Enable | Output register clock enable        |

**Table 522: Output Ports**

| Name | Range | Type    | Description           |
|------|-------|---------|-----------------------|
| Z    | 17:0  | Control | Multiplication result |

**Table 523: Parameters**

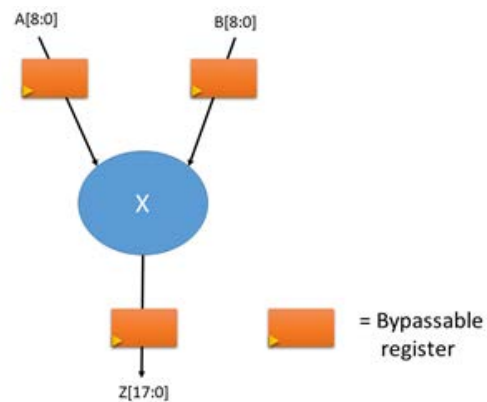
| Name      | Values                               | Description        |
|-----------|--------------------------------------|--------------------|
| REGINPUTA | "REGISTERED" (default)<br>"BYPASSED" | Register operand A |
| REGINPUTB | "REGISTERED" (default)<br>"BYPASSED" | Register operand B |

**Table 523: Parameters (Continued)**

| Name      | Values                               | Description                            |
|-----------|--------------------------------------|----------------------------------------|
| REGOUTPUT | "REGISTERED" (default)<br>"BYPASSED" | Register output                        |
| RESETMODE | "SYNC" (default)<br>"ASYNC"          | Synchronous/asynchronous reset control |
| GSR       | "DISABLED" (default)<br>"ENABLED"    | Enable global set/reset                |

**Note:**

Implements the function  $Z[17:0] = A[8:0] * B[8:0]$


**MULTADDSUB18X18**

18x18 Multiplier and Accumulator

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL

- ▶ UT24C
- ▶ UT24CP

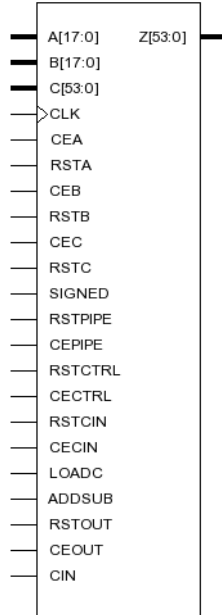**MULTADDSUB18X18****Table 524: Input Ports**

| Name    | Range | Description                    |
|---------|-------|--------------------------------|
| A       | 17:0  | Operand A                      |
| B       | 17:0  | Operand B                      |
| C       | 53:0  | Operand C                      |
| CLK     | 1     | Input clock                    |
| CEA     | 1     | Input clock enable             |
| RSTA    | 1     | Input register reset           |
| CEB     | 1     | Input clock enable             |
| RSTB    | 1     | Input register reset           |
| CEC     | 1     | Input clock enable             |
| RSTC    | 1     | Input register reset           |
| SIGNED  | 1     | One SIGNED port for all inputs |
| RSTPIPE | 1     | Output register reset          |

**Table 524: Input Ports (Continued)**

| Name    | Range | Description                                                |
|---------|-------|------------------------------------------------------------|
| CEPIPE  | 1     | Output clock enable                                        |
| RSTCTRL | 1     | Input control (addsub, m9addsub, signed, and loadc) reset  |
| CECTRL  | 1     | Input control (addsub, m9addsub, signed, and loadc) enable |
| RSTCIN  | 1     | Input carryin reset                                        |
| CECIN   | 1     | Input carryin enable                                       |
| LOADC   | 1     | 1=Load value from C input                                  |
| ADDSUB  | 1     | 0=Add, 1=subtract                                          |
| RSTOUT  | 1     | Output register reset                                      |
| CEOUT   | 1     | Output clock enable                                        |
| CIN     | 1     | Carry in                                                   |

**Table 525: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 53:0  | Multiplication result |

**Table 526: Parameters**

| Name        | Values                           | Description                                 |
|-------------|----------------------------------|---------------------------------------------|
| REGINPUTA   | "REGISTER" (default)<br>"BYPASS" | Register operand A                          |
| REGINPUTB   | "REGISTER" (default)<br>"BYPASS" | Register operand B                          |
| REGINPUTC   | "REGISTER" (default)<br>"BYPASS" | Register operand C                          |
| REGADDSUB   | "REGISTER" (default)<br>"BYPASS" | Register ADDSUB                             |
| REGLOADC    | "REGISTER" (default)<br>"BYPASS" | Register LOADC                              |
| REGCIN      | "REGISTER" (default)<br>"BYPASS" | Register CIN                                |
| REGPIPELINE | "REGISTER" (default)<br>"BYPASS" | Register between multiplier and accumulator |


**Table 526: Parameters (Continued)**

| Name      | Values                                     | Description             |
|-----------|--------------------------------------------|-------------------------|
| REGOUTPUT | "REGISTER" (default)<br>"BYPASS"           | Register output         |
| GSR       | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Enable global set/reset |
| RESETMODE | "SYNC" (default)                           | Reset mode              |

**Note:**

If LOADC = 1:  $Z[53:0] = C[53:0] \pm (A[17:0] * B[17:0]) \pm CIN$


If LOADC = 0:  $Z[53:0] = Z_{prev}[53:0] \pm (A[17:0] * B[17:0]) \pm CIN$ .

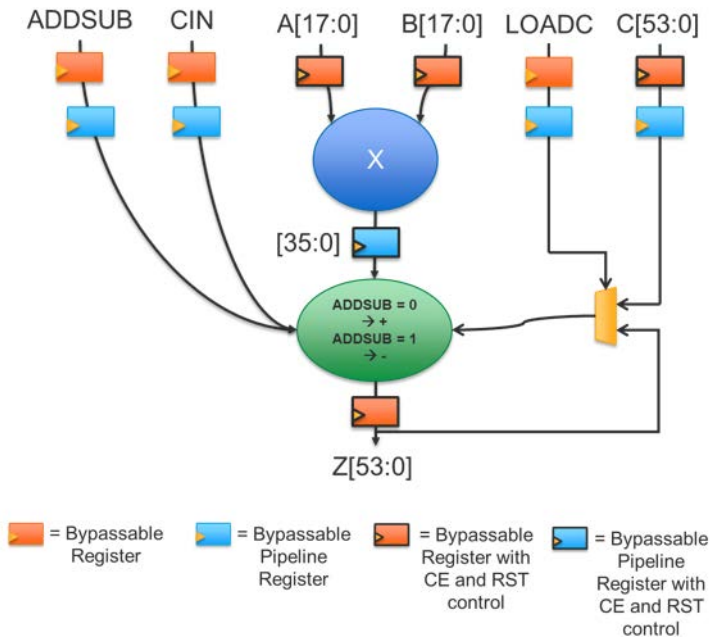**MULTADDSUB18X18A**

18x18 Multiplier and Adder/Subtractor

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

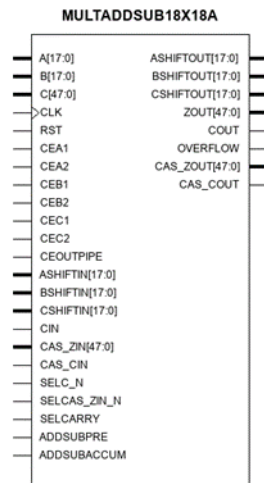**Table 527: Input Ports**

| Name      | Range | Type         | Active State | Description                               |
|-----------|-------|--------------|--------------|-------------------------------------------|
| A         | 17:0  | Data         | Active high  | Operand A                                 |
| B         | 17:0  | Data         | Active high  | Operand B                                 |
| CLK       | 1     | Clock        | Active high  | Clock                                     |
| RST       | 1     | Reset        | Active high  | Synchronous reset for all registers       |
| CEA1      | 1     | Clock Enable | Active high  | Input A register clock enable, stage one  |
| CEA2      | 1     | Clock Enable | Active high  | Input A register clock enable, stage two  |
| CEB1      | 1     | Clock Enable | Active high  | Input B register clock enable, stage one  |
| CEB2      | 1     | Clock Enable | Active high  | Input B register clock enable, stage two  |
| CEOUTPIPE | 1     | Clock Enable | Active high  | Pipeline and output register clock enable |
| C         | 47:0  | Control      | Active high  | Operand C                                 |
| CEC1      | 1     | Clock Enable | Active high  | Input C register clock enable, stage one  |
| CEC2      | 1     | Clock Enable | Active high  | Input C register clock enable, stage two  |
| ASHIFTIN  | 17:0  | Data         | Active high  | Operand A shift chain input               |
| BSHIFTIN  | 17:0  | Data         | Active high  | Operand B shift chain input               |
| CSHIFTIN  | 17:0  | Control      | Active high  | Operand C shift chain input               |
| CIN       | 1     | Control      | Active high  | Carry in                                  |
| CAS_ZIN   | 47:0  | Control      | Active low   | Cascade input                             |
| CAS_CIN   | 1     | Control      | Active low   | Cascade carry in                          |

**Table 527: Input Ports (Continued)**

| Name         | Range | Type    | Active State | Description                                                                 |
|--------------|-------|---------|--------------|-----------------------------------------------------------------------------|
| SELC_N       | 1     | Control | Active high  | Select between C or accumulator output for input to the accumulator         |
| SELCAS_ZIN_N | 1     | Control | Active low   | Select between CAS_ZIN or accumulator output for input to the accumulator   |
| SELCARRY     | 1     | Control | Active high  | Select between CIN or accumulator output Z[47] for input to the accumulator |
| ADDSUBPRE    | 1     | Control | Active high  | Add/sub control for pre-adder, 0=add, 1=subtract                            |
| ADDSUBACCUM  | 1     | Control | Active high  | Add/sub control for accumulator, 0=add, 1=subtract                          |

**Table 528: Output Ports**

| Name      | Range | Type    | Active State | Description                                      |
|-----------|-------|---------|--------------|--------------------------------------------------|
| ASHIFTOUT | 17:0  | Control | Active high  | Operand A shift chain output                     |
| BSHIFTOUT | 17:0  | Control | Active high  | Operand B shift chain output                     |
| CSHIFTOUT | 17:0  | Control | Active high  | Operand C shift chain output                     |
| ZOUT      | 47:0  | Control | Active high  | Multiplication/accumulator output result         |
| COUT      | 1     | Control | Active high  | Carry out                                        |
| OVERFLOW  | 1     | Flag    | Active high  | Overflow flag                                    |
| CAS_ZOUT  | 47:0  | Control | Active low   | Cascade multiplication/accumulator output result |
| CAS_COUT  | 1     | Control | Active low   | Cascade carry out                                |

**Table 529: Parameters**

| Name      | Values                                                          | Description        |
|-----------|-----------------------------------------------------------------|--------------------|
| REGINPUTA | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand A |
| REGINPUTB | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand B |

**Table 529: Parameters (Continued)**

| Name             | Values                                                          | Description                                                                     |
|------------------|-----------------------------------------------------------------|---------------------------------------------------------------------------------|
| REGSHIFTOUTA     | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output A                                                         |
| REGSHIFTOUTB     | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output B                                                         |
| SHIFTINPUTA      | "DISABLED" (default)<br>"ENABLED"                               | Shift input A                                                                   |
| SHIFTINPUTB      | "DISABLED" (default)<br>"ENABLED"                               | Shift input B                                                                   |
| REGINPUTC        | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register operand C                                                              |
| SHIFTINPUTC      | "DISABLED" (default)<br>"ENABLED"                               | Shift input C                                                                   |
| REGSHIFTOUTC     | "REGISTERED_ONCE" (default)<br>"BYPASSED"<br>"REGISTERED_TWICE" | Register shift output C                                                         |
| REGPREPIPE       | "REGISTERED" (default)<br>"BYPASSED"                            | Register pre-adder output, if<br>PREADD_EN=ENABLED                              |
| REGPIPE          | "REGISTERED" (default)<br>"BYPASSED"                            | Register pipeline                                                               |
| REGOUTPUT        | "REGISTERED" (default)<br>"BYPASSED"                            | Register output                                                                 |
| REGCAS_ZOUT      | "REGISTERED" (default)<br>"BYPASSED"                            | Register CAS_COUT and CAS_ZOUT[47:0].                                           |
| REGACCUMCONTROLS | "REGISTERED" (default)<br>"BYPASSED"                            | Register accumulator controls (CIN, SELCARRY,<br>SELCAS_ZIN, ADDSUBACCUM, SELC) |
| RESETMODE        | "SYNC" (default)<br>"ASYNC"                                     | Synchronous/asynchronous reset control                                          |
| ACCUM_EN         | "DISABLED" (default)<br>"ENABLED"                               | Enable accumulator                                                              |
| CAS_ZOUT_RSHIFT  | "DISABLED" (default)<br>"ENABLED"                               | Cascade output 18 bit right shift                                               |



**Table 529: Parameters (Continued)**

| Name            | Values                                            | Description                                                                  |
|-----------------|---------------------------------------------------|------------------------------------------------------------------------------|
| PREADD_EN       | "DISABLED" (default)<br>"ENABLED"                 | Enable pre-adder                                                             |
| REGADDSUBPRE    | "REGISTERED" (default)<br>"BYPASSED"              | Register ADDSUBPRE signal                                                    |
| ASIGNED         | "SIGNED" (default)<br>"UNSIGNED"                  | Input A signed control (only used when cascading to build wider multipliers) |
| BSIGNED         | "SIGNED" (default)<br>"UNSIGNED"                  | Input B signed control (only used when cascading to build wider multipliers) |
| ACCUM_C_EN      | "DISABLED" (default)<br>"ENABLED"                 | Enable dynamic C for accumulator input (1) or tie to constant 0 (0)          |
| CAS_ZIN_EN      | "DISABLED" (default)<br>"ENABLED"                 | Enable dynamic CAS_ZIN for accumulator input (1) or tie to constant 0 (0)    |
| CAS_CIN_EN      | "DISABLED" (default)<br>"ENABLED"                 | Use CAS_CIN for carry input                                                  |
| ROUNDMODE       | "ROUND_TO_ZERO" (default)<br>"ROUND_TO_INFINITY"  | Rounding mode                                                                |
| SATURATION      | "DISABLED" (default)<br>"TO_NEG_MAX"<br>"TO_ZERO" | Saturation enable                                                            |
| SATURATION_BITS | "48" (default)<br>"3-48"                          | Saturation bits                                                              |
| GSR             | "DISABLED" (default)<br>"ENABLED"                 | Enable global set/reset                                                      |

**Note:**

When the pre-adder and accumulator are both enabled, it implements the function:

$$M\_INT = A * (B +/- C)$$

$$Z\_out = CAS\_INT + C\_INT + CIN\_INT +/- M\_INT$$

Note that the pre-adder and accumulator share the C input. If the pre-adder is used, typically ACCUM\_C\_EN should be set to DISABLED so the accumulator ignores the value of the C port.

When the pre-adder is enabled and the accumulator is disabled, it implements the function:

$$Z\_out = A * (B +/- C)$$


When the pre-adder is disabled and the accumulator is enabled, it implements the function:

$$M\_int = A * B$$

$$Z\_out = CAS\_INT + C\_INT + CIN\_INT +/- M\_INT$$

See the diagram below for the internal node corresponding to the above terms.

Although not shown in the diagram below, the register for accumulator inputs CIN, CAS\_ZIN\_EN, SELCAS\_ZIN, and ADDSUBACCUM is bypassable with the parameter REGACCUMCONTROLS.

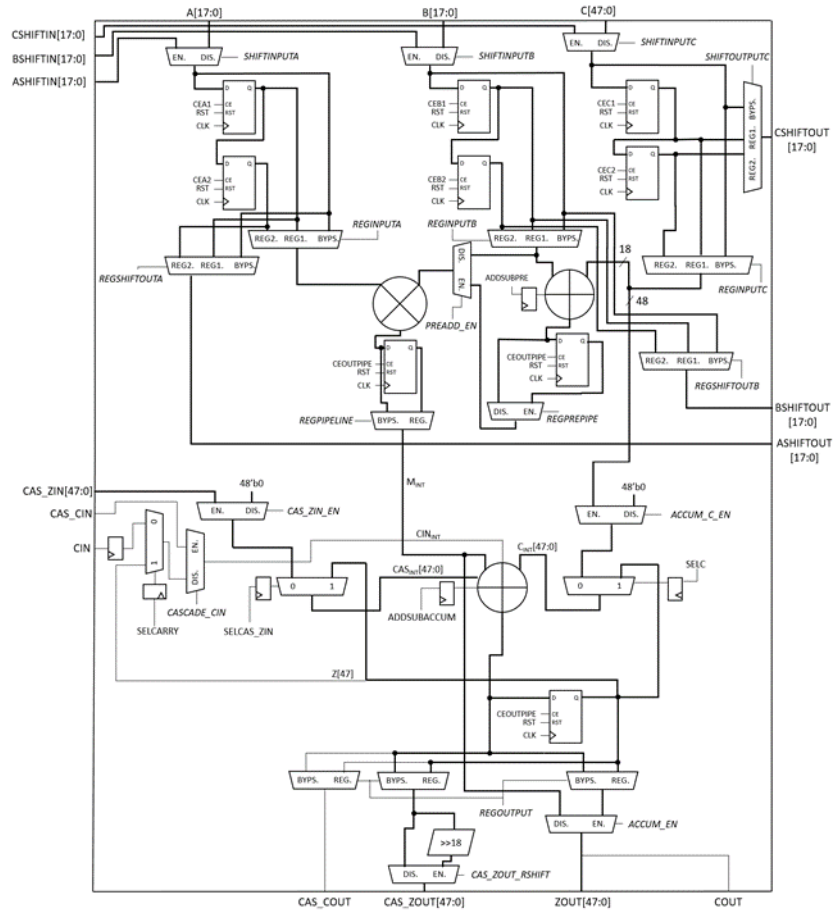

## MULTADDSUB18X18WIDE

18x18 Wide Multiplier and Adder/Subtractor

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

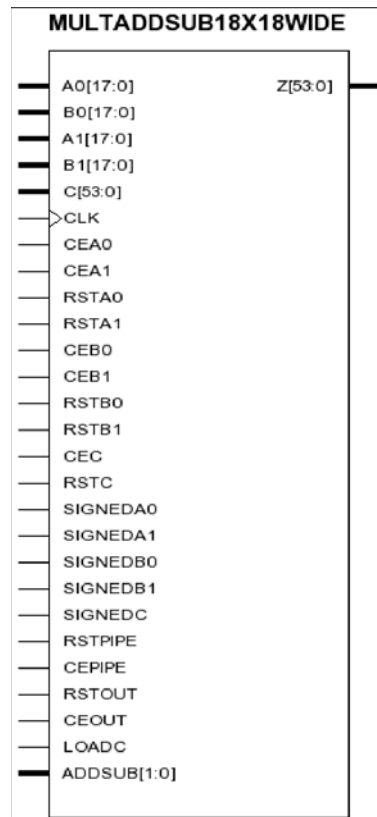


**Table 530: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A0   | 17:0  | Operand A0  |
| B0   | 17:0  | Operand B0  |

**Table 530: Input Ports (Continued)**

| Name     | Range | Description                                  |
|----------|-------|----------------------------------------------|
| A1       | 17:0  | Operand A1                                   |
| B1       | 17:0  | Operand B1                                   |
| C        | 53:0  | Operand C                                    |
| CLK      | 1     | Clock                                        |
| CEA0     | 1     | Input A0 clock enable                        |
| CEA1     | 1     | Input A1 clock enable                        |
| RSTA0    | 1     | Input A0 register reset                      |
| RSTA1    | 1     | Input A1 register reset                      |
| CEB0     | 1     | Input B0 clock enable                        |
| CEB1     | 1     | Input B1 clock enable                        |
| RSTB0    | 1     | Input B0 register reset                      |
| RSTB1    | 1     | Input B1 register reset                      |
| CEC      | 1     | Input C clock enable                         |
| RSTC     | 1     | Input C reset                                |
| SIGNEDA0 | 1     | Operand A0 signed                            |
| SIGNEDA1 | 1     | Operand A1 signed                            |
| SIGNEDB0 | 1     | Operand B0 signed                            |
| SIGNEDB1 | 1     | Operand B1 signed                            |
| SIGNEDC  | 1     | Operand C signed                             |
| RSTPIPE  | 1     | Pipeline register reset                      |
| CEPIPE   | 1     | Pipeline clock enable                        |
| RSTOUT   | 1     | Output register reset                        |
| CEOUT    | 1     | Output clock enable                          |
| LOADC    | 1     | Load value from input C (active high)        |
| ADDSUB   | 1:0   | Two bits ADD/SUB control (0=add, 1=subtract) |

**Table 531: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 53:0  | Multiplication result |

**Table 532: Parameters**

| Name        | Values                                     | Description                                 |
|-------------|--------------------------------------------|---------------------------------------------|
| REGINPUTAB0 | "REGISTER" (default)<br>"BYPASS"           | Register operand A/B 0                      |
| REGINPUTAB1 | "REGISTER" (default)<br>"BYPASS"           | Register operand A/B 1                      |
| REGINPUTC   | "REGISTER" (default)<br>"BYPASS"           | Register operand C                          |
| REGADDSUB   | "REGISTER" (default)<br>"BYPASS"           | Register ADDSUB                             |
| REGLOADC    | "REGISTER" (default)<br>"BYPASS"           | Register LOADC                              |
| REGLOADC2   | "REGISTER" (default)<br>"BYPASS"           | Register LOADC, second stage                |
| REGPIPELINE | "REGISTER" (default)<br>"BYPASS"           | Register between multiplier and accumulator |
| REGOUTPUT   | "REGISTER" (default)<br>"BYPASS"           | Register output                             |
| GSR         | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Enable global set/reset                     |
| RESETMODE   | "SYNC" (default)                           | Synchronous/<br>asynchronous reset control  |

**Note:**

If LOADC = 1:


$$Z[53:0] = C[53:0] \text{ +/- } (A0[17:0] \times B0[17:0]) \text{ +/- } (A1[17:0] * B1[17:0])$$

$$\text{Else: } Z[53:0] = Z_{\text{prev}}[53:0] \text{ +/- } (A0[17:0] \times B0[17:0]) \text{ +/- } (A1[17:0] * B1[17:0])$$

If LOADC = 0, REGOUTPUT must be REGISTERED. Else, will result into a combinatorial lock.

ADDSUB[1] controls add/sub between C/Zprev and A0B0.

ADDSUB[0] controls add/sub between A0B0 and A1B1.

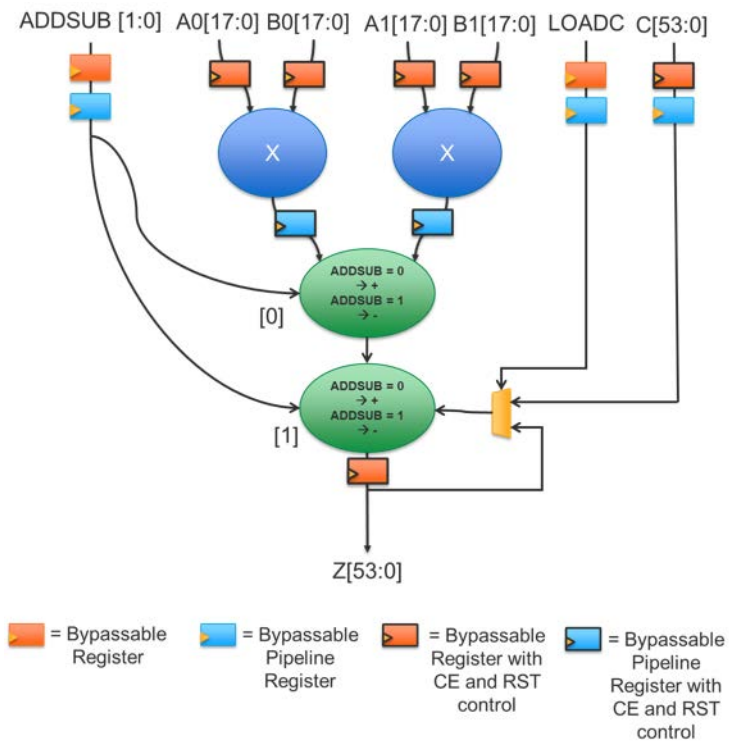


## MULTADDSUB18X36

18x36 Multiplier and Adder/Subtractor

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

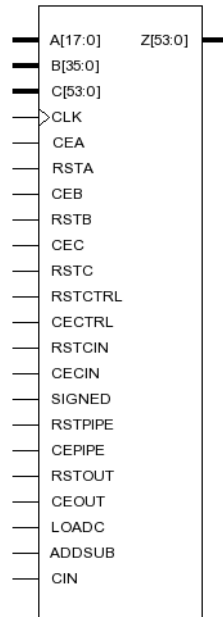**MULTADDSUB18X36****Table 533: Input Ports**

| Name    | Range | Description                                                |
|---------|-------|------------------------------------------------------------|
| A       | 17:0  | Operand A                                                  |
| B       | 35:0  | Operand B                                                  |
| C       | 53:0  | Operand C                                                  |
| CLK     | 1     | Clock                                                      |
| CEA     | 1     | Input A clock enable                                       |
| RSTA    | 1     | Input A register reset                                     |
| CEB     | 1     | Input B clock enable                                       |
| RSTB    | 1     | Input B register reset                                     |
| CEC     | 1     | Input C clock enable                                       |
| RSTC    | 1     | Input C register reset                                     |
| RSTCTRL | 1     | Input control (addsub, m9addsub, signed, and loadc) reset  |
| CECTRL  | 1     | Input control (addsub, m9addsub, signed, and loadc) enable |
| RSTCIN  | 1     | Input carryin reset                                        |
| CECIN   | 1     | Input carryin enable                                       |
| SIGNED  | 1     | One SIGNED port for all inputs                             |

**Table 533: Input Ports (Continued)**

| Name    | Range | Description               |
|---------|-------|---------------------------|
| RSTPIPE | 1     | Pipeline register reset   |
| CEPIPE  | 1     | Pipeline clock enable     |
| RSTOUT  | 1     | Output register reset     |
| CEOUT   | 1     | Output clock enable       |
| LOADC   | 1     | 1=Load value from input C |
| ADDSUB  | 1     | 0=add, 1=subtract         |
| CIN     | 1     | Carry in                  |

**Table 534: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 53:0  | Multiplication result |

**Table 535: Parameters**

| Name        | Values                           | Description                                 |
|-------------|----------------------------------|---------------------------------------------|
| REGINPUTA   | "REGISTER" (default)<br>"BYPASS" | Register input A                            |
| REGINPUTB   | "REGISTER" (default)<br>"BYPASS" | Register input B                            |
| REGINPUTC   | "REGISTER" (default)<br>"BYPASS" | Register input C                            |
| REGADDSUB   | "REGISTER" (default)<br>"BYPASS" | Register ADDSUB                             |
| REGLOADC    | "REGISTER" (default)<br>"BYPASS" | Register LOADC                              |
| REGLOADC2   | "REGISTER" (default)<br>"BYPASS" | Register LOADC, second stage                |
| REGCIN      | "REGISTER" (default)<br>"BYPASS" | Register CIN                                |
| REGPIPELINE | "REGISTER" (default)<br>"BYPASS" | Register between multiplier and accumulator |
| REGOUTPUT   | "REGISTER" (default)<br>"BYPASS" | Register output                             |




**Table 535: Parameters**

| Name      | Values                                     | Description             |
|-----------|--------------------------------------------|-------------------------|
| GSR       | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Enable global set/reset |
| RESETMODE | "SYNC" ( <i>default</i> )                  | Reset mode              |

**Note:**

If LOADC = 1:  $Z[53:0] = C[53:0] \pm ((A[17:0] * B[35:0]) \pm CIN)$

If LOADC = 0:  $Z[53:0] = Z_{prev}[53:0] \pm ((A[17:0] * B[35:0]) \pm CIN)$

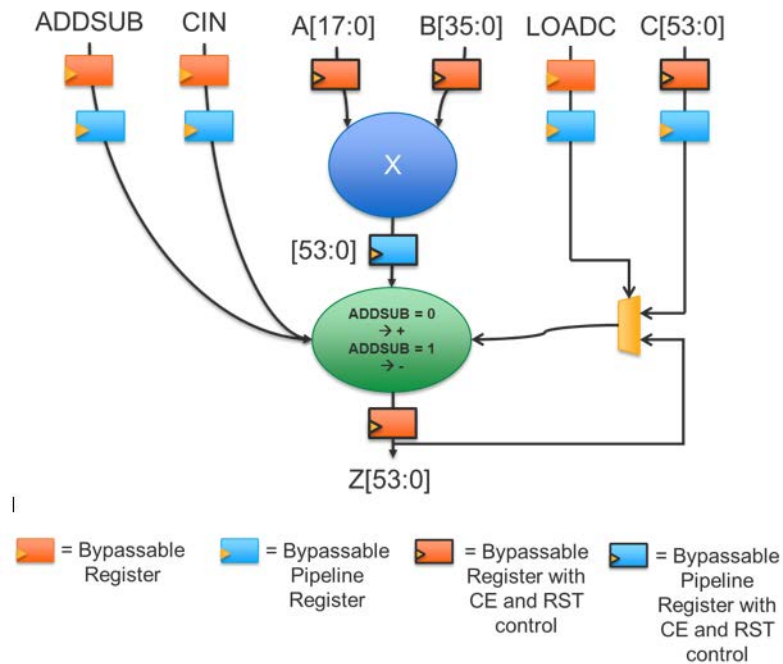
**MULTADDSUB36X36**

36x36 Multiplier and Adder/Subtractor

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T

- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

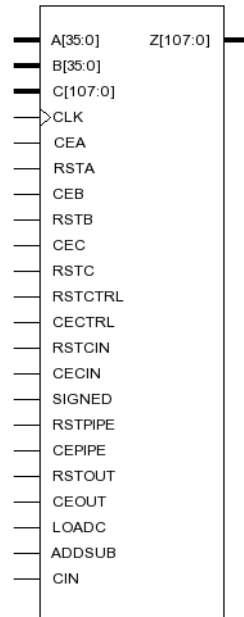**MULTADDSUB36X36****Table 536: Input Ports**

| Name    | Range | Description                                                |
|---------|-------|------------------------------------------------------------|
| A       | 35:0  | Operand A                                                  |
| B       | 35:0  | Operand B                                                  |
| C       | 107:0 | Operand C                                                  |
| CLK     | 1     | Clock                                                      |
| CEA     | 1     | Input A clock enable                                       |
| RSTA    | 1     | Input A register reset                                     |
| CEB     | 1     | Input B clock enable                                       |
| RSTB    | 1     | Input B register reset                                     |
| CEC     | 1     | Input C clock enable                                       |
| RSTC    | 1     | Input C register reset                                     |
| RSTCTRL | 1     | Input control (addsub, m9addsub, signed, and loadc) reset  |
| CECTRL  | 1     | Input control (addsub, m9addsub, signed, and loadc) enable |

**Table 536: Input Ports (Continued)**

| Name    | Range | Description                                                |
|---------|-------|------------------------------------------------------------|
| RSTCIN  | 1     | Input carry-in reset                                       |
| CECIN   | 1     | Input carry-in enable                                      |
| SIGNED  | 1     | One SIGNED port for all inputs due to ACC54 HW limitation. |
| RSTPIPE | 1     | Pipeline register reset                                    |
| CEPIPE  | 1     | Pipeline clock enable                                      |
| RSTOUT  | 1     | Output register reset                                      |
| CEOUT   | 1     | Output clock enable                                        |
| LOADC   | 1     | 1=Load value from input C                                  |
| ADDSUB  | 1     | 0=add, 1=subtract                                          |
| CIN     | 1     | Carry in                                                   |

**Table 537: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 107:0 | Multiplication result |


**Table 538: Parameters**

| Name      | Values                           | Description                  |
|-----------|----------------------------------|------------------------------|
| REGINPUTA | "REGISTER" (default)<br>"BYPASS" | Register input A             |
| REGINPUTB | "REGISTER" (default)<br>"BYPASS" | Register input B             |
| REGINPUTC | "REGISTER" (default)<br>"BYPASS" | Register input C             |
| REGADDSUB | "REGISTER" (default)<br>"BYPASS" | Register ADDSUB              |
| REGLOADC  | "REGISTER" (default)<br>"BYPASS" | Register LOADC               |
| REGLOADC2 | "REGISTER" (default)<br>"BYPASS" | Register LOADC, Second stage |
| REGCIN    | "REGISTER" (default)<br>"BYPASS" | Register CIN                 |


| Name        | Values                            | Description                                                                   |
|-------------|-----------------------------------|-------------------------------------------------------------------------------|
| REGPIPELINE | "REGISTER" (default)<br>"BYPASS"  | Register between multiplier and accumulator                                   |
| REGOUTPUT   | "REGISTER" (default)<br>"BYPASS"  | Register output                                                               |
| GSR         | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset                                                       |
| RESETMODE   | "SYNC" (default)<br>"ASYNC"       | Synchronous/asynchronous reset control. Reset release is always asynchronous. |

If LOADC = 1:  $Z[107:0] = C[107:0] \pm ((A[35:0] * B[35:0]) \pm CIN)$

If LOADC = 0:  $Z[107:0] = Z_{prev}[107:0] \pm ((A[35:0] * B[35:0]) \pm CIN)$

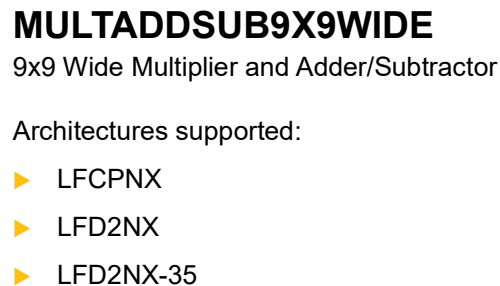

- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

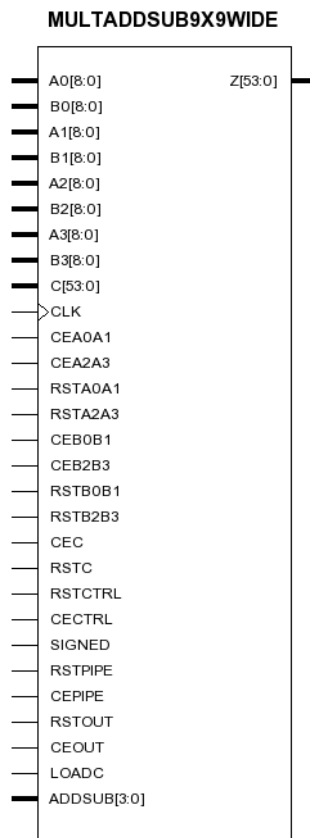**Table 539: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| A0   | 8:0   | Operand A0  |
| B0   | 8:0   | Operand B0  |
| A1   | 8:0   | Operand A1  |
| B1   | 8:0   | Operand B1  |

**Table 539: Input Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                                         |
|-------------|--------------|------------------------------------------------------------|
| A2          | 8:0          | Operand A2                                                 |
| B2          | 8:0          | Operand B2                                                 |
| A3          | 8:0          | Operand A3                                                 |
| B3          | 8:0          | Operand B3                                                 |
| C           | 53:0         | Operand C                                                  |
| CLK         | 1            | Clock                                                      |
| CEA0A1      | 1            | Input A0 and A1 clock enable                               |
| CEA2A3      | 1            | Input A2 and A3 clock enable                               |
| RSTA0A1     | 1            | Input A0 and A1 register reset                             |
| RSTA2A3     | 1            | Input A2 and A3 register reset                             |
| CEB0B1      | 1            | Input B0 and B1 clock enable                               |
| CEB2B3      | 1            | Input B2 and B3 clock enable                               |
| RSTB0B1     | 1            | Input B0 and B1 register reset                             |
| RSTB2B3     | 1            | Input B2 and B3 register reset                             |
| CEC         | 1            | Input C clock enable                                       |
| RSTC        | 1            | Input C register reset                                     |
| RSTCTRL     | 1            | Input control (addsub, m9addsub, signed, and loadc) reset  |
| CECTRL      | 1            | Input control (addsub, m9addsub, signed, and loadc) enable |
| SIGNED      | 1            | One SIGNED port for all inputs due to ACC54 HW limitation  |
| RSTPIPE     | 1            | Output register reset                                      |
| CEPIPE      | 1            | Output clock enable                                        |
| RSTOUT      | 1            | Output register reset                                      |
| CEOUT       | 1            | Output register clock enable                               |

**Table 539: Input Ports (Continued)**

| Name   | Range | Description               |
|--------|-------|---------------------------|
| LOADC  | 1     | 1=Load value from input C |
| ADDSUB | 3:0   | 0=add, 1=subtract         |

**Table 540: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 53:0  | Multiplication result |

**Table 541: Parameters**

| Name        | Values                            | Description                                                                   |
|-------------|-----------------------------------|-------------------------------------------------------------------------------|
| REGINPUTAB0 | "REGISTER" (default)<br>"BYPASS"  | Register operand A/B 0                                                        |
| REGINPUTAB1 | "REGISTER" (default)<br>"BYPASS"  | Register operand A/B 1                                                        |
| REGINPUTAB2 | "REGISTER" (default)<br>"BYPASS"  | Register operand A/B 2                                                        |
| REGINPUTAB3 | "REGISTER" (default)<br>"BYPASS"  | Register operand A/B 3                                                        |
| REGINPUTC   | "REGISTER" (default)<br>"BYPASS"  | Register operand C                                                            |
| REGADDSUB   | "REGISTER" (default)<br>"BYPASS"  | Register ADDSUB                                                               |
| REGLOADC    | "REGISTER" (default)<br>"BYPASS"  | Register LOADC                                                                |
| REGLOADC2   | "REGISTER" (default)<br>"BYPASS"  | Register LOADC, Second stage                                                  |
| REGPIPELINE | "REGISTER" (default)<br>"BYPASS"  | Register between multiplier and accumulator                                   |
| REGOUTPUT   | "REGISTER" (default)<br>"BYPASS"  | Register output                                                               |
| GSR         | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset                                                       |
| RESETMODE   | "SYNC" (default)<br>"ASYNC"       | Synchronous/asynchronous reset control. Reset release is always asynchronous. |

**Note:**

If LOADC = 1:

$$Z[53:0] = C[53:0] +/- ( ((A0[8:0] * B0[8:0]) +/- (A1[8:0] * B1[8:0])) \\ +/- ((A2[8:0] * B2[8:0]) +/- (A3[8:0] * B3[8:0])) )$$

If LOADC = 0:

$$Z[53:0] = Z_{prev}[53:0] +/- ( ((A0[8:0] * B0[8:0]) +/- (A1[8:0] * B1[8:0])) \\ +/- ((A2[8:0] * B2[8:0]) +/- (A3[8:0] * B3[8:0])) )$$

If LOADC = 0: REGOUTPUT must be **registered**; otherwise, it will result in a combinatorial lock.

Bits ADDSUB[3:0] controls the 'addition' or 'subtraction' options:


ADDSUB[3]: controls selection of addition/subtraction between A2B2 and A3B3

ADDSUB[2]: controls selection of addition/subtraction between A0B1 and A1B1

ADDSUB[1]: controls selection of addition/subtraction between C/Z<sub>prev</sub> and (A0B0 +/- A1B1)



ADDSUB[0]: controls selection of addition/subtraction between (A0B0 +/- A1B1) and (A2B2 +/- A3B3)

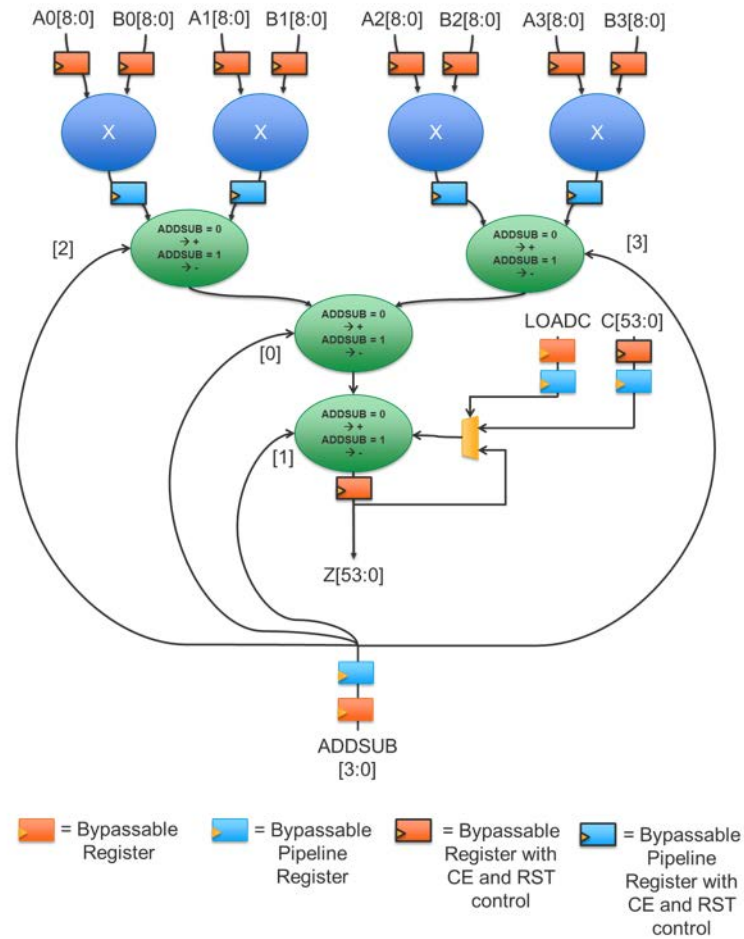

## MULTIBOOT

Wrapper for Interface for Multiboot Functionality

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C

## ▶ UT24CP

### MULTIBOOT

 


**Table 542: Input Ports**

| Name       | Range | Description                  |
|------------|-------|------------------------------|
| AUTOREBOOT | 1     | Automatic Reboot Enable      |
| MSPIMADDR  | 31:0  | Multiboot SPI Memory Address |

**Table 543: Parameters**


| Name      | Values                                                 | Description   |
|-----------|--------------------------------------------------------|---------------|
| MSPIADDR  | 0'b00000000000000000000000000000000 ( <i>default</i> ) | MSPI Address  |
| SOURCESEL | "DIS" ( <i>default</i> )<br>"EN"                       | Source Select |

## MULTPREADD18X18

18x18 Multiplier with Pre-Adder

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

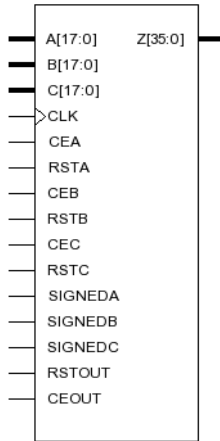**MULTPREADD18X18****Table 544: Input Ports**

| Name    | Range | Description           |
|---------|-------|-----------------------|
| A       | 17:0  | Operand A             |
| B       | 17:0  | Operand B             |
| C       | 17:0  | Operand C             |
| CLK     | 1     | Clock                 |
| CEA     | 1     | Input clock enable    |
| RSTA    | 1     | Input register reset  |
| CEB     | 1     | Input clock enable    |
| RSTB    | 1     | Input register reset  |
| CEC     | 1     | Input clock enable    |
| RSTC    | 1     | Input register reset  |
| SIGNEDA | 1     | Operand A signed      |
| SIGNEDB | 1     | Operand B signed      |
| SIGNEDC | 1     | Operand C signed      |
| RSTOUT  | 1     | Output register reset |
| CEOUT   | 1     | Output clock enable   |

**Table 545: Output Ports**


| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 17:0  | Multiplication result |

**Table 546: Parameters**

| Name      | Values                            | Description             |
|-----------|-----------------------------------|-------------------------|
| REGINPUTA | "REGISTER" (default)<br>"BYPASS"  | Register operand A      |
| REGINPUTB | "REGISTER" (default)<br>"BYPASS"  | Register operand B      |
| REGINPUTC | "REGISTER" (default)<br>"BYPASS"  | Register operand C      |
| REGOUTPUT | "REGISTER" (default)<br>"BYPASS"  | Register output         |
| GSR       | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |
| RESETMODE | "SYNC" (default)                  | Reset type              |

**Note:**

Implements  $Z[36:0] = (B[17:0] + C[17:0]) * A[17:0]$

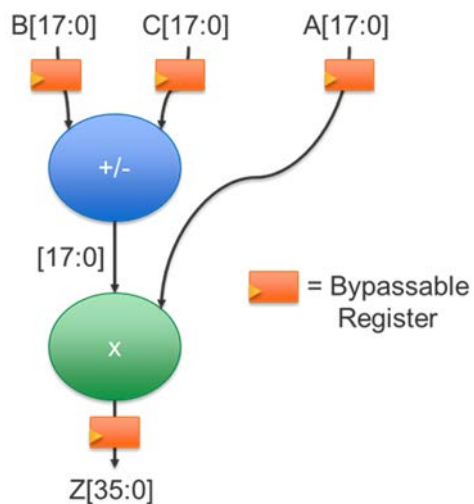

## MULTPREADD9X9

9x9 Multiplier with Pre-adder

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

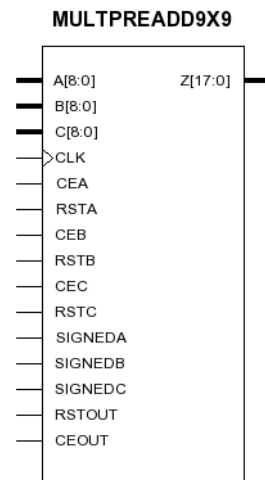


**Table 547: Input Ports**

| Name | Range | Description          |
|------|-------|----------------------|
| A    | 8:0   | Operand A            |
| B    | 8:0   | Operand B            |
| C    | 8:0   | Operand C            |
| CLK  | 1     | Clock                |
| CEA  | 1     | Input clock enable   |
| RSTA | 1     | Input register reset |
| CEB  | 1     | Input clock enable   |

**Table 547: Input Ports (Continued)**

| Name    | Range | Description           |
|---------|-------|-----------------------|
| RSTB    | 1     | Input register reset  |
| CEC     | 1     | Input clock enable    |
| RSTC    | 1     | Input register reset  |
| SIGNEDA | 1     | Operand A signed      |
| SIGNEDB | 1     | Operand B signed      |
| SIGNEDC | 1     | Operand C signed      |
| RSTOUT  | 1     | Output register reset |
| CEOUT   | 1     | Output clock enable   |


**Table 548: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 17:0  | Multiplication result |

**Table 549: Parameters**

| Name      | Values                                     | Description                                                                   |
|-----------|--------------------------------------------|-------------------------------------------------------------------------------|
| REGINPUTA | "REGISTER" ( <i>default</i> )<br>"BYPASS"  | Register operand A                                                            |
| REGINPUTB | "REGISTER" ( <i>default</i> )<br>"BYPASS"  | Register operand B                                                            |
| REGINPUTC | "REGISTER" ( <i>default</i> )<br>"BYPASS"  | Register operand C                                                            |
| REGOUTPUT | "REGISTER" ( <i>default</i> )<br>"BYPASS"  | Register output                                                               |
| GSR       | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset                                                       |
| RESETMODE | "SYNC" ( <i>default</i> )<br>"ASYNC"       | Synchronous/asynchronous reset control. Reset release is always asynchronous. |

**Note:**

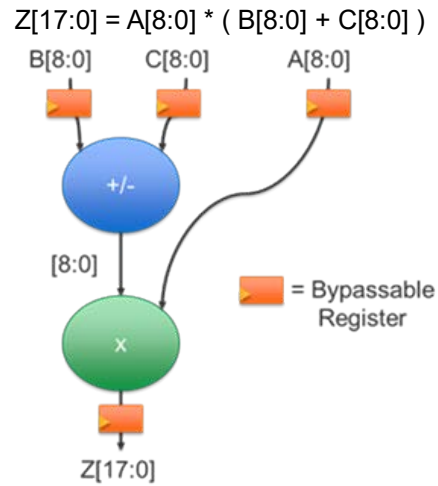

## MUX21

2-to-1 Mux

Architectures Supported:

▶ LFMXO4

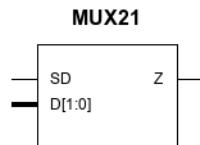


**Table 550: Input Ports**

| Name   | Description |
|--------|-------------|
| SD     | Data select |
| D[1:0] | Data input  |

**Table 551: Output Ports**

| Name | Description           |
|------|-----------------------|
| Z    | Multiplication result |

## MUX41

4 to 1 Mux

Architectures Supported:

▶ LFMXO4

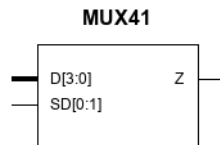


**Table 552: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D3   | 1     | Data input  |
| D2   | 1     | Data input  |
| D1   | 1     | Data input  |
| D0   | 1     | Data input  |
| SD1  | 1     | Data select |
| SD2  | 1     | Data select |

**Table 553: Output Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 1     | Multiplication result |


## MUX81

8 to 1 Mux

Architectures Supported:

▶ LFMXO4

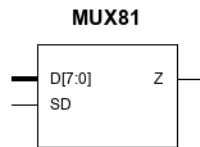

**Table 554: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D7   | 1     | Data input  |
| D6   | 1     | Data input  |
| D5   | 1     | Data input  |
| D4   | 1     | Data input  |
| D3   | 1     | Data input  |
| D2   | 1     | Data input  |
| D1   | 1     | Data input  |
| D0   | 1     | Data input  |
| SD3  | 1     | Data select |
| SD2  | 1     | Data select |
| SD1  | 1     | Data select |

**Table 555: Output Ports**


| Name | Range | Description           |
|------|-------|-----------------------|
| Z    | 1     | Multiplication result |

## MUX161

16-Input Mux within the PFU (4 Slices)

Architectures Supported:

- ▶ LFMXO4

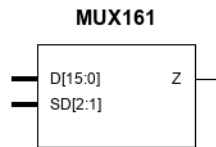**Table 556: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D15  | 1     | Data input  |
| D14  | 1     | Data input  |
| D13  | 1     | Data input  |
| D12  | 1     | Data input  |
| D11  | 1     | Data input  |
| D10  | 1     | Data input  |
| D9   | 1     | Data input  |
| D8   | 1     | Data input  |
| D7   | 1     | Data input  |
| D6   | 1     | Data input  |
| D5   | 1     | Data input  |
| D4   | 1     | Data input  |
| D3   | 1     | Data input  |
| D2   | 1     | Data input  |
| D1   | 1     | Data input  |
| D0   | 1     | Data input  |
| SD4  | 1     | Data select |
| SD3  | 1     | Data select |
| SD2  | 1     | Data select |
| SD1  | 1     | Data select |
| SD0  | 1     | Data select |

**Table 557: Output Ports**


| Name | Range | Description                                          |
|------|-------|------------------------------------------------------|
| Z    | 1     | Output not driving any signal (neither high nor low) |

## MUX321

32-Input Mux within the PFU (8 Slices)

Architectures Supported:

▶ LFMXO4

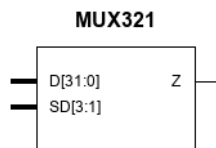**Table 558: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D31  | 1     | Data input  |
| D30  | 1     | Data input  |
| D29  | 1     | Data input  |
| D28  | 1     | Data input  |
| D27  | 1     | Data input  |
| D26  | 1     | Data input  |
| D25  | 1     | Data input  |
| D24  | 1     | Data input  |
| D23  | 1     | Data input  |
| D22  | 1     | Data input  |
| D21  | 1     | Data input  |
| D20  | 1     | Data input  |

**Table 558: Input Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b> |
|-------------|--------------|--------------------|
| D19         | 1            | Data input         |
| D18         | 1            | Data input         |
| D17         | 1            | Data input         |
| D16         | 1            | Data input         |
| D15         | 1            | Data input         |
| D14         | 1            | Data input         |
| D13         | 1            | Data input         |
| D12         | 1            | Data input         |
| D11         | 1            | Data input         |
| D10         | 1            | Data input         |
| D9          | 1            | Data input         |
| D8          | 1            | Data input         |
| D7          | 1            | Data input         |
| D6          | 1            | Data input         |
| D5          | 1            | Data input         |
| D4          | 1            | Data input         |
| D3          | 1            | Data input         |
| D2          | 1            | Data input         |
| D1          | 1            | Data input         |
| D0          | 1            | Data input         |
| SD5         | 1            | Data select        |
| SD4         | 1            | Data select        |
| SD3         | 1            | Data select        |
| SD2         | 1            | Data select        |
| SD1         | 1            | Data select        |

**Table 559: Output Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>    |
|-------------|--------------|-----------------------|
| Z           | 1            | Multiplication result |

## OB

Output Buffer

Architectures supported:

- ▶ iCE40 UltraPlus
- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

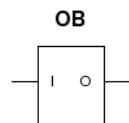


**Table 560: Input Ports**

| Name | Description      |
|------|------------------|
| I    | Data from fabric |

**Table 561: Output Ports**

| Name | Description |
|------|-------------|
| O    | Data to pad |

In iCE40 UltraPlus, refer to Source Template.

**Table 562: Truth Table**

| Input | Output |
|-------|--------|
| I     | O      |
| 1     | 1      |
| 0     | 0      |
| Z     | U      |

## OB\_RGB

Architectures supported:

- ▶ iCE40 UltraPlus

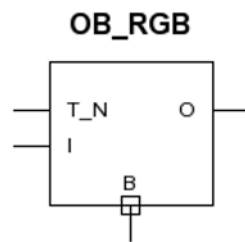


**Table 563: Input Ports**

| Name | Description                   |
|------|-------------------------------|
| T_N  | Tri-state control, active low |
| I    | Data to pad                   |

**Table 564: Output Ports**

| Name | Description   |
|------|---------------|
| O    | Data from pad |

**Table 565: Bidirectional Ports**


| Name | Description |
|------|-------------|
| B    | Pad         |

## OBZ

Output Buffer with Tri-state

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

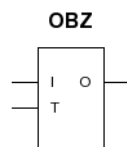**Table 566: Input Ports**

| Name | Description       |
|------|-------------------|
| I    | Data to pad       |
| T    | Tri-state control |

**Table 567: Output Ports**

| Name | Description     |
|------|-----------------|
| O    | Output from pad |

**Table 568: Truth Table**

| Inputs |   | Output |
|--------|---|--------|
| I      | T | O      |
| X      | 1 | Z      |
| 0      | 0 | 0      |
| 1      | 0 | 1      |


X = Don't care

## OBZ\_B

Output Buffer with Tri-state

Architectures supported:

▶ iCE40 UltraPlus

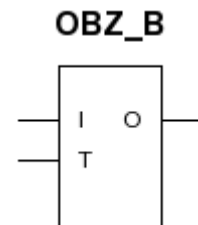**Table 569: Input Ports**

| Name | Description                                            |
|------|--------------------------------------------------------|
| I    | Data from fabric                                       |
| T_N  | Tri-state control, active low<br>meaning T_N=0 > O = Z |

**Table 570: Output Ports**

| Name | Description |
|------|-------------|
| O    | Data to pad |



**Table 571: Truth Table**

| Inputs |     | Output |
|--------|-----|--------|
| I      | T_N | O      |
| X      | 0   | Z      |
| 0      | 1   | 0      |
| 1      | 1   | 1      |


X = Don't care

## ODDR71

7:1 LVDS ODDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

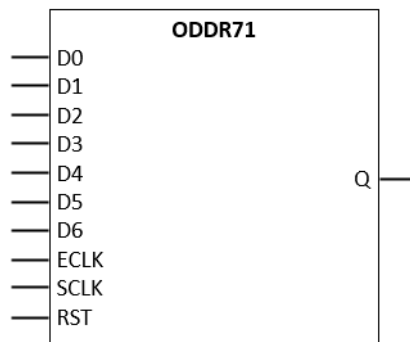

This primitive is used for 7:1 LVDS ODDR implementation.

**Table 572: Input Ports**

| Name | Range | Description                                                        |
|------|-------|--------------------------------------------------------------------|
| D    | 6:0   | Parallel data input to the ODDR. D0 is sent out first and D6 last. |
| ECLK | 1     | Fast edge clock                                                    |
| SCLK | 1     | Primary clock input (divide-by-3.5 of ECLK).                       |
| RST  | 1     | Reset to DDR registers.                                            |

**Table 573: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q    | 1     | DDR data output on both edges of ECLK. |

**Table 574: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**ODDR71A**

7:1 LVDS ODDR implementation

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

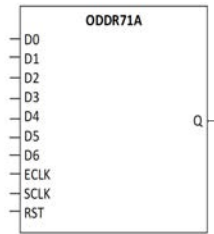**Table 575: Input Ports**

| Name | Range | Type    | Active State | Description                               |
|------|-------|---------|--------------|-------------------------------------------|
| D0   | 1     | Data    | High         | DDR data input                            |
| D1   | 1     | Data    | High         | DDR data input                            |
| D2   | 1     | Data    | High         | DDR data input                            |
| D3   | 1     | Data    | High         | DDR data input                            |
| D4   | 1     | Data    | High         | DDR data input                            |
| D5   | 1     | Data    | High         | DDR data input                            |
| D6   | 1     | Data    | High         | DDR data input                            |
| ECLK | 1     | Clock   | Rising Edge  | Fast edge clock                           |
| SCLK | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-2 of ECLK) |
| RST  | 1     | Control | High         | Reset to DDR registers                    |

**Table 576: Output Ports**

| Name | Range | Type | Active State | Description                                                                                                                 |
|------|-------|------|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| Q    | 1     | Data | High         | DDR data output on both edges of SCLK<br><br>D0, D2, D4, D6: Positive edge of ECLK<br><br>D1, D3, D5: Negative edge of ECLK |

**Table 577: Parameters**

| Name | Values                  | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**ODDRXE**

Output for Generic DDR X1 Using 2:1 Gearing

Architectures Supported:

- ▶ LFMXO4

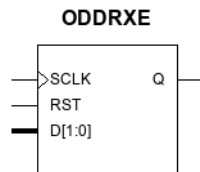**Table 578: Input Ports**

| Name | Range | Description                                 |
|------|-------|---------------------------------------------|
| D0   | 1     | Data A primary phase of data (first out)    |
| D1   | 1     | Data B secondary phase of data (second out) |
| SCLK | 1     | Clock from the CIB                          |
| RST  | 1     | RESET to this block from the CIB            |

**Table 579: Output Ports**

| Name | Range | Description     |
|------|-------|-----------------|
| Q    | 1     | DDR output data |

**Table 580: Parameters**

| Name | Values                           | Description                  |
|------|----------------------------------|------------------------------|
| GSR  | "ENABLE" (default)<br>"DISABLED" | Enable/disable global reset. |

**Description**

ODDRXE is the output for generic DDR X1 using 2:1 gearing. It uses the mPIC or PIC hardware cell. It is used for all sides.


For more information and usage, refer to related technical notes on the Lattice web site.

**ODDRX1**

Generic X1 ODDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

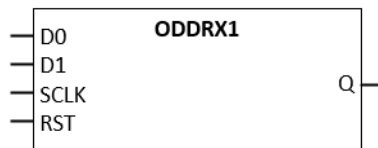

This primitive is used to generate the address, command, and control except for CS\_N for DDR3/DDR3L memory interfaces using X2 gearing.

**Table 581: Input Ports**

| Name   | Description                                                 |
|--------|-------------------------------------------------------------|
| D0, D1 | Parallel data input to ODDR. D0 is sent out first, then D1. |
| SCLK   | Primary clock input.                                        |
| RST    | Reset to DDR registers.                                     |

**Table 582: Output Ports**

| Name | Description                            |
|------|----------------------------------------|
| Q    | DDR data output on both edges of SCLK. |

**Table 583: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## ODDRX1A

Generic x1 ODDR

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

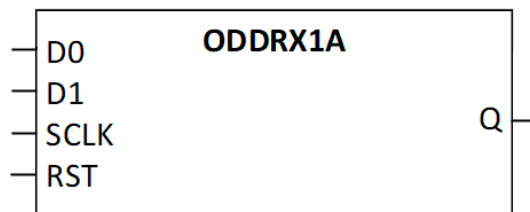


**Table 584: Input Ports**

| Name | Range | Type    | Active State | Description                                  |
|------|-------|---------|--------------|----------------------------------------------|
| D0   | 1     | Data    | High         | DDR data input                               |
| D1   | 1     | Data    | High         | DDR data input                               |
| SCLK | 1     | Clock   | Rising Edge  | Primary clock input<br>(divide-by-5 of ECLK) |
| RST  | 1     | Control | High         | Reset to DDR registers                       |

**Table 585: Output Ports**

| Name | Range | Type | Active State | Description                                                                                               |
|------|-------|------|--------------|-----------------------------------------------------------------------------------------------------------|
| Q    | 1     | Data | High         | DDR data output on both<br>edges of SCLK<br><br>D0: Positive edge of SCLK<br>D1: Negative edge of<br>SCLK |

**Table 586: Parameters**

| Name | Values                  | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |


## ODDRX2

Generic X2 ODDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL

- ▶ UT24C
- ▶ UT24CP

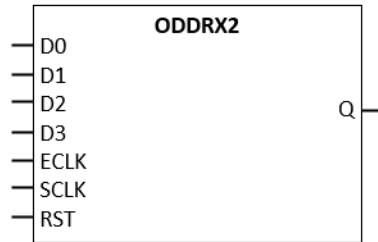

This primitive is used to generate the address, command, and control except for CS\_N for DDR3/DDR3L memory interfaces using X4 gearing.

**Table 587: Input Ports**

| Name | Range | Description                                                        |
|------|-------|--------------------------------------------------------------------|
| D    | 3:0   | Parallel data input to the ODDR. D0 is sent out first and D3 last. |
| ECLK | 1     | Fast edge clock.                                                   |
| SCLK | 1     | Primary clock input (divide-by-2 of ECLK).                         |
| RST  | 1     | Reset to DDR registers.                                            |

**Table 588: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q    | 1     | DDR data output on both edges of ECLK. |

**Table 589: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |



**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**ODDRX2A**

Generic x2 ODDR implementation

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

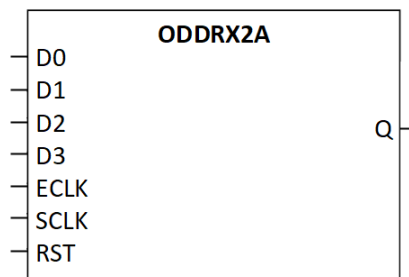


**Table 590: Input Ports**

| Name | Range | Type    | Active State | Description                               |
|------|-------|---------|--------------|-------------------------------------------|
| D0   | 1     | Data    | High         | DDR data input                            |
| D1   | 1     | Data    | High         | DDR data input                            |
| D2   | 1     | Data    | High         | DDR data input                            |
| D3   | 1     | Data    | High         | DDR data input                            |
| ECLK | 1     | Clock   | Rising Edge  | Fast edge clock                           |
| SCLK | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-2 of ECLK) |
| RST  | 1     | Control | High         | Reset to DDR registers                    |

**Table 591: Output Ports**

| Name | Range | Type | Active State | Description                                                            |
|------|-------|------|--------------|------------------------------------------------------------------------|
| Q    | 1     | Data | High         | DDR data output on both edges of SCLK<br>D0, D2: Positive edge of ECLK |

**Table 592: Parameters**

| Name | Values                  | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**ODDRX2E**

Output for Generic DDR X2 Using 4:1 Gearing

Architectures Supported:

- ▶ LFMXO4

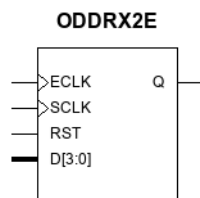


**Table 593: Input Ports**

| Name | Range | Description                        |
|------|-------|------------------------------------|
| D0   | 1     | Data at the same edge of the clock |
| D1   | 1     | Data at the same edge of the clock |
| D2   | 1     | Data at the same edge of the clock |
| D3   | 1     | Data at the same edge of the clock |
| ECLK | 1     | Edge clock                         |
| SCLK | 1     | Clock from the CIB                 |
| RST  | 1     | RESET to this block from the CIB   |

**Table 594: Output Ports**

| Name | Range | Description     |
|------|-------|-----------------|
| Q    | 1     | DDR output data |

**Table 595: Parameters**

| Name | Values                            | Description                   |
|------|-----------------------------------|-------------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable or disable GSR feature |

**Description**


ODDRX2E is the output for generic DDR X2 using 4:1 gearing. It uses the VPIC\_TX hardware cell. It is used for top bank only. For more information and usage, refer to related technical notes on the Lattice web site.

**ODDRX2DQ**

DQ output for DDR2 & DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

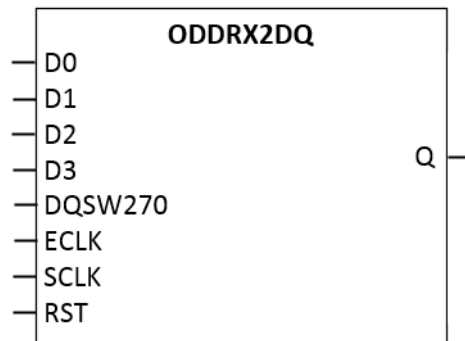

This primitive is used to generate the DQ data output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces. It is also used to generate the CA bus for LPDDR2/LPDDR3 interfaces.

**Table 596: Input Ports**

| Name    | Range | Description                                                       |
|---------|-------|-------------------------------------------------------------------|
| D       | 3:0   | Data input to the ODDR. D0 is output first, D3 last.              |
| DQSW270 | 1     | Clock that is 90° ahead of clock used to generate the DQS output. |
| ECLK    | 1     | Fast edge clock.                                                  |
| SCLK    | 1     | Primary clock input (divide-by-2 of ECLK).                        |
| RST     | 1     | Reset to DDR registers.                                           |

**Table 597: Output Ports**

| Name | Range | Description                              |
|------|-------|------------------------------------------|
| Q    | 1     | DDR data output on both edges of DQSW270 |

**Table 598: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## ODDRX2DQS

DQS Output for DDR2 & DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

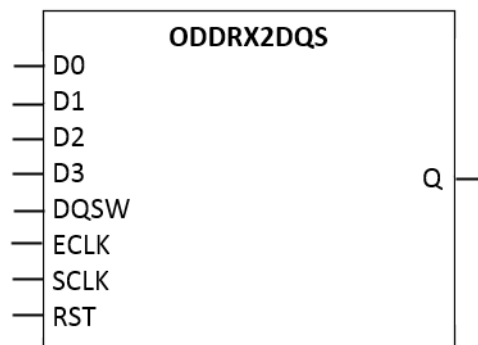

This primitive is used to generate the DQS data output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces. It is also used to generate CK and control signals (CKE, CS\_N, ODT) for LPDDR2/LPDDR3 memory interfaces in X2 gearing mode.

**Table 599: Input Ports**

| Name | Range | Description                                          |
|------|-------|------------------------------------------------------|
| D    | 3:0   | Data input to the ODDR. D0 is output first, D3 last. |
| DQSW | 1     | DQSW includes write leveling phase shift from ECLK.  |
| ECLK | 1     | Fast edge clock.                                     |
| SCLK | 1     | Primary clock input (divide-by-2 of ECLK).           |
| RST  | 1     | Reset to DDR registers.                              |

**Table 600: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q    | 1     | DDR data output on both edges of DQSW. |

**Table 601: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## ODDRX4

Generic X4 ODDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

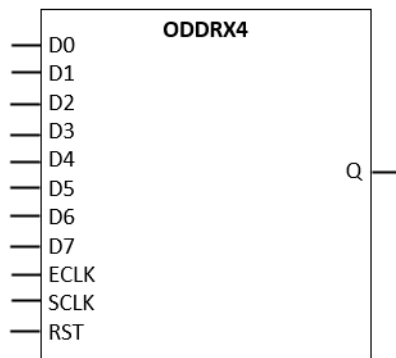

This primitive is used for Generic x4 ODDR implementation.

**Table 602: Input Ports**

| Name | Range | Description                                                        |
|------|-------|--------------------------------------------------------------------|
| D    | 7:0   | Parallel data input to the ODDR. D0 is sent out first and D7 last. |
| ECLK | 1     | Fast edge clock.                                                   |
| SCLK | 1     | Primary clock input (divide-by-4 of ECLK).                         |
| RST  | 1     | Reset to DDR registers.                                            |

**Table 603: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q    | 1     | DDR data output on both edges of ECLK. |

**Table 604: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

#### Note

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

## ODDRX4A

Generic x4 ODDR implementation

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

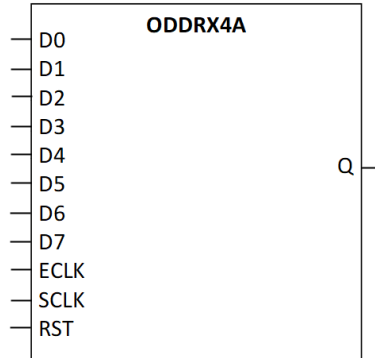


**Table 605: Input Ports**

| Name | Range | Type    | Active State | Description                               |
|------|-------|---------|--------------|-------------------------------------------|
| D0   | 1     | Data    | High         | DDR data input                            |
| D1   | 1     | Data    | High         | DDR data input                            |
| D2   | 1     | Data    | High         | DDR data input                            |
| D3   | 1     | Data    | High         | DDR data input                            |
| D4   | 1     | Data    | High         | DDR data input                            |
| D5   | 1     | Data    | High         | DDR data input                            |
| D6   | 1     | Data    | High         | DDR data input                            |
| D7   | 1     | Data    | High         | DDR data input                            |
| ECLK | 1     | Clock   | Rising Edge  | Fast edge clock                           |
| SCLK | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-4 of ECLK) |
| RST  | 1     | Control | High         | Reset to DDR registers                    |



**Table 606: Output Ports**

| Name | Range | Type | Active State | Description                                                                                                             |
|------|-------|------|--------------|-------------------------------------------------------------------------------------------------------------------------|
| Q    | 1     | Data | High         | DDR data output on both edges of SCLK<br>D0, D2, D4, D6: Positive edge of ECLK<br>D1, D3, D5, D7: Negative edge of ECLK |

**Table 607: Parameters**

| Name | Values                  | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.


- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**ODDRX4B**

Output for Generic DDR X4 Using 8:1 Gearing

Architectures Supported:

- ▶ LFMX04

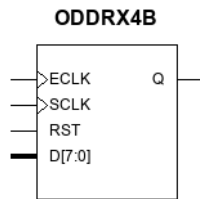**Table 608: Input Ports**

| Name | Range | Description                        |
|------|-------|------------------------------------|
| D0   | 1     | Data at the same edge of the clock |
| D1   | 1     | Data at the same edge of the clock |
| D2   | 1     | Data at the same edge of the clock |
| D3   | 1     | Data at the same edge of the clock |
| D4   | 1     | Data at the same edge of the clock |
| D5   | 1     | Data at the same edge of the clock |
| D5   | 1     | Data at the same edge of the clock |
| D7   | 1     | Data at the same edge of the clock |
| ECLK | 1     | Edge clock                         |
| SCLK | 1     | Clock from the CIB                 |
| RST  | 1     | RESET to this block from the CIB   |

**Table 609: Output Ports**

| Name | Range | Description     |
|------|-------|-----------------|
| Q    | 1     | DDR output data |

**Table 610: Parameters**

| Name | Values                            | Description                   |
|------|-----------------------------------|-------------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable or disable GSR feature |

**Description**


ODDRX4B is the output for generic DDR X4 using 8:1 gearing. It uses the VPIC\_TX hardware cell. It is used for top bank only.

## ODDRX4DQ

DQ output for DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

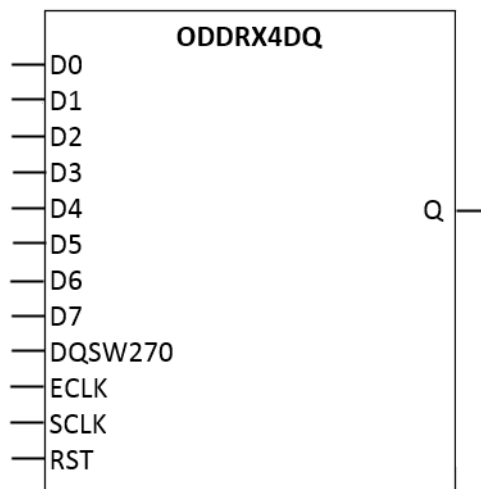

This primitive is used to generate DQ data output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces using x4 gearing. It is also used to generate the CA bus for LPDDR2/LPDDR3 interfaces using X4 gearing.

**Table 611: Input Ports**

| Name    | Range | Description                                                                                              |
|---------|-------|----------------------------------------------------------------------------------------------------------|
| D       | 7:0   | Data input to the ODDR. D0 is output first, D7 last.                                                     |
| DQSW270 | 1     | Clock that is 90° ahead of DQSW used to generate DQ. DQSW includes write leveling phase shift from ECLK. |
| ECLK    | 1     | Fast edge clock.                                                                                         |
| SCLK    | 1     | Primary clock input (divide-by-4 of ECLK).                                                               |
| RST     | 1     | Reset to DDR registers.                                                                                  |

**Table 612: Output Ports**

| Name | Range | Description                              |
|------|-------|------------------------------------------|
| Q    | 1     | DDR data output on both edges of DQSW270 |

**Table 613: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## ODDRX4DQS

DQS Output for DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

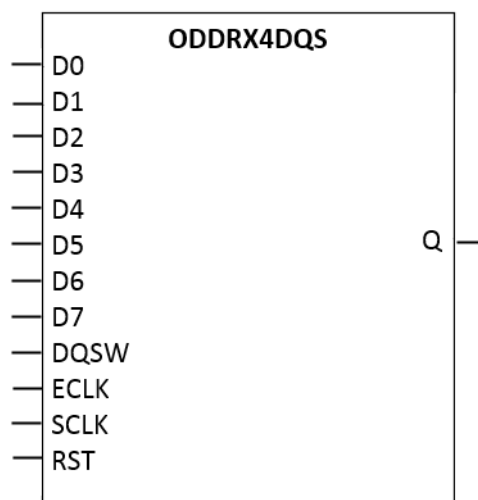

This primitive is used to generate DQS clock output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces using x4 gearing. It is also used to

generate CK and control (CKE, CS\_N, ODT) for LPDDR2/LPDDR3 memory interfaces using x4 gearing.

**Table 614: Input Ports**

| Name | Range | Description                                          |
|------|-------|------------------------------------------------------|
| D    | 7:0   | Data input to the ODDR. D0 is output first, D7 last. |
| DQSW | 1     | DQSW includes write leveling phase shift from ECLK.  |
| ECLK | 1     | Fast edge clock.                                     |
| SCLK | 1     | Primary clock input (divide-by-4 of ECLK).           |
| RST  | 1     | Reset to DDR registers.                              |

**Table 615: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q    | 1     | DDR data output on both edges of DQSW. |

**Table 616: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |


## ODDRX5

Generic X5 ODDR

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C

## ▶ UT24CP

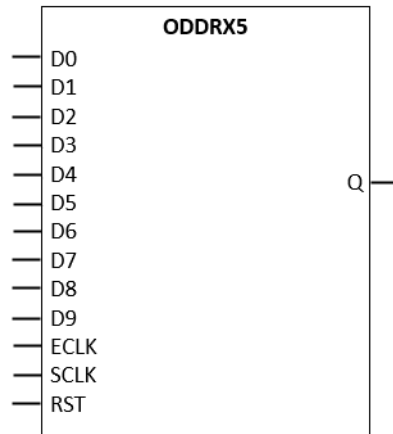

This primitive is used for Generic x5 ODDR implementation.

**Table 617: Input Ports**

| Name | Range | Description                                                        |
|------|-------|--------------------------------------------------------------------|
| D    | 9:0   | Parallel data input to the ODDR. D0 is sent out first and D9 last. |
| ECLK | 1     | Fast edge clock.                                                   |
| SCLK | 1     | Primary clock input (divide-by-5 of ECLK).                         |
| RST  | 1     | Reset to DDR registers.                                            |

**Table 618: Output Ports**

| Name | Range | Description                            |
|------|-------|----------------------------------------|
| Q    | 1     | DDR data output on both edges of ECLK. |

**Table 619: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.

**ODDRX5A**

Generic x5 ODDR implementation

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

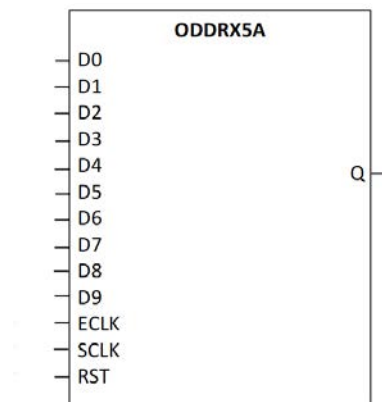


**Table 620: Input Ports**

| Name | Range | Type | Active State | Description    |
|------|-------|------|--------------|----------------|
| D0   | 1     | Data | High         | DDR data input |
| D1   | 1     | Data | High         | DDR data input |
| D2   | 1     | Data | High         | DDR data input |
| D3   | 1     | Data | High         | DDR data input |
| D4   | 1     | Data | High         | DDR data input |
| D5   | 1     | Data | High         | DDR data input |
| D6   | 1     | Data | High         | DDR data input |

**Table 620: Input Ports (Continued)**

| Name | Range | Type    | Active State | Description                               |
|------|-------|---------|--------------|-------------------------------------------|
| D7   | 1     | Data    | High         | DDR data input                            |
| D2   | 1     | Data    | High         | DDR data input                            |
| D3   | 1     | Data    | High         | DDR data input                            |
| ECLK | 1     | Clock   | Rising Edge  | Fast edge clock                           |
| SCLK | 1     | Clock   | Rising Edge  | Primary clock input (divide-by-5 of ECLK) |
| RST  | 1     | Control | High         | Reset to DDR registers                    |

**Table 621: Output Ports**

| Name | Range | Type | Active State | Description                                                                                                                             |
|------|-------|------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Q    | 1     | Data | High         | DDR data output on both edges of SCLK<br><br>D0, D2, D4, D6, D8: Positive edge of ECLK<br><br>D1, D3, D5, D7, D9: Negative edge of ECLK |

**Table 622: Parameters**

| Name | Values                  | Description                   |
|------|-------------------------|-------------------------------|
| GSR  | "ENABLED"<br>"DISABLED" | Enable or disable GSR feature |

**Note**

Avoid using IDDRX2/ODDRX2 and above gearing on a BIDI I/O.

- ▶ Only IDDRX1 and ODDRX1 can be used with a single BIDI I/O.
- ▶ If using IDDRX2 and above gearing, this must be used only with an INPUT.
- ▶ If using ODDRX2 and above gearing, this must be used only with an OUTPUT.


**ODDRX71A**

7:1 LVDS Output

Architectures Supported:



## LFMXO4

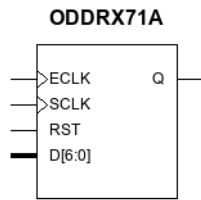**Table 623: Input Ports**

| Name | Range | Description                         |
|------|-------|-------------------------------------|
| ECLK | 1     | Edge clock                          |
| SCLK | 1     | Clock connected to the system clock |
| D0   | 1     | Data available for 7:1 muxing       |
| D1   | 1     | Data available for 7:1 muxing       |
| D2   | 1     | Data available for 7:1 muxing       |
| D3   | 1     | Data available for 7:1 muxing       |
| D4   | 1     | Data available for 7:1 muxing       |
| D5   | 1     | Data available for 7:1 muxing       |
| RST  | 1     | RESET for this block                |

**Table 624: Output Ports**

| Name | Range | Description            |
|------|-------|------------------------|
| Q    | 1     | 7:1 LVDS signal output |

**Table 625: Parameters**

| Name | Values                            | Description                   |
|------|-----------------------------------|-------------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable or disable GSR feature |

**Description**

ODDRX71A is the 7:1 LVDS output that supports 7:1 gearing. It is used for top bank only.

**OFD1P3AZ**

Positive edge triggered output D flip-flop with positive level enable.

Architectures supported:

▶ iCE40 UltraPlus

### OFD1P3AZ

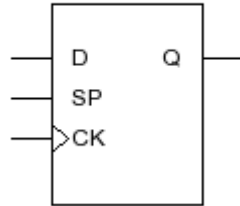


**Table 626: Input Ports**

| Name | Range | Description               |
|------|-------|---------------------------|
| D    | 1     | Data in                   |
| SP   | 1     | Clock enable, active high |
| CK   | 1     | Clock                     |

**Table 627: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Q    | 1     | Data out    |

**Table 628: Truth Table**

| Inputs |    |    | Output |
|--------|----|----|--------|
| D      | SP | CK | Q      |
| X      | 0  | X  | Q      |
| 0      | 1  | ↑  | 0      |
| 1      | 1  | ↑  | 1      |

X = Don't care

## OFD1P3BX

Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Preset

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

OFD1P3BX

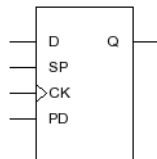


**Table 629: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| CK   | 1     | Clock   | Rising Edge  | Clock Input           |
| SP   | 1     | Control | High         | Positive Clock Enable |
| PD   | 1     | Control | High         | Asynchronous Preset   |

**Table 630: Output Ports**

| Name | Range | Type | Active State | Description |
|------|-------|------|--------------|-------------|
| Q    | 1     |      | High         | Data output |

**Table 631: Parameters**

| Name | Values                            | Description             |
|------|-----------------------------------|-------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |

**Table 632: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 1      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care


When GSR=0, Q=1 (D=SP=CK=PD=X)

## OFD1P3DX

Positive Edge Triggered Output D Flip-Flop with Positive Level Enable and Positive Level Asynchronous Clear

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

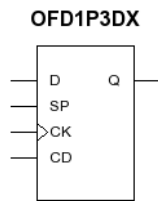**Table 633: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| SP   | 1     | Clock   | Rising Edge  | Clock Input           |
| CK   | 1     | Control | High         | Positive Clock Enable |
| CD   | 1     | Control | High         | Asynchronous Reset    |

**Table 634: Output Ports**

| Name | Range | Type | Active State | Description    |
|------|-------|------|--------------|----------------|
| Q    | 1     |      | High         | Data out to IO |

**Table 635: Parameters**

| Name | Values                            | Description             |
|------|-----------------------------------|-------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |

**Table 636: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | X  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

When GSR=0, Q=0 (D=SP=CK=CD=X)

## OFD1P3IX

Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous clear and Positive Level Enable (Clear Overrides Enable)

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

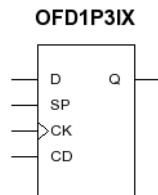


**Table 637: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| SP   | 1     | Clock   | Rising Edge  | Clock Input           |
| CK   | 1     | Control | High         | Positive Clock Enable |
| CD   | 1     | Control | High         | Asynchronous Reset    |

**Table 638: Output Ports**

| Name | Range | Type | Active State | Description    |
|------|-------|------|--------------|----------------|
| Q    | 1     |      | High         | Data out to IO |

**Table 639: Parameters**

| Name | Values                                     | Description             |
|------|--------------------------------------------|-------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset |

**Table 640: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | CD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | ↑  | 1  | 0      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care

When GSR=0, Q=0 (D=SP=CK=CD=X)


## OFD1P3JX

Positive Edge Triggered Output D Flip-Flop with Positive Level Synchronous Preset and Positive Level Enable (Preset Overrides Enable)

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T

- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶ UT24C
- ▶ UT24CP

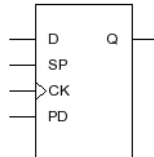**OFD1P3JX****Table 641: Input Ports**

| Name | Range | Type    | Active State | Description           |
|------|-------|---------|--------------|-----------------------|
| D    | 1     | Data    | High         | Data Input            |
| SP   | 1     | Clock   | Rising Edge  | Clock Input           |
| CK   | 1     | Control | High         | Positive Clock Enable |
| CD   | 1     | Control | High         | Asynchronous Reset    |

**Table 642: Output Ports**

| Name | Range | Type | Active State | Description    |
|------|-------|------|--------------|----------------|
| Q    | 1     |      | High         | Data out to IO |

**Table 643: Parameters**

| Name | Values                            | Description             |
|------|-----------------------------------|-------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable global set/reset |



**Table 644: Truth Table**

| Inputs |    |    |    | Output |
|--------|----|----|----|--------|
| D      | SP | CK | PD | Q      |
| X      | 0  | X  | 0  | Q      |
| X      | X  | ↑  | 1  | 1      |
| 0      | 1  | ↑  | 0  | 0      |
| 1      | 1  | ↑  | 0  | 1      |

X = Don't care


When GSR=0, Q=1 (D=SP=CK=PD=X)

## OFS1P3BX

Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Preset, and System Clock (used in output PIC area only)

Architectures Supported:

- ▶ LFMXO4

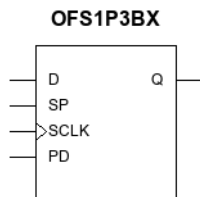**Table 645: Input Ports**

| Name | Description                       |
|------|-----------------------------------|
| D    | Data input                        |
| SP   | Positive clock enable             |
| SCLK | Serial clock; Primary clock input |
| PD   | Asynchronous preset               |

**Table 646: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data output |

**Table 647: Parameters**

| Name | Values                            | Description                         |
|------|-----------------------------------|-------------------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable or disable global set/reset. |

**Note**

This primitive must be paired with an output or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 648: Truth Table**

| INPUTS |    |      |    | OUTPUTS |
|--------|----|------|----|---------|
| D      | SP | SCLK | PD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | X    | 1  | 1       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care


When GSR=0, Q=1 (D=SP=SCLK=PD=X)

**OFS1P3DX**

Positive Edge Triggered D Flip-Flop with Positive Level Enable, Positive Level Asynchronous Clear, and System Clock (used in output PIC area only)

Architectures Supported:

## ▶ LFMXO4

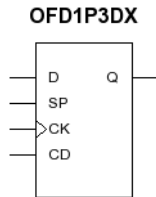**Table 649: Input Ports**

| Name | Description           |
|------|-----------------------|
| D    | Data input            |
| SP   | Positive clock enable |
| CK   | Clock input           |
| CD   | Asynchronous reset    |

**Table 650: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data output |

**Table 651: Parameters**

| Name | Values                            | Description                         |
|------|-----------------------------------|-------------------------------------|
| GSR  | “ENABLED” (default)<br>“DISABLED” | Enable or disable global set/reset. |

**Note**

This primitive must be paired with an output or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 652: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | CD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | X    | 1  | 0       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care


When GSR=0, Q=0 (D=SP=SCLK=CD=X)

## OFS1P3IX

Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Clear, Positive Level Enable (Clear overrides Enable), and System Clock (used in output PIC area only)

Architectures Supported:

▶ LFMXO4

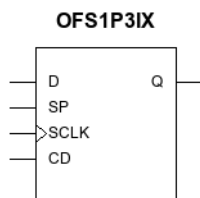**Table 653: Input Ports**

| Name | Description                       |
|------|-----------------------------------|
| D    | Data input                        |
| SP   | Positive clock enable             |
| SCLK | Serial clock; Primary clock input |
| CD   | Asynchronous reset                |

**Table 654: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data output |

**Table 655: Parameters**

| Name | Values                            | Description                         |
|------|-----------------------------------|-------------------------------------|
| GSR  | "ENABLED" (default)<br>"DISABLED" | Enable or disable global set/reset. |

**Note**

This primitive must be paired with an output or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 656: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | CD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | ↑    | 1  | 0       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care


When GSR=0, Q=0 (D=SP=SCLK=CD=X)

**OFS1P3JX**

Positive Edge Triggered D Flip-Flop with Positive Level Synchronous Preset, Positive Level Enable (Preset overrides Enable), and System Clock (used in output PIC area only)

## Architectures Supported:

## ▶ LFMXO4

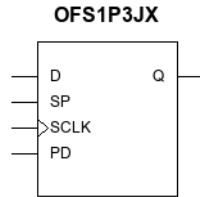**Table 657: Input Ports**

| Name | Description                       |
|------|-----------------------------------|
| D    | Data input                        |
| SP   | Positive clock enable             |
| SCLK | Serial clock; Primary clock input |
| PD   | Asynchronous preset               |

**Table 658: Output Ports**

| Name | Description |
|------|-------------|
| Q    | Data output |

**Table 659: Parameters**

| Name | Values                            | Description                         |
|------|-----------------------------------|-------------------------------------|
| GSR  | “ENABLED” (default)<br>“DISABLED” | Enable or disable global set/reset. |

**Note**

This primitive must be paired with an output or bidirectional buffer. The mapper automatically assigns the primitive and its buffer to the same PIC. Use the PIN or LOC properties, or the LOCATE COMP preference, on the buffer per normal use, but not on this primitive.

**Table 660: Truth Table**

| Inputs |    |      |    | Outputs |
|--------|----|------|----|---------|
| D      | SP | SCLK | PD | Q       |
| X      | 0  | X    | 0  | Q       |
| X      | X  | ↑    | 1  | 1       |
| 0      | 1  | ↑    | 0  | 0       |
| 1      | 1  | ↑    | 0  | 1       |

X = Don't care

When GSR=0, Q=1 (D=SP=SCLK=PD=X)


## OSC

Wrapper for Oscillator Block

It includes a trimmed low frequency oscillator, and a trimmed high frequency oscillator.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

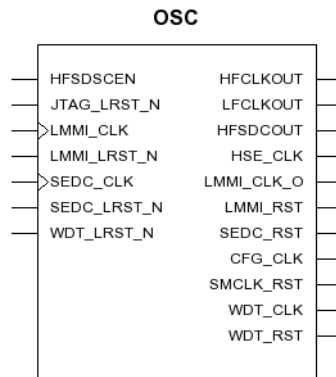**Table 661: Input Ports**

| Name        | Description                                          |
|-------------|------------------------------------------------------|
| HFSDSCEN    | SED/SEC enable from fabric                           |
| JTAG_LRST_N | JTAG local reset input from fabric (Active Low)      |
| LMMI_CLK    | LMMI clock input from fabric                         |
| LMMI_LRST_N | LMMI local reset input from fabric (Active Low)      |
| SEDC_CLK    | SEDC Clock, hardware inferred from OSC.HFSDCOUT      |
| SEDC_LRST_N | SEDC local reset input from fabric (Active Low)      |
| WDT_LRST_N  | Watch Dog Timer Local Reset from fabric (Active Low) |

**Table 662: Output Ports**

| Name       | Description                                            |
|------------|--------------------------------------------------------|
| HFCLKOUT   | High frequency clock output to PCLK tree               |
| LFCLKOUT   | Low frequency clock output to PCLK tree                |
| HFSDCOUT   | SED/SEC clock output, hardware inferred to OSC.SED_CLK |
| HSE_CLK    | HSE clock output, hardware inferred to CRE.CRE_CLK     |
| LMMI_CLK_O | LMMI clock output to CONFIG_LMMI(A).LMMICK             |
| LMMI_RST   | LMMI reset output to CONFIG_LMMI(A).LMMIRESETN         |
| SEDC_RST   | SEDC reset output to SEDC.RSTSEDC                      |



**Table 662: Output Ports (Continued)**

| Name      | Description                                                       |
|-----------|-------------------------------------------------------------------|
| CFG_CLK   | Config clock output to CONFIG_LMMI.SMCLK, CRE.CFG_CLK, JTAG.SMCLK |
| SMCLK_RST | Config clock reset output to CONFIG_LMMI.RSTSMCLK                 |
| WDT_CLK   | Watchdog timer clock output to WDT.WDT_CLK                        |
| WDT_RST   | Watchdog timer reset output to WDT.WDT_RST                        |

**Table 663: Parameters**

| Name            | Values                                     | Description                                                                                            |
|-----------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------|
| DTR_EN          | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Digital Temperature Readout block enable from MIB                                                      |
| HF_CLK_DIV      | "1" ( <i>default</i> )<br>"1" - "255"      | User assignable high frequency oscillator output clock divider configuration (div2~div256)             |
| HF_SED_SEC_DIV  | "1" ( <i>default</i> )<br>"1" - "255"      | User assignable high frequency oscillator output SED and SEC clock divider configuration (div2~div256) |
| HF_FABRIC_EN    | "DISABLED" ( <i>default</i> )<br>"ENABLED" | High frequency oscillator trim input source mux select (for TEST only)                                 |
| HF_OSC_EN       | "ENABLED" ( <i>default</i> )<br>"DISABLED" | High frequency oscillator output enable, controlled by the user                                        |
| HFDIV_FABRIC_EN | "ENABLED" ( <i>default</i> )<br>"DISABLED" | High frequency oscillator divider configuration mux select, fabric divider enable                      |
| LF_FABRIC_EN    | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Low frequency oscillator trim input source mux select, fabric driven enable (for TEST only)            |
| LF_OUTPUT_EN    | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Low frequency clock output enable                                                                      |
| DEBUG_N         | "DISABLED" ( <i>default</i> )<br>"ENABLED" | Oscillator debug mode enable                                                                           |
| MCJTAGGSRNDIS   | "EN" ( <i>default</i> )<br>"DIS"           | JTAG GSR enable/disable control                                                                        |
| MCLMMIGSRNDIS   | "EN" ( <i>default</i> )<br>"DIS"           | CONFIG_LMMI GSR enable/disable control                                                                 |
| MCSEDCGSRNDIS   | "EN" ( <i>default</i> )<br>"DIS"           | SEDC GSR enable/disable control                                                                        |

**Table 663: Parameters**

| Name         | Values                               | Description                              |
|--------------|--------------------------------------|------------------------------------------|
| MCWDTGSRNDIS | "EN" ( <i>default</i> )<br>"DIS"     | WDT GSR enable/disable control           |
| SMCLK_DIV    | "3" ( <i>default</i> )<br>"3" - "10" | Config clock divider for simulation only |

**Note:**

The timer uses these device constraint equations to know what the periods of the output clocks of the Oscillator will be based on user design settings.

The numerical values in the equations have units of picoseconds.

For LFCLKOUT (created clock): ADJUSTED\_PERIOD=31250000

For I2CCKOUT (created clock): ADJUSTED\_PERIOD=7812500

For HFCLKOUT (created clock): ADJUSTED\_PERIOD=6666.66667 \* HF\_CLK\_DIV


For HFSDCOUT (created clock): ADJUSTED\_PERIOD=6666.66667 \*  
HF\_SED\_SEC\_DIV

## OSCA

Internal Oscillator

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

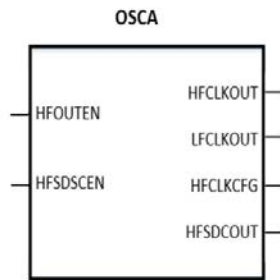**Table 664: Input Ports**

| Name     | Description                        |
|----------|------------------------------------|
| HFOUTEN  | High frequency clock output enable |
| HFSDSCEN | SED/SEC enable from fabric         |

**Table 665: Output Ports**

| Name     | Description                                                               |
|----------|---------------------------------------------------------------------------|
| HFCLKOUT | High frequency clock output                                               |
| LFCLKOUT | Low Frequency clock output                                                |
| HFCLKCFG | High Frequency Reference Clock; 450 MHz                                   |
| HFSDCOUT | 450 MHz with Programmable Divider (2~256) to User for SED/SEC Application |

**Table 666: Parameters**

| Name           | Values               | Description                                              | Inferable |
|----------------|----------------------|----------------------------------------------------------|-----------|
| HF_CLK_DIV     | 1 ( <i>default</i> ) | HF oscillator output divider configuration (div2~div256) | No        |
| HF_SED_SEC_DIV | 1 ( <i>default</i> ) | HF oscillator output divider configuration (div2~div256) | No        |

**Table 666: Parameters**

| Name         | Values                        | Description                       | Inferable |
|--------------|-------------------------------|-----------------------------------|-----------|
| HF_OSC_EN    | "ENABLED" ( <i>default</i> )  | HF oscillator enable              | No        |
| LF_OUTPUT_EN | "DISABLED" ( <i>default</i> ) | Low frequency clock output enable | No        |


OSCA is the source of the internal clock for configuration. After configuration this oscillator is disabled by default. If needed, it can be enabled by instantiating OSCA or Sysbus (with sys\_clk\_sel=OSC option). OSCA may be used as a general-purpose clock to drive FPGA logic.

## OSCE

High-frequency oscillator

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

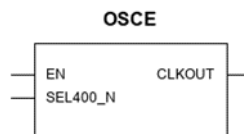**Table 667: Input Ports**

| Name     | Description                    |
|----------|--------------------------------|
| EN       | Enable CLKOUT                  |
| SEL400_N | Switch between 400 and 320 MHz |

**Table 668: Output Ports**

| Name   | Description            |
|--------|------------------------|
| CLKOUT | Output clock to fabric |

**Table 669: Parameters**


| Name    | Values                                       | Description          |
|---------|----------------------------------------------|----------------------|
| CLK_DIV | "1" (default)<br>Integer string "1" to "256" | CLKOUT divider value |

## OSCD

High-frequency oscillator

Architectures supported:

- ▶ LIFCL-33U

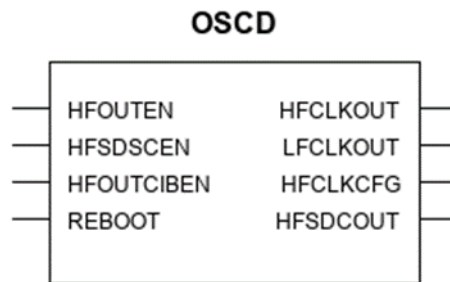**Table 670: Input Ports**

| Name       | Description                                                                                                     |
|------------|-----------------------------------------------------------------------------------------------------------------|
| HFOUTEN    | HF clock (225 MHz) output enable: just for test                                                                 |
| HFSDSCEN   | HF user clock output enable                                                                                     |
| HFOUTCIBEN | CIB control to turn on/off HF-OSC, function during user mode with mc1_en_hf_osc_cib high                        |
| REBOOT     | CIB control to enable/disable hf_clk_config output, function during user mode with mc1_en_hf_config_on_cib high |

**Table 671: Output Ports**

| Name     | Description                                                                                                                                |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------|
| HFCLKOUT | 450 MHz with programmable divider (2~256) to user                                                                                          |
| LFCLKOUT | Low frequency clock output after div4: 32 KHz                                                                                              |
| HFCLKCFG | 450 MHz going to Config block. Config Block would generate the clk_config, as well as the other blocks it needs, such as SPI or SED clocks |
| HFSDCOUT | 450 MHz with programmable divider (2~256) to CFG                                                                                           |

**Table 672: Parameters**


| Name           | Description                                                                               |
|----------------|-------------------------------------------------------------------------------------------|
| DTR_EN         | DTR block enable from MIB                                                                 |
| HF_CLK_DIV     | User assignable HF oscillator output divider configuration (div2~div256)                  |
| HF_SED_SEC_DIV | User assignable HF oscillator output divider configuration (div2~div256)                  |
| HF_FABRIC_EN   | High frequency oscillator trim source mux select                                          |
| HF_OSC_EN      | HF oscillator enable, controlled by the user                                              |
| LF_FABRIC_EN   | Low frequency oscillator trim source mux select, fabric driven trim enable                |
| LF_OUTPUT_EN   | Low frequency clock output enable                                                         |
| DEBUG_N        | Ignore/enable the SLEEP/STOP function during the USER mode. 0: Ignore the SLEEP/STOP mode |

## OSCH

Oscillator

Architectures Supported:

▶ LFMXO4

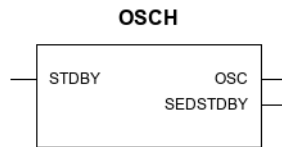**Table 673: Input Ports**

| Name  | Range | Description                     |
|-------|-------|---------------------------------|
| STDBY | 1     | Standby – power down oscillator |

**Table 674: Output Ports**

| Name     | Range | Description                    |
|----------|-------|--------------------------------|
| OSC      | 1     | Oscillator clock output        |
| SEDSTDBY | 1     | Standby – power down SED clock |

**Table 675: Parameters**

| Name                     | Values                                                                                                                                                                                                                            | Description |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| <a href="#">NOM_FREQ</a> | "2.08" (default), "2.15", "2.22", "2.29", "2.38", "2.46", "2.56", "2.66", "2.77", "2.89".02, "3.17", ..., "19.0", "20.46", "22.17", "24.18", "26.6", "29.56", "33.25", "38.0", "44.33", "53.2", "66.5", "88.67", "133.0" (in MHz) |             |

### Description

By default, the internal oscillator will be enabled even if the user does not have it instantiated in the design. User can disable the internal oscillator by instantiating it in the design and using the STDBY port. This port can be connected to a user signal or an I/O pin. The user must insure that the oscillator is not turned off when it is needed for operations such as WISHBONE bus operations, SPI or I2C configuration, SPI or I2C user mode operation, SPI or I2C background Flash updates or SED.

### OSCH Usage with VHDL

```

COMPONENT OSCH
-- synthesis translate_off
  GENERIC (NOM_FREQ: string := "2.56");
-- synthesis translate_on
  PORT (STDBY   : IN  std_logic;
        OSC     : OUT std_logic;

```

```
        SEDSTDBY: OUT std_logic);  
END COMPONENT;  
  
attribute NOM_FREQ : string;  
attribute NOM_FREQ of OSCInst0 : label is "2.56";  
  
begin  
  
OSCInst0: OSCH  
-- synthesis translate_off  
  GENERIC MAP (  
    NOM_FREQ => "2.5"  
  )  
-- synthesis translate_on  
  PORT MAP (STDBY => stdby,  
    OSC    => osc_int,  
    SEDSTDBY => stdby_sed  
  );
```


For more information, refer to related technical notes on the Lattice web site:

## OSHX2

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP



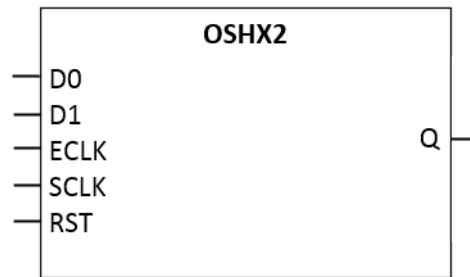

This primitive is used to generate the CS\_N control for DDR3/DDR3L memory with x2 gearing.

**Table 676: Input Ports**

| Name   | Description                                    |
|--------|------------------------------------------------|
| D0, D1 | Data input. D0 is output first, followed by D1 |
| ECLK   | ECLK input.                                    |
| SCLK   | Primary clock input (divide-by-2 of ECLK).     |
| RST    | Reset input.                                   |

**Table 677: Output Ports**

| Name | Description                 |
|------|-----------------------------|
| Q    | Address and command output. |

**Table 678: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## OSHX4

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX

- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

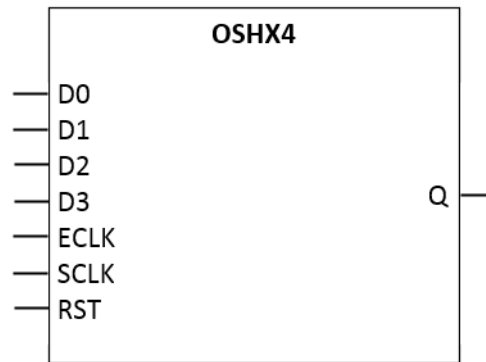**Table 679: Input Ports**

| Name | Range | Description                               |
|------|-------|-------------------------------------------|
| D    | 3:0   | Data input. D0 is output first, D3 last.  |
| ECLK | 1     | ECLK input.                               |
| SCLK | 1     | Primary clock input (divide-by-4 of ECLK) |
| RST  | 1     | Reset input.                              |

**Table 680: Output Ports**

| Name | Range | Description                 |
|------|-------|-----------------------------|
| Q    | 1     | Address and command output. |

This primitive is used to generate the CS\_N control for DDR3 memory with x4 gearing and write leveling.

**Table 681: Parameters**


| Name | Values                                 | Description              |
|------|----------------------------------------|--------------------------|
| GSR  | ENABLED ( <i>default</i> )<br>DISABLED | Enable global set/reset. |

## OUTDELAYA

Add static and dynamic delay to DOUT and TOUT for write training in LPDDR4 mode.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

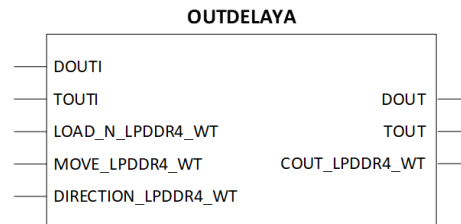**Table 682: Input Ports**

| Name                | Description                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------|
| DOUTI               | The input for DOUT                                                                                     |
| TOUTI               | The input for TOUT                                                                                     |
| LOAD_N_LPDDR4_WT    | For LPDDR4 write training, asynchronous reset the output final delay code to factory default value.    |
| MOVE_LPDDR4_WT      | For LPDDR4 write training, move pulse's rising edge will change the code according to direction value. |
| DIRECTION_LPDDR4_WT | For LPDDR4 write training fine delay, "0" to increase the code, "1" to decrease the code.              |

**Table 683: Output Ports**

| Name           | Description                                                                                              |
|----------------|----------------------------------------------------------------------------------------------------------|
| DOUT           | PIC data output, to ASICIO                                                                               |
| TOUT           | PIC tri-state output, to ASICIO                                                                          |
| COUT_LPDDR4_WT | For LPDDR4 write training, write training margin test output flag to indicate the underflow or overflow. |

**Table 684: Parameters**


| Name               | Values                        | Description                                                                                                            |
|--------------------|-------------------------------|------------------------------------------------------------------------------------------------------------------------|
| MARGIN_TEST_ENABLE | DISABLED (default)<br>ENABLED | For LPDDR4 write training, margin test enable<br>0: disable margin test<br>1: enable margin test                       |
| DEL_VALUE          | 0...127 (default = 0)         | For LPDDR4 write training, output fine delay fuse setting:<br>7b0000_0000: minimum delay<br>7b1111_1111: maximum delay |

## OUTDELAYB

Add static delay to DOUT and TOUT for write training in LPDDR4 mode.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

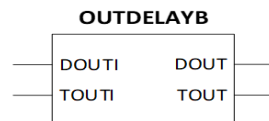**Table 685: Input Ports**

| Name  | Description        |
|-------|--------------------|
| DOUTI | The input for DOUT |
| TOUTI | The input for TOUT |

**Table 686: Output Ports**

| Name | Description                     |
|------|---------------------------------|
| DOUT | PIC data output, to ASICIO      |
| TOUT | PIC tri-state output, to ASICIO |

**Table 687: Parameters**


| Name      | Values                   | Description                                                                                                            |
|-----------|--------------------------|------------------------------------------------------------------------------------------------------------------------|
| DEL_VALUE | 0...127<br>(default = 0) | For LPDDR4 write training, output fine delay fuse setting:<br>7b0000_0000: minimum delay<br>7b1111_1111: maximum delay |

## OUTDELAYC

Add static and dynamic delay to DOUT and TOUT for write training in LPDDR4 mode.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

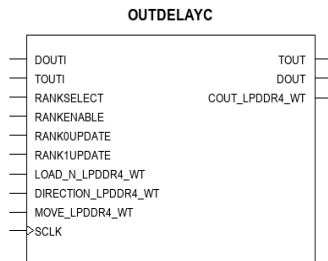**Table 688: Input Ports**

| Name             | Description                                                                                            |
|------------------|--------------------------------------------------------------------------------------------------------|
| DOUTI            | The input for DOUT                                                                                     |
| TOUTI            | The input for TOUT                                                                                     |
| LOAD_N_LPDDR4_WT | For LPDDR4 write training, asynchronous reset the output final code for factory default value.         |
| MOVE_LPDDR4_WT   | For LPDDR4 write training, move pulse's rising edge will change the code according to direction value. |

**Table 688: (Continued)Input Ports**

| Name                | Description                                                                                |
|---------------------|--------------------------------------------------------------------------------------------|
| DIRECTION_LPDDR4_WT | For LPDDR4 write training fine delay, "0" to increase the code, "1" to decrease the code.  |
| RANKSELECT          | 0 - Select delay rank 0<br>1 - Select delay rank 1                                         |
| RANKENABLE          | 0 - Select bypassed actual path delay code<br>1 - Select registered actual path delay code |
| RANK0UPDATE         | 0 - Rank - 0 registers not enabled<br>1 - Enable Rank - 0 registers                        |
| RANK1UPDATE         | 0 - Rank - 1 registers not enabled<br>1 - Enable Rank - 1 registers                        |
| SCLK                | SCLK clock for inputs from CIB                                                             |

**Table 689: Output Ports**

| Name           | Description                                                                                              |
|----------------|----------------------------------------------------------------------------------------------------------|
| DOUT           | PIC data output, to ASICIO                                                                               |
| TOUT           | PIC tri-state output, to ASICIO                                                                          |
| COUT_LPDDR4_WT | For LPDDR4 write training, write training margin test output flag to indicate the underflow or overflow. |

**Table 690: Parameters**

| Name               | Values                                 | Description                                                                                                            |
|--------------------|----------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| MARGIN_TEST_ENABLE | ENABLED ( <i>default</i> )<br>DISABLED | For LPDDR4 write training, margin test enable<br>0: disable margin test<br>1: enable margin test                       |
| DEL_VALUE          | 0...127 ( <i>default</i> = 0)          | For LPDDR4 write training, output fine delay fuse setting:<br>7b0000_0000: minimum delay<br>7b1111_1111: maximum delay |

## PCIE

Wrapper for Hardened PCIE Interface

### Note:

---

You should not try to use this primitive directly. Instead, use the related IP in IP Catalog. The following information is for reference only.

---

Architectures supported:

- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C

## PCIE

|                  |                 |
|------------------|-----------------|
| LMMICK           | LMMIRDATA[31:0] |
| LMMIRESET_N      | LMMIRDATAVALID  |
| LMMIREQUEST      | LMMIREADY       |
| LMMIWRD_N        | ACJNOUT         |
| LMMIOFFSET[14:0] | ACJPOUT         |
| LMMIWDATA[31:0]  | CKUSRO          |
| AUXCK            | ECKINDO         |
| CKUSRI           | ERXCKDO         |
| ECKIN            | ETXCKDO         |
| ECKIND2          | FLR[3:0]        |
| ERSTN            | MINTO           |
| ERSTND2          | PMCTRL[4:0]     |
| ERXCKD2          | PMCTRLN         |
| ERXRSND2         | PPBDSEL[7:0]    |
| ETXCKD2          | UDLLKUP         |
| ETXRSND2         | UPLLKUP         |
| FLRACK[3:0]      | UTLLKUP         |
| MINTLEG[3:0]     | UCFGRDD[31:0]   |
| PERSTN           | UCFGRDE         |
| PMDPAST[4:0]     | UCFGRDY         |
| PRMSGSD          | VRXCMD[12:0]    |
| PRNOSNP[12:0]    | VRXD[31:0]      |
| PRNSNP           | VRXDP[3:0]      |
| PRSNOP[12:0]     | VRXEOP          |
| PRSNPRE          | VRXERR          |
| PPBDREG[31:0]    | VRXF[1:0]       |
| REXTCK           | VRXSEL[1:0]     |
| REXTRST          | VRXSOP          |
| RSTUSRN          | VRXVD           |
| ULTSDIS          | VXCDINIT        |
| UCFGADDR[9:0]    | VXCDNH[11:0]    |
| UCFGF[2:0]       | VTXCRRE         |
| UCFGSERD         | VXRDY           |
| UCFGVD           | TESTOUT[7:0]    |
| UCFGWRBE[3:0]    | S0TXN           |
| UCFGWRD[31:0]    | S0TXP           |
| UCFGWRDN         | CLKREQO         |
| USERAUPD         | CLKREQOE        |
| USERTRS[3:0]     |                 |
| VRXCINIT         |                 |
| VRXCNH[11:0]     |                 |
| VRXCINF          |                 |
| VRXCRRE          |                 |
| VRXRDY           |                 |
| VXD[31:0]        |                 |
| VXDP[3:0]        |                 |
| VXEOP            |                 |
| VXEOPN           |                 |
| VXSOP            |                 |
| VXVD             |                 |
| S0REFCKN         |                 |
| S0REFCKP         |                 |
| S0REFRET         |                 |
| S0REXT           |                 |
| S0RXN            |                 |
| S0RXP            |                 |
| CLKREQI          |                 |



**Table 691: Input Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                   |
|-------------|--------------|--------------------------------------|
| LMMICK      | 1            | Clock                                |
| LMMIRESET_N | 1            | Reset                                |
| LMMIREQUEST | 1            | Start transaction                    |
| LMMIWRRD_N  | 1            | Write = HIGH, Read = LOW             |
| LMMIOFFSET  | 16:0         | Word Address/Offset                  |
| LMMIWDATA   | 31:0         | Write data                           |
| AUXCK       | 1            | Auxiliary Clock                      |
| CKUSRI      | 1            | Clock User Input                     |
| ECKIN       | 1            | External Clock Input                 |
| ECKIND2     | 1            | External Clock Input Domain 2        |
| ERSTN       | 1            | External Reset (Active Low)          |
| ERSTND2     | 1            | External Reset Domain 2 (Active Low) |
| ERXCKD2     | 1            | External Receive Clock Domain 2      |
| ERXRSND2    | 1            | External Receive Reset Domain 2      |
| ETXCKD2     | 1            | External Transmit Clock Domain 2     |
| ETXRSND2    | 1            | External Transmit Reset Domain 2     |
| FLRACK      | 3:0          | Function Level Reset Acknowledge     |
| MINTLEG     | 3:0          | Main Interrupt Legacy                |
| PERSTN      | 1            | PCIe Reset (Active Low)              |
| PMDPAST     | 4:0          | PMD Passive State                    |
| PRMSGSD     | 1            | Pre-Snoop Message Detected           |
| PRNOSNP     | 12:0         | Pre-No Snoop                         |
| PRNSNP      | 1            | Pre-Snoop Response Enable            |
| PRSNPRE     | 12:0         | Pre-Snoop                            |
| PRSNPRE     | 1            | Pre-Snoop Ready Enable               |
| PPBDREG     | 31:0         | PPB Debug Register Access            |
| REXTCK      | 1            | Reference External Clock             |
| REXTRST     | 1            | Reference External Reset             |
| RSTUSRN     | 1            | Reset User (Active Low)              |
| ULTSDIS     | 1            | Ultrascale Disable                   |

**Table 691: Input Ports (Continued)**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                         |
|-------------|--------------|--------------------------------------------|
| UCFGADDR    | 9:0          | User Configuration Address                 |
| UCFGF       | 2:0          | User Configuration Frame Enable            |
| UCFGSERD    | 1            | User Configuration Serial Data             |
| UCFGVD      | 1            | User Configuration Valid Data              |
| UCFGWRBE    | 3:0          | User Configuration Write Byte Enable       |
| UCFGWRD     | 31:0         | User Configuration Write Data              |
| UCFGWRDN    | 1            | User Configuration Write Data (Active Low) |
| USERAUPD    | 1            | User Area Update                           |
| USERTRS     | 3:0          | User Transaction Start                     |
| VRXCINIT    | 1            | Virtual RX Channel Initialization          |
| VRXCNH      | 11:0         | Virtual RX Channel Header                  |
| VRXCNINF    | 1            | Virtual RX Channel Info                    |
| VRXCRRE     | 1            | Virtual RX Channel Ready                   |
| VRXRDY      | 1            | Virtual RX Ready                           |
| VXD         | 31:0         | Virtual Data                               |
| VXDP        | 3:0          | Virtual Data Parity                        |
| VXEOP       | 1            | Virtual End of Packet                      |
| VXEOPN      | 1            | Virtual End of Packet (Active Low)         |
| VXSOP       | 1            | Virtual Start of Packet                    |
| VXVD        | 1            | Virtual Valid Data                         |
| S0REFCKN    | 1            | Reference Clock Negative (Lane 0)          |
| S0REFCKP    | 1            | Reference Clock Positive (Lane 0)          |
| S0REFRET    | 1            | Reference Clock Return (Lane 0)            |
| S0REXT      | 1            | Reference External Termination (Lane 0)    |
| S0RXN       | 1            | Serial Receive Negative (Lane 0)           |
| S0RXP       | 1            | Serial Receive Positive (Lane 0)           |
| CLKREQI     | 1            | Clock Request Input                        |

**Table 692: Output Ports**

| <b>Name</b>    | <b>Range</b> | <b>Description</b>                    |
|----------------|--------------|---------------------------------------|
| LMMIRDATA      | 31:0         | Read data                             |
| LMMIRDATAVALID | 1            | Valid data indicator                  |
| LMMIREADY      | 1            | Slave ready signal                    |
| ACJNOUT        | 1            | AC Jitter Noise Output                |
| ACJPOUT        | 1            | AC Jitter Pattern Output              |
| CKUSRO         | 1            | Clock User Output                     |
| ECKINDO        | 1            | External Clock Input Domain Output    |
| ERXCKDO        | 1            | External Receive Clock Domain Output  |
| ETXCKDO        | 1            | External Transmit Clock Domain Output |
| FLR            | 3:0          | Function Level Reset                  |
| MINTO          | 1            | Main Interrupt Output                 |
| PMCTRL         | 4:0          | Power Management Control              |
| PMCTRLLEN      | 1            | Power Management Control Enable       |
| PPBDSEL        | 7:0          | PPB Debug Select                      |
| UDLLKUP        | 1            | User DLL Lock-Up                      |
| UPLLKUP        | 1            | User PLL Lock-Up                      |
| UTLLKUP        | 1            | User TLL Lock-Up                      |
| UCFGRDD        | 31:0         | User Configuration Read Data          |
| UCFGRDE        | 1            | User Configuration Read Enable        |
| UCFGRDY        | 1            | User Configuration Ready              |
| VRXCMDD        | 12:0         | Virtual RX Command Data               |
| VRXD           | 31:0         | Virtual RX Data                       |
| VRXDP          | 3:0          | Virtual RX Data Parity                |
| VRXEOP         | 1            | Virtual RX End of Packet              |
| VRXERR         | 1            | Virtual RX Error                      |
| VRXF           | 1:0          | Virtual RX Frame                      |
| VRXSEL         | 1:0          | Virtual RX Select                     |
| VRXSOP         | 1            | Virtual RX Start of Packet            |
| VRXVD          | 1            | Virtual RX Valid Data                 |
| VXCDINIT       | 1            | Virtual Channel DLL Initialization    |
| VXCDNH         | 11:0         | Virtual Channel DLL Not Held          |

**Table 692: Output Ports (Continued)**

| Name     | Range | Description                       |
|----------|-------|-----------------------------------|
| VTXCRRE  | 1     | Virtual TX Channel Ready          |
| VXRDY    | 1     | Virtual Channel Ready             |
| TESTOUT  | 7:0   | Test Output                       |
| S0TXN    | 1     | Serial Transmit Negative (Lane 0) |
| S0TXP    | 1     | Serial Transmit Positive (Lane 0) |
| CLKREQO  | 1     | Clock Request Output              |
| CLKREQOE | 1     | Clock Request Output Enable       |

**Table 693: Parameters**

| Name                           | Values                   |
|--------------------------------|--------------------------|
| A_CHNGD_MAX                    | "0'b100" (default)       |
| A0_FORCE                       | "DISABLED" (default)     |
| A0_FREEZE                      | "DISABLED" (default)     |
| A0_INIT                        | "0'b000000" (default)    |
| A0DIR_VAL                      | "DISABLED" (default)     |
| A1_FORCE                       | "DISABLED" (default)     |
| A1_FREEZE                      | "DISABLED" (default)     |
| A1_INIT                        | "0'b000000" (default)    |
| A1DIR_VAL                      | "DISABLED" (default)     |
| A2_FORCE                       | "DISABLED" (default)     |
| A2_FREEZE                      | "DISABLED" (default)     |
| A2_INIT                        | "0'b000000" (default)    |
| A2GAIN_CALIB                   | "0'b100110" (default)    |
| ACJTAG_REG                     | "0'b00" (default)        |
| ADDR_LIMIT_PRE_MTHD_CTRL       | "0'b0100" (default)      |
| ADDR_LIMIT_TABLE_MTHD_CTRL     | "0'b00101" (default)     |
| ADIR_OVR                       | "DISABLED" (default)     |
| ADV_CH_CD_SEL                  | "IMPLEMENT_CH" (default) |
| ADV_TARGET_LINK_SPEED_USPORT_A | "DISABLED" (default)     |
| ADV_TARGET_LINK_SPEED_USPORT_B | "DISABLED" (default)     |
| ADV_TARGET_LINK_SPEED_USPORT_C | "DISABLED" (default)     |

[illegible]

**Table 693: Parameters (Continued)**

| <b>Name</b>                 | <b>Values</b>                    |
|-----------------------------|----------------------------------|
| ARXRSVCTL                   | "0'b00000000" (default)          |
| ARXSEL_OUT                  | "DISABLED" (default)             |
| ASPM_L1_1_SUPPORTED         | "SUPPORTED" (default)            |
| ASPM_L1_2_SUPPORTED         | "SUPPORTED" (default)            |
| ASPM_SUPPORT                | "LOS_AND_L1_SUPPORTED" (default) |
| ATTENTION_BUTTON_PRESENT    | "NOT_SUPPORTED" (default)        |
| ATTENTION_INDICATOR_PRESENT | "NOT_SUPPORTED" (default)        |
| ATXICP_RATE0                | "0'b101" (default)               |
| ATXICP_RATE1                | "0'b101" (default)               |
| ATXICP_RATE2                | "0'b100" (default)               |
| AUTO_SHIFT                  | "ENABLED" (default)              |
| AUTONOMOUS_WIDTH_CHANGE     | "OTHERWISE" (default)            |
| AUX_CLK_PERIOD              | "0'b1111010000100100" (default)  |
| AUX_CURRENT                 | "SELF_POWERED" (default)         |
| AUXCLK1US_MAX               | "0'b00001001" (default)          |
| AUXIDL_MAX                  | "0'b00000100" (default)          |
| BAR_INDEX_CFG0_A            | "0'b000" (default)               |
| BAR_INDEX_CFG0_B            | "0'b000" (default)               |
| BAR_INDEX_CFG0_C            | "0'b000" (default)               |
| BAR_INDEX_CFG0_D            | "0'b000" (default)               |
| BAR_INDEX_CFG1_A            | "0'b001" (default)               |
| BAR_INDEX_CFG1_B            | "0'b001" (default)               |
| BAR_INDEX_CFG1_C            | "0'b001" (default)               |
| BAR_INDEX_CFG1_D            | "0'b001" (default)               |
| BAR_INDEX_CFG2_A            | "0'b010" (default)               |
| BAR_INDEX_CFG2_B            | "0'b010" (default)               |
| BAR_INDEX_CFG2_C            | "0'b010" (default)               |
| BAR_INDEX_CFG2_D            | "0'b010" (default)               |
| BAR_INDEX_CFG3_A            | "0'b011" (default)               |
| BAR_INDEX_CFG3_B            | "0'b011" (default)               |
| BAR_INDEX_CFG3_C            | "0'b011" (default)               |
| BAR_INDEX_CFG3_D            | "0'b011" (default)               |

**Table 693: Parameters (Continued)**

| <b>Name</b>        | <b>Values</b>                          |
|--------------------|----------------------------------------|
| BAR_INDEX_CFG4_A   | "0'b100" (default)                     |
| BAR_INDEX_CFG4_B   | "0'b100" (default)                     |
| BAR_INDEX_CFG4_C   | "0'b100" (default)                     |
| BAR_INDEX_CFG4_D   | "0'b100" (default)                     |
| BAR_INDEX_CFG5_A   | "0'b101" (default)                     |
| BAR_INDEX_CFG5_B   | "0'b101" (default)                     |
| BAR_INDEX_CFG5_C   | "0'b101" (default)                     |
| BAR_INDEX_CFG5_D   | "0'b101" (default)                     |
| BIR_MSIX_PBA_A     | "BAR0" (default)                       |
| BIR_MSIX_PBA_B     | "BAR0" (default)                       |
| BIR_MSIX_PBA_C     | "BAR0" (default)                       |
| BIR_MSIX_PBA_D     | "BAR0" (default)                       |
| BIR_MSIX_TABLE_A   | "BAR0" (default)                       |
| BIR_MSIX_TABLE_B   | "BAR0" (default)                       |
| BIR_MSIX_TABLE_C   | "BAR0" (default)                       |
| BIR_MSIX_TABLE_D   | "BAR0" (default)                       |
| BYP_AVG            | "USED" (default)                       |
| BYPASS             | "PERFORM_RECEIVER_DETECTION" (default) |
| BYPASS_ADDR_DEC    | "NORMAL" (default)                     |
| C_RX_LIM_D         | "DISABLED" (default)                   |
| C_RX_LIM_H         | "DISABLED" (default)                   |
| C_TX_LIM_D         | "DISABLED" (default)                   |
| C_TX_LIM_H         | "DISABLED" (default)                   |
| CALIB_3DB          | "ENABLED" (default)                    |
| CALIB_SETTLE_MAX   | "0'b001" (default)                     |
| CALIB_STABLE_MAX   | "0'b11000" (default)                   |
| CAPABILITY_VERSION | "0'b0010" (default)                    |
| CDR_ERR            | "DISABLED" (default)                   |
| CDR_P1             | "CDR_PLL_RESET" (default)              |
| CDR_PLL_DELTA      | "0P4_PERCENT" (default)                |
| CDR_REFERENCE      | "0'b00" (default)                      |
| CDRPLL_CMP_MAX     | "0'b00010100" (default)                |

**Table 693: Parameters (Continued)**

| <b>Name</b>                  | <b>Values</b>                                       |
|------------------------------|-----------------------------------------------------|
| CDRPLL_CNT_MAX               | "0'b00000100" (default)                             |
| CDRPLL_PRE_RXEQ_COARSE_TIMER | "0'b01010000" (default)                             |
| CDRPLL_PRE_RXEQ_FINE_TIMER   | "0'b10110100" (default)                             |
| CDRPLL_PST_RXEQ_COARSE_TIMER | "0'b01000000" (default)                             |
| CDRPLL_PST_RXEQ_FINE_TIMER   | "0'b01000010" (default)                             |
| CFG_A_BAR0                   | "0'b11111111111111110000000000001100" (default)     |
| CFG_A_BAR1                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_A_BAR2                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_A_BAR3                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_A_BAR4                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_A_BAR5                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_B_BAR0                   | "0'b11111111111111111000000000001100" (default)     |
| CFG_B_BAR1                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_B_BAR2                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_B_BAR3                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_B_BAR4                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_B_BAR5                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_C_BAR0                   | "0'b11111111111111111000000000001100" (default)     |
| CFG_C_BAR1                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_C_BAR2                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_C_BAR3                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_C_BAR4                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_C_BAR5                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_D_BAR0                   | "0'b11111111111111111000000000001100" (default)     |
| CFG_D_BAR1                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_D_BAR2                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_D_BAR3                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_D_BAR4                   | "0'b111111111111111111111110000000001100" (default) |
| CFG_D_BAR5                   | "0'b11111111111111111111111111111111" (default)     |
| CFG_EXP_ROM_A                | "0'b00000000000000000000000000000000" (default)     |
| CFG_EXP_ROM_B                | "0'b00000000000000000000000000000000" (default)     |
| CFG_EXP_ROM_C                | "0'b00000000000000000000000000000000" (default)     |



**Table 693: Parameters (Continued)**

| <b>Name</b>           | <b>Values</b>                                   |
|-----------------------|-------------------------------------------------|
| CFG_EXP_ROM_D         | "0'b00000000000000000000000000000000" (default) |
| CIS_POINTER_CARDBUS_A | "0'b00000000000000000000000000000000" (default) |
| CIS_POINTER_CARDBUS_B | "0'b00000000000000000000000000000000" (default) |
| CIS_POINTER_CARDBUS_C | "0'b00000000000000000000000000000000" (default) |
| CIS_POINTER_CARDBUS_D | "0'b00000000000000000000000000000000" (default) |
| CLASS_CODE_ID3A       | "0'b000100011000000000000000000000" (default)   |
| CLASS_CODE_ID3B       | "0'b000100011000000000000000000000" (default)   |
| CLASS_CODE_ID3C       | "0'b000100011000000000000000000000" (default)   |
| CLASS_CODE_ID3D       | "0'b000100011000000000000000000000" (default)   |
| CM_RESTORE_TIME       | "0'b00000000" (default)                         |
| CNT250NS_MAX          | "0'b001111100" (default)                        |
| COARSE_GAIN           | "DISABLED" (default)                            |
| COEF_EN_LPBK_MASTER   | "OTHERWISE" (default)                           |
| COEF_EN_LPBK_SLAVE    | "OTHERWISE" (default)                           |
| COEF_ENABLE           | "DETERMINE_LOCAL_PHY" (default)                 |
| COEF_ENABLE_8G        | "DISABLED" (default)                            |
| COEF_EQTX_FORCE       | "0'b000000000000000000000000" (default)         |
| COEF_LPBK_MASTER      | "0'b000000000000000000000000" (default)         |
| COEF_LPBK_SLAVE       | "0'b000000000000000000000000" (default)         |
| COEF0_POST            | "0'b000101" (default)                           |
| COEF0_POST_CURSOR     | "0'b000000" (default)                           |
| COEF0_PRE             | "0'b000000" (default)                           |
| COEF0_PRE_CURSOR      | "0'b000000" (default)                           |
| COEF1_POST            | "0'b000011" (default)                           |
| COEF1_POST_CURSOR     | "0'b000000" (default)                           |
| COEF1_PRE             | "0'b000000" (default)                           |
| COEF1_PRE_CURSOR      | "0'b000000" (default)                           |
| COEF10_POST           | "0'b000111" (default)                           |
| COEF10_PRE            | "0'b000000" (default)                           |
| COEF2_POST            | "0'b000100" (default)                           |
| COEF2_POST_CURSOR     | "0'b000000" (default)                           |
| COEF2_PRE             | "0'b000000" (default)                           |

**Table 693: Parameters (Continued)**

| <b>Name</b>                   | <b>Values</b>                 |
|-------------------------------|-------------------------------|
| COEF2_PRE_CURSOR              | "0'b000000" (default)         |
| COEF3_POST                    | "0'b000010" (default)         |
| COEF3_POST_CURSOR             | "0'b000000" (default)         |
| COEF3_PRE                     | "0'b000000" (default)         |
| COEF3_PRE_CURSOR              | "0'b000000" (default)         |
| COEF4_POST                    | "0'b000000" (default)         |
| COEF4_PRE                     | "0'b000000" (default)         |
| COEF5_POST                    | "0'b000000" (default)         |
| COEF6_POST                    | "0'b000000" (default)         |
| COEF6_PRE                     | "0'b000010" (default)         |
| COEF7_POST                    | "0'b000100" (default)         |
| COEF7_PRE                     | "0'b000011" (default)         |
| COEF8_POST                    | "0'b000011" (default)         |
| COEF8_PRE                     | "0'b000010" (default)         |
| COEF9_POST                    | "0'b000000" (default)         |
| COEF9_PRE                     | "0'b000011" (default)         |
| COMP_128_SUPPORTED            | "ENABLED" (default)           |
| COMP_32_SUPPORTED             | "ENABLED" (default)           |
| COMP_64_SUPPORTED             | "ENABLED" (default)           |
| COMPLETE                      | "DISABLED" (default)          |
| COMPLIANCE                    | "ENABLED" (default)           |
| CONV_METHOD                   | "COMPUTE_PCIE_SPEC" (default) |
| CORE_BYPASS                   | "NORMAL" (default)            |
| CORE_EN                       | "ENABLED" (default)           |
| COUNT_ACK_TO_NAK              | "0'b00000000" (default)       |
| CPL_TIMEOUT_DISABLE_SUPPORTED | "SUPPORTED" (default)         |
| CPL_TIMEOUT_RANGES_SUPPORTED  | "NOT_SUPPORTED" (default)     |
| CRS_ENABLE                    | "DISABLED" (default)          |
| CSTAT_DATA_SCALE              | "UNKNOWN_SCALE" (default)     |
| CSTAT_DATA_SELECT             | "D0_POWER_CONSUMED" (default) |
| CTLE_SETTLE                   | "0'b100" (default)            |
| CTLEBIAS_1                    | "0'b1000" (default)           |

[illegible]

**Table 693: Parameters (Continued)**

| <b>Name</b>             | <b>Values</b>                     |
|-------------------------|-----------------------------------|
| DIR_PST_GAIN            | "0'b01" (default)                 |
| DIRECT_SPEED_CHANGE     | "OTHERWISE" (default)             |
| DIRECT_TO_DETECT_FAST   | "OTHERWISE" (default)             |
| DIRECT_TO_DISABLE       | "OTHERWISE" (default)             |
| DIRECT_TO_HOT_RESET     | "OTHERWISE" (default)             |
| DIRECT_TO_LPBK_ENTRY    | "OTHERWISE" (default)             |
| DIRECT_TO_RCVRY_CH_BOND | "OTHERWISE" (default)             |
| DIRECT_TO_RCVRY_FRAME   | "OTHERWISE" (default)             |
| DIRECT_TO_RCVRY_PHY     | "OTHERWISE" (default)             |
| DIRECT_TO_RCVRY_REPLAY  | "OTHERWISE" (default)             |
| DIS_ARI_CAP             | "ENABLED" (default)               |
| DIS_CSR_RST             | "ENABLED" (default)               |
| DIS_FUNC_B              | "ENABLED" (default)               |
| DIS_FUNC_C              | "ENABLED" (default)               |
| DIS_FUNC_D              | "ENABLED" (default)               |
| DIS_INTERRUPT           | "ENABLED" (default)               |
| DIS_INTERRUPT_B         | "ENABLED" (default)               |
| DIS_INTERRUPT_C         | "ENABLED" (default)               |
| DIS_INTERRUPT_D         | "ENABLED" (default)               |
| DIS_MSI_CAP             | "ENABLED" (default)               |
| DIS_MSI_CAP_B           | "ENABLED" (default)               |
| DIS_MSI_CAP_C           | "ENABLED" (default)               |
| DIS_MSIX_CAP            | "ENABLED" (default)               |
| DIS_MSIX_CAP_B          | "ENABLED" (default)               |
| DIS_MSIX_CAP_C          | "ENABLED" (default)               |
| DIS_MSIX_CAP_D          | "ENABLED" (default)               |
| DIS_PREVENT             | "ENABLED" (default)               |
| DISABLE_FLR_CAPABILITY  | "ENABLED" (default)               |
| DLLP_CRC_ERR_ENABLE     | "DISABLED" (default)              |
| DLLP_CRC_ERR_RATE       | "0'b000000000000" (default)       |
| DLLP_INJECT_ENABLE      | "DISABLED" (default)              |
| DOUBLE_TX_DATA_VALID    | "ONE_CLK EVERY 64_CLKS" (default) |

**Table 693: Parameters (Continued)**

| Name                         | Values                              |
|------------------------------|-------------------------------------|
| DOWNSTREAM_EQ_SKIP_PHASE_2_3 | "NORMAL_OPERATION" (default)        |
| DS_DRIVE_CLKREQ              | "ENABLED" (default)                 |
| DS_PORT_RX_PRESET_HINT       | "0'b001" (default)                  |
| DS_PORT_TX_PRESET            | "0'b0011" (default)                 |
| DS_US_N_PORTTYPE             | "UPSTREAM" (default)                |
| DSI                          | "NO_DSI_NECESSARY" (default)        |
| DSP_DIR                      | "ANALYSIS_OF_DATA_BY_DSP" (default) |
| DSPDIR_PRESGN                | "0'b11110000" (default)             |
| DSPDIR_PREVAL                | "0'b00011000" (default)             |
| DSPDIR_PSTSGN0               | "0'b11111111" (default)             |
| DSPDIR_PSTSGN1               | "0'b00000000" (default)             |
| DSPDIR_PSTVAL0               | "0'b00000010" (default)             |
| DSPDIR_PSTVAL1               | "0'b01000000" (default)             |
| EARLY_RX_EVAL                | "RX_SIGNAL_AFTER_TS1" (default)     |
| ECRC_GEN_CHK_CAPABLE         | "SUPPORTED" (default)               |
| EFF_LPBK                     | "PASSED" (default)                  |
| EI4                          | "EI_IV" (default)                   |
| EIE_DETECT0                  | "OTHERWISE" (default)               |
| EIE_DETECT1                  | "OTHERWISE" (default)               |
| EIE_DETECT2                  | "OTHERWISE" (default)               |
| EIE_DETECT3                  | "OTHERWISE" (default)               |
| EIOS_DETECT0                 | "OTHERWISE" (default)               |
| EIOS_DETECT1                 | "OTHERWISE" (default)               |
| EIOS_DETECT2                 | "OTHERWISE" (default)               |
| EIOS_DETECT3                 | "OTHERWISE" (default)               |
| EM_INTERLOCK_PRESENT         | "NOT_SUPPORTED" (default)           |
| EN                           | "DISABLED" (default)                |
| EN_ACK_TO_DIV                | "ACK_SPEC" (default)                |
| EN_ACK_TO_NAK                | "DO_NOTHING" (default)              |
| EN_ACS_VIOLATION             | "DISABLED" (default)                |
| EN_ASPM_L0S                  | "ENABLED" (default)                 |
| EN_ASPM_L1                   | "ENABLED" (default)                 |

**Table 693: Parameters (Continued)**

| <b>Name</b>                | <b>Values</b>                               |
|----------------------------|---------------------------------------------|
| EN_ATOMIC_OP_CAP           | "ENABLED" (default)                         |
| EN_ATOMICOP_EGRESS_BLOCKED | "DISABLED" (default)                        |
| EN_ATS_CAP                 | "ENABLED" (default)                         |
| EN_BDGT_CAP                | "DISABLED" (default)                        |
| EN_CAP                     | "ENABLED" (default)                         |
| EN_CAP_B                   | "ENABLED" (default)                         |
| EN_CAP_C                   | "ENABLED" (default)                         |
| EN_CAP_D                   | "ENABLED" (default)                         |
| EN_COMPLETER_ABORT         | "DISABLED" (default)                        |
| EN_COMPLETION_TIMEOUT      | "ENABLED" (default)                         |
| EN_CORR_INTERNAL_ERROR     | "DISABLED" (default)                        |
| EN_DPA_CAP                 | "DISABLED" (default)                        |
| EN_DRCT_SCR_OFF            | "OTHERWISE" (default)                       |
| EN_DRCT_TO_LPBK            | "OTHERWISE" (default)                       |
| EN_EQTX_OVERRIDE           | "PIPE_LOCAL_FS_AND_PIPE_LOCAL_LF" (default) |
| EN_FORCE_SCR_OFF_FAST      | "OTHERWISE" (default)                       |
| EN_L1                      | "ENABLED" (default)                         |
| EN_L1PMSS_CAP              | "ENABLED" (default)                         |
| EN_L2                      | "ENABLED" (default)                         |
| EN_LPBK_ERR_RST            | "MASTER_LPBK_INCREMENT" (default)           |
| EN_LTR_CAP                 | "ENABLED" (default)                         |
| EN_MC_BLOCKED_TLP          | "DISABLED" (default)                        |
| EN_NWL_VSEC_CAP            | "ENABLED" (default)                         |
| EN_PIPE_IF_CTRL            | "DISABLED" (default)                        |
| EN_PORT_DIS                | "DISABLED" (default)                        |
| EN_PORT_INTLEG             | "ENABLED" (default)                         |
| EN_RBAR_CAP_A              | "ENABLED" (default)                         |
| EN_RBAR_CAP_C              | "ENABLED" (default)                         |
| EN_RBAR_CAP_D              | "ENABLED" (default)                         |
| EN_RECEIVER_OVERFLOW       | "DISABLED" (default)                        |
| EN_RX_ALLOC_SEL            | "HW" (default)                              |
| EN_SELF_XLINK              | "OTHERWISE" (default)                       |

**Table 693: Parameters (Continued)**

| <b>Name</b>                     | <b>Values</b>                   |
|---------------------------------|---------------------------------|
| EN_SURPRISE_DOWN_ERROR          | "DISABLED" (default)            |
| EN_TLP_PREFIX_BLOCKED           | "DISABLED" (default)            |
| EN_TX_ALLOC_SEL                 | "HW" (default)                  |
| EN_UCORR_INTERNAL_ERROR         | "DISABLED" (default)            |
| EN_USER_WRITE                   | "READ_WRITE_ACCESS" (default)   |
| ENABLE_USER_CFG                 | "DISABLED" (default)            |
| END_END_PREFIXES_SUPPORTED      | "NOT_SUPPORTED" (default)       |
| END_ON_HOLD                     | "YES_EXIT_ON_HOLD" (default)    |
| ENDCALIB_MAX                    | "0'b10000100" (default)         |
| ENDPOINT_L0S_ACCEPTABLE_LATENCY | "MAX_64_NS" (default)           |
| ENDPOINT_L1_ACCEPTABLE_LATENCY  | "MAX_1_US" (default)            |
| ENTRY_TIME_ASPM_L0S             | "0'b0000000000000000" (default) |
| ENTRY_TIME_ASPM_L1              | "0'b0000000000000000" (default) |
| EOM_TIME                        | "0'b0000000000000000" (default) |
| EOM0DIR                         | "SELECT_DIR_1" (default)        |
| EOM1DIR                         | "SELECT_DIR_0" (default)        |
| EOMCTRL0_LOW                    | "DISABLED" (default)            |
| EOMDIVDIS                       | "DISABLED" (default)            |
| EOMMODE                         | "0'b00" (default)               |
| EOMRDSSEL                       | "DISABLED" (default)            |
| EOMSTART                        | "DISABLED" (default)            |
| EOMX                            | "0'b000000" (default)           |
| EOMX_UPDATE_CNT_VALUE           | "0'b0011111" (default)          |
| EOMY                            | "0'b00000000" (default)         |
| ERR_AER_BAD_DLLP                | "OTHERWISE" (default)           |
| ERR_AER_BAD_TLP                 | "OTHERWISE" (default)           |
| ERR_AER_DL_PROTOCOL_ERROR       | "OTHERWISE" (default)           |
| ERR_AER_RECEIVER_ERROR          | "OTHERWISE" (default)           |
| ERR_AER_REPLAY_NUM_ROLLOVER     | "OTHERWISE" (default)           |
| ERR_AER_REPLAY_TIMER_TIMEOUT    | "OTHERWISE" (default)           |
| ERR_AER_SURPRISE_DOWN           | "OTHERWISE" (default)           |
| ERR_AER_TX_PAR2                 | "OTHERWISE" (default)           |

**Table 693: Parameters (Continued)**

| <b>Name</b>                   | <b>Values</b>                     |
|-------------------------------|-----------------------------------|
| ERR_AER_TX_REPLAY_ECC1        | "OTHERWISE" (default)             |
| ERR_AER_TX_REPLAY_ECC2        | "OTHERWISE" (default)             |
| ERR_REC_ENTRY_SEL             | "RCVRY_AFTER" (default)           |
| ERR_TX_PIPE_UNDERFLOW         | "OTHERWISE" (default)             |
| ERRCNT_DEC                    | "0'b00100000" (default)           |
| ERRCNT_THR                    | "0'b1000" (default)               |
| ES_PWDN                       | "DISABLED" (default)              |
| EVAL_RST                      | "DISABLED" (default)              |
| EXCLUDE_CFG_COMPLETE          | "INCLUDE" (default)               |
| EXCLUDE_CFG_IDLE              | "INCLUDE" (default)               |
| EXCLUDE_L0                    | "INCLUDE" (default)               |
| EXCLUDE_LOOPBACK_MASTER       | "INCLUDE" (default)               |
| EXCLUDE_REC_IDLE              | "INCLUDE" (default)               |
| EXCLUDE_REC_RCVR_CFG          | "INCLUDE" (default)               |
| EXIT_DIRECT_TO_DETECT         | "DO_NOT_EXIT_TO_DETECT" (default) |
| EXT_CONTROL                   | "DISABLED" (default)              |
| EXTENDED_TAG_FIELD_EN_DEFAULT | "EIGHT_BIT" (default)             |
| EXTENDED_TAG_FIELD_SUPPORTED  | "EIGHT_BIT" (default)             |
| F_ARXCTLEDIR                  | "IGNORED" (default)               |
| F_ARXCTLENNULL                | "0'b0000" (default)               |
| F_ARXDMDIR                    | "DISABLED" (default)              |
| F_ARXDMNULL                   | "0'b00000" (default)              |
| F_ARXDPDIR                    | "IGNORED" (default)               |
| F_ARXDPNULL                   | "0'b00000" (default)              |
| F_ARXEOMDIR                   | "IGNORED" (default)               |
| F_ARXEOMNULL                  | "0'b00000" (default)              |
| F_ARXESDIR                    | "IGNORED" (default)               |
| F_ARXESNULL                   | "0'b00000" (default)              |
| F_ARXTDIR                     | "IGNORED" (default)               |
| F_ARXTNULL                    | "0'b00000" (default)              |
| F_ASCHCAL                     | "IGNORED" (default)               |
| F_ASCHDIR                     | "IGNORED" (default)               |



**Table 693: Parameters (Continued)**

| <b>Name</b>             | <b>Values</b>                       |
|-------------------------|-------------------------------------|
| F_ASCHNULL              | "0'b0000" (default)                 |
| FAIL_LIMIT_ERR          | "RXEQ_NOT_FAIL" (default)           |
| FAST                    | "L0" (default)                      |
| FC_UPDATE_TIMER_DISABLE | "ENABLED" (default)                 |
| FC_UPDATE_TIMER_DIV     | "PCIE_REC_VALUES" (default)         |
| FILTER                  | "0'b1001" (default)                 |
| FINE_GAIN               | "DISABLED" (default)                |
| FOM_COMPARE             | "0'b00000000" (default)             |
| FOM_HIRES               | "DISABLED" (default)                |
| FOM_ITERCNT             | "0'b101" (default)                  |
| FOM_THR                 | "0'b0100" (default)                 |
| FORCE_ATXDRA            | "0'b00000000000000000000" (default) |
| FORCE_ATXDRP            | "0'b00000000000000000000" (default) |
| FORCE_ATXDRR            | "0'b00000000000000000000" (default) |
| FORCE_ATXDRT            | "0'b00000000000000000000" (default) |
| FORCE_DIR_RSLT          | "0'b000000" (default)               |
| FORCE_FOM_RSLT          | "0'b00000000" (default)             |
| FORCE_IDLE              | "DISABLED" (default)                |
| FORCE_RX_DETECT         | "DISABLED" (default)                |
| FORCE_SIGNAL            | "DISABLED" (default)                |
| FREQ_LOCK               | "DISABLED" (default)                |
| FS                      | "0'b110000" (default)               |
| FTS_DETECT0             | "OTHERWISE" (default)               |
| FTS_DETECT1             | "OTHERWISE" (default)               |
| FTS_DETECT2             | "OTHERWISE" (default)               |
| FTS_DETECT3             | "OTHERWISE" (default)               |
| GEN12_ENA_POST_A0       | "DISABLED" (default)                |
| GEN12_ENA_POST_A1A2     | "DISABLED" (default)                |
| GEN12_ENA_PREA0         | "DISABLED" (default)                |
| GEN3_ENA_POST_A0        | "ENABLED" (default)                 |
| GEN3_ENA_POST_A1A2      | "ENABLED" (default)                 |
| GEN3_ENA_PREA0          | "ENABLED" (default)                 |

**Table 693: Parameters (Continued)**

| <b>Name</b>            | <b>Values</b>             |
|------------------------|---------------------------|
| GLOBAL_INVALID_SUPPORT | "ENABLED" (default)       |
| GSR                    | "ENABLED" (default)       |
| HINT                   | "0'b000" (default)        |
| HINT0_3DB              | "ENABLED" (default)       |
| HINT0_A0GAIN           | "0'b111" (default)        |
| HINT0_A2GAIN           | "0'b111" (default)        |
| HINT1_3DB              | "ENABLED" (default)       |
| HINT1_A0GAIN           | "0'b011" (default)        |
| HINT1_A2GAIN           | "0'b101" (default)        |
| HINT2_3DB              | "ENABLED" (default)       |
| HINT2_A0GAIN           | "0'b011" (default)        |
| HINT2_A2GAIN           | "0'b111" (default)        |
| HINT3_3DB              | "ENABLED" (default)       |
| HINT3_A0GAIN           | "0'b000" (default)        |
| HINT3_A2GAIN           | "0'b111" (default)        |
| HINT4_3DB              | "DISABLED" (default)      |
| HINT4_A0GAIN           | "0'b111" (default)        |
| HINT4_A2GAIN           | "0'b111" (default)        |
| HINT5_3DB              | "DISABLED" (default)      |
| HINT5_A0GAIN           | "0'b011" (default)        |
| HINT5_A2GAIN           | "0'b101" (default)        |
| HINT6_3DB              | "DISABLED" (default)      |
| HINT6_A0GAIN           | "0'b011" (default)        |
| HINT6_A2GAIN           | "0'b111" (default)        |
| HINT7_3DB              | "DISABLED" (default)      |
| HINT7_A0GAIN           | "0'b000" (default)        |
| HINT7_A2GAIN           | "0'b111" (default)        |
| HINT7_OVR              | "DISABLED" (default)      |
| HLD_RST                | "WRITE_1" (default)       |
| HOT_PLUG_CAPABLE       | "NOT_SUPPORTED" (default) |
| HOT_PLUG_SURPRISE      | "NOT_POSSIBLE" (default)  |
| HOT_RESET              | "ENABLED" (default)       |

**Table 693: Parameters (Continued)**

| <b>Name</b>                     | <b>Values</b>                                   |
|---------------------------------|-------------------------------------------------|
| ID_DS_PORT                      | "0'b0000000000000000" (default)                 |
| ID_NWL_VSEC_CAP                 | "0'b0000000000000001" (default)                 |
| IDDQ_PCS                        | "DISABLED" (default)                            |
| IDLE_INFER_L0_TO_REC_RCVR_LOCK  | "OTHERWISE" (default)                           |
| IDLE_INFER_LPBK_SLAVE           | "OTHERWISE" (default)                           |
| IDLE_INFER_REC_RCVR_CFG         | "OTHERWISE" (default)                           |
| IDLE_INFER_REC_SPEED2_SUCCESS   | "OTHERWISE" (default)                           |
| IDLE_INFER_REC_SPEED2_UNSUCCESS | "OTHERWISE" (default)                           |
| IGNORE_ECRC                     | "DISABLED" (default)                            |
| IGNORE_POISON                   | "ENABLED" (default)                             |
| INDICATOR                       | "0'b00000000000000000000000000000000" (default) |
| INFO_BAD_TLP_CRC_ERR            | "OTHERWISE" (default)                           |
| INFO_BAD_TLP_ECRC_ERR           | "OTHERWISE" (default)                           |
| INFO_BAD_TLP_MALF_ERR           | "OTHERWISE" (default)                           |
| INFO_BAD_TLP_NULL_ERR           | "OTHERWISE" (default)                           |
| INFO_BAD_TLP_PHY_ERR            | "OTHERWISE" (default)                           |
| INFO_BAD_TLP_SEQ_ERR            | "OTHERWISE" (default)                           |
| INFO_DESKEW_OVERFLOW_ERROR      | "OTHERWISE" (default)                           |
| INFO_NAK_RECEIVED               | "OTHERWISE" (default)                           |
| INFO_REPLAY_STARTED             | "OTHERWISE" (default)                           |
| INFO_SCHEDULE_DUPL_ACK          | "OTHERWISE" (default)                           |
| INFO_TX_DATA_UNDERFLOW          | "OTHERWISE" (default)                           |
| INHIBIT                         | "PERFORM_RECEIVER_DETECTION" (default)          |
| INJECT_DATA_ERROR_0             | "DISABLED" (default)                            |
| INJECT_DATA_ERROR_1             | "DISABLED" (default)                            |
| INJECT_DATA_ERROR_2             | "DISABLED" (default)                            |
| INJECT_DATA_ERROR_3             | "DISABLED" (default)                            |
| INJECT_DATA_ERROR_EN            | "DISABLED" (default)                            |
| INJECT_ERR_LANE_SELECT_0        | "DISABLED" (default)                            |
| INJECT_ERR_LANE_SELECT_1        | "DISABLED" (default)                            |
| INJECT_ERR_LANE_SELECT_2        | "DISABLED" (default)                            |
| INJECT_ERR_LANE_SELECT_3        | "DISABLED" (default)                            |

**Table 693: Parameters (Continued)**

| <b>Name</b>                   | <b>Values</b>                  |
|-------------------------------|--------------------------------|
| INJECT_RX_1BIT_DATA_ERR       | "DISABLED" (default)           |
| INJECT_RX_2BIT_DATA_ERR       | "DISABLED" (default)           |
| INJECT_RX_SKP_ERR             | "DISABLED" (default)           |
| INJECT_RX_VALID_ERR           | "DISABLED" (default)           |
| INT_CLR                       | "DISABLED" (default)           |
| INT_EN                        | "DISABLED" (default)           |
| INTERRUPT_MESSAGE_NUMBER      | "0'b00000" (default)           |
| INVAL_Q_DEPTH                 | "0'b00000" (default)           |
| ITERATION_MAX                 | "0'b000000" (default)          |
| L0_TO_REC_RCVR_LOCK_RX_8G_EIE | "OTHERWISE" (default)          |
| L0_TO_REC_RCVR_LOCK_RX_INFER  | "OTHERWISE" (default)          |
| L0_TO_REC_RCVR_LOCK_RX_TS12   | "OTHERWISE" (default)          |
| L0S_ADJ                       | "0'b000000110000000" (default) |
| L0S_EXIT_LATENCY              | "MORE_4_US" (default)          |
| L1_ENTER_PLL_RESET_TIME       | "0'b100" (default)             |
| L1_EXIT_LATENCY               | "MORE_64_US" (default)         |
| L1_EXIT_PLL_LOCK_TIME         | "0'b01110" (default)           |
| L1PM_SUPPORTED                | "SUPPORTED" (default)          |
| L2_D3HOT_ENABLE               | "DISABLED" (default)           |
| LANE                          | "0" (default)                  |
| LANE_SELECT                   | "0'b0000" (default)            |
| LEGACY_MODE                   | "MATCH_TS" (default)           |
| LF                            | "0'b001000" (default)          |
| LF_PHY                        | "0'b001010" (default)          |
| LINK_LANE                     | "ENABLED" (default)            |
| LOOPBACK                      | "ENABLED" (default)            |
| LPBK_EN                       | "DISABLED" (default)           |
| LW_START_UPDN_ACK_EN          | "DISABLED" (default)           |
| LW_START_UPDN_COUNT           | "0'b000011111010" (default)    |
| LW_START_UPDN_EIE_EN          | "DISABLED" (default)           |
| LW_START_UPDN_EN_DIR_DS       | "DO_NOT_ASSERT" (default)      |
| LW_START_UPDN_END_DELAY       | "0'b1001" (default)            |

**Table 693: Parameters (Continued)**

| <b>Name</b>                | <b>Values</b>                    |
|----------------------------|----------------------------------|
| LW_START_UPDN_RATE_EN_16G  | "DISABLED" (default)             |
| LW_START_UPDN_RATE_EN_2P5G | "ENABLED" (default)              |
| LW_START_UPDN_RATE_EN_5G   | "ENABLED" (default)              |
| LW_START_UPDN_RATE_EN_8G   | "ENABLED" (default)              |
| LW_START_UPDN_START_DELAY  | "0'b1000" (default)              |
| LW_START_UPDN_TIMER_EN     | "DISABLED" (default)             |
| MARGIN_ENABLE              | "PCIE_SPEC" (default)            |
| MARGIN_VALUE               | "0'b000" (default)               |
| MASK_0                     | "SKIP_RCVR_DETECTION" (default)  |
| MASK_1                     | "SKIP_RCVR_DETECTION" (default)  |
| MASK_2                     | "SKIP_RCVR_DETECTION" (default)  |
| MASK_3                     | "SKIP_RCVR_DETECTION" (default)  |
| MAX_LINK_WIDTH             | "1_LANE" (default)               |
| MAX_PAYLOAD_SIZE_SUPPORTED | "256_BYTES" (default)            |
| MAX_RSA_WAIT               | "0'b00101000" (default)          |
| MAX_SPEED                  | "8G" (default)                   |
| MAX_VAR                    | "0'b00100" (default)             |
| MERGE_LMMI_RDATA           | "DISABLED" (default)             |
| MESO_LPBK                  | "DISABLED" (default)             |
| METHOD_FMERIT_CTRL         | "STEP_PCIE_TX_PRESETS" (default) |
| METHOD_TX_CRED_CLEANUP     | "HEADER" (default)               |
| MGMT_INTLEG                | "0'b0000" (default)              |
| MGMT_LTSSM_DIS             | "DISABLED" (default)             |
| MID_VALUE_10B              | "0'b011110" (default)            |
| MID_VALUE_20B              | "0'b010100" (default)            |
| MID_VALUE_GEN3             | "0'b001110" (default)            |
| MIN_TIME                   | "0_MS" (default)                 |
| MIN_TIME_CFG               | "4US" (default)                  |
| MIX_DIR                    | "DISABLED" (default)             |
| MODE_BFF                   | "RESTART" (default)              |
| MPS_VIOLATION_RX           | "DISABLED" (default)             |
| MPS_VIOLATION_TX           | "DISABLED" (default)             |

**Table 693: Parameters (Continued)**

| <b>Name</b>                   | <b>Values</b>                                   |
|-------------------------------|-------------------------------------------------|
| MRL_SENSOR_PRESENT            | "NOT_SUPPORTED" (default)                       |
| MULT_ENABLE                   | "RECOMMENDED_VALUES" (default)                  |
| MULT_MESSAGE_CAPABLE_MSICAP_A | "EIGHT" (default)                               |
| MULT_MESSAGE_CAPABLE_MSICAP_B | "EIGHT" (default)                               |
| MULT_MESSAGE_CAPABLE_MSICAP_C | "EIGHT" (default)                               |
| MULT_MESSAGE_CAPABLE_MSICAP_D | "EIGHT" (default)                               |
| N_RX_LIM_D                    | "DISABLED" (default)                            |
| N_RX_LIM_H                    | "DISABLED" (default)                            |
| N_TX_LIM_D                    | "DISABLED" (default)                            |
| N_TX_LIM_H                    | "DISABLED" (default)                            |
| NFTS                          | "0'b11111111" (default)                         |
| NO_COMMAND_COMPLETED_SUPPORT  | "SW_NOTIF_PROVIDED" (default)                   |
| NO_FCMP                       | "DISABLED" (default)                            |
| NO_REMOTE_CHANGE              | "DISABLED" (default)                            |
| NO_TX_IDLE_DELAY              | "DATA_VALID_GAP" (default)                      |
| NUM_LANES                     | "1_LANE" (default)                              |
| NUMBER_DSLINK                 | "0'b00000" (default)                            |
| NUMHI_A                       | "0'b00000000000000000000000000000000" (default) |
| NUMHI_B                       | "0'b00000000000000000000000000000000" (default) |
| NUMHI_C                       | "0'b00000000000000000000000000000000" (default) |
| NUMHI_D                       | "0'b00000000000000000000000000000000" (default) |
| NUMHOLD                       | "SINGLE_HOLD_RESPONSE" (default)                |
| NUMLO_A                       | "0'b00000000000000000000000000000000" (default) |
| NUMLO_B                       | "0'b00000000000000000000000000000000" (default) |
| NUMLO_C                       | "0'b00000000000000000000000000000000" (default) |
| NUMLO_D                       | "0'b00000000000000000000000000000000" (default) |
| OBFF_SUPPORTED                | "NOT_SUPPORTED" (default)                       |
| OFFSET_MSIX_PBA_A             | "0'b00000000000000000111000000000" (default)    |
| OFFSET_MSIX_PBA_B             | "0'b00000000000000000111000000000" (default)    |
| OFFSET_MSIX_PBA_C             | "0'b00000000000000000111000000000" (default)    |
| OFFSET_MSIX_PBA_D             | "0'b00000000000000000111000000000" (default)    |
| OFFSET_MSIX_TABLE_A           | "0'b00000000000000000110000000000" (default)    |

**Table 693: Parameters (Continued)**

| <b>Name</b>          | <b>Values</b>                                |
|----------------------|----------------------------------------------|
| OFFSET_MSIX_TABLE_B  | "0'b00000000000000000110000000000" (default) |
| OFFSET_MSIX_TABLE_C  | "0'b00000000000000000110000000000" (default) |
| OFFSET_MSIX_TABLE_D  | "0'b00000000000000000110000000000" (default) |
| OVER_CTLE            | "DISABLED" (default)                         |
| OVER_RX              | "DISABLED" (default)                         |
| OVER_RXDM            | "DISABLED" (default)                         |
| OVER_RXDP            | "DISABLED" (default)                         |
| OVER_RXES            | "DISABLED" (default)                         |
| OVER_RXT             | "DISABLED" (default)                         |
| OVER_SCH             | "DISABLED" (default)                         |
| OVER_TX              | "DISABLED" (default)                         |
| OVERFLOW             | "DISABLED" (default)                         |
| OVR_CDR              | "DISABLED" (default)                         |
| OVR_DIR              | "DISABLED" (default)                         |
| OVR_FOM              | "DISABLED" (default)                         |
| OVR_GAIN3DB          | "ENABLED" (default)                          |
| OVR_HINT3DB          | "ENABLED" (default)                          |
| P_CLK_PERIOD         | "0'b0000111110100000" (default)              |
| P_RX_LIM_D           | "DISABLED" (default)                         |
| P_RX_LIM_H           | "DISABLED" (default)                         |
| P_TX_LIM_D           | "DISABLED" (default)                         |
| P_TX_LIM_H           | "DISABLED" (default)                         |
| PAR_LPBK             | "DISABLED" (default)                         |
| PAS                  | "10X" (default)                              |
| PATTERN_0            | "UNSCRAMBLED" (default)                      |
| PATTERN_1            | "UNSCRAMBLED" (default)                      |
| PATTERN_2            | "UNSCRAMBLED" (default)                      |
| PCIPM_L1_1_SUPPORTED | "SUPPORTED" (default)                        |
| PCIPM_L1_2_SUPPORTED | "SUPPORTED" (default)                        |
| PCLKREQ_N            | "DEASSERTED" (default)                       |
| PERIOD_SRIS_128B130B | "0'b000000" (default)                        |
| PERIOD_SRIS_8B10B    | "0'b00000000" (default)                      |

**Table 693: Parameters (Continued)**

| <b>Name</b>                 | <b>Values</b>                 |
|-----------------------------|-------------------------------|
| PERIOD_SRNS_128B130B        | "0'b00000000" (default)       |
| PERIOD_SRNS_8B10B           | "0'b00000000" (default)       |
| PHANTOM_FUNCTIONS_SUPPORTED | "NO_FUNCTION_BITS" (default)  |
| PHY_MODE                    | "0'b0000" (default)           |
| PHYSICAL_SLOT_NUMBER        | "0'b00000000000001" (default) |
| PIN_INTERRUPT_A             | "INTA" (default)              |
| PIN_INTERRUPT_B             | "INTA" (default)              |
| PIN_INTERRUPT_C             | "INTA" (default)              |
| PIN_INTERRUPT_D             | "INTA" (default)              |
| PIPE_PWRDN                  | "P1" (default)                |
| PIPE_TX_SWING               | "FULL_SWING" (default)        |
| PLESIO_LPBK                 | "DISABLED" (default)          |
| PM_REDUCE_TIMEOUTS          | "DISABLED" (default)          |
| PMA_DRIVEN_MODE             | "PCS_DRIVEN" (default)        |
| PMCSR_B2_B3_SUPPORT         | "DISABLED" (default)          |
| PMCSR_BUS_P_C_EN            | "DISABLED" (default)          |
| PME_CLOCK                   | "DISABLED" (default)          |
| PME_SUPPORT                 | "0'b11111" (default)          |
| PMFF_ALL                    | "DISABLED" (default)          |
| PORT_CM_RESTORE_TIME        | "0'b00000000" (default)       |
| PORT_NUMBER                 | "0'b00000000" (default)       |
| PORT_TPOWER_ON_SCALE        | "2_US" (default)              |
| PORT_TPOWER_ON_VALUE        | "0'b00000" (default)          |
| POST                        | "0'b000000" (default)         |
| POST_A0COEF                 | "0'b001" (default)            |
| POST_A1COEF                 | "0'b001" (default)            |
| POST_A2COEF                 | "0'b001" (default)            |
| POST_CURSOR_LIMIT           | "0'b100000" (default)         |
| POST_CURSOR_STEP_SIZE       | "0'b001000" (default)         |
| POST_ITERCNT                | "0'b100" (default)            |
| POST_STEP                   | "STEP_SIZE_4" (default)       |
| POWER_CONTROLLER_PRESENT    | "NOT_SUPPORTED" (default)     |



**Table 693: Parameters (Continued)**

| <b>Name</b>             | <b>Values</b>                      |
|-------------------------|------------------------------------|
| POWER_INDICATOR_PRESENT | "NOT_SUPPORTED" (default)          |
| POWER_REQUIRED          | "AUX_POWER_NOT_REQUIRED" (default) |
| PRBS_CHK                | "DISABLED" (default)               |
| PRBS_GEN                | "DISABLED" (default)               |
| PRBS_TYP                | "PRBS7" (default)                  |
| PRE                     | "0'b000000" (default)              |
| PRE_A0COEF              | "0'b101" (default)                 |
| PRE_A1COEF              | "0'b101" (default)                 |
| PRE_A2COEF              | "0'b101" (default)                 |
| PRE_CURSOR_LIMIT        | "0'b010000" (default)              |
| PRE_CURSOR_STEP_SIZE    | "0'b000100" (default)              |
| PRE_FOM                 | "ENABLED" (default)                |
| PRE_FOM_AVG             | "0'b100" (default)                 |
| PRE_ITERCNT             | "0'b100" (default)                 |
| PRE_RXEQ_TIMER          | "0'b00010100" (default)            |
| PRE_STEP                | "STEP_SIZE_2" (default)            |
| PRESET_COUNT_INI        | "0'b0000" (default)                |
| PRESET_EN_LPBK_MASTER   | "OTHERWISE" (default)              |
| PRESET_EN_LPBK_SLAVE    | "OTHERWISE" (default)              |
| PRESET_ENABLE           | "NORMAL_OP" (default)              |
| PRESET_ENABLE_8G        | "DISABLED" (default)               |
| PRESET_EQTX_FORCE       | "0'b0000" (default)                |
| PRESET_LPBK_MASTER      | "0'b0000" (default)                |
| PRESET_LPBK_SLAVE_0     | "OTHERWISE" (default)              |
| PRESET_LPBK_SLAVE_1     | "OTHERWISE" (default)              |
| PRESET_LPBK_SLAVE_3     | "OTHERWISE" (default)              |
| PRESET_REJECT           | "0'b000000000000" (default)        |
| PRESET0_POSTCURSOR      | "0'b1000" (default)                |
| PRESET0_PRECURSOR       | "0'b0000" (default)                |
| PRESET1_POSTCURSOR      | "0'b0101" (default)                |
| PRESET1_PRECURSOR       | "0'b0000" (default)                |
| PRESET10_POSTCURSOR     | "0'b1010" (default)                |

**Table 693: Parameters (Continued)**

| <b>Name</b>              | <b>Values</b>                     |
|--------------------------|-----------------------------------|
| PRESET10_PRECURSOR       | "0'b0000" (default)               |
| PRESET2_POSTCURSOR       | "0'b0110" (default)               |
| PRESET2_PRECURSOR        | "0'b0000" (default)               |
| PRESET3_POSTCURSOR       | "0'b0100" (default)               |
| PRESET3_PRECURSOR        | "0'b0000" (default)               |
| PRESET4_POSTCURSOR       | "0'b0000" (default)               |
| PRESET4_PRECURSOR        | "0'b0000" (default)               |
| PRESET5_POSTCURSOR       | "0'b0000" (default)               |
| PRESET5_PRECURSOR        | "0'b0011" (default)               |
| PRESET6_POSTCURSOR       | "0'b0000" (default)               |
| PRESET6_PRECURSOR        | "0'b0100" (default)               |
| PRESET7_POSTCURSOR       | "0'b0110" (default)               |
| PRESET7_PRECURSOR        | "0'b0011" (default)               |
| PRESET8_POSTCURSOR       | "0'b0100" (default)               |
| PRESET8_PRECURSOR        | "0'b0100" (default)               |
| PRESET9_POSTCURSOR       | "0'b0000" (default)               |
| PRESET9_PRECURSOR        | "0'b0101" (default)               |
| PS_REENTRY_TIME          | "0'b00000000" (default)           |
| PWDN_N                   | "DISABLED" (default)              |
| RATE                     | "2P5G" (default)                  |
| RATE_ENABLE              | "INITIAL_SPEED_CHANGES" (default) |
| RCB                      | "DISABLED" (default)              |
| REC_SPD_INFER_EQ_PH0123  | "EXCLUDE_TIME_SPENT" (default)    |
| REC_SPD_INFER_RCVR_CFG   | "EXCLUDE_TIME_SPENT" (default)    |
| REC_SPD_INFER_RCVR_LOCK  | "EXCLUDE_TIME_SPENT" (default)    |
| REDO                     | "DISABLED" (default)              |
| REDUCE_TIMEOUTS_LTSSMSIM | "DISABLED" (default)              |
| REDUCE_TIMEOUTS_SIM      | "DISABLED" (default)              |
| REDUCE_TS1               | "DISABLED" (default)              |
| REENTRY_DISABLE          | "ENABLED" (default)               |
| REENTRY_TIME             | "0'b0000000000000000" (default)   |
| REQ_EQ_MAX_COUNT         | "0'b10" (default)                 |

**Table 693: Parameters (Continued)**

| <b>Name</b>                | <b>Values</b>                   |
|----------------------------|---------------------------------|
| REQ_FEEDBACK               | "0'b00000000" (default)         |
| RESET_EIEOS_INTERVAL_COUNT | "DISABLED" (default)            |
| REVISION_ID_ID3A           | "0'b00000100" (default)         |
| REVISION_ID_ID3B           | "0'b00000100" (default)         |
| REVISION_ID_ID3C           | "0'b00000100" (default)         |
| REVISION_ID_ID3D           | "0'b00000100" (default)         |
| RL1                        | "0'b0011" (default)             |
| RL2                        | "0'b0101" (default)             |
| RL3                        | "0'b0011" (default)             |
| ROUTING_SUPPORTED          | "DISABLED" (default)            |
| RP_COMPLETER_EN            | "DISABLED" (default)            |
| RSTCDR_ERR                 | "ENABLED" (default)             |
| RSTCDR_FRQ                 | "ENABLED" (default)             |
| RSTCDR_IDL                 | "DISABLED" (default)            |
| RX_BYPASS_DECODE_EN        | "ENABLED" (default)             |
| RX_BYPASS_MSG_DEC          | "NORMAL_OPERATION" (default)    |
| RX_CONVERT_UR_TO_CA        | "NORMAL_OPERATION" (default)    |
| RX_D_ALLOC_C               | "0'b0000000001100000" (default) |
| RX_D_ALLOC_N               | "0'b0000000000000110" (default) |
| RX_D_ALLOC_P               | "0'b0000000001101100" (default) |
| RX_DIV_MODE0               | "DIV_2" (default)               |
| RX_DIV_MODE1               | "0'b10" (default)               |
| RX_DIV_MODE2               | "0'b00" (default)               |
| RX_DL_ACTIVE_DISABLE       | "BLOCK_RECEPTION_TLP" (default) |
| RX_EARLY_FORWARD_DISABLE   | "FWD_RX_DATA_LL" (default)      |
| RX_ECC1_HANDLE_DISABLE     | "ENABLE_HANDLING" (default)     |
| RX_ECC1_INJECT_EN          | "DO_NOT_INJECT_ERR" (default)   |
| RX_ECC1_INJECT_M_1_N       | "INJECT_1_ERR" (default)        |
| RX_ECC1_INJECT_TYPE        | "POSTED_DATA_RAM" (default)     |
| RX_ECC1_REPORT_DISABLE     | "ENABLE_REPORTING" (default)    |
| RX_ECC2_HANDLE_DISABLE     | "ENABLE_HANDLING" (default)     |
| RX_ECC2_INJECT_EN          | "DO_NOT_INJECT_ERR" (default)   |

**Table 693: Parameters (Continued)**

| <b>Name</b>                 | <b>Values</b>                   |
|-----------------------------|---------------------------------|
| RX_ECC2_INJECT_M_1_N        | "INJECT_1_ERR" (default)        |
| RX_ECC2_INJECT_TYPE         | "POSTED_DATA_RAM" (default)     |
| RX_ECC2_REPORT_DISABLE      | "ENABLE_REPORTING" (default)    |
| RX_EI_DIS                   | "DEASSERTED" (default)          |
| RX_ERR_COR                  | "DISABLED" (default)            |
| RX_ERR_ECC1                 | "OTHERWISE" (default)           |
| RX_ERR_ECC2                 | "OTHERWISE" (default)           |
| RX_ERR_PAR                  | "OTHERWISE" (default)           |
| RX_ERR_UCOR                 | "DISABLED" (default)            |
| RX_ESP_RESP_WAIT            | "0'b01000000" (default)         |
| RX_FORCE_RO                 | "DISABLED" (default)            |
| RX_H_ALLOC_C                | "0'b000000100000" (default)     |
| RX_H_ALLOC_N                | "0'b000000001000" (default)     |
| RX_H_ALLOC_P                | "0'b000000010000" (default)     |
| RX_HIZ                      | "IGNORED" (default)             |
| RX_IMPED_RATIO              | "0'b10000000" (default)         |
| RX_INHIBIT_ACK_NAK          | "PROCESS_RCVD_ACK" (default)    |
| RX_INHIBIT_TLP              | "PROCESS_RCVD_TLP" (default)    |
| RX_L0S_DIRECT_TO_RCVRY      | "OTHERWISE" (default)           |
| RX_LCRC_INJECT_EN           | "DO_NOT_INJECT_ERROR" (default) |
| RX_MALF_INJECT_EN           | "DO_NOT_INJECT_ERROR" (default) |
| RX_PAR_INJECT_EN            | "DO_NOT_INJECT_ERR" (default)   |
| RX_PAR_REPORT_DISABLE       | "ENABLE_REPORTING" (default)    |
| RX_POLINV                   | "NORMAL" (default)              |
| RX_PRIORITY                 | "DISABLED" (default)            |
| RX_PRIORITY_N_STARVE_THRESH | "0'b00010000" (default)         |
| RX_PRIORITY_P_STARVE_THRESH | "0'b00010000" (default)         |
| RX_PWRDN                    | "IGNORED" (default)             |
| RX_TLP_VALID                | "DISABLED" (default)            |
| RXEQ_ALGO                   | "0'b111" (default)              |
| RXEQ_ENABLE                 | "0'b100" (default)              |
| RXEQ_EVAL_MAX               | "0'b11111111" (default)         |

**Table 693: Parameters (Continued)**

| <b>Name</b>             | <b>Values</b>                   |
|-------------------------|---------------------------------|
| RXEQ_MANUAL             | "DISABLED" (default)            |
| RXEQ_STATE              | "0'b0000" (default)             |
| RXF_A                   | "0'b0100" (default)             |
| RXF_B                   | "0'b0100" (default)             |
| RXF_C                   | "0'b0100" (default)             |
| RXHF_CLKDN              | "ENABLED" (default)             |
| RXIDLE_MAX              | "0'b1111" (default)             |
| RXIDLE_MAX2             | "0'b0000010000000000" (default) |
| RXIDLE_MSB              | "0'b11" (default)               |
| RXM_A                   | "0'b10" (default)               |
| RXM_B                   | "0'b01" (default)               |
| RXM_C                   | "0'b00" (default)               |
| RXN_A                   | "0'b00100" (default)            |
| RXN_B                   | "0'b01001" (default)            |
| RXN_C                   | "0'b01111" (default)            |
| RXOFF_SETTLE_MAX        | "0'b011" (default)              |
| RXOFF_STABLE_MAX        | "0'b10000" (default)            |
| RXPLLINIT               | "DISABLED" (default)            |
| RXPLLRST                | "SET" (default)                 |
| SDS_DETECT0             | "OTHERWISE" (default)           |
| SDS_DETECT1             | "OTHERWISE" (default)           |
| SDS_DETECT2             | "OTHERWISE" (default)           |
| SDS_DETECT3             | "OTHERWISE" (default)           |
| SEL_PCLK_DIV2           | "PCLK_DIV2" (default)           |
| SELECT_DIR_FOM_N        | "FME_METHOD" (default)          |
| SELECTABLE_DEEMPHASIS   | "6P0DB" (default)               |
| SEQ_NUM                 | "0'b000000000000" (default)     |
| SIGNAL_DETECT_THRESHOLD | "125_MV" (default)              |
| SIZE_CFG0_A             | "0'b00000" (default)            |
| SIZE_CFG0_B             | "0'b00000" (default)            |
| SIZE_CFG0_C             | "0'b00000" (default)            |
| SIZE_CFG0_D             | "0'b00000" (default)            |

**Table 693: Parameters (Continued)**

| <b>Name</b>              | <b>Values</b>              |
|--------------------------|----------------------------|
| SIZE_CFG1_A              | "0'b00000" (default)       |
| SIZE_CFG1_B              | "0'b00000" (default)       |
| SIZE_CFG1_C              | "0'b00000" (default)       |
| SIZE_CFG1_D              | "0'b00000" (default)       |
| SIZE_CFG2_A              | "0'b00000" (default)       |
| SIZE_CFG2_B              | "0'b00000" (default)       |
| SIZE_CFG2_C              | "0'b00000" (default)       |
| SIZE_CFG2_D              | "0'b00000" (default)       |
| SIZE_CFG3_A              | "0'b00000" (default)       |
| SIZE_CFG3_B              | "0'b00000" (default)       |
| SIZE_CFG3_C              | "0'b00000" (default)       |
| SIZE_CFG3_D              | "0'b00000" (default)       |
| SIZE_CFG4_A              | "0'b00000" (default)       |
| SIZE_CFG4_B              | "0'b00000" (default)       |
| SIZE_CFG4_C              | "0'b00000" (default)       |
| SIZE_CFG4_D              | "0'b00000" (default)       |
| SIZE_CFG5_A              | "0'b00000" (default)       |
| SIZE_CFG5_B              | "0'b00000" (default)       |
| SIZE_CFG5_C              | "0'b00000" (default)       |
| SIZE_CFG5_D              | "0'b00000" (default)       |
| SKIP_FINAL_COEF_CHECK    | "DISABLED" (default)       |
| SKP_DETECT0              | "OTHERWISE" (default)      |
| SKP_DETECT1              | "OTHERWISE" (default)      |
| SKP_DETECT2              | "OTHERWISE" (default)      |
| SKP_DETECT3              | "OTHERWISE" (default)      |
| SLOT_CLOCK_CONFIGURATION | "REFCLK_BY_SLOT" (default) |
| SLOT_IMPLEMENTED         | "UNCONNECTED" (default)    |
| SLOT_POWER_LIMIT_SCALE   | "0'b00" (default)          |
| SLOT_POWER_LIMIT_VALUE   | "0'b00001010" (default)    |
| SPEED_CHANGE_FAIL        | "OTHERWISE" (default)      |
| SPEED_LPBK_CTRL          | "2P5G" (default)           |
| START_PRESET             | "PRESET_VALUE" (default)   |

**Table 693: Parameters (Continued)**

| Name                     | Values                              |
|--------------------------|-------------------------------------|
| START_REMOTE_ADV         | "OTHERWISE" (default)               |
| STATE_DATA_N             | "USE_RX_DATA_OBSERVATION" (default) |
| STEP_SELECT              | "0'b00000" (default)                |
| STP_OVERRIDE_EN          | "DISABLED" (default)                |
| STP_OVERRIDE_LEN         | "0'b000000000000" (default)         |
| STP_OVERRIDE_NEW_LEN     | "0'b000000000000" (default)         |
| STS_PHY_STATUS           | "DEASSERTED" (default)              |
| STS_PIPE_RSTN            | "DEASSERTED" (default)              |
| SUBSTATE_MAX             | "0'b00000" (default)                |
| SUBSYSTEM_ID_ID2A        | "0'b1110000000000100" (default)     |
| SUBSYSTEM_ID_ID2B        | "0'b1110000000000100" (default)     |
| SUBSYSTEM_ID_ID2C        | "0'b1110000000000100" (default)     |
| SUBSYSTEM_ID_ID2D        | "0'b1110000000000100" (default)     |
| SUBSYSTEM_VENDOR_ID_ID2A | "0'b0001100110101010" (default)     |
| SUBSYSTEM_VENDOR_ID_ID2B | "0'b0001100110101010" (default)     |
| SUBSYSTEM_VENDOR_ID_ID2C | "0'b0001100110101010" (default)     |
| SUBSYSTEM_VENDOR_ID_ID2D | "0'b0001100110101010" (default)     |
| SUPP_SIZE_CFG0_A         | "0'b00000000000000001111" (default) |
| SUPP_SIZE_CFG0_B         | "0'b00000000000000001111" (default) |
| SUPP_SIZE_CFG0_C         | "0'b00000000000000001111" (default) |
| SUPP_SIZE_CFG0_D         | "0'b00000000000000001111" (default) |
| SUPP_SIZE_CFG1_A         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG1_B         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG1_C         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG1_D         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG2_A         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG2_B         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG2_C         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG2_D         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG3_A         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG3_B         | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG3_C         | "0'b00000000000000000000" (default) |

**Table 693: Parameters (Continued)**

| <b>Name</b>                     | <b>Values</b>                       |
|---------------------------------|-------------------------------------|
| SUPP_SIZE_CFG3_D                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG4_A                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG4_B                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG4_C                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG4_D                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG5_A                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG5_B                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG5_C                | "0'b00000000000000000000" (default) |
| SUPP_SIZE_CFG5_D                | "0'b00000000000000000000" (default) |
| SYS_ALLOC                       | "PWR_BUDGET_CAP_VALUES" (default)   |
| T0_RX_BYPASS_MSG_DEC            | "NORMAL_OPERATION" (default)        |
| TABLE_SIZE_MSIXCAP_A            | "0'b00000000111" (default)          |
| TABLE_SIZE_MSIXCAP_B            | "0'b00000000111" (default)          |
| TABLE_SIZE_MSIXCAP_C            | "0'b00000000111" (default)          |
| TABLE_SIZE_MSIXCAP_D            | "0'b00000000111" (default)          |
| TARGET_LINK_SPEED               | "8G" (default)                      |
| TARGET_ONLY                     | "DISABLED" (default)                |
| TD1_MEANS_ADD_HAS_N             | "ECRC_CONTAINED" (default)          |
| TIMEOUT_THRESHOLD_PME           | "0'b000000000000" (default)         |
| TIMEOUT_THRESHOLD_PME_TO_ACK_DS | "0'b00000000" (default)             |
| TIMER                           | "0'b00000000" (default)             |
| TLP_LCRC_ERR_ENABLE             | "DISABLED" (default)                |
| TLP_LCRC_ERR_RATE               | "0'b000" (default)                  |
| TLP_SEQ_ERR_ENABLE              | "DISABLED" (default)                |
| TLUNIT                          | "1_MS" (default)                    |
| TO_EXTEND                       | "0'b01111111" (default)             |
| TRNG_A0COEF                     | "0'b101" (default)                  |
| TRNG_A1COEF                     | "0'b101" (default)                  |
| TRNG_A2COEF                     | "0'b101" (default)                  |
| TRNG_FAST                       | "DISABLED" (default)                |
| TRNG_ITERCNT                    | "0'b100" (default)                  |
| TRNG_RXEQ_TIMER                 | "0'b00100000" (default)             |



**Table 693: Parameters (Continued)**

| <b>Name</b>               | <b>Values</b>                  |
|---------------------------|--------------------------------|
| TS1_ACK_BLOCK_USE_PRESET  | "FORCED_TO_ZERO" (default)     |
| TS1_ACK_DELAY             | "0'b00011111" (default)        |
| TS1_ACK_MASK_USE_PRESET   | "IGNORES_USE_PRESET" (default) |
| TS1_DETECT0               | "OTHERWISE" (default)          |
| TS1_DETECT1               | "OTHERWISE" (default)          |
| TS1_DETECT2               | "OTHERWISE" (default)          |
| TS1_DETECT3               | "OTHERWISE" (default)          |
| TS1I_DETECT0              | "OTHERWISE" (default)          |
| TS1I_DETECT1              | "OTHERWISE" (default)          |
| TS1I_DETECT2              | "OTHERWISE" (default)          |
| TS1I_DETECT3              | "OTHERWISE" (default)          |
| TS2_DETECT0               | "OTHERWISE" (default)          |
| TS2_DETECT1               | "OTHERWISE" (default)          |
| TS2_DETECT2               | "OTHERWISE" (default)          |
| TS2_DETECT3               | "OTHERWISE" (default)          |
| TS2I_DETECT0              | "OTHERWISE" (default)          |
| TS2I_DETECT1              | "OTHERWISE" (default)          |
| TS2I_DETECT2              | "OTHERWISE" (default)          |
| TS2I_DETECT3              | "OTHERWISE" (default)          |
| TX_AMP_RATIO_MARGIN0_FULL | "0'b10000000" (default)        |
| TX_AMP_RATIO_MARGIN0_HALF | "0'b01010000" (default)        |
| TX_AMP_RATIO_MARGIN1_FULL | "0'b01111000" (default)        |
| TX_AMP_RATIO_MARGIN1_HALF | "0'b01011000" (default)        |
| TX_AMP_RATIO_MARGIN2_FULL | "0'b01101000" (default)        |
| TX_AMP_RATIO_MARGIN2_HALF | "0'b01001000" (default)        |
| TX_AMP_RATIO_MARGIN3_FULL | "0'b01100000" (default)        |
| TX_AMP_RATIO_MARGIN3_HALF | "0'b01000000" (default)        |
| TX_AMP_RATIO_MARGIN4_FULL | "0'b01011000" (default)        |
| TX_AMP_RATIO_MARGIN4_HALF | "0'b00111000" (default)        |
| TX_AMP_RATIO_MARGIN5_FULL | "0'b01010000" (default)        |
| TX_AMP_RATIO_MARGIN5_HALF | "0'b00110000" (default)        |
| TX_AMP_RATIO_MARGIN6_FULL | "0'b01001000" (default)        |

**Table 693: Parameters (Continued)**

| <b>Name</b>               | <b>Values</b>                   |
|---------------------------|---------------------------------|
| TX_AMP_RATIO_MARGIN6_HALF | "0'b00101000" (default)         |
| TX_AMP_RATIO_MARGIN7_FULL | "0'b01000000" (default)         |
| TX_AMP_RATIO_MARGIN7_HALF | "0'b00100000" (default)         |
| TX_BYPASS_DECODE_EN       | "ENABLED" (default)             |
| TX_BYPASS_MSG_DEC         | "NORMAL_OPERATION" (default)    |
| TX_CM_DIS                 | "DEASSERTED" (default)          |
| TX_COMP_RECEIVE           | "DOES_NOT_ASSERT" (default)     |
| TX_CONVERT_UR_TO_CA       | "NORMAL_OPERATION" (default)    |
| TX_D_ALLOC_N              | "0'b0000000000000110" (default) |
| TX_D_ALLOC_P              | "0'b0000000001101100" (default) |
| TX_DIV_MODE0              | "0'b10" (default)               |
| TX_DIV_MODE1              | "0'b10" (default)               |
| TX_DIV_MODE2              | "0'b10" (default)               |
| TX_ECC1_HANDLE_DISABLE    | "ENABLE_HANDLING" (default)     |
| TX_ECC1_INJECT_EN         | "DO_NOT_INJECT_ERR" (default)   |
| TX_ECC1_INJECT_M_1_N      | "INJECT_1_ERR" (default)        |
| TX_ECC1_INJECT_TYPE       | "POSTED_DATA_RAM" (default)     |
| TX_ECC1_REPORT_DISABLE    | "ENABLE_REPORTING" (default)    |
| TX_ECC2_HANDLE_DISABLE    | "ENABLE_HANDLING" (default)     |
| TX_ECC2_INJECT_EN         | "DO_NOT_INJECT_ERR" (default)   |
| TX_ECC2_INJECT_M_1_N      | "INJECT_1_ERR" (default)        |
| TX_ECC2_INJECT_TYPE       | "POSTED_DATA_RAM" (default)     |
| TX_ECC2_REPORT_DISABLE    | "ENABLE_REPORTING" (default)    |
| TX_EQ_EVAL_CNT_SEL        | "WAIT_8_CLKS" (default)         |
| TX_ERR_COR                | "DISABLED" (default)            |
| TX_ERR_ECC1               | "OTHERWISE" (default)           |
| TX_ERR_ECC2               | "OTHERWISE" (default)           |
| TX_ERR_PAR                | "OTHERWISE" (default)           |
| TX_ERR_UCOR               | "DISABLED" (default)            |
| TX_FORCE_RO               | "DISABLED" (default)            |
| TX_GAP_INJECT_EN          | "DO_NOT_INJECT_GAP" (default)   |
| TX_H_ALLOC_C              | "0'b000000100000" (default)     |

**Table 693: Parameters (Continued)**

| <b>Name</b>                   | <b>Values</b>                 |
|-------------------------------|-------------------------------|
| TX_H_ALLOC_N                  | "0'b000000001000" (default)   |
| TX_H_ALLOC_P                  | "0'b000000001000" (default)   |
| TX_HIZ                        | "IGNORED" (default)           |
| TX_IMPED_RATIO                | "0'b10000000" (default)       |
| TX_PAR_INJECT_EN              | "DO_NOT_INJECT_ERR" (default) |
| TX_PAR_REPORT_DISABLE         | "ENABLE_REPORTING" (default)  |
| TX_PAR1_INJECT_EN             | "DO_NOT_INJECT_ERR" (default) |
| TX_PAR2_HANDLE_DISABLE        | "ENABLE_HANDLING" (default)   |
| TX_PAR2_INJECT_EN             | "DO_NOT_INJECT_ERR" (default) |
| TX_PAR2_REPORT_DISABLE        | "ENABLE_REPORTING" (default)  |
| TX_POLINV                     | "NORMAL" (default)            |
| TX_PRE_RATIO                  | "0'b00000000" (default)       |
| TX_PRE_RATIO_DEEMP0_FULL      | "0'b00000000" (default)       |
| TX_PRE_RATIO_DEEMP0_HALF      | "0'b00000000" (default)       |
| TX_PRE_RATIO_DEEMP1_FULL      | "0'b00000000" (default)       |
| TX_PRE_RATIO_DEEMP1_HALF      | "0'b00000000" (default)       |
| TX_PRIORITY                   | "DISABLED" (default)          |
| TX_PRIORITY_N_STARVE_THRESH   | "0'b00010000" (default)       |
| TX_PRIORITY_P_STARVE_THRESH   | "0'b00010000" (default)       |
| TX_PST_RATIO                  | "0'b00010101" (default)       |
| TX_PST_RATIO_DEEMP0_FULL      | "0'b00100000" (default)       |
| TX_PST_RATIO_DEEMP0_HALF      | "0'b00100000" (default)       |
| TX_PST_RATIO_DEEMP1_FULL      | "0'b00010101" (default)       |
| TX_PST_RATIO_DEEMP1_HALF      | "0'b00010101" (default)       |
| TX_QUIESCE                    | "DISABLED" (default)          |
| TX_REPLAY_ECC1_HANDLE_DISABLE | "ENABLE_CORRECTION" (default) |
| TX_REPLAY_ECC1_INJECT_EN      | "DO_NOT_INJECT_ERR" (default) |
| TX_REPLAY_ECC1_INJECT_M_1_N   | "INJECT_1_ERR" (default)      |
| TX_REPLAY_ECC1_REPORT_DISABLE | "ENABLE_REPORTING" (default)  |
| TX_REPLAY_ECC2_HANDLE_DISABLE | "ENABLE_HANDLING" (default)   |
| TX_REPLAY_ECC2_INJECT_EN      | "DO_NOT_INJECT_ERR" (default) |
| TX_REPLAY_ECC2_INJECT_M_1_N   | "INJECT_1_ERR" (default)      |

**Table 693: Parameters (Continued)**

| <b>Name</b>                   | <b>Values</b>                      |
|-------------------------------|------------------------------------|
| TX_REPLAY_ECC2_REPORT_DISABLE | "ENABLE_REPORTING" (default)       |
| TX_REQ_EQ                     | "DISABLED" (default)               |
| TX_SELECT_RX_FEEDBACK         | "REFCLK" (default)                 |
| TX_TLP_VALID                  | "DISABLED" (default)               |
| TXF_A                         | "0'b0100" (default)                |
| TXF_B                         | "0'b0100" (default)                |
| TXF_C                         | "0'b0100" (default)                |
| TXHF_CLKDN                    | "ENABLED" (default)                |
| TXM_A                         | "0'b10" (default)                  |
| TXM_B                         | "0'b01" (default)                  |
| TXM_C                         | "0'b00" (default)                  |
| TXN_A                         | "0'b00100" (default)               |
| TXN_B                         | "0'b01001" (default)               |
| TXN_C                         | "0'b01111" (default)               |
| TXPLL_INIT                    | "DISABLED" (default)               |
| TXPLL_RST                     | "DISABLED" (default)               |
| TYPE1_TYPE0_N                 | "ENDPOINT" (default)               |
| U_CLK_PERIOD                  | "0'b0001111101000000" (default)    |
| US_PORT_PS_ENTRY_TIME         | "0'b0000000000000000" (default)    |
| US_PORT_RX_PRESET_HINT        | "0'b010" (default)                 |
| US_PORT_TX_PRESET             | "0'b0100" (default)                |
| USE_COEF_PRE_MTHD_CTRL        | "PRESET_VALUE" (default)           |
| USE_COEF_UPDN_CTRL            | "PRESET_VALUE" (default)           |
| USER_AUTO_N                   | "AUTOMATIC_ON_RECEPTION" (default) |
| VALUE_8G_POST                 | "0'b000000" (default)              |
| VALUE_8G_PRE                  | "0'b000000" (default)              |
| VEC_MASK_CAPABLE_MSICAP_A     | "ENABLED" (default)                |
| VEC_MASK_CAPABLE_MSICAP_B     | "ENABLED" (default)                |
| VEC_MASK_CAPABLE_MSICAP_C     | "ENABLED" (default)                |
| VEC_MASK_CAPABLE_MSICAP_D     | "ENABLED" (default)                |
| VENDOR_ID_ID1A                | "0'b0001100110101010" (default)    |
| VENDOR_ID_ID1B                | "0'b0001100110101010" (default)    |

**Table 693: Parameters (Continued)**

| Name                  | Values                          |
|-----------------------|---------------------------------|
| VENDOR_ID_ID1C        | "0'b0001100110101010" (default) |
| VENDOR_ID_ID1D        | "0'b0001100110101010" (default) |
| VENDOR0_UR            | "REPORT" (default)              |
| VERSION_AER_CAP       | "VER_0X2" (default)             |
| VERSION_PM_CAP        | "0'b011" (default)              |
| XLCY0                 | "0'b00000000" (default)         |
| XLCY1                 | "0'b00000000" (default)         |
| COEF5_PRE             | "0'b000001" (default)           |
| DIRECTED_RETRAIN_LINK | "OTHERWISE" (default)           |
| DIS_MSI_CAP_D         | "ENABLED" (default)             |
| EN_RBAR_CAP_B         | "ENABLED" (default)             |
| GAIN_TIMER1           | "0'b0101" (default)             |
| MIN_SPEED             | "2P5G" (default)                |
| OVERRIDE              | "DISABLED" (default)            |
| PRESET_LPBK_SLAVE_2   | "OTHERWISE" (default)           |
| SPEED                 | "8G" (default)                  |
| TX_D_ALLOC_C          | "0'b0000000001100000" (default) |

## PCIELL

PCIe logical link layer

### Note:

You should not try to use this primitive directly. Instead, use the related IP in IP Catalog. The following information is for reference only.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ LFMXO5-55TDQ
- ▶ UT24CP

### Table 694: Input Ports

Lattice Radiant Software 2025.2.1 Help

**Table 694: Input Ports (Continued)**

| Name                      | Description                                    |
|---------------------------|------------------------------------------------|
| LINK0_RSTUSRN             | User link0 reset                               |
| LINK1_RSTUSRN             | User link1 reset                               |
| ULTSDIS_X1                | Disables LTSSM for link1                       |
| ULTSDIS_X4                | Disables LTSSM for link0                       |
| UCFG_ADDR[9:0]            | Register Address/Offset                        |
| UCFG_F[2:0]               | Function number                                |
| UCFG_USE_LMMI_RDATA       | Use LMMI read data port                        |
| UCFG_VALID                | Transaction request valid signal               |
| UCFG_WR_BE[3:0]           | Byte Enable                                    |
| UCFG_WR_DATA[31:0]        | Write data                                     |
| UCFG_WR_RD_N              | Write=1, Read=0                                |
| UCFG_LINK                 | Which link is making the request               |
| AUX_POWER_DETECTED[1:0]   | Auxiliary Power detected                       |
| TRANSACTIONS_PENDING[7:0] | Non-posted transactions pending                |
| LMMICLK                   | LMMI clock                                     |
| LMMIOFFSET[14:0]          | LMMI address offset                            |
| LMMIREQUEST               | LMMI start transaction                         |
| LMMIRESETN                | LMMI reset                                     |
| LMMIWDATA[31:0]           | LMMI write data                                |
| LMMIWRRDN                 | LMMI write and read control, 1: write, 0: read |
| VC_RX_CREDIT_INIT[1:0]    | Transaction layer, initialize credit counters  |
| VC_RX_CREDIT_NH[23:0]     | Transaction layer, number of NH credit         |
| VC_RX_CREDIT_NH_INF[1:0]  | Transaction Layer, infinite NH credits         |
| VC_RX_CREDIT_RETURN[1:0]  | Transaction Layer, NH credit return signal     |
| VC_RX_READY[1:0]          | Transaction layer, destination ready signal    |
| VC_TX_DATA[127:0]         | TLP Tx Data which can support up to 4 lanes    |
| VC_TX_DATAP[15:0]         | TLP Tx Data Parity                             |
| VC_TX_EOP[1:0]            | Transaction layer, end of packet               |
| VC_TX_EOPN[1:0]           | Transaction layer, end of nullified packet     |
| VC_TX_SOP[1:0]            | Transaction layer, start of packet             |
| VC_TX_VALID[1:0]          | Transaction layer, source valid signal         |
| PIPE_LOCAL_FS[23:0]       | Pipe signal for 4 lanes                        |

**Table 694: Input Ports (Continued)**

| Name                                | Description                                               |
|-------------------------------------|-----------------------------------------------------------|
| PIPE_LOCAL_GET_TX_COEF_VALID[3:0]   | Pipe signal for 4 lanes                                   |
| PIPE_LOCAL_GET_TX_PRESET_COEF[71:0] | Pipe signal for 4 lanes                                   |
| PIPE_LOCAL_IF[23:0]                 | Pipe signal for 4 lanes                                   |
| PIPE_PHY_STATUS[3:0]                | Pipe signal for 4 lanes                                   |
| PIPE_RX_CLKREQ_N[3:0]               | Pipe signal for 4 lanes                                   |
| PIPE_RX_DATA[127:0]                 | Pipe signal for 4 lanes                                   |
| PIPE_RX_DATA_EN[3:0]                | Pipe signal for 4 lanes                                   |
| PIPE_RX_DATA_VALID[3:0]             | Pipe signal for 4 lanes                                   |
| PIPE_RX_DATAK[15:0]                 | Pipe signal for 4 lanes                                   |
| PIPE_RX_ELEC_IDLE[3:0]              | Pipe signal for 4 lanes                                   |
| PIPE_RX_EQ_EVAL_FEEDBACK_DIR[23:0]  | Pipe signal for 4 lanes                                   |
| PIPE_RX_EQ_EVAL_FEEDBACK_FROM[31:0] | Pipe signal for 4 lanes                                   |
| PIPE_RX_START_BLOCK[3:0]            | Pipe signal for 4 lanes                                   |
| PIPE_RX_STATUS[11:0]                | Pipe signal for 4 lanes                                   |
| PIPE_RX_SYNC_HEADER[7:0]            | Pipe signal for 4 lanes                                   |
| PIPE_RX_VALID[3:0]                  | Pipe signal for 4 lanes                                   |
| PIPE_TX_DATA_EN[3:0]                | Pipe signal for 4 lanes                                   |
| PIPE_WIDTH_2G5[7:0]                 | Pipe signal for 4 lanes                                   |
| PIPE_WIDTH_5G0[7:0]                 | Pipe signal for 4 lanes                                   |
| PIPE_WIDTH_8G0[7:0]                 | Pipe signal for 4 lanes                                   |
| PIPE_TX_CLKACK_N_X4[3:0]            | PCS status for link0                                      |
| PIPE_TX_CLKACK_N_X1                 | PCS status for link1                                      |
| LINK0_SEL_PCLK1_AUX0                | PCS select pipe clock or aux clock as main clock in link0 |
| LINK1_SEL_PCLK1_AUX0                | PCS select pipe clock or aux clock as main clock in link1 |
| SCAN_CLK                            | Scan clock for PCIe-LL                                    |
| SCAN_RST                            | Scan reset for PCIe-LL                                    |

**Table 695: Output Ports**

| Name         | Description                            |
|--------------|----------------------------------------|
| LINK0_CKUSRO | User clock for link0 from Fabric clock |
| LINK1_CKUSRO | User clock for link1 from Fabric clock |
| FLR[7:0]     | Function level reset                   |



**Table 695: Output Ports (Continued)**

| Name                              | Description                                           |
|-----------------------------------|-------------------------------------------------------|
| MGMT_INTERRUPT_O[1:0]             | Core interrupt output for 2 links                     |
| PM_DPA_CONTROL[9:0]               | Dynamic Power Allocation for 2 links                  |
| PM_DPA_CONTROL_EN[1:0]            | Dynamic Power Allocation for 2 links                  |
| PM_PB_DATA_SEL[15:0]              | Power Budgeting                                       |
| U_DL_LINK_UP[1:0]                 | Data Link Layer Link Up Status (1) Up (0) Down        |
| U_PL_LINK_UP[1:0]                 | Physical Link Layer Link Up Status (1) Up (0) Down    |
| U_TL_LINK_UP[1:0]                 | Transaction Link Layer Link Up Status (1) Up (0) Down |
| UCFG_RD_DATA[31:0]                | Read data                                             |
| UCFG_RD_DONE[1:0]                 | Read data available for 2 links                       |
| UCFG_READY                        | Core ready signal                                     |
| LMMIRDATA[31:0]                   | Read data                                             |
| LMMIRDATAVALID                    | Valid data indicator                                  |
| LMMIREADY                         | Slave ready signal.                                   |
| VC_RX_CMD_DATA[25:0]              | TLP decode information                                |
| VC_RX_DATA[127:0]                 | TLP Rx Data which can support up to 4 lanes           |
| VC_RX_DATAP[15:0]                 | TLP Rx Data Parity                                    |
| VC_RX_EOP[1:0]                    | End of packet for 2 links                             |
| VC_RX_ERR_ECRC[1:0]               | End of packet with ECRC error                         |
| VC_RX_F[15:0]                     | Physical Function hit by transaction                  |
| VC_RX_SEL[3:0]                    | TLP type (0=Posted, 1=Non Posted, 2=Completion)       |
| VC_RX_SOP[1:0]                    | Start of packet for 2 links                           |
| VC_RX_VALID[1:0]                  | Source Valid signal for 2 links                       |
| VC_TX_CREDIT_INIT[1:0]            | Initialize credit counters                            |
| VC_TX_CREDIT_NH[23:0]             | Number of NH credits                                  |
| VC_TX_CREDIT_RETURN[1:0]          | NH Credit return signal                               |
| VC_TX_READY[1:0]                  | Destination ready signal                              |
| PIPE_BLOCK_ALIGN_CONTROL[3:0]     | Pipe signal for 4 lanes                               |
| PIPE_LOCAL_GET_PRESET_COEF[3:0]   | Pipe signal for 4 lanes                               |
| PIPE_LOCAL_GET_PRESET_INDEX[15:0] | Pipe signal for 4 lanes                               |
| PIPE_POWER_DOWN[7:0]              | Pipe signal for 4 lanes                               |
| PIPE_RATE[7:0]                    | Pipe signal for 4 lanes                               |
| PIPE_REMOTE_EQ_RX_DEEMPH[71:0]    | Pipe signal for 4 lanes                               |

**Table 695: Output Ports (Continued)**

| Name                            | Description                                                               |
|---------------------------------|---------------------------------------------------------------------------|
| PIPE_REMOTE_EQ_RX_PRESET[15:0]  | Pipe signal for 4 lanes                                                   |
| PIPE_REMOTE_FS[23:0]            | Pipe signal for 4 lanes                                                   |
| PIPE_REMOTE_LF[23:0]            | Pipe signal for 4 lanes                                                   |
| PIPE_RX_EI_DISABLE[3:0]         | Pipe signal for 4 lanes                                                   |
| PIPE_RX_EQ_EVAL[3:0]            | Pipe signal for 4 lanes                                                   |
| PIPE_INVALID_REQUEST[3:0]       | Pipe signal for 4 lanes                                                   |
| PIPE_RX_POLARITY[3:0]           | Pipe signal for 4 lanes                                                   |
| PIPE_RX_PRESET_HINT[11:0]       | Pipe signal for 4 lanes                                                   |
| PIPE_RX_PRESET_HINT_ENABLE[3:0] | Pipe signal for 4 lanes                                                   |
| PIPE_TX_CLKREQ_N[3:0]           | Pipe signal for 4 lanes                                                   |
| PIPE_TX_CM_DISABLE[3:0]         | Pipe signal for 4 lanes                                                   |
| PIPE_TX_COMPLIANCE[3:0]         | Pipe signal for 4 lanes                                                   |
| PIPE_TX_DATA[127:0]             | Pipe signal for 4 lanes                                                   |
| PIPE_TX_DATA_VALID[3:0]         | Pipe signal for 4 lanes                                                   |
| PIPE_TX_DATAK[15:0]             | Pipe signal for 4 lanes                                                   |
| PIPE_TX_DEEMPH[71:0]            | Pipe signal for 4 lanes                                                   |
| PIPE_TX_DEEMPH_WINDOW[3:0]      | Pipe signal for 4 lanes                                                   |
| PIPE_TX_DETECT_RX_LOOPBACK[3:0] | Pipe signal for 4 lanes                                                   |
| PIPE_TX_ELEC_IDLE[3:0]          | Pipe signal for 4 lanes                                                   |
| PIPE_TX_MARGIN[11:0]            | Pipe signal for 4 lanes                                                   |
| PIPE_TX_START_BLOCK[3:0]        | Pipe signal for 4 lanes                                                   |
| PIPE_TX_SWING[3:0]              | Pipe signal for 4 lanes                                                   |
| PIPE_TX_SYNC_HEADER[7:0]        | Pipe signal for 4 lanes                                                   |
| BIFUR_SEL[2:0]                  | bifur_sel to PCS_top, PCS_top will use this signal to do In2lk processing |
| LINK1_CSR_PIPE_RESET            | Pipe reset for lane3 in link1                                             |
| LINK0_CSR_PIPE_RESET[3:0]       | Pipe reset for 4 lanes in link0                                           |


## PCLKDIV

Clock Divider for Primary Clock

Architectures supported:

▶ LFCPNX

- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

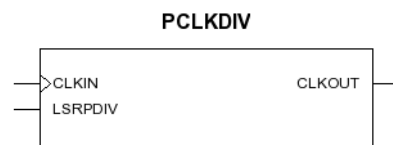**Table 696: Input Ports**

| Name    | Range | Description     |
|---------|-------|-----------------|
| CLKIN   | 1     | Input clock     |
| LSRPDIV | 1     | Local set/reset |

**Table 697: Output Ports**

| Name   | Range | Description          |
|--------|-------|----------------------|
| CLKOUT | 1     | Output divided clock |

**Table 698: Parameters**

| Name        | Values                            | Description      | Outputs   |
|-------------|-----------------------------------|------------------|-----------|
| DIV_PCLKDIV | X1 (default)                      | Clock divider    | CLKIN/1   |
|             | X2                                |                  | CLKIN/2   |
|             | X4                                |                  | CLKIN/4   |
|             | X8                                |                  | CLKIN/8   |
|             | X16                               |                  | CLKIN/16  |
|             | X32                               |                  | CLKIN/32  |
|             | X64                               |                  | CLKIN/64  |
|             | X128                              |                  | CLKIN/128 |
| GSR         | "ENABLED" (default)<br>"DISABLED" | Global set/reset |           |

## PCLKDIVSP

Clock Divider for Primary Clock

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

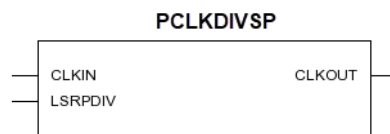


**Table 699: Input Ports**

| Name    | Description     |
|---------|-----------------|
| CLKIN   | Input clock     |
| LSRPDIV | Local set/reset |

**Table 700: Output Ports**

| Name   | Description          |
|--------|----------------------|
| CLKOUT | Output divided clock |

**Table 701: Parameters**

| Name        | Values    | Description                                                 |
|-------------|-----------|-------------------------------------------------------------|
| DIV_PCLKDIV | "X1"      | Divider value. Other values X2, X4, X8, X16, X32, X64, X128 |
| GSR         | "ENABLED" | Enable global set/reset                                     |

## PCNTR

Power Controller

Architectures Supported:

- ▶ LFMXO4

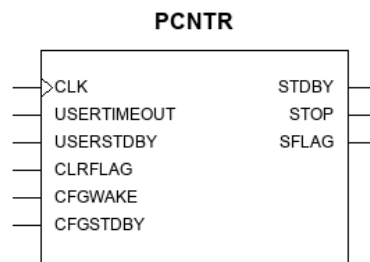


**Table 702: Input Ports**

| Name        | Range | Description |
|-------------|-------|-------------|
| CLK         | 1     |             |
| USERTIMEOUT | 1     |             |
| USERSTDBY   | 1     |             |
| CLRFLAG     | 1     |             |
| CFGWAKE     | 1     |             |
| CFGSTDBY    | 1     |             |

**Table 703: Output Ports**

| Name  | Range | Description |
|-------|-------|-------------|
| STOP  | 1     |             |
| STDBY | 1     |             |
| SFLAG | 1     |             |

**Table 704: Parameters**

| Name     | Values                                    | Description                                  |
|----------|-------------------------------------------|----------------------------------------------|
| STDBYOPT | "USER_CFG" (default)<br>"USER"<br>"CFG"   | Specifies the entry option for entry signals |
| TIMEOUT  | "BYPASS" (default)<br>"USER"<br>"COUNTER" | Specifies the stop to standby delay          |
| WAKEUP   | "USER_CFG" (default)<br>"USER"<br>"CFG"   | Specifies the wake option for wake signals   |
| POROFF   | "FALSE" (default)<br>"TRUE"               | Turns on or off POR when in standby          |
| BGOFF    | "FALSE" (default)<br>"TRUE"               | Turns on or off Bandgap when in standby      |

**Description**

PCNTR is the power controller primitive.

For more information, refer to the related technical notes on the Lattice web site.

## PCSREFMUX

Multiplexer of reference clock for PCS. SW provides one set of reference clock, 40K could instantiate one, 80k could instantiate twice and 120k could have three instances.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

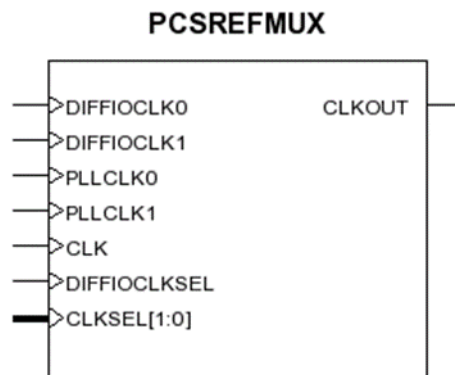


**Table 705: Input Ports**

| Name         | Description                                                  |
|--------------|--------------------------------------------------------------|
| DIFFIOCLK0   | PMA PLL refclk from external IO pad0                         |
| DIFFIOCLK1   | PMA PLL refclk from external IO pad1                         |
| PLLCLK0      | MA PLL refclk from GPLL                                      |
| PLLCLK1      | MA PLL refclk from GPLL                                      |
| CLK          | PMA PLL refclk from CIB                                      |
| DIFFIOCLKSEL | Dynamic selection between I/O pad0 and IO pad1 for PCS quad0 |
| CLKSEL[1:0]  | Dynamic selection among I/O pad, PLL and CIB for PCS quad0   |

**Table 706: Output Ports**

| Name   | Description                                |
|--------|--------------------------------------------|
| CLKOUT | PMA PLL refclk output from refclk_mux_tree |

## PCSX1

Wrapper of PCSX1 and MPCS. PCS hard IP block is quad-base but each channel has independent ports, controls, registers and setting to support channel-base, dual-channel-base and quad-base usage.

There are four software parameters:

1. **PROTOCOL:** The protocol implemented in all channels of current PCS instance. The protocol should be set when soft IP instantiates the primitive.
2. **DATARATE:** The data rate of the protocol. The data rate should be set if corresponding data rate exists for the protocol.
3. **LANE\_ID:** User could specify it to locate the PCS instance in device. LANE\_ID should be unique among all PCS instances in the design. Otherwise, software will report error. 'AUTO' is default that SW could determine automatically.
4. **GRP\_NAME:** If multiple PCS instances are used to implement the protocol, same GRP\_NAME should be set in these instances so that software binds them together.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP



| PCSK1                                                           |                                                                      |
|-----------------------------------------------------------------|----------------------------------------------------------------------|
| PMACLKIN                                                        | PIPE_PCS_TXCLKOUT                                                    |
| TXCLK                                                           | RXOUTCLK                                                             |
| RXCLK                                                           | TX_ALIGN_CLKOUT                                                      |
| CCCLK                                                           | RX_ALIGN_CLKOUT                                                      |
| TX_ALIGN_CLKIN                                                  | LMIMEDIA_VALID                                                       |
| RX_ALIGN_CLKIN                                                  | LMIMREADY                                                            |
| PERSTN                                                          | LMIMDATA7_LMIMDATA0                                                  |
| MPCS_TX_U1STN                                                   | SDTAP                                                                |
| MPCS_RX_U1STN                                                   | SOTXN                                                                |
| LMIMCLK                                                         | PCLKXUX_SEL_LL                                                       |
| LMIMSEBEN                                                       | CLKREQDQ                                                             |
| LMIMREQUEST                                                     | CLKREQDDE                                                            |
| LMIMWR_RDN                                                      | TX_ALIGN_OUT_UPP_TX_ALIGN_OUT_LUPD                                   |
| LMIMOFFSETS_LMIMOFFBETO                                         | TX_ALIGN_OUT_DOWNN_TX_ALIGN_OUT_DOWND                                |
| LMIMHDATA7_LMIMHDATA0                                           | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| SDRXP                                                           | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| SDRON                                                           | PIPE_RXEQ_FOM7_PIPE_RXEQ_FOM0                                        |
| SDRCKT                                                          | PIPE_RHV_STATUS                                                      |
| SDREFRET                                                        | PIPE_RX_BI                                                           |
| SDQ_REFCLKP                                                     | PIPE_RX_CLKREQ                                                       |
| SDQ_REFCLKN                                                     | PIPE_LTX_ENTRY_ACK                                                   |
| AUSCLK                                                          | PIPE_TX_PRESET_COEF_PCS_DATA17_PIPE_TX_PRESET_COEF_PCS_DATA1         |
| ALTCLIN                                                         | PIPE_RX_START_BLOCK                                                  |
| ALTCLSEL                                                        | PIPE_RX_DATA_PCS_RX_DATA01_PIPE_RX_DATA_PCS_RX_DATA0                 |
| CLKREQD                                                         | PIPE_RX_STATUS_PCS_RX_DATA2_PIPE_RX_STATUS_PCS_RX_DATA0              |
| TX_ALIGN_IN_UPP_TX_ALIGN_IN_LUPD                                | PIPE_RX_DATA_EN_PCS_RX_DATA                                          |
| TX_ALIGN_IN_DOWNN_TX_ALIGN_IN_DOWND                             | PIPE_RX_VLD_PCS_RX_DATA                                              |
| PIPE_POWER_DOWNN_PIPE_POWER_DOWND                               | PIPE_RX_DATA_VLD_PCS_RX_DATA                                         |
| PIPE_RATE1_PIPE_RATE0                                           | PIPE_RX_SYNC_HDR_PCS_DATA1_PIPE_RX_SYNC_HDR_PCS_DATA0                |
| PIPE_TXDETECTRX                                                 | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| PIPE_RX_EDEVAL                                                  | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| PIPE_INVALD_REQUEST                                             | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| PIPE_RX_PRESET_HINTN                                            | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| PIPE_RX_PRESET_HINT2_PIPE_RX_PRESET_HINT0                       | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| PIPE_RX_PCS                                                     | PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL7_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL0    |
| PIPE_TX_CLKREQ                                                  | PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL5_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL0    |
| PIPE_TXCOMM_DIS                                                 | PIPE_RHV_STATUS_LL                                                   |
| PIPE_RXEL_DIS                                                   | PIPE_RX_ELEC_OLE_LL                                                  |
| PIPE_L1MSEN                                                     | PIPE_RX_CLKREQ_N_LL                                                  |
| PIPE_LTX_ENTRY_REQ                                              | PIPE_LOCAL_PCS_LL5_PIPE_LOCAL_PCS_LL0                                |
| PIPE_TX_SWING                                                   | PIPE_LOCAL_PCS_LL5_PIPE_LOCAL_PCS_LL0                                |
| PIPE_TX_MARGIN2_PIPE_TX_MARGIN0                                 | PIPE_LOCAL_GET_TX_COEF_VALID_LL                                      |
| PIPE_TX_DEEMPH_T_PIPE_TX_DEEMPH0                                | PIPE_LOCAL_GET_TX_PRESET_COEF_LL17_PIPE_LOCAL_GET_TX_PRESET_COEF_LL0 |
| PIPE_TX_DEEMPH_PCS_TX_DATA1_PIPE_TX_DEEMPH_PCS_TX_DATA0         | PIPE_TX_DATA_ENABLE_LL                                               |
| PIPE_LOCAL_GET_PRESET_COEF                                      | PIPE_RX_DATA_EN_LL                                                   |
| PIPE_TX_DATA_VLD                                                | PIPE_RX_DATA_VLD_LL                                                  |
| PIPE_TX_BI                                                      | PIPE_RX_SYNC_HEADER_LL1_PIPE_RX_SYNC_HEADER_LL0                      |
| PIPE_TX_DATA_PCS_TX_DATA01_PIPE_TX_DATA_PCS_TX_DATA0            | PIPE_RX_SYNC_HEADER_LL1_PIPE_RX_SYNC_HEADER_LL0                      |
| PIPE_TX_DATA_PCS_TX_DATA03_PIPE_TX_DATA_PCS_TX_DATA0            | PIPE_RX_DATA_LL01_PIPE_RX_DATA_LL0                                   |
| PIPE_TX_COMP_PCS_TX_DATA                                        | PIPE_RX_DATA_LL3_PIPE_RX_DATA_LL0                                    |
| PIPE_TX_START_BLK_PCS_TX_DATA                                   | PIPE_RX_VLD_LL                                                       |
| PIPE_TX_SYNC_HDR_PCS_TX_DATA1_PIPE_TX_SYNC_HDR_PCS_TX_DATA0     | PIPE_RX_STATUS_LL2_PIPE_RX_STATUS_LL0                                |
| PIPE_RX_ALIGNCTRL                                               | PIPE_PCLKOUT_LL                                                      |
| LINK0_CSR_PIPE_RESET                                            | PIPE_WIDTH_S001_PIPE_WIDTH_S000                                      |
| PCIELL_MODESEL2_PCIELL_MODESEL0                                 | PIPE_RXEQ_DIR_PCS_RX_DATA3_PIPE_RXEQ_DIR_PCS_RX_DATA0                |
| PIPE_POWER_DOWN_LL1_PIPE_POWER_DOWN_LL0                         | PIPE_RXEQ_DIR_PCS_RX_PFD_ST3_PIPE_RXEQ_DIR_PCS_RX_PFD_ST4            |
| PIPE_RATE_LL1_PIPE_RATE_LL0                                     | PIPE_LOCAL_PCS_RX_DATA0_PIPE_LOCAL_PCS_RX_DATA0                      |
| PIPE_TX_DETECT_RX_LOOPBACK_LL                                   | PIPE_LOCAL_PCS_RX_DATA0_PIPE_LOCAL_PCS_RX_DATA0                      |
| PIPE_RX_EQ_EVAL_LL                                              | PIPE_LOCAL_GET_TX_COEF_VLD                                           |
| PIPE_INVALD_REQUEST_LL                                          | PIPE_TX_DATA_EN                                                      |
| PIPE_RX_PRESET_HINT_ENABLE_LL                                   | PIPE_RX_DATA_PCS_RX_DATA3_PIPE_RX_DATA_PCS_RX_DATA0                  |
| PIPE_RX_PRESET_HINT_LL1_PIPE_RX_PRESET_HINT_LL0                 | PCS_RX_DATA79_PCS_RX_DATA70                                          |
| PIPE_RX_POLARITY_LL                                             | PCS_RX_H_BER                                                         |
| PIPE_TX_CLKREQ_N_LL                                             | PCS_RX_LOOK                                                          |
| PIPE_TX_CM_DISABLE_LL                                           | PCS_TX_PFD0_ST3_PCS_TX_PFD0_ST2                                      |
| PIPE_RX_EI_DISABLE_LL                                           | ACINPUT                                                              |
| PIPE_L1MSEN_LL                                                  | ACINPUT                                                              |
| PIPE_TX_SWING_LL                                                |                                                                      |
| PIPE_TX_MARGIN_LL2_PIPE_TX_MARGIN_LL0                           |                                                                      |
| PIPE_TX_DEEMPH_LL17_PIPE_TX_DEEMPH_LL0                          |                                                                      |
| PIPE_TX_DEEMPH_WINDOW_LL                                        |                                                                      |
| PIPE_LOCAL_GET_PRESET_COEF_LL                                   |                                                                      |
| PIPE_LOCAL_GET_PRESET_INDEX_LL3_PIPE_LOCAL_GET_PRESET_INDEX_LL0 |                                                                      |
| PIPE_REMOTE_PCS_LL5_PIPE_REMOTE_PCS_LL0                         |                                                                      |
| PIPE_REMOTE_LL5_PIPE_REMOTE_LL0                                 |                                                                      |
| PIPE_REMOTE_EQ_RX_DEEMPH_LL17_PIPE_REMOTE_EQ_RX_DEEMPH_LL0      |                                                                      |
| PIPE_REMOTE_EQ_RX_PRESET_LL3_PIPE_REMOTE_EQ_RX_PRESET_LL0       |                                                                      |
| PIPE_TX_DATA_VALID_LL                                           |                                                                      |
| PIPE_TX_START_BLOCK_LL                                          |                                                                      |
| PIPE_TX_SYNC_HEADER_LL1_PIPE_TX_SYNC_HEADER_LL0                 |                                                                      |
| PIPE_TX_DATA_LL1_PIPE_TX_DATA_LL0                               |                                                                      |
| PIPE_TX_DATA_LL3_PIPE_TX_DATA_LL0                               |                                                                      |
| PIPE_TX_COMP_LIANCE_LL                                          |                                                                      |
| PIPE_TX_ELEC_OLE_LL                                             |                                                                      |
| PIPE_BLOCK_ALIGN_CONTROL_LL                                     |                                                                      |
| PIPE_PRESET_IDX_PCS_TX_DATA3_PIPE_PRESET_IDX_PCS_TX_DATA0       |                                                                      |
| PIPE_REMOTE_PCS_PCS_TX_DATA0_PIPE_REMOTE_PCS_PCS_TX_DATA0       |                                                                      |
| PIPE_REMOTE_LL_PCS_TX_DATA0_PIPE_REMOTE_LL_PCS_TX_DATA0         |                                                                      |
| PIPE_RX_DEEMPH_PCS_TX_DATA17_PIPE_RX_DEEMPH_PCS_TX_DATA0        |                                                                      |
| PIPE_RX_PRESET_PCS_TX_DATA3_PIPE_RX_PRESET_PCS_TX_DATA0         |                                                                      |
| ACTMD                                                           |                                                                      |
| ACTEN                                                           |                                                                      |
| ACTACMD                                                         |                                                                      |
| ACTON1                                                          |                                                                      |
| ACTHIGHZ                                                        |                                                                      |
| SCAN_CLK                                                        |                                                                      |
| SCAN_RST                                                        |                                                                      |

Table 707: Input Ports

| Name           | Description                                                      |
|----------------|------------------------------------------------------------------|
| PMACLKIN       | This low speed clock will also drive PMA 'epcs_clkln' clock port |
| TXCLK          | User interface tx clock input (From FPGA)                        |
| RXCLK          | User interface rx clock input (From FPGA)                        |
| CCCLK          | CTC clock from Fabric                                            |
| TX_ALIGN_CLKIN | Clock for multi quad usage in TX mode                            |
| RX_ALIGN_CLKIN | Clock for multi quad usage in RX mode                            |

**Table 707: Input Ports (Continued)**

|                       |                                                                              |
|-----------------------|------------------------------------------------------------------------------|
| PERSTN                | Fundamental reset. Will trigger PCS auto calibration                         |
| MPCS_TX_URSTN         | MPCS core logic reset (TX path), but do not reset PMA phy                    |
| MPCS_RX_URSTN         | MPCS core logic reset (RX path), but do not reset PMA phy                    |
| LMMICLK               | LMMI Clock (from FPGA)                                                       |
| LMMIRESETN            | LMMI Reset                                                                   |
| LMMIREQUEST           | LMMI start transaction                                                       |
| LMMIWR_RDN            | LMMI Write=HIGH, LMMI Read=LOW                                               |
| LMMIOFFSET8           | LMMI Word Address/Offset                                                     |
| LMMIOFFSET0           |                                                                              |
| LMMIWDATA7            | LMMI write data                                                              |
| LMMIWDATA0            |                                                                              |
| SDRXP                 | Analog RX diffIO                                                             |
| SDRXN                 | Analog RX diffIO                                                             |
| SDREXT                | External resistance                                                          |
| SDREFRET              |                                                                              |
| SDQ_REFCLKP           | Refclk of IO EOM pll in one quad                                             |
| SDQ_REFCLKN           | Refclk of IO EOM pll in one quad                                             |
| AUXCLK                | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| ALTCLKIN              | This is from refclk_mux_tree                                                 |
| ALTCLK_SEL            | Selection for alt_clk_in and independent diffIO refclk                       |
| CLKREQI               | Open drain bidirectional CLKREQ# input                                       |
| TX_LALIGN_IN_UP7      | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_IN_UP0      |                                                                              |
| TX_LALIGN_IN_DOWN7    | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_IN_DOWN0    |                                                                              |
| PIPE_POWER_DOWN1      | Pipe signal open for user, mpcs and ecps sharing                             |
| PIPE_POWER_DOWN0      |                                                                              |
| PIPE_RATE1            | Pipe signal open for user, mpcs and ecps sharing                             |
| PIPE_RATE0            |                                                                              |
| PIPE_TXDETECTRX       | Pipe signal open for user, mpcs and ecps sharing                             |
| PIPE_RX_EQEVAL        | Pipe signal open for user, mpcs and ecps sharing                             |
| PIPE_INVALID_REQUEST  | Pipe signal open for user, mpcs and ecps sharing                             |
| PIPE_RX_PRESET_HINTEN | Pipe signal open for user, mpcs and ecps sharing                             |

**Table 707: Input Ports (Continued)**

|                               |                                                                                                        |
|-------------------------------|--------------------------------------------------------------------------------------------------------|
| PIPE_RX_PRESET_HINT2          | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_RX_PRESET_HINT0          |                                                                                                        |
| PIPE_RX_POL                   | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_CLKREQ                | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TXCOMM_DIS               | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_RXEI_DIS                 | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_L1PMSSEN                 | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_L1X_ENTRY_REQ            | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_SWING                 | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_MARGIN2               | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_MARGIN0               |                                                                                                        |
| PIPE_TX_DEEMPH17              | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_DEEMPH2               |                                                                                                        |
| PIPE_TX_DEEMPH_PCS_TX_DATA1   | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_DEEMPH_PCS_TX_DATA0   |                                                                                                        |
| PIPE_LOCAL_GET_PRESET_COEF    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_DATA_VLD              | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_EI                    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_DATA_PCS_TX_DATA31    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_DATA_PCS_TX_DATA0     |                                                                                                        |
| PIPE_TX_DATAK_PCS_TX_DATA3    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_DATAK_PCS_TX_DATA0    |                                                                                                        |
| PIPE_TX_COMP_PCS_TX_DATA      | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_START_BLK_PCS_TX_DATA | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_SYNC_HDR_PCS_TX_DATA1 | Pipe signal open for user, mpcs and ecps sharing                                                       |
| PIPE_TX_SYNC_HDR_PCS_TX_DATA0 |                                                                                                        |
| PIPE_BLKALGNCTRL              | Pipe signal open for user, mpcs and ecps sharing                                                       |
| LINK0_CSR_PIPE_RESET          | Register control to reset lane0-3 in PCIe mode for link0                                               |
| PCIELL_MODESEL2               | 0=x4 mode, 1=x2 mode, 2=x1 mode, 3=x2/x1 mode, 4=x1/x1 mode                                            |
| PCIELL_MODESEL0               |                                                                                                        |
| PIPE_POWER_DOWN_LL1           | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2) |
| PIPE_POWER_DOWN_LL0           |                                                                                                        |
| PIPE_RATE_LL1                 | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G.                                                   |
| PIPE_RATE_LL0                 | Must be set to speed supported by the core                                                             |

**Table 707: Input Ports (Continued)**

|                                                    |                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PIPE_TX_DETECT_RX_LOOPBACK_LL                      | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise                                                                                                                                                                                                                                                                       |
| PIPE_RX_EQ_EVAL_LL                                 | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                                                                                                                                                                                                                                                                                              |
| PIPE_INVALID_REQUEST_LL                            | Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply).<br><br>When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal |
| PIPE_RX_PRESET_HINT_ENABLE_LL                      | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use                                                                                                                                                                                                                            |
| PIPE_RX_PRESET_HINT_LL2<br>PIPE_RX_PRESET_HINT_LL0 | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                           |
| PIPE_RX_POLARITY_LL                                | Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller<br><br>As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing)                                                                                                                                               |
| PIPE_TX_CLKREQ_N_LL                                | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                                                                                                                                                                                |
| PIPE_TX_CM_DISABLE_LL                              | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                                                                                                                                                                     |
| PIPE_RX_EI_DISABLE_LL                              | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                                                                                                                                                                                 |
| PIPE_L1PMSSN_LL                                    | L1 substates enable                                                                                                                                                                                                                                                                                                                                                                                |
| PIPE_TX_SWING_LL                                   | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing                                                                                                                                                                                                                                                                                                                                     |
| PIPE_TX_MARGIN_LL2<br>PIPE_TX_MARGIN_LL0           | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                                                                                                                                                                                    |
| PIPE_TX_DEEMPH_LL17<br>PIPE_TX_DEEMPH_LL0          | Per lane Transmitter De-Emphasis. 2.5G:(1== -3.5dB). 5G:(1== -3.5dB, 0== -6dB). 8G:([17:12]==Post-Cursor, [11:6]==Cursor, [5:0]==Pre-Cursor)                                                                                                                                                                                                                                                       |
| PIPE_TX_DEEMPH_WINDOW_LL                           | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis                                                                                                                                                                |
| PIPE_LOCAL_GET_PRESET_COEF_LL                      | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                                                                                                                                                                    |

**Table 707: Input Ports (Continued)**

|                                                                    |                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PIPE_LOCAL_GET_PRESET_INDEX_LL3<br>PIPE_LOCAL_GET_PRESET_INDEX_LL0 | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC asks to get the coefficient mapping.<br><br>This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| PIPE_REMOTE_FS_LL5<br>PIPE_REMOTE_FS_LL0                           | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                         |
| PIPE_REMOTE_LF_LL5<br>PIPE_REMOTE_LF_LL0                           | Link partner: LF value the link partner advertised at the beginning of Equalization training                                                                                                                                                                         |
| PIPE_REMOTE_EQ_RX_DEEMPH_LL17<br>PIPE_REMOTE_EQ_RX_DEEMPH_LL0      | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                                                                                                                                                                     |
| PIPE_REMOTE_EQ_RX_PRESET_LL3<br>PIPE_REMOTE_EQ_RX_PRESET_LL0       | Link partner: 8G preset value we requested the link partner use during Equalization training                                                                                                                                                                         |
| PIPE_TX_DATA_VALID_LL                                              | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding                                                                                                                                        |
| PIPE_TX_START_BLOCK_LL                                             | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                                                                                                                                                             |
| PIPE_TX_SYNC_HEADER_LL1<br>PIPE_TX_SYNC_HEADER_LL0                 | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                                                                                                                                              |
| PIPE_TX_DATA_LL31<br>PIPE_TX_DATA_LL0                              | PIPE Tx Data                                                                                                                                                                                                                                                         |
| PIPE_TX_DATAK_LL3<br>PIPE_TX_DATAK_LL0                             | PIPE Tx Data K indicator for 8b10b                                                                                                                                                                                                                                   |
| PIPE_TX_COMPLIANCE_LL                                              | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise                                                                                                                                    |
| PIPE_TX_ELEC_IDLE_LL                                               | PIPE Tx Electrical Idle. 1==Idle, 0==Active                                                                                                                                                                                                                          |
| PIPE_BLOCK_ALIGN_CONTROL_LL                                        | PIPE Block Align Control. Set to 0 when within a datastream (except for Slave Loopback); otherwise set to 1                                                                                                                                                          |
| PIPE_PRESET_INDX_PCS_TX_DATA3<br>PIPE_PRESET_INDX_PCS_TX_DATA0     | Pipe signal open for user, mpcs and ecps sharing                                                                                                                                                                                                                     |
| PIPE_REMOTE_FS_PCS_TX_DATA5<br>PIPE_REMOTE_FS_PCS_TX_DATA0         | Pipe signal open for user, mpcs and ecps sharing                                                                                                                                                                                                                     |
| PIPE_REMOTE_LF_PCS_TX_DATA5<br>PIPE_REMOTE_LF_PCS_TX_DATA0         | Pipe signal open for user, mpcs and ecps sharing                                                                                                                                                                                                                     |
| PIPE_RX_DEEMPH_PCS_TX_DATA17<br>PIPE_RX_DEEMPH_PCS_TX_DATA0        | Pipe signal open for user, mpcs and ecps sharing                                                                                                                                                                                                                     |

**Table 707: Input Ports (Continued)**

|                             |                                                                                                           |
|-----------------------------|-----------------------------------------------------------------------------------------------------------|
| PIPE_RX_PRESET_PCS_TX_DATA3 | Pipe signal open for user, mpcs and ecps sharing                                                          |
| PIPE_RX_PRESET_PCS_TX_DATA0 |                                                                                                           |
| ACTMD                       | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| ACTEN                       | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| ACTACMD                     | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| ACTDR11                     | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| ACTHIGHZ                    | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| SCAN_CLK                    | Scan clock for PCS                                                                                        |
| SCAN_RST                    | Scan reset for PCS                                                                                        |

**Table 708: Output Ports**

| Name                | Description                                                                  |
|---------------------|------------------------------------------------------------------------------|
| PIPE_PCS_TXCLKOUT   | Pipe and PCS tx clock to Fabric                                              |
| RXOUTCLK            | PCS RX clock to Fabric                                                       |
| TX_ALIGN_CLKOUT     | Clock for multi quad usage in TX mode                                        |
| RX_ALIGN_CLKOUT     | Clock for multi quad usage in RX mode                                        |
| LMMIRDATA_VALID     | LMMI read data valid                                                         |
| LMMIREADY           | LMMI Bus ready                                                               |
| LMMIRDATA7          | LMMI read data                                                               |
| LMMIRDATA0          |                                                                              |
| SDTXP               | Analog TX diffIO                                                             |
| SDTXN               | Analog TX diffIO                                                             |
| PCLKAUX_SEL_LL      | Pipe clock selection for user                                                |
| CLKREQO             | Open drain bidirectional CLKREQ# output                                      |
| CLKREQOE            | Open drain bidirectional CLKREQ# output enable                               |
| TX_LALIGN_OUT_UP7   | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_OUT_UP0   |                                                                              |
| TX_LALIGN_OUT_DOWN7 | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_OUT_DOWN0 |                                                                              |

**Table 708: Output Ports (Continued)**

|                                   |                                                                                                                    |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------|
| PIPE_WIDTH_5G01                   | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_WIDTH_5G00                   |                                                                                                                    |
| PIPE_WIDTH_8G01                   | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_WIDTH_8G00                   |                                                                                                                    |
| PIPE_RXEQ_FOM7                    | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RXEQ_FOM0                    |                                                                                                                    |
| PIPE_PHY_STATUS                   | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_EI                        | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_CLKREQ                    | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_L1X_ENTRY_ACK                | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_LOCAL_GET_TX_PRESET_COEF3    | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_LOCAL_GET_TX_PRESET_COEF0    |                                                                                                                    |
| PIPE_TX_PRESET_COEF_PCS_RX_DATA17 | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_TX_PRESET_COEF_PCS_RX_DATA4  |                                                                                                                    |
| PIPE_RX_START_BLOCK               | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_DATA_PCS_RX_DATA31        | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_DATA_PCS_RX_DATA0         |                                                                                                                    |
| PIPE_RX_STATUS_PCS_RX_DATA2       | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_STATUS_PCS_RX_DATA0       |                                                                                                                    |
| PIPE_RX_DATA_EN_PCS_RX_DATA       | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_VLD_PCS_RX_DATA           | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_DATA_VLD_PCS_RX_DATA      | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_SYNC_HDR_PCS_RX_DATA1     | Pipe signal open for user, mpcs and ecps sharing                                                                   |
| PIPE_RX_SYNC_HDR_PCS_RX_DATA0     |                                                                                                                    |
| PIPE_WIDTH_2G5_LL1                | Width of pipe_tx/rx_data at 2.5G speed.                                                                            |
| PIPE_WIDTH_2G5_LL0                | 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <=PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| PIPE_WIDTH_5G0_LL1                | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved,                                                              |
| PIPE_WIDTH_5G0_LL0                | 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH              |
| PIPE_WIDTH_8G0_LL1                | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved,                                                              |
| PIPE_WIDTH_8G0_LL0                | 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH              |
| PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL7  | PHY provides the relative received signal quality on                                                               |
| PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL0  | pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1                                                  |

**Table 708: Output Ports (Continued)**

|                                                                         |                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL5<br>PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL0    | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                                                                                                                                                                           |
| PIPE_PHY_STATUS_LL                                                      | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                                                                                                                                                                               |
| PIPE_RX_ELEC_IDLE_LL                                                    | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                                                                                                                                                                     |
| PIPE_RX_CLKREQ_N_LL                                                     | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock                                                                                                                                                    |
| PIPE_LOCAL_FS_LL5<br>PIPE_LOCAL_FS_LL0                                  | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                                                                                                                                                                              |
| PIPE_LOCAL_LF_LL5<br>PIPE_LOCAL_LF_LL0                                  | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                                                                                                                                                                              |
| PIPE_LOCAL_GET_TX_COEF_VALID_LL                                         | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal<br><br>This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted |
| PIPE_LOCAL_GET_TX_PRESET_COEF_LL17<br>PIPE_LOCAL_GET_TX_PRESET_COEF_LL0 | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                            |
| PIPE_TX_DATA_ENABLE_LL                                                  | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0                                                                                                                                                                          |
| PIPE_RX_DATAEN_LL                                                       | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0                                                                                                                                                                                 |
| PIPE_RX_DATA_VALID_LL                                                   | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding                                                                                                                                                                                   |
| PIPE_RX_START_BLOCK_LL                                                  | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size                                                                                                                                                                                      |
| PIPE_RX_SYNC_HEADER_LL1<br>PIPE_RX_SYNC_HEADER_LL0                      | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                                                                                                                                                                                         |
| PIPE_RX_DATA_LL31<br>PIPE_RX_DATA_LL0                                   | Pipe RX data                                                                                                                                                                                                                                                                                                    |



**Table 708: Output Ports (Continued)**

|                               |                                                                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| PIPE_RX_DATAK_LL3             | PIPE Rx Data K indicator for 8b10b                                                                                                         |
| PIPE_RX_DATAK_LL0             |                                                                                                                                            |
| PIPE_RX_VALID_LL              | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                        |
| PIPE_RX_STATUS_LL2            | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error          |
| PIPE_RX_STATUS_LL0            |                                                                                                                                            |
| PIPE_PCLKOUT_LL               | Pipe clock connect to harden PCIe_LL. connect to pipe_pclkout_LL[0] goes to clk_250_i_link0 and pipe_pclkout_LL[3] goes to clk_250_i_link1 |
| PIPE_WIDTH_2G51               | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_WIDTH_2G50               |                                                                                                                                            |
| PIPE_RXEQ_DIR_PCS_RX_DATA3    | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_RXEQ_DIR_PCS_RX_DATA0    |                                                                                                                                            |
| PIPE_RXEQ_DIR_PCS_RX_FIFO_ST5 | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_RXEQ_DIR_PCS_RX_FIFO_ST4 |                                                                                                                                            |
| PIPE_LOCAL_FS_PCS_RX_DATA5    | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_LOCAL_FS_PCS_RX_DATA0    |                                                                                                                                            |
| PIPE_LOCAL_LF_PCS_RX_DATA5    | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_LOCAL_LF_PCS_RX_DATA0    |                                                                                                                                            |
| PIPE_LOCAL_GET_TX_COEF_VLD    | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_TX_DATA_EN               | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_RX_DATAK_PCS_RX_DATA3    | Pipe signal open for user, mpcs and ecps sharing                                                                                           |
| PIPE_RX_DATAK_PCS_RX_DATA0    |                                                                                                                                            |
| PCS_RX_DATA79                 | Dedicated ports used for pcs rx data                                                                                                       |
| PCS_RX_DATA74                 |                                                                                                                                            |
| PCS_RX_HI_BER                 | The high level of this signal indicates High BER is detected                                                                               |
| PCS_RX_BLK_LOCK               | The high level of this signal indicates the block lock is achieved                                                                         |
| PCS_TX_FIFO_ST3               | Tx fifo status (empty, full)                                                                                                               |
| PCS_TX_FIFO_ST2               |                                                                                                                                            |
| ACJPOUT                       | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly                                  |
| ACJNOUT                       | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly                                  |

## PCSX2

Wrapper of PCSX2 and MPCS. PCS hard IP block is quad-base but each channel has independent ports, controls, registers and setting to support channel-base, dual-channel-base and quad-base usage.

Architectures supported:

- ▶ LFCPNX
- ▶ UT24CP

### Table 709: Input Ports

Lattice Radiant Software 2025.2.1 Help

**Table 709: Input Ports (Continued)**

|                   |                                                           |
|-------------------|-----------------------------------------------------------|
| CH0_RXCLK         | User interface rx clock input (From FPGA)                 |
| CH1_CCCLK         | CTC clock from Fabric                                     |
| CH0_CCCLK         | CTC clock from Fabric                                     |
| TX_ALIGN_CLKIN    | Clock for multi quad usage in TX mode                     |
| RX_ALIGN_CLKIN    | Clock for multi quad usage in RX mode                     |
| CH1_PERSTN        | Fundamental reset. Will trigger PCS auto calibration      |
| CH0_PERSTN        | Fundamental reset. Will trigger PCS auto calibration      |
| CH1_MPCS_TX_URSTN | MPCS core logic reset (TX path), but do not reset PMA phy |
| CH0_MPCS_TX_URSTN | MPCS core logic reset (TX path), but do not reset PMA phy |
| CH1_MPCS_RX_URSTN | MPCS core logic reset (RX path), but do not reset PMA phy |
| CH0_MPCS_RX_URSTN | MPCS core logic reset (RX path), but do not reset PMA phy |
| CH1_LMMICLK       | LMMI Clock (from FPGA)                                    |
| CH0_LMMICLK       | LMMI Clock (from FPGA)                                    |
| CH1_LMMIRESETN    | LMMI Reset                                                |
| CH0_LMMIRESETN    | LMMI Reset                                                |
| CH1_LMMIREQUEST   | LMMI start transaction                                    |
| CH0_LMMIREQUEST   | LMMI start transaction                                    |
| CH1_LMMIWR_RDN    | LMMI Write=HIGH, LMMI Read=LOW                            |
| CH0_LMMIWR_RDN    | LMMI Write=HIGH, LMMI Read=LOW                            |
| CH1_LMMIOFFSET8   | LMMI Word Address/Offset                                  |
| CH1_LMMIOFFSET0   |                                                           |
| CH0_LMMIOFFSET8   | LMMI Word Address/Offset                                  |
| CH0_LMMIOFFSET0   |                                                           |
| CH1_LMMIWDATA7    | LMMI write data                                           |
| CH1_LMMIWDATA0    |                                                           |
| CH0_LMMIWDATA7    | LMMI write data                                           |
| CH0_LMMIWDATA0    |                                                           |
| CH1_SDRXP         | Analog RX diffIO                                          |
| CH0_SDRXP         | Analog RX diffIO                                          |
| CH1_SDRXN         | Analog RX diffIO                                          |
| CH0_SDRXN         | Analog RX diffIO                                          |
| CH1_SDREXT        | External resistance                                       |
| CH0_SDREXT        | External resistance                                       |
| CH1_SDREFRET      | PCSX2 Channel 1 SD Reference Clock Return                 |

**Table 709: Input Ports (Continued)**

|                                                      |                                                                              |
|------------------------------------------------------|------------------------------------------------------------------------------|
| CH0_SDREFRET                                         | Channel 0 SD Reference Clock Return"                                         |
| SDQ_REFCLKP                                          | Refclk of IO EOM pll in one quad                                             |
| SDQ_REFCLKN                                          | Refclk of IO EOM pll in one quad                                             |
| CH1_AUXCLK                                           | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| CH0_AUXCLK                                           | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| ALTCLKIN                                             | This is from refclk_mux_tree                                                 |
| ALTCLK_SEL                                           | Selection for alt_clk_in and independent diffIO refclk                       |
| CH1_CLKREQI                                          | Open drain bidirectional CLKREQ# input                                       |
| CH0_CLKREQI                                          | Open drain bidirectional CLKREQ# input                                       |
| TX_LALIGN_IN_UP7<br>TX_LALIGN_IN_UP0                 | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_IN_DOWN7<br>TX_LALIGN_IN_DOWN0             | The connection signals between Quads for lane alignment across Quad boundary |
| CH1_PIPE_POWER_DOWN1<br>CH1_PIPE_POWER_DOWN0         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_POWER_DOWN1<br>CH0_PIPE_POWER_DOWN0         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RATE1<br>CH1_PIPE_RATE0                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RATE1<br>CH0_PIPE_RATE0                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_TXDETECTRX                                  | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_TXDETECTRX                                  | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_EQEVAL                                   | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_EQEVAL                                   | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_INVALID_REQUEST                             | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_INVALID_REQUEST                             | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_PRESET_HINTEN                            | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_PRESET_HINTEN                            | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_PRESET_HINT2<br>CH1_PIPE_RX_PRESET_HINT0 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_PRESET_HINT2<br>CH0_PIPE_RX_PRESET_HINT0 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_POL                                      | Pipe signal open for user, mpcs and ecps sharing                             |

**Table 709: Input Ports (Continued)**

|                                 |                                                  |
|---------------------------------|--------------------------------------------------|
| CH0_PIPE_RX_POL                 | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_CLKREQ              | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_CLKREQ              | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TXCOMM_DIS             | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TXCOMM_DIS             | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RXEI_DIS               | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RXEI_DIS               | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_L1PMSSEN               | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_L1PMSSEN               | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_L1X_ENTRY_REQ          | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_L1X_ENTRY_REQ          | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_SWING               | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_SWING               | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_MARGIN2             | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_MARGIN0             |                                                  |
| CH0_PIPE_TX_MARGIN2             | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_MARGIN0             |                                                  |
| CH1_PIPE_TX_DEEMPH17            | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DEEMPH2             |                                                  |
| CH0_PIPE_TX_DEEMPH17            | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DEEMPH2             |                                                  |
| CH1_PIPE_TX_DEEMPH_PCS_TX_DATA1 | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DEEMPH_PCS_TX_DATA0 |                                                  |
| CH0_PIPE_TX_DEEMPH_PCS_TX_DATA1 | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DEEMPH_PCS_TX_DATA0 |                                                  |
| CH1_PIPE_LOCAL_GET_PRESET_COEF  | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_LOCAL_GET_PRESET_COEF  | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DATA_VLD            | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DATA_VLD            | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_EI                  | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_EI                  | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DATA_PCS_TX_DATA31  | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DATA_PCS_TX_DATA0   |                                                  |

**Table 709: Input Ports (Continued)**

|                                                                        |                                                                                                                               |
|------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_TX_DATA_PCS_TX_DATA31<br>CH0_PIPE_TX_DATA_PCS_TX_DATA0        | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH1_PIPE_TX_DATAK_PCS_TX_DATA3<br>CH1_PIPE_TX_DATAK_PCS_TX_DATA0       | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH0_PIPE_TX_DATAK_PCS_TX_DATA3<br>CH0_PIPE_TX_DATAK_PCS_TX_DATA0       | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH1_PIPE_TX_COMP_PCS_TX_DATA                                           | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH0_PIPE_TX_COMP_PCS_TX_DATA                                           | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH1_PIPE_TX_START_BLK_PCS_TX_DATA                                      | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH0_PIPE_TX_START_BLK_PCS_TX_DATA                                      | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH1_PIPE_TX_SYNC_HDR_PCS_TX_DATA1<br>CH1_PIPE_TX_SYNC_HDR_PCS_TX_DATA0 | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH0_PIPE_TX_SYNC_HDR_PCS_TX_DATA1<br>CH0_PIPE_TX_SYNC_HDR_PCS_TX_DATA0 | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH1_PIPE_BLKALGNCTRL                                                   | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH0_PIPE_BLKALGNCTRL                                                   | Pipe signal open for user, mpcs and ecps sharing                                                                              |
| CH1_LINK0_CSR_PIPE_RESET                                               | Register control to reset lane0-3 in PCIe mode for link0                                                                      |
| CH0_LINK0_CSR_PIPE_RESET                                               | Register control to reset lane0-3 in PCIe mode for link0                                                                      |
| PCIELL_MODESEL2<br>PCIELL_MODESEL0                                     | 0=x4 mode, 1=x2 mode, 2=x1 mode, 3=x2/x1 mode, 4=x1/x1 mode                                                                   |
| CH1_PIPE_POWER_DOWN_LL1<br>CH1_PIPE_POWER_DOWN_LL0                     | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2)                        |
| CH0_PIPE_POWER_DOWN_LL1<br>CH0_PIPE_POWER_DOWN_LL0                     | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2)                        |
| CH1_PIPE_RATE_LL1<br>CH1_PIPE_RATE_LL0                                 | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G. Must be set to speed supported by the core                               |
| CH0_PIPE_RATE_LL1<br>CH0_PIPE_RATE_LL0                                 | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G. Must be set to speed supported by the core                               |
| CH1_PIPE_TX_DETECT_RX_LOOPBACK_LL                                      | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise. |
| CH0_PIPE_TX_DETECT_RX_LOOPBACK_LL                                      | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise. |
| CH1_PIPE_RX_EQ_EVAL_LL                                                 | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                         |

**Table 709: Input Ports (Continued)**

|                                                            |                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_RX_EQ_EVAL_LL                                     | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                                                                                                                                                                                                                                                                                                      |
| CH1_PIPE_INVALID_REQUEST_LL                                | <p>Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply).</p> <p>When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal.</p> |
| CH0_PIPE_INVALID_REQUEST_LL                                | <p>Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply).</p> <p>When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal.</p> |
| CH1_PIPE_RX_PRESET_HINT_ENABLE_LL                          | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use.                                                                                                                                                                                                                                   |
| CH0_PIPE_RX_PRESET_HINT_ENABLE_LL                          | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use.                                                                                                                                                                                                                                   |
| CH1_PIPE_RX_PRESET_HINT_LL2<br>CH1_PIPE_RX_PRESET_HINT_LL0 | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                                   |
| CH0_PIPE_RX_PRESET_HINT_LL2<br>CH0_PIPE_RX_PRESET_HINT_LL0 | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                                   |
| CH1_PIPE_RX_POLARITY_LL                                    | <p>Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller.</p> <p>As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing).</p>                                                                                                                                              |
| CH0_PIPE_RX_POLARITY_LL                                    | <p>Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller.</p> <p>As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing).</p>                                                                                                                                              |
| CH1_PIPE_TX_CLKREQ_N_LL                                    | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                                                                                                                                                                                        |
| CH0_PIPE_TX_CLKREQ_N_LL                                    | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                                                                                                                                                                                        |
| CH1_PIPE_TX_CM_DISABLE_LL                                  | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                                                                                                                                                                             |



**Table 709: Input Ports (Continued)**

|                                                                            |                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_TX_CM_DISABLE_LL                                                  | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                                      |
| CH1_PIPE_RX_EI_DISABLE_LL                                                  | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                                                  |
| CH0_PIPE_RX_EI_DISABLE_LL                                                  | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                                                  |
| CH1_PIPE_L1PMSEN_LL                                                        | L1 substates enable                                                                                                                                                                                                                                                 |
| CH0_PIPE_L1PMSEN_LL                                                        | L1 substates enable                                                                                                                                                                                                                                                 |
| CH1_PIPE_TX_SWING_LL                                                       | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing.                                                                                                                                                                                                     |
| CH0_PIPE_TX_SWING_LL                                                       | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing.                                                                                                                                                                                                     |
| CH1_PIPE_TX_MARGIN_LL2<br>CH1_PIPE_TX_MARGIN_LL0                           | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                                                     |
| CH0_PIPE_TX_MARGIN_LL2<br>CH0_PIPE_TX_MARGIN_LL0                           | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                                                     |
| CH1_PIPE_TX_DEEMPH_LL17<br>CH1_PIPE_TX_DEEMPH_LL0                          | Per lane Transmitter De-Emphasis. 2.5G:(1==-3.5dB). 5G:(1==-3.5dB,0==-6dB). 8G:([17:12]==Post-Cursor,[11:6]==Cursor,[5:0]==Pre-Cursor)                                                                                                                              |
| CH0_PIPE_TX_DEEMPH_LL17<br>CH0_PIPE_TX_DEEMPH_LL0                          | Per lane Transmitter De-Emphasis. 2.5G:(1==-3.5dB). 5G:(1==-3.5dB,0==-6dB). 8G:([17:12]==Post-Cursor,[11:6]==Cursor,[5:0]==Pre-Cursor)                                                                                                                              |
| CH1_PIPE_TX_DEEMPH_WINDOW_LL                                               | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis                                 |
| CH0_PIPE_TX_DEEMPH_WINDOW_LL                                               | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis                                 |
| CH1_PIPE_LOCAL_GET_PRESET_COEF_LL                                          | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                                     |
| CH0_PIPE_LOCAL_GET_PRESET_COEF_LL                                          | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                                     |
| CH1_PIPE_LOCAL_GET_PRESET_INDEX_LL3<br>CH1_PIPE_LOCAL_GET_PRESET_INDEX_LL0 | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC ask to get the coefficient mapping.<br><br>This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |

**Table 709: Input Ports (Continued)**

|                                                                            |                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_LOCAL_GET_PRESET_INDEX_LL3<br>CH0_PIPE_LOCAL_GET_PRESET_INDEX_LL0 | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC ask to get the coefficient mapping.<br><br>This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH1_PIPE_REMOTE_FS_LL5<br>CH1_PIPE_REMOTE_FS_LL0                           | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                        |
| CH0_PIPE_REMOTE_FS_LL5<br>CH0_PIPE_REMOTE_FS_LL0                           | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                        |
| CH1_PIPE_REMOTE_LF_LL5<br>CH1_PIPE_REMOTE_LF_LL0                           | Link partner: LF value the link partner advertised at the beginning of Equalization training                                                                                                                                                                        |
| CH0_PIPE_REMOTE_LF_LL5<br>CH0_PIPE_REMOTE_LF_LL0                           | Link partner: LF value the link partner advertised at the beginning of Equalization training                                                                                                                                                                        |
| CH1_PIPE_REMOTE_EQ_RX_DEEMPH_LL17<br>CH1_PIPE_REMOTE_EQ_RX_DEEMPH_LL0      | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                                                                                                                                                                    |
| CH0_PIPE_REMOTE_EQ_RX_DEEMPH_LL17<br>CH0_PIPE_REMOTE_EQ_RX_DEEMPH_LL0      | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                                                                                                                                                                    |
| CH1_PIPE_REMOTE_EQ_RX_PRESET_LL3<br>CH1_PIPE_REMOTE_EQ_RX_PRESET_LL0       | Link partner: 8G preset value we requested the link partner use during Equalization training                                                                                                                                                                        |
| CH0_PIPE_REMOTE_EQ_RX_PRESET_LL3<br>CH0_PIPE_REMOTE_EQ_RX_PRESET_LL0       | Link partner: 8G preset value we requested the link partner use during Equalization training                                                                                                                                                                        |
| CH1_PIPE_TX_DATA_VALID_LL                                                  | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding                                                                                                                                       |
| CH0_PIPE_TX_DATA_VALID_LL                                                  | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding                                                                                                                                       |
| CH1_PIPE_TX_START_BLOCK_LL                                                 | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                                                                                                                                                            |
| CH0_PIPE_TX_START_BLOCK_LL                                                 | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                                                                                                                                                            |
| CH1_PIPE_TX_SYNC_HEADER_LL1<br>CH1_PIPE_TX_SYNC_HEADER_LL0                 | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                                                                                                                                             |
| CH0_PIPE_TX_SYNC_HEADER_LL1<br>CH0_PIPE_TX_SYNC_HEADER_LL0                 | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                                                                                                                                             |
| CH1_PIPE_TX_DATA_LL31<br>CH1_PIPE_TX_DATA_LL0                              | PIPE Tx Data                                                                                                                                                                                                                                                        |
| CH0_PIPE_TX_DATA_LL31<br>CH0_PIPE_TX_DATA_LL0                              | PIPE Tx Data                                                                                                                                                                                                                                                        |

**Table 709: Input Ports (Continued)**

|                                   |                                                                                                                                   |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_TX_DATAK_LL3             | PIPE Tx Data K indicator for 8b10b                                                                                                |
| CH1_PIPE_TX_DATAK_LL0             |                                                                                                                                   |
| CH0_PIPE_TX_DATAK_LL3             | PIPE Tx Data K indicator for 8b10b                                                                                                |
| CH0_PIPE_TX_DATAK_LL0             |                                                                                                                                   |
| CH1_PIPE_TX_COMPLIANCE_LL         | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise |
| CH0_PIPE_TX_COMPLIANCE_LL         | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise |
| CH1_PIPE_TX_ELEC_IDLE_LL          | PIPE Tx Electrical Idle. 1==Idle, 0==Active                                                                                       |
| CH0_PIPE_TX_ELEC_IDLE_LL          |                                                                                                                                   |
| CH1_PIPE_BLOCK_ALIGN_CONTROL_LL   | PIPE Block Align Control. Set to 0 when within a datastream (except for Slave Loopback); otherwise set to 1                       |
| CH0_PIPE_BLOCK_ALIGN_CONTROL_LL   |                                                                                                                                   |
| CH1_PIPE_PRESET_INDX_PCS_TX_DATA3 | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH1_PIPE_PRESET_INDX_PCS_TX_DATA0 |                                                                                                                                   |
| CH0_PIPE_PRESET_INDX_PCS_TX_DATA3 | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH0_PIPE_PRESET_INDX_PCS_TX_DATA0 |                                                                                                                                   |
| CH1_PIPE_REMOTE_FS_PCS_TX_DATA5   | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH1_PIPE_REMOTE_FS_PCS_TX_DATA0   |                                                                                                                                   |
| CH0_PIPE_REMOTE_FS_PCS_TX_DATA5   | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH0_PIPE_REMOTE_FS_PCS_TX_DATA0   |                                                                                                                                   |
| CH1_PIPE_REMOTE_LF_PCS_TX_DATA5   | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH1_PIPE_REMOTE_LF_PCS_TX_DATA0   |                                                                                                                                   |
| CH0_PIPE_REMOTE_LF_PCS_TX_DATA5   | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH0_PIPE_REMOTE_LF_PCS_TX_DATA0   |                                                                                                                                   |
| CH1_PIPE_RX_DEEMPH_PCS_TX_DATA17  | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH1_PIPE_RX_DEEMPH_PCS_TX_DATA0   |                                                                                                                                   |
| CH0_PIPE_RX_DEEMPH_PCS_TX_DATA17  | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH0_PIPE_RX_DEEMPH_PCS_TX_DATA0   |                                                                                                                                   |
| CH1_PIPE_RX_PRESET_PCS_TX_DATA3   | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH1_PIPE_RX_PRESET_PCS_TX_DATA0   |                                                                                                                                   |
| CH0_PIPE_RX_PRESET_PCS_TX_DATA3   | Pipe signal open for user, mpcs and ecps sharing                                                                                  |
| CH0_PIPE_RX_PRESET_PCS_TX_DATA0   |                                                                                                                                   |
| ACTMD                             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly                         |

**Table 709: Input Ports (Continued)**

|              |                                                                                                           |
|--------------|-----------------------------------------------------------------------------------------------------------|
| CH1_ACTEN    | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTEN    | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACTACMD  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTACMD  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACTDR11  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTDR11  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACTHIGHZ | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTHIGHZ | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| SCAN_CLK     | Scan clock for PCS                                                                                        |
| SCAN_RST     | Scan reset for PCS                                                                                        |

**Table 710: Output Ports**

| Name                  | Description                           |
|-----------------------|---------------------------------------|
| CH1_PIPE_PCS_TXCLKOUT | Pipe and PCS tx clock to Fabric       |
| CH0_PIPE_PCS_TXCLKOUT | Pipe and PCS tx clock to Fabric       |
| CH1_RXOUTCLK          | PCS RX clock to Fabric                |
| CH0_RXOUTCLK          | PCS RX clock to Fabric                |
| TX_ALIGN_CLKOUT       | Clock for multi quad usage in TX mode |
| RX_ALIGN_CLKOUT       | Clock for multi quad usage in RX mode |
| CH1_LMMIRDATA_VALID   | LMMI read data valid                  |
| CH0_LMMIRDATA_VALID   | LMMI read data valid                  |
| CH1_LMMIREADY         | LMMI Bus ready                        |
| CH0_LMMIREADY         | LMMI Bus ready                        |
| CH1_LMMIRDATA7        | LMMI read data                        |
| CH1_LMMIRDATA0        |                                       |
| CH0_LMMIRDATA7        | LMMI read data                        |
| CH0_LMMIRDATA0        |                                       |
| CH1_SDTXP             | Analog TX diffIO                      |

**Table 710: Output Ports (Continued)**

|                                            |                                                                              |
|--------------------------------------------|------------------------------------------------------------------------------|
| CH0_SDTXP                                  | Analog TX diffIO                                                             |
| CH1_SDTXN                                  | Analog TX diffIO                                                             |
| CH0_SDTXN                                  | Analog TX diffIO                                                             |
| CH1_PCLKAUX_SEL_LL                         | Pipe clock selection for user                                                |
| CH0_PCLKAUX_SEL_LL                         | Pipe clock selection for user                                                |
| CH1_CLKREQO                                | Open drain bidirectional CLKREQ# output                                      |
| CH0_CLKREQO                                | Open drain bidirectional CLKREQ# output                                      |
| CH1_CLKREQOE                               | Open drain bidirectional CLKREQ# output enable                               |
| CH0_CLKREQOE                               | Open drain bidirectional CLKREQ# output enable                               |
| TX_LALIGN_OUT_UP7<br>TX_LALIGN_OUT_UP0     | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_OUT_DOWN7<br>TX_LALIGN_OUT_DOWN0 | The connection signals between Quads for lane alignment across Quad boundary |
| CH1_PIPE_WIDTH_5G01<br>CH1_PIPE_WIDTH_5G00 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_WIDTH_5G01<br>CH0_PIPE_WIDTH_5G00 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_WIDTH_8G01<br>CH1_PIPE_WIDTH_8G00 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_WIDTH_8G01<br>CH0_PIPE_WIDTH_8G00 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RXEQ_FOM7<br>CH1_PIPE_RXEQ_FOM0   | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RXEQ_FOM7<br>CH0_PIPE_RXEQ_FOM0   | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_PHY_STATUS                        | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_PHY_STATUS                        | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_EI                             | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_EI                             | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_CLKREQ                         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_CLKREQ                         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_L1X_ENTRY_ACK                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_L1X_ENTRY_ACK                     | Pipe signal open for user, mpcs and ecps sharing                             |

**Table 710: Output Ports (Continued)**

|                                                                               |                                                                                                                                                             |
|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_LOCAL_GET_TX_PRESET_COEF3<br>CH1_PIPE_LOCAL_GET_TX_PRESET_COEF0      | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_LOCAL_GET_TX_PRESET_COEF3<br>CH0_PIPE_LOCAL_GET_TX_PRESET_COEF0      | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_TX_PRESET_COEF_PCS_RX_DATA17<br>CH1_PIPE_TX_PRESET_COEF_PCS_RX_DATA4 | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_TX_PRESET_COEF_PCS_RX_DATA17<br>CH0_PIPE_TX_PRESET_COEF_PCS_RX_DATA4 | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_START_BLOCK                                                       | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_START_BLOCK                                                       | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_DATA_PCS_RX_DATA31<br>CH1_PIPE_RX_DATA_PCS_RX_DATA0               | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_DATA_PCS_RX_DATA31<br>CH0_PIPE_RX_DATA_PCS_RX_DATA0               | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_STATUS_PCS_RX_DATA2<br>CH1_PIPE_RX_STATUS_PCS_RX_DATA0            | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_STATUS_PCS_RX_DATA2<br>CH0_PIPE_RX_STATUS_PCS_RX_DATA0            | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_DATA_EN_PCS_RX_DATA                                               | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_DATA_EN_PCS_RX_DATA                                               | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_VLD_PCS_RX_DATA                                                   | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_VLD_PCS_RX_DATA                                                   | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_DATA_VLD_PCS_RX_DATA                                              | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_DATA_VLD_PCS_RX_DATA                                              | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_RX_SYNC_HDR_PCS_RX_DATA1<br>CH1_PIPE_RX_SYNC_HDR_PCS_RX_DATA0        | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_SYNC_HDR_PCS_RX_DATA1<br>CH0_PIPE_RX_SYNC_HDR_PCS_RX_DATA0        | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH1_PIPE_WIDTH_2G5_LL1<br>CH1_PIPE_WIDTH_2G5_LL0                              | Width of pipe_tx/rx_data at 2.5G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH0_PIPE_WIDTH_2G5_LL1<br>CH0_PIPE_WIDTH_2G5_LL0                              | Width of pipe_tx/rx_data at 2.5G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |

**Table 710: Output Ports (Continued)**

|                                                                              |                                                                                                                                                              |
|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_WIDTH_5G0_LL1<br>CH1_PIPE_WIDTH_5G0_LL0                             | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH  |
| CH0_PIPE_WIDTH_5G0_LL1<br>CH0_PIPE_WIDTH_5G0_LL0                             | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH  |
| CH1_PIPE_WIDTH_8G0_LL1<br>CH1_PIPE_WIDTH_8G0_LL0                             | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH  |
| CH0_PIPE_WIDTH_8G0_LL1<br>CH0_PIPE_WIDTH_8G0_LL0                             | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH  |
| CH1_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL7<br>CH1_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL0 | PHY provides the relative received signal quality on pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1.                                      |
| CH0_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL7<br>CH0_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL0 | PHY provides the relative received signal quality on pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1.                                      |
| CH1_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL5<br>CH1_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL0 | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                        |
| CH0_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL5<br>CH0_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL0 | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                        |
| CH1_PIPE_PHY_STATUS_LL                                                       | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                            |
| CH0_PIPE_PHY_STATUS_LL                                                       | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                            |
| CH1_PIPE_RX_ELEC_IDLE_LL                                                     | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                  |
| CH0_PIPE_RX_ELEC_IDLE_LL                                                     | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                  |
| CH1_PIPE_RX_CLKREQ_N_LL                                                      | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock |
| CH0_PIPE_RX_CLKREQ_N_LL                                                      | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock |

**Table 710: Output Ports (Continued)**

|                                                                                 |                                                                                                                                                                                                                                                                                                                   |
|---------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_LOCAL_FS_LL5<br>CH1_PIPE_LOCAL_FS_LL0                                  | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                                                                                                                                                                                |
| CH0_PIPE_LOCAL_FS_LL5<br>CH0_PIPE_LOCAL_FS_LL0                                  | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                                                                                                                                                                                |
| CH1_PIPE_LOCAL_LF_LL5<br>CH1_PIPE_LOCAL_LF_LL0                                  | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                                                                                                                                                                                |
| CH0_PIPE_LOCAL_LF_LL5<br>CH0_PIPE_LOCAL_LF_LL0                                  | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                                                                                                                                                                                |
| CH1_PIPE_LOCAL_GET_TX_COEF_VALID_LL                                             | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal.<br><br>This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH0_PIPE_LOCAL_GET_TX_COEF_VALID_LL                                             | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal.<br><br>This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH1_PIPE_LOCAL_GET_TX_PRESET_COEF_LL17<br>CH1_PIPE_LOCAL_GET_TX_PRESET_COEF_LL0 | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                              |
| CH0_PIPE_LOCAL_GET_TX_PRESET_COEF_LL17<br>CH0_PIPE_LOCAL_GET_TX_PRESET_COEF_LL0 | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                              |
| CH1_PIPE_TX_DATA_ENABLE_LL                                                      | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0                                                                                                                                                                            |
| CH0_PIPE_TX_DATA_ENABLE_LL                                                      | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0                                                                                                                                                                            |
| CH1_PIPE_RX_DATAEN_LL                                                           | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0                                                                                                                                                                                   |
| CH0_PIPE_RX_DATAEN_LL                                                           | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0                                                                                                                                                                                   |
| CH1_PIPE_RX_DATA_VALID_LL                                                       | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding                                                                                                                                                                                     |
| CH0_PIPE_RX_DATA_VALID_LL                                                       | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding                                                                                                                                                                                     |



**Table 710: Output Ports (Continued)**

|                                                                  |                                                                                                                                             |
|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_RX_START_BLOCK_LL                                       | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size                  |
| CH0_PIPE_RX_START_BLOCK_LL                                       | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size                  |
| CH1_PIPE_RX_SYNC_HEADER_LL1<br>CH1_PIPE_RX_SYNC_HEADER_LL0       | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                     |
| CH0_PIPE_RX_SYNC_HEADER_LL1<br>CH0_PIPE_RX_SYNC_HEADER_LL0       | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                     |
| CH1_PIPE_RX_DATA_LL31<br>CH1_PIPE_RX_DATA_LL0                    | Pipe RX data                                                                                                                                |
| CH0_PIPE_RX_DATA_LL31<br>CH0_PIPE_RX_DATA_LL0                    | Pipe RX data                                                                                                                                |
| CH1_PIPE_RX_DATAK_LL3<br>CH1_PIPE_RX_DATAK_LL0                   | PIPE Rx Data K indicator for 8b10b                                                                                                          |
| CH0_PIPE_RX_DATAK_LL3<br>CH0_PIPE_RX_DATAK_LL0                   | PIPE Rx Data K indicator for 8b10b                                                                                                          |
| CH1_PIPE_RX_VALID_LL                                             | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                         |
| CH0_PIPE_RX_VALID_LL                                             | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                         |
| CH1_PIPE_RX_STATUS_LL2<br>CH1_PIPE_RX_STATUS_LL0                 | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error           |
| CH0_PIPE_RX_STATUS_LL2<br>CH0_PIPE_RX_STATUS_LL0                 | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error           |
| PIPE_PCLKOUT_LL1<br>PIPE_PCLKOUT_LL0                             | Pipe clock connect to harden PCIe_LL. connect to pipe_pclkout_LL[0] goes to clk_250_i_link0, and pipe_pclkout_LL[3] goes to clk_250_i_link1 |
| CH1_PIPE_WIDTH_2G51<br>CH1_PIPE_WIDTH_2G50                       | Pipe signal open for user, mpcs and ecps sharing                                                                                            |
| CH0_PIPE_WIDTH_2G51<br>CH0_PIPE_WIDTH_2G50                       | Pipe signal open for user, mpcs and ecps sharing                                                                                            |
| CH1_PIPE_RXEQ_DIR_PCS_RX_DATA3<br>CH1_PIPE_RXEQ_DIR_PCS_RX_DATA0 | Pipe signal open for user, mpcs and ecps sharing                                                                                            |
| CH0_PIPE_RXEQ_DIR_PCS_RX_DATA3<br>CH0_PIPE_RXEQ_DIR_PCS_RX_DATA0 | Pipe signal open for user, mpcs and ecps sharing                                                                                            |

**Table 710: Output Ports (Continued)**

|                                   |                                                                                                           |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------|
| CH1_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST5 | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST4 |                                                                                                           |
| CH0_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST5 | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST4 |                                                                                                           |
| CH1_PIPE_LOCAL_FS_PCS_RX_DATA5    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_LOCAL_FS_PCS_RX_DATA0    |                                                                                                           |
| CH0_PIPE_LOCAL_FS_PCS_RX_DATA5    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_LOCAL_FS_PCS_RX_DATA0    |                                                                                                           |
| CH1_PIPE_LOCAL_LF_PCS_RX_DATA5    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_LOCAL_LF_PCS_RX_DATA0    |                                                                                                           |
| CH0_PIPE_LOCAL_LF_PCS_RX_DATA5    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_LOCAL_LF_PCS_RX_DATA0    |                                                                                                           |
| CH1_PIPE_LOCAL_GET_TX_COEF_VLD    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_LOCAL_GET_TX_COEF_VLD    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_TX_DATA_EN               | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_TX_DATA_EN               | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_RX_DATAK_PCS_RX_DATA3    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_RX_DATAK_PCS_RX_DATA0    |                                                                                                           |
| CH0_PIPE_RX_DATAK_PCS_RX_DATA3    | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_RX_DATAK_PCS_RX_DATA0    |                                                                                                           |
| CH1_PCS_RX_DATA79                 | Dedicated ports used for pcs rx data                                                                      |
| CH1_PCS_RX_DATA74                 |                                                                                                           |
| CH0_PCS_RX_DATA79                 | Dedicated ports used for pcs rx data                                                                      |
| CH0_PCS_RX_DATA74                 |                                                                                                           |
| CH1_PCS_RX_HI_BER                 | The high level of this signal indicates High BER is detected                                              |
| CH0_PCS_RX_HI_BER                 | The high level of this signal indicates High BER is detected                                              |
| CH1_PCS_RX_BLK_LOCK               | The high level of this signal indicates the block lock is achieved                                        |
| CH0_PCS_RX_BLK_LOCK               | The high level of this signal indicates the block lock is achieved                                        |
| CH1_PCS_TX_FIFO_ST3               | Tx fifo status (empty, full)                                                                              |
| CH1_PCS_TX_FIFO_ST2               |                                                                                                           |
| CH0_PCS_TX_FIFO_ST3               | Tx fifo status (empty, full)                                                                              |
| CH0_PCS_TX_FIFO_ST2               |                                                                                                           |
| CH1_ACJPOUT                       | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |

**Table 710: Output Ports (Continued)**

|             |                                                                                                           |
|-------------|-----------------------------------------------------------------------------------------------------------|
| CH0_ACJPOUT | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACJNOUT | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACJNOUT | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |

## PCSX4

Wrapper of PCSX4 and MPCS. PCS hard IP block is quad-base but each channel has independent ports, controls, registers and setting to support channel-base, dual-channel-base and quad-base usage.

PCSX1 uses one channel of PCSX4. PCSX2 uses two channels of PCSX4.

### Note:

You should not try to use this primitive directly. Instead, use the related IP in IP Catalog. The following information is for reference only.

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ UT24CP

**Table 711: Input Ports**

| Name         | Description                                                      |
|--------------|------------------------------------------------------------------|
| CH3_PMACLKIN | This low speed clock will also drive PMA 'epcs_clkin' clock port |
| CH2_PMACLKIN | This low speed clock will also drive PMA 'epcs_clkin' clock port |
| CH1_PMACLKIN | This low speed clock will also drive PMA 'epcs_clkin' clock port |
| CH0_PMACLKIN | This low speed clock will also drive PMA 'epcs_clkin' clock port |
| CH3_TXCLK    | User interface tx clock input (From FPGA)                        |
| CH2_TXCLK    | User interface tx clock input (From FPGA)                        |

**Table 711: Input Ports (Continued)**

| <b>Name</b>       | <b>Description</b>                                        |
|-------------------|-----------------------------------------------------------|
| CH1_TXCLK         | User interface tx clock input (From FPGA)                 |
| CH0_TXCLK         | User interface tx clock input (From FPGA)                 |
| CH3_RXCLK         | User interface rx clock input (From FPGA)                 |
| CH2_RXCLK         | User interface rx clock input (From FPGA)                 |
| CH1_RXCLK         | User interface rx clock input (From FPGA)                 |
| CH0_RXCLK         | User interface rx clock input (From FPGA)                 |
| CH3_CCCLK         | CTC clock from Fabric                                     |
| CH2_CCCLK         | CTC clock from Fabric                                     |
| CH1_CCCLK         | CTC clock from Fabric                                     |
| CH0_CCCLK         | CTC clock from Fabric                                     |
| TX_ALIGN_CLKIN    | Clock for multi quad usage in TX mode                     |
| RX_ALIGN_CLKIN    | Clock for multi quad usage in RX mode                     |
| CH3_PERSTN        | Fundamental reset. Will trigger PCS auto calibration      |
| CH2_PERSTN        | Fundamental reset. Will trigger PCS auto calibration      |
| CH1_PERSTN        | Fundamental reset. Will trigger PCS auto calibration      |
| CH0_PERSTN        | Fundamental reset. Will trigger PCS auto calibration      |
| CH3_MPCS_TX_URSTN | MPCS core logic reset (TX path), but do not reset PMA phy |
| CH2_MPCS_TX_URSTN | MPCS core logic reset (TX path), but do not reset PMA phy |
| CH1_MPCS_TX_URSTN | MPCS core logic reset (TX path), but do not reset PMA phy |
| CH0_MPCS_TX_URSTN | MPCS core logic reset (TX path), but do not reset PMA phy |
| CH3_MPCS_RX_URSTN | MPCS core logic reset (RX path), but do not reset PMA phy |
| CH2_MPCS_RX_URSTN | MPCS core logic reset (RX path), but do not reset PMA phy |
| CH1_MPCS_RX_URSTN | MPCS core logic reset (RX path), but do not reset PMA phy |
| CH0_MPCS_RX_URSTN | MPCS core logic reset (RX path), but do not reset PMA phy |
| CH3_LMMICLK       | LMMI Clock (from FPGA)                                    |
| CH2_LMMICLK       | LMMI Clock (from FPGA)                                    |
| CH1_LMMICLK       | LMMI Clock (from FPGA)                                    |
| CH0_LMMICLK       | LMMI Clock (from FPGA)                                    |
| CH3_LMMIRESETN    | LMMI Reset                                                |
| CH2_LMMIRESETN    | LMMI Reset                                                |
| CH1_LMMIRESETN    | LMMI Reset                                                |
| CH0_LMMIRESETN    | LMMI Reset                                                |

**Table 711: Input Ports (Continued)**

| <b>Name</b>         | <b>Description</b>                  |
|---------------------|-------------------------------------|
| CH3_LMMIREQUEST     | LMMI start transaction              |
| CH2_LMMIREQUEST     | LMMI start transaction              |
| CH1_LMMIREQUEST     | LMMI start transaction              |
| CH0_LMMIREQUEST     | LMMI start transaction              |
| CH3_LMMIWR_RDN      | LMMI Write=HIGH, LMMI Read=LOW      |
| CH2_LMMIWR_RDN      | LMMI Write=HIGH, LMMI Read=LOW      |
| CH1_LMMIWR_RDN      | LMMI Write=HIGH, LMMI Read=LOW      |
| CH0_LMMIWR_RDN      | LMMI Write=HIGH, LMMI Read=LOW      |
| CH3_LMMIOFFSET[8:0] | LMMI Word Address/Offset            |
| CH2_LMMIOFFSET[8:0] | LMMI Word Address/Offset            |
| CH1_LMMIOFFSET[8:0] | LMMI Word Address/Offset            |
| CH0_LMMIOFFSET[8:0] | LMMI Word Address/Offset            |
| CH3_LMMIWDATA[7:0]  | LMMI write data                     |
| CH2_LMMIWDATA[7:0]  | LMMI write data                     |
| CH1_LMMIWDATA[7:0]  | LMMI write data                     |
| CH0_LMMIWDATA[7:0]  | LMMI write data                     |
| CH3_SDRXP           | Analog RX diffIO                    |
| CH2_SDRXP           | Analog RX diffIO                    |
| CH1_SDRXP           | Analog RX diffIO                    |
| CH0_SDRXP           | Analog RX diffIO                    |
| CH3_SDRXN           | Analog RX diffIO                    |
| CH2_SDRXN           | Analog RX diffIO                    |
| CH1_SDRXN           | Analog RX diffIO                    |
| CH0_SDRXN           | Analog RX diffIO                    |
| CH3_SDREXT          | External resistance                 |
| CH2_SDREXT          | External resistance                 |
| CH1_SDREXT          | External resistance                 |
| CH0_SDREXT          | External resistance                 |
| CH3_SDREFRET        | Channel 3 SD Reference Clock Return |
| CH2_SDREFRET        | Channel 2 SD Reference Clock Return |
| CH1_SDREFRET        | Channel 1 SD Reference Clock Return |
| CH0_SDREFRET        | Channel 0 SD Reference Clock Return |

**Table 711: Input Ports (Continued)**

| Name                     | Description                                                                  |
|--------------------------|------------------------------------------------------------------------------|
| SDQ_REFCLKP              | Refclk of IO EOM pll in one quad                                             |
| SDQ_REFCLKN              | Refclk of IO EOM pll in one quad                                             |
| CH3_AUXCLK               | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| CH2_AUXCLK               | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| CH1_AUXCLK               | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| CH0_AUXCLK               | Auxiliary clock from Fabric for PCIe-PCS core clock                          |
| ALTCLKIN                 | This is from refclk_mux_tree                                                 |
| ALTCLK_SEL               | Selection for alt_clk_in and independent diffIO refclk                       |
| CH3_CLKREQI              | Open drain bidirectional CLKREQ# input                                       |
| CH2_CLKREQI              | Open drain bidirectional CLKREQ# input                                       |
| CH1_CLKREQI              | Open drain bidirectional CLKREQ# input                                       |
| CH0_CLKREQI              | Open drain bidirectional CLKREQ# input                                       |
| TX_LALIGN_IN_UP[7:0]     | The connection signals between Quads for lane alignment across Quad boundary |
| TX_LALIGN_IN_DOWN[7:0]   | The connection signals between Quads for lane alignment across Quad boundary |
| CH3_PIPE_POWER_DOWN[1:0] | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_POWER_DOWN[1:0] | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_POWER_DOWN[1:0] | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_POWER_DOWN[1:0] | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_RATE[1:0]       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_RATE[1:0]       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RATE[1:0]       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RATE[1:0]       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_TXDETECTRX      | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_TXDETECTRX      | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_TXDETECTRX      | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_TXDETECTRX      | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_RX_EQEVAL       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_RX_EQEVAL       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_EQEVAL       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_EQEVAL       | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_INVALID_REQUEST | Pipe signal open for user, mpcs and ecps sharing                             |

**Table 711: Input Ports (Continued)**

| <b>Name</b>                  | <b>Description</b>                               |
|------------------------------|--------------------------------------------------|
| CH2_PIPE_INVALID_REQUEST     | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_INVALID_REQUEST     | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_INVALID_REQUEST     | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_PRESET_HINTEN    | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_PRESET_HINTEN    | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_PRESET_HINTEN    | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_PRESET_HINTEN    | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_PRESET_HINT[2:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_PRESET_HINT[2:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_PRESET_HINT[2:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_PRESET_HINT[2:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_POL              | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_POL              | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_POL              | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_POL              | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_CLKREQ           | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_CLKREQ           | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_CLKREQ           | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_CLKREQ           | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TXCOMM_DIS          | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TXCOMM_DIS          | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TXCOMM_DIS          | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TXCOMM_DIS          | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RXEI_DIS            | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RXEI_DIS            | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RXEI_DIS            | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RXEI_DIS            | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_L1PMSSSEN           | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_L1PMSSSEN           | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_L1PMSSSEN           | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_L1PMSSSEN           | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_L1X_ENTRY_REQ       | Pipe signal open for user, mpcs and ecps sharing |



**Table 711: Input Ports (Continued)**

| Name                                | Description                                      |
|-------------------------------------|--------------------------------------------------|
| CH2_PIPE_L1X_ENTRY_REQ              | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_L1X_ENTRY_REQ              | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_L1X_ENTRY_REQ              | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_SWING                   | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_SWING                   | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_SWING                   | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_SWING                   | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_MARGIN[2:0]             | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_MARGIN[2:0]             | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_MARGIN[2:0]             | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_MARGIN[2:0]             | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_DEEMPH[15:0]            | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_DEEMPH[15:0]            | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DEEMPH[15:0]            | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DEEMPH[15:0]            | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_DEEMPH_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_DEEMPH_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DEEMPH_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DEEMPH_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_LOCAL_GET_PRESET_COEF      | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_LOCAL_GET_PRESET_COEF      | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_LOCAL_GET_PRESET_COEF      | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_LOCAL_GET_PRESET_COEF      | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_DATA_VLD                | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_DATA_VLD                | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DATA_VLD                | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DATA_VLD                | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_EI                      | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_EI                      | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_EI                      | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_EI                      | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_DATA_PCS_TX_DATA[31:0]  | Pipe signal open for user, mpcs and ecps sharing |

**Table 711: Input Ports (Continued)**

| Name                                  | Description                                                                                            |
|---------------------------------------|--------------------------------------------------------------------------------------------------------|
| CH2_PIPE_TX_DATA_PCS_TX_DATA[31:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH1_PIPE_TX_DATA_PCS_TX_DATA[31:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH0_PIPE_TX_DATA_PCS_TX_DATA[31:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH3_PIPE_TX_DATAK_PCS_TX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH2_PIPE_TX_DATAK_PCS_TX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH1_PIPE_TX_DATAK_PCS_TX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH0_PIPE_TX_DATAK_PCS_TX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH3_PIPE_TX_COMP_PCS_TX_DATA          | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH2_PIPE_TX_COMP_PCS_TX_DATA          | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH1_PIPE_TX_COMP_PCS_TX_DATA          | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH0_PIPE_TX_COMP_PCS_TX_DATA          | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH3_PIPE_TX_START_BLK_PCS_TX_DATA     | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH2_PIPE_TX_START_BLK_PCS_TX_DATA     | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH1_PIPE_TX_START_BLK_PCS_TX_DATA     | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH0_PIPE_TX_START_BLK_PCS_TX_DATA     | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH3_PIPE_TX_SYNC_HDR_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH2_PIPE_TX_SYNC_HDR_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH1_PIPE_TX_SYNC_HDR_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH0_PIPE_TX_SYNC_HDR_PCS_TX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH3_PIPE_BLKALGNCTRL                  | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH2_PIPE_BLKALGNCTRL                  | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH1_PIPE_BLKALGNCTRL                  | Pipe signal open for user, mpcs and ecps sharing                                                       |
| CH0_PIPE_BLKALGNCTRL                  | Pipe signal open for user, mpcs and ecps sharing                                                       |
| LINK1_CSR_PIPE_RESET                  | Register control to reset lane3 in PCIe mode for link1                                                 |
| CH3_LINK0_CSR_PIPE_RESET              | Register control to reset lane0-3 in PCIe mode for link0                                               |
| CH2_LINK0_CSR_PIPE_RESET              | Register control to reset lane0-3 in PCIe mode for link0                                               |
| CH1_LINK0_CSR_PIPE_RESET              | Register control to reset lane0-3 in PCIe mode for link0                                               |
| CH0_LINK0_CSR_PIPE_RESET              | Register control to reset lane0-3 in PCIe mode for link0                                               |
| PCIELL_MODESEL[2:0]                   | 0=x4 mode, 1=x2 mode, 2=x1 mode, 3=x2/x1 mode, 4=x1/x1 mode                                            |
| CH3_PIPE_POWER_DOWN_LL[1:0]           | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2) |

**Table 711: Input Ports (Continued)**

| Name                              | Description                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH2_PIPE_POWER_DOWN_LL[1:0]       | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2)                                                                                                                                                                                                                                                                                      |
| CH1_PIPE_POWER_DOWN_LL[1:0]       | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2)                                                                                                                                                                                                                                                                                      |
| CH0_PIPE_POWER_DOWN_LL[1:0]       | PHY Power Down control. 00==P0 (normal operation), 01==P0s (Tx L0s), 10==P1 (L1 or Reset), 11==P2 (L2)                                                                                                                                                                                                                                                                                      |
| CH3_PIPE_RATE_LL[1:0]             | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G. Must be set to speed supported by the core                                                                                                                                                                                                                                                                                             |
| CH2_PIPE_RATE_LL[1:0]             | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G. Must be set to speed supported by the core                                                                                                                                                                                                                                                                                             |
| CH1_PIPE_RATE_LL[1:0]             | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G. Must be set to speed supported by the core                                                                                                                                                                                                                                                                                             |
| CH0_PIPE_RATE_LL[1:0]             | PHY Rate Control. 11==16G, 10==8G, 01==5G, 00==2.5G. Must be set to speed supported by the core                                                                                                                                                                                                                                                                                             |
| CH3_PIPE_TX_DETECT_RX_LOOPBACK_LL | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise.                                                                                                                                                                                                                                                               |
| CH2_PIPE_TX_DETECT_RX_LOOPBACK_LL | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise.                                                                                                                                                                                                                                                               |
| CH1_PIPE_TX_DETECT_RX_LOOPBACK_LL | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise.                                                                                                                                                                                                                                                               |
| CH0_PIPE_TX_DETECT_RX_LOOPBACK_LL | If pipe_power_down==P1, 1==PHY Tx Detection Request. If pipe_tx_elec_idle==0, 1==PHY Rx to Tx Loopback Request. 0==Otherwise.                                                                                                                                                                                                                                                               |
| CH3_PIPE_RX_EQ_EVAL_LL            | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                                                                                                                                                                                                                                                                                       |
| CH2_PIPE_RX_EQ_EVAL_LL            | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                                                                                                                                                                                                                                                                                       |
| CH1_PIPE_RX_EQ_EVAL_LL            | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                                                                                                                                                                                                                                                                                       |
| CH0_PIPE_RX_EQ_EVAL_LL            | Set and hold pipe_rx_eq_eval==1 to request the PHY to evaluate the far end transmitter Tx Eq settings                                                                                                                                                                                                                                                                                       |
| CH3_PIPE_INVALID_REQUEST_LL       | Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply). When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal |

**Table 711: Input Ports (Continued)**

| Name                              | Description                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH2_PIPE_INVALID_REQUEST_LL       | Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply). When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal |
| CH1_PIPE_INVALID_REQUEST_LL       | Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply). When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal |
| CH0_PIPE_INVALID_REQUEST_LL       | Rx Equalization Invalid Request: This signal is a per-lane signal which is used by the MAC layer to report to the PHY that the link partner has indicated an invalid request (transmit coefficient that the link partner is not able to apply). When this signal is asserted, the PHY will stop current evaluation and will provide a new direction through pipe linkevalchange[5:0] signal |
| CH3_PIPE_RX_PRESET_HINT_ENABLE_LL | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use.                                                                                                                                                                                                                    |
| CH2_PIPE_RX_PRESET_HINT_ENABLE_LL | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use.                                                                                                                                                                                                                    |
| CH1_PIPE_RX_PRESET_HINT_ENABLE_LL | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use.                                                                                                                                                                                                                    |
| CH0_PIPE_RX_PRESET_HINT_ENABLE_LL | Local PHY Rx Preset Hint Load Enable. Load pipe_rx_preset_hint into local PHY receiver when pipe_rx_preset_hint_enable == 1. Optional. PIPE Spec. recommends not to use.                                                                                                                                                                                                                    |
| CH3_PIPE_RX_PRESET_HINT_LL[2:0]   | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                    |
| CH2_PIPE_RX_PRESET_HINT_LL[2:0]   | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                    |
| CH1_PIPE_RX_PRESET_HINT_LL[2:0]   | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                    |
| CH0_PIPE_RX_PRESET_HINT_LL[2:0]   | Local PHY Rx Preset Hint                                                                                                                                                                                                                                                                                                                                                                    |
| CH3_PIPE_RX_POLARITY_LL           | Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller. As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing)                                                                                                                                              |

**Table 711: Input Ports (Continued)**

| Name                      | Description                                                                                                                                                                                                                                    |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH2_PIPE_RX_POLARITY_LL   | Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller. As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing) |
| CH1_PIPE_RX_POLARITY_LL   | Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller. As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing) |
| CH0_PIPE_RX_POLARITY_LL   | Receive Polarity: This signal is a per-lane signal which is generated by each link PCI-Express controller. As all per-lane signal the application is responsible for generating the association of link to lane and lane to link(multiplexing) |
| CH3_PIPE_TX_CLKREQ_N_LL   | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                            |
| CH2_PIPE_TX_CLKREQ_N_LL   | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                            |
| CH1_PIPE_TX_CLKREQ_N_LL   | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                            |
| CH0_PIPE_TX_CLKREQ_N_LL   | Open drain CLKREQ# pin output. 1==Drive CLKREQ# pin High-Z. 0==Drive CLKREQ# pin low to enable PCIe reference clock                                                                                                                            |
| CH3_PIPE_TX_CM_DISABLE_LL | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                 |
| CH2_PIPE_TX_CM_DISABLE_LL | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                 |
| CH1_PIPE_TX_CM_DISABLE_LL | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                 |
| CH0_PIPE_TX_CM_DISABLE_LL | TX Common Mode Disable. 1==PHY is permitted to disable TX Common Mode management. 0==Otherwise                                                                                                                                                 |
| CH3_PIPE_RX_EI_DISABLE_LL | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                             |
| CH2_PIPE_RX_EI_DISABLE_LL | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                             |
| CH1_PIPE_RX_EI_DISABLE_LL | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                             |
| CH0_PIPE_RX_EI_DISABLE_LL | RX Electrical Idle Disable. 1==PHY is permitted to disable Electrical Idle detection. 0==Otherwise                                                                                                                                             |
| CH3_PIPE_L1PMSSN_LL       | L1 substates enable                                                                                                                                                                                                                            |
| CH2_PIPE_L1PMSSN_LL       | L1 substates enable                                                                                                                                                                                                                            |
| CH1_PIPE_L1PMSSN_LL       | L1 substates enable                                                                                                                                                                                                                            |

**Table 711: Input Ports (Continued)**

| Name                         | Description                                                                                                                                                                                                                         |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_L1PMSEN_LL          | L1 substates enable                                                                                                                                                                                                                 |
| CH3_PIPE_TX_SWING_LL         | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing.                                                                                                                                                                     |
| CH2_PIPE_TX_SWING_LL         | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing.                                                                                                                                                                     |
| CH1_PIPE_TX_SWING_LL         | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing.                                                                                                                                                                     |
| CH0_PIPE_TX_SWING_LL         | 2.5G/5G Transmitter Amplitude: 1==Reduced Swing. 0==Full Swing.                                                                                                                                                                     |
| CH3_PIPE_TX_MARGIN_LL[2:0]   | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                     |
| CH2_PIPE_TX_MARGIN_LL[2:0]   | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                     |
| CH1_PIPE_TX_MARGIN_LL[2:0]   | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                     |
| CH0_PIPE_TX_MARGIN_LL[2:0]   | Transmitter Test Amplitude Selection. Used for test only. 000==Normal operation                                                                                                                                                     |
| CH3_PIPE_TX_DEEMPH_LL[17:0]  | Per lane Transmitter De-Emphasis. 2.5G:(1== -3.5dB). 5G:(1== -3.5dB, 0== -6dB). 8G:([17:12]==Post-Cursor, [11:6]==Cursor, [5:0]==Pre-Cursor)                                                                                        |
| CH2_PIPE_TX_DEEMPH_LL[17:0]  | Per lane Transmitter De-Emphasis. 2.5G:(1== -3.5dB). 5G:(1== -3.5dB, 0== -6dB). 8G:([17:12]==Post-Cursor, [11:6]==Cursor, [5:0]==Pre-Cursor)                                                                                        |
| CH1_PIPE_TX_DEEMPH_LL[17:0]  | Per lane Transmitter De-Emphasis. 2.5G:(1== -3.5dB). 5G:(1== -3.5dB, 0== -6dB). 8G:([17:12]==Post-Cursor, [11:6]==Cursor, [5:0]==Pre-Cursor)                                                                                        |
| CH0_PIPE_TX_DEEMPH_LL[17:0]  | Per lane Transmitter De-Emphasis. 2.5G:(1== -3.5dB). 5G:(1== -3.5dB, 0== -6dB). 8G:([17:12]==Post-Cursor, [11:6]==Cursor, [5:0]==Pre-Cursor)                                                                                        |
| CH3_PIPE_TX_DEEMPH_WINDOW_LL | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis |
| CH2_PIPE_TX_DEEMPH_WINDOW_LL | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis |
| CH1_PIPE_TX_DEEMPH_WINDOW_LL | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis |

**Table 711: Input Ports (Continued)**

| <b>Name</b>                             | <b>Description</b>                                                                                                                                                                                                                                           |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_TX_DEEMPH_WINDOW_LL            | 1==In a window of time where phy_tx_deemph may change (such as in Recovery.Speed, Loopback, and Polling.Compliance). 0==Otherwise. Optional. May be useful for PHY which use a protocol interface for controlling the TX Deemphasis                          |
| CH3_PIPE_LOCAL_GET_PRESET_COEF_LL       | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                              |
| CH2_PIPE_LOCAL_GET_PRESET_COEF_LL       | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                              |
| CH1_PIPE_LOCAL_GET_PRESET_COEF_LL       | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                              |
| CH0_PIPE_LOCAL_GET_PRESET_COEF_LL       | Preset to Coefficient Mapping Request/Acknowledgement for >= 8G                                                                                                                                                                                              |
| CH3_PIPE_LOCAL_GET_PRESET_INDEX_LL[3:0] | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC ask to get the coefficient mapping. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH2_PIPE_LOCAL_GET_PRESET_INDEX_LL[3:0] | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC ask to get the coefficient mapping. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH1_PIPE_LOCAL_GET_PRESET_INDEX_LL[3:0] | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC ask to get the coefficient mapping. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH0_PIPE_LOCAL_GET_PRESET_INDEX_LL[3:0] | Local Preset Index: This signal is a per-lane signal which is used by the MAC layer to indicate which coefficient the MAC ask to get the coefficient mapping. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted. |
| CH3_PIPE_REMOTE_FS_LL[5:0]              | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                 |
| CH2_PIPE_REMOTE_FS_LL[5:0]              | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                 |
| CH1_PIPE_REMOTE_FS_LL[5:0]              | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                 |
| CH0_PIPE_REMOTE_FS_LL[5:0]              | Link partner: FS value the link partner advertised at the beginning of Equalization training                                                                                                                                                                 |
| CH3_PIPE_REMOTE_LF_LL[5:0]              | Link partner: LF value the link partner advertised at the beginning of Equalization training                                                                                                                                                                 |
| CH2_PIPE_REMOTE_LF_LL[5:0]              | Link partner: LF value the link partner advertised at the beginning of Equalization training                                                                                                                                                                 |

**Table 711: Input Ports (Continued)**

| Name                                  | Description                                                                                                                   |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_REMOTE_LF_LL[5:0]            | Link partner: LF value the link partner advertised at the beginning of Equalization training                                  |
| CH0_PIPE_REMOTE_LF_LL[5:0]            | Link partner: LF value the link partner advertised at the beginning of Equalization training                                  |
| CH3_PIPE_REMOTE_EQ_RX_DEEMPH_LL[17:0] | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                              |
| CH2_PIPE_REMOTE_EQ_RX_DEEMPH_LL[17:0] | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                              |
| CH1_PIPE_REMOTE_EQ_RX_DEEMPH_LL[17:0] | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                              |
| CH0_PIPE_REMOTE_EQ_RX_DEEMPH_LL[17:0] | Link partner: 8G deemphasis value we requested the link partner use during Equalization training                              |
| CH3_PIPE_REMOTE_EQ_RX_PRESET_LL[3:0]  | Link partner: 8G preset value we requested the link partner use during Equalization training                                  |
| CH2_PIPE_REMOTE_EQ_RX_PRESET_LL[3:0]  | Link partner: 8G preset value we requested the link partner use during Equalization training                                  |
| CH1_PIPE_REMOTE_EQ_RX_PRESET_LL[3:0]  | Link partner: 8G preset value we requested the link partner use during Equalization training                                  |
| CH0_PIPE_REMOTE_EQ_RX_PRESET_LL[3:0]  | Link partner: 8G preset value we requested the link partner use during Equalization training                                  |
| CH3_PIPE_TX_DATA_VALID_LL             | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding |
| CH2_PIPE_TX_DATA_VALID_LL             | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding |
| CH1_PIPE_TX_DATA_VALID_LL             | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding |
| CH0_PIPE_TX_DATA_VALID_LL             | PIPE Tx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding |
| CH3_PIPE_TX_START_BLOCK_LL            | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                      |
| CH2_PIPE_TX_START_BLOCK_LL            | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                      |
| CH1_PIPE_TX_START_BLOCK_LL            | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                      |
| CH0_PIPE_TX_START_BLOCK_LL            | PIPE Tx Start Block. 1==Start of block. 0==Otherwise. All blocks transmitted are 128-bit                                      |
| CH3_PIPE_TX_SYNC_HEADER_LL[1:0]       | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                       |



**Table 711: Input Ports (Continued)**

| Name                            | Description                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| CH2_PIPE_TX_SYNC_HEADER_LL[1:0] | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                           |
| CH1_PIPE_TX_SYNC_HEADER_LL[1:0] | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                           |
| CH0_PIPE_TX_SYNC_HEADER_LL[1:0] | PIPE Tx Sync Header. When pipe_tx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                           |
| CH3_PIPE_TX_DATA_LL[31:0]       | PIPE Tx Data                                                                                                                      |
| CH2_PIPE_TX_DATA_LL[31:0]       | PIPE Tx Data                                                                                                                      |
| CH1_PIPE_TX_DATA_LL[31:0]       | PIPE Tx Data                                                                                                                      |
| CH0_PIPE_TX_DATA_LL[31:0]       | PIPE Tx Data                                                                                                                      |
| CH3_PIPE_TX_DATAK_LL[3:0]       | PIPE Tx Data K indicator for 8b10b                                                                                                |
| CH2_PIPE_TX_DATAK_LL[3:0]       | PIPE Tx Data K indicator for 8b10b                                                                                                |
| CH1_PIPE_TX_DATAK_LL[3:0]       | PIPE Tx Data K indicator for 8b10b                                                                                                |
| CH0_PIPE_TX_DATAK_LL[3:0]       | PIPE Tx Data K indicator for 8b10b                                                                                                |
| CH3_PIPE_TX_COMPLIANCE_LL       | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise |
| CH2_PIPE_TX_COMPLIANCE_LL       | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise |
| CH1_PIPE_TX_COMPLIANCE_LL       | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise |
| CH0_PIPE_TX_COMPLIANCE_LL       | PIPE Tx Compliance. 1==Force disparity to negative before encoding pipe_tx_data[7:0] (for 8b10b compliance pattern). 0==Otherwise |
| CH3_PIPE_TX_ELEC_IDLE_LL        | PIPE Tx Electrical Idle. 1==Idle, 0==Active                                                                                       |
| CH2_PIPE_TX_ELEC_IDLE_LL        | PIPE Tx Electrical Idle. 1==Idle, 0==Active                                                                                       |
| CH1_PIPE_TX_ELEC_IDLE_LL        | PIPE Tx Electrical Idle. 1==Idle, 0==Active                                                                                       |
| CH0_PIPE_TX_ELEC_IDLE_LL        | PIPE Tx Electrical Idle. 1==Idle, 0==Active                                                                                       |
| CH3_PIPE_BLOCK_ALIGN_CONTROL_LL | PIPE Block Align Control. Set to 0 when within a datastream (except for Slave Loopback); otherwise set to 1                       |
| CH2_PIPE_BLOCK_ALIGN_CONTROL_LL | PIPE Block Align Control. Set to 0 when within a datastream (except for Slave Loopback); otherwise set to 1                       |
| CH1_PIPE_BLOCK_ALIGN_CONTROL_LL | PIPE Block Align Control. Set to 0 when within a datastream (except for Slave Loopback); otherwise set to 1                       |
| CH0_PIPE_BLOCK_ALIGN_CONTROL_LL | PIPE Block Align Control. Set to 0 when within a datastream (except for Slave Loopback); otherwise set to 1                       |

**Table 711: Input Ports (Continued)**

| <b>Name</b>                           | <b>Description</b>                                                                                        |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------|
| CH3_PIPE_PRESET_INDX_PCS_TX_DATA[3:0] | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH2_PIPE_PRESET_INDX_PCS_TX_DATA[3:0] | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_PRESET_INDX_PCS_TX_DATA[3:0] | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_PRESET_INDX_PCS_TX_DATA[3:0] | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH3_PIPE_REMOTE_FS_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH2_PIPE_REMOTE_FS_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_REMOTE_FS_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_REMOTE_FS_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH3_PIPE_REMOTE_LF_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH2_PIPE_REMOTE_LF_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_REMOTE_LF_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_REMOTE_LF_PCS_TX_DATA[5:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH3_PIPE_RX_DEEMPH_PCS_TX_DATA[17:0]  | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH2_PIPE_RX_DEEMPH_PCS_TX_DATA[17:0]  | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_RX_DEEMPH_PCS_TX_DATA[17:0]  | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_RX_DEEMPH_PCS_TX_DATA[17:0]  | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH3_PIPE_RX_PRESET_PCS_TX_DATA[3:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH2_PIPE_RX_PRESET_PCS_TX_DATA[3:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH1_PIPE_RX_PRESET_PCS_TX_DATA[3:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| CH0_PIPE_RX_PRESET_PCS_TX_DATA[3:0]   | Pipe signal open for user, mpcs and ecps sharing                                                          |
| ACTMD                                 | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH3_ACTEN                             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH2_ACTEN                             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACTEN                             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTEN                             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH3_ACTACMD                           | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH2_ACTACMD                           | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |

**Table 711: Input Ports (Continued)**

| Name         | Description                                                                                               |
|--------------|-----------------------------------------------------------------------------------------------------------|
| CH1_ACTACMD  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTACMD  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH3_ACTDR11  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH2_ACTDR11  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACTDR11  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTDR11  | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH3_ACTHIGHZ | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH2_ACTHIGHZ | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACTHIGHZ | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACTHIGHZ | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| SCAN_CLK     | Scan clock for PCS                                                                                        |
| SCAN_RST     | Scan reset for PCS                                                                                        |

**Table 712: Output Ports**

| Name                  | Description                           |
|-----------------------|---------------------------------------|
| CH3_PIPE_PCS_TXCLKOUT | Pipe and PCS tx clock to Fabric       |
| CH2_PIPE_PCS_TXCLKOUT | Pipe and PCS tx clock to Fabric       |
| CH1_PIPE_PCS_TXCLKOUT | Pipe and PCS tx clock to Fabric       |
| CH0_PIPE_PCS_TXCLKOUT | Pipe and PCS tx clock to Fabric       |
| CH3_RXOUTCLK          | PCS RX clock to Fabric                |
| CH2_RXOUTCLK          | PCS RX clock to Fabric                |
| CH1_RXOUTCLK          | PCS RX clock to Fabric                |
| CH0_RXOUTCLK          | PCS RX clock to Fabric                |
| TX_ALIGN_CLKOUT       | Clock for multi quad usage in TX mode |
| RX_ALIGN_CLKOUT       | Clock for multi quad usage in RX mode |
| CH3_LMMIRDATA_VALID   | LMMI read data valid                  |
| CH2_LMMIRDATA_VALID   | LMMI read data valid                  |

**Table 712: Output Ports (Continued)**

| Name                  | Description                                                                  |
|-----------------------|------------------------------------------------------------------------------|
| CH1_LMMIRDATA_VALID   | LMMI read data valid                                                         |
| CH0_LMMIRDATA_VALID   | LMMI read data valid                                                         |
| CH3_LMMIREADY         | LMMI Bus ready                                                               |
| CH2_LMMIREADY         | LMMI Bus ready                                                               |
| CH1_LMMIREADY         | LMMI Bus ready                                                               |
| CH0_LMMIREADY         | LMMI Bus ready                                                               |
| CH3_LMMIRDATA[7:0]    | LMMI read data                                                               |
| CH2_LMMIRDATA[7:0]    | LMMI read data                                                               |
| CH1_LMMIRDATA[7:0]    | LMMI read data                                                               |
| CH0_LMMIRDATA[7:0]    | LMMI read data                                                               |
| CH3_SDTXP             | Analog TX diffIO                                                             |
| CH2_SDTXP             | Analog TX diffIO                                                             |
| CH1_SDTXP             | Analog TX diffIO                                                             |
| CH0_SDTXP             | Analog TX diffIO                                                             |
| CH3_SDTXN             | Analog TX diffIO                                                             |
| CH2_SDTXN             | Analog TX diffIO                                                             |
| CH1_SDTXN             | Analog TX diffIO                                                             |
| CH0_SDTXN             | Analog TX diffIO                                                             |
| CH3_PCLKAUX_SEL_LL    | Pipe clock selection for user                                                |
| CH2_PCLKAUX_SEL_LL    | Pipe clock selection for user                                                |
| CH1_PCLKAUX_SEL_LL    | Pipe clock selection for user                                                |
| CH0_PCLKAUX_SEL_LL    | Pipe clock selection for user                                                |
| CH3_CLKREQO           | Open drain bidirectional CLKREQ# output                                      |
| CH2_CLKREQO           | Open drain bidirectional CLKREQ# output                                      |
| CH1_CLKREQO           | Open drain bidirectional CLKREQ# output                                      |
| CH0_CLKREQO           | Open drain bidirectional CLKREQ# output                                      |
| CH3_CLKREQOE          | Open drain bidirectional CLKREQ# output enable                               |
| CH2_CLKREQOE          | Open drain bidirectional CLKREQ# output enable                               |
| CH1_CLKREQOE          | Open drain bidirectional CLKREQ# output enable                               |
| CH0_CLKREQOE          | Open drain bidirectional CLKREQ# output enable                               |
| TX_LALIGN_OUT_UP[7:0] | The connection signals between Quads for lane alignment across Quad boundary |

**Table 712: Output Ports (Continued)**

| Name                                   | Description                                                                  |
|----------------------------------------|------------------------------------------------------------------------------|
| TX_LALIGN_OUT_DOWN[7:0]                | The connection signals between Quads for lane alignment across Quad boundary |
| CH3_PIPE_WIDTH_5G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_WIDTH_5G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_WIDTH_5G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_WIDTH_5G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_WIDTH_8G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_WIDTH_8G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_WIDTH_8G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_WIDTH_8G0[1:0]                | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_RXEQ_FOM[7:0]                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_RXEQ_FOM[7:0]                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RXEQ_FOM[7:0]                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RXEQ_FOM[7:0]                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_PHY_STATUS                    | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_PHY_STATUS                    | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_PHY_STATUS                    | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_PHY_STATUS                    | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_RX_EI                         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_RX_EI                         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_EI                         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_EI                         | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_RX_CLKREQ                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_RX_CLKREQ                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_RX_CLKREQ                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_RX_CLKREQ                     | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_L1X_ENTRY_ACK                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_L1X_ENTRY_ACK                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH1_PIPE_L1X_ENTRY_ACK                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH0_PIPE_L1X_ENTRY_ACK                 | Pipe signal open for user, mpcs and ecps sharing                             |
| CH3_PIPE_LOCAL_GET_TX_PRESET_COEF[3:0] | Pipe signal open for user, mpcs and ecps sharing                             |
| CH2_PIPE_LOCAL_GET_TX_PRESET_COEF[3:0] | Pipe signal open for user, mpcs and ecps sharing                             |

**Table 712: Output Ports (Continued)**

| Name                                      | Description                                      |
|-------------------------------------------|--------------------------------------------------|
| CH1_PIPE_LOCAL_GET_TX_PRESET_COEF[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_LOCAL_GET_TX_PRESET_COEF[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_PRESET_COEF_PCS_RX_DATA[13:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_PRESET_COEF_PCS_RX_DATA[13:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_PRESET_COEF_PCS_RX_DATA[13:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_PRESET_COEF_PCS_RX_DATA[13:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_START_BLOCK                   | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_START_BLOCK                   | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_START_BLOCK                   | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_START_BLOCK                   | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_DATA_PCS_RX_DATA[31:0]        | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_DATA_PCS_RX_DATA[31:0]        | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_DATA_PCS_RX_DATA[31:0]        | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_DATA_PCS_RX_DATA[31:0]        | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_STATUS_PCS_RX_DATA[2:0]       | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_STATUS_PCS_RX_DATA[2:0]       | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_STATUS_PCS_RX_DATA[2:0]       | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_STATUS_PCS_RX_DATA[2:0]       | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_DATA_EN_PCS_RX_DATA           | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_DATA_EN_PCS_RX_DATA           | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_DATA_EN_PCS_RX_DATA           | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_DATA_EN_PCS_RX_DATA           | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_VLD_PCS_RX_DATA               | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_VLD_PCS_RX_DATA               | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_VLD_PCS_RX_DATA               | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_VLD_PCS_RX_DATA               | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_DATA_VLD_PCS_RX_DATA          | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_DATA_VLD_PCS_RX_DATA          | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_DATA_VLD_PCS_RX_DATA          | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_DATA_VLD_PCS_RX_DATA          | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_SYNC_HDR_PCS_RX_DATA[1:0]     | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_SYNC_HDR_PCS_RX_DATA[1:0]     | Pipe signal open for user, mpcs and ecps sharing |

**Table 712: Output Ports (Continued)**

| Name                                  | Description                                                                                                                                                 |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_RX_SYNC_HDR_PCS_RX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH0_PIPE_RX_SYNC_HDR_PCS_RX_DATA[1:0] | Pipe signal open for user, mpcs and ecps sharing                                                                                                            |
| CH3_PIPE_WIDTH_2G5_LL[1:0]            | Width of pipe_tx/rx_data at 2.5G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH2_PIPE_WIDTH_2G5_LL[1:0]            | Width of pipe_tx/rx_data at 2.5G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH1_PIPE_WIDTH_2G5_LL[1:0]            | Width of pipe_tx/rx_data at 2.5G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH0_PIPE_WIDTH_2G5_LL[1:0]            | Width of pipe_tx/rx_data at 2.5G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH3_PIPE_WIDTH_5G0_LL[1:0]            | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH2_PIPE_WIDTH_5G0_LL[1:0]            | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH1_PIPE_WIDTH_5G0_LL[1:0]            | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH0_PIPE_WIDTH_5G0_LL[1:0]            | Width of pipe_tx/rx_data at 5.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH3_PIPE_WIDTH_8G0_LL[1:0]            | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH2_PIPE_WIDTH_8G0_LL[1:0]            | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH1_PIPE_WIDTH_8G0_LL[1:0]            | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |

**Table 712: Output Ports (Continued)**

| Name                                     | Description                                                                                                                                                 |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_WIDTH_8G0_LL[1:0]               | Width of pipe_tx/rx_data at 8.0G speed. 11==Reserved, 10==[31:0], 01==[15:0], 00=[7:0]. Must be <= PHY_DATA_WIDTH. 2-bits only for >= 32-bit PHY_DATA_WIDTH |
| CH3_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL[7:0] | PHY provides the relative received signal quality on pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1.                                     |
| CH2_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL[7:0] | PHY provides the relative received signal quality on pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1.                                     |
| CH1_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL[7:0] | PHY provides the relative received signal quality on pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1.                                     |
| CH0_PIPE_RX_EQ_EVAL_FEEDBACK_FOM_LL[7:0] | PHY provides the relative received signal quality on pipe_rx_eq_eval_feedback_fom coincident with pipe_phy_status == 1.                                     |
| CH3_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL[5:0] | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                       |
| CH2_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL[5:0] | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                       |
| CH1_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL[5:0] | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                       |
| CH0_PIPE_RX_EQ_EVAL_FEEDBACK_DIR_LL[5:0] | PHY provides pre/post coefficient up/dn guidance on pipe_rx_eq_eval_feedback_dir coincident with pipe_phy_status == 1                                       |
| CH3_PIPE_PHY_STATUS_LL                   | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                           |
| CH2_PIPE_PHY_STATUS_LL                   | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                           |
| CH1_PIPE_PHY_STATUS_LL                   | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                           |
| CH0_PIPE_PHY_STATUS_LL                   | Set to 1 by PHY for one clock to communicate Tx detection, rate change, power down change, and equalization evaluation completion                           |
| CH3_PIPE_RX_ELEC_IDLE_LL                 | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                 |



**Table 712: Output Ports (Continued)**

| Name                      | Description                                                                                                                                                  |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH2_PIPE_RX_ELEC_IDLE_LL  | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                  |
| CH1_PIPE_RX_ELEC_IDLE_LL  | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                  |
| CH0_PIPE_RX_ELEC_IDLE_LL  | PIPE Rx Electrical Idle. 1==Idle, 0==Active. Required valid at 2.5G. Allowance for inaccuracy at >= 5G. See core User Guide                                  |
| CH3_PIPE_RX_CLKREQ_N_LL   | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock |
| CH2_PIPE_RX_CLKREQ_N_LL   | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock |
| CH1_PIPE_RX_CLKREQ_N_LL   | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock |
| CH0_PIPE_RX_CLKREQ_N_LL   | Open drain CLKREQ# pin input. Current value of open drain CLKREQ# pin. 1==Request to disable PCIe reference clock. 0==Request to enable PCIe reference clock |
| CH3_PIPE_LOCAL_FS_LL[5:0] | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH2_PIPE_LOCAL_FS_LL[5:0] | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH1_PIPE_LOCAL_FS_LL[5:0] | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH0_PIPE_LOCAL_FS_LL[5:0] | Local PHY FS value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH3_PIPE_LOCAL_LF_LL[5:0] | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH2_PIPE_LOCAL_LF_LL[5:0] | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH1_PIPE_LOCAL_LF_LL[5:0] | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |
| CH0_PIPE_LOCAL_LF_LL[5:0] | Local PHY LF value. Captured on first pipe_phy_status == 1 after reset deassertion                                                                           |

**Table 712: Output Ports (Continued)**

| Name                                       | Description                                                                                                                                                                                                                                                                                               |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CH3_PIPE_LOCAL_GET_TX_COEF_VALID_LL        | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted |
| CH2_PIPE_LOCAL_GET_TX_COEF_VALID_LL        | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted |
| CH1_PIPE_LOCAL_GET_TX_COEF_VALID_LL        | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted |
| CH0_PIPE_LOCAL_GET_TX_COEF_VALID_LL        | Local Tx coefficient valid: This signal is a per-lane signal which is used by the PHY layer to indicate the required preset to coefficient mapping is valid on pipe_local_tx_pset_coef[17:0] output signal. This signal is used by the PHY layer only when the pipe_getlocal_pset_coef signal is asserted |
| CH3_PIPE_LOCAL_GET_TX_PRESET_COEF_LL[17:0] | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                      |
| CH2_PIPE_LOCAL_GET_TX_PRESET_COEF_LL[17:0] | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                      |
| CH1_PIPE_LOCAL_GET_TX_PRESET_COEF_LL[17:0] | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                      |
| CH0_PIPE_LOCAL_GET_TX_PRESET_COEF_LL[17:0] | Local Tx coefficient mapping: This signal is a per-lane signal which is used by the PHY layer to indicate the coefficient value corresponding to the required preset                                                                                                                                      |
| CH3_PIPE_TX_DATA_ENABLE_LL                 | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0                                                                                                                                                                    |
| CH2_PIPE_TX_DATA_ENABLE_LL                 | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0                                                                                                                                                                    |
| CH1_PIPE_TX_DATA_ENABLE_LL                 | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0                                                                                                                                                                    |

**Table 712: Output Ports (Continued)**

| Name                            | Description                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| CH0_PIPE_TX_DATA_ENABLE_LL      | PIPE Tx Data Enable. Tx Data is taken by PHY when pipe_tx_data_enable==1. Tx Data outputs hold their value when pipe_tx_data_enable==0 |
| CH3_PIPE_RX_DATAEN_LL           | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0        |
| CH2_PIPE_RX_DATAEN_LL           | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0        |
| CH1_PIPE_RX_DATAEN_LL           | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0        |
| CH0_PIPE_RX_DATAEN_LL           | PIPE Rx Data Enable. Data is provided by PHY when pipe_rx_data_enable==1. Rx Data inputs are unused when pipe_rx_data_enable==0        |
| CH3_PIPE_RX_DATA_VALID_LL       | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding          |
| CH2_PIPE_RX_DATA_VALID_LL       | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding          |
| CH1_PIPE_RX_DATA_VALID_LL       | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding          |
| CH0_PIPE_RX_DATA_VALID_LL       | PIPE Rx Data Valid for >= 8G only. 1==Data is valid. 0==Data is invalid. De-asserted only to compensate for 128b130b encoding          |
| CH3_PIPE_RX_START_BLOCK_LL      | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size             |
| CH2_PIPE_RX_START_BLOCK_LL      | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size             |
| CH1_PIPE_RX_START_BLOCK_LL      | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size             |
| CH0_PIPE_RX_START_BLOCK_LL      | PIPE Rx Start Block. 1==Start of block. 0==Otherwise. All blocks received are 128-bit except SKP OS which is variable size             |
| CH3_PIPE_RX_SYNC_HEADER_LL[1:0] | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                |
| CH2_PIPE_RX_SYNC_HEADER_LL[1:0] | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                |

**Table 712: Output Ports (Continued)**

| Name                            | Description                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| CH1_PIPE_RX_SYNC_HEADER_LL[1:0] | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                     |
| CH0_PIPE_RX_SYNC_HEADER_LL[1:0] | PIPE Rx Sync Header. When pipe_rx_start_block==1, indicates the block type: 01==Ordered Set or 10==Data                                     |
| CH3_PIPE_RX_DATA_LL[31:0]       | Pipe RX data                                                                                                                                |
| CH2_PIPE_RX_DATA_LL[31:0]       | Pipe RX data                                                                                                                                |
| CH1_PIPE_RX_DATA_LL[31:0]       | Pipe RX data                                                                                                                                |
| CH0_PIPE_RX_DATA_LL[31:0]       | Pipe RX data                                                                                                                                |
| CH3_PIPE_RX_DATAK_LL[3:0]       | PIPE Rx Data K indicator for 8b10b.                                                                                                         |
| CH2_PIPE_RX_DATAK_LL[3:0]       | PIPE Rx Data K indicator for 8b10b.                                                                                                         |
| CH1_PIPE_RX_DATAK_LL[3:0]       | PIPE Rx Data K indicator for 8b10b.                                                                                                         |
| CH0_PIPE_RX_DATAK_LL[3:0]       | PIPE Rx Data K indicator for 8b10b.                                                                                                         |
| CH3_PIPE_RX_VALID_LL            | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                         |
| CH2_PIPE_RX_VALID_LL            | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                         |
| CH1_PIPE_RX_VALID_LL            | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                         |
| CH0_PIPE_RX_VALID_LL            | 1==PHY is locked to Rx data stream and data is valid - use pipe_rx_data. 0==PHY is not locked - ignore pipe_rx_data                         |
| CH3_PIPE_RX_STATUS_LL[2:0]      | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error           |
| CH2_PIPE_RX_STATUS_LL[2:0]      | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error           |
| CH1_PIPE_RX_STATUS_LL[2:0]      | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error           |
| CH0_PIPE_RX_STATUS_LL[2:0]      | PIPE Rx Status. 000=OK, 001/010 SKP Add/Del (unused), 011=Receiver Detected, 100/111 encoding error, 101/110 over/underflow error           |
| PIPE_PCLKOUT_LL[3:0]            | Pipe clock connect to harden PCIe_LL. connect to pipe_pclkout_LL[0] goes to clk_250_i_link0, and pipe_pclkout_LL[3] goes to clk_250_i_link1 |
| CH3_PIPE_WIDTH_2G5[1:0]         | Pipe signal open for user, mpcs and ecps sharing                                                                                            |

**Table 712: Output Ports (Continued)**

| Name                                  | Description                                      |
|---------------------------------------|--------------------------------------------------|
| CH2_PIPE_WIDTH_2G5[1:0]               | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_WIDTH_2G5[1:0]               | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_WIDTH_2G5[1:0]               | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RXEQ_DIR_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RXEQ_DIR_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RXEQ_DIR_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RXEQ_DIR_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RXEQ_DIR_PCS_RX_FIFO_ST[1:0] | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_LOCAL_FS_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_LOCAL_FS_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_LOCAL_FS_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_LOCAL_FS_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_LOCAL_LF_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_LOCAL_LF_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_LOCAL_LF_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_LOCAL_LF_PCS_RX_DATA[5:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_LOCAL_GET_TX_COEF_VLD        | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_LOCAL_GET_TX_COEF_VLD        | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_LOCAL_GET_TX_COEF_VLD        | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_LOCAL_GET_TX_COEF_VLD        | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_TX_DATA_EN                   | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_TX_DATA_EN                   | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_TX_DATA_EN                   | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_TX_DATA_EN                   | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PIPE_RX_DATAK_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH2_PIPE_RX_DATAK_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH1_PIPE_RX_DATAK_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH0_PIPE_RX_DATAK_PCS_RX_DATA[3:0]    | Pipe signal open for user, mpcs and ecps sharing |
| CH3_PCS_RX_DATA[5:0]                  | Dedicated ports used for pcs rx data             |

**Table 712: Output Ports (Continued)**

| Name                    | Description                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| CH2_PCS_RX_DATA[5:0]    | Dedicated ports used for pcs rx data                                                                      |
| CH1_PCS_RX_DATA[5:0]    | Dedicated ports used for pcs rx data                                                                      |
| CH0_PCS_RX_DATA[5:0]    | Dedicated ports used for pcs rx data                                                                      |
| CH3_PCS_RX_HI_BER       | The high level of this signal indicates High BER is detected                                              |
| CH2_PCS_RX_HI_BER       | The high level of this signal indicates High BER is detected                                              |
| CH1_PCS_RX_HI_BER       | The high level of this signal indicates High BER is detected                                              |
| CH0_PCS_RX_HI_BER       | The high level of this signal indicates High BER is detected                                              |
| CH3_PCS_RX_BLK_LOCK     | The high level of this signal indicates the block lock is achieved                                        |
| CH2_PCS_RX_BLK_LOCK     | The high level of this signal indicates the block lock is achieved                                        |
| CH1_PCS_RX_BLK_LOCK     | The high level of this signal indicates the block lock is achieved                                        |
| CH0_PCS_RX_BLK_LOCK     | The high level of this signal indicates the block lock is achieved                                        |
| CH3_PCS_TX_FIFO_ST[1:0] | TX fifo status (empty, full)                                                                              |
| CH2_PCS_TX_FIFO_ST[1:0] | TX fifo status (empty, full)                                                                              |
| CH1_PCS_TX_FIFO_ST[1:0] | TX fifo status (empty, full)                                                                              |
| CH0_PCS_TX_FIFO_ST[1:0] | TX fifo status (empty, full)                                                                              |
| CH3_ACJPOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH2_ACJPOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACJPOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACJPOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH3_ACJNOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH2_ACJNOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH1_ACJNOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |
| CH0_ACJNOUT             | Jtag mode for PMA. When PMA in jtag mode, user can force data and ctrl to PMA though JTAG signal directly |

## PDP4K

4 kb Pseudo-dual Port Block RAM

Architectures supported:

- ▶ iCE40 UltraPlus

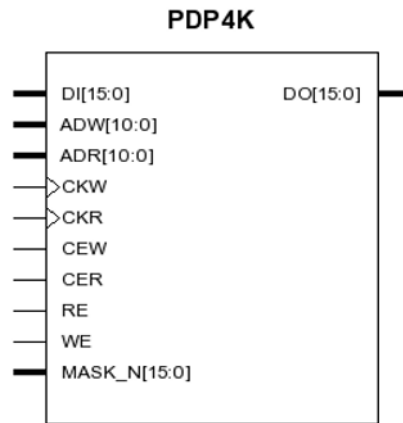


**Table 713: Input Ports**

| Name   | Range | Description                           |
|--------|-------|---------------------------------------|
| DI     | 15:0  | Data in                               |
| ADW    | 10:0  | Write address                         |
| ADR    | 10:0  | Read address                          |
| CKW    | 1     | Write clock                           |
| CKR    | 1     | Read clock                            |
| CEW    | 1     | Write clock enable, active high       |
| CER    | 1     | Read clock enable, active high        |
| RE     | 1     | Read enable, active high              |
| WE     | 1     | Write enable, active high             |
| MASK_N | 15:0  | Per-bit write enable mask, active low |

**Note:**

MASK\_N input is functional only for the 16-bit mode. PDP4K is used to configure 2-, 4-, 8- or 16-bit mode EBR operations. MASK\_N functions only when it is configured to 16-bit data.

**Table 714: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO   | 15:0  | Data output |

**Table 715: Parameters**

| Name      | Values                                         |
|-----------|------------------------------------------------|
| INITVAL_0 | "0x00000000000000000000000000000000" (default) |
| INITVAL_1 | "0x00000000000000000000000000000000" (default) |
| INITVAL_2 | "0x00000000000000000000000000000000" (default) |
| INITVAL_3 | "0x00000000000000000000000000000000" (default) |
| INITVAL_4 | "0x00000000000000000000000000000000" (default) |
| INITVAL_5 | "0x00000000000000000000000000000000" (default) |
| INITVAL_6 | "0x00000000000000000000000000000000" (default) |
| INITVAL_7 | "0x00000000000000000000000000000000" (default) |
| INITVAL_8 | "0x00000000000000000000000000000000" (default) |
| INITVAL_9 | "0x00000000000000000000000000000000" (default) |
| INITVAL_A | "0x00000000000000000000000000000000" (default) |
| INITVAL_B | "0x00000000000000000000000000000000" (default) |
| INITVAL_C | "0x00000000000000000000000000000000" (default) |
| INITVAL_D | "0x00000000000000000000000000000000" (default) |
| INITVAL_E | "0x00000000000000000000000000000000" (default) |
| INITVAL_F | "0x00000000000000000000000000000000" (default) |



**Table 715: Parameters (Continued)**

| Name         | Values                                           |
|--------------|--------------------------------------------------|
| DATA_WIDTH_W | "2" (default), "4", "8", "16" (Write data width) |
| DATA_WIDTH_R | "2" (default), "4", "8", "16" (Read data width)  |

**Rules & Restrictions:**

See EBR\_B section. The same rules regard port mapping and initial value parameter conversion for EBR\_B apply for PDP4K (only difference is that for EBR\_B → INIT\_#, while for PDP4K → INITVAL\_#).

**PDP16K**

16Kb Pseudo Dual Port Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

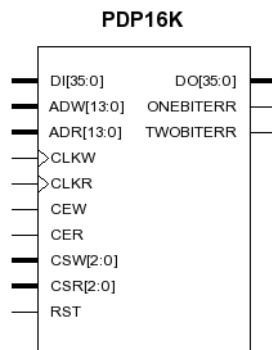


**Table 716: Input Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>    |
|-------------|--------------|-----------------------|
| DI          | 35:0         | Data in               |
| ADW         | 13:0         | Write address         |
| ADR         | 13:0         | Read address          |
| CLKW        | 1            | Write clock           |
| CLKR        | 1            | Read clock            |
| CEW         | 1            | Clock enable          |
| CER         | 1            | Clock enable          |
| CSW         | 2:0          | Write chip select     |
| CSR         | 2:0          | Read chip select      |
| RST         | 1            | Output register reset |

**Table 717: Output Ports**

| <b>Name</b> | <b>Range</b> | <b>Description</b>                |
|-------------|--------------|-----------------------------------|
| DO          | 35:0         | Data out                          |
| ONEBITERR   | 1            | ECC error flag (single bit error) |
| TWOBITERR   | 1            | ECC error flag (two bit error)    |

**Table 718: Parameters**

| <b>Name</b>             | <b>Values</b>                                                                           | <b>Description</b>                                          |
|-------------------------|-----------------------------------------------------------------------------------------|-------------------------------------------------------------|
| DATA_WIDTH_W            | "X36" ( <i>default</i> )<br>"X32"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"              | Write port width                                            |
| DATA_WIDTH_R            | "X36" ( <i>default</i> )<br>"X32"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"              | Read port width                                             |
| OUTREG                  | "BYPASSED" ( <i>default</i> )<br>"USED"                                                 | Register output                                             |
| RESETMODE               | "SYNC" ( <i>default</i> )<br>"ASYNC"                                                    | Reset sync/async control                                    |
| GSR                     | "ENABLED" ( <i>default</i> )<br>"DISABLED"                                              | Enable global set/reset for the output registers            |
| ECC                     | "DISABLED" ( <i>default</i> )<br>"ENABLED"                                              | Enable ECC                                                  |
| INITVAL_00...INITVAL_3F | Hex string, 320 bits, must include the "0x" prefix                                      | EBR initialization data                                     |
| CSDECODE_W              | "000" ( <i>default</i> )<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Write chip select active level, 0=active high 1=active low  |
| CSDECODE_R              | "000" ( <i>default</i> )<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Read chip select active setting, 0=active high 1=active low |


**Table 718: Parameters (Continued)**

| Name              | Values                                                | Description                                           |
|-------------------|-------------------------------------------------------|-------------------------------------------------------|
| ASYNC_RST_RELEASE | "SYNC" ( <i>default</i> )<br>"ASYNC"                  | Reset release sync/async control                      |
| INIT_DATA         | "STATIC" ( <i>default</i> )<br>"DYNAMIC"<br>"NO_INIT" | Defines whether or not the memory file can be updated |

**Note:**

It is **not** legal to drive the read and write clock such that their active edges switch simultaneously.

All inputs (except the register control signals) and all outputs are registered in the following manner:

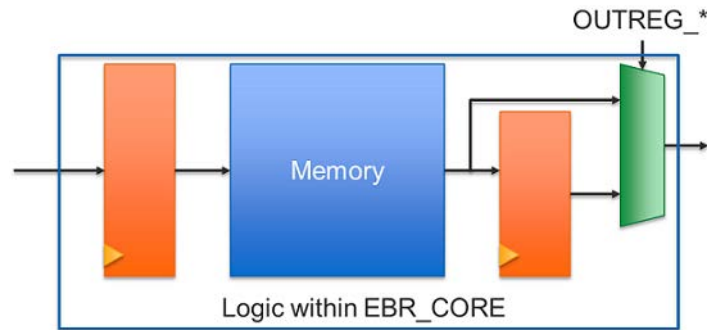

Port assignments for different data widths will follow the table below:

| Data Width | Input Data | Output Data | Write Address<br>(MSB to LSB) | Read Address<br>(MSB to LSB) |
|------------|------------|-------------|-------------------------------|------------------------------|
| 16Kx1      | DI[0]      | DO[0]       | ADW[13:0]                     | ADR[13:0]                    |
| 8Kx2       | DI[1:0]    | DO[1:0]     | ADW[13:1]                     | ADR[13:1]                    |
| 4Kx4       | DI[3:0]    | DO[3:0]     | ADW[13:2]                     | ADR[13:2]                    |
| 2Kx9       | DI[8:0]    | DO[8:0]     | ADW[13:3]                     | ADR[13:3]                    |
| 1Kx18      | DI[17:0]   | DO[17:0]    | ADW[13:4]                     | ADR[13:4]                    |
| 512x36     | DI[35:0]   | DO[35:0]    | ADW[13:4]                     | ADR[13:4]                    |

For data widths that do not use all available address bits, the unused bits **must** be tied high for proper functionality.

**PDP32K**

32 Kb pseudo-dual port block RAM

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

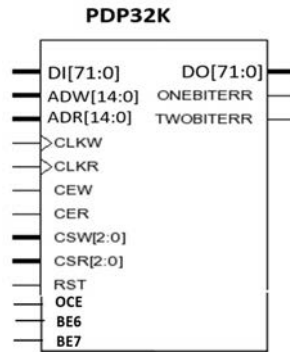


**Table 719: Input Ports**

| Name | Range | Type         | Active State | Description                            |
|------|-------|--------------|--------------|----------------------------------------|
| DI   | 71:0  | Data         | Active High  | Data Inputs                            |
| ADW  | 14:0  | Addr         | Active High  | Write Address                          |
| ADR  | 14:0  | Addr         | Active High  | Read Address                           |
| CLKW | 1     | Clock        | Rising Edge  | Write Clock Input                      |
| CLKR | 1     | Clock        | Rising Edge  | Read Clock Input                       |
| CEW  | 1     | Clock Enable | Active High  | Write Clock Enable                     |
| CER  | 1     | Clock Enable | Active High  | Read Clock Enable                      |
| OCE  | 1     | Clock Enable | Active High  | Output Register Clock Enable           |
| BE6  | 1     | Control      | Active High  | Byte enable for x72/x64 highest-1 byte |
| BE7  | 1     | Control      | Active High  | Byte enable for x72/x64 highest byte   |
| CSW  | 2:0   | Control      | Active High  | Write Cascade Select                   |
| CSR  | 2:0   | Control      | Active High  | Read Cascade Select                    |
| RST  | 1     | Reset        | Active High  | Read output registers reset            |

**Table 720: Output Ports**

| Name      | Range | Type | Description                       |
|-----------|-------|------|-----------------------------------|
| DO        | 71:0  | Data | Data Output                       |
| ONEBITERR | 1     | Flag | ECC error flag (single bit error) |
| TWOBITERR | 1     | Flag | ECC error flag (two bit error)    |

**Table 721: Parameters**

| Name         | Values                                                                                       | Description                                      |
|--------------|----------------------------------------------------------------------------------------------|--------------------------------------------------|
| DATA_WIDTH_W | "X72" (default)<br>"X64" (virtual for ECC)<br>"X36"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Specifies the Data Word Width                    |
| DATA_WIDTH_R | "X72" (default)<br>"X64"<br>"X36"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"                   | Read port width                                  |
| OUTREG       | "BYPASSED" (default)<br>"USED"                                                               | Register output                                  |
| RESETMODE    | "SYNC" (default)<br>"ASYNC"                                                                  | Reset sync/async control                         |
| GSR          | "ENABLED" (default)<br>"DISABLED"                                                            | Enable global set/reset for the output registers |

**Table 721: Parameters (Continued)**

| <b>Name</b>             | <b>Values</b>                                                                  | <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CSDECODE_W              | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Write chip select active level, 0=active high 1=active low                                                                                                                                                                                                                                                                                                                                                                                                  |
| CSDECODE_R              | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Read chip select active setting, 0=active high 1=active low                                                                                                                                                                                                                                                                                                                                                                                                 |
| ASYNC_RST_RELEASE       | "SYNC" (default)<br>"ASYNC"                                                    | Reset release sync/async control                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ECC                     | "DISABLED" (default)<br>"ENABLED"                                              | Enable ECC                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| INITVAL_00...INITVAL_7F | Hex string, 320 bits, must include the "0x" prefix                             | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| INIT_DATA               | "STATIC" (default)<br>"DYNAMIC"                                                | <p>Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.</p> <p>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.</p> <p>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled.</p> |

**Note:**

If writing and reading at the same address simultaneously, the behavior is not guaranteed (i.e. either the read or write may happen first).

**PDPSC16K**

16Kb Pseudo Dual Port Single Clock Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

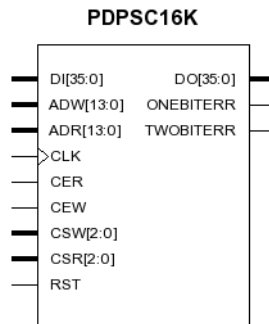


**Table 722: Input Ports**

| Name | Range | Description   |
|------|-------|---------------|
| DI   | 35:0  | Data in       |
| ADW  | 13:0  | Write address |
| ADR  | 13:0  | Read address  |



**Table 722: Input Ports (Continued)**

| Name | Range | Description           |
|------|-------|-----------------------|
| CLK  | 1     | Clock                 |
| CER  | 1     | Read clock enable     |
| CEW  | 1     | Write clock enable    |
| CSW  | 2:0   | Write chip select     |
| CSR  | 2:0   | Read chip select      |
| RST  | 1     | Output register reset |

**Table 723: Output Ports**

| Name      | Range | Description                       |
|-----------|-------|-----------------------------------|
| DO        | 35:0  | Data out                          |
| ONEBITERR | 1     | ECC error flag (single bit error) |
| TWOBITERR | 1     | ECC error flag (two bit error)    |

**Table 724: Parameters**

| Name         | Values                                                            | Description                                      |
|--------------|-------------------------------------------------------------------|--------------------------------------------------|
| DATA_WIDTH_W | "X36" ( <i>default</i> )<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Write port width                                 |
| DATA_WIDTH_R | "X36" ( <i>default</i> )<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Read port width                                  |
| OUTREG       | "BYPASSED" ( <i>default</i> )<br>"USED"                           | Register output                                  |
| RESETMODE    | "SYNC" ( <i>default</i> )<br>"ASYNC"                              | Reset sync/async control                         |
| GSR          | "ENABLED" ( <i>default</i> )<br>"DISABLED"                        | Enable global set/reset for the output registers |


**Table 724: Parameters**

| Name                    | Values                                                                         | Description                                                         |
|-------------------------|--------------------------------------------------------------------------------|---------------------------------------------------------------------|
| ECC                     | "DISABLED" (default)<br>"ENABLED"                                              | Enable ECC                                                          |
| INITVAL_00...INITVAL_3F | Hex string, 320 bits, must include the "0x" prefix                             | EBR Initialization data                                             |
| CSDECODE_W              | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Write chip select active setting<br>0: active high<br>1: active low |
| CSDECODE_R              | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Read chip select active setting<br>0: active high<br>1: active low  |
| ASYNC_RST_RELEASE       | "SYNC" (default)<br>"ASYNC"                                                    | Reset release sync/async control                                    |
| INIT_DATA               | "STATIC" (default)<br>"DYNAMIC"<br>"NO_INIT"                                   | Defines whether or not the memory file can be updated               |

**Note:**

When a pseudo-dual port RAM is desired, if only a single clock is required it is preferred to use PDPSC16K over PDP16K as performance in hardware will be faster with PDPSC16K.

All inputs (except the register control signals) and all outputs are registered in the following manner:

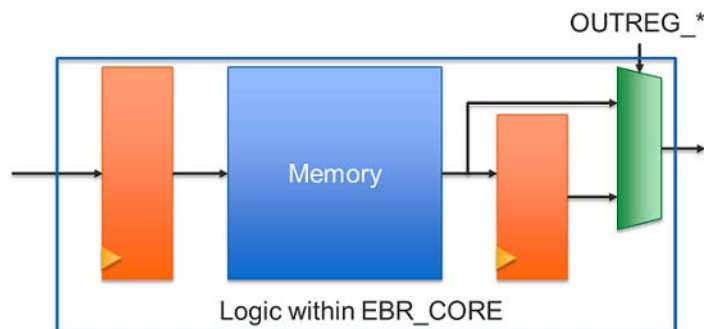

Port assignments for different data widths will follow the table below:

| Data Width | Input Data | Output Data | Write Address<br>(MSB to LSB) | Read Address<br>(MSB to LSB) |
|------------|------------|-------------|-------------------------------|------------------------------|
| 16Kx1      | DI[0]      | DO[0]       | ADW[13:0]                     | ADR[13:0]                    |
| 8Kx2       | DI[1:0]    | DO[1:0]     | ADW[13:1]                     | ADR[13:1]                    |
| 4Kx4       | DI[3:0]    | DO[3:0]     | ADW[13:2]                     | ADR[13:2]                    |
| 2Kx9       | DI[8:0]    | DO[8:0]     | ADW[13:3]                     | ADR[13:3]                    |
| 1Kx18      | DI[17:0]   | DO[17:0]    | ADW[13:4]                     | ADR[13:4]                    |
| 512x36     | DI[35:0]   | DO[35:0]    | ADW[13:4]                     | ADR[13:4]                    |

For data widths that don't use all available address bits, the unused bits must be tied high for proper functionality.

## PDPSC32K

32Kb Pseudo Dual Port Single Clock Block RAM

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

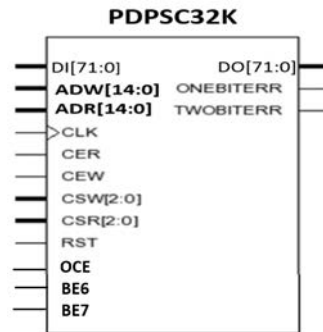


**Table 725: Input Ports**

| Name | Range | Type  | Active State | Description              |
|------|-------|-------|--------------|--------------------------|
| DI   | 71:0  | Data  | Active High  | Data Inputs              |
| ADW  | 14:0  | Addr  | Active High  | Write Address            |
| ADR  | 14:0  | Addr  | Active High  | Read Address             |
| CLK  | 1     | Clock | Rising Edge  | Write & Read Clock Input |

**Table 725: (Continued)Input Ports**

| Name | Range | Type         | Active State | Description                            |
|------|-------|--------------|--------------|----------------------------------------|
| CEW  | 1     | Clock Enable | Active High  | Write Clock Enable                     |
| CER  | 1     | Clock Enable | Active High  | Read Clock Enable                      |
| OCE  | 1     | Clock Enable | Active High  | Output register Clock Enable           |
| BE6  | 1     | Control      | Active High  | Byte enable for x72/x64 highest-1 byte |
| BE7  | 1     | Control      | Active High  | Byte enable for x72/x64 highest byte   |
| CSW  | 2:0   | Control      | Active High  | Write Cascade Select                   |
| CSR  | 2:0   | Control      | Active High  | Read Cascade Select                    |
| RST  | 1     | Reset        | Active High  | Read output registers reset            |

**Table 726: Output Ports**

| Name      | Range | Type | Description                       |
|-----------|-------|------|-----------------------------------|
| DO        | 71:0  | Data | Data Output                       |
| ONEBITERR | 1     | Flag | ECC error flag (single bit error) |
| TWOBITERR | 1     | Flag | ECC error flag (two bit error)    |

**Table 727: Parameters**

| Name         | Values                                                                     | Description      |
|--------------|----------------------------------------------------------------------------|------------------|
| DATA_WIDTH_W | "X72" (default)<br>"X64"<br>"X36"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Write port width |
| DATA_WIDTH_R | "X72" (default)<br>"X64"<br>"X36"<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Read port width  |

**Table 727: Parameters (Continued)**

| <b>Name</b>       | <b>Values</b>                                                                  | <b>Description</b>                                                |
|-------------------|--------------------------------------------------------------------------------|-------------------------------------------------------------------|
| OUTREG            | "BYPASSED" (default)<br>"USED"                                                 | Register output                                                   |
| RESETMODE         | "SYNC" (default)<br>"ASYNC"                                                    | Reset sync/async control                                          |
| GSR               | "ENABLED" (default)<br>"DISABLED"                                              | Enable global set/reset for the output registers                  |
| CSDECODE_W        | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Write chip select active level,<br>0=active high<br>1=active low  |
| CSDECODE_R        | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Read chip select active setting,<br>0=active high<br>1=active low |
| ASYNC_RST_RELEASE | "SYNC" (default)<br>"ASYNC"                                                    | Reset release sync/async control                                  |
| ECC               | "DISABLED" (default)<br>"ENABLED"                                              | Enable ECC                                                        |

**Table 727: Parameters (Continued)**

| Name                    | Values                                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INITVAL_00...INITVAL_7F | Hex string, 320 bits, must include the "0x" prefix | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| INIT_DATA               | "STATIC" (default)<br>"DYNAMIC"                    | <p>Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.</p> <p>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.</p> <p>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled.</p> |

**Note:**


If deterministic behavior is desired, you can use PDPSC32K. In this situation, the read occurs before the write.

**PDPSC512K**

512Kb Single Clock Pseudo Dual Port Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

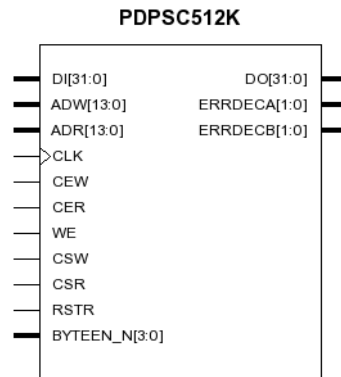**Table 728: Input Ports**

| Name     | Range | Description                                                                                                         |
|----------|-------|---------------------------------------------------------------------------------------------------------------------|
| DI       | 31:0  | Data in                                                                                                             |
| ADW      | 13:0  | Write address                                                                                                       |
| ADR      | 13:0  | Read address                                                                                                        |
| CLK      | 1     | Clock                                                                                                               |
| CEW      | 1     | Write clock enable                                                                                                  |
| CER      | 1     | Read clock enable                                                                                                   |
| WE       | 1     | Write enable                                                                                                        |
| CSW      | 1     | Write chip select                                                                                                   |
| CSR      | 1     | Read chip select                                                                                                    |
| RSTR     | 1     | Read register reset                                                                                                 |
| BYTEEN_N | 3:0   | Write byte enable, 0=write, 1=disable. BYTEEN_N[3] corresponds to the MSB of DI, BYTEEN_N[0] corresponds to the LSB |

**Table 729: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO   | 31:0  | Data out    |

**Table 729: Output Ports (Continued)**

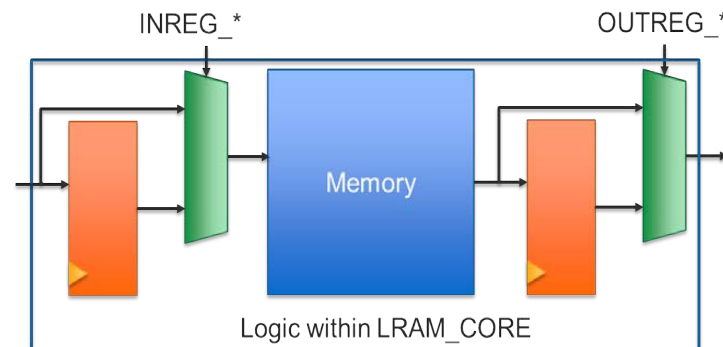
| Name    | Range | Description                       |
|---------|-------|-----------------------------------|
| ERRDECA | 1:0   | Port A one and two bit error flag |
| ERRDECB | 1:0   | Port B one and two bit error flag |

**Table 730: Parameters**

| Name                    | Values                                              | Description                       |
|-------------------------|-----------------------------------------------------|-----------------------------------|
| OUTREG                  | "NO_REG" ( <i>default</i> )<br>"OUT_REG"            | Register output                   |
| GSR                     | "ENABLED" ( <i>default</i> )<br>"DISABLED"          | Enable global set/reset           |
| RESETMODE               | "SYNC" ( <i>default</i> )<br>"ASYNC"                | Reset sync/async control          |
| INITVAL_00...INITVAL_7F | Hex string, 5120 bits, must include the "0x" prefix | LRAM initialization data          |
| ASYNC_RESET_RELEASE     | "SYNC" ( <i>default</i> )<br>"ASYNC"                | Reset release sync/async          |
| ECC_BYTE_SEL            | "ECC_EN" ( <i>default</i> )<br>"BYTE_EN"            | Enable ECC or Byte-enable support |

**Note:**

All inputs (except the register control signals) and all outputs are registered in the following manner:

**PG**

Power Guard



Architectures Supported:

▶ LFMXO4

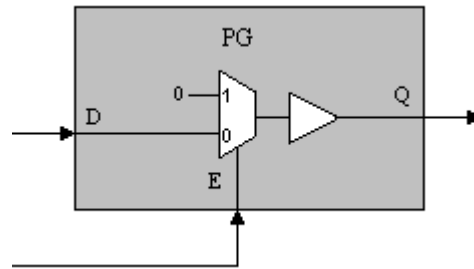


**Table 731: Input Ports**

| Name | Range | Description  |
|------|-------|--------------|
| D    | 1     | Data input D |
| E    | 1     | Data input E |

**Table 732: Output Ports**

| Name | Range | Description   |
|------|-------|---------------|
| Q    | 1     | Data output Q |

### Description

In the power guard mode, the receiver input is disconnected from the pad and held low with a weak pull down. The pad can be toggling and no receiver power will be used. Power guard is enabled on a bank by bank basis. Each bank has a CIB input signal to enable power guard. In addition, each PIO has individually programmable bit control to disable or enable the power guard capability.

You can generate a primitive for a group of I/O pins and then connect it in the design. The PG primitive D port must be connected to the IO pin. You are required to connect the enable input of the primitive to the signal that is used to activate the power guard function. Only one enable signal can be used for all I/Os within an individual I/O bank using power guard. An individual I/O pin is only allowed to connect to one PG primitive module but there could be more than one PG module active in a single I/O bank. Once an I/O signal is connected to the power guard primitive, the software sets the individually programmable bit for that PIO to enable power guard. The default setting for this bit is to disable the power guard function for a PIO.

The following table describes the IO ports of the PG primitive.

**Table 733:**

| Port Name | I/O | Description                                                                                                                               |
|-----------|-----|-------------------------------------------------------------------------------------------------------------------------------------------|
| D         | I   | This is the signal coming from an input or I/O pad. This pin cannot have any fanout—only connects between pad and PG.                     |
| E         | I   | This is the “ENABLE” input that is tied to BIE (Block Input Enable).<br>When E=0, Q is connected to D.<br>When E=1, Q is isolated from D. |
| Q         | O   | This is the output of the power guard that drives towards the core. When E=0, the output Q is driven by the input D.                      |

For more information, refer to related technical notes on the Lattice web site.

## PDPW8KC

Pseudo Dual Port Block RAM

Architectures Supported:

▶ LFMX04

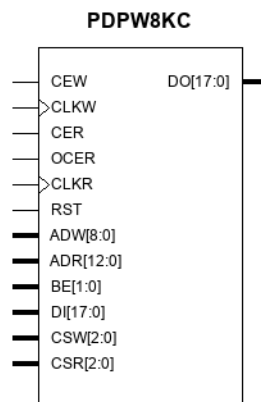


**Table 734: Input Ports**

| Name | Range | Description        |
|------|-------|--------------------|
| CEW  | 1     | Write clock enable |
| CLKW | 1     | Write clock        |

**Table 734: Input Ports**

| Name | Range | Description              |
|------|-------|--------------------------|
| CER  | 1     | Read clock enable        |
| OCER | 1     | Read output clock enable |
| CLKR | 1     | Read clock               |
| RST  | 1     | Reset                    |
| ADW  | 8:0   | Write address (up to 9)  |
| ADR  | 12:0  | Read address (up to 13)  |
| BE   | 1:0   | Byte enable              |
| DI   | 17:0  | Write data (up to 18)    |
| CSW  | 2:0   | Chip select write        |
| CSR  | 2:0   | Chip select read         |

**Table 735: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO   | 17:0  | Read data   |

**Table 736: Parameters**

| Name         | Values                      | Description                                                                                                                                                                                                                                          |
|--------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DATA_WIDTH_W | 18 (default)                | Write data word width. Attached to a memory type primitive.                                                                                                                                                                                          |
| DATA_WIDTH_R | 1, 2, 4, 9, 18 (default 9)  | Read data word width. Attached to a memory type primitive.                                                                                                                                                                                           |
| REGMODE      | "NOREG" (default), "OUTREG" | Specifies the register mode for pipelining.                                                                                                                                                                                                          |
| RESETMODE    | "SYNC" (default), "ASYN"    | Reset type. This attribute is attached to a block RAM-type primitive that has a memory size smaller than 9 bits. When set to SYNC, the memory reset is synchronized with the clock. When set to ASYN, the memory reset is asynchronous to the clock. |

**Table 736: Parameters**

| <b>Name</b>         | <b>Values</b>                   | <b>Description</b>                                                                                                                                                                                                                                    |
|---------------------|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CSDECODE_W          | "0b000"                         | Attached to a single-port block RAM primitive. The CSDECODE value determines the decoding value of CS[2:0]. A value set to "000" means that the memory is selected if CS[2:0]=1'B000. This is tied with Write operations.                             |
| CSDECODE_R          | "0b000"                         | Attached to a single-port block RAM primitive. The CSDECODE value determines the decoding value of CS[2:0]. A value set to "000" means that the memory is selected if CS[2:0]=1'B000. This is tied with Read operations.                              |
| GSR                 | "ENABLED" (default), "DISABLED" | Enables or disables the Global Set/Reset (GSR) for all registered primitives. Applicable to registers, PLLs, and memories such as SP8KA and DP8KA.                                                                                                    |
| RESETMODE           | "SYNC" (default), "ASYNC"       | Reset type. This attribute is attached to a block RAM-type primitive that has a memory size smaller than 9 bits. When set to SYNC, the memory reset is synchronized with the clock. When set to ASYNC, the memory reset is asynchronous to the clock. |
| ASYNC_RESET_RELEASE | "SYNC" (default), "ASYNC"       | Reset release when the reset mode is ASYNC.                                                                                                                                                                                                           |

**Table 736: Parameters**

| Name                        | Values                                                                                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INIT_DATA                   | "STATIC" (default),<br>"DYNAMIC"                                                       | Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.<br><br>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.<br><br>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled. |
| INITVAL_00 to<br>INITVAL_1F | "0x00000000000000000000<br>00000000000000000000<br>00000000000000000000<br>0000000000" | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                 |


## PLL

Wrapper for Phase Locked Loop

PLL is capable of frequency synthesis and clock phase management including clock injection delay cancellation.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

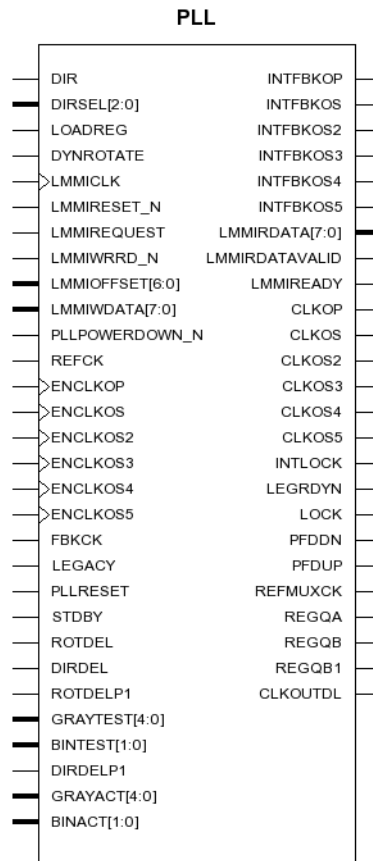**Table 737: Input Ports**

| Name      | Range | Description                                                                                                                                               |
|-----------|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| DIR       | 1     | Valid if MC1_DYN_SOURCE = 1. Specifies direction that CIB_ROTATE changes VCO phase. 0 - phase rotates to later phase. 1 - Phase rotates to earlier phase. |
| DIRSEL    | 2:0   | Valid if MC1_DYN_SOURCE = 1. CIB_DYN_SEL must be stable before initiating a rotation with CIB_LOAD_REG.                                                   |
| LOADREG   | 1     | Valid if MC1_DYN_SOURCE = 1. Initiates a divider output phase shift on negative edge of CIB_LOAD_REG.                                                     |
| DYNROTATE | 1     | Valid if MC1_DYN_SOURCE = 1. Initiates a change from current VCO clock phase to an earlier or later phase on the negative edge of CIB_ROTATE.             |

**Table 737: Input Ports (Continued)**

| Name           | Range | Description                                                                                        |
|----------------|-------|----------------------------------------------------------------------------------------------------|
| LMMICKL        | 1     | LMMI clock from fabric.                                                                            |
| LMMIRESET_N    | 1     | LMMI reset signal to reset the state machine if the IP gets locked.                                |
| LMMIREQUEST    | 1     | LMMI request signal from fabric.                                                                   |
| LMMIWRRD_N     | 1     | LMMI write-high/read-low from fabric.                                                              |
| LMMIOFFSET     | 6:0   | LMMI offset address from fabric. Not all bits are required for an IP.                              |
| LMMIWDATA      | 7:0   | LMMI write data from fabric. Not all bits are required for an IP.                                  |
| PLLPOWERDOWN_N | 1     | Active low to power down PLL from CIB port.                                                        |
| REFCK          | 1     | Reference Clock Input                                                                              |
| ENCLKOP        | 1     | Enable A output (CLKOP). Active high. PLL CIB input.                                               |
| ENCLKOS        | 1     | Enable B output (CLKOS). Active high. PLL CIB input.                                               |
| ENCLKOS2       | 1     | Enable C output (CLKOS2). Active high. PLL CIB input.                                              |
| ENCLKOS3       | 1     | Enable D output (CLKOS3). Active high. PLL CIB input.                                              |
| ENCLKOS4       | 1     | Enable E output (CLKOS4). Active high. PLL CIB input.                                              |
| ENCLKOS5       | 1     | Enable F output (CLKOS5). Active high. PLL CIB input.                                              |
| FBKCK          | 1     | Feedback Clock Input                                                                               |
| LEGACY         | 1     | PLL legacy mode signal. Active high to enter the mode. Enabled by Immi_legacy fuse. PLL CIB input. |
| PLLRESET       | 1     | Active high to reset PLL. Enabled by MC1_PLLRESET. PLL CIB input.                                  |
| STDBY          | 1     | PLL standby signal. Active high to put PLL clocks in low. Not used.                                |
| ROTDEL         | 1     | Rotation Delay                                                                                     |
| DIRDEL         | 1     | Direction Delay                                                                                    |
| ROTDELP1       | 1     | Rotation Delay P1                                                                                  |
| GRAYTEST       | 4:0   | Gray Code Test Enable                                                                              |
| BINTEST        | 1:0   | Binary Code Test Enable                                                                            |
| DIRDELP1       | 1     | Direction Delay Plus One                                                                           |

**Table 737: Input Ports (Continued)**

| Name    | Range | Description        |
|---------|-------|--------------------|
| GRAYACT | 4:0   | Gray Code Active   |
| BINACT  | 1:0   | Binary Code Active |

**Table 738: Output Ports**

| Name           | Range | Description                                  |
|----------------|-------|----------------------------------------------|
| INTFBKOP       | 1     | Internal Feedback Output Positive            |
| INTFBKOS       | 1     | Internal Feedback Output Single-Ended        |
| INTFBKOS2      | 1     | Internal Feedback Output Single-Ended 2      |
| INTFBKOS3      | 1     | Internal Feedback Output Single-Ended 3      |
| INTFBKOS4      | 1     | Internal Feedback Output Single-Ended 4      |
| INTFBKOS5      | 1     | Internal Feedback Output Single-Ended 5      |
| LMMIRDATA      | 7:0   | LMMI read data to fabric.                    |
| LMMIRDATAVALID | 1     | LMMI read data valid to fabric.              |
| LMMIREADY      | 1     | LMMI ready signal to fabric.                 |
| CLKOP          | 1     | Primary (A) output clock.                    |
| CLKOS          | 1     | Secondary (B) output clock.                  |
| CLKOS2         | 1     | Secondary (C) output clock.                  |
| CLKOS3         | 1     | Secondary (D) output clock.                  |
| CLKOS4         | 1     | Secondary (E) output clock.                  |
| CLKOS5         | 1     | Secondary (F) output clock.                  |
| INTLOCK        | 1     | PLL internal lock indicator. PLL CIB output. |
| LEGRDYN        | 1     | PLL lock indicator. PLL CIB output.          |
| LOCK           | 1     |                                              |
| PFDDN          | 1     | PFD DN output signal to PLL CIB port.        |
| PFDUP          | 1     | PFD UP output signal to PLL CIB port.        |
| REFMUXCK       | 1     | Reference CLK mux output. PLL CIB output.    |



**Table 738: Output Ports (Continued)**

| Name     | Range | Description             |
|----------|-------|-------------------------|
| REGQA    | 1     | Register Q Output A     |
| REGQB    | 1     | Register Q Output B     |
| REGQB1   | 1     | Register Q Output B1    |
| CLKOUTDL | 1     | Clock Output Delay Line |

**Table 739: Parameters**

| Name        | Values                                                                                                                                                         | Description                                                                                                                                                            |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BW_CTL_BIAS | "0'b0101" ( <i>default</i> )<br>"0000"                                                                                                                         | Input control signal to tune the bias current of ppath cp, when the bit increase, the bias current increase. This current branch is combined with the lvco_fb current. |
| CLKOP_TRIM  | "0'b0000" ( <i>default</i> )                                                                                                                                   | CLKOP output trim control bits                                                                                                                                         |
| CLKOS_TRIM  | "0'b0000" ( <i>default</i> )                                                                                                                                   | CLKOS output trim control bits                                                                                                                                         |
| CLKOS2_TRIM | "0'b0000" ( <i>default</i> )                                                                                                                                   | CLKOS2 output trim control bits                                                                                                                                        |
| CLKOS3_TRIM | "0'b0000" ( <i>default</i> )                                                                                                                                   | CLKOS3 output trim control bits                                                                                                                                        |
| CLKOS4_TRIM | "0'b0000" ( <i>default</i> )                                                                                                                                   | CLKOS4 output trim control bits                                                                                                                                        |
| CLKOS5_TRIM | "0'b0000" ( <i>default</i> )                                                                                                                                   | CLKOS5 output trim control bits                                                                                                                                        |
| CRIPPLE     | "5P" ( <i>default</i> )<br>"1P"<br>"3P"<br>"7P"<br>"9P"<br>"11P"<br>"13P"<br>"15P"                                                                             | LPF cap control                                                                                                                                                        |
| CSET        | "40P" ( <i>default</i> )<br>"8P"<br>"12P"<br>"16P"<br>"20P"<br>"24P"<br>"28P"<br>"32P"<br>"36P"<br>"44P"<br>"48P"<br>"52P"<br>"56P"<br>"60P"<br>"64P"<br>"68P" | LPF cap control                                                                                                                                                        |

**Table 739: Parameters**

| Name         | Values                            | Description                                                                        |
|--------------|-----------------------------------|------------------------------------------------------------------------------------|
| DELAY_CTRL   | "200PS" (default)<br>"300PS"      | Control signal to adjust the delay of the PFD: default 1b0 = 200 ps; 1b1 = 300 ps. |
| DELA         | "0" (default)                     | Output divider phase shift. Works with Immi_diva.                                  |
| DELB         | "0" (default)                     | Output divider phase shift. Works with Immi_divb.                                  |
| DELC         | "0" (default)                     | Output divider phase shift. Works with Immi_divc.                                  |
| DELD         | "0" (default)                     | Output divider phase shift. Works with Immi_divd.                                  |
| DELE         | "0" (default)                     | Output divider phase shift. Works with Immi_dive.                                  |
| DELF         | "0" (default)                     | Output divider phase shift. Works with Immi_divf.                                  |
| DIRECTION    | "DISABLED" (default)<br>"ENABLED" | LMMI equivalent of CIB direction signal                                            |
| DIVA         | "0" (default)                     | Output dividers for CLKOP                                                          |
| DIVB         | "0" (default)                     | Output dividers for CLKOS                                                          |
| DIVC         | "0" (default)                     | Output dividers for CLKOS2                                                         |
| DIVD         | "0" (default)                     | Output dividers for CLKOS3                                                         |
| DIVE         | "0" (default)                     | Output dividers for CLKOS4                                                         |
| DIVF         | "0" (default)                     | Output dividers for CLKOS5                                                         |
| DYN_SEL      | "0'b000" (default)                | Dynamic phase selection                                                            |
| DYN_SOURCE   | "STATIC" (default)<br>"DYNAMIC"   | 1'b1 selects CIB signals for dynamic phase shift.                                  |
| ENCLK_CLKOP  | "DISABLED" (default)<br>"ENABLED" | Bit 0. Clock output enable. Active high.                                           |
| ENCLK_CLKOS  | "DISABLED" (default)<br>"ENABLED" | Bit 1. Clock output enable. Active high.                                           |
| ENCLK_CLKOS2 | "DISABLED" (default)<br>"ENABLED" | Bit 2. Clock output enable. Active high.                                           |
| ENCLK_CLKOS3 | "DISABLED" (default)<br>"ENABLED" | Bit 3. Clock output enable. Active high.                                           |
| ENCLK_CLKOS4 | "DISABLED" (default)<br>"ENABLED" | Bit 4. Clock output enable. Active high.                                           |
| ENCLK_CLKOS5 | "DISABLED" (default)<br>"ENABLED" | Bit 5. Clock output enable. Active high.                                           |
| ENABLE_SYNC  | "DISABLED" (default)<br>"ENABLED" | 1'b1 enables output sync with CLKOP.                                               |
| FAST_LOCK_EN | "ENABLED" (default)<br>"DISABLED" | Enables signal for fast lock.                                                      |
| V2I_1V_EN    | "DISABLED" (default)<br>"ENABLED" | 1V supply enable or disable                                                        |

**Table 739: Parameters**

| Name              | Values                                    | Description                                                                                                                                                                                                                                                                       |
|-------------------|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FBK_CUR_BLE       | "0'b00000000"<br>(default)                | Bleeding current for PI to adjust the linearity                                                                                                                                                                                                                                   |
| FBK_EDGE_SEL      | "POSITIVE" (default)<br>"NEGATIVE"        | Select the positive or negative phase of PI output. 0: positive phase; 1: negative phase                                                                                                                                                                                          |
| FBK_IF_TIMING_CTL | "0'b00" (default)                         | Interface timing control for feedback divider                                                                                                                                                                                                                                     |
| FBK_INTEGER_MODE  | "DISABLED" (default)<br>"ENABLED"         | Enable the integer mode for feedback divider                                                                                                                                                                                                                                      |
| FBK_MASK          | "0'b00001000"<br>(default)<br>"00000000"  | Minimum divider ratio control word for feedback divider. For example if n_pll[7:0] or mmd_dig[7:0] is less than Immi_fbk_mask[7:0], then the MMD divider ratio is determined by Immi_fbk_mask[7:0]. Otherwise the divider ratio will be determined by n_pll[7:0] or mmd_dig[7:0]. |
| FBK_MMD_DIG       | "8" (default)<br>"0"                      | MMD divider ratio setting in integer mode                                                                                                                                                                                                                                         |
| FBK_MMD_PULS_CTL  | "0'b0000" (default)                       | Pulse width control for MMD output clock. If Immi_fbk_mmd_puls_ctl[3:0]=4'b0110, it means that there's 6 VCO cycles in the MMD output clock.                                                                                                                                      |
| FBK_MODE          | "0'b00" (default)                         | Reserved floating control bits                                                                                                                                                                                                                                                    |
| FBK_PI_BYPASS     | "NOT_BYPASSED"<br>(default)<br>"BYPASSED" | PI bypass control bit. 0; PI not bypass, 1; PI bypass; it should be connected to Immi_ssc_pi_bypass                                                                                                                                                                               |
| FBK_PI_RC         | "0'b1100" (default)<br>"0000"             | RC time constant control in PI                                                                                                                                                                                                                                                    |
| FBK_PR_CC         | "0'b0000" (default)                       | Current control for PI to adjust the linearity                                                                                                                                                                                                                                    |
| FBK_PR_IC         | "0'b1000" (default)<br>"0000"             | Bias current control for PI                                                                                                                                                                                                                                                       |
| FBK_RSV           | "0'b0000000000000000"<br>0" (default)     | Reserved control bit for feedback divider.                                                                                                                                                                                                                                        |
| FLOAT_CP          | "DISABLED" (default)<br>"ENABLED"         | Active high to tri-state the ICP output.                                                                                                                                                                                                                                          |
| FLOCK_CTRL        | "2X" (default)<br>"1X"<br>"4X"<br>"8X"    | 2 bits control the fast lock period, 00 is 1x, 01 is 2x, 10 is 4x and 11 is 8x                                                                                                                                                                                                    |
| FLOCK_EN          | "ENABLED" (default)<br>"DISABLED"         | 1b1 to enable fast lock; after char, default to enabled                                                                                                                                                                                                                           |
| FLOCK_SRC_SEL     | "REFCLK" (default)<br>"FBCLK"             | Fast lock source selection; 0 is ref clock; 1 is feedback clock                                                                                                                                                                                                                   |
| FORCE_FILTER      | "DISABLED" (default)<br>"ENABLED"         | force internal vctrl=analog pad                                                                                                                                                                                                                                                   |

**Table 739: Parameters**

| Name                | Values                                                                                                              | Description                                                                        |
|---------------------|---------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| I_CTRL              | "10UA" (default)<br>"8P3UA"<br>"14P9UA"<br>"12P4UA"<br>"19P8UA"<br>"17P3UA"<br>"24P8UA"<br>"22P3UA"                 | Current tuning                                                                     |
| IPI_CMP             | "0'b1000" (default)<br>"0000"                                                                                       | i-path CP compensate up/dn mismatch at process variation                           |
| IPI_CMPN            | "0'b0011" (default)<br>"0000"                                                                                       | Input control bits to compensate the i-path bias current                           |
| IPI_COMP_EN         | "DISABLED" (default)<br>"ENABLED"                                                                                   | Enable ipi_cmp                                                                     |
| IPP_CTRL            | "0'b1000" (default)<br>"0000"                                                                                       | Input control signal to tune the bias current of ppath cp                          |
| IPP_SEL             | "0'b1111" (default)<br>"0000"                                                                                       | Input control signal to select which ppath cp is on, there are 4 branches at max   |
| KP_VCO              | "0'b00000" (default)                                                                                                | ICO gain controls                                                                  |
| LDT_INT_LOCK_STICKY | "DISABLED" (default)<br>"ENABLED"                                                                                   | Active high to have INT_LOCK_STICKY. Default to be 1b1. 1b0 is for PDE/DE purpose. |
| LDT_LOCK            | "98304CYC" (default)<br>"24576CYC"<br>"6144CYC"<br>"1536CYC"                                                        | Frequency lock-detector resolution sensitivity                                     |
| LDT_LOCK_SEL        | "U_FREQ" (default)<br>"UFREQ"<br>"SPHASE"<br>"SFREQ"<br>"UFREQ_SPHASE"<br>"U_PHASE"<br>"S_FREQ"<br>"U_FREQ_S_PHASE" | Lock-detector type select                                                          |
| LEGACY_ATT          | "DISABLED" (default)<br>"ENABLED"                                                                                   | Active HIGH; enable Legacy mode                                                    |
| LOAD_REG            | "DISABLED" (default)<br>"ENABLED"                                                                                   | For load control of divider phase control                                          |
| OPENLOOP_EN         | "DISABLED" (default)<br>"ENABLED"                                                                                   | Open loop mode enable for mfg testing                                              |
| PHIA                | "0" (default)                                                                                                       | Select VCO phase-shift (0..7) for A section                                        |
| PHIB                | "0" (default)                                                                                                       | Select VCO phase-shift (0..7) for B section                                        |
| PHIC                | "0" (default)                                                                                                       | Select VCO phase-shift (0..7) for C section                                        |
| PHID                | "0" (default)                                                                                                       | Select VCO phase-shift (0..7) for D section                                        |

**Table 739: Parameters**

| Name             | Values                                         | Description                                                                                          |
|------------------|------------------------------------------------|------------------------------------------------------------------------------------------------------|
| PHIE             | "0" ( <i>default</i> )                         | Select VCO phase-shift (0..7) for E section                                                          |
| PHIF             | "0" ( <i>default</i> )                         | Select VCO phase-shift (0..7) for F section                                                          |
| PLLPDN_EN        | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | PLL Power-Down Enable                                                                                |
| PLLPD_N          | "UNUSED" ( <i>default</i> )<br>"USED"          | Active LOW PLL power-down; PLL is NOT USED                                                           |
| PLLRESET_ENA     | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Active HIGH; Enable PLLRESET CIB Signal                                                              |
| REF_INTEGER_MODE | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Integer mode control bit for reference clock pre-divider. Default to Integer, 1b1.                   |
| REF_MASK         | "0'b00000000" ( <i>default</i> )               | Minimum divider ratio control word for reference pre-divider                                         |
| REF_MMD_DIG      | "8" ( <i>default</i> )<br>"0"                  | MMD divider ratio setting for reference pre-divider when Immi_ref_integer_mode=1                     |
| REF_MMD_IN       | "0'b00001000" ( <i>default</i> )<br>"00000000" | MMD divider ratio setting for reference pre-divider when Immi_ref_integer_mode=0                     |
| REF_MMD_PULS_CTL | "0'b0000" ( <i>default</i> )                   | Pulse width control for MMD output clock in reference pre-divider                                    |
| REF_TIMING_CTL   | "0'b00" ( <i>default</i> )                     | Interface timing control for reference divider. Default to be 2b00.                                  |
| REFIN_RESET      | "SET" ( <i>default</i> )<br>"RESET"            | Lmmi_refin_reset = 1b1 and with switching of REFin_SEL (either L-H or H-L) will generate a PLL reset |
| RESERVED         | "0'b00000000" ( <i>default</i> )               | Reserved fuses for PLL internal setting                                                              |
| RESET_LF         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | LPF reset enable                                                                                     |
| ROTATE           | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | For VCO phase rotation                                                                               |
| SEL_OUTA         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Select output to CLKOP                                                                               |
| SEL_OUTB         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Select output to CLKOS                                                                               |
| SEL_OUTC         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Select output to CLKOS2                                                                              |
| SEL_OUTD         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Select output to CLKOS3                                                                              |
| SEL_OUTE         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Select output to CLKOS4                                                                              |
| SEL_OUTF         | "DISABLED" ( <i>default</i> )<br>"ENABLED"     | Select output to CLKOS5                                                                              |

**Table 739: Parameters**

| Name                  | Values                                              | Description                                                                                         |
|-----------------------|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| SLEEP                 | "DISABLED" (default)<br>"ENABLED"                   | Active HIGH: Enable STOP PMU signal                                                                 |
| SSC_DITHER            | "DISABLED" (default)<br>"ENABLED"                   | Dither enable or disable for SDM                                                                    |
| SSC_EN_CENTER_IN      | "DOWN_TRIANGLE" (default)<br>"CENTER_TRIANGLE"<br>" | Down triangle or center triangle control bit in SSC profile generator.                              |
| SSC_EN_SDM            | "ENABLED" (default)<br>"DISABLED"                   | Enable or disable SDM                                                                               |
| SSC_EN_SSC            | "DISABLED" (default)<br>"ENABLED"                   | Enable or disabled SSC profile generator                                                            |
| SSC_F_CODE            | "0'b0000000000000000"<br>" (default)                | Fractional part of the feedback divider ratio                                                       |
| SSC_N_CODE            | "0'b000010100" (default)<br>"000000000"             | Integer part of the feedback divider ratio                                                          |
| SSC_ORDER             | "SDM_ORDER2" (default)<br>"SDM_ORDER1"              | SDM order control bit; 0 - SDM order = 1; 1 - SDM order = 2                                         |
| SSC_PI_BYPASS         | "NOT_BYPASSED" (default)<br>"BYPASSED"              | PI bypass control bit. 0; PI not bypass, 1; PI bypass; it should be connected to Immi_fbk_pi_bypass |
| SSC_REG_WEIGHTING_SEL | "0'b000" (default)                                  | Weighting control bit for Immi_ssc_step_in                                                          |
| SSC_SQUARE_MODE       | "DISABLED" (default)<br>"ENABLED"                   | Two-point FSK modulation control bit                                                                |
| SSC_STEP_IN           | "0'b0000000" (default)                              | SSC modulation depth control bit                                                                    |
| SSC_TBASE             | "0'b0000000000000000" (default)                     | SSC modulation frequency control. The frequency should be 30-33 kHz.                                |
| STDBY_ATT             | "DISABLED" (default)<br>"ENABLED"                   | Enable STDBY CIB signal                                                                             |
| TRIMOP_BYPASS_N       | "BYPASSED" (default)<br>"USED"                      | 1b0: bypass CLKOP output trim                                                                       |
| TRIMOS_BYPASS_N       | "BYPASSED" (default)<br>"USED"                      | 1b0: bypass CLKOS output trim                                                                       |
| TRIMOS2_BYPASS_N      | "BYPASSED" (default)<br>"USED"                      | 1b0: bypass CLKOS2 output trim                                                                      |
| TRIMOS3_BYPASS_N      | "BYPASSED" (default)<br>"USED"                      | 1b0: bypass CLKOS3 output trim                                                                      |
| TRIMOS4_BYPASS_N      | "BYPASSED" (default)<br>"USED"                      | 1b0: bypass CLKOS4 output trim                                                                      |

**Table 739: Parameters**

| Name             | Values                                                                                                                                                                                                         | Description                                                                                                                               |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| TRIMOS5_BYPASS_N | "BYPASSED" ( <i>default</i> )<br>"USED"                                                                                                                                                                        | 1b0: bypass CLKOS5 output trim                                                                                                            |
| V2I_KVCO_SEL     | "85" ( <i>default</i> )<br>"40"<br>"45"<br>"50"<br>"55"<br>"60"<br>"65"<br>"70"<br>"75"<br>"80"<br>"90"<br>"95"<br>"100"<br>"105"<br>"110"<br>"115"                                                            | Mlk choose such as frequency range of ICO from 800 MHz - 1600 MHz over PVT. Mlk larger (more current withdraw from ICO), ICO runs slower. |
| V2I_PP_ICTRL     | "0'b00110" ( <i>default</i> )<br>"0'b00000"                                                                                                                                                                    | P-path v2i gm control                                                                                                                     |
| V2I_PP_RES       | "10K" ( <i>default</i> )<br>"11P3K"<br>"11K"<br>"10P7K"<br>"10P3K"<br>"9P7K"<br>"9P3K"<br>"9K"                                                                                                                 | P-path high frequency pole resistor control                                                                                               |
| CLKMUX_FB        | "CMUX_CLKOP" ( <i>default</i> )<br>"CMUX_CLKOS"<br>"CMUX_CLKOS2"<br>"CMUX_CLKOS3"<br>"CMUX_CLKOS4"<br>"CMUX_CLKOS5"                                                                                            | Fuses used to determine the feedback selection in the wake up stage, center mux about the clock tree feedback                             |
| SEL_FBK          | "DIVA" ( <i>default</i> )<br>"DIVB"<br>"DIVC"<br>"DIVD"<br>"DIVE"<br>"DIVF"<br>"RESERVED"<br>"FBKCLK0"<br>"FBKCLK1"<br>"FBKCLK2"<br>"FBKCLK3"<br>"FBKCLK4"<br>"FBKCLK5"<br>"FBKCLK6"<br>"FBKCLK7"<br>"FBKCLK8" | Select feedback clock                                                                                                                     |

**Table 739: Parameters**

| Name                   | Values                                           | Description                                                                                                             |
|------------------------|--------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| DIV_DEL                | "0'b0000001" (default)<br>"0000000"              | The internal path delay selection path                                                                                  |
| PHASE_SEL_DEL          | "0'b000" (default)                               | The internal phase delay selection path                                                                                 |
| PHASE_SEL_DEL_P1       | "0'b000" (default)                               | The internal phase delay selection path1                                                                                |
| EXTERNAL_DIVIDE_FACTOR | "0" (default)                                    | External divider value for feedback clock                                                                               |
| INTFBKDEL_SEL          | "DISABLED" (default)<br>"ENABLED"                | Associated with the attribute INTFBKDEL_SEL. 1'b1 to enable the internal path switching during POR/Sleep/Standby modes. |
| PMU_WAITFORLOCK        | "ENABLED" (default)<br>"DISABLED"                | Sync with pmu to wait for PLL lock.                                                                                     |
| REF_OSC_CTRL           | "3P2" (default)<br>"1P0"                         | Select monitoring clock frequency: 3.2 MHz or 1 MHz.                                                                    |
| SIM_FLOAT_PRECISION    | "0.0001" (default)<br>"0.001"<br>"0.01"<br>"0.1" | Tolerance control for frequency locking.                                                                                |
| CONFIG_WAIT_FOR_LOCK   | "DISABLED" (default)<br>"ENABLED"                | Wait for PLL lock during configuration<br>Note: This attribute is not available in Avant.                               |

**PLL Device Constraints:**

Below are the device constraint equations used by the timer for the periods, phases, and delays of the output clocks based on user settings. START\_PERIOD must be provided as a constraint. These equations only apply for the integer mode divider values.

For CLKOP (generated clock):

- ▶  $\text{ADJUSTED\_PERIOD} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (\text{DIVA} + 1) * (1/(\text{FBK\_MMD\_DIG} + 1))$
- ▶  $\text{ADJUSTED\_PHASE} = ((\text{PHIA} * 45)/360) * \text{ADJUSTED\_PERIOD}$
- ▶  $\text{ADJUSTED\_DELAY} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (1/(\text{FBK\_MMD\_DIG} + 1)) * \text{DELA}$

For CLKOS (generated clock):

- ▶  $\text{ADJUSTED\_PERIOD} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (\text{DIVB} + 1) * (1/(\text{FBK\_MMD\_DIG} + 1))$
- ▶  $\text{ADJUSTED\_PHASE} = ((\text{PHIB} * 45)/360) * \text{ADJUSTED\_PERIOD}$
- ▶  $\text{ADJUSTED\_DELAY} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (1/(\text{FBK\_MMD\_DIG} + 1)) * \text{DELB}$

For CLKOS2 (generated clock):

- ▶  $\text{ADJUSTED\_PERIOD} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (\text{DIVC} + 1) * (1/(\text{FBK\_MMD\_DIG} + 1))$



- ▶  $\text{ADJUSTED\_PHASE} = ((\text{PHIC} * 45) / 360) * \text{ADJUSTED\_PERIOD}$
- ▶  $\text{ADJUSTED\_DELAY} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1)) * \text{DELC}$

For CLKOS3 (generated clock):

- ▶  $\text{ADJUSTED\_PERIOD} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (\text{DIVD} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1))$
- ▶  $\text{ADJUSTED\_PHASE} = ((\text{PHID} * 45) / 360) * \text{ADJUSTED\_PERIOD}$
- ▶  $\text{ADJUSTED\_DELAY} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1)) * \text{DELD}$

For CLKOS4 (generated clock):

- ▶  $\text{ADJUSTED\_PERIOD} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (\text{DIVE} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1))$
- ▶  $\text{ADJUSTED\_PHASE} = ((\text{PHIE} * 45) / 360) * \text{ADJUSTED\_PERIOD}$
- ▶  $\text{ADJUSTED\_DELAY} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1)) * \text{DELE}$

For CLKOS5 (generated clock):

- ▶  $\text{ADJUSTED\_PERIOD} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (\text{DIVF} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1))$
- ▶  $\text{ADJUSTED\_PHASE} = ((\text{PHIF} * 45) / 360) * \text{ADJUSTED\_PERIOD}$
- ▶  $\text{ADJUSTED\_DELAY} = \text{START\_PERIOD} * (\text{REF\_MMD\_DIG} + 1) * (1 / (\text{FBK\_MMD\_DIG} + 1)) * \text{DELF}$


## PLLA

Wrapper for Phase Locked Loop

PLLA is capable of frequency synthesis and clock phase management including clock injection delay cancellation.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

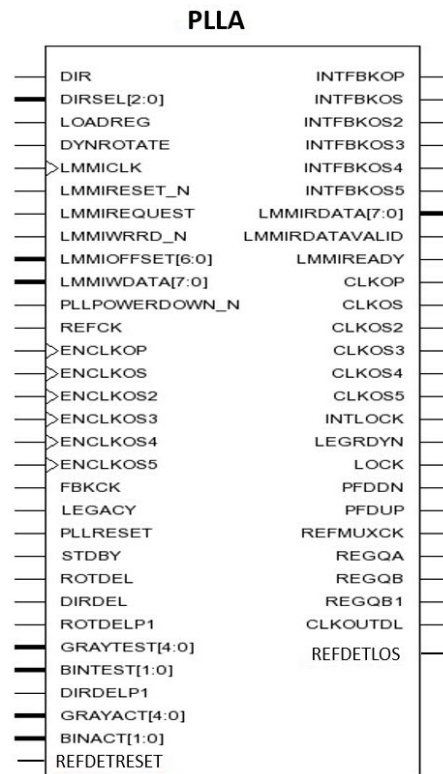**Table 740: Input Ports**

| Name        | Range | Description                                                                                                                                            |
|-------------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| DIR         | 1     | Valid if MC1_DYN_SOURCE = 1. Specify direction that CIB_ROTATE changes VCO phase. 0 - phase rotates to later phase. 1 - Phase rotates to earlier phase |
| DIRSEL      | 2:0   | Valid if MC1_DYN_SOURCE = 1. CIB_DYN_SEL must be stable before initiating a rotation with CIB_LOAD_REG                                                 |
| LOADREG     | 1     | Valid if MC1_DYN_SOURCE = 1. Initiate a divider output phase shift on negative edge of CIB_LOAD_REG                                                    |
| DYNROTATE   | 1     | Valid if MC1_DYN_SOURCE = 1. Initiate a change from current VCO clock phase to an earlier or later phase on the negative edge of CIB_ROTATE            |
| LMMICLK     | 1     | LMMI Clock from Fabric                                                                                                                                 |
| LMMIRESET_N | 1     | LMMI Reset Signal to reset the state machine if the IP gets locked                                                                                     |
| LMMIREQUEST | 1     | LMMI Request signal from Fabric                                                                                                                        |

**Table 740: Input Ports (Continued)**

| Name           | Range | Description                                                                                       |
|----------------|-------|---------------------------------------------------------------------------------------------------|
| LMMIWRRD_N     | 1     | LMMI Write High / Read Low from Fabric                                                            |
| LMMIOFFSET     | 6:0   | LMMI Offset Address from Fabric, not all bits are required for an IP                              |
| LMMIWDATA      | 7:0   | LMMI Write Data from Fabric, not all bits are required for an IP                                  |
| PLLPOWERDOWN_N | 1     | Active low to power down PLL from CIB port                                                        |
| REFCK          | 1     | Reference Clock Input                                                                             |
| ENCLKOP        | 1     | Enable A output (CLKOP). Active high. PLL CIB input                                               |
| ENCLKOS        | 1     | Enable B output (CLKOS). Active high. PLL CIB input                                               |
| ENCLKOS2       | 1     | Enable C output (CLKOS2). Active high. PLL CIB input                                              |
| ENCLKOS3       | 1     | Enable D output (CLKOS3). Active high. PLL CIB input                                              |
| ENCLKOS4       | 1     | Enable E output (CLKOS4). Active high. PLL CIB input                                              |
| ENCLKOS5       | 1     | Enable F output (CLKOS5). Active high. PLL CIB input                                              |
| FBKCK          | 1     | Feedback Clock Input                                                                              |
| LEGACY         | 1     | PLL legacy mode signal. Active high to enter the mode. Enabled by lmmi_legacy fuse. PLL CIB input |
| PLLRESET       | 1     | Active high to reset PLL. Enabled by MC1_PLLRESET. PLL CIB input                                  |
| STDBY          | 1     | PLL standby signal. Active high to put PLL clocks in low. Not used                                |
| ROTDEL         | 1     | Rotation Delay                                                                                    |
| DIRDEL         | 1     | Direction Delay                                                                                   |
| ROTDELP1       | 1     | Rotation Delay Plus One                                                                           |
| GRAYTEST       | 4:0   | Gray Code Test Mode Enable                                                                        |
| BINTEST        | 1:0   | Binary Code Test Mode Enable                                                                      |
| DIRDELP1       | 1     | Direction Delay Plus One                                                                          |
| GRAYACT        | 4:0   | Gray Code Active Indicator                                                                        |
| BINACT         | 1:0   | Binary Code Active Indicator                                                                      |
| REFDETRESET    | 1     | Reference Detector Reset                                                                          |

**Table 741: Output Ports**

| <b>Name</b>    | <b>Range</b> | <b>Description</b>                            |
|----------------|--------------|-----------------------------------------------|
| INTFBKOP       | 1            | Internal Feedback Clock Output Positive       |
| INTFBKOS       | 1            | Internal Feedback Clock Output Single-Ended   |
| INTFBKOS2      | 1            | Internal Feedback Clock Output Single-Ended 2 |
| INTFBKOS3      | 1            | Internal Feedback Clock Output Single-Ended 3 |
| INTFBKOS4      | 1            | Internal Feedback Clock Output Single-Ended 4 |
| INTFBKOS5      | 1            | Internal Feedback Clock Output Single-Ended 5 |
| LMMIRDATA      | 7:0          | LMMI Read Data to Fabric                      |
| LMMIRDATAVALID | 1            | LMMI Read Date Valid to Fabric                |
| LMMIREADY      | 1            | LMMI Ready signal to Fabric                   |
| CLKOP          | 1            | Primary (A) output clock                      |
| CLKOS          | 1            | Secondary (B) output clock                    |
| CLKOS2         | 1            | Secondary (C) output clock                    |
| CLKOS3         | 1            | Secondary (D) output clock                    |
| CLKOS4         | 1            | Secondary (E) output clock                    |
| CLKOS5         | 1            | Secondary (F) output clock                    |
| INTLOCK        | 1            | PLL internal lock indicator. PLL CIB output   |
| LEGRDYN        | 1            | Legacy Ready                                  |
| LOCK           | 1            | PLL lock indicator. PLL CIB output            |
| PFD DN         | 1            | PFD DN output signal to PLL CIB port          |
| PFDUP          | 1            | PFD UP output signal to PLL CIB port          |
| REFMUXCK       | 1            | Reference CLK mux output. PLL CIB output      |
| REGQA          | 1            | Register Q Output A                           |
| REGQB          | 1            | Register Q Output B                           |
| REGQB1         | 1            | Register Q Output B1                          |
| CLKOUTDL       | 1            | Clock Output Delay Line                       |
| REFDETLOS      | 1            | Reference Detect Loss Indicator               |

**Table 742: Parameters**

| <b>Name</b> | <b>Values</b>                                                                                                                                         | <b>Description</b>                                                                                                                                                            |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BW_CTL_BIAS | "0b0101" (default)<br>"0000"                                                                                                                          | Input control signal to tune the bias current of ppath cp, when the bit increases, the bias current also increases. This current branch is combined with the lvco_fb current. |
| CLKOP_TRIM  | "0b0000" (default)                                                                                                                                    | CLKOP output trim control bits                                                                                                                                                |
| CLKOS_TRIM  | "0b0000" (default)                                                                                                                                    | CLKOS output trim control bits                                                                                                                                                |
| CLKOS2_TRIM | "0b0000" (default)                                                                                                                                    | CLKOS2 output trim control bits                                                                                                                                               |
| CLKOS3_TRIM | "0b0000" (default)                                                                                                                                    | CLKOS3 output trim control bits                                                                                                                                               |
| CLKOS4_TRIM | "0b0000" (default)                                                                                                                                    | CLKOS4 output trim control bits                                                                                                                                               |
| CLKOS5_TRIM | "0b0000" (default)                                                                                                                                    | CLKOS5 output trim control bits                                                                                                                                               |
| CRIPPLE     | "5P" (default)<br>"1P"<br>"3P"<br>"7P"<br>"9P"<br>"11P"<br>"13P"<br>"15P"                                                                             | LPF cap control                                                                                                                                                               |
| CSET        | "40P" (default)<br>"8P"<br>"12P"<br>"16P"<br>"20P"<br>"24P"<br>"28P"<br>"32P"<br>"36P"<br>"44P"<br>"48P"<br>"52P"<br>"56P"<br>"60P"<br>"64P"<br>"68P" | LPF cap control                                                                                                                                                               |

**Table 742: Parameters (Continued)**

| <b>Name</b>  | <b>Values</b>                     | <b>Description</b>                                                                 |
|--------------|-----------------------------------|------------------------------------------------------------------------------------|
| DELAY_CTRL   | "200PS" (default)<br>"300PS"      | Control signal to adjust the delay of the PFD;<br>default 1b0 = 200ps; 1b1 = 300ps |
| DELA         | "0" (default)                     | Output divider phase shift (work with Immi_diva)                                   |
| DELB         | "0" (default)                     | Output divider phase shift (work with Immi_divb)                                   |
| DELC         | "0" (default)                     | Output divider phase shift (work with Immi_divc)                                   |
| DELD         | "0" (default)                     | Output divider phase shift (work with Immi_divd)                                   |
| DELE         | "0" (default)                     | Output divider phase shift (work with Immi_dive)                                   |
| DELF         | "0" (default)                     | Output divider phase shift (work with Immi_divf)                                   |
| DIRECTION    | "DISABLED" (default)<br>"ENABLED" | Immi equivalent of CIB direction signal                                            |
| DIVA         | "0" (default)                     | Output dividers for clkop                                                          |
| DIVB         | "0" (default)                     | Output dividers for clkos                                                          |
| DIVC         | "0" (default)                     | Output dividers for clkos2                                                         |
| DIVD         | "0" (default)                     | Output dividers for clkos3                                                         |
| DIVE         | "0" (default)                     | Output dividers for clkos4                                                         |
| DIVF         | "0" (default)                     | Output dividers for clkos5                                                         |
| DYN_SEL      | "0b000" (default)                 | Select dynamic phase selection                                                     |
| DYN_SOURCE   | "STATIC" (default)<br>"DYNAMIC"   | 1'b1 select CIB signals for dynamic phase shift                                    |
| ENCLK_CLKOP  | "DISABLED" (default)<br>"ENABLED" | Bit 0. Active HIGH: Clock output enable                                            |
| ENCLK_CLKOS  | "DISABLED" (default)<br>"ENABLED" | Bit 1. Active HIGH: Clock output enable                                            |
| ENCLK_CLKOS2 | "DISABLED" (default)<br>"ENABLED" | Bit 2. Active HIGH: Clock output enable                                            |
| ENCLK_CLKOS3 | "DISABLED" (default)<br>"ENABLED" | Bit 3. Active HIGH: Clock output enable                                            |
| ENCLK_CLKOS4 | "DISABLED" (default)<br>"ENABLED" | Bit 4. Active HIGH: Clock output enable                                            |
| ENCLK_CLKOS5 | "DISABLED" (default)<br>"ENABLED" | Bit 5. Active HIGH: Clock output enable                                            |
| ENABLE_SYNC  | "DISABLED" (default)<br>"ENABLED" | 1'b1 enable output(s) sync with clkop                                              |

**Table 742: Parameters (Continued)**

| Name              | Values                                 | Description                                                                                                                                                                                                                                                                                                                                                        |
|-------------------|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FAST_LOCK_EN      | "ENABLED" (default)<br>"DISABLED"      | Enable signal for fast lock                                                                                                                                                                                                                                                                                                                                        |
| V2I_1V_EN         | "DISABLED" (default)<br>"ENABLED"      | 1 V supply enable or disable                                                                                                                                                                                                                                                                                                                                       |
| FBK_CUR_BLE       | "0b00000000" (default)                 | Bleeding current for PI to adjust the linearity                                                                                                                                                                                                                                                                                                                    |
| FBK_EDGE_SEL      | "POSITIVE" (default)<br>"NEGATIVE"     | Select the positive or negative phase of PI output.<br>0: positive phase; 1: negative phase                                                                                                                                                                                                                                                                        |
| FBK_IF_TIMING_CTL | "0b00" (default)                       | Interface timing control for feedback divider                                                                                                                                                                                                                                                                                                                      |
| FBK_INTEGER_MODE  | "DISABLED" (default)<br>"ENABLED"      | Enable the integer mode for feedback divider                                                                                                                                                                                                                                                                                                                       |
| FBK_MASK          | "0b00001000" (default)<br>"00000000"   | Minimum divider ratio control word for feedback divider. For example, if <code>n_pll[7:0]</code> or <code>mmd_dig[7:0]</code> is less than <code>Immi_fbk_mask[7:0]</code> , then the MMD divider ratio is determined by <code>Immi_fbk_mask[7:0]</code> . Otherwise, the divider ratio will be determined by <code>n_pll[7:0]</code> or <code>mmd_dig[7:0]</code> |
| FBK_MMD_DIG       | "8" (default)<br>"0"                   | MMD divider ratio setting in integer mode                                                                                                                                                                                                                                                                                                                          |
| FBK_MMD_PULS_CTL  | "0b0000" (default)                     | Pulse width control for MMD output clock. If <code>Immi_fbk_mmd_puls_ctl[3:0]=4'b0110</code> , it means that there are 6 VCO cycles in the MMD output clock                                                                                                                                                                                                        |
| FBK_MODE          | "0b00" (default)                       | Reserved floating control bits                                                                                                                                                                                                                                                                                                                                     |
| FBK_PI_BYPASS     | "NOT_BYPASSED" (default)<br>"BYPASSED" | PI bypass control bit. 0: PI not bypass, 1: PI bypass; it should be connected to <code>Immi_ssc_pi_bypass</code>                                                                                                                                                                                                                                                   |
| FBK_PI_RC         | "0b1100" (default)<br>"0000"           | RC time constant control in PI                                                                                                                                                                                                                                                                                                                                     |
| FBK_PR_CC         | "0b0000" (default)                     | Current control for PI to adjust the linearity                                                                                                                                                                                                                                                                                                                     |
| FBK_PR_IC         | "0b1000" (default)<br>"0000"           | Bias current control for PI                                                                                                                                                                                                                                                                                                                                        |
| FBK_RSV           | "0b0000000000000000" (default)         | Reserved control bit for feedback divider                                                                                                                                                                                                                                                                                                                          |
| FLOAT_CP          | "DISABLED" (default)<br>"ENABLED"      | Active HIGH to tri-state the ICP output                                                                                                                                                                                                                                                                                                                            |

**Table 742: Parameters (Continued)**

| Name                | Values                                                                                              | Description                                                                       |
|---------------------|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| FLOCK_CTRL          | "2X" (default)<br>"1X"<br>"4X"<br>"8X"                                                              | 2 bits control the fast lock period, 00 is 1x, 01 is 2x, 10 is 4x and 11 is 8x    |
| FLOCK_EN            | "ENABLED" (default)<br>"DISABLED"                                                                   | 1b1 to enable fast lock; after char, default to enabled                           |
| FLOCK_SRC_SEL       | "REFCLK" (default)<br>"FBCLK"                                                                       | Fast lock source selection; 0 is ref clock; 1 is feedback clock                   |
| FORCE_FILTER        | "DISABLED" (default)<br>"ENABLED"                                                                   | Force internal vctrl=analog pad                                                   |
| I_CTRL              | "10UA" (default)<br>"8P3UA"<br>"14P9UA"<br>"12P4UA"<br>"19P8UA"<br>"17P3UA"<br>"24P8UA"<br>"22P3UA" | Current tuning                                                                    |
| IPI_CMP             | "0b1000" (default)<br>"0000"                                                                        | i-path CP compensate up/dn mismatch at process variation                          |
| IPI_CMPN            | "0b0011" (default)<br>"0000"                                                                        | Input control bits to compensate the i-path bias current                          |
| IPI_COMP_EN         | "DISABLED" (default)<br>"ENABLED"                                                                   | Enable ipi_cmp                                                                    |
| IPP_CTRL            | "0b1000" (default)<br>"0000"                                                                        | Input control signal to tune the bias current of ppath cp                         |
| IPP_SEL             | "0b1111" (default)<br>"0000"                                                                        | Input control signal to select which ppath cp is on, there are 4 branches at max  |
| KP_VCO              | "0b00000" (default)                                                                                 | ICO gain controls                                                                 |
| LDT_INT_LOCK_STICKY | "DISABLED" (default)<br>"ENABLED"                                                                   | Active HIGH to have INT_LOCK_STICKY. Default to be 1b1. 1b0 is for PDE/DE purpose |
| LDT_LOCK            | "98304CYC" (default)<br>"24576CYC"<br>"6144CYC"<br>"1536CYC"                                        | Frequency lock-detector resolution sensitivity                                    |



**Table 742: Parameters (Continued)**

| Name         | Values                                                                                                              | Description                                |
|--------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| LDT_LOCK_SEL | "U_FREQ" (default)<br>"UFREQ"<br>"SPHASE"<br>"SFREQ"<br>"UFREQ_SPHASE"<br>"U_PHASE"<br>"S_FREQ"<br>"U_FREQ_S_PHASE" | Lock-detector type select                  |
| LEGACY_ATT   | "DISABLED" (default)<br>"ENABLED"                                                                                   | Active HIGH; enable Legacy mode            |
| LOAD_REG     | "DISABLED" (default)<br>"ENABLED"                                                                                   | For load control of divider phase control  |
| MFG_CTRL     | "0b0000" (default)                                                                                                  | MFG internal vctrl selection               |
| MFG_EN       | "DISABLED" (default)<br>"ENABLED"                                                                                   | MFG feature enable pin                     |
| MFG_SEL      | "ICP_UP" (default)<br>"PCP_UP"<br>"IV2I"<br>"PV2I"<br>"ICP_DN"<br>"PCP_DN"<br>"RSVD"                                | MFG current mux selection                  |
| MFGOUT1_SEL  | "0b000" (default)                                                                                                   | PLL_MFGOUT1 selection bits                 |
| MFGOUT2_SEL  | "0b000" (default)                                                                                                   | PLL_MFGOUT2 selection bits                 |
| OPENLOOP_EN  | "DISABLED" (default)<br>"ENABLED"                                                                                   | Open loop mode enable for mfg testing      |
| PHIA         | "0" (default)                                                                                                       | Select VCO phase-shift (0.7) for A section |
| PHIB         | "0" (default)                                                                                                       | Select VCO phase-shift (0.7) for B section |
| PHIC         | "0" (default)                                                                                                       | Select VCO phase-shift (0.7) for C section |
| PHID         | "0" (default)                                                                                                       | Select VCO phase-shift (0.7) for D section |
| PHIE         | "0" (default)                                                                                                       | Select VCO phase-shift (0.7) for E section |
| PHIF         | "0" (default)                                                                                                       | Select VCO phase-shift (0.7) for F section |
| PLLPDN_EN    | "DISABLED" (default)<br>"ENABLED"                                                                                   |                                            |

**Table 742: Parameters (Continued)**

| <b>Name</b>      | <b>Values</b>                                                                                                                  | <b>Description</b>                                                                                                                                   |
|------------------|--------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| PLLPD_N          | "UNUSED" (default)<br>"USED"                                                                                                   | Active LOW PLL power-down; PLL is NOT USED                                                                                                           |
| PLLRESET_ENA     | "DISABLED" (default)<br>"ENABLED"                                                                                              | Active HIGH; Enable PLLRESET CIB Signal                                                                                                              |
| REF_COUNTS       | "0b0000" (default)<br>"0b0001"<br>"0b0010"<br>"0b0011"<br>"0b0100"<br>"0b1000"<br>"0b1001"<br>"0b1010"<br>"0b1011"<br>"0b1100" | Internal count control for reference clock detection                                                                                                 |
| REF_ENABLE       | "DISABLED" (default)<br>"ENABLED"                                                                                              | Enable reference clock detection output to REFDETLOS swPort<br>Always "ENABLED" in User Primitive<br>SW primitive uses the default in 2nd column     |
| REF_INTEGER_MODE | "DISABLED" (default)<br>"ENABLED"                                                                                              | Integer mode control bit for reference clock pre-divider. Default to Integer, 1b1                                                                    |
| REF_MASK         | "0b00000000" (default)                                                                                                         | Minimum divider ratio control word for reference pre-divider                                                                                         |
| REF_MMD_DIG      | "8" (default)<br>"0"                                                                                                           | MMD divider ratio setting for reference pre-divider when lmmi_ref_integer_mode=1                                                                     |
| REF_MMD_IN       | "0b00001000" (default)<br>"00000000"                                                                                           | MMD divider ratio setting for reference pre-divider when lmmi_ref_integer_mode=0                                                                     |
| REF_MMD_PULS_CTL | "0b0000" (default)                                                                                                             | Pulse width control for MMD output clock in reference pre-divider                                                                                    |
| REF_TIMING_CTL   | "0b00" (default)                                                                                                               | Interface timing control for reference divider. Default to be 2b00                                                                                   |
| REF_USE          | "DISABLED" (default)<br>"ENABLED"                                                                                              | Enable internal reset based on reference clock detection output<br>Always "ENABLED" in User Primitive<br>SW primitive uses the default in 2nd column |
| REFIN_RESET      | "SET" (default)<br>"RESET"                                                                                                     | lmmi_refin_reset = 1b1 and with switching of REFin_SEL (either L-H or H-L) will generate a PLL reset                                                 |
| RESERVED         | "0b00000000" (default)                                                                                                         | Reserved fuses for PLL internal setting                                                                                                              |

**Table 742: Parameters (Continued)**

| <b>Name</b>      | <b>Values</b>                                  | <b>Description</b>                                                    |
|------------------|------------------------------------------------|-----------------------------------------------------------------------|
| RESET_LF         | "DISABLED" (default)<br>"ENABLED"              | LPF reset enable                                                      |
| ROTATE           | "DISABLED" (default)<br>"ENABLED"              | For VCO phase rotation                                                |
| SEL_OUTA         | "DISABLED" (default)<br>"ENABLED"              | Select output to CLKOP                                                |
| SEL_OUTB         | "DISABLED" (default)<br>"ENABLED"              | Select output to CLKOS                                                |
| SEL_OUTC         | "DISABLED" (default)<br>"ENABLED"              | Select output to CLKOS2                                               |
| SEL_OUTD         | "DISABLED" (default)<br>"ENABLED"              | Select output to CLKOS3                                               |
| SEL_OUTE         | "DISABLED" (default)<br>"ENABLED"              | Select output to CLKOS4                                               |
| SEL_OUTF         | "DISABLED" (default)<br>"ENABLED"              | Select output to CLKOS5                                               |
| SLEEP            | "DISABLED" (default)<br>"ENABLED"              | Active HIGH: Enable STOP PMU signal                                   |
| SSC_DELTA        | "0b0000000000000000"<br>(default)              | Not used in LFCPNX, LFD2NX, or LIFCL                                  |
| SSC_DELTA_CTL    | "0b00" (default)                               | Not used in LFCPNX, LFD2NX, or LIFCL                                  |
| SSC_DITHER       | "DISABLED" (default)<br>"ENABLED"              | Dither enable or disable for SDM                                      |
| SSC_EN_CENTER_IN | "DOWN_TRIANGLE" (default)<br>"CENTER_TRIANGLE" | Down triangle or center triangle control bit in SSC profile generator |
| SSC_EN_SDM       | "ENABLED" (default)<br>"DISABLED"              | Enable or disable SDM                                                 |
| SSC_EN_SSC       | "DISABLED" (default)<br>"ENABLED"              | Enable or disabled SSC profile generator                              |
| SSC_F_CODE       | "0b0000000000000000"<br>(default)              | Fractional part of the feedback divider ratio                         |
| SSC_N_CODE       | "0b000010100" (default)<br>"000000000"         | Integer part of the feedback divider ratio                            |
| SSC_ORDER        | "SDM_ORDER2" (default)<br>"SDM_ORDER1"         | SDM order control bit; 0 - SDM order = 1; 1 - SDM order = 2           |

**Table 742: Parameters (Continued)**

| Name                  | Values                                 | Description                                                                                         |
|-----------------------|----------------------------------------|-----------------------------------------------------------------------------------------------------|
| SSC_PI_BYPASS         | "NOT_BYPASSED" (default)<br>"BYPASSED" | PI bypass control bit. 0; PI not bypass, 1; PI bypass; it should be connected to lmmi_fbk_pi_bypass |
| SSC_REG_WEIGHTING_SEL | "0b000" (default)                      | Weighting control bit for lmmi_ssc_step_in                                                          |
| SSC_SQUARE_MODE       | "DISABLED" (default)<br>"ENABLED"      | Two-point FSK modulation control bit                                                                |
| SSC_STEP_IN           | "0b00000000" (default)                 | SSC modulation depth control bit                                                                    |
| SSC_TBASE             | "0b00000000000000" (default)           | SSC modulation frequency control. The frequency should be 30-33kHz                                  |
| STDBY_ATT             | "DISABLED" (default)<br>"ENABLED"      | Enable STDBY CIB signal                                                                             |
| TRIMOP_BYPASS_N       | "BYPASSED" (default)<br>"USED"         | 1b0: bypass CLKOP output trim                                                                       |
| TRIMOS_BYPASS_N       | "BYPASSED" (default)<br>"USED"         | 1b0: bypass CLKOS output trim                                                                       |
| TRIMOS2_BYPASS_N      | "BYPASSED" (default)<br>"USED"         | 1b0: bypass CLKOS2 output trim                                                                      |
| TRIMOS3_BYPASS_N      | "BYPASSED" (default)<br>"USED"         | 1b0: bypass CLKOS3 output trim                                                                      |
| TRIMOS4_BYPASS_N      | "BYPASSED" (default)<br>"USED"         | 1b0: bypass CLKOS4 output trim                                                                      |
| TRIMOS5_BYPASS_N      | "BYPASSED" (default)<br>"USED"         | 1b0: bypass CLKOS5 output trim                                                                      |

**Table 742: Parameters (Continued)**

| Name         | Values                 | Description                                                                                                                             |
|--------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| V2I_KVCO_SEL | "85" (default)         | Mlk chooses such as frequency range of ICO from 800 MHz - 1600 MHz over PVT. Mlk larger (more current withdraw from ICO) ICO run slower |
|              | "10"                   |                                                                                                                                         |
|              | "15"                   |                                                                                                                                         |
|              | "20"                   |                                                                                                                                         |
|              | "25"                   |                                                                                                                                         |
|              | "30"                   |                                                                                                                                         |
|              | "35"                   |                                                                                                                                         |
|              | "40"                   |                                                                                                                                         |
|              | "45"                   |                                                                                                                                         |
|              | "50"                   |                                                                                                                                         |
|              | "55"                   |                                                                                                                                         |
|              | "60"                   |                                                                                                                                         |
|              | "65"                   |                                                                                                                                         |
|              | "70"                   |                                                                                                                                         |
|              | "75"                   |                                                                                                                                         |
|              | "80"                   |                                                                                                                                         |
| V2I_PP_ICTRL | "0b00000" (default)    | P-path v2i gm control                                                                                                                   |
| V2I_PP_RES   | "11P3K" (default)      | P-path high frequency pole resistor control                                                                                             |
|              | "11K"                  |                                                                                                                                         |
|              | "10P7K"                |                                                                                                                                         |
|              | "10P3K"                |                                                                                                                                         |
|              | "10K"                  |                                                                                                                                         |
|              | "9P7K"                 |                                                                                                                                         |
|              | "9P3K"                 |                                                                                                                                         |
|              | "9K"                   |                                                                                                                                         |
| CLKMUX_FB    | "CMUX_CLKOP" (default) | Fuses used to determine the feedback selection in the wake up stage, center mux about the clock tree feedback                           |
|              | "CMUX_CLKOS"           |                                                                                                                                         |
|              | "CMUX_CLKOS2"          |                                                                                                                                         |
|              | "CMUX_CLKOS3"          |                                                                                                                                         |
|              | "CMUX_CLKOS4"          |                                                                                                                                         |
|              | "CMUX_CLKOS5"          |                                                                                                                                         |

**Table 742: Parameters (Continued)**

| Name                   | Values                | Description                               |
|------------------------|-----------------------|-------------------------------------------|
| SEL_FBK                | "DIVA" (default)      | Select feedback clock                     |
|                        | "DIVB"                |                                           |
|                        | "DIVC"                |                                           |
|                        | "DIVD"                |                                           |
|                        | "DIVE"                |                                           |
|                        | "DIVF"                |                                           |
|                        | "RESERVED"            |                                           |
|                        | "FBKCLK0"             |                                           |
|                        | "FBKCLK1"             |                                           |
|                        | "FBKCLK2"             |                                           |
|                        | "FBKCLK3"             |                                           |
|                        | "FBKCLK4"             |                                           |
|                        | "FBKCLK5"             |                                           |
|                        | "FBKCLK6"             |                                           |
|                        | "FBKCLK7"             |                                           |
|                        | "FBKCLK8"             |                                           |
| DIV_DEL                | "0b0000001" (default) | The internal path delay selection path    |
|                        | "0000000"             |                                           |
| PHASE_SEL_DEL          | "0b000" (default)     | The internal phase delay selection path   |
| PHASE_SEL_DEL_P1       | "0b000" (default)     | The internal phase delay selection path1  |
| EXTERNAL_DIVIDE_FACTOR | "0" (default)         | External divider value for feedback clock |


## PLL\_B

Phase Locked Loop

Architectures supported:

▶ iCE40 UltraPlus

USER INSTANTIATION: Illegal. Please refer to [RGB](#).

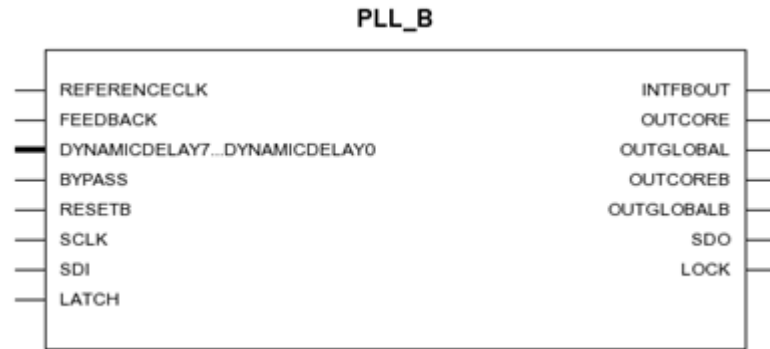**Table 743: Input Ports**

| Name                          | Description                                                                                                                                                                                                                                                                                      |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| REFERENCECLK                  | Reference clock                                                                                                                                                                                                                                                                                  |
| FEEDBACK                      | External feedback input                                                                                                                                                                                                                                                                          |
| DYNAMICDELAY7...DYNAMICDELAY0 | Dynamic control of delay for adjusting the phase alignment. Only used when DELAY_ADJUSTMENT_MODE is set to DYNAMIC. RESETB must be active before this bus can change value in order to ensure proper PLL functionality. Once value is changed user must set RESETB high and wait for PLL to lock |
| BYPASS                        | Bypass PLL core (directly connect REFERENCECLK to OUTCORE/OUTGLOBAL pins)                                                                                                                                                                                                                        |
| RESET_N                       | Asynchronously reset the PLL, active low                                                                                                                                                                                                                                                         |
| SCLK                          | Clock for internal testing                                                                                                                                                                                                                                                                       |
| SDI                           | Data for internal testing                                                                                                                                                                                                                                                                        |
| LATCH                         | Enable low power mode, active high. OUTGLOBAL*/OUTCORE* ports are held static at their last value when ENABLE_ICEGATE_PORT* is set to 1                                                                                                                                                          |

**Table 744: Output Ports**

| Name      | Description                                                             |
|-----------|-------------------------------------------------------------------------|
| INTFBOUT  | For internal feedback PLL operation, must route this output to FEEDBACK |
| OUTCORE   | Output clock A, drives regular fabric routing                           |
| OUTGLOBAL | Output clock A, drives global clock network                             |

**Table 744: Output Ports (Continued)**

| Name       | Description                                                                                             |
|------------|---------------------------------------------------------------------------------------------------------|
| OUTCOREB   | Output clock B, drives regular fabric routing                                                           |
| OUTGLOBALB | Output clock B, drives global clock network                                                             |
| SDO        | Data for internal testing                                                                               |
| LOCK       | Indicates that the output signal on OUTGLOBALB/OUTCOREB is locked to the REFERENCECLK port, active high |

**Table 745: Parameters**

| Name                           | Values                                                                                                                                               | Description                                                                                                                                                                                                                                 |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FEEDBACK_PATH                  | "SIMPLE" ( <i>default</i> ),<br>"DELAY",<br>"PHASE_AND_DELAY"                                                                                        | Selects the feedback path.<br>SIMPLE = internal feedback, directly from VCO.<br>DELAY = internal feedback, through the delay adjustment block.<br>PHASE_AND_DELAY = internal feedback, through the phase shifter and delay adjustment block |
| DELAY_ADJUSTMENT_MODE_FEEDBACK | "FIXED" ( <i>default</i> ),<br>"DYNAMIC"                                                                                                             | Selects the mode for the delay adjustment block in the feedback path.<br>FIXED = fixed delay, selected with the FDA_FEEDBACK parameter.<br>DYNAMIC = dynamic delay, selected by the DYNAMICDELAY port                                       |
| FDA_FEEDBACK                   | "0" ( <i>default</i> ),<br>"1",<br>"2",<br>"3",<br>"4",<br>"5",<br>"6",<br>"7",<br>"8",<br>"9",<br>"10",<br>"11",<br>"12",<br>"13",<br>"14",<br>"15" | Sets a constant value for the delay adjustment block.<br>OUTGLOBALA and OUTCOREA are delayed by $(n+1)*150\text{ps}$                                                                                                                        |
| DELAY_ADJUSTMENT_MODE_RELATIVE | "FIXED" ( <i>default</i> ),<br>"DYNAMIC"                                                                                                             | Selects the mode for the delay adjustment block                                                                                                                                                                                             |



**Table 745: Parameters (Continued)**

| Name                    | Values                                                                                                                                               | Description                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FDA_RELATIVE            | "0" ( <i>default</i> ),<br>"1",<br>"2",<br>"3",<br>"4",<br>"5",<br>"6",<br>"7",<br>"8",<br>"9",<br>"10",<br>"11",<br>"12",<br>"13",<br>"14",<br>"15" | Selects a constant value for the delay adjustment block. OUTGLOBALA and OUTCOREA are delayed with regards to the B output signals, by $(n+1)*150\text{ps}$                                                                                                                                                                                                                                                                |
| SHIFTREG_DIV_MODE       | "0" ( <i>default</i> ),<br>"1"                                                                                                                       | Selects shift register configuration.<br>0 = divide by 4,<br>1 = divide by 7.<br>Used when FEEDBACK_PATH is set to PHASE_AND_DELAY                                                                                                                                                                                                                                                                                        |
| PLLOUT_SELECT_POR<br>TA | "SHIFTREG_0deg" ( <i>default</i> ),<br>"SHIFTREG_90deg",<br>"GENCLK",<br>"GENCLK_HALF"                                                               | Configures the OUTCOREA and OUTGLOBALA ports.<br>SHIFTREG_0deg = 0 degree phase shift<br>(FEEDBACK_PATH must also be set to PHASE_AND_DELAY),<br>SHIFTREG_90deg = 90 degree phase shift<br>(FEEDBACK_PATH must be set to PHASE_AND_DELAY, and SHIFTREG_DIV_MODE to 0),<br>GENCLK = the internally generated frequency and no phase shift,<br>GENCLK_HALF = half of the internally generated frequency and no phase shift) |
| PLLOUT_SELECT_POR<br>TB | "SHIFTREG_0deg" ( <i>default</i> ),<br>"SHIFTREG_90deg",<br>"GENCLK",<br>"GENCLK_HALF"                                                               | Configures the OUTCOREB and OUTGLOBALB ports.<br>SHIFTREG_0deg = 0 degree phase shift<br>(FEEDBACK_PATH must also be set to PHASE_AND_DELAY),<br>SHIFTREG_90deg = 90 degree phase shift<br>(FEEDBACK_PATH must be set to PHASE_AND_DELAY, and SHIFTREG_DIV_MODE to 0),<br>GENCLK = the internally generated frequency and no phase shift,<br>GENCLK_HALF = half of the internally generated frequency and no phase shift) |

**Table 745: Parameters (Continued)**

| Name | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Description          |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| DIVR | "0" ( <i>default</i> ),<br>"1",<br>"2",<br>"3",<br>"4",<br>"5",<br>"6",<br>"7",<br>"8",<br>"9",<br>"10",<br>"11",<br>"12",<br>"13",<br>"14",<br>"15"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | REFERENCECLK divider |
| DIVF | "0" ( <i>default</i> ),<br>"1", "2", "3", "4", "5", "6", "7",<br>"8", "9", "10", "11", "12", "13",<br>"14", "15", "16", "17", "18",<br>"19", "20", "21", "22", "23",<br>"24", "25", "26", "27", "28",<br>"29", "30", "31", "32", "33",<br>"34", "35", "36", "37", "38",<br>"39", "40", "41", "42", "43",<br>"44", "45", "46", "47", "48",<br>"49", "50", "51", "52", "53",<br>"54", "55", "56", "57", "58",<br>"59", "60", "61", "62", "63",<br>"64", "65", "66", "67", "68",<br>"69", "70", "71", "72", "73",<br>"74", "75", "76", "77", "78",<br>"79", "80", "81", "82", "83",<br>"84", "85", "86", "87", "88",<br>"89", "90", "91", "92", "93",<br>"94", "95", "96", "97", "98",<br>"99", "100", "101", "102",<br>"103", "104", "105", "106",<br>"107", "108", "109", "110",<br>"111", "112", "113", "114",<br>"115", "116", "117", "118",<br>"119", "120", "121", "122",<br>"123", "124", "125", "126",<br>"127" | Feedback divider     |
| DIVQ | "1" ( <i>default</i> ),<br>"2",<br>"3",<br>"4",<br>"5",<br>"6"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | VCO divider          |

**Table 745: Parameters (Continued)**

| Name                                    | Values                                                                         | Description                                                                                      |
|-----------------------------------------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| FILTER_RANGE                            | "0" ( <i>default</i> ),<br>"1",<br>"2",<br>"3",<br>"4",<br>"5",<br>"6",<br>"7" | PLL filter range                                                                                 |
| EXTERNAL_DIVIDE_FACTOR<br>CTOR          | "NONE" ( <i>default</i> ),<br>CTOR                                             | Divide-by factor of a divider in the external feedback path.<br>Can be set to any integer value  |
| ENABLE_ICEGATE_PORT<br>RTA              | "0" ( <i>default</i> ),<br>"1"                                                 | Enables the PLL power-down control for port A,<br>0 = disabled,<br>1 = controlled by LATCH input |
| ENABLE_ICEGATE_PORT<br>RTB              | "0" ( <i>default</i> ),<br>"1"                                                 | Enables the PLL power-down control for port B,<br>0 = disabled,<br>1 = controlled by LATCH input |
| TEST_MODE                               | "0" ( <i>default</i> ),<br>"1"                                                 | Enables the use of test ports, SCLK, SDI, SDO.<br>Disabled = 0,<br>Enabled = 1                   |
| FREQUENCY_PIN_REFERENCE<br>REFERENCECLK | "NONE" ( <i>default</i> ),<br>REFERENCECLK                                     | SDC Constraint entry on REFERENCECLK port of PLL                                                 |

**Rules & Restrictions:**

FEEDBACK port (external feedback input pin) CANNOT be VHI, VLO, or floating. Otherwise, PLL in HW will not operate correctly.

When EXTERNAL\_DIVIDE\_FACTOR != NONE,  
DELAY\_ADJUSTMENT\_MODE should be set to either FIXED or DYNAMIC.

When EXTERNAL\_DIVIDE\_FACTOR != NONE, PLLOUT\_SELECT\_PORTA != SHIFTREG\_0deg, PLLOUT\_SELECT\_PORTA != SHIFTREG\_90deg,  
PLLOUT\_SELECT\_PORTB != SHIFTREG\_0deg,  
PLLOUT\_SELECT\_PORTB != SHIFTREG\_90deg.

When FEEDBACK\_PATH = DELAY,  
DELAY\_ADJUSTMENT\_MODE\_FEEDBACK should be set to either FIXED or DYNAMIC.

When FEEDBACK\_PATH = DELAY, PLLOUT\_SELECT\_PORTA != SHIFTREG\_0deg, PLLOUT\_SELECT\_PORTA != SHIFTREG\_90deg,  
PLLOUT\_SELECT\_PORTB != SHIFTREG\_0deg,  
PLLOUT\_SELECT\_PORTB != SHIFTREG\_90deg.

When `FEEDBACK_PATH = PHASE_AND_DELAY`,  
`DELAY_ADJUSTMENT_MODE_FEEDBACK` should be set to either `FIXED`  
or `DYNAMIC`.

When `FEEDBACK_PATH = PHASE_AND_DELAY` both  
`PLLOUT_SELECT_PORTA` and `PLLOUT_SELECT_PORTB` must be set to  
either `SHIFTREG_0deg` or `SHIFTREG_90deg`.

When `EXTERNAL_DIVIDE_FACTOR = NONE`, make sure `INTFBOUT` is  
connected to `FEEDBACK`.

When `EXTERNAL_DIVIDE_FACTOR != NONE`, make sure `INTFBOUT` is  
NOT connected to `FEEDBACK`.

`REFERNCECLK` input must be between 10 and 133 MHz.

### How to calculate output frequency:

When `FEEDBACK_PATH = "SIMPLE"`, the calculation of the period of the  
output clock of `PLL_B` is:

$$\text{Output\_period} = \text{reference\_clk\_period} * \\
\_\_\text{EQ\_}[\text{EXTERNAL\_DIVIDE\_FACTOR}, \text{NONE}, (2^{\text{DIVQ}}), 1/ \\
\text{EXTERNAL\_DIVIDE\_FACTOR}] * (\text{DIVR} + 1) * (1/(\text{DIVF} + 1)) * \\
\_\_\text{EQ\_}[\text{PLLOUT\_SELECT\_PORTB}, \text{GENCLK\_HALF}, 2, 1]$$

When `FEEDBACK_PATH = "DELAY"`, the calculation of the period of the  
output clock of `PLL_B` is:

$$\text{Output\_period} = \text{reference\_clk\_period} * \\
\_\_\text{EQ\_}[\text{EXTERNAL\_DIVIDE\_FACTOR}, \text{NONE}, 1, 1/ \\
\text{EXTERNAL\_DIVIDE\_FACTOR}] * (\text{DIVR} + 1) * (1/(\text{DIVF} + 1)) * \\
\_\_\text{EQ\_}[\text{PLLOUT\_SELECT\_PORTB}, \text{GENCLK\_HALF}, 2, 1]$$

When `FEEDBACK_PATH = "PHASE_AND_DELAY"`, the calculation of the  
period of the output clock of `PLL_B` is:

$$\text{Output\_period} = \text{reference\_clk\_period} * \\
\_\_\text{EQ\_}[\text{EXTERNAL\_DIVIDE\_FACTOR}, \text{NONE}, 1, 1/ \\
\text{EXTERNAL\_DIVIDE\_FACTOR}] * (\text{DIVR} + 1) * (1/(\text{DIVF} + 1)) * \\
\_\_\text{EQ\_}[\text{PLLOUT\_SELECT\_PORTA}, \text{GENCLK\_HALF}, 2, 1] * \\
\_\_\text{EQ\_}[\text{PLLOUT\_SELECT\_PORTA}, \text{SHIFTREG\_0deg}, \\
\_\_\text{EQ\_}[\text{SHIFTREG\_DIV\_MODE}, 1, 7, 4], 1] * \\
\_\_\text{EQ\_}[\text{PLLOUT\_SELECT\_PORTA}, \text{SHIFTREG\_0deg}, \\
\_\_\text{EQ\_}[\text{SHIFTREG\_DIV\_MODE}, 1, 7, 4], 1]$$

In the above equations, the sections beginning with “`__EQ__`” and enclosed  
in “[ ]” are treated as if/else statements during calculation. For example,  
“`__EQ__[EXTERNAL_DIVIDE_FACTOR, NONE, 1, 1/`  
`EXTERNAL_DIVIDE_FACTOR]`” means that if  
`EXTERNAL_DIVIDE_FACTOR` is set to `NONE` then use the value “1,”  
otherwise use the value “`1/EXTERNAL_DIVIDE_FACTOR`” in the calculation.

### Note:

EXTERNAL\_DIVIDE\_FACTOR is embedded in each of the equations, so even if you are using external feedback in your design, you will still need to choose one of the above equations based on the FEEDBACK\_PATH setting.

#### Example PLL\_B Instantiation (External Feedback):

```
PLL_B PLL_B_inst (
  .REFERENCECLK      (REFERENCECLK      ),
  .FEEDBACK          (FEEDBACK          ),
  .DYNAMICDELAY7     (DYNAMICDELAY7     ),
  .DYNAMICDELAY6     (DYNAMICDELAY6     ),
  .DYNAMICDELAY5     (DYNAMICDELAY5     ),
  .DYNAMICDELAY4     (DYNAMICDELAY4     ),
  .DYNAMICDELAY3     (DYNAMICDELAY3     ),
  .DYNAMICDELAY2     (DYNAMICDELAY2     ),
  .DYNAMICDELAY1     (DYNAMICDELAY1     ),
  .DYNAMICDELAY0     (DYNAMICDELAY0     ),
  .BYPASS            (BYPASS            ),
  .RESET_N           (RESET_N           ),
  .SCLK              (SCLK              ),
  .SDI               (SDI               ),
  .LATCH             (LATCH             ),
  .INTFBOUT          (/ *NOT CONNECTED* /),
  .OUTCORE           (OUTCORE           ),
  .OUTGLOBAL         (                  ),
  .OUTCOREB          (OUTCOREB          ),
  .OUTGLOBALB        (                  ),
  .SDO               (SDO               ),
  .LOCK              (LOCK              )
);

defparam PLL_B_inst.EXTERNAL_DIVIDE_FACTOR = "15";
defparam PLL_B_inst.DELAY_ADJUSTMENT_MODE_FEEDBACK = "DYNAMIC";
```

#### Example PLL\_B Instantiation (Internal Feedback):

```
PLL_B PLL_B_inst (
  .REFERENCECLK      (REFERENCECLK      ),
  .FEEDBACK          (INTFBOUT          ),
  .DYNAMICDELAY7     (DYNAMICDELAY7     ),
  .DYNAMICDELAY6     (DYNAMICDELAY6     ),
  .DYNAMICDELAY5     (DYNAMICDELAY5     ),
  .DYNAMICDELAY4     (DYNAMICDELAY4     ),
  .DYNAMICDELAY3     (DYNAMICDELAY3     ),
  .DYNAMICDELAY2     (DYNAMICDELAY2     ),
  .DYNAMICDELAY1     (DYNAMICDELAY1     ),
  .DYNAMICDELAY0     (DYNAMICDELAY0     ),
  .BYPASS            (BYPASS            ),
  .RESET_N           (RESET_N           ),
  .SCLK              (SCLK              ),
  .SDI               (SDI               ),
  .LATCH             (LATCH             ),
  .INTFBOUT          (INTFBOUT          ),
  .OUTCORE           (OUTCORE           ),
  .OUTGLOBAL         (                  ),
  .OUTCOREB          (OUTCOREB          ),
  .OUTGLOBALB        (                  ),
  .SDO               (SDO               )
);
```

```

        .LOCK                                (LOCK                                )
    );

    defparam PLL_B_inst.EXTERNAL_DIVIDE_FACTOR = "NONE";
    defparam PLL_B_inst.FEEDBACK_PATH = "SIMPLE";

```

## PLLC

PLL functional block

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

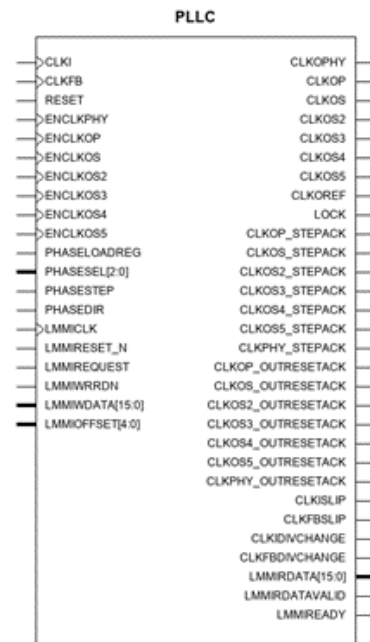


**Table 746: Input Ports**

| Name     | Range | Type  | Active State | Description                      |
|----------|-------|-------|--------------|----------------------------------|
| CLKI     | 1     | Clock | Active high  | Reference Clock                  |
| CLKFB    | 1     | Clock | Active high  | Feedback Clock                   |
| RESET    | 1     | Reset | Active high  | PLL Reset                        |
| ENCLKPHY | 1     | Clock | Active high  | Enable Physical clock output     |
| ENCLKOP  | 1     | Clock | Active high  | Enable CLKOP (DIVA) clock output |
| ENCLKOS  | 1     | Clock | Active high  | Enable CLKOS (DIVB) clock output |

**Table 746: Input Ports (Continued)**

| Name         | Range | Type    | Active State | Description                                                                                                                            |
|--------------|-------|---------|--------------|----------------------------------------------------------------------------------------------------------------------------------------|
| ENCLKOS2     | 1     | Clock   | Active high  | Enable CLKOS2 (DIVC) clock output                                                                                                      |
| ENCLKOS3     | 1     | Clock   | Active high  | Enable CLKOS3 (DIVD) clock output                                                                                                      |
| ENCLKOS4     | 1     | Clock   | Active high  | Enable CLKOS4 (DIVE) clock output                                                                                                      |
| ENCLKOS5     | 1     | Clock   | Active high  | Enable CLKOS5 (DIVF) clock output                                                                                                      |
| PHASELOADREG | 1     | Control | Active high  | Phase control, Initiate a divider output phase shift on negative edge of DYN_LOAD                                                      |
| PHASESEL     | 2:0   | Control | Active high  | Phase control to select which divider for phase-shift changes                                                                          |
| PHASESTEP    | 1     | Control | Active high  | Phase control to rotate the VCO clock phase on the negative edge of DYN_ROTATE                                                         |
| PHASEDIR     | 1     | Control | Active high  | Phase control for the direction of DYN_ROTATE changes VCO phase. 0 -> phase rotates to later phase 1 -> Phase rotates to earlier phase |
| LMMICKL      | 1     | Clock   | Active high  | LMMI clock                                                                                                                             |
| LMMIRESET_N  | 1     | Reset   | Active low   | LMMI Reset                                                                                                                             |
| LMMIREQUEST  | 1     | Data    | Active high  | LMMI Request                                                                                                                           |
| LMMIWRRDN    | 1     | Data    | Active high  | LMMI write High /read Low                                                                                                              |
| LMMIWDATA    | 15:0  | Data    | Active high  | LMMI write data                                                                                                                        |
| LMMIOFFSET   | 4:0   | Addr    | Active high  | LMMI address                                                                                                                           |
| ENCLKRES     | 1     | Clock   | Active high  | Enable CLKRES clock output                                                                                                             |

**Table 747: Output Ports**

| Name    | Range | Type  | Active State | Description                    |
|---------|-------|-------|--------------|--------------------------------|
| CLKOPHY | 1     | Clock | Active high  | High speed PHYCLK              |
| CLKOP   | 1     | Clock | Active high  | Primary CLKOP (DIVA) output    |
| CLKOS   | 1     | Clock | Active high  | Secondary CLKOS (DIVB) output  |
| CLKOS2  | 1     | Clock | Active high  | Secondary CLKOS2 (DIVC) output |
| CLKOS3  | 1     | Clock | Active high  | Secondary CLKOS3 (DIVD) output |

**Table 747: Output Ports (Continued)**

| Name               | Range | Type  | Active State | Description                                     |
|--------------------|-------|-------|--------------|-------------------------------------------------|
| CLKOS4             | 1     | Clock | Active high  | Secondary CLKOS4 (DIVE) output                  |
| CLKOS5             | 1     | Clock | Active high  | Secondary CLKOS5 (DIVF) output                  |
| CLKOREF            | 1     | Clock | Active high  | The reference CLK output                        |
| LOCK               | 1     | Data  | Active high  | PLL lock indicator                              |
| CLKOP_STEPACK      | 1     | Clock | Active high  | CLKOP VCO PS status                             |
| CLKOS_STEPACK      | 1     | Clock | Active high  | CLKOS VCO PS status                             |
| CLKOS2_STEPACK     | 1     | Clock | Active high  | CLKOS2 VCO PS status                            |
| CLKOS3_STEPACK     | 1     | Clock | Active high  | CLKOS3 VCO PS status                            |
| CLKOS4_STEPACK     | 1     | Clock | Active high  | CLKOS4 VCO PS status                            |
| CLKOS5_STEPACK     | 1     | Clock | Active high  | CLKOS5 VCO PS status                            |
| CLKPHY_STEPACK     | 1     | Clock | Active high  | CLKPHY VCO PS status                            |
| CLKOP_OUTRESETACK  | 1     | Clock | Active high  | CLKOP reset status                              |
| CLKOS_OUTRESETACK  | 1     | Clock | Active high  | CLKOS reset status                              |
| CLKOS2_OUTRESETACK | 1     | Clock | Active high  | CLKOS2 reset status                             |
| CLKOS3_OUTRESETACK | 1     | Clock | Active high  | CLKOS3 reset status                             |
| CLKOS4_OUTRESETACK | 1     | Clock | Active high  | CLKOS4 reset status                             |
| CLKOS5_OUTRESETACK | 1     | Clock | Active high  | CLKOS5 reset status                             |
| CLKPHY_OUTRESETACK | 1     | Clock | Active high  | CLKPHY reset status                             |
| CLKISLIP           | 1     | Clock | Active high  | Reference cycle slip output                     |
| CLKFBSLIP          | 1     | Clock | Active high  | Feedback cycle slip output                      |
| CLKIDIVCHANGE      | 1     | Clock | Active high  | Reference divider NR count change enable output |
| CLKFBDIVCHANGE     | 1     | Clock | Active high  | Feedback divider NF count change enable output  |
| LMMIRDATA          | 15:0  | Data  | Active high  | LMMI read data                                  |
| LMMIRDATAVALID     | 1     | Data  | Active high  | LMMI data valid                                 |
| LMMIREADY          | 1     | Data  | Active high  | LMMI Ready                                      |
| CLKRES             | 1     | Clock | Active high  | CLKRES output                                   |
| CLKRES_STEPACK     | 1     | Clock | Active high  | CLKRES VCO PS status                            |
| CLKRES_OUTRESETACK | 1     | Clock | Active high  | CLKRES reset status                             |



**Table 748: Parameters**

| Name                  | Values                  | Description                                                                                                                                                                                                                                                                                       |
|-----------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FCLKI                 | "100" (default)         | None                                                                                                                                                                                                                                                                                              |
| FVCO                  | "1600 MHz" - "4000 MHz" | The actual FVCO value is not user defined.<br><br>In the Lattice Avant PLL Module configuration interface, when Enable Dynamic Phase Ports is checked, a Use Phase Advance option is added. When this is enabled, the maximum VCO frequency is reduced. Otherwise, the value remains at 4000 MHz. |
| CLKOP_OUT_SEL         | "DIVA" (default)        | Select output to CLKOP 0: DIVA: 1: CLKI                                                                                                                                                                                                                                                           |
| CLKOS_OUT_SEL         | "DIVB" (default)        | Select output to CLKOS0: DIVB: 1: CLKI                                                                                                                                                                                                                                                            |
| CLKOS2_OUT_SEL        | "DIVC" (default)        | Select output to CLKOS20: DIVC: 1: CLKI                                                                                                                                                                                                                                                           |
| CLKOS3_OUT_SEL        | "DIVD" (default)        | Select output to CLKOS30: DIVD: 1: CLKI                                                                                                                                                                                                                                                           |
| CLKOS4_OUT_SEL        | "DIVE" (default)        | Select output to CLKOS40: DIVE: 1: CLKI                                                                                                                                                                                                                                                           |
| CLKOS5_OUT_SEL        | "DIVF" (default)        | Select output to CLKOS50: DIVF: 1: CLKI                                                                                                                                                                                                                                                           |
| CLKPHY_OUT_SEL        | "DIVPHY" (default)      | Select output to CLKPHY0: DIVPHY: 1: CLKI                                                                                                                                                                                                                                                         |
| CLKRES_OUT_SEL        | "DIVRES" (default)      | Select output of divider (DIVRES) or reference clock (CLKI) to CLKRES                                                                                                                                                                                                                             |
| SYNC_CLKOP            | "DISABLED" (default)    | Enable output(s) sync with CLKOP0: disabled; 1: enabled                                                                                                                                                                                                                                           |
| PHASE_SOURCE          | "STATIC" (default)      | 1b1 select DYN (CIB signals) for dynamic phase shift                                                                                                                                                                                                                                              |
| STATIC_PHASE_SEL      | "CLKOP" (default)       | To select which output clocks is phase shifted                                                                                                                                                                                                                                                    |
| STATIC_PHASE_LOADREG  | "NO" (default)          | Immi equivalent of CIB load signal                                                                                                                                                                                                                                                                |
| STATIC_VCO_PHASE_STEP | "NO" (default)          | Trigger for VCO phase rotation, 1: YES; 0: NO                                                                                                                                                                                                                                                     |
| STATIC_VCO_PHASE_DIR  | "DELAYED" (default)     | VCO phase rotation direction, 1b0 for phase lagging0 -> phase rotates to later phase (lagging, delayed)1 -> Phase rotates to earlier phase (leading, advanced)                                                                                                                                    |
| CLKOP_FPHASE          | "1" (default)           | VCO phase A step control                                                                                                                                                                                                                                                                          |
| CLKOS_FPHASE          | "1" (default)           | VCO phase B step control                                                                                                                                                                                                                                                                          |
| CLKOS2_FPHASE         | "1" (default)           | VCO phase C step control                                                                                                                                                                                                                                                                          |
| CLKOS3_FPHASE         | "1" (default)           | VCO phase D step control                                                                                                                                                                                                                                                                          |
| CLKOS4_FPHASE         | "1" (default)           | VCO phase E step control                                                                                                                                                                                                                                                                          |
| CLKOS5_FPHASE         | "1" (default)           | VCO phase F step control                                                                                                                                                                                                                                                                          |
| CLKPHY_FPHASE         | "1" (default)           | VCO phase PHY step control                                                                                                                                                                                                                                                                        |

**Table 748: Parameters (Continued)**

| <b>Name</b>         | <b>Values</b>                    | <b>Description</b>                                                                                                                       |
|---------------------|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| CLKRES_FPHASE       | "1" (default)                    | VCO phase RES step control                                                                                                               |
| CLKOP_CPHASE        | "1" (default)                    | Delay A section output DELA VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-divider phase-shift)     |
| CLKOS_CPHASE        | "1" (default)                    | Delay B section output DELB VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-DELAYider phase-shift)   |
| CLKOS2_CPHASE       | "1" (default)                    | Delay C section output DELC VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-DELAYider phase-shift)   |
| CLKOS3_CPHASE       | "1" (default)                    | Delay D section output DELD VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-DELAYider phase-shift)   |
| CLKOS4_CPHASE       | "1" (default)                    | Delay E section output DELE VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-DELAYider phase-shift)   |
| CLKOS5_CPHASE       | "1" (default)                    | Delay F section output DELF VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-divider phase-shift)     |
| CLKOPHY_CPHASE      | "1" (default)                    | Delay F section output DELPHY VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-divider phase-shift)   |
| CLKRES_CPHASE       | "1" (default)                    | Delay RES section output DELRES VCO clock cycles with respect to VCO phase 0, or REFBUF if in VCO bypass mode (post-divider phase-shift) |
| FAST_LOCK           | "ENABLED" (default)              | Fast lock enable0: disabled; 1: enabled                                                                                                  |
| LOSS_LOCK_DETECTION | "ENABLED" (default)              | 1b1 enable cycle slip detection                                                                                                          |
| CLKI_DIV            | "8" (default)                    | Reference clock divider; NR=CLKR[5:0]+1, CLKR[0] is LSB                                                                                  |
| CLKI_SEL            | "REFMUX0" (default)              | Static setting (Immi version) of refin_sel (CIB) from REFMUX0 or REFMUX1                                                                 |
| CLKFB_DIV           | "2" (default)                    | Feedback clock divider; CLKF[25:14]                                                                                                      |
| FRACTIONAL_FBK      | "0b00000000000000" (default)     | Precise & SSC fractional multiplication                                                                                                  |
| CLKFB_PATH          | "EXTERNAL" (default)             | Feedback path0: external feedback1: the internal feedback is selected                                                                    |
| EXT_FB_DELAY        | "0b00" (default)                 | Determine the output enable delayed time for external feedback mode                                                                      |
| LOOP_BW             | "0b000000000000" (default)       | Loop BW control.: NB=BWADJ[11:0]+1, BWADJ[0] is LSB                                                                                      |
| CLKV_SSC_SLOPE      | "0b000000000000000000" (default) | SSC Slope multiplier                                                                                                                     |

**Table 748: Parameters (Continued)**

| <b>Name</b>    | <b>Values</b>              | <b>Description</b>                                                                |
|----------------|----------------------------|-----------------------------------------------------------------------------------|
| CLKS_SSC_RATE  | "0b000000000000" (default) | SSC rate multiplier                                                               |
| SCC_SS         | "DISABLED" (default)       | Enable or disable the Spread Spectrum0: disabled; 1: enabled                      |
| SCC_FRACTIONAL | "DISABLED" (default)       | Enable fractional accumulation. 0: disabled; 1: enabled                           |
| CLKOP_DIV      | "8" (default)              | CLKOP Divider Setting, BFD bit setting is user primitive DIV bit stting = value-1 |
| CLKOS_DIV      | "8" (default)              | CLKOS Divider Setting                                                             |
| CLKOS2_DIV     | "8" (default)              | CLKOS2 Divider Setting                                                            |
| CLKOS3_DIV     | "8" (default)              | CLKOS3 Divider Setting                                                            |
| CLKOS4_DIV     | "8" (default)              | CLKOS4 Divider Setting                                                            |
| CLKOS5_DIV     | "8" (default)              | CLKOS5 Divider Setting                                                            |
| CLKPHY_DIV     | "1" (default)              | CLKPHY Divider Setting                                                            |
| INT_CLK7_DIV   | "8" (default)              | CLK7 Divider Setting                                                              |
| CLKRES_DIV     | "8" (default)              | CLKRES Divider Setting                                                            |
| SATURATION     | "ENABLED" (default)        | Saturation behavior enable0: disabled; 1: enabled                                 |
| EN_PLL         | "DISABLED" (default)       | 1b1 to select GPLL IP                                                             |
| EN_PLLRESET    | "DISABLED" (default)       | 1b1 to enable pllreset control (cib port)                                         |
| EN_CLKOP       | "YES" (default)            | Enable CLKOP (DIVA) clock output 0: DISABLED (NO); 1: ENABLED (YES)               |
| EN_CLKOS       | "YES" (default)            | Enable CLKOS (DIVB) clock output 0: DISABLED; 1: ENABLED                          |
| EN_CLKOS2      | "YES" (default)            | Enable CLKOS2 (DIVC) clock output 0: DISABLED; 1: ENABLED                         |
| EN_CLKOS3      | "YES" (default)            | Enable CLKOS3 (DIVD) clock output 0: DISABLED; 1: ENABLED                         |
| EN_CLKOS4      | "YES" (default)            | Enable CLKOS4 (DIVE) clock output 0: DISABLED; 1: ENABLED                         |
| EN_CLKOS5      | "YES" (default)            | Enable CLKOS5 (DIVF) clock output0: DISABLED; 1: ENABLED                          |
| EN_CLKPHY      | "YES" (default)            | Enable CLKPHY (DIVY) clock output 0: DISABLED; 1: ENABLED                         |
| EN_CLKRES      | "NO" (default)             | Enable CLKRES clock output                                                        |
| EN_CLKOP_OUT   | "OFF" (default)            | Output CLKOP 0: ON: 1: OFF                                                        |
| EN_CLKOS_OUT   | "OFF" (default)            | Output CLKOS0: ON;1: OFF                                                          |
| EN_CLKOS2_OUT  | "OFF" (default)            | Output CLKOS20: ON:1: OFF                                                         |

**Table 748: Parameters (Continued)**

| Name                 | Values               | Description                            |
|----------------------|----------------------|----------------------------------------|
| EN_CLKOS3_OUT        | "OFF" (default)      | Output CLKOS30: ON; 1: OFF             |
| EN_CLKOS4_OUT        | "OFF" (default)      | Output CLKOS40: ON; 1: OFF             |
| EN_CLKOS5_OUT        | "OFF" (default)      | Output CLKOS50: ON; 1: OFF             |
| EN_CLKPHY_OUT        | "OFF" (default)      | Output CLKPHY0: ON; 1: OFF             |
| EN_CLKRES_OUT        | "OFF" (default)      | Output CLKRES: ON; 1: OFF              |
| CONFIG_WAIT_FOR_LOCK | "DISABLED" (default) | Wait for PLL lock during configuration |

## PLLREFCS

PLL Dynamic Reference Clock Switching

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

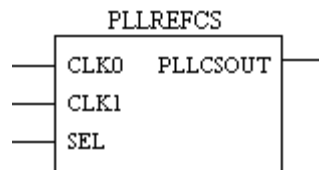


**Table 749: Input Ports**

| Name | Range | Description                                                                                                                                             |
|------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| CLK0 | 1     | There are two clock input MUXES (8 inputs each) which are labeled as REFCLK1 and REFCLK2. CLK0 is the output of REFCLK1. CLK1 is the output of REFCLK2. |
| CLK1 | 1     | Input clock 1                                                                                                                                           |
| SEL  | 1     | Selects which signal goes to the input clock MUX.                                                                                                       |

**Table 750: Output Ports**

| Name     | Range | Description  |
|----------|-------|--------------|
| PLLCSOUT | 1     | Clock output |

The PLLREFCS primitive is used to support the dynamic reference clock switching using the SEL signal. This primitive does not require a wrapper.


You only need to instantiate the PLLREFCS primitive if you want to select between two different reference clocks in your application. If you only use one reference clock for the PLL, the software will automatically make the correct connections.

## PLLREFCSA

2:1 mux with dynamic select

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

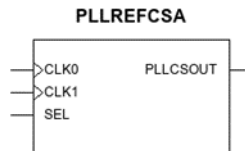**Table 751: Input Ports**

| Name | Range | Type    | Active State | Description                              |
|------|-------|---------|--------------|------------------------------------------|
| CLK0 | 1     | Clock   | Rising Edge  | CLK0 input                               |
| CLK1 | 1     | Clock   | Rising Edge  | CLK1 input                               |
| SEL  | 1     | Control | High         | Select the CLK0 (SEL=0) and CLK1 (SEL=1) |

**Table 752: Output Ports**


| Name     | Range | Type  | Active State | Description  |
|----------|-------|-------|--------------|--------------|
| PLLCSOUT | 1     | Clock | N/A          | Clock output |

## PLLREFCSB

PLL Dynamic Reference Clock Switching

Architectures Supported:

- ▶ LFMXO4

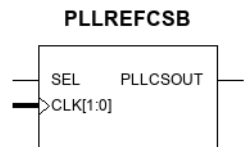**Table 753: Input Ports**

| Name | Range | Description                                                                                                                                             |
|------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| CLK  | 1:0   | There are two clock input MUXES (8 inputs each) which are labeled as REFCLK1 and REFCLK2. CLK0 is the output of REFCLK1. CLK1 is the output of REFCLK2. |
| SEL  | 1     | Selects which signal goes to the input clock MUX.                                                                                                       |

**Table 754: Output Ports**

| Name     | Range | Description  |
|----------|-------|--------------|
| PLLCSOUT | 1     | Clock output |

**Description**

The PLLREFCSB primitive is used to support the dynamic reference clock switching using the SEL signal. This primitive does not require a wrapper.

You only need to instantiate the PLLREFCSB primitive if you want to select between two different reference clocks in your application. If you only use one reference clock for the PLL, the software will automatically make the correct connections.

 
For more information, refer to related technical notes on the Lattice web site.

**PUR**

Power Up Set/Reset

Architectures Supported:

▶ LFMXO4

**Table 755: Input Ports**

| Name | Range | Description    |
|------|-------|----------------|
| PUR  | 1     | Power-Up Reset |

**Table 756: Parameters**

| Name      | Values | Description |
|-----------|--------|-------------|
| RST_PULSE | "1"    | Reset Pulse |

### Description

PUR is used to reset or set all register elements in your design upon device configuration/startup. The PUR component can be connected to a net from an input buffer or an internally generated net. It is active LOW and when pulsed will set or reset all register bits to the same state as the local set or reset functionality.

It is not necessary to connect signals for PUR to any register elements explicitly. The function will be implicitly connected globally.

## RGB

RGB LED drive module, containing three open drain I/O pins for RGB LED outputs.

Architectures supported:

- ▶ iCE40 UltraPlus

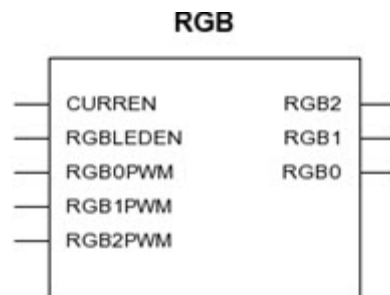


**Table 757: Input Ports**

| Name     | Description                                                                                                                      |
|----------|----------------------------------------------------------------------------------------------------------------------------------|
| CURREN   | Enable reference current to IR drivers. Enabling the drivers takes 100us to reach a stable reference current value. Active high. |
| RGBLEDEN | Enable the RGB driver. Active high.                                                                                              |
| RGB0PWM  | Input data to drive RGB0 LED pin.                                                                                                |
| RGB1PWM  | Input data to drive RGB1 LED pin.                                                                                                |
| RGB2PWM  | Input data to drive RGB2 LED pin.                                                                                                |



**Table 758: Output Ports**

| Name | Description      |
|------|------------------|
| RGB2 | RGB2 LED output. |
| RGB1 | RGB1 LED output. |
| RGB0 | RGB0 LED output. |

**Table 759: Parameters**

| Name         | Values                                                                                                                         | Description                                                                                                                                                                       |
|--------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CURRENT_MODE | "0" ( <i>default</i> ),<br>"1"                                                                                                 | 0 = full current,<br>1 = half current                                                                                                                                             |
| RGB0_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | 0'b000000 = 0mA,<br>0'b000001 = 4mA,<br>0'b000011 = 8mA,<br>0'b000111 = 12mA,<br>0'b001111 = 16mA,<br>0'b011111 = 20mA,<br>0'b111111 = 24mA. Divide<br>by 2 for half current mode |
| RGB1_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | 0'b000000 = 0mA,<br>0'b000001 = 4mA,<br>0'b000011 = 8mA,<br>0'b000111 = 12mA,<br>0'b001111 = 16mA,<br>0'b011111 = 20mA,<br>0'b111111 = 24mA. Divide<br>by 2 for half current mode |
| RGB2_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | 0'b000000 = 0mA,<br>0'b000001 = 4mA,<br>0'b000011 = 8mA,<br>0'b000111 = 12mA,<br>0'b001111 = 16mA,<br>0'b011111 = 20mA,<br>0'b111111 = 24mA. Divide<br>by 2 for half current mode |


ATTRIBUTES: syn\_black\_box black\_box\_pad\_pin="RGB2,RGB1,RGB0"

## RGB1P8V

RGB LED drive module, containing three open drain I/O pins for RGB LED outputs. Trim bits are driven from Fabric.

Architectures supported:

## ▶ iCE40 UltraPlus

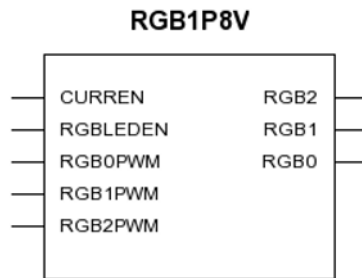**Table 760: Input Ports**

| Name     | Description                                                                                                                      |
|----------|----------------------------------------------------------------------------------------------------------------------------------|
| CURREN   | Enable reference current to IR drivers. Enabling the drivers takes 100us to reach a stable reference current value. Active high. |
| RGBLEDEN | Enable the RGB driver. Active high.                                                                                              |
| RGB0PWM  | Input data to drive RGB0 LED pin.                                                                                                |
| RGB1PWM  | Input data to drive RGB1 LED pin.                                                                                                |
| RGB2PWM  | Input data to drive RGB2 LED pin.                                                                                                |

**Table 761: Output Ports**

| Name | Description     |
|------|-----------------|
| RGB2 | RGB LED output. |
| RGB1 | RGB LED output. |
| RGB0 | RGB LED output. |

**Table 762: Parameters**

| Name         | Values                                                                                                                         | Description                                                                                                                                                                       |
|--------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CURRENT_MODE | "0" ( <i>default</i> ),<br>"1"                                                                                                 | 0 = full current,<br>1 = half current                                                                                                                                             |
| RGB0_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | 0'b000000 = 0mA,<br>0'b000001 = 4mA,<br>0'b000011 = 8mA,<br>0'b000111 = 12mA,<br>0'b001111 = 16mA,<br>0'b011111 = 20mA,<br>0'b111111 = 24mA. Divide<br>by 2 for half current mode |
| RGB1_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | 0'b000000 = 0mA,<br>0'b000001 = 4mA,<br>0'b000011 = 8mA,<br>0'b000111 = 12mA,<br>0'b001111 = 16mA,<br>0'b011111 = 20mA,<br>0'b111111 = 24mA. Divide<br>by 2 for half current mode |
| RGB2_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | 0'b000000 = 0mA,<br>0'b000001 = 4mA,<br>0'b000011 = 8mA,<br>0'b000111 = 12mA,<br>0'b001111 = 16mA,<br>0'b011111 = 20mA,<br>0'b111111 = 24mA. Divide<br>by 2 for half current mode |

ATTRIBUTES: syn\_black\_box black\_box\_pad\_pin="RGB2,RGB1,RGB0"

## RGB\_CORE

RGB LED drive module containing three open drain I/O pins for RGB LED outputs.

Architectures supported:

- ▶ iCE40 UltraPlus

**Table 763: Input Ports**

| Name          | Description                                                                                                                      |
|---------------|----------------------------------------------------------------------------------------------------------------------------------|
| CURREN        | Enable reference current to IR drivers. Enabling the drivers takes 100us to reach a stable reference current value. Active high. |
| RGBLEDEN      | Enable the RGB driver. Active high.                                                                                              |
| RGB0PWM       | Input data to drive RGB0 LED pin.                                                                                                |
| RGB1PWM       | Input data to drive RGB1 LED pin.                                                                                                |
| RGB2PWM       | Input data to drive RGB2 LED pin.                                                                                                |
| TRIM9...TRIM0 | Trim bit ports to trim output PWM signals. Pre-set value.                                                                        |

**Table 764: Output Ports**

| Name        | Description      |
|-------------|------------------|
| RGB2...RGB0 | RGB LED outputs. |

**Table 765: Parameters**

| Name         | Values                                                                                                                         | Description                           |
|--------------|--------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
| CURRENT_MODE | "0" ( <i>default</i> ),<br>"1"                                                                                                 | 0 = full current,<br>1 = half current |
| RGB0_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | Divide by 2 for half current mode     |
| RGB1_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111", "0'b111111"    | Divide by 2 for half current mode     |
| RGB2_CURRENT | "0'b000000" ( <i>default</i> ),<br>"0'b000001",<br>"0'b000011",<br>"0'b000111",<br>"0'b001111",<br>"0'b011111",<br>"0'b111111" | Divide by 2 for half current mode     |
| FABRIC_TRIME | "DISABLE" ( <i>default</i> ),<br>"ENABLE"                                                                                      | Trim bits source selection            |


SAME AS: SB\_RGBA\_DRV

## RGBPWM

Generates the PWM signals for the RGB LED drivers.

Architectures supported:

- ▶ iCE40 UltraPlus

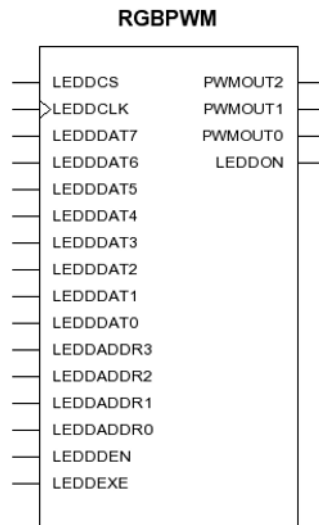**Table 766: Input Ports**

| Name                  | Description                                                                                              |
|-----------------------|----------------------------------------------------------------------------------------------------------|
| LEDDCS                | Chip select.                                                                                             |
| LEDDCLK               | Write clock.                                                                                             |
| LEDDDAT7...LEDDDAT0   | Data input.                                                                                              |
| LEDDADDR3...LEDDADDR0 | Data address.                                                                                            |
| LEDDDEN               | Data enable input to indicate data and address are stable.                                               |
| LEDDEXE               | Enable the IP to run the blinking sequence. When it is low, the sequence stops at the nearest OFF state. |

**Table 767: Output Ports**

| Name              | Description              |
|-------------------|--------------------------|
| PWMOUT2...PWMOUT0 | PWM outputs.             |
| LEDDON            | Indicates the LED is on. |

SAME AS: SB\_LEDDA\_IP

## ROM128X1A

128 Word by 1 Bit Positive Edge Triggered Read-Only Memory with Registered Data Outputs

Architectures Supported:

► LFMXO4

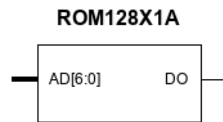


**Table 768: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| AD6  | 1     | Address bus |
| AD5  | 1     | Address bus |
| AD4  | 1     | Address bus |
| AD3  | 1     | Address bus |
| AD2  | 1     | Address bus |
| AD1  | 1     | Address bus |
| AD0  | 1     | Address bus |

**Table 769: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO0  | 1     | Read data   |

**Table 770: Parameters**

| Name    | Values                               | Description          |
|---------|--------------------------------------|----------------------|
| INITVAL | "0x00000000000000000000000000000000" | Initialization value |

## ROM16X1A

16 Word by 1 Bit Read-Only Memory

Architectures Supported:

▶ LFMXO4

 


**Table 771: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| AD3  | 1     | Address bus |
| AD2  | 1     | Address bus |
| AD1  | 1     | Address bus |
| AD0  | 1     | Address bus |

**Table 772: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO0  | 1     | Read data   |

**Table 773: Parameters**

| Name    | Values   | Description          |
|---------|----------|----------------------|
| INITVAL | "0x0000" | Initialization value |


## ROM256X1A

256 Word by 1 Bit Positive Edge Triggered Read-Only Memory with Registered Data Outputs

Architectures Supported:

▶ LFMXO4

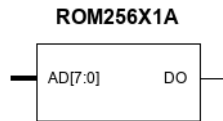

**Table 774: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| AD7  | 1     | Address bus |
| AD6  | 1     | Address bus |
| AD5  | 1     | Address bus |
| AD4  | 1     | Address bus |
| AD3  | 1     | Address bus |
| AD2  | 1     | Address bus |
| AD1  | 1     | Address bus |
| AD0  | 1     | Address bus |

**Table 775: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO0  | 1     | Read data   |

**Table 776: Parameters**


| Name    | Values                                                                               | Description          |
|---------|--------------------------------------------------------------------------------------|----------------------|
| INITVAL | "0x000000000000000000000000<br>000000000000000000000000<br>000000000000000000000000" | Initialization value |

## ROM32X1A

32 Word by 1 Bit Read-Only Memory

Architectures Supported:

- ▶ LFMXO4

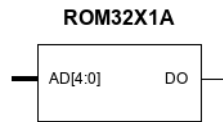**Table 777: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| AD4  | 1     | Address bus |
| AD3  | 1     | Address bus |
| AD2  | 1     | Address bus |
| AD1  | 1     | Address bus |
| AD0  | 1     | Address bus |

**Table 778: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO0  | 1     | Read data   |

**Table 779: Parameters**


| Name    | Values       | Description          |
|---------|--------------|----------------------|
| INITVAL | "0x00000000" | Initialization value |

## ROM64X1A

64 Word by 1 Bit Positive Edge Triggered Read-Only Memory with Registered Data Outputs

Architectures Supported:

- ▶ LFMXO4

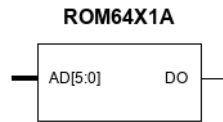**Table 780: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| AD5  | 1     | Address bus |
| AD4  | 1     | Address bus |
| AD3  | 1     | Address bus |
| AD2  | 1     | Address bus |
| AD1  | 1     | Address bus |
| AD0  | 1     | Address bus |

**Table 781: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO0  | 1     | Read data   |

**Table 782: Parameters**

| Name    | Values               | Description          |
|---------|----------------------|----------------------|
| INITVAL | "0x0000000000000000" | Initialization value |


## SEDC

Interface for Soft Error Detection and Correction Functionality

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65

- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

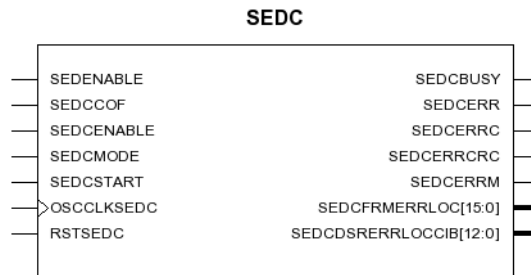**Table 783: Input Ports**

| Name       | Range | Description                                 |
|------------|-------|---------------------------------------------|
| SEDENABLE  | 1     | Enables the SED primitive                   |
| SEDCCOF    | 1     | SED continue on failure                     |
| SEDCENABLE | 1     | Enables the SEDC primitive                  |
| SEDCMODE   | 1     | Starts the SEDC process                     |
| SEDCSTART  | 1     | Starts the SEDC operation                   |
| OSCCLKSEDC | 1     | Clock signal used to run the SEDC primitive |
| RSTSEDC    | 1     | Reset SEDC                                  |

**Table 784: Output Ports**

| Name     | Range | Description                             |
|----------|-------|-----------------------------------------|
| SEDCBUSY | 1     | SEDC operation is currently in progress |
| SEDCERR  | 1     | SEDC error                              |
| SEDCERRC | 1     | Soft error is detected                  |

**Table 784: Output Ports (Continued)**

| Name             | Range | Description                                                                      |
|------------------|-------|----------------------------------------------------------------------------------|
| SEDCERRCRC       | 1     | Mismatch between calculated CRC of the bitstream as compared to the expected CRC |
| SEDCERRM         | 1     | Multi-bit errors are detected                                                    |
| SEDCFRMERRLOC    | 15:0  | Reports the last location of the frame that errored out                          |
| SEDCDSRERRLOCCIB | 12:0  | Reports the bit position in a particular frame that errored out                  |

**Table 785: Parameters**


| Name   | Values                           | Description |
|--------|----------------------------------|-------------|
| SEDCEN | "DIS" ( <i>default</i> )<br>"EN" | SEDC enable |

## SEDCA

Soft Error Detection and Correction

Architectures supported:

- ▶ LAV-AT-ES1

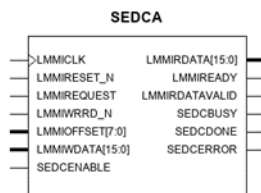**Table 786: Input Ports**

| Name        | Range | Description                                                                                                       |
|-------------|-------|-------------------------------------------------------------------------------------------------------------------|
| LMMICLK     | 1     | Clock signal from fabric                                                                                          |
| LMMIRESET_N | 1     | Resets the LMM interface logic. Does not change the register contents or reset the internals of the Hard IP block |
| LMMIREQUEST | 1     | Start LMMI transaction                                                                                            |
| LMMIWRD_N   | 1     | Write = HIGH, Read = LOW                                                                                          |

**Table 786: Input Ports (Continued)**

| Name       | Range | Description                                            |
|------------|-------|--------------------------------------------------------|
| LMMIOFFSET | 7:0   | Register offset within the slave, starting at offset 0 |
| LMMIWDATA  | 15:0  | Write Data                                             |
| SEDCENABLE | 1     | Start the SEDC engine                                  |

**Table 787: Output Ports**

| Name           | Range | Description                                                                         |
|----------------|-------|-------------------------------------------------------------------------------------|
| LMMIRDATA      | 15:0  | Read Data                                                                           |
| LMMIREADY      | 1     | Slave is ready to start new transaction. Wait states inserted by holding signal low |
| LMMIRDATAVALID | 1     | Read transaction is complete                                                        |
| SEDCBUSY       | 1     | SEDC busy status                                                                    |
| SEDCDONE       | 1     | SEDC done status                                                                    |
| SEDCERROR      | 1     | SEDC error detected                                                                 |

**Table 788: Parameters**


| Name    | Values                                 | Description                                     |
|---------|----------------------------------------|-------------------------------------------------|
| CLK_DIV | 2 ( <i>default</i> )<br>256            | SED Clock Divider based on OSC Frequency 450Mhz |
| GSR     | ENABLED ( <i>default</i> )<br>DISABLED | ENABLED: 0<br>DISABLED: 1                       |

## SEDFA

Soft Error Detect in Basic Mode

Architectures Supported:

- ▶ LFMXO4

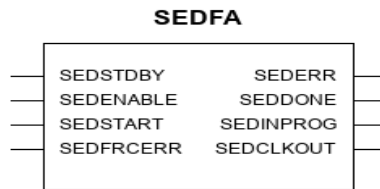

### Description

The Soft-Error Detect (SED) circuitry provides a method for the device to check its configuration data for soft-errors. SEDFA is used for SED basic mode.

**Table 789: Input Ports**

| Name      | Range | Description                                              |
|-----------|-------|----------------------------------------------------------|
| SEDSTDBY  | 1     | SED standby.                                             |
| SEDENABLE | 1     | SED enable (a Low clears the SED).                       |
| SEDSTART  | 1     | Error detection start (sampled at positive clock edge).  |
| SEDFRCERR | 1     | Force an SED error flag (e.g. for testing), active high. |

**Table 790: Output Ports**

| Name      | Range | Description                             |
|-----------|-------|-----------------------------------------|
| SEDINPROG | 1     | SED cycle is in progress, asserts High. |
| SEDDONE   | 1     | SED cycle is complete, asserts High.    |
| SEDERR    | 1     | SED error flag, asserts High.           |
| SEDCLKOUT | 1     | Optional clock output.                  |

**Table 791: Parameters**

| Name         | Value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Description         |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| SED_CLK_FREQ | "2.08", "2.15", "2.22",<br>"2.29", "2.38", "2.46",<br>"2.56", "2.66", "2.77",<br>"2.89", "3.02", "3.17",<br>"3.33", "3.5" (default),<br>"3.69", "3.91", "4.16",<br>"4.29", "4.43", "4.59",<br>"4.75", "4.93", "5.12",<br>"5.32", "5.54", "5.78",<br>"6.05", "6.33", "6.65", "7",<br>"7.39", "7.82", "8.31",<br>"8.58", "8.87", "9.17", "9.5",<br>"9.85", "10.23", "10.64",<br>"11.08", "11.57", "12.09",<br>"12.67", "13.3", "14",<br>"14.78", "15.65", "16.63",<br>"17.73", "19", "20.46",<br>"22.17", "24.18", "26.6",<br>"29.56", "33.25", "38",<br>"44.33", "53.2", "66.5",<br>"88.67", "133" | SED Clock Frequency |
| CHECKALWAYS  | "DISABLED" (default),<br>"ENABLED"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Check always        |
| DEV_DENSITY  | "010", "015", "015_256P",<br>"025", "050", "050_400P",<br>"080", "110"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Device Density      |

You can refer to related technical notes on the Lattice web site for more information and usage.

## SEDFB

Soft Error Detect in One Shot Mode

Architectures Supported:

- ▶ LFMX04

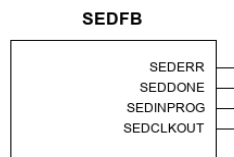




**Table 792: Output Ports**

| Name      | Range | Description                             |
|-----------|-------|-----------------------------------------|
| SEDINPROG | 1     | SED cycle is in progress, asserts High. |
| SEDDONE   | 1     | SED cycle is complete, asserts High.    |
| SEDERR    | 1     | SED error flag, asserts High.           |
| SEDCLKOUT | 1     | Optional clock output.                  |

### Description

The Soft-Error Detect (SED) circuitry provides a method for the device to check its configuration data for soft-errors. SEDFB is used for One Shot SED mode.

You can refer to related technical notes on the Lattice web site for more information and usage.

## SEIO18

Single Ended I/O block for 1.8V

Architectures supported:

- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5D
- ▶ LFMXO5-25
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C

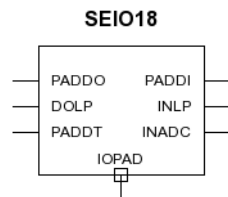


**Table 793: Input Ports**

| Name  | Description                              |
|-------|------------------------------------------|
| PADD0 | Data output from fabric to IO pad        |
| DOLP  | Data output for MIPI low-power mode      |
| PADDT | Data tri-state control; high = tri-state |

**Table 794: Output Ports**

| Name  | Description                        |
|-------|------------------------------------|
| PADDI | Data input from IO pad to fabric   |
| INLP  | Data input for MIPI low-power mode |
| INADC | Output to ADC                      |

**Table 795: Bidirectional Ports**

| Name  | Description       |
|-------|-------------------|
| IOPAD | IO Pad connection |

**Table 796: Parameters**

| Name     | Values                                                                | Description                      |
|----------|-----------------------------------------------------------------------|----------------------------------|
| PULLMODE | "DOWN" ( <i>default</i> )<br>"NONE"<br>"UP"<br>"KEEPER"<br>"FAILSAFE" | Enables pullup and pulldown mode |
| ENADC_IN | "DISABLED" ( <i>default</i> )<br>"ENABLED"                            | Enables pad A path to adc block  |
| MIPI     | "DISABLED" ( <i>default</i> )<br>"ENABLED"                            | Enable MIPI_DPHY IO TYPE         |

## SEIO18A

Single Ended I/O block for 1.8V

Architectures supported:

- ▶ LFCPNX
- ▶ LFMXO5T
- ▶ LFMXO5TD
- ▶ UT24CP

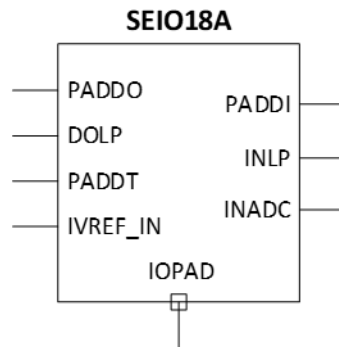


**Table 797: Input Ports**

| Name     | Description                                                                                                                                                                                                                                                                                                                                          |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PADD0    | HS Data out to PAD                                                                                                                                                                                                                                                                                                                                   |
| DOLP     | LP Data out to PAD                                                                                                                                                                                                                                                                                                                                   |
| PADDT    | Tri-state input signals to IO A,<br>0: driver output enabled<br>1: diver enabled to tri-state(high-Z) output                                                                                                                                                                                                                                         |
| IVREF_IN | Internal Receiver Reference Voltage Input. Each bank will support 3 VREF analog input voltages for flexibility to receive three different referenced input levels on the same bank. VREFs are used to set the threshold for the referenced input receiver. Each referenced receiver has a programmable option to select VREF1/2 and a internal VREF. |

**Table 798: Output Ports**

| Name  | Description                           |
|-------|---------------------------------------|
| PADDI | Data in                               |
| INLP  | MIPI LP RX output                     |
| INADC | Output to ADC through switch from PAD |

**Table 799: Bidirectional Ports**

| Name  | Description                                             |
|-------|---------------------------------------------------------|
| IOPAD | A virtual port, which is connected to the external pad. |

**Table 800: Parameters**


| Name     | Values                                      | Description                     |
|----------|---------------------------------------------|---------------------------------|
| PULLMODE | "DOWN" ( <i>default</i> )<br>"NONE"<br>"UP" | Pull mode                       |
| ENADC_IN | "DISABLED" ( <i>default</i> )<br>"ENABLED"  | Enables pad A path to adc block |
| MIPI     | "DISABLED" ( <i>default</i> )<br>"ENABLED"  | MIPI usage                      |

## SEIO33

Single Ended I/O Block for 3.3V

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

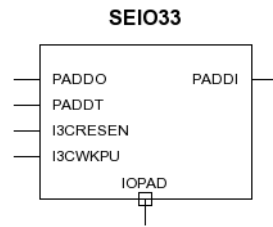**Table 801: Input Ports**

| Name     | Description                              |
|----------|------------------------------------------|
| PADD0    | Data output from fabric to IO pad        |
| PADDT    | Data tri-state control; high = tri-state |
| I3CRESEN | I3C resistor enable                      |
| I3CWKPU  | I3C weak pullup enable                   |

**Table 802: Output Ports**

| Name  | Description                      |
|-------|----------------------------------|
| PADDI | Data input from IO pad to fabric |

**Table 803: Bidirectional Ports**

| Name  | Description       |
|-------|-------------------|
| IOPAD | IO Pad connection |

**Table 804: Parameters**

| Name     | Values                    | Description     |
|----------|---------------------------|-----------------|
| PULLMODE | "DOWN" ( <i>default</i> ) | Pull down       |
|          | "NONE"                    | No pull up/down |
|          | "UP"                      | Pull up         |

**Table 804: Parameters**

| Name | Values     | Description                                                                                                                                       |
|------|------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
|      | "KEEPER"   | Retain the last state if bus connected to this IO goes to tri-state.                                                                              |
|      | "FAILSAFE" | For differential IOs, uses a weak pullup on the "true" pad and a weak pulldown on the "complement" pad to give a determinate value when undriven. |

## SGMIICDR


SGMII stands for Serial Gigabit Media Independent Interface, widely used for the interface to a discrete Ethernet PHY chip, it is defined as a 1.25 Gbps DDR interface with both clock and data pairs.

### Note:

You should not try to use this primitive directly. Instead, use the related IP in IP Catalog. The following information is for reference only.

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL-40
- ▶ LIFCL-17
- ▶ UT24C
- ▶ UT24CP

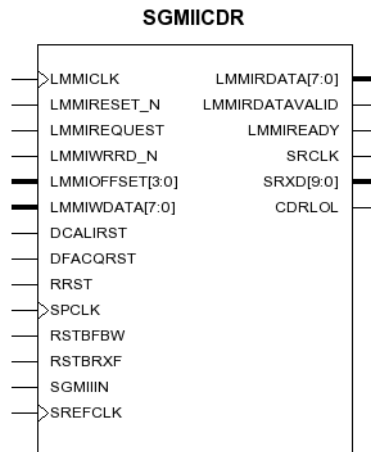**Table 805: Input Ports**

| Name        | Range | Description                                                                        |
|-------------|-------|------------------------------------------------------------------------------------|
| LMMICK      | 1     | Clock for LMMI interface                                                           |
| LMMIRESET_N | 1     | LMMI Reset                                                                         |
| LMMIREQUEST | 1     | LMMI request                                                                       |
| LMMIWRRD_N  | 1     | LMMI write-high/read-low from fabric                                               |
| LMMIOFFSET  | 3:0   | LMMI Offset                                                                        |
| LMMIWDATA   | 7:0   | LMMI Write Data                                                                    |
| DCALIRST    | 1     | Reset signal to trigger the DCO calibration process when it is necessary           |
| DFACQRST    | 1     | Reset signal to trigger the DCO frequency acquisition process when it is necessary |
| RRST        | 1     | Reset for the SGMII CDR IP                                                         |
| SPCLK       | 1     | 125MHz Fabric clock                                                                |
| RSTBFBW     | 1     | FIFO write reset                                                                   |
| RSTBRXF     | 1     | FIFO read reset                                                                    |
| SGMIIIN     | 1     | 125MHz reference clock                                                             |
| SREFCLK     | 1     | 125MHz reference clock                                                             |

**Table 806: Output Ports**

| Name           | Range | Description                                                    |
|----------------|-------|----------------------------------------------------------------|
| LMMIRDATA      | 7:0   | Read data                                                      |
| LMMIRDATAVALID | 1     | Read transaction is complete and LMMIRDATA contains valid data |
| LMMIREADY      | 1     | LMML ready signal                                              |
| SRCLK          | 1     | 125MHz recovered byte clock to Fabric                          |
| SRXD           | 9:0   | 10-bit parallel data to Fabric                                 |
| CDRLOL         | 1     | CDR loss of lock                                               |

**Table 807: Parameters**

| Name         | Values                                                                                                                                                         | Description                                      |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| GSR          | "ENABLED" ( <i>default</i> )<br>"DISABLED"                                                                                                                     | Enable global set/reset for the output registers |
| DCOITUNE4LSB | "0_PERCENT" ( <i>default</i> )<br>"15_PERCENT"<br>"34_PERCENT"<br>"60_PERCENT"<br>"NEG_34_PERCENT"<br>"NEG_28_PERCENT"<br>"NEG_20_PERCENT"<br>"NEG_12_PERCENT" | DACLSB current tuning.                           |
| DCOCTLGI     | "0_PERCENT" ( <i>default</i> )<br>"15_PERCENT"<br>"34_PERCENT"<br>"60_PERCENT"<br>"NEG_34_PERCENT"<br>"NEG_28_PERCENT"<br>"NEG_20_PERCENT"<br>"NEG_12_PERCENT" | DCO global current control.                      |
| DCOSTEP      | "100_PERCENT" ( <i>default</i> )<br>"17_PERCENT"<br>"NEG_34_PERCENT"<br>"NEG_17_PERCENT"                                                                       | Calibration step current adjust.                 |
| DCOCALDIV    | "100_PERCENT" ( <i>default</i> )<br>"NEG_10_PERCENT"<br>"NEG_17_PERCENT"<br>"NEG_25_PERCENT"<br>"60_PERCENT"<br>"42_PERCENT"<br>"25_PERCENT"<br>"11_PERCENT"   | Calibration Input current adjust.                |



**Table 807: Parameters (Continued)**

| Name           | Values                                                                                                                                                | Description                                 |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| DCOIOSTUNE     | "0_PERCENT" (default)<br>"10_PERCENT"<br>"NEG_40_PERCENT"<br>"NEG_20_PERCENT"<br>"39_PERCENT"<br>"49_PERCENT"<br>"20_PERCENT"<br>"30_PERCENT"         | DCO offset current tuning.                  |
| DCOFLTDAC      | "80MHZ" (default)<br>"51MHZ"<br>"181MHZ"<br>"103MHZ"                                                                                                  | DAC output current filter option.           |
| DCOSTARTVAL    | "NOMINAL" (default)<br>"12P5_PERCENT"<br>"NEG_50_PERCENT"<br>"NEG_25_PERCENT"<br>"100_PERCENT"<br>"125_PERCENT"<br>"50_PERCENT"<br>"75_PERCENT"       | Calibration start band current adjust.      |
| DCONUOFLSB     | "NEG_60_PERCENT" (default)<br>"NEG_80_PERCENT"<br>"NEG_20_PERCENT"<br>"NEG_40_PERCENT"<br>"20_PERCENT"<br>"0_PERCENT"<br>"60_PERCENT"<br>"40_PERCENT" | Up/down current option.                     |
| RPWDNB         | "POWER_UP" (default)<br>"POWER_DOWN"                                                                                                                  | SGMII CDR IP power-down control.            |
| CDR_CNT4SEL    | "BYPASSED" (default)<br>"BY_2"<br>"BY_3"<br>"BY_4"                                                                                                    | Selection for CDR random walk divider4.     |
| DCOITUNE       | "100_PERCENT" (default)<br>"NEG_33_PERCENT"<br>"NEG_50_PERCENT"<br>"NEG_60_PERCENT"                                                                   | ICO current adjustment.                     |
| BAND_THRESHOLD | 0'b000000 (default)                                                                                                                                   | Stop point for DCO band calibration.        |
| AUTO_FACQ_EN   | "ENABLED" (default)<br>"DISABLED"                                                                                                                     | Enable automatic DCO frequency acquisition. |
| AUTO_CALIB_EN  | "ENABLED" (default)<br>"DISABLED"                                                                                                                     | Enable automatic DCO band calibration.      |
| CDR_LOL_SET    | "1000_PPM" (default)<br>"2000_PPM"<br>"4000_PPM"<br>"300_PPM"                                                                                         | CDR loss of lock setting.                   |

**Table 807: Parameters (Continued)**

| Name            | Values                                                                                                                      | Description                                                    |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| FC2DCO_FLOOP    | "DISABLED" (default)<br>"ENABLED"                                                                                           | Force DCO lock to the frequency loop.                          |
| FC2DCO_DLOOP    | "DISABLED" (default)<br>"ENABLED"                                                                                           | Force DCO lock to the data loop.                               |
| CALIB_TIME_SEL  | "24_CYC" (default)<br>"26_CYC"<br>"28_CYC"<br>"210_CYC"                                                                     | Time to wait for DCO to be stable.                             |
| CALIB_CK_MODE   | "BY_2" (default)<br>"BYPASSED"                                                                                              | DCO calibration clock mode.                                    |
| BAND_CALIB_MODE | "256_FDBK_CLK_CYC" (default)<br>"512_FDBK_CLK_CYC"                                                                          | Waiting time to move to the next band.                         |
| REG_BAND_SEL    | 0'b00000 (default)                                                                                                          | DCO band selection.                                            |
| REG_BAND_OFFSET | 0'b0000 (default)                                                                                                           | DCO band offset control.                                       |
| REG_IDAC_SEL    | 0'b00000000 (default)                                                                                                       | Manual idac selection when reg_idac_en = 1.                    |
| LB_CTL          | "DISABLED" (default)<br>"DATA_OUT"<br>"CLK_OUT"                                                                             | Loopback control for testing lb_ctl.                           |
| REG_IDAC_EN     | "DISABLED" (default)<br>"ENABLED"                                                                                           | Enable manual idac selection.                                  |
| ATDCFG          | "0_PS" (default)<br>"92P5_PS"<br>"160_PS"<br>"248_PS"<br>"NEG_565_PS"<br>"NEG_475P5_PS"<br>"NEG_407P5_PS"<br>"NEG_343P5_PS" | Adjust atd pulse width (unit width 2 inv delay).               |
| ATDDL           | "0_PS" (default)<br>"62_PS"<br>"78P5_PS"<br>"NEG_12_PS"                                                                     | Delay atd pulse (unit width 2 inv delay).                      |
| BDAVOID_ENB     | "ENABLED" (default)<br>"DISABLED"                                                                                           | DAC 10b boundary code avoidance mode: 0 = enable, 1 = disable. |
| BYPASSATD       | "NOT_BYPASS" (default)<br>"BYPASS"                                                                                          | Bypass atd.                                                    |
| DCOIUPDNX2      | "1X" (default)<br>"2X"                                                                                                      | Up/down current option.                                        |
| IDAC_EN         | "DISABLED" (default)<br>"ENABLED"                                                                                           | Enable manual idac selection.                                  |

**Table 807: Parameters (Continued)**


| Name       | Values                                     | Description            |
|------------|--------------------------------------------|------------------------|
| FB_CLK_DIV | 0'b010 ( <i>default</i> )<br>000           | Feedback divider       |
| EN_RECALIB | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable re-calibration. |

## SGSR

Synchronous GSR Primitive

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

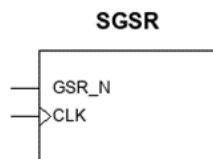**Table 808: Input Ports**

| Name  | Range | Description              |
|-------|-------|--------------------------|
| GSR_N | 1     | User GSR input           |
| CLK   | 1     | User clock for sync mode |

## SGSRA

 
### Note:

The SGSR primitive needs to be instantiated in the user design.

Synchronous Release Global Set/Reset Interface

Architectures Supported:

- ▶ LFMXO4



### Description

SGSR is used to reset or set all register elements in your design. The SGSR component can be connected to a net from an input buffer or an internally generated net. It is active LOW and when pulsed will set or reset all flip-flops, latches, registers, and counters to the same state as the local set or reset functionality. When input GSR is HIGH, the global signal is released at the positive edge of the clock (CLK).

It is not necessary to connect signals for SGSR to any register elements explicitly. The function will be implicitly connected globally. The functionality of the SGSR for sequential cells without a local set or reset are described in the appropriate library help page.

**Table 809: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| GSR  | 1     | GSR input   |
| CLK  | 1     | Clock input |

## SLICEMUX

Architectures Supported:

- ▶ LFMXO4

**Table 810: Input Ports**

| Name | Range | Description |
|------|-------|-------------|
| D1   | 1     | Data input  |
| D0   | 1     | Data input  |
| SEL  | 1     | Data select |

**Table 811: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| Z    | 1     | Data output |

## SP16K

16 kb Single Port Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

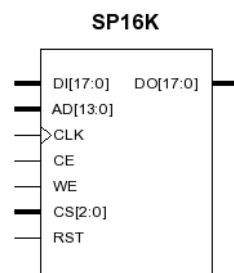


**Table 812: Input Ports**

| Name | Range | Description           |
|------|-------|-----------------------|
| DI   | 17:0  | Data in               |
| AD   | 13:0  | Address               |
| CLK  | 1     | Clock                 |
| CE   | 1     | Clock enable          |
| WE   | 1     | Write enable          |
| CS   | 2:0   | Chip select           |
| RST  | 1     | Output register reset |

**Table 813: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO   | 17:0  | Data out    |

**Table 814: Parameters**


| Name                    | Values                                                   | Description                                      |
|-------------------------|----------------------------------------------------------|--------------------------------------------------|
| DATA_WIDTH              | "X18" ( <i>default</i> )<br>"X9"<br>"X4"<br>"X2"<br>"X1" | Data width                                       |
| OUTREG                  | "BYPASSED" ( <i>default</i> )<br>"USED"                  | Enable output register                           |
| RESETMODE               | "SYNC" ( <i>default</i> )<br>"ASYN"                      | Reset mode                                       |
| GSR                     | "ENABLED" ( <i>default</i> )<br>"DISABLED"               | Enable global set/reset for the output registers |
| INITVAL_00...INITVAL_3F | Hex string, 320 bits, must include the "0x" prefix       | EBR initialization data                          |

**Table 814: Parameters**

| Name              | Values                                                                  | Description                                           |
|-------------------|-------------------------------------------------------------------------|-------------------------------------------------------|
| CSDECODE          | 000 ( <i>default</i> )<br>001<br>010<br>011<br>100<br>101<br>110<br>111 | Chip select active setting                            |
| ASYNC_RST_RELEASE | "SYNC" ( <i>default</i> )<br>"ASYNC"                                    | Reset release mode                                    |
| INIT_DATA         | "STATIC" ( <i>default</i> )<br>"DYNAMIC"<br>"NO_INIT"                   | Defines whether or not the memory file can be updated |

**Note:**

All inputs (except the register control signals) and all outputs are registered in the following manner:

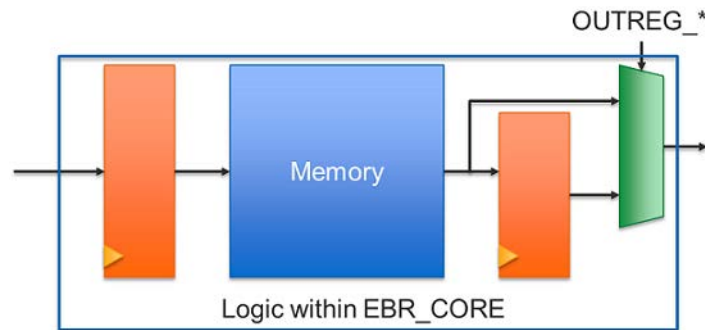

Port assignments for different data widths will follow the table below:

| Data Width | Input Data | Output Data | Address (MSB to LSB) |
|------------|------------|-------------|----------------------|
| 16Kx1      | DI[0]      | DO[0]       | AD[13:0]             |
| 8Kx2       | DI[1:0]    | DO[1:0]     | AD[13:1]             |
| 4Kx4       | DI[3:0]    | DO[3:0]     | AD[13:2]             |
| 2Kx9       | DI[8:0]    | DO[8:0]     | AD[13:3]             |
| 1Kx18      | DI[17:0]   | DO[17:0]    | AD[13:4]             |

For data widths that do not use all available address bits, the unused bits **must** be tied high for proper functionality.

The initial value of the memory may be given in the INITVAL property. The format is little endian, with bytes (up to 9 bytes) packed as follows, where byte[n] is the most significant byte and byte[0] is the least significant byte:

INITVAL\_XX = { {0, byte[n]}, {0, byte[n-1]}, ... {0, byte[1]}, {0, byte[0]} }

## SP16KA

16 Kb Single Port Block RAM

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

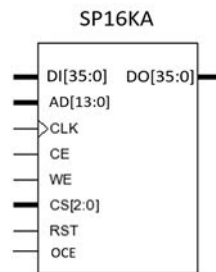


**Table 815: Input Ports**

| Name | Range | Type         | Active State | Description                         |
|------|-------|--------------|--------------|-------------------------------------|
| DI   | 35:0  | Data         | Active High  | Data Inputs                         |
| AD   | 13:0  | Addr         | Active High  | Address                             |
| CLK  | 1     | Clock        | Rising Edge  | Clock Input                         |
| CE   | 1     | Clock Enable | Active High  | Clock Enable                        |
| OCE  | 1     | Control      | Active High  | Clock Enable                        |
| WE   | 1     | Control      | Active High  | Write Enable<br>1: Write<br>0: Read |
| CS   | 2:0   | Control      | Active High  | Cascade Select                      |
| RST  | 1     | Reset        | Active High  | Reset                               |



**Table 816: Output Ports**

| Name | Range | Type | Description |
|------|-------|------|-------------|
| DO   | 35:0  | Data | Data Output |

**Table 817: Parameters**

| Name              | Values                                                                         | Description                                      |
|-------------------|--------------------------------------------------------------------------------|--------------------------------------------------|
| DATA_WIDTH        | "X36" (default)<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"                       | Data Width                                       |
| OUTREG            | "BYPASSED" (default)<br>"USED"                                                 | Enable output register                           |
| RESETMODE         | "SYNC" (default)<br>"ASYNC"                                                    | Reset mode                                       |
| GSR               | "ENABLED" (default)<br>"DISABLED"                                              | Enable global set/reset for the output registers |
| CSDECODE_A        | "000" (default)<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Chip select active setting                       |
| ASYNC_RST_RELEASE | "SYNC" (default)<br>"ASYNC"                                                    | Reset release mode                               |

**Table 817: Parameters (Continued)**

| Name                    | Values                                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INITVAL_00...INITVAL_3F | Hex string, 320 bits, must include the "0x" prefix | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| INIT_DATA               | "STATIC" ( <i>default</i> )<br>"DYNAMIC"           | <p>Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.</p> <p>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.</p> <p>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled.</p> |

**Note:**


When two SP16KAs are instantiated in the design, one will use Port A, and the other Port B.

**SP32K**

32 Kb Single Port Block RAM

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

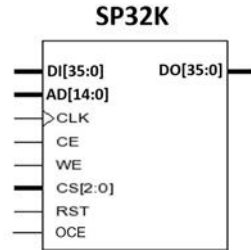**Table 818: Input Ports**

| Name | Range | Type         | Active State | Description                         |
|------|-------|--------------|--------------|-------------------------------------|
| DI   | 35:0  | Data         | Active High  | Data Inputs                         |
| AD   | 14:0  | Addr         | Active High  | Address                             |
| CLK  | 1     | Clock        | Rising Edge  | Clock Input                         |
| CE   | 1     | Clock Enable | Active High  | Clock Enable                        |
| OCE  | 1     | Control      | Active High  | Output Clock<br>Register Enable     |
| WE   | 1     | Control      | Active High  | Write Enable<br>1: Write<br>0: Read |
| CS   | 2:0   | Control      | Active High  | Cascade Select                      |
| RST  | 1     | Reset        | Active High  | Reset                               |

**Table 819: Output Ports**

| Name | Range | Type | Description |
|------|-------|------|-------------|
| DO   | 35:0  | Data | Data Output |

**Table 820: Parameters**

| Name                    | Values                                                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DATA_WIDTH              | "X36" ( <i>default</i> )<br>"X18"<br>"X9"<br>"X4"<br>"X2"<br>"X1"                       | Data width                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| OUTREG                  | "BYPASSED" ( <i>default</i> )<br>"USED"                                                 | Enable output register                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| WRITE_MODE_A            | "NORMAL" ( <i>default</i> )<br>"WRITETHROUGH"                                           | Write mode                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| RESETMODE               | "SYNC" ( <i>default</i> )<br>"ASYNC"                                                    | Reset mode                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| GSR                     | "ENABLED" ( <i>default</i> )<br>"DISABLED"                                              | Enable global set/reset for the output registers                                                                                                                                                                                                                                                                                                                                                                                                            |
| CSDECODE                | "000" ( <i>default</i> )<br>"001"<br>"010"<br>"011"<br>"100"<br>"101"<br>"110"<br>"111" | Chip select active setting                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| ASYNC_RST_RELEASE       | "SYNC" ( <i>default</i> )<br>"ASYNC"                                                    | Reset release mode                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| INITVAL_00...INITVAL_7F | Hex string, 320 bits, must include the "0x" prefix                                      | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| INIT_DATA               | "STATIC" ( <i>default</i> )<br>"DYNAMIC"                                                | <p>Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.</p> <p>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.</p> <p>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled.</p> |

## SP256K

Single Port RAM that can be configured in 16K x 16 mode. This block can be cascaded using logic implemented in fabric to create larger memories.

Architectures supported:

- ▶ iCE40 UltraPlus

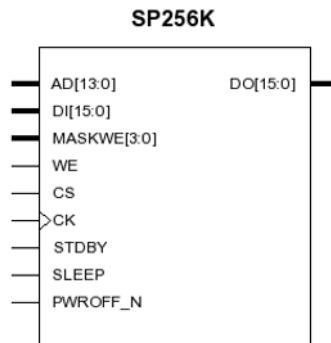


**Table 821: Input Ports**

| Name   | Range | Description                                                                                                                                                                     |
|--------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AD     | 13:0  | This Address input port is used to address the location to be written during the write cycle and read during the read cycle.                                                    |
| DI     | 15:0  | The data input bus used to write the data into the memory location specified by address input port during the write cycle.                                                      |
| MASKWE | 3:0   | The Bit Write feature where selective write to individual I/O's can be done using the Maskable Write Enable signals. Each bit masks a nibble of DI.                             |
| WE     | 1     | When the Write Enable input is Logic High, the memory is in the write cycle. When the Write enable is Logic Low, the memory is in the Read Cycle.                               |
| CS     | 1     | When the memory enable input is Logic High, the memory is enabled and read/write operations can be performed. When memory Enable input is logic Low, the memory is deactivated. |
| CK     | 1     | This is the external clock for the memory.                                                                                                                                      |
| STDBY  | 1     | When this pin is active then memory goes into low leakage mode, there is no change in the output state.                                                                         |

**Table 821: Input Ports (Continued)**

| Name     | Range | Description                                                                                                                                                                            |
|----------|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SLEEP    | 1     | This pin shut down power to periphery and maintain memory contents. The outputs of the memory are pulled low.                                                                          |
| PWROFF_N | 1     | This pin turns off the power to the memory core when it is driven low. There is no memory data retention when it is driven low. When PWROFF_N is driven high, the SPRAM is powered on. |

**Table 822: Output Ports**


| Name | Value | Description                                                                            |
|------|-------|----------------------------------------------------------------------------------------|
| DO   | 15:0  | It outputs the contents of the memory location addressed by the Address Input signals. |

## SP512K

512Kb Single Port Block RAM

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

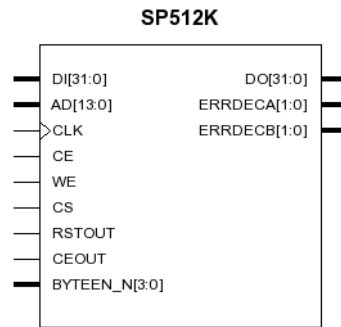**Table 823: Input Ports**

| Name     | Range | Description                                                                                                                 |
|----------|-------|-----------------------------------------------------------------------------------------------------------------------------|
| DI       | 31:0  | Data in                                                                                                                     |
| AD       | 13:0  | Address                                                                                                                     |
| CLK      | 1     | Clock                                                                                                                       |
| CE       | 1     | Clock enable                                                                                                                |
| WE       | 1     | Write enable                                                                                                                |
| CS       | 1     | Chip select                                                                                                                 |
| RSTOUT   | 1     | Output register reset                                                                                                       |
| CEOUT    | 1     | Output register clock enable                                                                                                |
| BYTEEN_N | 3:0   | Write byte enable: 0=enable, 1=disable.<br>BYTEEN_N[3] corresponds to the MSB of DI.<br>BYTEEN_N[0] corresponds to the LSB. |

**Table 824: Output Ports**

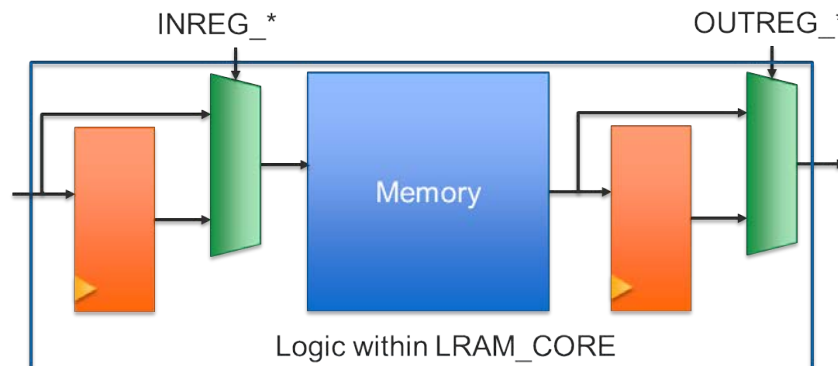
| Name    | Range | Description                     |
|---------|-------|---------------------------------|
| DDO     | 31:0  | Data out                        |
| ERRDECA | 1:0   | Port A 1- and 2-bit error flag. |
| ERRDECB | 1:0   | Port B 1- and 2-bit error flag. |

**Table 825: Parameters**

| Name                    | Values                                                    | Description                                                      |
|-------------------------|-----------------------------------------------------------|------------------------------------------------------------------|
| OUTREG                  | "NO_REG" ( <i>default</i> )<br>"OUT_REG"                  | Register output                                                  |
| GSR                     | "GSR_EN" ( <i>default</i> )<br>"GSR_DIS"                  | Enable global set/reset                                          |
| RESETMODE               | "SYNC" ( <i>default</i> )<br>"ASYNC"                      | Reset sync/async control                                         |
| INITVAL_00...INITVAL_7F | Hex string, 5120 bits,<br>must include the "0x"<br>prefix | Specifies the initialization<br>value for RAM type<br>primitives |
| ASYNC_RESET_RELEASE     | "SYNC" ( <i>default</i> )<br>"ASYNC"                      | Reset release sync/async                                         |
| ECC_BYTE_SEL            | "BYTE_EN"<br>"ECC_EN" ( <i>default</i> )                  | Error Correction Code Byte<br>Select                             |

**Note:**

All inputs (except the register control signals) and all outputs are registered in the following manner:


**SP8KC**

8K Single Port Block RAM

Architectures Supported:

- ▶ LFMXO4

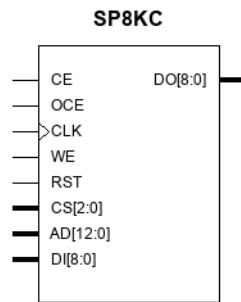

**Table 826: Input Ports**

| Name | Range | Description         |
|------|-------|---------------------|
| CE   | 1     | Clock enable        |
| OCE  | 1     | Output clock enable |
| CLK  | 1     | Clock               |
| WE   | 1     | Write enable        |
| RST  | 1     | Reset               |
| CS   | 2:0   | Chip select         |
| AD   | 12:0  | Address bus         |
| DI   | 8:0   | Input data          |

**Table 827: Output Ports**

| Name    | Range | Description |
|---------|-------|-------------|
| DO[8:0] | 8:0   | Read data   |

**Table 828: Parameters**

| Name       | Values                       | Description                                           |
|------------|------------------------------|-------------------------------------------------------|
| DATA_WIDTH | "1", "2", "4", "9" (default) | Data word width. Attached to a memory type primitive. |
| REGMODE    | "NOREG" (default), "OUTREG"  | Specifies the register mode for pipelining.           |

**Table 828: Parameters**


| Name                        | Values                                                                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RESETMODE                   | "SYNC" (default),<br>"ASYNCR"                                                               | Reset type. This attribute is attached to a block RAM-type primitive that has a memory size smaller than 9 bits. When set to SYNC, the memory reset is synchronized with the clock. When set to ASYNCR, the memory reset is asynchronous to the clock.                                                                                                                                                                                               |
| CSDECODE                    | "0b000"                                                                                     | Attached to a single-port block RAM primitive. The CSDECODE value determines the decoding value of CS[2:0]. A value set to "000" means that the memory is selected if CS[2:0]=1'B000.                                                                                                                                                                                                                                                                |
| WRITEMODE                   | "NORMAL" (default),<br>"WRITETHROUGH",<br>"READBEFORE"                                      | Read/Write mode.<br>Attached to a dual- and single-port RAM primitive.                                                                                                                                                                                                                                                                                                                                                                               |
| GSR                         | "ENABLED" (default),<br>"DISABLED"                                                          | Enables or disables the Global Set/Reset (GSR) for all registered primitives. Applicable to registers, PLLs, and memories such as SP8KA and DP8KA.                                                                                                                                                                                                                                                                                                   |
| INIT_DATA                   | "STATIC" (default),<br>"DYNAMIC"                                                            | Specifies if the initialization data (as defined by the INITVAL parameters) may be changed after the synthesis stage.<br><br>When INIT_DATA=STATIC, it is assumed that the initialization data will not change after synthesis, so an optimization to reduce the bitstream size can be applied.<br><br>When INIT_DATA=DYNAMIC it is assumed that the initialization data may change after synthesis, so the aforementioned optimization is disabled. |
| INITVAL_00 to<br>INITVAL_1F | "0x0000000000000000<br>0000000000000000<br>0000000000000000<br>0000000000000000<br>0000000" | Initialization value                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## SPI\_B

Hard SPI interface

Architectures supported:

## ▶ iCE40 UltraPlus

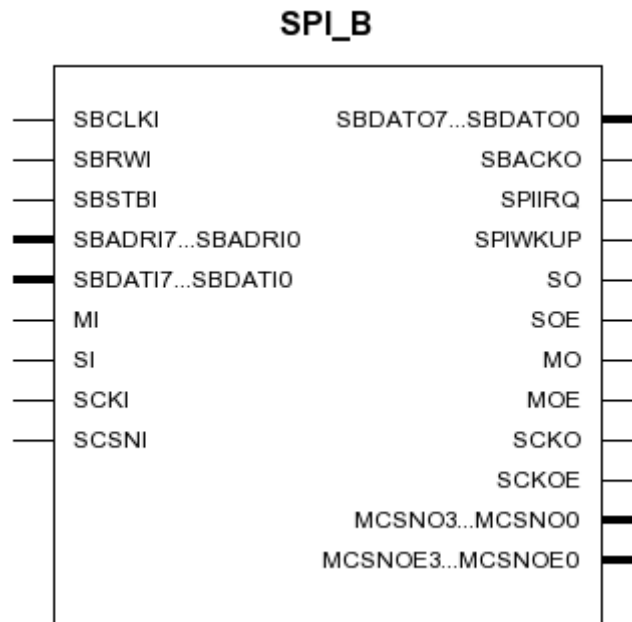**Table 829: Input Ports**

| Name              | Description                           |
|-------------------|---------------------------------------|
| SBCLKI            | System clock input.                   |
| SBRWI             | System read/write input.              |
| SBSTBI            | Strobe signal.                        |
| SBADRI7...SBADRI0 | System bus control registers address. |
| SBDATI7...SBDATI0 | System data input.                    |
| MI                | Master input from PAD.                |
| SI                | Slave input from PAD.                 |
| SCKI              | Slave clock input from PAD.           |
| SCSNI             | Slave chip select input from PAD.     |

**Table 830: Output Ports**

| Name              | Description           |
|-------------------|-----------------------|
| SBDATO7...SBDATO0 | System data output.   |
| SBACKO            | System acknowledgment |

**Table 830: Output Ports (Continued)**

| Name              | Description                              |
|-------------------|------------------------------------------|
| SPIIRQ            | SPI interrupt output                     |
| SPIWKUP           | SPI wake up from standby signal          |
| SO                | Slave output to PAD                      |
| SOE               | Slave output enable to PAD. Active high  |
| MO                | Master output to PAD                     |
| MOE               | Master output enable to PAD. Active high |
| SCKO              | Slave clock output to PAD                |
| SCKOE             | Slave clock output enable to PAD         |
| MCSNO3...MCSNO0   | Master chip select output to PAD         |
| MCSNOE3...MCSNOE0 | Master chip select output enable to PAD  |

**Table 831: Parameters**

| Name                 | Values                                                                                                                                                                                                                                                                                                                                                                                                                                          | Description                                                                                                                                     |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| BUS_ADDR74           | "0'b0000" ( <i>default</i> ),<br>"0'b0010".                                                                                                                                                                                                                                                                                                                                                                                                     | Fixed value. Upper left corner should be 0'b0000. Upper right corner should be 0'b0010. SBARDI[7:4] should match this value to activate the IP. |
| SPI_CLK_DIVIDER      | "0" ( <i>default</i> ),<br>"1", "2", "3", "4", "5", "6",<br>"7", "8", "9", "10", "11",<br>"12", "13", "14", "15", "16",<br>"17", "18", "19", "20", "21",<br>"22", "23", "24", "25", "26",<br>"27", "28", "29", "30", "31",<br>"32", "33", "34", "35", "36",<br>"37", "38", "39", "40", "41",<br>"42", "43", "44", "45", "46",<br>"47", "48", "49", "50", "51",<br>"52", "53", "54", "55", "56",<br>"57", "58", "59", "60", "61",<br>"62", "63". | Ratio of SCBLKI/SCKO.                                                                                                                           |
| FREQUENCY_PIN_SBCLKI | "NONE" ( <i>default</i> )                                                                                                                                                                                                                                                                                                                                                                                                                       | SDC constraint entry on SBCLKI port of SPI.                                                                                                     |

## SPR16X4

Distributed Single Port RAM with Synchronous Write and Asynchronous Read

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

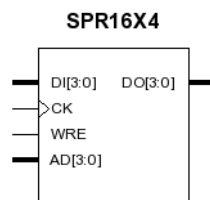


**Table 832: Input Ports**

| Name | Range | Description        |
|------|-------|--------------------|
| DI   | 3:0   | Data in            |
| AD   | 3:0   | Read/write address |
| CK   | 1     | Write clock        |
| WRE  | 1     | Write enable       |

**Table 833: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO   | 3:0   | Data out    |

**Table 834: Parameters**


| Name    | Values                            | Description                           |
|---------|-----------------------------------|---------------------------------------|
| INITVAL | "0x0000000000000000"<br>(default) | 16-digit hex string,<br>64 bits total |

## SPR16X4A

Distributed Single Port RAM. Synchronous write, asynchronous read

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

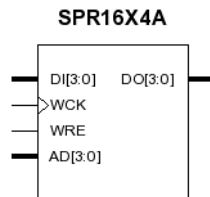**Table 835: Input Ports**

| Name | Range | Type    | Description  |
|------|-------|---------|--------------|
| DI   | 3:0   | Data    | Write data   |
| WCK  | 1     | Clock   | Write clock  |
| WRE  | 1     | Control | Write enable |
| AD   | 3:0   | Addr    | Address      |

**Table 836: Output Ports**

| Name | Range | Type | Description |
|------|-------|------|-------------|
| DO   | 3:0   | Data | Read data   |

**Table 837: Parameters**


| Name    | Values                                  | Description              |
|---------|-----------------------------------------|--------------------------|
| INITVAL | "0x0000000000000000" ( <i>default</i> ) | RAM initialization value |

## SPR16X4C

PFU based distributed Single Port RAM

Architectures Supported:

▶ LFMXO4

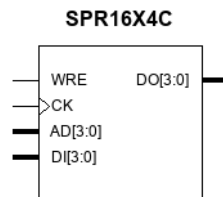**Table 838: Input Ports**

| Name | Range | Description        |
|------|-------|--------------------|
| DI3  | 1     | Input data         |
| DI2  | 1     | Input data         |
| DI1  | 1     | Input data         |
| DI0  | 1     | Input data         |
| AD3  | 1     | Read/Write address |
| AD2  | 1     | Read/Write address |
| AD1  | 1     | Read/Write address |
| AD0  | 1     | Read/Write address |
| CK   | 1     | Write clock        |
| WRE  | 1     | Write enable       |

**Table 839: Output Ports**

| Name | Range | Description |
|------|-------|-------------|
| DO3  | 1     | Read data   |
| DO2  | 1     | Read data   |
| DO1  | 1     | Read data   |
| DO0  | 1     | Read data   |

**Table 840: Parameters**

| Name    | Values               | Description          |
|---------|----------------------|----------------------|
| INITVAL | "0x0000000000000000" | Initialization value |

## SPR32X2

Distributed Single Port RAM. Synchronous write, asynchronous read

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

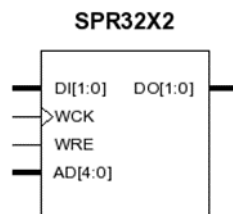




**Table 841: Input Ports**

| Name | Range | Type    | Description  |
|------|-------|---------|--------------|
| DI   | 1:0   | Data    | Write data   |
| WCK  | 1     | Clock   | Write clock  |
| WRE  | 1     | Control | Write enable |
| AD   | 4:0   | Addr    | Address      |

**Table 842: Output Ports**

| Name | Range | Type | Description |
|------|-------|------|-------------|
| DO   | 1:0   | Data | Read data   |

**Table 843: Parameters**

 
| Name    | Values                                  | Description              |
|---------|-----------------------------------------|--------------------------|
| INITVAL | "0x0000000000000000" ( <i>default</i> ) | RAM initialization value |

## START

Startup Controller

Architectures Supported:

▶ LFMXO4



### Description

This primitive determines the user clock for the Wake up sequence. You can instantiate this module in your HDL source to tie a specific user clock to be used in the wake-up sequence instead of the TCK (JTAG), BCLK (SDM), or MCLK/CCLK (sysCONFIG).

**Table 844: Input Ports**

| Name     | Range | Description |
|----------|-------|-------------|
| STARTCLK | 1     | Start clock |

**START Usage with Verilog HDL**

```
module START (STARTCLK);
input  STARTCLK;
endmodule
```

**START Usage with VHDL**


```
COMPONENT START
  PORT (
    STARTCLK      :  IN STD_ULOGIC
  );
END COMPONENT;
```

**TSALL**

Global Tristate Interface

Architectures Supported:

▶ LFMXO4

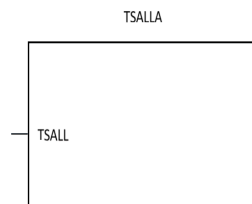**Table 845: Input Ports**

| Name  | Range | Description        |
|-------|-------|--------------------|
| TSALL | 1     | TSALLN for MachXO4 |

**Description**

TSALL is used to tristate buffers in your design. The TSALL component is connected to a net to drive all output and bidirectional buffers into a HIGH impedance state when active HIGH.

It is not necessary to connect signals to buffers explicitly. The function will be implicitly connected globally.

**Note**

The TSALL component may be driven by general FPGA logic or by the read-configuration block. In the latter case, the TSALL block must be driven by a buffer located at the RDCFGN pin. When locating the TSALL to the RDCFGN, you must do this by explicitly designating "RDCFGN" in the attribute. Check with customer support or with FAEs for more details.

---

## TSALLA

Global Tristate Interface

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

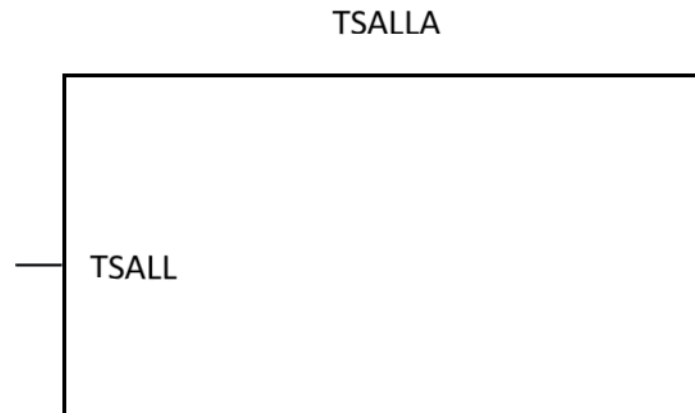


**Table 846: Input Ports**

| Name  | Range | Description           |
|-------|-------|-----------------------|
| TSALL | 1     | Tri-State All Control |

TSALLA is used to tristate buffers in your design. The TSALLA component is connected to a net to drive all output and bidirectional buffers into a HIGH impedance state when active HIGH.


It is not necessary to connect signals to buffers explicitly. The function will be implicitly connected globally.

## TSALLB

Tri-state all PIO outputs and bidirectional PIO

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

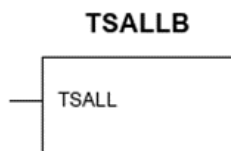**Table 847: Input Ports**

| Name  | Range | Description                                            |
|-------|-------|--------------------------------------------------------|
| TSALL | 1     | Tri-state control to all outputs and bidirectional PIO |


## TSHX2DQ

DQ tristate control for DDR2 & DDR3 memory

Architectures supported:

- ▶ LFCPNX

- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

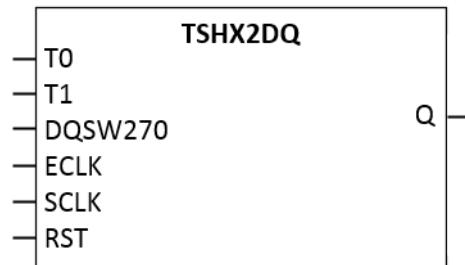

This primitive is used to generate the tristate control for DQ data output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interface with x2 gearing.

**Table 848: Input Ports**

| Name    | Description                                                           |
|---------|-----------------------------------------------------------------------|
| T0, T1  | Tristate input. T0 is output first, followed by T1.                   |
| DQSW270 | Clock that is 90° ahead of the clock used to generate the DQS output. |
| ECLK    | ECLK input.                                                           |
| SCLK    | Primary clock input (divide-by-2 of ECLK).                            |
| RST     | Reset input.                                                          |

**Table 849: Output Ports**

| Name | Description     |
|------|-----------------|
| Q    | Tristate output |

**Table 850: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## TSHX2DQS

DQS tristate control for DDR2 & DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

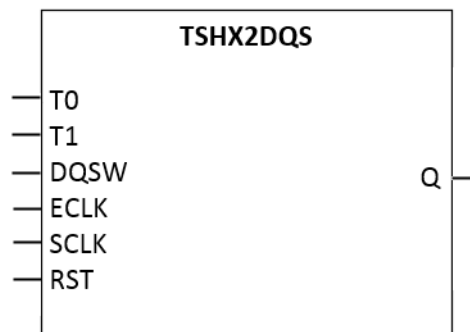

This primitive is used to generate the tristate control for DQS output.

**Table 851: Input Ports**

| Name   | Description                                         |
|--------|-----------------------------------------------------|
| T0, T1 | Tristate input. T0 is output first, followed by T1. |
| DQSW   | DQSW includes write leveling phase shift from ECLK. |
| ECLK   | ECLK input.                                         |
| SCLK   | Primary clock input (divide-by-2 of ECLK).          |
| RST    | Reset input.                                        |

**Table 852: Output Ports**

| Name | Description     |
|------|-----------------|
| Q    | Tristate output |

**Table 853: Parameters**


| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## TSHX4DQ

DQ tristate control for DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP

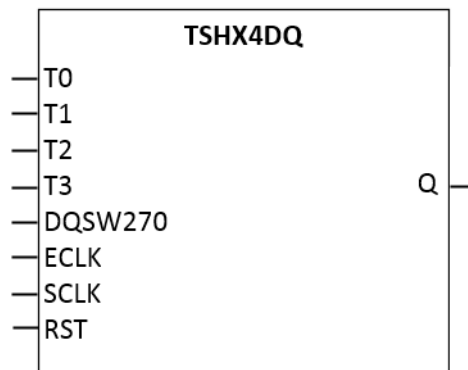

This primitive is used to generate the tristate control for DQ data output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces with x4 gearing.

**Table 854: Input Ports**

| Name    | Range | Description                                                           |
|---------|-------|-----------------------------------------------------------------------|
| T       | 3     | Tristate input. T0 is output first, T3 last.                          |
| DQSW270 | 1     | Clock that is 90° ahead of the clock used to generate the DQS output. |
| ECLK    | 1     | ECLK input.                                                           |

**Table 854: Input Ports**

| Name | Range | Description                                |
|------|-------|--------------------------------------------|
| SCLK | 1     | Primary clock input (divide-by-4 of ECLK). |
| RST  | 1     | Reset input.                               |

**Table 855: Output Ports**

| Name | Range | Description     |
|------|-------|-----------------|
| Q    | 1     | Tristate output |

**Table 856: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |


## TSHX4DQS

DQS tristate control for DDR3 memory

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL-40,LIFCL-17
- ▶ UT24C
- ▶ UT24CP



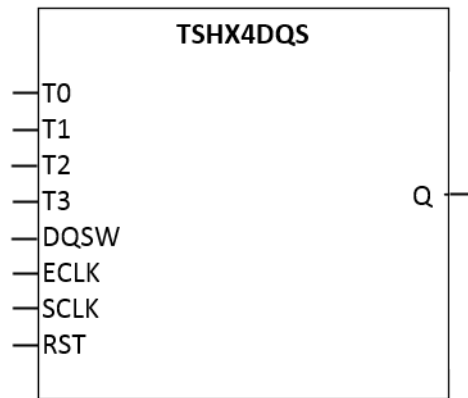

This primitive is used to generate the tristate control for DQS output for DDR3/DDR3L and LPDDR2/LPDDR3 memory interfaces with x4 gearing.

**Table 857: Input Ports**

| Name | Range | Description                                         |
|------|-------|-----------------------------------------------------|
| T    | 3:0   | Tristate input. T0 is output first, T3 last.        |
| DQSW | 1     | DQSW includes write leveling phase shift from ECLK. |
| ECLK | 1     | ECLK input.                                         |
| SCLK | 1     | Primary clock input (divide-by-4 of ECLK).          |
| RST  | 1     | Reset input.                                        |

**Table 858: Output Ports**

| Name | Range | Description     |
|------|-------|-----------------|
| Q    | 1     | Tristate output |

**Table 859: Parameters**

| Name | Values                                     | Description              |
|------|--------------------------------------------|--------------------------|
| GSR  | "ENABLED" ( <i>default</i> )<br>"DISABLED" | Enable global set/reset. |

## USB23

The software interface of USB2.0 & USB3.0 hard IP.

▶ LIFCL-33U



| Name           | Range | Description                                   |
|----------------|-------|-----------------------------------------------|
| USB_SUSPENDCLK | 1     | Suspend clock for usb23 controller in LP mode |
| USB3_MCUCLK    | 1     | MCU clock for USB3 phy register setting       |
| USB_RESETN     | 1     | Global reset of usb23 controller from user    |
| USB3_SYSRSTN   | 1     | Global reset of usb3 phy from user            |
| USB2_RESET     | 1     | Global reset of usb2 phy from user            |
| LMMICLK        | 1     | Clock of Immi bus                             |
| LMMIRESETN     | 1     | Reset of Immi bus                             |
| LMMIREQUEST    | 1     | Request of Immi bus                           |
| LMMIWRRD_N     | 1     | Write or read of Immi bus                     |
| LMMIOFFSET     | 14:0  | Address of Immi bus                           |
| LMMIWDATA      | 31:0  | Data of Immi bus                              |
| XMAWREADY      | 1     | AXI bus for DMA                               |
| XMWREADY       | 1     | AXI bus for DMA                               |
| XMBID          | 7:0   | AXI bus for DMA                               |
| XMBVALID       | 1     | AXI bus for DMA                               |
| XMBRESP        | 1:0   | AXI bus for DMA                               |

**Table 860: Input Ports (Continued)**

| Name               | Range | Description                            |
|--------------------|-------|----------------------------------------|
| XMBMISC_INFO       | 3:0   | AXI bus for DMA                        |
| XMARREADY          | 1     | AXI bus for DMA                        |
| XMRID              | 7:0   | AXI bus for DMA                        |
| XMRVALID           | 1     | AXI bus for DMA                        |
| XMRLAST            | 1     | AXI bus for DMA                        |
| XMRDATA            | 63:0  | AXI bus for DMA                        |
| XMRMISC_INFO       | 3:0   | AXI bus for DMA                        |
| XMRRESP            | 1:0   | AXI bus for DMA                        |
| XMCSYSREQ          | 1     | AXI bus for Lower Power                |
| STARTRXDETU3RXDET  | 1     | Start rx dectection from user          |
| DISRXDETU3RXDET    | 1     | Disable rx detection from user         |
| SS_RX_ACJT_EN      | 1     | ACJTAG for PMA                         |
| SS_RX_ACJT_ININ    | 1     | ACJTAG for PMA                         |
| SS_RX_ACJT_INIP    | 1     | ACJTAG for PMA                         |
| SS_RX_ACJT_INIT_EN | 1     | ACJTAG for PMA                         |
| SS_RX_ACJT_MODE    | 1     | ACJTAG for PMA                         |
| SS_TX_ACJT_DRVEN   | 1     | ACJTAG for PMA                         |
| SS_TX_ACJT_DATAIN  | 1     | ACJTAG for PMA                         |
| SS_TX_ACJT_HIGHZ   | 1     | ACJTAG for PMA                         |
| USBPHY_REFCLK_ALT  | 1     | Alternative refclk for USB PHY (60Mhz) |

**Table 861: Output Ports**

| Name           | Range | Description                 |
|----------------|-------|-----------------------------|
| LMMIRDATAVALID | 1     | Read data valid of Immi bus |
| LMMIREADY      | 1     | Ready of Immi bus           |
| LMMIRDATA      | 31:0  | Read data of Immi bus       |
| XMAWID         | 7:0   | AXI bus for DMA             |
| XMAWADDR       | 31:0  | AXI bus for DMA             |
| XMAWLEN        | 7:0   | AXI bus for DMA             |
| XMAWSIZE       | 2:0   | AXI bus for DMA             |
| XMAWBURST      | 1:0   | AXI bus for DMA             |

**Table 861: Output Ports (Continued)**

| <b>Name</b>        | <b>Range</b> | <b>Description</b>                    |
|--------------------|--------------|---------------------------------------|
| XMAWLOCK           | 1:0          | AXI bus for DMA                       |
| XMAWCACHE          | 3:0          | AXI bus for DMA                       |
| XMAWPROT           | 2:0          | AXI bus for DMA                       |
| XMAWVALID          | 1            | AXI bus for DMA                       |
| XMAWMISC_INFO      | 3:0          | AXI bus for DMA                       |
| XMWID              | 7:0          | AXI bus for DMA                       |
| XMWVALID           | 1            | AXI bus for DMA                       |
| XMWLAST            | 1            | AXI bus for DMA                       |
| XMWDATA            | 63:0         | AXI bus for DMA                       |
| XMWSTRB            | 7:0          | AXI bus for DMA                       |
| XMBREADY           | 1            | AXI bus for DMA                       |
| XMARID             | 7:0          | AXI bus for DMA                       |
| XMARVALID          | 1            | AXI bus for DMA                       |
| XMARADDR           | 31:0         | AXI bus for DMA                       |
| XMARLEN            | 7:0          | AXI bus for DMA                       |
| XMARSIZE           | 2:0          | AXI bus for DMA                       |
| XMARBURST          | 1:0          | AXI bus for DMA                       |
| XMARLOCK           | 1:0          | AXI bus for DMA                       |
| XMARCACHE          | 3:0          | AXI bus for DMA                       |
| XMARPROT           | 2:0          | AXI bus for DMA                       |
| XMARMISC_INFO      | 3:0          | AXI bus for DMA                       |
| XMRREADY           | 1            | AXI bus for DMA                       |
| XMCSYSACK          | 1            | AXI bus for Lower Power               |
| XMCACTIVE          | 1            | AXI bus for Lower Power               |
| DISRXDETU3RXDETACK | 1            | ACK of disabling rx detection to user |
| INTERRUPT          | 1            | Interrupt of usb23 controller         |
| SS_RX_ACJT_OUTN    | 1            | ACJTAG for PMA                        |
| SS_RX_ACJT_OUTP    | 1            | ACJTAG for PMA                        |

**Table 862: Bidirectional Ports**

| Name         | Description |
|--------------|-------------|
| RESEXTUSB3   | PMA signals |
| RESEXTUSB2   | PMA signals |
| DP           | PMA signals |
| DMP          | PMA signals |
| RXMP         | PMA signals |
| RXPP         | PMA signals |
| TXMP         | PMA signals |
| TXPP         | PMA signals |
| VBUS         | PMA signals |
| ID           | PMA signals |
| XOIN18       | PMA signals |
| XOOUT18      | PMA signals |
| REFINCLKEXTM | PMA signals |
| REFINCLKEXTP | PMA signals |

**Table 863: Parameters**


| Name     | Description              |
|----------|--------------------------|
| USB_MODE | The usb mode             |
| GSR_DIS  | Global Set/Reset Disable |

## VFB\_B

256 kb Single Port RAM

Architectures supported:

- ▶ iCE40 UltraPlus

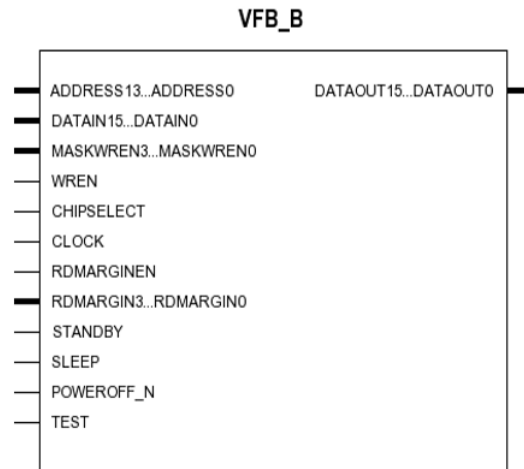**Table 864: Input Ports**

| Name                  | Description                                    |
|-----------------------|------------------------------------------------|
| ADDRESS13...ADDRESS0  | Read/write address                             |
| DATAIN15...DATAIN0    | Data input                                     |
| MASKWREN3...MASKWREN0 | Write mask. Each bit masks a nibble of DATAIN. |
| WREN                  | Write enable                                   |
| CHIPSELECT            | Chip select                                    |
| CLOCK                 | Clock                                          |
| RDMARGINEN            | Read margin enable                             |
| RDMARGIN3...RDMARGIN0 | Read margin                                    |
| STANDBY               | Standby mode enable. Active high.              |
| SLEEP                 | Sleep enable. Active high.                     |
| POWEROFF_N            | Power off enable. Active low.                  |
| TEST                  | Test enable                                    |

**Table 865: Output Ports**

| Name                 | Description  |
|----------------------|--------------|
| DATAOUT15...DATAOUT0 | Data output. |

## VHI

Logic High Generator

Architectures supported:

- ▶ iCE40 UltraPlus
- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

 


**Table 866: Output Ports**

| Name | Range | Description  |
|------|-------|--------------|
| Z    | 1     | VHI output Z |

 
## VLO

Logic Low Generator

Architectures supported:

- ▶ iCE40 UltraPlus
- ▶ LAV-AT-ES1
- ▶ LFCPNX
- ▶ LFD2NX

- ▶ LFD2NX-35
- ▶ LFD2NX-65
- ▶ LFMXO4
- ▶ LFMXO5
- ▶ LFMXO5-35T
- ▶ LFMXO5-65T
- ▶ LIFCL
- ▶ LN2-CT
- ▶
- ▶ UT24C
- ▶ UT24CP

**Table 867: Output Ports**

| Name | Range | Description  |
|------|-------|--------------|
| Z    | 1     | VLO output Z |

## WARMBOOT

Allows for loading a different configuration during run time

Architectures supported:

- ▶ iCE40 UltraPlus

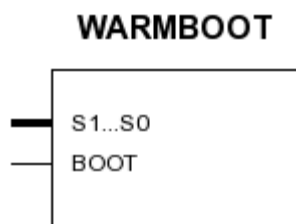




**Table 868: Input Ports**


| Name    | Description                           |
|---------|---------------------------------------|
| S1...S0 | Select desired configuration image.   |
| BOOT    | Trigger the re-configuration process. |

## WDT

Interface for Configuration Watchdog Timer

Architectures supported:

- ▶ LFCPNX
- ▶ LFD2NX
- ▶ LFMXO5
- ▶ LIFCL
- ▶ UT24C
- ▶ UT24CP

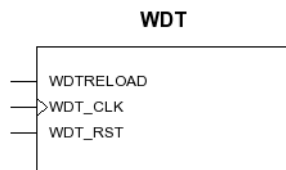**Table 869: Input Ports**

| Name      | Range | Description              |
|-----------|-------|--------------------------|
| WDTRELOAD | 1     | Reload signal            |
| WDT_CLK   | 1     | Clock source             |
| WDT_RST   | 1     | Synchronous Reset signal |

**Table 870: Parameters**

 
| Name     | Values                                        | Description   |
|----------|-----------------------------------------------|---------------|
| WDTEN    | "DIS" ( <i>default</i> )<br>"EN"              | WDT Enable    |
| WDTMODE  | "SINGLE" ( <i>default</i> )<br>"CONTINUOUS"   | Sets WDT Mode |
| WDTVALUE | 0'b00000000000000000000<br>( <i>default</i> ) | WDT value     |

## WDTA

Watchdog Timer Primitive

Architectures supported:

- ▶ LAV-AT-ES1
- ▶ LN2-CT

**Table 871: Input Ports**

| Name      | Range | Description           |
|-----------|-------|-----------------------|
| WDTRELOAD | 1     | Watchdog timer reload |

**Table 872: Parameters**

| Name    | Values                                      | Description   |
|---------|---------------------------------------------|---------------|
| WDTMODE | "SINGLE" ( <i>default</i> )<br>"CONTINUOUS" | user_wdt_mode |

| Name     | Values                                 | Description       |
|----------|----------------------------------------|-------------------|
| WDTVALUE | "0b000000000000000000000000" (default) | user_wdt_cnt      |
| GSR      | "ENABLED" (default)<br>"DISABLED"      | user_wdt_gsrn_dis |

### 9-Input Single Output Logic Block

Architectures supported:

- ▶ UT24CP

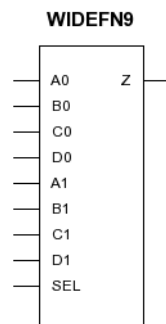


**Table 873: Input Ports**

| Name | Description            |
|------|------------------------|
| A0   | LUT0 Function input A0 |
| B0   | LUT0 Function input B0 |
| C0   | LUT0 Function input C0 |
| D0   | LUT0 Function input D0 |
| A1   | LUT0 Function input A1 |
| B1   | LUT0 Function input B1 |
| C1   | LUT0 Function input C1 |
| D1   | LUT0 Function input D1 |
| SEL  | LUT0/1 select          |

**Table 874: Output Ports**

| Name | Description     |
|------|-----------------|
| Z    | Function output |

**Table 875: Parameters**

| Name  | Values                    | Description              |
|-------|---------------------------|--------------------------|
| INIT0 | 0x0000 ( <i>default</i> ) | LUT0 initialization data |
| INIT1 | 0x0000 ( <i>default</i> ) | LUT1 initialization data |

---

# DSP Inference Guide

The following are examples of DSP Inference.

```
// Multiply without register example, corresponding to the
// following parameter settings of MAC16 (for iCE40UP primitive
// only):
```

```
//      A_REG = "0b0"
//      B_REG = "0b0"
//      TOP_8x8_MULT_REG = "0b0"
//      BOT_8x8_MULT_REG = "0b0"
//      PIPELINE_16x16_MULT_REG1 = "0b0"
//      PIPELINE_16x16_MULT_REG0 = "0b0"
//      TOPOUTPUT_SELECT = "0b10"
//      BOTOUTPUT_SELECT = "0b10"
```

```
module mult_unsign_7_6(a,b,c);
    parameter A_WIDTH = 7;
    parameter B_WIDTH = 6;

    input unsigned [(A_WIDTH - 1):0] a;
    input unsigned [(B_WIDTH - 1):0] b;
    output unsigned [(A_WIDTH + B_WIDTH - 1):0] c;

    assign c = a * b;
endmodule
```

```
// Multiply/add without register example, corresponding to the
// following parameter settings of
```

```
// MAC16:
//      A_REG = "0b0"
//      B_REG = "0b0"
//      TOP_8x8_MULT_REG = "0b0"
//      BOT_8x8_MULT_REG = "0b0"
//      PIPELINE_16x16_MULT_REG1 = "0b0"
//      PIPELINE_16x16_MULT_REG0 = "0b0"
//      TOPOUTPUT_SELECT = "0b00"
//      BOTOUTPUT_SELECT = "0b00"
//      TOPADDSUB_LOWERINPUT = "0b01"
//      BOTADDSUB_LOWERINPUT = "0b01"
module multaddsub_add_unsign_7_6(a,b,c,din);
    parameter A_WIDTH = 7;
    parameter B_WIDTH = 6;

    input unsigned [(A_WIDTH - 1):0] a;
    input unsigned [(B_WIDTH - 1):0] b;
    input unsigned [(A_WIDTH + B_WIDTH - 1):0] din;
    output unsigned [(A_WIDTH + B_WIDTH - 1):0] c;
```

```
    assign c = a * b + din;
endmodule
```

```
// Mult/sub with input registers, corresponding to the
// following parameter settings of MAC16:
```

```
//      A_REG = "0b1"
//      B_REG = "0b1"
//      TOP_8x8_MULT_REG = "0b0"
//      BOT_8x8_MULT_REG = "0b0"
```

---

```

//      PIPELINE_16x16_MULT_REG1 = "0b0"
//      PIPELINE_16x16_MULT_REG0 = "0b0"
//      TOPOUTPUT_SELECT = "0b00"
//      BOTOUTPUT_SELECT = "0b00"
//      TOPADDSUB_LOWERINPUT = "0b01"
//      BOTADDSUB_LOWERINPUT = "0b01"

module multaddsub_sub_sign_ir_7_6(clk,a,b,din,c,rst,set);
    parameter A_WIDTH = 7;
    parameter B_WIDTH = 6;

    input rst;
    input set;
    input clk;
    input signed [(A_WIDTH - 1):0] a;
    input signed [(B_WIDTH - 1):0] b;
    input signed [(A_WIDTH + B_WIDTH - 1):0] din;
    output signed [(A_WIDTH + B_WIDTH - 1):0] c;

    reg signed [(A_WIDTH - 1):0] reg_a;
    reg signed [(B_WIDTH - 1):0] reg_b;
    reg signed [(A_WIDTH + B_WIDTH - 1):0] reg_din;
    assign c = reg_din - reg_a * reg_b;
    always @(posedge clk)
    begin
        if(rst)
        begin
            reg_a <= 0;
            reg_b <= 0;
            reg_din <= 0;
        end
        else if(set)
        begin
            reg_a <= -1;
            reg_b <= -1;
            reg_din <= -1;
        end
        else
        begin
            reg_a <= a;
            reg_b <= b;
            reg_din <= din;
        end
    end
endmodule

```

---

**Note:**

All Lattice architectures may not support implementation of this RTL code in MULTADDSUB DSP primitives.

---

---

# Synthesis Attributes

This table lists synthesis attributes, and compares Radiant software and Lattice Diamond.

| Function      | Synplify Pro Diamond |             |                                                                                      | Synplify Pro Radiant |             |                                                                                                      |
|---------------|----------------------|-------------|--------------------------------------------------------------------------------------|----------------------|-------------|------------------------------------------------------------------------------------------------------|
|               | Attribute            | Value       | Description                                                                          | Attribute            | Value       | Description                                                                                          |
| ROM Synthesis | syn_romstyle         | logic       | Uses discrete logic primitives.                                                      | syn_romstyle         | auto        | Allows the synthesis tool to chose the best implementation to meet the design requirements for speed |
|               |                      | block_rom   | Specifies that the inferred ROM be mapped to the appropriate vendor-specific memory. |                      | logic       | Uses discrete logic primitives.                                                                      |
|               |                      | distributed | Implements the ROM structure as distributed ROM.                                     |                      | EBR         | Specifies that the inferred ROM be mapped to the appropriate vendor-specific memory.                 |
|               |                      |             |                                                                                      |                      | distributed | Implements the ROM structure as distributed ROM.                                                     |
| DSP Synthesis | syn_dspstyle         | DSP         | Implements the multipliers as dedicated hardware blocks.                             | syn_multstyle        | DSP         | Implements the multipliers as dedicated hardware blocks.                                             |
|               |                      | logic       | Implements the multipliers as logic.                                                 |                      | logic       | Implements the multipliers as logic.                                                                 |

## Command Line Reference Guide

This help guide contains information necessary for running the core design flow development from the command line. For tools that appear in the Radiant software graphical user interface, use Tcl commands to perform commands that are described in the [Tcl Command Reference Guide](#).

### Command Line Program Overview

Lattice FPGA command line programs can be referred to as the FPGA flow core tools. These are tools necessary to run a complete design flow and are used for tasks such as module generation, design implementation, design verification, and design configuration. This topic provides an overview of those tools, their functions, and provides links to detailed usage information on each tool.

Each command line program provides multiple options for specifying device information, applying special functions using switches, designating desired output file names, and [using command files](#). The programs also have particular default behavior that often precludes the need for some syntax, making commands less complex. See [Command Line General Guidelines](#) and [Command Line Syntax Conventions](#).



To learn more about the applications, usage, and syntax for each command line program, click on the hyperlink of the command line name in the section below.

### Note

Many of the command line programs described in this topic are run in the background when using the tools you run in the Radiant software environment. Please also note that in some cases, command line tools described here are used for earlier FPGA architectures only, are not always recommended for command line use, or are only available from the command line.

**Design Implementation Using Command Line Tools** The table below lists all of the command line tools used for various design functions and their graphical user interface counterparts. The table also provides the functional description of each command line tool.

**Table 1: The Radiant Software Core Design and Tool Chart**

| Design Function                                | Command Line Tool          | Radiant Process                                                                               | Description                                                                                                                   |
|------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Core Implementation and Auxiliary Tools</b> |                            |                                                                                               |                                                                                                                               |
| Encryption                                     | <a href="#">Encryption</a> | Encrypt Verilog/VHDL files                                                                    | Encrypts the input HDL source file with provided encryption key.                                                              |
| Synthesis                                      | <a href="#">SYNTHESIS</a>  | Synthesize Design                                                                             | Runs input source files through synthesis based on Lattice Synthesis Engine options set in Strategies.                        |
| Synthesis                                      | <a href="#">Synpwrap</a>   | Synthesize Design                                                                             | Used to manage Synopsys Synplify Pro synthesis programs.                                                                      |
| Mapping                                        | <a href="#">MAP</a>        | Map Design                                                                                    | Converts a design represented in logical terms into a network of physical components or configurable logic blocks.            |
| Placement and Routing                          | <a href="#">PAR</a>        | Place & Route Design                                                                          | Assigns physical locations to mapped components and creates physical connections to join components in an electrical network. |
| Static Timing Analysis                         | <a href="#">Timing</a>     | Post-Synthesis Timing Report, MAP Timing Report, Place & Route Timing Report                  | Generates reports that can be used for static timing analysis.                                                                |
| Back Annotation                                | <a href="#">Backanno</a>   | Tool does not exist in the Radiant software interface as process but employed in file export. | Distributes the physical design information back to the logical design to generate a timing simulation file.                  |

**Table 1: The Radiant Software Core Design and Tool Chart**

| Design Function      | Command Line Tool           | Radiant Process    | Description                                                                |
|----------------------|-----------------------------|--------------------|----------------------------------------------------------------------------|
| Bitstream Generation | <a href="#">BITGEN</a>      | Bitstream          | Converts a fully routed physical design into configuration bitstream data. |
| Device Programming   | <a href="#">PGRCMD</a>      | Device Programming | Downloads data files to an FPGA device.                                    |
| IP Packager          | <a href="#">IP Packager</a> | IP Packager        | IP author select files from disks and pack them into one IPK file.         |

**See Also**

- ▶ [Command Line Data Flow](#)
- ▶ [Command Line General Guidelines](#)
- ▶ [Command Line Syntax Conventions](#)
- ▶ [Invoking Core Tool Command Line Programs](#)

## Command Line Basics

This section provides basic instructions for running any of the core design flow development and tools from the command line.

Topics include:

- ▶ [Command Line Data Flow](#)
- ▶ [Command Line General Guidelines](#)
- ▶ [Command Line Syntax Conventions](#)
- ▶ [Setting Up the Environment to Run Command Line](#)
- ▶ [Invoking Core Tool Command Line Programs](#)
- ▶ [Invoking Core Tool Command Line Tool Help](#)


## Command Line Data Flow

The following chart illustrates the FPGA command line tool data flow through a typical design cycle.

### Command Line Tool Data Flow

**See Also**

- ▶ [Command Line Reference Guide](#)
- ▶ [Command Line General Guidelines](#)

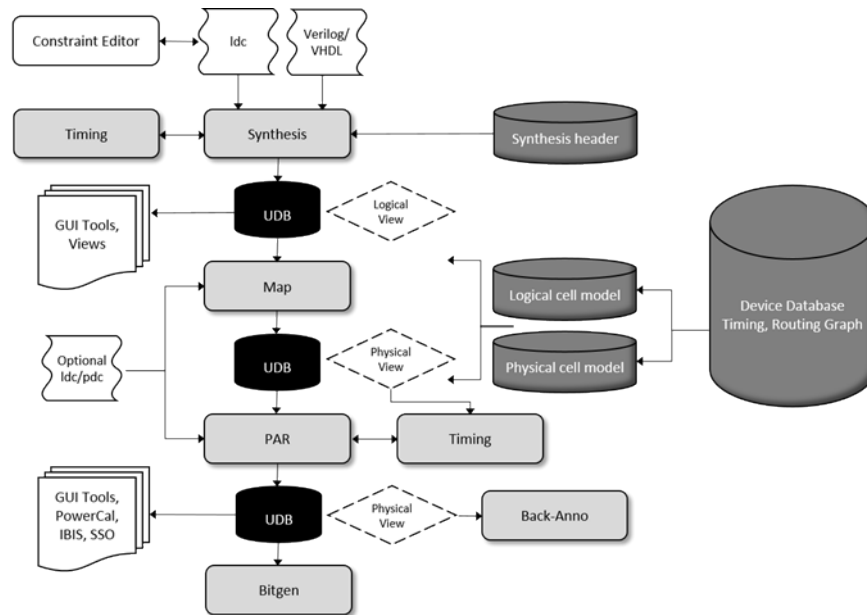

## Command Line General Guidelines

You can run the FPGA family Radiant software design tools from the command line. The following are general guidelines that apply.

- ▶ Files are position-dependent. Generally, they follow the convention [options] <infile> <outfile> (although order of <outfile> and <infile> are sometimes reversed). Use the **-h** command line option to check the exact syntax; for example, **par -h**.
- ▶ For any Radiant software FPGA command line program, you can invoke help on available options with the **-h** or **-help** command. See [Invoking Core Tool Command Line Programs](#) for more information
- ▶ Command line options are entered on the command line in any order, preceded by a hyphen (-), and separated by spaces.
- ▶ Most command line options are case-sensitive and must be entered in lowercase letters. When an option requires an additional parameter, the option and the parameter must be separated by spaces or tabs (i.e., **-l 5** is correct, **-l5** is not).
- ▶ Options can appear anywhere on the command line. Arguments that are bound to a particular option must appear after the option (i.e., **-f <command\_file>** is legal; **<command\_file> -f** is not).
- ▶ For options that may be specified multiple times, in most cases the option letter must precede each parameter. For example, **-b romeo juliet** is not acceptable, while **-b romeo -b juliet** is acceptable.
- ▶ If you enter the FPGA family Radiant software application name on the command line with no arguments and the application requires one or more arguments (**par**, for example), you get a brief usage message consisting of the command line format string.

- ▶ For any Radiant software FPGA command line program, you can store program commands in a command file. Execute an entire batch of arguments by entering the program name, followed by the **-f** option, and the command file name. This is useful if you frequently execute the same arguments each time you execute a program or to avoid typing lengthy command line arguments. See [Using Command Files](#).

### See Also

- ▶ [Command Line Reference Guide](#)
- ▶ [Invoking Core Tool Command Line Tool Help](#)
- ▶ [Command Line Syntax Conventions](#)
- ▶ [Using Command Files](#)
- ▶ [Command Line Data Flow](#)

## Command Line Syntax Conventions

The following conventions are used when commands are described:

**Table 2: Command Line Syntax Conventions**

| Convention       | Meaning                                                                                                                                                                                                                                                                                                                                   |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ( )              | Encloses a logical grouping for a choice between sub-formats.                                                                                                                                                                                                                                                                             |
| [ ]              | Encloses items that are optional. (Do not type the brackets.) Note that <infile[.udb]> indicates that the .udb extension is optional but that the extension must be UDB.                                                                                                                                                                  |
| { }              | Encloses items that may be repeated zero or more times.                                                                                                                                                                                                                                                                                   |
|                  | Logical OR function. You must choose one or a number of options. For example, if the command syntax says <b>pan up   down   right   left</b> you enter <b>pan up</b> or <b>pan down</b> or <b>pan right</b> or <b>pan left</b> .                                                                                                          |
| < >              | Encloses a variable name or number for which you must substitute information.                                                                                                                                                                                                                                                             |
| , (comma)        | Indicates a range for an integer variable.                                                                                                                                                                                                                                                                                                |
| - (dash)         | Indicates the start of an option name.                                                                                                                                                                                                                                                                                                    |
| :                | The bind operator. Binds a variable name to a range.                                                                                                                                                                                                                                                                                      |
| <b>bold text</b> | Indicates text to be taken literally. You type this text exactly as shown (for example, "Type <b>autoroute -all -i 5</b> in the command area.") Bold text is also used to indicate the name of an EPIC command, a Linux command, or a DOS command (for example, "The <b>playback</b> command is used to execute the macro you created."). |

**Table 2: Command Line Syntax Conventions**

| Convention                                        | Meaning                                                                                                                                                                                                                                              |
|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Italic text or text enclosed in angle brackets <> | Indicates text that is not to be taken literally. You must substitute information for the enclosed text. Italic text is also used to show a file directory path, for example, "the file is in the /cd/data/Radiant directory").                      |
| Monospace                                         | Indicates text that appears on the screen (for example, "File already exists.") and text from Linux or DOS text files. Monospace text is also used for the names of documents, files, and file extensions (for example, "Edit the autoexec.bat file" |

**See Also**

- ▶ [Command Line Reference Guide](#)
- ▶ [Command Line General Guidelines](#)
- ▶ [Invoking Core Tool Command Line Tool Help](#)
- ▶ [Using Command Files](#)

## Setting Up the Environment to Run Command Line

**For Windows** The environments for both the Radiant Tcl Console window or Radiant Standalone Tcl Console window (radiant.exe) are already set. You can start entering Tcl tool command or core tool commands in the console and the software will perform them.

When running the Radiant software from the Windows command line (via cmd.exe), you will need to add the following values to the following environment variables:

- ▶ PATH includes, for 64-bit

```
<Install_directory>\bin\nt64;<Install_directory>\ispfpga\bin\nt64
```

Example <Install\_directory>:

```
c:\lsc\radiant\1.0\bin\nt64;c:\lsc\radiant\1.0\ispfpga\bin\nt64
```

- ▶ FOUNDRY includes

```
set FOUNDRY= <Install_directory>\ispfpga
```

**For Linux** On Linux, the Radiant software provides a similar standalone Tcl Console window (radiantc) that sets the environment. The user can enter Tcl commands and core tool commands in it.

If you do not use the Tcl Console window, you need to run "bash" to switch to BASH" first, then run the following command.

► For BASH (64-bit):

```
export bindir=<Install_directory>/bin/lin64
source $bindir/radiant_env
```

After setting up for either Windows or PC, you can run the Radiant software executable files directly. For example, you can invoke the Place and Route program by:

```
par test_map.ldb test_par.ldb
```

**Note:**

---

For Programmer use `set PATH= C:/lsc/radiant/2024.2/programmer/bin/nt64.`

---

**See Also**

- [Invoking Core Tool Command Line Programs](#)
- [Invoking Core Tool Command Line Tool Help](#)

## Invoking Core Tool Command Line Programs

This topic provides general guidance for running the Radiant software FPGA flow core tools. Refer to [Command Line Program Overview](#) to see what these tools include and for further information.

For any the Radiant software FPGA command line programs, you begin by entering the name of the command line program followed by valid options for the program separated by spaces. Options include switches (**-f**, **-p**, **-o**, etc.), values for those switches, and file names, which are either input or output files. You start command line programs by entering a command in the Linux™ or DOS™ command line. You can also run command line scripts or command files.

See Table 2 on page 1672 for details and links to specific information on usage and syntax. You will find all of the usage information on the command line in the **Running FPGA Tools from the Command Line > Command Line Tool Usage** book topics.

**See Also**

- [Command Line Reference Guide](#)
- [Command Line Syntax Conventions](#)
- [Invoking Core Tool Command Line Tool Help](#)
- [Setting Up the Environment to Run Command Line](#)

▶ [Using Command Files](#)

## Invoking Core Tool Command Line Tool Help

To get a brief usage message plus a verbose message that explains each of the options and arguments, enter the FPGA family Radiant software application name on the command line followed by **-help** or **-h**. For example, enter **bitgen -h** for option descriptions for the **bitgen** program.

To redirect this message to a file (to read later or to print out), enter this command:

```
command_name -help | -h > filename
```

The usage message is redirected to the filename that you specify.

For those FPGA family Radiant software applications that have architecture-specific command lines (e.g., iCE40 UltraPlus), you must enter the application name, **-help** (or **-h**), and the architecture to get the verbose usage message specific to that architecture. If you fail to specify the architecture, you get a message similar to the following:

Use '**<apiname> -help <architecture>**' to get detailed usage for a particular architecture.

### See Also

- ▶ [Command Line Reference Guide](#)
- ▶ [Command Line Data Flow](#)
- ▶ [Command Line General Guidelines](#)
- ▶ [Command Line Syntax Conventions](#)
- ▶ [Setting Up the Environment to Run Command Line](#)
- ▶ [Using Command Files](#)

## Command Line Tool Usage

This section contains usage information of all of the command line tools and valid syntax descriptions for each.

Topics include:

- ▶ [Running cmpl\\_libs.tcl from the Command Line](#)
- ▶ [Running HDL Encryption from the Command Line](#)
- ▶ [Running Synthesis from the Command Line](#)
- ▶ [Running Postsyn from the Command Line](#)

- ▶ [Running MAP from the Command Line](#)
- ▶ [Running PAR from the Command Line](#)
- ▶ [Running Timing from the Command Line](#)
- ▶ [Running Backannotation from the Command Line](#)
- ▶ [Running Bit Generation from the Command Line](#)
- ▶ [Running Various Utilities from the Command Line](#)
- ▶ [Using Command Files](#)
- ▶ [Using Command Line Shell Scripts](#)

## Running `cmpl_libs.tcl` from the Command Line

The `cmpl_libs.tcl` command allows you to perform simulation library compilation from the command line.

The following information is for running `cmpl_libs.tcl` from the command line using the `tclsh` application. The supported Tcl version is 8.5 or higher.

If you do not have Tcl installed, or you have an older version, perform the following:

- ▶ Add `<Radiant_install_path>/tcltk/windows/BIN` to the front of your `PATH`, and
- ▶ For Linux users only, add `<Radiant_install_path>/tcltk/linux/bin` to the front of your `LD_LIBRARY_PATH`

### Note

---

The default version of Tcl on Linux could be older and may cause the script to fail. Ensure that you have Tcl version 8.5 or higher.

---

To check Tcl version, type:

```
tclsh
% info tclversion
% exit
```

For script usage, type:

```
tclsh cmpl_libs.tcl [-h|-help]
```



## Notes

- ▶ If Siemens Questa is already in your PATH and preceding any tools, you can use: `'-sim_path .'` for simplification; `'.'` will be added to the front of your PATH.
- ▶ Ensure the `FOUNDRY` environment variable is set. If the `FOUNDRY` environment variable is missing, then you need to set it before running the script. For details, refer to [Setting Up the Environment to Run Command Line](#).
- ▶ To execute this script error free, **Siemens Questa 2020.4** or a later version should be used for compilation.

Check log files under `<target_path>` (default = `.`) for any errors, as follows:

- ▶ For Windows, type:
 

```
find /i "error" *.log
```
- ▶ For Linux, type:
 

```
grep -i error *.log
```

Subjects included in this topic:

- ▶ [Running compl\\_lib.tcl](#)
- ▶ [Command Line Syntax](#)
- ▶ [compl\\_libs.tcl Options](#)
- ▶ [Example](#)

## Running compl\_lib.tcl

`compl_libs.tcl` allows you to compile simulation libraries from the command line.

## Command Line Syntax

```
tclsh <Radiant_install_path>/cae_library/simulation/scripts/compl_libs.tcl -
sim_path <sim_path> [-sim_vendor {mentor<default>|cadence}] [-device
{ice40up|lifel|lfcpx|lfd2nx|lfxo5-25|lfxo5-15d|lfxo5-100t|lfxo5-
55t|lavat|ut24c|ut24cp|all<default>}] [-target_path <target_path>]
```

## compl\_libs.tcl Options

The table below contains all valid options for `cmpl_libs.tcl`.

**Table 3: `cmpl_libs.tcl` Command Line Options**

| Option                                                                                                                                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>-sim_path &lt;sim_path&gt;</code>                                                                                                   | The <code>-sim_path</code> argument specifies the path to the simulation tool executable (binary) folder. This option is mandatory. Currently, only QuestaSim simulators from Mentor and Xcelium simulator from Cadence are supported. NOTE: If <code>&lt;sim_path&gt;</code> has spaces, then it must be surrounded by " ". Do not use { }.                                                                                                                                                                                                                                              |
| <code>[-sim_vendor {mentor&lt;default&gt; cadence}]</code>                                                                                | The <code>-sim_vendor</code> argument specifies simulation vendor. This argument is optional. If you do not use this argument, Mentor is chosen by default, and the libraries are compiled for QuestaSim. If you are using QuestaSim choose mentor, and Xcelium choose cadence for <code>-sim_vendor</code> .                                                                                                                                                                                                                                                                             |
| <code>[-device {ice40up lifcl lfcpx lfd2nx lfrmxo5-25 lfrmxo5-15d lfrmxo5-100t lfrmxo5-55t lavat ut24c ut24cp all&lt;default&gt;}]</code> | The <code>-device</code> argument specifies the Lattice FPGA device to compile simulation libraries for. This argument is optional, and the default is to compile libraries for all the Lattice FPGA devices.                                                                                                                                                                                                                                                                                                                                                                             |
| <code>[-target_path &lt;target_path&gt;]</code>                                                                                           | <p>The <code>-target_path</code> argument specifies the target path, where you want the compiled libraries and <code>modelsim.ini</code> file to be located. This argument is optional, and the default target path is the current folder.</p> <p><b>Note:</b></p> <ol style="list-style-type: none"> <li>1. This argument is recommended if the current folder is the Radiant software's startup (binary) folder, or if the current folder is write-protected.</li> <li>2. If <code>&lt;target_path&gt;</code> has spaces, then it must be surrounded by " ". Do not use { }.</li> </ol> |

### Example

This section illustrates and describes an example of a Simulation Libraries Compilation Tcl command.

The following command will compile all the Lattice FPGA libraries for Verilog simulation and place them under the folder specified by `-target_path`. The path to QuestaSim is specified by `-sim_path`.

```
tclsh <c:/lsc/radiant/1.0/>/cae_library/simulation/scripts/
cmpl_libs.tcl -sim_path C:/questasim64_10.4e/win64 -target_path
c:/mti_libs
```

### See Also

► [Command Line Program Overview](#)

# Running HDL Encryption from the Command Line

Radiant software allows you to encrypt the individual HDL source files.

The tool supports encryption of Verilog HDL and VHDL files. Per command's execution, single source file is encrypted.

The HDL file can be partially or fully encrypted depending on pragmas' placements within the HDL file. To learn more about pragmas' placements, see [Defining Pragmas](#).

Subjects included in this topic:

- ▶ [Running HDL Encryption](#)
- ▶ [Command Line Syntax](#)
- ▶ [Encryption Options](#)
- ▶ [Examples](#)

## Running HDL Encryption

Before running the utility, you need to annotate the HDL file with the appropriate pragmas. Additionally, you may need to create a key file containing an encryption key. To view the key file's proper formatting, see [Key File](#).

## Command Line Syntax

```
encrypt_hdl [-k <keyfile>] [-l language]  
[-o <output_file>] [-comment <comment>] <input_HDL_file>
```

## Encryption Options

The table below contains descriptions of all valid options for HDL encryption.

**Table 4: Encryption Command Line Options**

| Option                                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-h(elp)</b>                            | Print command help message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>-k &lt;keyfile&gt;</b>                 | <p>A key repository file. Depending on the location of the key, this option is required or optional.</p> <ul style="list-style-type: none"> <li>▶ If the HDL source file contains no pragma, the key file is required. The tool encrypts the entire HDL file using all key sets declared in the key file.</li> <li>▶ If the HDL source file contains only <code>begin</code> and <code>end</code> pragmas and no key pragmas, the key file is required. The tool encrypts the section between <code>begin</code> and <code>end</code> using all key sets declared in the key file.</li> <li>▶ If the HDL source file contains the proper key pragma, <code>key_keyowner</code>, <code>key_keyname</code>, but the key file is missing the provided <code>key_public_key</code>, the tool fetches the first public key string matching the <code>key_keyowner</code> and <code>key_keyname</code> requirement in the key file</li> </ul> <p>If the HDL source file contains the proper definition of key, this option is not required.</p> <p>NOTE: If the same key name is defined in both, HDL source file and key.txt file, the key defined in HDL source file has a precedence.</p> |
| <b>-l &lt;language&gt;</b>                | Directive language, vhdl or verilog (default).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>-o &lt;output_file&gt;</b>             | An encrypted HDL file. This is an optional field. If not defined during the encryption, the tool generates a new output file <code>&lt;input_file_name&gt;_enc.v</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>&lt;input&gt;</b>                      | Input Verilog or VHDL file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>-comment</b><br><b>&lt;comment&gt;</b> | Additional comment.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## Examples

This section illustrates and describes a few examples of HDL encryption using Tcl commands.

### Example 1

This example shows a successful encryption of HDL file with default options. It is assumed that key is properly defined in HDL file. Since output file name was not specified, the tool generates an output file `<file_name>_enc.v` in the same directory as the location of the input file.

```
> encrypt_hdl -k source/impl_1/keys.txt -o top.v top.v
Options:
  Key repository file:      source/impl_1/keys.txt
  Directive language:      <not specified>, use verilog as default
  Output file: top.v
Processed 2 envelopes.
```

### Example 2

This example shows a successful encryption of HDL file by generating a new output file.

```
> encrypt_hdl -k source/impl_1/keys.txt -o remote_files/top_v1_en.v remote_files/sources/top_v1_part.v
Options:
  Key repository file:    source/impl_1/keys.txt
  Directive language:    <not specified>, use verilog as default
  Output file:           remote_files/top_v1_en.v
Processed 2 envelopes.
```

### Example 3

This example shows unsuccessful HDL encryption due to a missing key file. To correct this issue, the user must either define the appropriate key file key.txt or annotate the HDL file with appropriate pragmas. To correct the issue, define the key either in key.txt file or directly in HDL source file.

```
> encrypt_hdl -o remote_files/sources/top_v1_part_en.v remote_files/sources/top_v1_part.v
Options:
  Key repository file:    <not specified>
  Directive language:    <not specified>, use verilog as default
  Output file:           remote_files/sources/top_v1_part_en.v
ERROR - remote_files/sources/top_v1_part.v at line 88: missing key.
```

### Note

A key is always required in the encryption tool while key file is optional. If the complete key: key\_keyowner, key\_keyname, key\_method, and key\_public\_key, is defined within HDL source file, key file is not required.

For specific steps and information on how to encrypt HDL files in the Radiant software, refer to the following section in the Radiant Software Help: **User Guides > Securing the Design**.

## Defining Pragmas

Pragmas are used to specify the portion of the HDL source file that must be encrypted. Pragma' definition is compliant with IEEE 1735-2014 V1 standard.

Pragma syntax in Verilog HDL file:

```
`pragma protect <pragma's option>
```

Pragma syntax in VHDL file:

```
`protect <pragma's option>
```

**Table 5: List of Available Pragma Options**

| Name        | Available Values | Description                                                |
|-------------|------------------|------------------------------------------------------------|
| version     | 1 (default)      | Specifies the current Radiant software encryption version. |
| author      | string           | Specifies the file creator.                                |
| author_info | string           | Additional information you would like to include in file.  |
| encoding    | base64           | The output format of processed data.                       |
| begin       |                  | The start point for data obfuscation.                      |

**Table 5: List of Available Pragma Options**

| Name           | Available Values                   | Description                                           |
|----------------|------------------------------------|-------------------------------------------------------|
| end            |                                    | The end point for data obfuscation.                   |
| key_keyowner   | string                             | The key creator.                                      |
| key_keyname    | string                             | The RSA key name to specify the private key.          |
| key_method     | rsa                                | The cryptographic algorithm used for key obfuscation. |
| key_public_key |                                    | The RSA public key file name.                         |
| data_method    | aes128-cbc<br>aes256-cbc (default) | The AES encryption data method.                       |

To encrypt HDL source file, encryption version, encoding type, and key specific pragmas must be defined in the HDL source file by HDL designer; only the content within the pragmas is encrypted.

### Note

Multiple key sets can be declared in a single key file.

### Example of Verilog source file marked with Pragmas:

```
// 3 bit counter with asynchronous reset
module count(c,clk,rst);

input clk,rst;
output [2:0]c;
reg [2:0]c;

`pragma protect version=1
`pragma protect author="<Your Name>"
`pragma protect author_info="<Your info>"
`pragma protect key_keyowner="Lattice Semiconductor"
`pragma protect key_keyname="LSCC_RADIANT_2"
`pragma protect key_method="rsa"
`pragma protect key_public_key
MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEAEZKUUhbuB6vSsc70hQJ
iNAWJR5unW/OWp/LFI71eAl3s9bOYE201Kdxbai+ndIeo8xFt2btzetUzuR6Srvh
xR2Sj9BbW1QToo2u8JfzD3X7AmRv1wKRX8708DPo4LDHZMA3qh0kFDDWkp2Eausf
LzE2cVxgq7fy/bDhUeN8xKQCSKJ7aguG6k0I6ROoZz211jzDLUQzhm2qYF8SpU1o
tD8/uw53wLfSuhR3MBOB++xcn2imvSLqdgHWuhX6CtZIx5CD4y8inCboLy/0Qrf6
sdTN5SAg2OZhjeNdzmqSWqhL2JTDw+Ou2fWzhEd0i/HN0y4NMr6h9fNn8nqxRyE7
IwIDAQAB

//put a blank line above
`pragma protect data_method="aes256-cbc"

`pragma protect begin
always @(posedge clk or posedge rst)
begin
if (rst)
c = 3'b000;
else
c = c + 1;
end
`pragma protect end

endmodule
```

The encrypted file may contain multiple encrypted key sets.

**Example of encrypted Verilog file:**

```
// 3 bit counter with asynchronous reset
module count(c,clk,rst);

input clk,rst;
output [2:0]c;
reg [2:0]c;

//put a blank line above

`pragma protect begin_protected
`pragma protect version=1
`pragma protect author="<Your Name>"
`pragma protect author_info="<Your info>"
`pragma protect encrypt_agent="Radiant encrypt_hdl"
`pragma protect encrypt_agent_info="Radiant encrypt_hdl Version 1.0"

`pragma protect encoding=(enctype="base64", line_length=64, bytes=256)
`pragma protect key_keyowner="Lattice Semiconductor"
`pragma protect key_keyname="LSCC_RADIAN2"
`pragma protect key_method="rsa"
`pragma protect key_block
gOatWm+1rVPboQIqaGf2gvMdUH/vTXzyRA4C+tdNxpqNWeeTXrTF+uIa21e9Io7S
K6ce3BVAxydtADq5Wy50EjcHzUi3YmleyEdFVn2pxCp+3csuiZSeNgbtYutonZjh
8ReQYzPqKt6fZvhZ1AqHiuuZhFUSZQFXqnT8IW4dQ7HWudREzx6jB7h+7vI+wJvH
N5kZMiHBFGRhiTePZ+yDOQwFVvwITezEoS099I8MoRGWl1U9kb4/Kenk96MIqE3W
lKAiQivIjXeWvLRqmOb0hNGRoOEYwjlY1lpjq9GyelHoDC6czdyqOOWrunt//XNu
v/QtpeEe/co7o9arRtHbv==

`pragma protect data_method="aes256-cbc"
`pragma protect encoding=(enctype="base64", line_length=64, bytes=176)
`pragma protect data_block
z+c6t504d6NkyrL5x6j6/raeaQmg0v9xmQOVaj3oq45SAsUIhGaihFVt+sS2kbNJ
/KBaQdcixAJHW8uRjtE/4nB+gZbVQsVnhRUlH/beksDnhdhWhNw/fcX6v6xptGwh
wQxsY+Ijzt+pGC9rOEmAo2tndK63cWjHlg8hIZYnnw7yZAzv2OqylztSWFkdR9T4
mHclplFr96xb59oCRqbpQQgeESGgX9L1Yfd8j0ZXkSM=

`pragma protect end_protected

endmodule
```

**Example of VHDL source file marked by Pragmas:**

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;
use ieee.std_logic_arith.all;

entity top_test is

    port(
        cout : out std_logic_vector(7 downto 0);
        reset : in  std_logic;
        clk  : in  std_logic
    );
end top_test;

architecture top_test_arch of top_test is

    signal count : std_logic_vector(7 downto 0);

begin

    `protect version=1

    `protect begin

        P100 : PROCESS(clk, reset)
        BEGIN
            IF (reset = '1') THEN
                count <= (others => '0');
            ELSE
                IF (clk'event and clk = '1') THEN
                    count <= count + 1;
                    cout <= count;
                END IF;
            END IF;
        END PROCESS;

    `protect end

end top_test_arch;
```



**Example of encrypted VHDL file:**

```

library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;
use ieee.std_logic_arith.all;

entity top_test is

    port(
        cout : out std_logic_vector(7 downto 0);
        reset : in  std_logic;
        clk  : in  std_logic
    );
end top_test;

architecture top_test_arch of top_test is

    signal count : std_logic_vector(7 downto 0);

begin

    `protect begin_protected
    `protect version=1
    `protect author="Lattice Semiconductor Corporation"
    `protect author_info="Lattice Semiconductor Corporation"
    `protect encrypt_agent="Radiant encrypt_hdl"
    `protect encrypt_agent_info="Radiant encrypt_hdl Version 1.0"

    `protect encoding=(enctype="base64", line_length=64, bytes=256)
    `protect key_keyowner="Lattice Semiconductor"
    `protect key_keyname="LSCC_RADIANT_2"
    `protect key_method="rsa"
    `protect key_block
    Vi2YLO+x6rdARfQ9Dy5nkhsQDsmm1w6mdX+BGfDMCLHH9OVHbd1SmeHawCz0jXY8
    ZfRK8VF/h1zOBmoosgY1pKd/Dpc5/4xkcEtnLzRbiXr1PhvF+tAFMMYr1FsqzJF/
    0yoej8yT6mayYbd5mcEr5rzBmX29HuPBZbYr1ziac5IBpHZUa0mcwwhFnj5kz4OB
    bVSqiaY7v8ECP41vNzoRKrsTYKBOhiTa6UoG08ut2E4d8wJIXNBgZ0uShYYzuOuv
    1goVgwaRtFWrpTINXEmrZJPr/ikXRHTFzORpkDM7yNwGVtNJPMJ2aQde2w0i6EZWe
    1NnRF4K2HK00z1NRbffIjQ==

    `protect data_method="aes128-cbc"
    `protect encoding=(enctype="base64", line_length=64, bytes=272)
    `protect data_block
    B7yNcwT9w4purXSxU1ln4f3rs1psxSP1V3pnWYipDj6rQSA7wniBxcC/1aFebwKE
    fvbKngTIn7N+W/1Den3kjpuznIvLy5oV/GTANFP0cWt9rnRrDCM5CYtNWgaMEZu7
    o2QPliPcVwEgygI0R06NQ85frKo/jQLgOhf68+VpqFPozfrGAYI/YkEofh0foDH
    9Sscy06grmJQCqtqkX2N3p6738N3iCFdKWJ6Udo5t+++AT3YYeZZ7bprDN941k/BkU
    YZij8fJx+govJUWQmSUJYNnt2Vyoac4hsevXsFRxm439ssQtP4vHHEEnraBSrHdVG
    DJn0GqFID+tpC67tE61U2Y/y118psFhZGs8jmuV9yGk=

    `protect end_protected

end top_test_arch;

```

**See Also**

- ▶ [Running HDL Encryption from the Command Line](#)
- ▶ [Key File](#)

**Key File**

The key repository file defines the cryptographic public key used for RSA encryption. In Radiant software, the key file contains Lattice public key. Additionally, it may contain some of the common EDA vendors public keys.

The Lattice public key file key.txt is located at *<Radiant\_installed\_directory>/ispfpga/data/* folder. Aside from the Lattice Public Key, the current version contains the public key for Synopsys and Cadence.

### Note

If using Synplify Pro synthesis tool, both, the Lattice Public Key and the Synplify Pro Public Key must be defined in the key file. The Synplify Pro Public Key is used during the synthesis step to decrypt an encrypted design. The Lattice Public Key is used during the post-synthesis flow to decrypt an encrypted design.

A key file must contain properly declared pragmas such as `key_keyowner`, `key_keyname`, `key_method`, and `key_public_key` for each of the specified keys. The key value follows the `key_public_key` pragma.

The key file typically also contains the `data_method` pragma. It defines the algorithm used in data block encryption of HDL source file.

### Example of a Key File:

```
// Use Verilog pragma syntax in this file
`pragma protect version=1
`pragma protect author="<Your Name>"
`pragma protect author_info="<Your info>"
`pragma protect key_keyowner="Lattice Semiconductor"
`pragma protect key_keyname="LSCC_RADIAN2"
`pragma protect key_method="rsa"
`pragma protect key_public_key
MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEAEZKUUhuB6vSsc70hQJ
iNAWJR5unW/OWp/LFI71eAl3s9bOYE201Kdxbai+ndIeo8xFt2btzetUzuR6Srvh
xR2Sj9BbW1QToo2u8JfzD3X7AmRv1wKRX8708DPo4LDHZMA3qh0kfDDWkp2Eausf
LzE2cVxgq7fy/bDhUeN8xKQCSKJ7aguG6k0I6ROoZz211jzDLUQzhm2qYf8SpU1o
tD8/uw53wLfSuhR3MBOB++xcn2imvSLqdgHWuhX6CtZIx5CD4y8inCbcLy/0Qrf6
sdTNS5Ag20ZhjeNdzmqSWqhL2JTDw+Ou2FWzhEd0i/HN0y4NM6h9fNn8nqxRyE7
IwIDAQAB

// Put a blank line above
// Add additional public keys below this line

`pragma protect data_method="aes256-cbc"

// End of File
```

### See Also

- ▶ [Running HDL Encryption from the Command Line](#)
- ▶ [Defining Pragmas](#)

## Running Synthesis from the Command Line

The Lattice Synthesis command tool allows you to synthesize Verilog and VHDL HDL source files into netlists for design entry into the Radiant software environment. Based on your strategy settings you specify in the Radiant software, a synthesis project (.synproj) file is created and then used by synthesis using the -f option. The Radiant software translates strategy options into command line options described in this topic.

Verilog source files are passed to the program using the **-ver** option and VHDL source files are passed using the **-vhd** option. For mixed language designs the language type is automatically determined by synthesis based on the top module of the design. For IP design, you must also specify IP location (**-ip\_dir**), IP core name (**-corename**), and encrypted RTL file name (**-ertl\_file**).

Subjects included in this topic:

- ▶ [Running Synthesis](#)
- ▶ [Command Line Syntax](#)
- ▶ [Synthesis Options](#)
- ▶ [Examples](#)

**Running Synthesis** Synthesis will convert your input netlist (.v) file into a structural Verilog file that is used for the remaining mapping process.

- ▶ To run synthesis, type **synthesis** on the command line with valid options. A sample of a typical synthesis command would be as follows:

There are many command line options that give you control over the way synthesis processes the output file. Please refer to the rest of the subjects in this topic for more details. See examples.

**Command Line Syntax** **synthesis** [-a <arch>] [-p <device>] [-sp <performance\_grade>] [-t <package\_name>] [{-path <searchpath>}] [-top <top\_module\_name>] [-ver {<verilog\_file.v>}] [-sver {systemverilog\_file.sv}] [-lib <libname>] [-vhd {<vhdl\_file.vhd/vhdl>}] [-udb <udb\_file.udb>] [-hdl\_param <param\_name param\_value >] [-vh2008] [-optimization\_goal <area | timing | balanced (default)>] [-force\_gsr <no (default) | yes>] [-ramstyle <auto (default) | distributed | block\_ram(EBR) | registers>] [-romstyle <auto(default) | logic | EBR>] [-output\_edif <filename.edf>] [-output\_hdl <filename.v>] [-sdc <sdc\_file.ldc>] [-logfile <synthesis\_logfile>] [-frequency <target\_frequency (default 200.0MHz (ICE40))>] [-max\_fanout <max\_fanout (default 1000)>] [-bram\_utilization <bram\_utilization (default 100%)>] [-use\_dsp <0|1(default)>] [-dsp\_utilization <dsp\_utilization (default 100%)>] [-mux\_style <auto(default) | pfu\_mux | L6Mux\_single | L6Mux\_multiple>] [-fsm\_encoding\_style <auto(default) | one-hot | gray | binary>] [-partition] [-partition\_reset] [-resolve\_mixed\_drivers <0(default)|1>] [-fix\_gated\_clocks <0|1(default)>] [-use\_carry\_chain <0|1(default)>] [-carry\_chain\_length <chain\_length>] [-use\_io\_insertion <0|1(default)>] [-use\_io\_reg <0|1|auto(default)>] [-resource\_sharing <0|1(default)>] [-propagate\_constants <0|1(default)>] [-remove\_duplicate\_regs <0|1(default)>] [-loop\_limit <max\_loop\_iter\_cnt (default 1950)>] [-twr\_paths <timing\_path\_cnt>] [-dt] [-comp] [-syn] [-ifd] [-f <project\_file\_name>] [-drc] [-drc\_off {<message\_id>}] [-drc\_cfg <rule> <value>]

## Synthesis Options

The table below contains descriptions of all valid options for synthesis.

**Table 6: Synthesis Command Line Options**

| Option                                                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-a</b> <arch>                                       | Sets the FPGA architecture. This synthesis option must be specified and if the value is set to any unsupported FPGA device architecture the command will fail.                                                                                                                                                                                                                                                                                                                               |
| <b>-p</b> <device>                                     | Specifies the device type for the architecture (optional).                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>-sp</b> <performance_grade>                         | Sets the device performance speed grade. If no performance grade specified, default performance value is used.                                                                                                                                                                                                                                                                                                                                                                               |
| <b>-f</b> <proj_file_name>                             | Specifies the synthesis project file name (.synproj). The project file can be edited by the user to contain all desired command line options.                                                                                                                                                                                                                                                                                                                                                |
| <b>-t</b> <package_name>                               | Specifies the package type of the device.                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>-path</b> <searchpath>                              | Add searchpath for Verilog "include" files (optional).                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>-top</b> <top_module_name>                          | Name of top module (optional, but better to have to avoid ambiguity).                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>-lib</b> <lib_name>                                 | Name of VHDL library (optional).                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>-vhd</b> <vhd_file.vhd/vhdl>                        | Names of VHDL design files (must have, if language is VHDL or mixed language).                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>-ver</b> <verilog_file.v>                           | Names of Verilog design files (must have, if language is Verilog, or mixed language).                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>-sver</b><br><systemverilog_file.sv>                | Names of SystemVerilog design files (must have, if language is SystemVerilog or mixed language).                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>-hdl_param</b><br><param_name<br>param_value>       | Allows you to override HDL parameter pairs in the design file.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>-optimization_goal</b> <area<br>  timing (default)> | <p>The synthesis tool allows you to choose among the following optimization options:</p> <ul style="list-style-type: none"> <li>▶ <b>balanced</b> balances the levels of logic.</li> <li>▶ <b>area</b> optimizes the design for area by reducing the total amount of logic used for design implementation.</li> <li>▶ <b>timing</b> optimizes the design for timing.</li> </ul> <p>The default setting depends on the device type. Smaller devices, such as ice40tp default to balanced.</p> |
| <b>-force_gsr</b> <no(default)  <br>yes>               | Enables ( <b>yes</b> ) or disables ( <b>no</b> ) forced use of the global set/reset routing resources. When the value is auto, the synthesis tool decides whether to use the global set/reset resources.                                                                                                                                                                                                                                                                                     |

**Table 6: Synthesis Command Line Options**

| Option                                                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-ramstyle</b> <auto(default)   distributed   block_ram(EBR)   registers> | <p>Sets the type of random access memory globally to <i>distributed</i>, <i>embedded block RAM</i>, or <i>registers</i>. The default is auto which attempts to determine the best implementation, that is, synthesis tool will map to technology RAM resources (EBR/Distributed) based on the resource availability.</p> <p>This option will apply a syn_ramstyle attribute globally in the source to a module or to a RAM instance. To turn off RAM inference, set its value to registers.</p> <ul style="list-style-type: none"> <li>▶ <b>registers</b> causes an inferred RAM to be mapped to registers (flip-flops and logic) rather than the technology-specific RAM resources.</li> <li>▶ <b>distributed</b> causes the RAM to be implemented using the distributed RAM or PFU resources.</li> <li>▶ <b>block_ram (EBR)</b> causes the RAM to be implemented using the dedicated RAM resources. If your RAM resources are limited, for whatever reason, you can map additional RAMs to registers instead of the dedicated or distributed RAM resources using this attribute.</li> <li>▶ <b>no_rw_check</b> (Certain technologies only). You cannot specify this value alone. Without no_rw_check, the synthesis tool inserts bypass logic around the RAM to prevent the mismatch. If you know your design does not read and write to the same address simultaneously, use no_rw_check to eliminate bypass logic. Use this value only when you cannot simultaneously read and write to the same RAM location and you want to minimize overhead logic.</li> </ul> |

**Table 6: Synthesis Command Line Options**

| Option                                                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-romstyle</b> <auto (default)   logic   EBR>                 | <p>Allows you to globally implement ROM architectures using <i>dedicated</i>, <i>distributed ROM</i>, or a <i>combination of the two</i> (auto). This applies the syn_romstyle attribute globally to the design by adding the attribute to the module or entity. You can also specify this attribute on a single module or ROM instance.</p> <p>Specifying a syn_romstyle attribute globally or on a module or ROM instance with a value of:</p> <ul style="list-style-type: none"> <li>▶ <b>auto</b> allows the synthesis tool to choose the best implementation to meet the design requirements for performance, size, etc.</li> <li>▶ <b>EBR</b> causes the ROM to be mapped to dedicated EBR block resources. ROM address or data should be registered to map it to an EBR block. If your ROM resources are limited, for whatever reason, you can map additional ROM to registers instead of the dedicated or distributed RAM resources using this attribute.</li> </ul> <p>Infer ROM architectures using a CASE statement in your code. For the synthesis tool to implement a ROM, at least half of the available addresses in the CASE statement must be assigned a value. For example, consider a ROM with six address bits (64 unique addresses). The case statement for this ROM must specify values for at least 32 of the available addresses.</p> |
| <b>-output_edif</b> <filename.edf>                              | Specifies the name of the output EDIF netlist file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>-output_hdl</b> <filename.v>                                 | Specifies the name of the output Verilog netlist file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>-sdc</b> <sdc_file.ldc>                                      | Specifies a Lattice design constraint (.ldc) file input.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>-loop_limit</b> <max_loop_iter_cnt (default 1950)>           | <p>Specifies the iteration limits for “for” and “while” loops in the user RTL for loops that have the loop index as a variable and not a constant.</p> <p>The higher the loop_limit, the longer the run time. Also, for some designs, a higher loop limit may cause stack overflow during some of the optimizations during compile/synthesis.</p> <p>The default value is 1950. Setting a higher value may cause stack overflow during some of the optimizations during synthesis.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>-logfile</b> <synthesis_logfile>                             | Specifies the name of the synthesis log file in ASCII format. If you do not specify a name, synthesis will output a file named synthesis.log by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>-frequency</b> <target_frequency (default 200.0MHz (ICE40))> | Specifies the target frequency setting. Default frequency value is 200.0 MHz.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

**Table 6: Synthesis Command Line Options**

| Option                                                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-max_fanout</b><br><max_fanout (default 1000)>                           | Specifies maximum global fanout limit to the entire design at the top level. Default value is 1000 fanouts.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>-bram_utilization</b><br><bram_utilization (default 100%)>               | Specifies block RAM utilization target setting in percent of total vacant sites. Default is 100 percent.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>-use_dsp</b> <0 1(default)>                                              | Specifies how DSP modules are implemented and allows DSP inference.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>-dsp_utilization</b><br><dsp_utilization (default 100%)>                 | Specifies the percentage of DSP that is allowed to be used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>-mux_style</b> <auto(default)   pfu_mux   L6Mux_single   L6Mux_multiple> | Specifies the MUX style setting, which controls the way the macrogenerator implements the multiplexer macros.<br><br>Valid options are <i>auto</i> , <i>L6Mux Multiple</i> , <i>L6Mux Single</i> , and <i>PFU Mux</i> . The default value is <i>auto</i> , meaning that the tool looks for the best implementation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>-fsm_encoding_style</b><br><auto(default)   one-hot   gray   binary>     | Specifies One-Hot, Gray, or Binary style. The -fsm_encoding_style. Allows the user to determine which style is faster based on specific design implementation.<br><br>Valid options are <i>auto</i> , <i>one-hot</i> , <i>gray</i> , and <i>binary</i> . The default value is <i>auto</i> , meaning that the tool looks for the best implementation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>-use_carry_chain</b><br><0 1(default)>                                   | Turns on (1) or off (0) carry chain implementation for adders. The 1 or true setting is the default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>-carry_chain_length</b><br><chain_length>                                | Specifies the maximum length of the carry chain.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>-use_io_insertion</b><br><0 1(default)>                                  | Specifies the use of I/O insertion. The 1 or true setting is the default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>-use_io_reg</b><br><0 1 auto(default)>                                   | Packs registers into I/O pad cells based on timing requirements for the target Lattice families. The value 1 enables and 0 disables (default) register packing. This applies it globally forcing the synthesis tool to pack all input, output, and I/O registers into I/O pad cells.<br><br>NOTE: You can place the syn_useioff attribute on an individual register or port. When applied to a register, the synthesis tool packs the register into the pad cell, and when applied to a port, packs all registers attached to the port into the pad cell.<br><br>The syn_useioff attribute can be set on a: <ul style="list-style-type: none"> <li>▶ top-level port</li> <li>▶ register driving the top-level port</li> <li>▶ lower-level port, only if the register is specified as part of the port declaration</li> </ul> |

**Table 6: Synthesis Command Line Options**

| Option                                           | Description                                                                                                                                                                                                                                                                                |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-resource_sharing</b><br><0 1(default)>       | Specifies the resource sharing option. The 1 or true setting is the default.                                                                                                                                                                                                               |
| <b>-propagate_constants</b><br><0 1(default)>    | Prevents sequential optimization such as constant propagation, inverter push-through, and FSM extraction. The 1 or true setting is the default.                                                                                                                                            |
| <b>-remove_duplicate_regs</b><br><0 1(default)>  | Specifies the removal of duplicate registers. The 1 or true setting is the default.                                                                                                                                                                                                        |
| <b>-twr_paths</b><br><timing_path_cnt>           | Specifies the number of critical paths.                                                                                                                                                                                                                                                    |
| <b>-dt</b>                                       | Disables the hardware evaluation capability. (This option is for internal use only.)                                                                                                                                                                                                       |
| <b>-comp</b>                                     | Indicates HDL compilation only without synthesis. (This option is for internal use only.)                                                                                                                                                                                                  |
| <b>-syn</b>                                      | Allows you to synthesize without HDL compilation. Reads the .db file. (This option is for internal use only.)                                                                                                                                                                              |
| <b>-udb</b> <udb_file.udb>                       | Writes UDB output.                                                                                                                                                                                                                                                                         |
| <b>-ifd</b>                                      | Sets option to dump intermediate files. If you run the tool with this option, it will dump about 20 intermediate encrypted Verilog files. If you supply Lattice with these files, they can be decrypted and analyzed for problems. This option is good to for analyzing simulation issues. |
| <b>-fix_gated_clocks</b><br><0 1(default)>       | Allows you to enable/disable gated clock optimization. By default, the option is enabled.                                                                                                                                                                                                  |
| <b>-vh2008</b>                                   | Enables VHDL 2008 support.                                                                                                                                                                                                                                                                 |
| <b>-drc</b>                                      | Run LSE RTL design rule checking.                                                                                                                                                                                                                                                          |
| <b>-drc_cfg</b> <rule>                           | Configure a DRC rule                                                                                                                                                                                                                                                                       |
| <b>-drc_off</b> <message_id>                     | Disable one or more DRC rules.                                                                                                                                                                                                                                                             |
| <b>-partition</b>                                | Enables the partition flow.                                                                                                                                                                                                                                                                |
| <b>-partition_reset</b>                          | Resets the partition flow (auto enables -partition).                                                                                                                                                                                                                                       |
| <b>-resolve_mixed_drivers</b><br><0 default   1> | Connects the net to the VCC or GND driver if it is driven by them.                                                                                                                                                                                                                         |

### Examples

The following are examples of synthesis command lines and their respective descriptions:

```
synthesis -a "ice40tp" -p itpa08 -t SG48 -sp "6" -mux_style Auto
```

```
-use_io_insertion 1
```

```
-sdc "C:/my_radiant_tutorial/impl1/impl1.ldc"
```



```
-path "C:/lsc/radiant/1.0/ispfpga/ice40tp/data" "C:/my_radiant_tutorial/impl1"
"C:/my_radiant_tutorial"
```

```
-ver "C:/my_radiant_tutorial/impl1/source/LED_control.v"
```

```
"C:/my_radiant_tutorial/impl1/source/spi_gpio.v"
```

```
"C:/my_radiant_tutorial/impl1/source/spi_gui_led_top.v"
```

```
-path "C:/my_radiant_tutorial"
```

```
-top spi_gui_led_top
```

```
-output_hdl "LEDtest_impl1.vm"
```

### See Also

► [Command Line Program Overview](#)

## Running Postsyn from the Command Line

The Postsyn process converts synthesized VM and integrates IPs into a completed design in UDB format for the remaining mapping process.

Subjects included in this topic:

► [Command Line Syntax](#)

► [Postsyn Options](#)

### Command Line Syntax

```
postsyn [-w] [-a <architecture>] [-p <device>] [-t <package>]
[-sp <performance>] [-oc <operating_condition>] [-ldc
<ldc_file>] [-iplist <iplist_file>] [-macro <macro_list_file>]
[-gui] [-msgset <msgtypefile>] [-verbose] [-o <output.udb>] [-
keeprtl] [-top] [-cont_on_sdc_err] <input.vm>
```

### Postsyn Options

**Table 7: Postsyn Command Line Options**

| Option  | Description                 |
|---------|-----------------------------|
| -h(elp) | Print command help message. |
| -w      | Overwrite output file.      |
| -a      | Target architecture name.   |
| -p      | Target device name.         |
| -t      | Target package name.        |

**Table 7: Postsyn Command Line Options**

| Option                  | Description                                                       |
|-------------------------|-------------------------------------------------------------------|
| <b>-sp</b>              | Target performance grade.                                         |
| <b>-oc</b>              | Target operating condition: commercial   industrial   automotive. |
| <b>-ldc</b>             | Load LDC file.                                                    |
| <b>-iplist</b>          | Load IP list file.                                                |
| <b>-macro</b>           | Load list file if any macro is used in the design.                |
| <b>-o</b>               | Output UDB file.                                                  |
| <b>-keeprtl</b>         | Keep RTL view if it exists in UDB file.                           |
| <b>-cont_on_sdc_err</b> | Continue on SDC error instead of exit.                            |
| <b>-verbose</b>         | Print more detailed messages.                                     |
| <b>-top</b>             | Indicate that the input is for the top design.                    |
| <b>&lt;input.vm&gt;</b> | Input structural Verilog file.                                    |

**See Also**

- ▶ [Command Line Program Overview](#)

## Running MAP from the Command Line

The **Map Design** process in the Radiant software environment can also be run through the command line using the **map** program. The **map** program takes an input database (.udb) file and converts this design represented as a network of device-independent components (e.g., gates and flip-flops) into a network of device-specific components (e.g., PFUs, PFFs, and EBRs) or configurable logic blocks in the form of a Unified Database (.udb) file.

Subjects included in this topic:

- ▶ [Running MAP](#)
- ▶ [Command Line Syntax](#)
- ▶ [MAP Options](#)
- ▶ [Example](#)

### Running MAP

MAP uses the database (.udb) file that was the output of the **Synthesis** process and outputs a mapped Unified Database (.udb) file with constraints embedded.

- ▶ To run MAP, type **map** on the command line with, at minimum, the required options to describe your target technology (i.e., architecture, device, package, and performance grade), the input .udb along with the input .ldc file. The output .udb file specified by the **-o** option. That

additional physical constraint file (\*.pdc) can be applied optionally. A sample of a typical MAP command would be as follows:

```
map counter_impl1_syn.udb impl1.pdc -o counter_impl1.udb
```

### Note

The **-a** (architecture) option is not necessary when you supply the part number with the **-p** option. There is also no need to specify the constraint file here, but if you do, it must be specified after the input .udb file name. The constraint file automatically takes the name "**output**" in this case, which is the name given to the output .udb file. If the output file was not specified with the **-o** option as shown in the above case, **map** would place a file named input.udb into the current working directory, taking the name of the input file. If you specify the input.ldc file and it is not there, map will error out.

There are many command line options that give you control over the way MAP processes the output file. Please refer to the rest of the subjects in this topic for more details.

### Command Line Syntax

```
map [ -h <arch> ] <infile[.udb]> [<options>]
```

### MAP Options

The table below contains descriptions of all valid options for MAP.

**Table 8: MAP Command Line Options**

| Option                  | Description                                                                                  |
|-------------------------|----------------------------------------------------------------------------------------------|
| <b>-h</b> <arch>        | Displays all of the available MAP command options for mapping to the specified architecture. |
| <infile[.udb]>          | Specifies the output design file name in .udb format. The .udb extension is optional.        |
| <b>-help</b>            | Print usage.                                                                                 |
| <b>-inferGSR</b>        | GSR inferencing if applicable.                                                               |
| <b>-o</b> <name[.udb]>  | Optional output design file (.udb).                                                          |
| <b>-f</b>               | Reads map command line arguments and switches from file.                                     |
| <b>-mp</b> <name[.mrp]> | Optional report file (.mrp).                                                                 |
| <b>-xref_sig</b>        | Report signal cross reference for renamed signals.                                           |
| <b>-xref_sym</b>        | Report symbol cross reference for renamed symbols.                                           |
| <b>-hierprt</b>         | Print out hierarchical resource usage in .hrr file.                                          |
| <b>-cont_on_sdc_err</b> | Ignore Constraint errors.                                                                    |
| <b>-u</b>               | Unclip unused instances.                                                                     |

### Example

The following command maps an input database file named mapped.udb and outputs a mapped Unified Database file named mapped.udb.

```
map counter_impl1_syn.udb impl1.pdc -o counter_impl1.udb
```

### See Also

- ▶ [Command Line Data Flow](#)
- ▶ [Command Line Program Overview](#)

## Running PAR from the Command Line

The **Place & Route Design** process in the Radiant software environment can also be run through the command line using the **par** program. The **par** program takes an input mapped Unified Database (.udb) file and further places and routes the design, assigning locations of physical components on the device and adding the inter-connectivity, outputting a placed and routed .udb file.

The Implementation Engine multi-tasking option available in Linux is explained in detail here because the option is not available for PCs.

Subjects included in this topic:

- ▶ [Running PAR](#)
- ▶ [Command Line Syntax](#)
- ▶ [General PAR Options](#)
- ▶ [Examples](#)
- ▶ [PAR Multi-Tasking \(-m\) Option](#)

### Running PAR

PAR uses your mapped Unified Database (.udb) file that were the outputs of the **Map Design** process or the **map** program. With these inputs, **par** outputs a new placed-and-routed .udb file, a PAR report (.par) file, and a PAD (specification (.pad) file that contains I/O placement information.

- ▶ To run PAR, type **par** on the command line with at minimum, the name of the input .udb file and the desired name of the output .udb file. Design constraints from previous stages are automatically embedded in the input .udb file, however the par program can accept additional constraints with either a .pdc or .sdc file. A sample of a basic PAR command would be as follows:

```
par input.udb output.udb
```

There are many command line options that give you control over PAR. Please refer to the rest of the subjects in this topic for more details.

## Command Line Syntax

```
par [-w] [-n <iterations:0,100>] [-t <iteration:0,100>] [-stopzero] [-s
<savecount:0,100>] [-m <nodelistfile>] [-cores <number of cores>] [-r] [-k] [-p
] [-x] [-pack <density:0,100>] [-sp <setupspeedgrade>] [-hsp
<holdspeedgrade>] [-dh] [-hos] [-sort <method>] <infile> <outfile> [<pdcfile>]
```

### Note

All filenames without special switches must be in the order <infile> <outfile> <pdcfile>. Options may exist in any order.

## General PAR Options

**Table 9: General PAR Command Line Options**

| Option           | Description                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-f</b>        | Read par command line arguments and switches from file.                                                                                                                                                                                                                                                                                                                                            |
| <b>-w</b>        | Overwrite. Allows overwrite of an existing file (including input file).                                                                                                                                                                                                                                                                                                                            |
| <b>-n</b>        | Number of iterations (seeds). Use "-n 0" to run until fully routed and a timing score of zero is achieved. Default: 1.                                                                                                                                                                                                                                                                             |
| <b>-t</b>        | Start at this placer cost table entry. Default is 1.                                                                                                                                                                                                                                                                                                                                               |
| <b>-stopzero</b> | Stop running iterations once a timing score of zero is achieved.                                                                                                                                                                                                                                                                                                                                   |
| <b>-s</b>        | Save "n" best results for this run. Default: Save All.                                                                                                                                                                                                                                                                                                                                             |
| <b>-m</b>        | Multi task par run. File "<node list file>", contains a list of node names to run the jobs on.                                                                                                                                                                                                                                                                                                     |
| <b>-cores</b>    | Run multiple threads on the local machine. You can specify "<number of cores>" to run the jobs. For cases when the user specifies both -cores and -m with a valid node list file, PAR should apply both settings (merge). If the user repeats the host machine in the node list file, the settings in the node list file take precedence over the setting in -cores (for backwards compatibility). |
| <b>-p</b>        | Do not run placement.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>-r</b>        | Do not run router.                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>-k</b>        | Keep existing routing in input UDB file.<br>Note: only meaningful when used with -p.                                                                                                                                                                                                                                                                                                               |
| <b>-x</b>        | Ignore timing constraints.                                                                                                                                                                                                                                                                                                                                                                         |

**Table 9: General PAR Command Line Options**

| Option       | Description                                                                                                                              |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-pack</b> | Set the packing density parameter.<br>Default: auto.                                                                                     |
| <b>-sp</b>   | Change performance grade for setup optimization.<br>Default: Keep current performance grade.                                             |
| <b>-hsp</b>  | Change performance grade for hold optimization.<br>Default: M.                                                                           |
| <b>-dh</b>   | Disable hold timing correction.                                                                                                          |
| <b>-hos</b>  | Prioritize hold timing correction over setup performance.                                                                                |
| <b>-sort</b> | Set the sorting method for ranking multiple iterations. <method> "c" sorts by cumulative slack, "w" sorts by worst slack.<br>Default: c. |
| <infile>     | Name of input UDB file.                                                                                                                  |
| <outfile>    | Name of output UDB file.                                                                                                                 |

**Table 10: PAR Placement Command Line Option**

| Option    | Description                                                                                                                                   |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <pdcfile> | Name of optional constraint file.<br><br>Note: the contents of <pdcfile> will overwrite all constraints saved in the input UDB file <infile>. |

### Examples

Following are a few examples of PAR command lines and a description of what each does.

#### Example 1

The following command places and routes the design in the file input.udb and writes the placed and routed design to output.udb.

```
par input.udb output.udb
```

#### Example 2

The following command runs 20 place and route iterations. The iterations begin at cost table entry 5. Only the best 3 output design files are saved.

```
par -n 20 -t 5 -s 3 input.udb output.udb
```

#### Example 3

(Lattice FPGAs only) This is an example of **par** using the **-io** switch to generate .udb files that contain only I/O for viewing in the PAD Specification file for adjustment of `Idc_set_location` constraints for optimal I/O placement. You can display I/O placement assignments in the Radiant Spreadsheet View and choosing **View > Display IO Placement**.

```
par -io -w lev1bist.udb lev1bist_io.udb
```

### PAR Multi-Tasking (-m) Option

This section provides information about environment setup, node list file creation, and step-by-step instructions for running the PAR Multi-tasking (**-m**) option from the command line. The PAR **-m** option allows you to use multiple machines (nodes) that are networked together for a multi-run PAR job, significantly reducing the total amount of time for completion. Before the multi-tasking option was developed, PAR could only run multiple jobs in a linear or serial fashion. The total time required to complete PAR was equal to the amount of time it took for each of the PAR jobs to run.

For example, the PAR command:

```
par -n 10 mydesign.udb output.udb
```

tells PAR to run 10 place and route passes (**-n 10**). It runs each of the 10 jobs consecutively, generating an output .udb file for each job, i.e., `output_par.dir/5_1.udb`, `output_par.dir/5_2.udb`, etc. If each job takes approximately one hour, then the run takes approximately 10 hours.

Suppose, however, that you have five nodes available. The PAR Multi-tasking option allows you to use all five nodes at the same time, dramatically reducing the time required for all ten jobs.

### To run the PAR multi-tasking option from the command line:

1. First generate a file containing a list of the node names, one per line as in the following example:

```
# This file contains a profile node listing for a PAR multi
# tasking job.
[machine1]
SYSTEM = linux
CORENUM = 2
[machine2]
SYSTEM = linux
CORENUM = 2
Env = /home/user/setup_multipar.lin
Workdir = /home/user/myworkdir
```

You must use the format above for the node list file and fill in all required parameters. Parameters are case insensitive. The node or machine names are given in square brackets on a single line.

The **System** parameter can take `linux` or `pc` values depending upon your platform. However, the `PC` value cannot be used with Linux because it is not possible to create a multiple computer farm with PCs. **Corenum** refers to the number of CPU cores available. Setting it to zero will disable the

node from being used. Setting it to a greater number than the actual number of CPUs will cause PAR to run jobs on the same CPU lengthening the runtime.

The **Env** parameter refers to a remote environment setup file to be executed before PAR is started on the remote machine. This is optional. If the remote machine is already configured with the proper environment, this line can be omitted. To test to see if the remote environment is responsive to PAR commands, run the following:

```
ssh <remote_machine> par <par_option>
```

See the [System Requirements](#) section below for details on this parameter.

**Workdir** is the absolute path to the physical working directory location on the remote machine where PAR should be run. This item is also optional. If an account automatically changes to the proper directory after login, this line can be omitted. To test the remote directory, run the following,

```
ssh <remote_machine> ls <udb_file>
```

If the design can be found then the current directory is already available.

2. Now run the job from the command line as follows:

```
par -m nodefile_name -n 10 mydesign.udb output.udb
```

This runs the following jobs on the nodes specified.

```
Starting job 5_1 on node NODE1 at ...
Starting job 5_2 on node NODE2 at ...
Starting job 5_3 on node NODE3 at ...
Starting job 5_4 on node NODE4 at ...
Starting job 5_5 on node NODE5 at ...
```

As the jobs finish, the remaining jobs start on the nodes until all 10 jobs are complete. Since each job takes approximately one hour, all 10 jobs will complete in approximately two hours.

### Note

If you attempt to use the multi-tasking option and you have specified only one placement iteration, PAR will disregard the **-m** option from the command and run the job in normal PAR mode. In this case you will see the following message:

```
WARNING - par: Multi task par not needed for this job. -m switch will be ignored.
```

**System Requirements** **ssh** must be located through the PATH variable. On Linux, the utility program's secure shell (**ssh**) and secure shell daemon (**sshd**) are used to spawn and listen for the job requests.

The executables required on the machines defined in the node list file are as follows:

- ▶ /bin/sh
- ▶ par (must be located through the PATH variable)



Required environment variable on local and remote machines are as follows:

- ▶ **FOUNDRY** (points at FOUNDRY directory structure must be a path accessible to both the machine from which the Implementation Engine is run and the node)
- ▶ **LM\_LICENSE\_FILE** (points to the security license server nodes)
- ▶ **LD\_LIBRARY\_PATH** (supports par path for shared libraries must be a path accessible to both the machine from which the Implementation Engine is run and the node)

To determine if everything is set up correctly, you can run the **ssh** command to the nodes to be used.

Type the following:

```
ssh <machine_name> /bin/sh -c par
```

If you get the usage message back on your screen, everything is set correctly. Note that depending upon your setup, this check may not work even though your status is fine.

If you have to set up your remote environment with the proper environment variables, you must create a remote shell environment setup file. An example of an ASCII file used to setup the remote shell environment would be as follows for ksh users:

```
export FOUNDRY=<install_directory>/ispfpga/bin/lin64
export PATH=$FOUNDRY/bin/lin64:$PATH
export LD_LIBRARY_PATH=$FOUNDRY/bin/lin:$LD_LIBRARY_PATH
64
```

For csh users, you would use the **setenv** command.

### Screen Output

When PAR is running multiple jobs and is not in multi-tasking mode, output from PAR is displayed on the screen as the jobs run. When PAR is running multiple jobs in multi-tasking mode, you only see information regarding the current status of the feature.

For example, when the job above is executed, the following screen output would be generated:

```
Starting job 5_1 on node NODE1
Starting job 5_2 on node NODE2
Starting job 5_3 on node NODE3
Starting job 5_4 on node NODE4
Starting job 5_5 on node NODE5
```

When one of the jobs finishes, this message will appear:

```
Finished job 5_3 on node NODE3
```

These messages continue until there are no jobs left to run.

### See Also

- ▶ **User Guides > Implementing the Design** in the Radiant Software Help
- ▶ [Command Line Data Flow](#)
- ▶ [Command Line Program Overview](#)

## Running Timing from the Command Line

The **MAP Timing** and **Place & Route Timing** processes in the Radiant software environment can also be run through the command line using the **timing** program. Timing can be run on designs using the placed and routed Unified Design Database (.udb) and associated timing constraints specified in the design's (.ldc, .fdc, .sdc or .pdc) file or device constraints extracted from the design. Using these input files, **timing** provides static timing analysis and outputs a timing report file (.tw1/.twr).

Timing checks the delays in the Unified Design Database (.udb) file against your timing constraints. If delays are exceeded, Timing issues the appropriate timing error. See “Implementing the Design” in the Radiant Software Help and associated topics for more information.

Subjects included in this topic:

- ▶ [Running Timing](#)
- ▶ [Command Line Syntax](#)
- ▶ [Timing Options](#)
- ▶ [Examples](#)

### Running Timing

Timing uses your input mapped or placed-and-routed Unified Design Database (.udb) file and associated constraint file to create a Timing Report.

- ▶ To run Timing, type **timing** on the command line with, at minimum, the names of your input .udb and sdc files to output a timing report (.twr) file. A sample of a typical Timing command would be as follows:

```
timing design.udb (constraint is embedded in udb)
```

### Note

---

The above command automatically generates the report file named design.twr which is based on the name of the .udb file.

---

There are several command line options that give you control over the way Timing generates timing reports for analysis. Please refer to the rest of the subjects in this topic for more details. See Examples.

**Command Line Syntax** `timing <udb file name> [ -sdc <sdc file name> ] [ -hld | -sethld ] [ -o <output file name> ] [ -v <integer> ] [-endpoints <integer>] [-help]`

### Timing Options

The following tables contain descriptions of all valid options for Timing.

**Table 11: Compulsory Timing Command Line Options**

| Compulsory Option   | Description                |
|---------------------|----------------------------|
| <b>-db-file</b> arg | Design database file name. |

**Table 12: Optional Timing Command Line Options**

| Optional Option              | Description                                                          |
|------------------------------|----------------------------------------------------------------------|
| <b>-endpoints</b> arg (=10)  | Number of end points.                                                |
| <b>-logical-db-file</b> arg  | Logical design database file name.                                   |
| <b>-logical-sdc-file</b> arg | Alternate sdc file name.                                             |
| <b>-u</b> arg (=10)          | Number of unconstrained end points printed in the table.             |
| <b>-ports</b> arg (=10)      | Number of top ports printed in the table.                            |
| <b>-help</b>                 | Print the usage and exit.                                            |
| <b>-hld</b>                  | Hold report only.                                                    |
| <b>-sp</b> arg (=None)       | Setup speed grade.                                                   |
| <b>-hsp</b> arg (=M)         | Hold speed grade.                                                    |
| <b>-rpt-file</b> arg         | Timing report file name.                                             |
| <b>-o</b> arg                | Timing report file name.                                             |
| <b>-alt_report</b>           | Diamond-like report.                                                 |
| <b>-report_sdc</b>           | Parsed file appears in report file.                                  |
| <b>-sdc-file</b> arg         | sdc file name.                                                       |
| <b>-sethld</b>               | Both setup and hold report.                                          |
| <b>-v</b> arg (=10)          | Number of paths per constraint.                                      |
| <b>-time_through_async</b>   | Timer will time through async resets.                                |
| <b>-iotime</b>               | Compute the input setup/hold and clock to output delays of the FPGA. |
| <b>-io_allspeed</b>          | Get worst IO results for all speed grades.                           |
| <b>-pwrprd</b>               | Output clock information for PowerCalculator.                        |
| <b>-nperend</b> arg (=1)     | Number of paths per end point.                                       |
| <b>-html</b>                 | HTML format report.                                                  |

**Table 12: Optional Timing Command Line Options**

| Optional Option        | Description                                         |
|------------------------|-----------------------------------------------------|
| <b>-gui</b>            | Call from GUI.                                      |
| <b>-msg arg</b>        | Message log file.                                   |
| <b>-msgset arg</b>     | Message setting.                                    |
| <b>-io_allspeed</b>    | Get worst IO results for all speed grades.          |
| <b>-dump_cdc</b>       | Dump CDC registers.                                 |
| <b>-dump_uncovered</b> | Dump load pins of connections that are not covered. |

### Examples

Following are a few examples of Timing command lines and a description of what each does.

#### Example 1

The following command verifies the timing characteristics of the design named design1.ldb, generating a summary timing report. Timing constraints contained in the file group1.prj are the timing constraints for the design. This generates the report file design1.twr.

```
timing design1.ldb (constraint is embedded in ldb)
```

#### Example 2

The following command produces a file listing all delay characteristics for the design named design1.ldb. Timing constraints contained in the file group1.prj are the timing constraints for the design. The file output.twr is the name of the verbose report file.

```
timing -v design1.ldb -o output.twr
```

#### Example 3

The following command analyzes the file design1.ldb and reports on the three worst errors for each constraint embedded in design1.ldb and in additional timing constraint file (e.g. test.ldc). The report is called design1.twr.

```
timing -e 3 -sdc-file test.ldc design1.ldb
```

#### Example 4

The following command analyzes the file design1.ldb and produces a verbose report to check on hold times on any timing constraints embedded in design1.ldb. With the output report file name unspecified here, a file using the root name of the .ldb file (i.e., design1.twr) will be output by default.

```
timing -v -hld design1.ldb
```

### Example 5

The following command analyzes the file design1.udb and produces a summary timing report to check on both setup and hold times on any timing constraints embedded in design1.udb. With the output report file name unspecified here, a file using the root name of the .udb file (i.e., design1.twr) will be output by default.

```
timing -sethld design1.udb
```

### See Also

- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

## Running Backannotation from the Command Line

The **Generate Timing Simulation Files** process in the Radiant software environment can also be run through the command line using the **backanno** program. The **backanno** program back-annotates physical information (e.g., net delays) to the logical design and then writes out the back-annotated design in the desired netlist format. Input to **backanno** is a Unified Database file (.udb) a mapped and partially or fully placed and/or routed design.

Subjects included in this topic:

- ▶ [Running Backanno](#)
- ▶ [Command Line Syntax \(Verilog\)](#)
- ▶ [Backanno Options](#)
- ▶ [Examples](#)

### Running Backanno

Backanno uses your input mapped and at least partially placed-and-routed Unified Database (.udb) file to produce a back-annotated netlist (.v) and standard delay (.sdf) file. This tool supports all FPGA design architecture flows. Only Verilog netlist is generated.

- ▶ To run backanno, type **backanno** on the command line with, at minimum, the name of your input .udb file. A sample of a typical backanno command would be as follows:

```
backanno backanno.udb
```

### Note

The above command back annotates backanno.udb and generates a Verilog file backanno.v and an SDF file backanno.sdf. If the target files already exist, they will not be overwritten in this case. You would need to specify the **-w** option to overwrite them.

---

There are several command line options that give you control over the way backanno generates back-annotated netlists for simulation. Please refer to the rest of the subjects in this topic for more details.

### Command Line Syntax (Verilog)

**backanno** [-w] [-pre <prfx>] [-sp <grade>] [-neg] [-pos] [-sup] [-min] [-x] [-fc] [-slice] [-slice0] [-slice1] [-noslice] [-t] [-dis <del>]] [-m <limit>]] [-u] [-i] [-nopur] [-l <libtype>] [-s <separator>] [-o <verilog<<.v>>] [-d <delays[.sdf]>] [-gui] [-msg <msglogfile>] [-msgset <msgtypefile>] [<udbfile>]

### Backanno Options

The table below contains descriptions of all valid options for backanno.

**Table 13: Backanno Options**

| Option      | Description                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| -w          | Overwrite the output files.                                                                                                                          |
| -sp <grade> | Override performance grade for backannotation.                                                                                                       |
| -pre <prfx> | Prefix to add to module name to make them unique for multi-chip simulation.                                                                          |
| -min        | Override performance grade to minimum timing for hold check.                                                                                         |
| -dis <del>  | Distribute routing delays by splitting the signal and inserting buffers. <del> is the maximum delay (in ps) between each buffer (1000ps by default). |
| -m <limit>  | Shortens the block names to a given character limit in terms of some numerical integer value.                                                        |
| -u          | Add pads for top-level dangling nets.                                                                                                                |
| -neg        | Negative setup/hold delay support. Without this option, all negative numbers are set to 0 in SDF.                                                    |
| -pos        | Write out 0 for negative setup/hold time in SDF for SC.                                                                                              |
| -x          | Generate x for setup/hold timing violation.                                                                                                          |
| -i          | Create a buffer for each block input that has interconnection delay.                                                                                 |
| -nopur      | Do not write PUR instance in the backannotation netlist. Instead, user has to instantiate it in a test bench.                                        |
| <type>      | Netlist type to write out.                                                                                                                           |
| <libtype>   | Library element type to use.                                                                                                                         |

**Table 13: Backanno Options**

| Option     | Description                                                                                                                                                                                                             |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <netfile>  | The name of the output netlist file. The extension on this file will change depending on which type of netlist is being written. Use -h <type>, where <type> is the output netlist type, for more specific information. |
| <udb file> | Input file '.udb '.                                                                                                                                                                                                     |

### Examples

Following are a few examples of backanno command lines and a description of what each does.

#### Example 1

The following command back annotates design.udb and generates a Verilog file design.vo and an SDF file design.sdf. If the target files exist, they will be overwritten.

```
backanno -w design.udb
```

#### Example 2

The following command back annotates design.udb and generates a Verilog file backanno.vo and an SDF file backanno.sdf. Any signal in the design that has an interconnection delay greater than 2000 ps (2 ns) will be split and a series of buffers will be inserted. The maximum interconnection delay between each buffer would be 2000 ps.

```
backanno -dis 2000 -o backanno design.udb
```

#### Example 3

The following command re-targets backannotation to performance grade -2, and puts a buffer at each block input to isolate the interconnection delay (ends at that input) and the pin to pin delay (starts from that input).

```
backanno -sp 2 -i design.udb
```

#### Example 4

The following command generates Verilog netlist and SDF files without setting the negative setup/hold delays to 0:

```
backanno -neg -n verilog design.udb
```

### See Also

► [Command Line Program Overview](#)

► [Command Line Data Flow](#)

## Running Bit Generation from the Command Line

The **Bitstream** process in the Radiant software environment can also be run through the command line using the bit generation (**bitgen**) program. This topic provides syntax and option descriptions for usage of the **bitgen** program from the command line. The **bitgen** program takes a fully routed Unified Database (.udb) file as input and produces a configuration bitstream (bit images) needed for programming the target device.

Subjects included in this topic:

- [Running BITGEN](#)
- [iCE40UP Command Line Syntax](#)
- [All devices except iCE40UP Command Line Syntax](#)
- [BITGEN Options](#)
- [Examples](#)

### Running BITGEN

BITGEN uses your input, fully placed-and-routed Unified Database (.udb) file to produce bitstream (.bit, .msk, or .rpt) for device configuration.

- To run BITGEN, type **bitgen** on the command line with, at minimum, the **bitgen** command. There is no need to specify the input .udb file if you run **bitgen** from the directory where it resides and there is no other .udb present.

There are several command line options that give you control over the way BITGEN outputs bitstream for device configuration. Please refer to the rest of the subjects in this topic for more details.

### iCE40UP Command Line Syntax

```
bitgen [-d] [-b] [-a] [-w] [-noebrinitq1] [-noebrinitq2] [-noebrinitq3] [-noheader] [-simbitmap] [-nvcm] [-freq <frequency_bit_setting>] [-spilowpower] [-warmboot] [-nvcmsecurity] {-g <setting_value>} <infile> [<outfile>]
```

### All devices except iCE40UP Command Line Syntax

```
bitgen [-d] [-w] [-m <format>] [-g <opt:val>] [-f <*.t2b>] [-s <*.secproj>] {-site <seirule>} {-site <seitype>} <infile> [<outfile>]
```

### BITGEN Options



The table below contains descriptions of all valid options for BITGEN.

### Note

Many BITGEN options are only available for certain architectures. Please use the **bitgen -h <architecture>** help command to see a list of valid bitgen options for the particular device architecture you are targeting.

**Table 14: iCE40UP BITGEN Command Line Options**

| Option                                  | Description                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-d</b>                               | Disable DRC.                                                                                                                                                                                                                                                                                                                    |
| <b>-b</b>                               | Produce .rbt file (ASCII form of binary).                                                                                                                                                                                                                                                                                       |
| <b>-a</b>                               | Produce .hex file.                                                                                                                                                                                                                                                                                                              |
| <b>-w</b>                               | Overwrite an existing output file.                                                                                                                                                                                                                                                                                              |
| <b>-freq</b><br><frequency_bit_setting> | Can setup different frequency: 0 = slow, 1 = medium, 2 = fast.<br><br>Depending on the speed of external PROM, this options adjusts the frequency of the internal oscillator used by the iCE40UP device during configuration. This is only applicable when the iCE40UP device is used in SPI Controller Mode for configuration. |
| <b>-nvcm</b>                            | Produce NVCM file.                                                                                                                                                                                                                                                                                                              |
| <b>-nvcmsecurity</b>                    | Set security. Ensures that the contents of the Non-Volatile Configuration Memory (NVCM) are secure and the configuration data cannot be read out of the device.                                                                                                                                                                 |
| <b>-spilowpower</b>                     | SPI flash low power mode. Places the PROM in low-power mode after configuration.<br><br>This option is applicable only when the iCE40UP device is used as SPI Controller Mode for configuration.                                                                                                                                |
| <b>-warmboot</b>                        | Enable warm boot. Enables the Warm Boot functionality, provided the design contains an instance of the WARMBOOT primitive.                                                                                                                                                                                                      |
| <b>-noheader</b>                        | Do not include the bitstream header.                                                                                                                                                                                                                                                                                            |
| <b>-noebrinitq0</b>                     | Do not include EBR initialization for quadrant 0.                                                                                                                                                                                                                                                                               |
| <b>-noebrinitq1</b>                     | Do not include EBR initialization for quadrant 1.                                                                                                                                                                                                                                                                               |
| <b>-noebrinitq2</b>                     | Do not include EBR initialization for quadrant 2.                                                                                                                                                                                                                                                                               |
| <b>-noebrinitq3</b>                     | Do not include EBR initialization for quadrant 3.                                                                                                                                                                                                                                                                               |
| <b>-g NOPULLUP:ENABLED</b>              | No IO pullup. Removes the pullup on the unused I/Os, except Bank 3 I/Os which do not have pullup.                                                                                                                                                                                                                               |

**Table 14: iCE40UP BITGEN Command Line Options**

| Option                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-h</b> <architecture> or <b>-help</b> <architecture> | Display available BITGEN command options for the specified architecture. The <b>bitgen -h</b> command with no architecture specified will display a list of valid architectures.                                                                                                                                                                                                                                                      |
| <infile>                                                | The input post-PAR design database file (.udb).                                                                                                                                                                                                                                                                                                                                                                                       |
| <outfile>                                               | The output file. If you do not specify an output file, BITGEN creates one in the input file's directory. If you specify <b>-b</b> , the extension is .rbt. If you specify <b>-a</b> , the extension is .hex. If you specify <b>-nvc</b> , the extension is .nvc. Otherwise the extension is .bin.<br><br>A report (.bgn) file containing all of BITGEN's output is automatically created under the same directory as the output file. |

**Table 15: BITGEN Command Line Options (all devices except iCE40UP)**

| Option                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                       |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|------------------------------|--------|----------------|-----------|----------------|----------|------------|----------|------------|----------|------------|----|----------|
| <b>-d</b>                                               | Disable DRC.                                                                                                                                                                                                                                                                                                                                                                                                                      |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| <b>-w</b>                                               | Overwrite an existing output file.                                                                                                                                                                                                                                                                                                                                                                                                |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| <b>-m</b> <format>                                      | Create "mask" and "readback" files. Valid formats are:<br>0: Output files in ASCII<br>1: Output files in binary.                                                                                                                                                                                                                                                                                                                  |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| <b>-g</b> <opt:val>                                     | Set option to value, options are (First is default):<br><table> <tr> <td>CfgMode</td><td>Disable, Flowthrough, Bypass</td></tr> <tr> <td>RamCfg</td><td>Reset, NoReset</td></tr> <tr> <td>DONEPHASE</td><td>T3, T2, T1, T0</td></tr> <tr> <td>GOEPHASE</td><td>T1, T3, T2</td></tr> <tr> <td>GSRPHASE</td><td>T2, T3, T1</td></tr> <tr> <td>GWEPHASE</td><td>T2, T3, T1</td></tr> <tr> <td>ES</td><td>Yes, No.</td></tr> </table> | CfgMode | Disable, Flowthrough, Bypass | RamCfg | Reset, NoReset | DONEPHASE | T3, T2, T1, T0 | GOEPHASE | T1, T3, T2 | GSRPHASE | T2, T3, T1 | GWEPHASE | T2, T3, T1 | ES | Yes, No. |
| CfgMode                                                 | Disable, Flowthrough, Bypass                                                                                                                                                                                                                                                                                                                                                                                                      |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| RamCfg                                                  | Reset, NoReset                                                                                                                                                                                                                                                                                                                                                                                                                    |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| DONEPHASE                                               | T3, T2, T1, T0                                                                                                                                                                                                                                                                                                                                                                                                                    |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| GOEPHASE                                                | T1, T3, T2                                                                                                                                                                                                                                                                                                                                                                                                                        |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| GSRPHASE                                                | T2, T3, T1                                                                                                                                                                                                                                                                                                                                                                                                                        |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| GWEPHASE                                                | T2, T3, T1                                                                                                                                                                                                                                                                                                                                                                                                                        |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| ES                                                      | Yes, No.                                                                                                                                                                                                                                                                                                                                                                                                                          |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| <b>-f</b> <*.t2b>                                       | Load additional command line arguments from a .t2b file.                                                                                                                                                                                                                                                                                                                                                                          |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| <b>-s</b> <*.secproj>                                   | Load a bitstream security settings file.                                                                                                                                                                                                                                                                                                                                                                                          |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |
| <b>-h</b> <architecture> or <b>-help</b> <architecture> | Display available BITGEN command options for the specified architecture. The <b>bitgen -h</b> command with no architecture specified will display a list of valid architectures.                                                                                                                                                                                                                                                  |         |                              |        |                |           |                |          |            |          |            |          |            |    |          |

**Table 15: BITGEN Command Line Options (all devices except iCE40UP)**

| Option    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <infile>  | The input post-PAR design database file (.udb).                                                                                                                                                                                                                                                                                                                                                                                             |
| <outfile> | <p>The output file. If you do not specify an output file, BITGEN creates one in the input file's directory. If you specify <b>-b</b>, the extension is .rpt. If you specify <b>-a</b>, the extension is .hex. If you specify <b>-nvcn</b>, the extension is .nvcn. Otherwise the extension is .bin.</p> <p>A report (.bgn) file containing all of BITGEN's output is automatically created under the same directory as the output file.</p> |

## Examples

### Example 1

The following command tells **bitgen** to overwrite any existing bitstream files with the **-w** option, prevents a physical design rule check (DRC) from running with **-d**, and specifies a Raw Bit File (.rpt) output with **-b**. Notice how these three options can be combined with the **-wdb** syntax.

```
bitgen -wdb <design.udb>
```

### Example 2

There are two command line options to set the SEI Editor tool with the following examples:

#### ► 1-bit Error Injection

```
bitgen -w <other options> -ebit 1 -sei unused -site
<unused site type> <des>.udb <output file>
    Avant: -where <unused site type> = [PFU | DSP | ANY]
    Nexus: -where <unused site type> = [PFU | DSP | EBR
| ANY]
```

#### ► Unused

```
bitgen -w -ebit 1 -sei unused -site PFU des.udb
des_partial.bit
```

#### ► Random

```
bitgen -w -ebit 1 -sei random - des.udb des_partial.bit
```

#### ► 2-bit Error Injection

```
bitgen -w <other options> -ebit 2 -sei unused -site
<unused site type> <des>.udb <output file>
    Avant: -where <unused site type> = [PFU | DSP | ANY]
    Nexus: -where <unused site type> = [PFU | DSP | EBR
| ANY]
```

▶ **Unused**

```
bitgen -w -ebit 2 -sei unused -site DSP des.udb  
des_partial.bit
```

```
bitgen -b -ebit 2 -sei unused -site DSP,DSP < udb design  
>
```

▶ **Random**

```
bitgen -w -ebit 2 -sei random des.udb des_partial.bit
```

---

**Note**

The <other options> option does not support compressed or encrypted partial bitstream, and if it includes “-b”, it generates an ASCII bitstream output file.

---

**See Also**

- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

## Running Programmer from the Command Line

You can run Programmer from the command line. The **PGRCMD** command uses a keyword preceded by a hyphen for each command line option.

Subjects included in this topic:

- ▶ [Running PGRCMD](#)
- ▶ [Command Line Syntax](#)
- ▶ [PGRCMD Options](#)
- ▶ [Example](#)

### Running PGRCMD

PGRCMD allows you to download data files to an FPGA device.

- ▶ To run PGRCMD, type **pgrcmd** on the command line with, at minimum, the **pgrcmd** command.

There are several command line options that give you control over the way PGRCMD programs devices. Please refer to the rest of the subjects in this topic for more details.

### Command Line Syntax

The following describes the PGRCMD command line syntax:

**pgrcmd [-help] [-infile <input\_file\_path>] [-logfile <log\_file\_path>] [-cabletype <cable>]**

**-cabletype**

lattice [ **-portaddress** < 0x0378 | 0x0278 | 0x03bc | 0x<custom address> > ]

usb [ **-portaddress** < EZUSB-0 | EZUSB-1 | ... | EZUSB-15 > ]

usb2 [ **-portaddress** < FTUSB-0 | FTUSB-1 | ... | FTUSB-15 > ]

TCK [0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10]

**PGRCMD Options**

The following are PGRCMD options.

**Help (Optional)**

| Option                    | Description                                   |
|---------------------------|-----------------------------------------------|
| <b>-help</b> or <b>-h</b> | Displays the Programmer command line options. |

**Input File (required)**

| Option                             | Description                                                                                                  |
|------------------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>-infile</b> <i>filename.xcf</i> | Specifies the chain configuration file (.xcf). If the file path includes spaces, enclose the path in quotes. |

**Log File (optional)**

| Option                                 | Description                                        |
|----------------------------------------|----------------------------------------------------|
| <b>-logfile</b> <i>logfilename.log</i> | Specifies the location of the Programmer log file. |

**Cable Type (optional)**

| Option                    | Description                                                                      |
|---------------------------|----------------------------------------------------------------------------------|
| <b>-cabletype</b> lattice | Lattice HW-DLN-3C parallel port programming cable (default).                     |
| <b>-cabletype</b> usb     | Lattice HW-USBN-2A USB port programming cable.                                   |
| <b>-cabletype</b> usb2    | Lattice FHW-USBN-2B (FTDI) USB programming cable and any FTDI based demo boards. |

**Parallel Port Address (optional)**

| Option                                 | Description                  |
|----------------------------------------|------------------------------|
| <b>-portaddress</b> 0x0378             | LPT1 parallel port (default) |
| <b>-portaddress</b> 0x0278             | LPT2 parallel port           |
| <b>-portaddress</b> 0x03BC             | LPT3 parallel port           |
| <b>-portaddress</b> 0x<custom address> | Custom parallel port address |

This option is only valid with parallel port cables.

**USB Port Address (optional)**

| Option                                   | Description                                                  |
|------------------------------------------|--------------------------------------------------------------|
| <b>-portaddress</b> EZUSB-0 ... EZUSB-15 | HW-USBN-2A USB cable number 0 through 15                     |
| <b>-portaddress</b> FTUSB-0 ... FTUSB-15 | FTDI based demo board or FTDI USB2 cable number 0 through 15 |

Default is EZUSB-0 and FTUSB-0. Only valid with the USB port cables.

**FTDI Based Demo Board or Cable Frequency Control (optional)**

| Option                                       | Description                                                                                                                                                   |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-TCK</b> 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10 | 0 = 30 MHz<br>1 = 15 MHz (default)<br>2 = 10 MHz<br>3 = 7.5 MHz<br>4 = 6 MHz<br>5 = 5 MHz<br>6 = 4 MHz<br>7 = 3 MHz<br>8 = 2 MHz<br>9 = 1 MHz<br>10 = 900 kHz |

Calculation formula for USB-2B (2232H FTDI USB host chip): Frequency = 60 MHz / (1 + ClockDivider) \*2

Calculation formula for USB-2B (2232D FTDI USB host chip): Frequency = 12 MHz / (1 + ClockDivider) \*2

Only applicable for FTDI based demo boards or programming cable.

### Return Codes

| Code | Definition                      |
|------|---------------------------------|
| 0    | Success                         |
| -1   | Log file error                  |
| -2   | Check configuration setup error |
| -3   | Out of memory error             |
| -4   | NT driver error                 |
| -5   | Cable not detected error        |
| -6   | Power detection error           |
| -7   | Device not valid error          |
| -8   | File not found error            |
| -9   | File not valid error            |
| -10  | Output file error               |
| -11  | Verification error              |
| -12  | Unsupported operation error     |
| -13  | File name error                 |
| -14  | File read error                 |
| -17  | Build SVF file error            |
| -18  | Build VME file error            |
| -19  | Command line syntax error       |

### Example

The following is a PGRCMD example.

```
pgrcmd -infile c:\test.xcf
```

### See Also

- ▶ [Command Line Data Flow](#)
- ▶ [Command Line Program Overview](#)

# Running the Deployment Tool from the Command Line

You can run the Deployment Tool from the command line. The **DDTCMD** command uses a keyword preceded by a hyphen for each command line option.

## Note

If you use the Deployment Tool GUI, the correct command line for the operation you are performing will be displayed in the GUI in the "Step 4 of 4 - Generate Deployment" dialog box. The command line is also recorded in the Deployment Project File (\*.ddt). You can view the Deployment Project File with a text editor and view or copy the command line.

Subjects included in this topic:

- ▶ [Running DDTCMD](#)
- ▶ [Command Line Syntax](#)
- ▶ [DDTCMD Options](#)
- ▶ [Examples](#)

## Running DDTCMD

DDTCMD allows you to convert data files to other formats for one device at a time and devices in a chain. DDTCMD can also use the data files it produces to generate other data file formats.

- ▶ To run DDTCMD, type **ddtcmd** on the command line with, at minimum, the **ddtcmd** command.

There are several command line options that give you control over the way **DDTCMD** converts data files. Please refer to the rest of the subjects in this topic for more details.

## Command Line Syntax

The following describes the DDTCMD command line syntax:

```
<install_path>\ddtcmd
[ -h ] |
  -oft <-bit | rbt >
    [ -dev <Device Name> ]
    -if "<Data File Path>"
    [ -of "<Data File Path>" ]
    [ -compress <on | off> ]
    [ -verifyid <on | off> ]
    [ -freq ]
```



```

[ -crc <frame | global>]
[ -mirror]
[ -header]
[ -secure <on | off>]
[ -overwriteues on <Hex Value>]
[ -encryption -key hex <Valid Key Value>]
-config_mode <slave_scm | slave_pcm | jtag | spi | spim |
master_pcm | slave_spi>]
|
-oft <-int | mot | xtek>
[ -dev <Device Name> ]
-if "<Data File Path>"
[ -of "<Data File Path>"]
[ -compress <on | off>]
[ -verifyid <on | off> ]
[ -freq ]
[ -crc <frame | global>]
[ -mirror]
[ -header]
[ -secure <on | off>]
[ -overwriteues on <Hex Value>]
[ -encryption -key hex <Valid Key Value>]
-config_mode <slave_scm | slave_pcm | jtag | spi | spim |
master_pcm | slave_spi>]
[ -address <hex address>]
[ -fast]
|
-oft -svf
[ -dev <Device Name>]
-if "<Data File Path>"
[ -of "<Data File Path>"]
-op <Operation>
[ -nocomments]
[ -revd]
[ -runtest]
[ -skipverify]
[ -reset]

```

[**-maxdata** <8 | 16 | 32 | 64 | 128 | 256> ]  
|  
**-oft -svfchain**  
-if "<Data File Path>"  
[ -of "<Data File Path>"]  
[ -nocomments]  
[ -revd]  
[ -runtest]  
[ -skipverify]  
[ -reset]  
[ -maxdata <8 | 16 | 32 | 64 | 128 | 256>]  
|  
**-oft -stp**  
[ -dev <Device Name>]  
-if "<Data File Path>"  
[ -of "<Data File Path>"]  
-op <Operation>  
[ -nocompress]  
[ -print]  
[ -skipverify]  
|  
**-oft -stpchain**  
-if "<Data File Path>"  
[ -of "<Data File Path>"]  
[ -nocompress]  
[ -print]  
[ -skipverify]  
|  
**oft -ate**  
-if "<Data File Path>"  
[ -of "<Data File Path>"]  
-type <tst | gr | hp3070 | hp3065 | t1800 | t200>  
[ -ispcd]  
[ -skipverify]  
[ -headerfile <file path>]  
[ -splitfile [ -init] [ -vectors <# vectors/file>] [ -splitatlow]]

|

**-oft -fullvme**

**-if** "<Data File Path>"

[ **-of** "<Data File Path>" ]

[ **-maxdata** <8 | 16 | 32 | 64 | 128 | 256> ]

[ **-hex** ]

[ **-nocompress** ]

[ **-compact** ]

[ **-fixedpulse** ]

[ **-verifyues** ]

[ **-noheader** ]

[ **-comment** ]

|

**-oft -slimvme**

**-if** "<Data File Path>"

[ **-ofa** <Algorithm File Path> ]

[ **-ofd** "<Data File Path>" ]

[ **-nocompress** ]

[ **-hex** ]

|

**-oft -sspi**

**-if** "<Data File Path>"

[ **-ofa** <Algorithm File Path> ]

[ **-ofd** "<Data File Path>" ]

[ **-nocompress** ]

[ **-hex** ]

[ **-op** <Operation> ]

|

**-oft -i2c**

**-if** "<Data File Path>"

[ **-ofa** <Algorithm File Path> ]

[ **-ofd** "<Data File Path>" ]

[ **-nocompress** ]

[ **-hex** ]

[ **-op** <Operation> ]

**-address** <80 | (User Specified)>

```

    [ -comment]
    [ -fixedpulse]
|
-oft -cpu
    -if "<Data File Path>"
    [ -of "<Data File Path>"]
    - type <cpu | c | hex | txt>
    [ -verify]
    [ -comment]
    [ -nocompress]
    [ -mirror]
|
-oft -boot
    [ -dev <Device Name>]
    -golden "<Data File Path>"
    -primary "<Data File Path>"
    -format <int | mot | xtek>
    [ -of "<Data File Path>"]
    -flashsize <1 | 2 | 4 | 8 | 16 | 32 | 64 | 128 | 256>
    [ -protect]
    [ -mirror]
    [ -header]
    [ -preamble]
    [ -optimize] [ -fast | -dualio | -quad 1]
    [ -asc <1 | 2 | 3 | 4 | 5 | 6 | 7 | 8>]
    -ascfile "<Data File Path>"
    [ -ascfile "<Data File Path>" ] ... [ -ascfile "<Data File Path>"]
|
-oft -jed
    -if "<Data File Path>"
    [ -dev <Device Name>]
    [ -of "<Data File Path>"]
    [ -overwriteues <on "<hex value>" | checksum | disable>]
    [ -comment "<Header File Path>"]
    [ -encryption -key hex "<valid key value>"]
|

```

**-oft -advanced**[ **-dev** <Device Name>]**-if** "<Data File Path>"**-format** <int | mot | xtek>[ **-of** "<Data File Path>"]**-flashsize** <512 | 1 | 2 | 4 | 8 | 16 | 32 | 64 | 128 | 256 | 513>[ **-mirror**][ **-header**][ **-optimize**][ **-preamble**][ **-userdata** <1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16>**-usermirror****-userfile** "<Data File Path>"**-address** <hex address value>[ **-userfile** "<Data File Path>"**-address** <hex address value>] ...[ **-userfile** "<Data File Path>"**-address** <hex address value>]][ **-ice** [ **-warm** <1 | 2 | 3 | 4>]**-patterns** <2,3,4>**-bootfile** "<Data File Path>"**-address** <hex address value>[ **-bootfile** "<Data File Path>"**-address** <hex address value>] ...[ **-bootfile** "<Data File Path>"**-address** <hex address value> ]][ **-fast** | **-dualio** | **-quad 1**>][ **-multi** <1 | 2 | 3 | 4>**-golden** "<Data File Path>"**-altfile** "<Data File Path>"**-address** <hex address value>**-next** <primary | alt1 | alt2 | alt3 | alt4> [**-altfile** "<Data File Path>"**-address** <hex address value>**-next** <primary | alt1 | alt2 | alt3 | alt4>] ...

```

    [-altfile "<Data File Path>"
    -address <hex address value>
    -next <primary|alt1|alt2|alt3|alt4>]]
|
-oft -merge
    -ifdev1 "<Data File Path>"
    -ifdev2 "<Data File Path>"
    -format <int | mot| xtek>
    [ -of "<Data File Path>"]
    [ -mergeformat <intelligent | combine>
    [ -frequency <freq>]
    [ -scoutput <dout | qout>]]
    [ -mirror]
    [ -header]
|
-oft -bsm
    -ifd "<Data File Path>"
    -ifb "<BSDL File Path>"
    [ -dev <Device Name>]
    [ -of "<Data File Path>"]
    [ -convertbidi]

```

### DDTCMD Options

The following are DDTCMD options.

| Option                        | Description                                                                    |
|-------------------------------|--------------------------------------------------------------------------------|
| <b>-h</b>                     | Displays the Deployment Tool command line usage in the terminal or DOS window. |
| <b>-oft &lt;File Type&gt;</b> | Indicates which file type(s) will be generated.                                |

| Option      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-bit</b> | <p>Generate binary bitstream file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default file name is the same name as the input file. binary bitstream files should end with the *.bit extension.</p> <p><b>-compress</b> &lt;on   off&gt;: Specifies compression (optional). Default is off.</p> <p><b>-verifyid</b>: On: Include the Verify ID frame. Off: Replaces Verify ID frame with NOOP (optional). Default is off.</p> <p><b>-freq</b>: Specifies the frequency of the master bitstream.</p> <p>Possible frequencies valid for LatticeEC/P, LatticeECP2/M, LatticeECP3, and LatticeXP/2 devices only are: 2.5, 4.3, 5.4, 6.9, 8.1, 9.2, 10, 13, 15, 20, 26, 30, 34, 41, 45, 51, 55, 60, and 130 MHz. Possible frequencies valid for MachXO2 and MachXO3L devices only are: 2.1, 2.5, 3.2, 4.3, 5.5, 7, 8.3, 9.2, 10, 13, 15, 20, 27, 30, 33, 38, 44, 53, 66, 89, and 133 MHz. Possible frequencies valid for ECP5 devices only are: 2.4, 3.2, 4.1, 4.8, 6.5, 8.2, 9.7, 12.9, 15.5, 16.3, 19.4, 20.7, 25.8, 31, 34.4, 38.8, 44.3, 51.7, 62, 77.5, 103.3, and 155 MHz.</p> <p><b>-crc</b> &lt;frame   global&gt;: The "frame" option includes the CRC checking for each data frame. The "global" option disables the frames CRC but still calculates the global CRC at the end of the configuration data. Default uses the settings of the input file. Valid for ECP5, LatticeECP2/M, LatticeECP2S/SM, LatticeECP3, MachXO3L, MachXO2, and LatticeXP/2 devices only.</p> <p><b>-secure</b> &lt;on   off&gt;: Specifies program security (optional). On: Programs the Security Fuse (blocks read back). Off: Does not program the Security Fuse (allows read back). Default uses the settings of the input file.</p> <p><b>-overwriteues on</b>: Overwrites (or replaces) the USERCODE value contained in the input file with the hex value passed in.</p> <p><b>Note</b>: The encryption software patch must be installed before using the following -<b>encryption -key</b> and <b>-config_mode</b> commands.</p> <p><b>-encryption -key hex</b> &lt;Valid Key Value&gt;: Encrypts the input file using the -key 128-bit encryption key.</p> <p><b>-config_mode</b> &lt;slave_scm   slave_pcm   jtag   spi   spim   master_pcm   slave_spi&gt;]: Selects the appropriate configuration mode for the bitstream encryption. Valid for LatticeECP2S/MS and LatticeECP3 devices only.</p> |

| Option      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-rbt</b> | <p>Generate ASCII Bitstream file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes. Optional. Default file name is the same name as the input file. ASCII bit files should end with the *.rbt extension.</p> <p><b>-compress</b> &lt;on   off&gt;: Specifies compression (optional). Default is off.</p> <p><b>-verifyid</b>: On: Include the Verify ID frame. Off: Replaces Verify ID frame with NOOP (optional). Default is off.</p> <p><b>-freq</b>: Specifies the frequency of the master bitstream.</p> <p>Possible frequencies valid for LatticeEC/P, LatticeECP2/M, LatticeECP3, and LatticeXP/2 devices only are: 2.5, 4.3, 5.4, 6.9, 8.1, 9.2, 10, 13, 15, 20, 26, 30, 34, 41, 45, 51, 55, 60, and 130 MHz. Possible frequencies valid for MachXO2 and MachXO3L devices only are: 2.1, 2.5, 3.2, 4.3, 5.5, 7, 8.3, 9.2, 10, 13, 15, 20, 27, 30, 33, 38, 44, 53, 66, 89, and 133 MHz. Possible frequencies valid for ECP5 devices only are: 2.4, 3.2, 4.1, 4.8, 6.5, 8.2, 9.7, 12.9, 15.5, 16.3, 19.4, 20.7, 25.8, 31, 34.4, 38.8, 44.3, 51.7, 62, 77.5, 103.3, and 155 MHz.</p> <p><b>-crc</b> &lt;frame   global&gt;: The "frame" option includes the CRC checking for each data frame. The "global" option disables the frames CRC but still calculates the global CRC at the end of the configuration data. Default uses the settings of the input file. Valid for LatticeECP2/M, LatticeECP2S/SM, LatticeECP3, ECP5, MachXO3L, MachXO2, and LatticeXP/2 devices only.</p> <p><b>-secure</b> &lt;on   off&gt;: Specifies program security (optional). On: Programs the Security Fuse (blocks read back). Off: Does not program the Security Fuse (allows read back). Default uses the settings of the input file.</p> <p><b>-overwriteues on</b>: Overwrites (or replaces) the USERCODE value contained in the input file with the hex value passed in.</p> <p><b>Note</b>: The encryption software patch must be installed before using the following -<b>encryption -key</b> and <b>-config_mode</b> commands.</p> <p><b>-encryption -key hex</b> &lt;Valid Key Value&gt;: Encrypts the input file using the -key 128-bit encryption key.</p> <p><b>-config_mode</b> &lt;slave_scm   slave_pcm   jtag   spi   spim   master_pcm   slave_spi&gt;]: Selects the appropriate configuration mode for the bitstream encryption. Valid for LatticeECP2S/MS and LatticeECP3 devices only.</p> |



| Option      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-int</b> | <p>Generate Intel 32-bit hex file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device. Optional. The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes. Optional. Default file name is the same name as the input file. Intel files should end with the *.mcs extension.</p> <p><b>-compress</b> &lt;on   off&gt;: Specifies compression (optional). Default is off.</p> <p><b>-verifyid</b>: On: Include the Verify ID frame. Off: Replaces Verify ID frame with NOOP (optional). Default is off.</p> <p><b>-freq</b>: Specifies the frequency of the master bitstream.</p> <p>Possible frequencies valid for LatticeEC/P, LatticeECP2/M, LatticeECP3, and LatticeXP/2 devices only are: 2.5, 4.3, 5.4, 6.9, 8.1, 9.2, 10, 13, 15, 20, 26, 30, 34, 41, 45, 51, 55, 60, and 130 MHz.</p> <p>Possible frequencies valid for for MachXO2 and MachXO3L devices only are: 2.1, 2.5, 3.2, 4.3, 5.5, 7, 8.3, 9.2, 10, 13, 15, 20, 27, 30, 33, 38, 44, 53, 66, 89, and 133 MHz.</p> <p>Possible frequencies valid for for ECP5 devices only are: 2.4, 3.2, 4.1, 4.8, 6.5, 8.2, 9.7, 12.9, 15.5, 16.3, 19.4, 20.7, 25.8, 31, 34.4, 38.8, 44.3, 51.7, 62, 77.5, 103.3, and 155 MHz.</p> <p><b>-crc</b> &lt;frame   global&gt;: The "frame" option includes the CRC checking for each data frame. The "global" option disables the frames CRC but still calculates the global CRC at the end of the configuration data. Default uses the settings of the input file. Valid for ECP5, LatticeECP2/M, LatticeECP2S/SM, LatticeECP3, MachXO3L, MachXO2, and LatticeXP/2 devices only.</p> <p><b>-mirror</b>: Flips each byte. Default: bytes are not flipped. Optional.</p> <p><b>-header</b>: Retains the input file header in the output file. Default: Replaces header with all ones (0xFF). Optional.</p> <p><b>-secure</b> &lt;on   off&gt;: Specifies program security (optional). On: Programs the Security Fuse (blocks read back). Off: Does not program the Security Fuse (allows read back). Default uses the settings of the input file.</p> <p><b>-overwriteues on</b>: Overwrites (or replaces) the USERCODE value contained in the input file with the hex value passed in.</p> <p><b>Note</b>: The encryption software patch must be installed before using the following -<b>encryption -key</b> and <b>-config_mode</b> commands.</p> <p><b>-encryption -key hex</b> &lt;Valid Key Value&gt;: Encrypts the input file using the -key 128-bit encryption key.</p> |

| Option              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-int (cont.)</b> | <p><b>-config_mode</b> &lt;slave_scm   slave_pcm   jtag   spi   spim   master_pcm   slave_spi&gt;]: Selects the appropriate configuration mode for the bitstream encryption. Valid for LatticeECP2S/MS and LatticeECP3 devices only.</p> <p><b>-address</b> &lt;hex address&gt; Specifies the starting address of the memory device to store the input file.</p> <p><b>-fast</b>: Using this option, the FPGA will issue the Fast Read command (0x0B) to the SPI Flash, instead of the Slow Read command (0x03). Valid for ECP5.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>-mot</b>         | <p>Generate Motorola 32-bit hex file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device. Optional. The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes. Optional. Default file name is the same name as the input file. Motorola files should end with the *.exo extension.</p> <p><b>-compress</b> &lt;on   off&gt;: Specifies compression (optional). Default is off.</p> <p><b>-verifyid</b>: On: Include the Verify ID frame. Off: Replaces Verify ID frame with NOOP (optional). Default is off.</p> <p><b>-freq</b>: Specifies the frequency of the master bitstream.</p> <p>Possible frequencies valid for LatticeEC/P, LatticeECP2/M, LatticeECP3, and LatticeXP/2 devices only are: 2.5, 4.3, 5.4, 6.9, 8.1, 9.2, 10, 13, 15, 20, 26, 30, 34, 41, 45, 51, 55, 60, and 130 MHz.</p> <p>Possible frequencies valid for MachXO2 and MachXO3L devices only are: 2.1, 2.5, 3.2, 4.3, 5.5, 7, 8.3, 9.2, 10, 13, 15, 20, 27, 30, 33, 38, 44, 53, 66, 89, and 133 MHz.</p> <p>Possible frequencies valid for ECP5 devices only are: 2.4, 3.2, 4.1, 4.8, 6.5, 8.2, 9.7, 12.9, 15.5, 16.3, 19.4, 20.7, 25.8, 31, 34.4, 38.8, 44.3, 51.7, 62, 77.5, 103.3, and 155 MHz.</p> <p><b>-crc</b> &lt;frame   global&gt;: The "frame" option includes the CRC checking for each data frame. The "global" option disables the frames CRC but still calculates the global CRC at the end of the configuration data. Default uses the settings of the input file. Valid for ECP5, LatticeECP2/M, LatticeECP2S/SM, LatticeECP3, MachXO3L, MachXO2, and LatticeXP/2 devices only.</p> <p><b>-mirror</b>: Flips each byte. Default: bytes are not flipped. Optional.</p> <p><b>-header</b>: Retains the input file header in the output file. Default: Replaces header with all ones (0xFF). Optional.</p> <p><b>-secure</b> &lt;on   off&gt;: Specifies program security (optional). On: Programs the Security Fuse (blocks read back). Off: Does not program the Security Fuse (allows read back). Default uses the settings of the input file.</p> |

| Option              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-mot (cont.)</b> | <p><b>-overwriteues on:</b> Overwrites (or replaces) the USERCODE value contained in the input file with the hex value passed in.</p> <p><b>Note:</b> The encryption software patch must be installed before using the following <b>-encryption -key</b> and <b>-config_mode</b> commands.</p> <p><b>-encryption -key hex</b> &lt;Valid Key Value&gt;: Encrypts the input file using the -key 128-bit encryption key.</p> <p><b>-config_mode</b> &lt;slave_scm   slave_pcm   jtag   spi   spim   master_pcm   slave_spi&gt;]: Selects the appropriate configuration mode for the bitstream encryption. Valid for LatticeECP2S/MS and LatticeECP3 devices only.</p> <p><b>-address</b> &lt;hex address&gt; Specifies the starting address of the memory device to store the input file.</p> <p><b>-fast:</b> Using this option, the FPGA will issue the Fast Read command (0x0B) to the SPI Flash, instead of the Slow Read command (0x03). Valid for ECP5.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>-xtek</b>        | <p>Generate Tektronix Extended hex file</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes. Optional. Extended Tektronix files should end with the *.xtek extension.</p> <p><b>-compress</b> &lt;on   off&gt;: Specifies compression (optional). Default is off.</p> <p><b>-verifyid:</b> On: Include the Verify ID frame. Off: Replaces Verify ID frame with NOOP (optional). Default is off.</p> <p><b>-freq:</b> Specifies the frequency of the master bitstream.</p> <p>Possible frequencies valid for LatticeEC/P, LatticeECP2/M, LatticeECP3, and LatticeXP/2 devices only are: 2.5, 4.3, 5.4, 6.9, 8.1, 9.2, 10, 13, 15, 20, 26, 30, 34, 41, 45, 51, 55, 60, and 130 MHz.</p> <p>Possible frequencies valid for MachXO2 and MachXO3L devices only are: 2.1, 2.5, 3.2, 4.3, 5.5, 7, 8.3, 9.2, 10, 13, 15, 20, 27, 30, 33, 38, 44, 53, 66, 89, and 133 MHz.</p> <p>Possible frequencies valid for ECP5 devices only are: 2.4, 3.2, 4.1, 4.8, 6.5, 8.2, 9.7, 12.9, 15.5, 16.3, 19.4, 20.7, 25.8, 31, 34.4, 38.8, 44.3, 51.7, 62, 77.5, 103.3, and 155 MHz.</p> <p><b>-crc</b> &lt;frame   global&gt;: The "frame" option includes the CRC checking for each data frame. The "global" option disables the frames CRC but still calculates the global CRC at the end of the configuration data. Default uses the settings of the input file. Valid for ECP5, LatticeECP2/M, LatticeECP2S/SM, LatticeECP3, MachXO3L, MachXO2, and LatticeXP/2 devices only.</p> |

| Option               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-xtek (cont.)</b> | <p><b>-mirror</b>: Flips each byte. Default: bytes are not flipped (optional).</p> <p><b>-header</b>: Retains the input file header in the output file. Default: Replaces header with all ones (0xFF) (optional).</p> <p><b>-secure</b> &lt;on   off&gt;: Specifies program security (optional). On: Programs the Security Fuse (blocks read back). Off: Does not program the Security Fuse (allows read back). Default uses the settings of the input file.</p> <p><b>overwriteues on</b>: Overwrites (or replaces) the USERCODE value contained in the input file with the hex value passed in.</p> <p><b>Note</b>: The encryption software patch must be installed before using the following <b>-encryption -key</b> and <b>-config_mode</b> commands.</p> <p><b>-encryption -key hex</b> &lt;Valid Key Value&gt;: Encrypts the input file using the -key 128-bit encryption key.</p> <p><b>-config_mode</b> &lt;slave_scm   slave_pcm   jtag   spi   spim   master_pcm   slave_spi&gt;]: Selects the appropriate configuration mode for the bitstream encryption. Valid for LatticeECP2S/MS and LatticeECP3 devices only.</p> <p><b>-address</b> &lt;hex address&gt; Specifies the starting address of the memory device to store the input file.</p> <p><b>-fast</b>: Using this option, the FPGA will issue the Fast Read command (0x0B) to the SPI Flash, instead of the Slow Read command (0x03). Valid for ECP5.</p>                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>-svf</b>          | <p>Generate SVF file for a single device.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device. Optional. The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LCMX02-256ZE-XXMG64 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default file name is the same name as the input file. SVF files should end with the *.svf extension.</p> <p><b>-op</b> Indicates the operation. The operation list varies depending on the device family. Use the Deployment Tool GUI to create the command line.</p> <p><b>-nocomments</b>: Omit Header and Comments from SVF file (optional). Default includes Header and Comments.</p> <p><b>-revd</b>: Generate Rev D standard SVF file (optional). Default generates Lattice Extended SVF file (not supported by all third party tools).</p> <p><b>-runtest</b>: Uses RUNTEST format from SVF revision C (optional). Default is revision D SVF file.</p> <p><b>-skipverify</b>: Generates an SVF without the verify portion (optional).</p> <p><b>-reset</b>: Writes RESET in the SVF file (optional).</p> <p><b>-maxdata</b> [&lt;8   16   32   64   128   256&gt; ]: Specifies the maximum data size per row (in Kbits) (optional).</p> |

| Option           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-svfchain</b> | <p>Generate SVF file for chain of devices.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default file name is the same name as the input file. SVF files should end with the *.svf extension.</p> <p><b>-nocomments</b>: Omit Header and Comments from SVF file (optional). Default includes Header and Comments.</p> <p><b>-revd</b>: Generate Rev D standard SVF file (optional). Default generates Lattice Extended SVF file (not supported by all third party tools).</p> <p><b>-runtest</b>: Uses RUNTEST format from SVF revision C (optional). Default is revision D SVF file.</p> <p><b>-skipverify</b>: Generates an SVF without the verify portion (optional).</p> <p><b>-reset</b>: Writes RESET in the SVF file (optional).</p> <p><b>-maxdata</b> [&lt;8   16   32   64   128   256&gt; ]: Specifies the maximum data size per row (in Kbits) (optional).</p>                                                                                                                                                                                                                                                                                                                                                |
| <b>-stp</b>      | <p>Generate Standard Test and Programming Language (STAPLE) file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LCMXO2-256ZE-XXMG64 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.stp extension.</p> <p><b>-op</b> Indicates the operation. The operation list varies depending on the device family. Use the Deployment Tool GUI to create the command line.</p> <p><b>-nocompress</b>: &lt; ON   OFF &gt;: Generates a compressed or uncompressed STAPL file. Default is ON.</p> <p><b>-print</b> &lt; ON   OFF &gt;: Generates a STAPL file with all the comment statements. Default is OFF.</p> <p><b>-skipverify</b>: &lt; ON   OFF &gt;: Generates a STAPL file without the Verify portion (optional).</p> |

| Option           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-stpchain</b> | <p>Generate Standard Test and Programming Language (STAPL) file for a chain of devices.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes. Optional. Default uses the input file name with *.stp extension.</p> <p><b>-nocompress</b>: &lt; ON   OFF &gt;: Generates a compressed or uncompressed STAPL file. Default is ON.</p> <p><b>-print</b> &lt; ON   OFF &gt;: Generates a STAPL file with all the comment statements. Default is OFF.</p> <p><b>-skipverify</b>: &lt; ON   OFF &gt;: Generates a STAPL file without the Verify portion (optional).</p>                                                                                                                                                                                                                                                        |
| <b>-ate</b>      | <p>Generate ATE file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.tst, *.gr, *.pcf, or *.asc extension, descending type.</p> <p><b>-type</b>: &lt;tst   gr   hp3070   hp3065   t1800   t200&gt;</p> <p><b>-ispdcd</b>: Generates vectors in ispDCD Format.</p> <p><b>-skipverify</b>: For Erase, Program, and Verify Operations, Skip Verify.</p> <p><b>-headerfile</b> &lt;file path&gt;: Specifies a customer header file.</p> <p><b>-splitfile</b> [ -init] [ -vectors &lt;# vectors/file&gt;] [ -splitatlow]: Split each file at active Low. Default: Split each file at active high.</p>                                                                                                                                                               |
| <b>-fullvme</b>  | <p>Generate JTAG Full VME Embedded file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.vme extension.</p> <p><b>-maxdata</b> &lt;8   16   32   64   128   256&gt;: Maximum Memory Allocation Size Per Row of Data (Kbytes) (optional).</p> <p><b>-hex</b>: Generate a Hex (.c) file along with the VME file (optional).</p> <p><b>-nocompress</b>: Do not compress data (optional).</p> <p><b>-compact</b>: Compact VME file. Optional.</p> <p><b>-fixedpulse</b>: Generate a fixed pulse width VME file (optional).</p> <p><b>-verifyues</b>: Test the USERCODE. Program the device if USERCODE fails verify (optional).</p> <p><b>-noheader</b>: Omit header from VME file (optional).</p> <p><b>-comment</b>: Include comments in VME file (optional).</p> |

| Option          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-slimvme</b> | <p>Generate JTAG Slim VME Embedded file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-ofa</b> "&lt;Algorithm File Path&gt;": Programming Algorithm file (optional). Default use input with *.algo.vme.</p> <p><b>-ofd</b> "&lt;Data File Path&gt;": Programming Data file (optional). Default uses input with *.data.vme.</p> <p><b>-nocompress</b>: Do not compress data (optional).</p> <p><b>-hex</b>: Generate a Hex (.c) file along with the Slim VME file (optional).</p>                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>-sspi</b>    | <p>Generate Target SPI embedded file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-ofa</b> "&lt;Algorithm File Path&gt;": Programming Algorithm file (optional). Default use input with *.algo.vme.</p> <p><b>-ofd</b> "&lt;Data File Path&gt;": Programming Data file (optional). Default uses input with *.data.vme.</p> <p><b>-nocompress</b>: Do not compress data (optional).</p> <p><b>-hex</b>: Generate a Hex (.c) file along with the Target SPI Embedded file (optional).</p> <p><b>-op</b> Indicates the operation. This is required when the input file is JEDEC. When the input file is an XCF, the XCF contains the operation.</p>                                                                                                                                                                                                                                |
| <b>-i2c</b>     | <p>Generate I2C embedded file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-ofa</b> "&lt;Algorithm File Path&gt;": Programming Algorithm file (optional). Default use input with *.algo.vme.</p> <p><b>-ofd</b> "&lt;Data File Path&gt;": Programming Data file (optional). Default uses input with *.data.vme.</p> <p><b>-nocompress</b>: Do not compress data (optional).</p> <p><b>-hex</b>: Generate a Hex (.c) file along with the VME file (optional).</p> <p><b>-op</b> Indicates the operation. This is required when the input file is JEDEC. When the input file is an XCF, the XCF contains the operation.</p> <p><b>-address</b> &lt;80   (User Specified)&gt; Specifies the slave I2C address.</p> <p><b>-comment</b>: Include comments in I2C embedded file (optional).</p> <p><b>-fixedpulse</b>: Generate a fixed pulse width I2C embedded file (optional).</p> |

| Option       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-cpu</b>  | <p>Generates sysCONFIG CPU Embedded file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with the extension of the selected <b>-type</b>.</p> <p><b>-type</b> &lt;cpu   c   hex   txt&gt;: Indicates whether file is in binary embedded (cpu), C-code (c), Intel Hex (hex), or Text debug only (txt) format.</p> <p><b>-verify</b>: Generates a sysCONFIG Embedded file that includes a verify operation.</p> <p><b>-comment</b>: Include comments in sysCONFIG Embedded file (optional).</p> <p><b>-nocompress</b>: Do not compress data (optional).</p> <p><b>-mirror</b>: Flips each byte. Default: bytes are not flipped (optional).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>-boot</b> | <p>Generate Dual Boot Hex file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-golden</b> "&lt;Golden File Path&gt;" <b>-primary</b> "&lt;Primary File Path&gt;": Merges the Golden, Primary, and a JUMP command into one Hex file. The address location of the Golden, Primary, and JUMP command depends on the files sizes and the target device. The Deployment Tool will record the address location of each in the Status window and log file.</p> <p><b>-format</b> &lt;intel   motorola   xtek &gt;: Specifies the output format as Intel, Motorola, or Tektronix Extended Hex. The default format is Intel Hex (optional). Default uses the input file name with *.mcs, *exo, or *.xtek extension, depending on format type selected.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.mcs, *exo, or *.xtek extension, depending on format type selected.</p> <p><b>-flashsize</b>: Specifies size in Mb.</p> <p>Possible PROM sizes are 1, 2, 4, 8, 16, 32, 64, 128, 256, and 513 (512Mb).</p> <p>Default: 1.</p> |



| Option               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-boot (cont.)</b> | <p><b>-protect:</b> Inserts the Golden File at the beginning of the upper half of the SPI flash (optional). This allows the upper half of the SPI flash to be write-protected, which protects the Golden File from accidental erase or reprogram.</p> <p><b>-mirror:</b> Flips each byte. Default: bytes are not flipped (optional).</p> <p><b>-header:</b> Retains the input file header in the output file. Default: Replaces header with all ones (0xFF) (optional).</p> <p><b>-preamble:</b> Replaces the header Preamble of the primary bitstream with 0xFFs (for Fail Safe Upgrade feature) (optional).</p> <p><b>-optimize:</b> Uses the files size of the input files to determine SPI flash sector addresses for each input file. Use this option to minimize wasted memory space. The default is to use worst case file size for the target device, which is an uncompressed file with all EBR and PCS, depending on the family. Using the worst case will ensure that all files will always be located at the same address even if any of the files/designs are updated at a later date.</p> <p><b>-asc &lt;1   2   3   4   5   6   7   8&gt;</b> Indicates the number of ASC devices connected to the MachXO2 or Platform Manager 2 device. The maximum number that can be used with the MachXO2 device is 8. The maximum number that can be used with the Platform Manager 2 device is 7. The input JEDEC file and the ASC Hex files will be merged into one Hex file that can be programmed into an external SPI Flash device for Dual Boot support. Optional.</p> <p><b>-ascfile "&lt;Data File Path&gt;":</b> Specifies the ASC Hex file path and name. If the file path includes spaces, enclose the path in quotes. There must be one "-ascfile" and path for each ASC specified by the "-asc" Optional.</p> <p><b>&lt;-fast   -dualio   -quad 1&gt;:</b> With the -fast option, the FPGA will issue the Fast Read command (0x0B) to the SPI Flash. The -dualio option must be used if a Dual I/O SPI Flash is used. The -quad 1 option must be used if a Quad I/O SPI Flash is used. Only one of these options (-fast, -dualio, -quad 1) can be used. Without any of these options, the FPGA uses the Slow Read command (0x03). Valid for ECP5.</p> <p><b>-encryption -key hex &lt;Valid Key Value&gt;:</b> Encrypts the input file using the -key 128-bit encryption key.</p> |

| Option      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-jed</b> | <p>Generates JEDEC file.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LCMX02-256ZE-XXMG64 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.jed extension.</p> <p><b>-overwriteues &lt;on&gt;</b>: Overwrites (or replaces) the USERCODE value contained in the input file with the hex value passed in. The Checksum option overwrites the USERCODE with the JEDEC file fuse checksum value. The Disable option omits the USERCODE from the JEDEC file.</p> <p><b>Note</b>: The encryption software patch must be installed before using the following -<b>encryption -key</b> commands.</p> <p><b>-encryption -key hex</b> &lt;Valid Key Value&gt;: Encrypts the input file using the -key 128-bit encryption key.</p> |

| Option           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-advanced</b> | <p>Generates Advanced SPI Flash Hex file.</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LFE3-17EA-XXFN484 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-if</b> &lt;Data File Path&gt;: Indicates the input data file full path and file name. If the file path includes spaces, enclose the path in quotes.</p> <p><b>-format</b> &lt;intel   motorola   xtek &gt;: Specifies the output format as Intel, Motorola, or Tektronix Extended Hex. The default format is Intel Hex (optional).</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.mcs, *.exo, or *.xtek extension, depending on the format selected.</p> <p><b>-flashsize</b>: Specifies size in Mb. Possible PROM sizes are 512 (512Kb), 1, 2, 4, 8, 16, 32, 64, 128, 256, and 513 (512Mb). Default: 1.</p> <p><b>-mirror</b>: Flips each byte. Default: bytes are not flipped (optional).</p> <p><b>-header</b>: Retains the input file header in the output file. Default: Replaces header with all ones (0xFF) (optional).</p> <p><b>-preamble</b>: Replaces the header Preamble of the bitstream with 0xFFs (for Fail Safe Upgrade feature) (optional).</p> <p><b>-userdata</b> &lt;1   2   3   4   5   6   7   8   9   10   11   12   13   14   15   16&gt; Number of data files.</p> <p><b>-userdata</b>: Flips each byte of the user data files. Default: bytes are not flipped (optional).</p> <p><b>-userfile</b> "&lt;Data File Path&gt;" Indicates the input user data file path and file name. Must be specified for each user data file (<b>-userdata</b>).</p> <p><b>-address</b> &lt;hex address value&gt;: SPI flash address location for the user data file. Must be specified for each user data file (<b>-userdata</b>).</p> <p><b>-optimize</b>: Uses the files size of the input files to determine SPI flash sector addresses for each input file. Use this option to minimize wasted memory space. The default is to use worst case file size for the target device, which is an uncompressed file with all EBR and PCS, depending on the family. Using the worst case will ensure that all files will always be located at the same address even if any of the files/designs are updated at a later date.</p> <p><b>-ice</b>: iCE40 warm boot cold boot.</p> <p><b>-warm</b> &lt;1   2   3   4&gt;: Optional. Default is cold boot. The <b>-warm</b> selects warm boot. The number selects the first boot configuration file.</p> <p><b>-patterns</b> &lt;2,3,4&gt;: Specifies the number of iCE40 configuration files.</p> <p><b>-bootfile</b> "&lt;Data File Path&gt;": Indicates the input configuration file path and name. Must be specified for each configuration file (<b>-patterns</b>).</p> <p><b>-address</b> &lt;hex address value&gt;: SPI flash address location for the configuration file. Must be specified for each configuration file (<b>-patterns</b>).</p> <p><b>&lt;-fast   -dualio   -quad 1&gt;</b>: With the -fast option, the FPGA will issue the Fast Read command (0x0B) to the SPI Flash. The -dualio option must be used if a Dual I/O SPI Flash is used. The -quad option must be used if a Quad I/O SPI Flash is used. Only one of these options (-fast, -dualio, -quad 1) can be used. Without any of these options, the FPGA uses the Slow Read command (0x03). Valid for ECP5.</p> |

| Option                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-advanced (cont.)</b> | <p><b>-multi</b> &lt;1   2   3   4&gt; Optional. The -multi option selects Multiple Boot. The number selects the number of alternate files. Must be used in conjunction with Dual Boot, since dual boot is a subset of Multiple Boot feature. The Golden file must also be selected. The data file passed in using the -if option is considered the Primary file.</p> <p><b>-golden</b> "&lt;Data File Path&gt;" Indicates the Golden file path and file name.</p> <p><b>-altfile</b> "&lt;Data File Path&gt;" Indicates the alternate file path and name. Must specify the alternate file for each number following the -multi option.</p> <p><b>-address</b> &lt;hex address value&gt; SPI Flash address location for the alternate file. Must be specified for each alternate file (-altfile).</p> <p><b>-next</b> &lt;primary   alt1   alt2   alt3   alt4&gt; Indicates which will be the next pattern to boot from when the PROGRAMN pin is toggle, or the Refresh command is issued. Must be specified for each alternate file (-altfile).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>-merge</b>            | <p><b>-ifdev1</b> "&lt;Data File Path&gt;" Indicates the input dta file full path and file name for the first device in the chain. If the file path includes spaces.</p> <p><b>-ifdev2</b> "&lt;Data File Path&gt;" "Second device in the chain."</p> <p><b>-format</b> &lt;intel   motorola   xtek &gt;: Specifies the output format as Intel, Motorola, or Tektronix Extended Hex. The default format is Intel Hex (optional).</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.mcs, *.exo, or *.xtek extension, depending on the format selected.</p> <p><b>-mergeformat</b> &lt;intelligent   combine&gt; Intelligent merge will set the appropriate bits in the bitstream to support sysCONFIG Daily Chaining. Combine will merge the two files without changing any bits in the bitstreams.</p> <p><b>-freq</b>: Specifies the frequency of the master bitstream.</p> <p>Possible frequencies valid for LatticeEC/P, LatticeECP2/M, LatticeECP3, and LatticeXP/2 devices only are: 2.5, 4.3, 5.4, 6.9, 8.1, 9.2, 10, 13, 15, 20, 26, 30, 34, 41, 45, 51, 55, 60, and 130 MHz.</p> <p>Possible frequencies valid for MachXO2 and MachXO3L devices only are: 2.1, 2.5, 3.2, 4.3, 5.5, 7, 8.3, 9.2, 10, 13, 15, 20, 27, 30, 33, 38, 44, 53, 66, 89, and 133 MHz.</p> <p>Possible frequencies valid for ECP5 devices only are: 2.4, 3.2, 4.1, 4.8, 6.5, 8.2, 9.7, 12.9, 15.5, 16.3, 19.4, 20.7, 25.8, 31, 34.4, 38.8, 44.3, 51.7, 62, 77.5, 103.3, and 155 MHz.</p> <p><b>-scoutput</b> &lt;dout   qout&gt;: For LatticeSC/M devices, indicates if the output pin is Dout or Qout.</p> <p><b>-mirror</b>: Flips each byte. Default: bytes are not flipped (optional).</p> <p><b>-header</b>: Retains the input file header in the output file. Default: Replaces header with all ones (0xFF). Optional.</p> |

| Option          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-bsm</b>     | <p>Generates Application Specific BSDL file.</p> <p><b>-ifd</b> "&lt;Data File Path&gt;": Indicates the input data file full path and file name. If the file name includes spaces ...</p> <p><b>-ifb</b> "&lt;BSDL File Path&gt;": Indicates the input BSDL file full path and file name. If the file path includes spaces ...</p> <p><b>-dev</b> &lt;Device Name&gt;: Indicates the name of the device (optional). The device name must be the full device name with the performance grade replaced with two X's, and minus the industry rating or the code name.</p> <p>Example:</p> <p>LCMXO2-256ZE-XXMG64 (with performance grade replaced with two X's).</p> <p>The device name will default to the device name in the data file. If a device name cannot be found in the file, it will return an error unless the name has been given with the -dev option.</p> <p><b>-of</b> "&lt;Data File Path&gt;": Indicates the output file path. If the file path includes spaces, enclose the path in quotes (optional). Default uses the input file name with *.??? extension.</p> <p><b>-convertbidi</b>: Converts bidirectional I/Os to input or output only, based on the user's design. Default is to keep all bidirectional I/Os as bidirectional (optional).</p> |
| <b>-jed2hex</b> | Generates an ASCII Raw Hex file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>-jed2bin</b> | Generates a Binary Raw Hex file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

**Examples** The following are DDTCMD examples.

#### Tester Examples:

##### SVF - Single Device:

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -svfsingle -if
"C:/example/lfxp2_05ef256.jed" -dev LFXP2-5E -op "FLASH
Erase,Program,Verify" -of "C:/ example/
lfxp2_05ef256.svf"
```

##### SVF - JTAG Chain:

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -svfchain -if
"C:/example/demo.xcf" -of "C:/ example/demo.svf"
```

##### STAPL - Single Device:

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -stpsingle -if
"C:/example/ isppac_powr1220at8.jed" -dev ispPAC-
POWR1220AT8 -op "Erase,Program,Verify" -of "C:/ example/
isppac_powr1220at8.svf"
```

##### STAPL - JTAG Chain:

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -stpchain -if
"C:/example/demo.xcf" -of "C:/example/demo.svf"
```

**ATE - Generic Vector Format:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -ate -if " C:/example/demo.xcf " -type tst -of " C:/example/demo.tst"
```

**ATE - GenRad:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -ate -if " C:/example/demo.xcf " -type gr -of " C:/example/demo.gr"
```

**ATE - HP3070:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -ate -if " C:/example/demo.xcf " -type hp3070 -of " C:/example/demo.pcf"
```

**ATE - HP3065:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -ate -if " C:/example/demo.xcf " -type hp3065 -of " C:/example/demo.pcf"
```

**ATE - Teradyne 1800:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -ate -if " C:/example/demo.xcf " -type t1800 -of " C:/example/demo.asc"
```

**ATE - Teradyne L200/300:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -ate -if " C:/example/demo.xcf " -type t200 -of " C:/example/demo.asc"
```

**Embedded System Examples:****JTAG Full VME Embedded:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -fullvme -if "C:/example/demo.xcf" -of "C:/example/demo.vme"
```

**JTAG Slim VME Embedded:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -slimvme -if "C:/example/demo.xcf" -ofa "C:/example/demo_algo.vme" -ofd "C:/example/demo_data.vme"
```

**Slave SPI Embedded:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -sspi -if "C:/example/demo.xcf" -ofa "C:/example/demo_algo.sea" -ofd "C:/example/demo_data.sed"
```

**I2C Embedded:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -i2c -if "C:/example/demo.xcf" -ofa "C:/example/demo_algo.iew" -ofd "C:/example/demo_data.iew"
```

**sysCONFIG (CPU) Embedded - Binary:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -cpu -if "C:/example/demo.xcf" -type cpu -of "C:/example/demo_algo.cpu"
```

**sysCONFIG (CPU) Embedded - C-Code:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -cpu -if "C:/example/demo.xcf" -type c -of "C:/example/demo_algo.c"
```

**sysCONFIG (CPU) Embedded - Intel Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -cpu -if "C:/example/demo.xcf" -type hex -of "C:/example/demo_algo.hex"
```

**sysCONFIG (CPU) Embedded - Text (Debug Only):**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -cpu -if "C:/example/demo.xcf" -type txt -of "C:/example/demo_algo.txt"
```

**External Memory Examples:****Hex Conversion - Intel Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -int -dev LFE2-6E -if "C:/example/lfec2_06ef256.bit" -of "C:/example/lfec2_06ef256.mcs"
```

**Hex Conversion - Motorola Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -mot -dev LFE2-6E -if "C:/example/lfec2_06ef256.bit" -of "C:/example/lfec2_06ef256.exo"
```

**Hex Conversion - Extended Tektronix Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -xtek -dev LFE2-6E -if "C:/example/lfec2_06ef256.bit" -of "C:/example/lfec2_06ef256.xtek"
```

**Dual Boot - Intel Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -boot -dev LFE3-95E -golden "C:/example/lfec3_095_golden.bit" -primary "C:/example/lfec3_095.bit" -format int -flashsize 64 -of "C:/example/lfec3_095_dual_boot.mcs"
```

**Dual Boot - Motorola Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -boot -dev LFE3-95E -golden "C:/example/lfec3_095_golden.bit" -primary "C:/example/lfec3_095.bit" -format mot -flashsize 64 -of "C:/example/lfec3_095_dual_boot.exo"
```

**Dual Boot - Extended Tektronix Hex:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -boot -dev LFE3-95E -golden "C:/example/lfec3_095_golden.bit" -primary "C:/example/lfec3_095.bit" -format xtek -flashsize 64 -of "C:/example/lfec3_095_dual_boot.xtek"
```

**File Conversion Examples:****Bitstream - Binary Bitstream:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -bit -dev LFXP2-5E -if "C:/example/lfxp2_05ef256.jed" -of "C:/example/lfxp2_05ef256.bit"
```

**Bitstream - ASCII Bitstream:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd" -oft -rbt -dev LFE2-6E -if "C:/example/lfec2_06ef256.bit" -of "C:/example/lfec2_06ef256.rbt"
```

**JEDEC - Hex and JEDEC - Binary:**

```
"C:/lsc/radiant/3.5/bin/nt/ddtcmd -oft <jed2hex|jed2bin> [-dev <Device Name>] -if "<Data File Path>" [-of "<Data File Path>"]
```



## Return Codes

| Code | Definition                       |
|------|----------------------------------|
| 0    | CMD_SUCCESS                      |
| -1   | ERROR_LOG_FILE                   |
| -2   | OUT_MEMORY                       |
| -3   | CANNOT_WRITE_DIRECTORY           |
| -4   | ERROR_CONFIGURATION_SETUP        |
| -5   | DEVICE_NAME_NOT_FOUND            |
| -6   | FILE_NOT_FOUND                   |
| -7   | FILE_NOT_VALID                   |
| -8   | UNKNOWN_OPERATION                |
| -9   | TOO_MANY_CHIPS                   |
| -10  | FILE_NOT_JEDEC                   |
| -11  | ERROR_OUTPUT_FILE                |
| -12  | OPERATION_NOT_SUPPORT            |
| -13  | FILE_NAME_ERROR                  |
| -14  | FILE_READ_ERROR                  |
| -15  | ERROR_BUILD_SVP_FILE             |
| -16  | ERROR_BUILD_BJD_FILE             |
| -17  | ERROR_BUILD_SVF_FILE             |
| -18  | CANNOT_WRITE_LOG_FILE            |
| -19  | MISSING_START_FILE               |
| -20  | UNKNOWN_DEVICE                   |
| -21  | ERROR_BUILD_BIT_FILE             |
| -22  | MULTIPLE_DEVICES_FOUND           |
| -23  | DEVICE_NOT_MATCH_FILE            |
| -24  | ERROR_COMMAND_LINE_SYNTAX        |
| -25  | ERROR_BUILD_ISC_FILE             |
| -26  | ERROR_BUILD_SPLIT_BITSTREAM_FILE |
| -27  | ERROR_BUILD_MERGE_BITSTREAM_FILE |
| -28  | ERROR_INPUT_FILE                 |
| -29  | ERROR_BUILD_BITSTREAM_FILE       |
| -30  | ERROR_BUILD_JED_FILE             |

| Code | Definition            |
|------|-----------------------|
| -31  | ERROR_BUILD_PROM_FILE |
| -32  | DEVICE_NOT_SUPPORTED  |

### See Also

- ▶ [Command Line Data Flow](#)
- ▶ [Command Line Program Overview](#)

## Running SSPI from the Command Line

You can run `sspi_cmd` to execute SSPI commands for Nexus and Avant devices from the command line. This tool interacts with the configuration engine via SPI protocol, ideal for testing when the SPI host is unavailable, offering enhanced flexibility and automation.

Subjects included in this topic:

- ▶ [sspi\\_cmd Features](#)
- ▶ [Usage](#)
- ▶ [sspi\\_cmd Options](#)
- ▶ [Example Command Outputs](#)

### sspi\_cmd Features

- ▶ **Detection of Programming Cables** – Lists all detected programming cables connected to the machine.
- ▶ **TCK Frequency Adjustment** – Allows you to change the TCK frequency.
- ▶ **Target Cable Specification** – Enables you to specify the target cable for running SSPI commands.
- ▶ **Command Input** – Accepts SSPI commands as input.
- ▶ **Hex String Data Input** – Takes hex string data as input.
- ▶ **Output Definition** – Defines the expected number of bytes for the output.
- ▶ **Data Output Capture** – Prints the captured data output.
- ▶ **Bit File Configuration** – Supports SSPI configuration using bit files.

### Usage

`sspi_cmd` is a standalone executable and can be found in:

```
<installer_path>\programmer\radiant\version_number\bin\<platform>\sspi_cm  
d
```

## sspi\_cmd Options

The following are sspi\_cmd options.

| Option    | Description                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-h</b> | <b>--help</b> : Print this help message and exit<br><b>--listcables</b> : Lists all detected programming cables<br><b>--list-supported-devices</b> : Lists all supported devices                                                                                                                                                                                                                                                  |
| <b>-n</b> | <b>--cable INT [0]</b> : Programming cable index                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>-t</b> | <b>--tck_delay INT [0]</b> : TCK delay value<br><b>--device TEXT</b> : Device name                                                                                                                                                                                                                                                                                                                                                |
| <b>-x</b> | <b>--command TEXT</b> : SSPI command in hex<br><b>--opcode TEXT</b> : Opcode in hex<br><b>--data TEXT</b> : Input data in hex<br><b>--bytes-out INT</b> : Expected number of output bytes<br><b>--nCS_control TEXT:{normal,hold}</b> :<br>nCS control mode (normal/hold)<br>Control nCS behaviour:<br>'normal' - Assert before command, deassert after command (default)<br>'hold' - Assert before command and hold after command |
| <b>-p</b> | <b>--program</b> : Program bitstream mode<br><b>--file TEXT</b> : Path to bit file                                                                                                                                                                                                                                                                                                                                                |
| <b>-v</b> | <b>--verbose BOOLEAN</b> : Enables Verbose Message Print<br><b>--print-examples</b> : Prints usage examples<br><b>--version</b> : Print tool version                                                                                                                                                                                                                                                                              |

## Example Command Outputs

### ► Lists all detected programming cables

```
sspi_cmd --listcables
```

### ► List all supported devices along with their JTAG ID

```
sspi_cmd --list-supported-devices
```

### ► Specify cable index using --cable, use --listcables to know the indexes

```
sspi_cmd --cable 0 --device LFMX05-25 --command 0xE0 --
bytes-out 4
```

### ► Send an SSPI command in hex –

```
sspi_cmd --device LFMX05-25 --command 0xE0 --bytes-out 4 //
[ Default cable index 0]
sspi_cmd --cable 1 --device LFMX05-25 --command 0xE0 --
bytes-out 4
```

### ► Specify input data for the SSPI command

```
sspi_cmd --cable 0 --device LFMX05-25 --command 0xB4 --data
0x12345678
```

► **Specify opcode along with input data for the SSPI command**

```
sspi_cmd --cable 0 --device LFMX05-25 --command 0xB4 --
opcode 0x00000000 --data 0x12345678
```

► **Program Bitstream file**

```
sspi_cmd --device LFMX05-25 --program --file "c:/my_design/
cram.bit"
```

► **Use --verbose to print detailed mode**

```
sspi_cmd --device LFMX05-25 --command 0xE0 --bytes-out 4 --
verbose 1
```

► **Use '--nCS\_control hold' to assert chip select before command and do not de-assert after command**

```
sspi_cmd --nCS_control hold --device LFMX05-25 --command
0xE0 --bytes-out 4
```

### TCK\_DELAY Details

This option allows you to slow down the TCK clock. It is the same as the **TCK Divider** setting in Programmer. Clock slow down is done by extending the low period of the clock. Valid values for TCK\_DELAY are between 0 to 30.

Refer to the following tables for specific frequency settings for USB-2B (2232H FTDI USB host chip), USB-2B (2232D FTDI USB host chip), and USB-2A cables.

**Table 16: USB-2B (2232H FTDI USB host chip)**

| Divider | Clock Frequency <sup>1</sup> | Divider | Clock Frequency <sup>1</sup> |
|---------|------------------------------|---------|------------------------------|
| 0       | 30 MHz                       | 5       | 5 MHz                        |
| 1       | 15 MHz (Default)             | 6       | 4.2 MHz                      |
| 2       | 10 MHz                       | 7       | 3.7 MHz                      |
| 3       | 7.5 MHz                      | 8       | 3.1 MHz                      |
| 4       | 6 MHz                        | 9       | 3 MHz                        |
|         |                              | 10      | 2.7 MHz                      |

1. Calculation formula for USB-2B (2232H FTDI USB host chip):

$$\text{Frequency} = 60 \text{ MHz} / (1 + \text{ClockDivider}) * 2$$

**Table 17: USB-2B (2232D FTDI USB host chip)**

| Divider | Clock Frequency <sup>2</sup> | Divider | Clock Frequency <sup>2</sup> |
|---------|------------------------------|---------|------------------------------|
| 0       | 6 MHz                        | 5       | 1 MHz                        |
| 1       | 3 MHz (default)              | 6       | 0.8 MHz                      |
| 2       | 2 MHz                        | 7       | 0.7 MHz                      |
| 3       | 1.5 MHz                      | 8       | 0.65 MHz                     |
| 4       | 1.2 MHz                      | 9       | 0.6 MHz                      |
|         |                              | 10      | 0.5 MHz                      |

2. Calculation formula for USB-2B (2232D FTDI USB host chip):

$$\text{Frequency} = 12 \text{ MHz} / (1 + \text{ClockDivider}) * 2$$

**Table 18: USB-2A**

| Divider | Low Pulse Width delay <sup>3</sup> | Divider | Low Pulse Width delay <sup>3</sup> |
|---------|------------------------------------|---------|------------------------------------|
| 0       | NA                                 | 5       | 5x                                 |
| 1       | 1x                                 | 6       | 6x                                 |
| 2       | 2x                                 | 7       | 7x                                 |
| 3       | 3x                                 | 8       | 8x                                 |
| 4       | 4x                                 | 9       | 9x                                 |
|         |                                    | 10      | 10x                                |

3. The USB-2A frequency is fixed at 1.5 MHz, and the Parallel Port frequency is fixed at 500 kHz.

## Running Various Utilities from the Command Line

The command line utilities described in this section are not commonly used by command line users, but you often see them in the auto-make log when you run design processes in the Radiant software environment. Click the links below for details.

- ▶ [Synpwrap](#)
- ▶ [IP Generation](#)

- ▶ [IP Packager](#)
- ▶ [ECO Editor](#)
- ▶ [Standalone Timing Analyzer](#)

### Note

For information on commonly-used FPGA command line tools, see [Command Line Basics](#).

## Synpwrap

The **synpwrap** command line utility (wrapper) is used to manage Synplicity Synplify and Synplify Pro synthesis programs from the Radiant software environment processes: **Synplify Synthesize Verilog File** or **Synplify Synthesize VHDL File**.

The **synpwrap** utility can also be run from the command line to support a batch interface. For details on Synplify see the Radiant Software Help. The **synpwrap** program drives **synplify\_pro** programs with a Tcl script file containing the synthesis options and file list.

### Note

This section supersedes the “Process Optimization and Automation” section of the *Synplicity Synplify and Synplify Pro for Lattice User Guide*.

This section illustrates the use of the **synpwrap** program to run Synplify Pro for Lattice synthesis scripts from the command line. For more information on synthesis automation of Synplify Pro, see the “User Batch Mode” section of the *Synplicity Synplify and Synplify Pro for Lattice User Guide*.

If you use Synplify Pro, the Lattice OEM license requires that the command line executables **synplify\_pro** be run by the Lattice “wrapper” program, **synpwrap**.

### Command Line Syntax

```
synpwrap [-nolog] [-int <command_file>] [-gui] [-int <prj_file>] -prj
<project_file> [-notoem] [-notpro] [-options <arguments>]
```

**Table 19: SYNPPWRAP Command Line Options**

| Option                      | Description                                                                                                                                  |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-options</b> <arguments> | Passes all arguments to Synplify/Synplify Pro. Ignores all other options except -notOEM and -notPro. It must be at the end of other options. |
| <b>-gui</b>                 | Invokes the Synplify GUI instead of batch running.                                                                                           |

**Table 19: SYNPPWRAP Command Line Options**

| Option                           | Description                                                                                                 |
|----------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>-notOEM</b>                   | Does not use the Lattice OEM version of Synplify/Synplify Pro.                                              |
| <b>-notPro</b>                   | Does not use Synplify Pro. It will automatically use Synplify if SynplifyPro does not exist.                |
| <b>-int &lt;prj_file&gt;</b>     | Same as the -gui and -prj <file> options. Invokes Synplify GUI with project per command file.               |
| <b>-nolog</b>                    | Does not print out the log file after the process is finished if there is no error (batch mode only).       |
| <b>-prj &lt;project_file&gt;</b> | Uses Synplify .prj file instead of the command file (recommended).                                          |
| <b>-fg</b>                       | Forces to run in foreground mode, and waits for Synplify to quit. Only available with the -options command. |
| <b>-h -help</b>                  | Prints this usage. Same as running the process without any arguments.                                       |

### Example

Below shows a synpwrap command line example.

```
synpwrap -gui -prj C:/lsc/radiant/2023.2/sample/sample.prj
```

### See Also

- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

## IP Generation

The IP generation command allows you to generate or regenerate any IP in the design.

To see all argument/syntax for the “ipgen” command and their description, use the **--help/-h** syntax in the TCL console.

### Command Line Syntax

```
ipgen.EXE [-h] [-o OUTPUT_DIR] [-proj_dir PROJ_DIR] [-ip  
IP_MODULE_DIR] [-cfg IP_CONFIG_FILE] [-skip_uniquify  
SKIP_UNIQUIFY_HDL] [-cfg_value IP_CONFIG_VALUE] [-name  
IP_INSTANCE_NAME] [-platform IPGEN_PLATFORM] [-vlnv IPGEN_VLNV]
```

**[`-rtl_library_path` RTL\_LIBRARY\_PATH] [`-a` ARCHITECTURE] [`-p` DEVICE]  
 [`-t` PACKAGE] [`-sp` PERFORMANCE] [`-f` FAMILY] [`-op` OPERATION]**

**Table 20: IP Generation Command Line Options**

| Option                                                          | Description                                                                                                  |
|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| <code>-h, --help</code>                                         | Shows this help message.                                                                                     |
| <code>-o OUTPUT_DIR</code>                                      | Location where the IP instance package will be generated. Default is the current directory.                  |
| <code>-proj_dir PROJ_DIR</code>                                 | Location of the Radiant project, which owns generated IP instance package. Default is the current directory. |
| <code>-ip IP_MODULE_DIR</code>                                  | Location of the IP module package.                                                                           |
| <code>-cfg IP_CONFIG_FILE</code>                                | Location of the IP configuration file.                                                                       |
| <code>-skip_uniquify</code><br><code>SKIP_UNIQUIFY_HDL</code>   | Controls whether uniquified HDL files are True or False.                                                     |
| <code>-cfg_value</code><br><code>IP_CONFIG_VALUE</code>         | IP configuration value: 'id:value; id1:value1'                                                               |
| <code>-name</code><br><code>IP_INSTANCE_NAME</code>             | Name of the IP instance package.                                                                             |
| <code>-platform</code><br><code>IPGEN_PLATFORM</code>           | Name of ipgen's runtime environment: Radiant or Propel. The default is Radiant.                              |
| <code>-vlnv IPGEN_VLNV</code>                                   | Location of the IP configuration file by vendor library name and version.                                    |
| <code>-rtl_library_path</code><br><code>RTL_LIBRARY_PATH</code> | The RTL library path for IP.                                                                                 |
| <code>-a ARCHITECTURE</code>                                    | Target architecture name.                                                                                    |
| <code>-p DEVICE</code>                                          | Target device name.                                                                                          |
| <code>-t PACKAGE</code>                                         | Target package name.                                                                                         |
| <code>-sp PERFORMANCE</code>                                    | Target performance name.                                                                                     |
| <code>-f FAMILY</code>                                          | Target family name.                                                                                          |
| <code>-op OPERATION</code>                                      | Specify the device operation.                                                                                |

#### Hard IP (Module/IP on Local) ID and Value for `-cfg_value`:

The options for IP configuration using the `-cfg_value <ID:value>` syntax can be found in the metadata.xml file located at:

```
<radiant_install_path>\ip\<IP_name>\metadata.xml.
```



Oscillator IP location of Nexus devices:  
Linux: /home/lsc/radiant/2024.1/ip/lifcl/osc/metadata.xml  
Windows: C:/lsc/radiant/2024.1/ip/lifcl/osc/metadata.xml

Diagram my\_osc

Configure my\_osc

| Property                | Value    |
|-------------------------|----------|
| HFCLK Enable            | ENABLED  |
| HFCLK Frequency (MHz)   | 225.0    |
| LFCLK Enable            | ENABLED  |
| LFCLK Frequency (MHz)   | 10       |
| SEDCCLK Enable          | DISABLED |
| SEDCCLK Divider         | 1        |
| SEDCCLK Frequency (MHz) | 225.0    |
| CFGMMCLK Enable         | DISABLED |

```

<?xml version="1.0"?>
<ip:ip version="1.0">
  <ip:general>
    <ip:vendor>latticesemi.com</ip:vendor>
    <ip:library>modules/ip</ip:library>
    <ip:ipname>osc</ip:ipname>
    <ip:display_name>osc</ip:display_name>
    <ip:version>1.0</ip:version>
    <ip:category>devicecore/modules</ip:category>
    <ip:pin>radiant_version</ip:pin>
    <ip:pin_esl_version>2022.1</ip:pin_esl_version>
    <ip:supported_products>
      <ip:supported_family name="10K10"></ip:supported_family>
      <ip:supported_family name="10K10"></ip:supported_family>
      <ip:supported_family name="10K10"></ip:supported_family>
      <ip:supported_family name="10K10"></ip:supported_family>
      <ip:supported_family name="10K10"></ip:supported_family>
      <ip:supported_family name="10K10"></ip:supported_family>
    </ip:supported_products>
    <ip:supported_platforms>
      <ip:supported_platform name="es1"></ip:supported_platform>
      <ip:supported_platform name="radiant"></ip:supported_platform>
    </ip:supported_platforms>
  </ip:general>
  <ip:settings>
    <ip:setting id="HFCLK_EN">
      <ip:general>
        <ip:type>boolean</ip:type>
        <ip:enum_mod>
          <ip:value_type>string</ip:value_type>
          <ip:title>HFCLK Enable</ip:title>
          <ip:options>
            <ip:option value="ENABLED"/>
            <ip:option value="DISABLED"/>
          </ip:options>
          <ip:default>ENABLED</ip:default>
        </ip:general>
        <ip:desc>HFCLK clock enable</ip:desc>
      </ip:general>
    </ip:setting>
    <ip:setting id="HFCLK_DIV_DIV">
      <ip:general>
        <ip:type>integer</ip:type>
        <ip:enum_mod>
          <ip:value_type>integer</ip:value_type>
          <ip:title>HFCLK Divider</ip:title>
          <ip:value_expr>
            <ip:expression>(4096-1)</ip:expression>
          </ip:value_expr>
          <ip:default>1</ip:default>
        </ip:general>
        <ip:desc>HFCLK clock divider</ip:desc>
      </ip:general>
    </ip:setting>
  </ip:settings>
</ip:ip>
  
```

ID: Value


### Soft IP (IP on Server) ID and Value for `-cfg_value`:

The options for IP configuration using the `-cfg_value <ID:value>` syntax can also be found in the metadata.xml file of each IP.

The only difference between Hard IPs and Soft IPs is the location from which Soft IPs are downloaded and installed.

To find the directory where Radiant installs all downloaded IPs:

1. Open Radiant software.
2. Click **Tools > Options**.
3. In the General section, click the **Directories** tab. You will be able to see the IP install path.

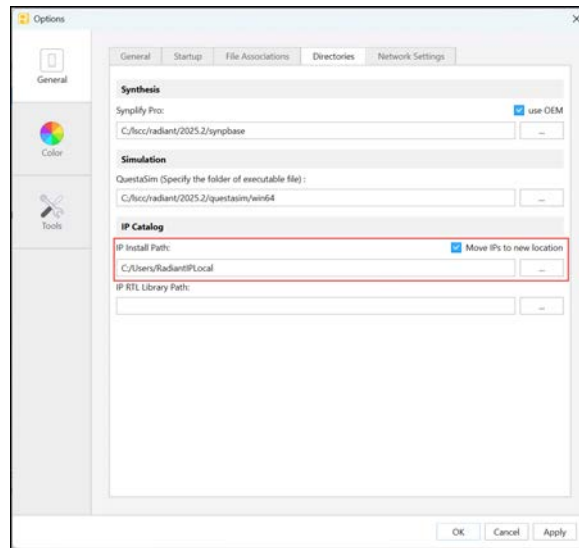

### Generating a New Hard IP

This section provides an example of how to create a new SDR (Hard IP) for the LFMXO5 device.

```
ipgen -o /home/centos/Temp_Proj/Radiant/SDR_IPgen/sdr_rx_new -ip /
home/centos/Iscc/radiant/2024.1/ip/lifcl/sdr -name sdr_rx_new -cfg "/
home/centos/Temp_Proj/Radiant/SDR_IPgen/sdr_rx/sdr_rx.cfg" -
cfg_value IO_TYPE:LVTTL33 -a LFMXO5 -p LFMXO5-100T -t BBG400 -sp
9_High-Performance_1.0V -op COM
```

- ▶ **-o** – Directory where IP files are generated.
- ▶ **-ip** – Points out where the IP package is. All foundation IP can be found inside the Radiant installation path: (<radiant install path>/Iscc/radiant/2024.1/ip/lifcl/sdr).
- ▶ **-name** – Name of your IP instance.
- ▶ **-cfg (optional)** – Contains all the parameter configuration of the IP. If you do not specify the cfg location, the IP configuration will be default.
- ▶ **-cfg\_value** – IP configuration value <ID:value>
- ▶ **-a** – Device Architecture
- ▶ **-p** – Device Name
- ▶ **-t** – Device Package
- ▶ **-sp** – Device Performance
- ▶ **-op** – Operating Condition (Automotive = AUTO, Commercial = COM, Industrial = IND)

### Generating a New Soft IP

This section shows an example of how to generate a new SPI Flash Controller IP (Soft IP) instance for the LIFCL device.

```
ipgen -o C:/Users/Desktop/Temp_Proj/Radiant/SPI_Flash_Controller/
SFC_IP -ip C:/lsc/radiant/IP/
latticesemi.com_ip_spi_flash_controller_1.5.0 -name SFC_v1 -cfg_value
PAGE_PROGRAM_SIZE:512 -a LIFCL -p LIFCL-40 -t QFN72 -sp 7_High-
Performance_1.0V -op COM
```


- ▶ **-o** – Directory where all your IP files are generated.
- ▶ **-ip** – Points out where the IP is downloaded and installed.
- ▶ **-name** – Name of your IP instance
- ▶ **-cfg\_value** – IP configuration value <ID:value>
- ▶ **-a** – Device Architecture
- ▶ **-p** – Device Name
- ▶ **-t** – Device Package
- ▶ **-sp** – Device Performance
- ▶ **-op** – Operating Condition (Automotive = AUTO, Commercial = COM, Industrial = IND)

### Regenerating an Existing IP

To update the configuration of an IP, use the **-cfg\_value** syntax. **-cfg\_value** is used to modify the existing options for specific IP setting ID.

### Example of how to change or update the IO\_TYPE setting for the SDR IP:

**Option 1:** Open the CFG file using a text editor and update the parameter value. Then, run the **ipgen** command to regenerate the IP. Ensure that the ipgen syntax correctly references the location of the existing IP.

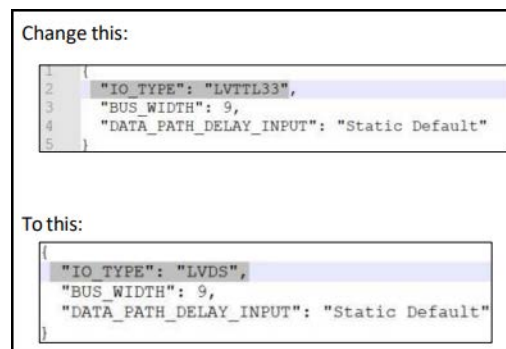

**Option 2:** Modify the value using the **cfg\_value** syntax.

```
ipgen -o /home/centos/Temp_Proj/Radiant/SDR_IPgen/sdr_rx_new -ip /
home/centos/lsc/radiant/2024.1/ip/lifcl/sdr -name sdr_rx_new -cfg "/
home/centos/Temp_Proj/Radiant/SDR_IPgen/sdr_rx/cfg" -
cfg_value IO_TYPE:LVDS -a LFMXO5 -p LFMXO5-100T -t BBG400 -sp
9_HighPerformance_1.0V -op COM
```

## Using the Radiant TCL Console to Run ipgen:

You can execute the **ipgen** command either through the TCL console within Radiant or by launching the stand-alone Radiant TCL console.

**On Windows:** Run `pnmainc.exe` inside `<radiant install path>/lsc/radiant/2024.1/bin/win64/`.

**On Linux:** Run the Radiant stand-alone TCL console in your terminal:  
`<radiant install path>/lsc/radiant/2024.1/bin/linux64/radiantc.`

```
centos@centos8 ~]$ /home/centos/lsc/radiant/2023.1/bin/linux64/radiantc
--- Lattice Radiant Software Version 2023.1.0-45.0
--- Copyright (C) 1992-2023 Lattice Semiconductor Corporation.
--- All Rights Reserved.
--- Lattice Radiant Software install path: /home/centos/lsc/radiant/2023.1
--- Start Time: Thu Dec 21 13:39:21 2023
$ ipgen -o /home/centos/test_ip_script -ip /home/centos/lsc/radiant/2023.1/ip/lifcl/sdr -name sdr_rx_new -a LFMX05 -p LFMX05-100T -t BBG400 -sp 9 High-Performance 1.0V
WARNING: missing driver HDL files.
writing /home/centos/test_ip_script/rtl/sdr_rx_new_bb.v
writing /home/centos/test_ip_script/sdr_rx_new_cfg
writing /home/centos/test_ip_script/misc/sdr_rx_new_tmpl.v
writing /home/centos/test_ip_script/rtl/sdr_rx_new_vhd
writing /home/centos/test_ip_script/constraints/sdr_rx_new_ldc
writing /home/centos/test_ip_script/testbench/dut_params.v
writing /home/centos/test_ip_script/testbench/dut_inst.v
writing /home/centos/test_ip_script/design.xml
writing /home/centos/test_ip_script/component.xml
writing /home/centos/test_ip_script/sdr_rx_new.ipx
$
```

Radiant stand-alone  
TCL console

Successful IP  
Generation

You can pass a script containing the IP generation command directly to the Radiant stand-alone TCL console without launching the console manually. See the example below.

Linux Example:

```
centos@centos8:~/test_ip_script
File Edit View Search Terminal Help
[centos@centos8 ~]$ /home/centos/lsc/radiant/2023.1/bin/linux64/radiantc script.tcl
[centos@centos8 ~]$ cat script.tcl
exec ipgen -o /home/centos/test_ip_script -ip /home/centos/lsc/radiant/2023.1/ip/lifcl/sdr -name sdr_rx_new -a LFMX05 -p LFMX05-100T -t BBG400 -sp 9 High-Performance 1.0V
[centos@centos8 ~]$ cd test_ip_script
[centos@centos8 test_ip_script]$ ls
component.xml  design.xml  rtl          sdr_rx_new.ipx
constraints    misc        sdr_rx_new.cfg  testbench
[centos@centos8 test_ip_script]$
```

Invoke Radiant TCL console  
and run the TCL script.

Content of the script.tcl. If you  
will use ipgen in a script, add  
the "exec" command.

Successful IP creation

If **ipgen** is used in a script, make sure to include the **exec** command before **ipgen**.

## Using CSH Linux Terminal to Invoke ipgen:

To run the **ipgen** command from a CSH terminal in Linux, you must first manually set up the required environment variables. Refer to the example below.

```

centos@centos8 ~
File Edit View Search Terminal Help
[centos@centos8 ~]$ csh
[centos@centos8 ~]$ setenv FOUNDRY /home/centos/lsc/radiant/2023.1/ispfpga
[centos@centos8 ~]$ setenv PATH /home/centos/lsc/radiant/2023.1/bin/lin64:$FOUNDRY/bin/lin64
[centos@centos8 ~]$ setenv LD_LIBRARY_PATH /home/centos/lsc/radiant/2023.1/bin/lin64:$FOUNDRY/bin/lin64:/home/centos/lsc/radiant/2023.1/bin/lin64/toolapps
[centos@centos8 ~]$ ipgen -h
usage: ipgen [-h] [-o OUTPUT_DIR] [-proj_dir PROJ_DIR] [-ip IP_MODULE_DIR]
             [-cfg IP_CONFIG_FILE] [-skip_uniquify SKIP_UNIQUIFY_HDL]
             [-cfg_value IP_CONFIG_VALUE] [-name IP_INSTANCE_NAME]
             [-platform IPGEN_PLATFORM] [-vlnv IPGEN_VLNV]
             [-rtl_library_path RTL_LIBRARY_PATH] [-a ARCHITECTURE]
             [-p DEVICE] [-t PACKAGE] [-sp PERFORMANCE] [-f FAMILY]

Lattice soft IP generation engine.

optional arguments:
  -h, --help            show this help message and exit
  -o OUTPUT_DIR          Location to generate IP instance package. (default is
                        current directory)
  -proj_dir PROJ_DIR     Location of Radiant Project, which owns generated IP
                        instance package. (default is current directory)
  -ip IP_MODULE_DIR      Location of IP module package
  -cfg IP_CONFIG_FILE    Location of IP configuration file

```

Set the FOUNDRY, PATH, and LD\_LIBRARY\_PATH

Check if "ipgen" is successfully recognized by invoking the help verbose

### Example of ipgen in CSH terminal:

```

centos@centos8 ~
File Edit View Search Terminal Help
[centos@centos8 ~]$ setenv FOUNDRY /home/centos/lsc/radiant/2023.1/ispfpga
[centos@centos8 ~]$ setenv PATH /home/centos/lsc/radiant/2023.1/bin/lin64:$FOUNDRY/bin/lin64
[centos@centos8 ~]$ setenv LD_LIBRARY_PATH /home/centos/lsc/radiant/2023.1/bin/lin64:$FOUNDRY/bin/lin64:/home/centos/lsc/radiant/2023.1/bin/lin64/toolapps
[centos@centos8 ~]$ ipgen -o /home/centos/test_ip_csh -ip /home/centos/lsc/radiant/2023.1/ip/lifcl/sdr -name sdr_rx_new -a LFMX05 -p LFMX05-100T -t BBG400 -sp 9_High-Performance 1.0V
WARNING: missing driver HDL files.
Writing /home/centos/test_ip_csh/rtl/sdr_rx_new.bb.v
Writing /home/centos/test_ip_csh/sdr_rx_new.cfg
Writing /home/centos/test_ip_csh/misc/sdr_rx_new.templ.v
Writing /home/centos/test_ip_csh/misc/sdr_rx_new.templ.vhd
Writing /home/centos/test_ip_csh/rtl/sdr_rx_new.v
Writing /home/centos/test_ip_csh/constraints/sdr_rx_new.ldc
Writing /home/centos/test_ip_csh/testbench/dut_params.v
Writing /home/centos/test_ip_csh/testbench/dut_inst.v
Writing /home/centos/test_ip_csh/design.xml
Writing /home/centos/test_ip_csh/component.xml
Writing /home/centos/test_ip_csh/sdr_rx_new.ipx
[centos@centos8 ~]$

```

Successful IP generation

### Using BASH Linux Terminal to Invoke ipgen:

To run the **ipgen** command in a bash terminal on Linux, you can set up the environment variables by executing the setup script provided by Radiant.

```

[centos@centos8 ~]$ bash
[centos@centos8 ~]$ export bindir=/home/centos/lsc/radiant/2023.1/bin/linux64
[centos@centos8 ~]$ source $bindir/radiant_env
[centos@centos8 ~]$ ipgen -h
usage: ipgen [-h] [-o OUTPUT_DIR] [-proj_dir PROJ_DIR] [-ip IP_MODULE_DIR]
             [-cfg IP_CONFIG_FILE] [-skip_uniquify SKIP_UNIQUIFY_HDL]
             [-cfg value IP_CONFIG_VALUE] [-name IP_INSTANCE_NAME]
             [-platform IPGEN_PLATFORM] [-vlnv IPGEN_VLNV]
             [-rtl_library_path RTL_LIBRARY_PATH] [-a ARCHITECTURE]
             [-p DEVICE] [-t PACKAGE] [-sp PERFORMANCE] [-f FAMILY]

Lattice soft IP generation engine.

Optional arguments:
-h, --help            show this help message and exit
-o OUTPUT_DIR         Location to generate IP instance package. (default is
                       current directory)
-proj_dir PROJ_DIR    Location of Radiant Project, which owns generated IP
                       instance package. (default is current directory)
-ip IP_MODULE_DIR      Location of IP module package
-cfg IP_CONFIG_FILE    Location of IP configuration file.
-skip_uniquify SKIP_UNIQUIFY_HDL Control whether uniquify hdl files: True/False.
-cfg value IP_CONFIG_VALUE

```

Set "bindir" variable to  
<radiant install path>/bin/linux64  
and invoke the radiant\_env script.

Check if "ipgen" is successfully  
recognized by invoking the help  
verbose.

### Example of ipgen in BASH terminal.

```

centos@centos8:~$ bash
[centos@centos8 ~]$ export bindir=/home/centos/lsc/radiant/2023.1/bin/linux64
[centos@centos8 ~]$ source $bindir/radiant_env
[centos@centos8 ~]$ ipgen -o /home/centos/test_ip -ip /home/centos/
radiant/2023.1/ip/lifecl/sdr -name sdr_rx_new -a LFMX05 -p LFMX05-100T -t BBG400 -s
9 High-Performance 1.0V
WARNING: missing driver HDL files.
Writing /home/centos/test_ip/bash/rtl/sdr_rx_new.bb.v
Writing /home/centos/test_ip/bash/sdr_rx_new.cfg
Writing /home/centos/test_ip/bash/misc/sdr_rx_new_tmpl.v
Writing /home/centos/test_ip/bash/misc/sdr_rx_new_tmpl.vhd
Writing /home/centos/test_ip/bash/rtl/sdr_rx_new.v
Writing /home/centos/test_ip/bash/constraints/sdr_rx_new.ldc
Writing /home/centos/test_ip/bash/testbench/dut_params.v
Writing /home/centos/test_ip/bash/testbench/dut_inst.v
Writing /home/centos/test_ip/bash/design.xml
Writing /home/centos/test_ip/bash/component.xml
Writing /home/centos/test_ip/bash/sdr_rx_new.ipx
[centos@centos8 ~]$

```

Successful IP generation

### See Also

- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

## IP Packager

The IP Packager (ippkg) tool can be run from the command line, allowing IP developers to select files from disks and pack them into one IPK file.

The following describes the process of IP Packager:

- ▶ IP author prepares metadata files, RTL files, HTML files, etc (all files of a Soft IP).
- ▶ IP Packager GUI provides UI for IP author to select files from the disk, and call IP Packaging engine to pack them into an IPK file.
- ▶ IP Packaging engine encrypts RTL files if IEEE P1735-2014 V1 pragmas are specified in RTL source

## Command Line Syntax

**ippkg [-h] (-metadata METADATA\_FILE | -metadata\_files METADATA\_LIST\_NAME) (-rtl RTL\_FILE | -rtl\_files RTL\_LIST\_NAME) [-ref\_rtl REF\_RTL\_FILE] [-encrypt FORCE\_ENCRYPT\_FILE | -encrypt\_files FORCE\_ENCRYPT\_LIST\_NAME] [-plugin PLUGIN\_FILE] [-ldc LDC\_FILE] [-fdc FDC\_FILE] [-testbench TESTBENCH\_FILE | -testbench\_files TESTBENCH\_LIST\_NAME] [-ref\_testbench REF\_TESTBENCH\_FILE] [-driver\_file DRIVER\_FILE | -driver\_files DRIVER\_LIST\_NAME] [-eval\_file EVAL\_FILE | -eval\_files EVAL\_LIST\_NAME] (-help\_file HELP\_FILE | -help\_files HELP\_LIST\_NAME) [-license\_file LICENSE\_FILE] [-o OUTPUT\_ZIP\_FILE] [-key\_file KEY\_FILE]**

**Table 21: IPPKG Command Line Options**

| Option                  | Description                                                                                                                           |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>-metadata</b>        | The file name will be fixed to 'metadata.xml'.                                                                                        |
| <b>-metadata_files</b>  | Location of the file which stores the metadata files. One line is a file path in specified file. Must have a file named metadata.xml. |
| <b>-rtl</b>             | Specify the IP RTL file.                                                                                                              |
| <b>-rtl_files</b>       | One line is a file path in specified file.                                                                                            |
| <b>-ref_rtl</b>         | Specify the reference IP RTL file.                                                                                                    |
| <b>-encrypt</b>         | Encrypt the whole RTL files.                                                                                                          |
| <b>-encrypt_files</b>   | One line is a file path in specified file.                                                                                            |
| <b>-plugin</b>          | The file name will be fixed to 'plugin.py'.                                                                                           |
| <b>-ldc</b>             | Specify the LDC file.                                                                                                                 |
| <b>-fdc</b>             | Specify the FDC file.                                                                                                                 |
| <b>-testbench</b>       | Specify the testbench file.                                                                                                           |
| <b>-testbench_files</b> | One line is a file path in specified file.                                                                                            |
| <b>-ref_testbench</b>   | Specify the reference testbench file.                                                                                                 |
| <b>-driver</b>          | Specify the driver file.                                                                                                              |
| <b>-driver_files</b>    | One line is a file path in specified file.                                                                                            |
| <b>-eval</b>            | Specify the IP evaluation file.                                                                                                       |
| <b>-eval_files</b>      | One line is a file path in specified file.                                                                                            |
| <b>-help_file</b>       | Specify the help file, must be <path>/introduction.html.                                                                              |
| <b>-help_files</b>      | One line is a file path in specified file.                                                                                            |
| <b>-license_file</b>    | Specify the license file.                                                                                                             |

**Table 21: IPPKG Command Line Options**

| Option           | Description                                    |
|------------------|------------------------------------------------|
| <b>-o</b>        | Specify the output zip file.                   |
| <b>-key_file</b> | Specify the key file to encrypt the RTL files. |

**Example**

The following is an ippkg command line example:

```
ippkg -metadata c:/test/test.xml -rtl_files c:/test/rtl_list -
help_file c:/test/introduction.html
```

**See Also**

- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

**ECO Editor**

The ECO Editor tool can be run from the command line.

ECO Editor is also able to dump the ECO Tcl commands which user performed in GUI view without saving any UDB file.

In the meanwhile, we will have one non-GUI ECO engine tool, which accepts the dumped Tcl script file with a UDB file and outputs a new UDB file.

User can set 'Place & Route design' milestone post-script by Tcl command `prj_set_postscript par <eco.tcl>`, then Radiant flow runs the ECO Tcl script automatically after running place & route.

You can bypass the ecoc engine by manually loading the UDB file using the `des_read_udb` command. This method is only supported in Tcl scripting mode.

**Command Line Syntax**

```
ecoc [-s <script_file>] [-o <output.udb>] <input.udb>]
```

This method is only supported in TCL scripting mode.

**Table 22: ECO Editor Command Line Options**

| Option                   | Description          |
|--------------------------|----------------------|
| <b>-s</b>                | ECO Tcl script file. |
| <b>-o</b>                | Output UDB file.     |
| <b>&lt;input.udb&gt;</b> | Input UDB file.      |

**Example**



The following is an ecoc command line example:

```
ecoc -s mem.tcl ebr_test_impl_1.ldb
```

#### See Also

- ▶ [Engineering Change Order Tcl Commands](#)
- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

## Standalone Timing Analyzer

The Standalone Timing Analyzer can be run from the command line.

#### Command Line Syntax

**tavmain** <ldb file name> [<pdic file name>]

#### Example

The following is a tavmain command line example:

```
tavmain design.ldb design.pdic
```

#### See Also

- ▶ [Command Line Program Overview](#)
- ▶ [Command Line Data Flow](#)

## Using Command Files

This section describes how to use command files.

#### Creating Command Files

The command file is an ASCII file containing command arguments, comments, and input/output file names. You can use any text editing tool to create or edit a command file, for example, **vi**, **emacs**, **Notepad**, or **Wordpad**.

Here are some guidelines when you should observe when creating command files:

- ▶ Arguments (executables and options) are separated by space and can be spread across one or more lines within the file.
- ▶ Place new lines or tabs anywhere white space would otherwise be allowed on the Linux or DOS command line.
- ▶ Place all arguments on the same line, or one argument per line, or any combination of the two.

- ▶ There is no line length limitation within the file.
- ▶ All carriage returns and other non-printable characters are treated as space and ignored.
- ▶ Comments should be preceded with a # (pound sign) and go to the end of the line.

### Command File Example

This is an example of a command file:

```
#command line options for par for design mine.ldb
-a -n 10
-w
-l 5
-s 2 #will save the two best results
/home/users/jimbo/b/designs/mine.ldb
#output design name
/home/users/jimbo/b/designs/output.dir
#use timing constraint file
/home/users/jimbo/b/designs/mine.prf
```

### Using the Command File

#### The -f Option

Use the **-f** option to execute a command file from any command line tool. The **-f** option allows you to specify the name of a command file that stores and then executes commonly used or extensive command arguments for a given FPGA command line executable tool. You can then execute these arguments at any time by entering the Linux or DOS command line followed by the name of the file containing the arguments. This can be useful if you frequently execute the same arguments each time you perform the command, or if the command line becomes too long. This is the recommended way to get around the DOS command line length limitation of 127 characters. (Equivalent to specifying a shell Options file.)

The **-f** indicates fast startup, which is performed by not reading or executing the commands in your `.cshrc` | `.kshrc` | `.shrc` (C-shell, Korn-shell, Bourne-shell) file. This file typically contains your path information, your environment variable settings, and your aliases. By default, the system executes the commands in this file every time you start a shell. The **-f** option overrides this process, discarding the 'set' variables and aliases you do not need, making the process much faster. In the event you do need a few of them, you can add them to the command file script itself.

### Command File Usage Examples

You can use the command file in two ways:

- ▶ To supply all of the command arguments as in this example:

```
par -f <command_file>
```

where:

<command\_file> is the name of the file containing the command line arguments.

- ▶ To insert certain command line arguments within the command line as in the following example:

```
par -i 33 -f placeoptions -s 4 -f routeoptions design_i.udb design_o.udb
```

where:

**placeoptions** is the name of a file containing placement command arguments.

**routeoptions** is the name of a file containing routing command arguments.

## Using Command Line Shell Scripts

This topic discusses the use of shell scripts to automate either parts of your design flow or entire design flows. It also provides some examples of what you can do with scripts. These scripts are Linux-based; however, it is also possible to create similar scripts called batch files for PC but syntax will vary in the DOS environment.

### Creating Shell Scripts

A Linux shell script is an ASCII file containing commands targeted to a particular shell that interprets and executes the commands in the file. For example, you could target Bourne Shell (**sh**), C-Shell (**csh**), or Korn Shell (**ksh**). These files also can contain comment lines that describe part of the script which then are ignored by the shell. You can use any text editing tool to create or edit a shell script, for example, **vi** or **emacs**.

Here are some guidelines when you should observe when creating shell scripts:

- ▶ It is recommended that all shell scripts with “#!” followed by the path and name of the target shell on the first line, for example, `#!/bin/ksh`. This indicates the shell to be used to interpret the script.
- ▶ It is recommended to specify a search path because oftentimes a script will fail to execute for users that have a different or incomplete search path. For example:  

```
PATH=/home/usr/lsmith:/usr/bin:/bin; export PATH
```
- ▶ Arguments (executables and options) are separated by space and can be spread across one or more lines within the file.
- ▶ Place new lines or tabs anywhere white space would otherwise be allowed on the Linux command line.
- ▶ Place all arguments on the same line, or one argument per line, or any combination of the two.
- ▶ There is no line length limitation within the file.

- ▶ All carriage returns and other non-printable characters are treated as space and ignored.
- ▶ Comments are preceded by a # (pound sign) and can start anywhere on a line and continue until the end of the line.
- ▶ It is recommended to add exit status to your script, but this is not required.

```
# Does global timing meet acceptable requirement range?
if [ $timing -lt 5 -o $timing -gt 10 ]; then
    echo 1>&2 Timing \"$timing\" out of range
    exit 127
fi
etc...
# Completed, Exit OK
exit 0
```

### Advantages of Using Shell Scripts

Using shell scripts can be advantageous in terms of saving time for tasks that are often used, in reducing memory usage, giving you more control over how the FPGA design flow is run, and in some cases, improving performance.

### Scripting with DOS

Scripts for the PC are referred to as batch files in the DOS environment and the common practice is to ascribe a .bat file extension to these files. Just like Linux shell scripts, batch files are interpreted as a sequence of commands and executed. The COMMAND.COM or CMD.EXE (depending on OS) program executes these commands on a PC. Batch file commands and operators vary from their Linux counterparts. So, if you wish to convert a shell script to a DOS batch file or vice-versa, we suggest you find a good general reference that shows command syntax equivalents of both operating systems.

### Examples

The following example shows running design “counter” on below device package

Architecture: iCE40UP

Device: iCE40UP3K

Package: UWG30

Performance: Worst Case

**Command 1: logic synthesis**

```
synthesis -f counter_impl1_lattice.synproj
           which the *.synproj contains
-a "iCE40UP"
-p iCE40UP3K
-t UWG30
-sp "Worst Case"
-optimization_goal Area
-bram_utilization 100
-ramstyle Auto
```

```

-romstyle auto
-dsp_utilization 100
-use_dsp 1
-use_carry_chain 1
-carry_chain_length 0
-force_gsr Auto
-resource_sharing 1
-propagate_constants 1
-remove_duplicate_regs 1
-mux_style Auto
-max_fanout 1000
-fsm_encoding_style Auto
-twr_paths 3
-fix_gated_clocks 1
-loop_limit 1950
-use_io_reg auto
-use_io_insertion 1
-resolve_mixed_drivers 0
-sdc "impl1.ldc"
-path "C:/lsc/radiant/1.0/ispfpga/ice40tp/data" "impl1"
-ver "C:/lsc/radiant/1.0/ip/pmi/pmi.v"
-ver "count_attr.v"
-path "."
-top count
-udb "counter_impl1.udb"
-output_hdl "counter_impl1.vm"

```

**Command 2: post synthesis process**

```

postsyn -a iCE40UP -p iCE40UP3K -t UWG30 -sp Worst Case -top -
ldc counter_impl1.ldc -keeprtl -w -o counter_impl1.udb
counter_impl1.vm

```

**Command 3: Mapper**

```

map "counter_impl1_syn.udb" "impl1.pdc" -o "counter_impl1.udb"

```

**Command 4: Placer and router**

```

par -f "counter_impl1.p2t" "counter_impl1_map.udb"
"counter_impl1.udb"

```

**Command 5: Timer**

```

timing -sethld -v 10 -u 10 -endpoints 10 -nperend 1 -html -rpt
"counter_impl1_twr.html" "counter_impl1.udb"

```

**Command 6: back annotation**

```

backanno "counter_impl1.udb" -n Verilog -o
"counter_impl1_vo.vo" -w -neg

```

**Command 7: bitstream generation**

```

bitgen -w "counter_impl1.udb" -f "counter_impl1.t2b"

```

## Tcl Command Reference Guide

The Radiant software supports Tcl (Tool Command Language) scripting and provides extended Radiant software Tcl commands that enable a batch capability for running tools in the Radiant software's graphical/console interface. The command set and the Tcl Console used to run it affords you the speed, flexibility and power to extend the range of useful tasks that the Radiant software tools are already designed to perform.

In addition to describing how to run the Radiant software's Tcl Console, this guide provides you with a reference for Tcl command line usage and syntax for all Radiant software point tools within the graphical user interface so that you can create command scripts, modify commands, or troubleshoot existing scripts.

### About the Radiant Software Tcl Scripting Environment

The Radiant software development software features a powerful script language system. The user interface incorporates a complete Tcl command interpreter. The command interpreter is enhanced further with additional Radiant software-specific support commands. The combination of fundamental Tcl along with the commands specialized for use with the Radiant software allow the entire Radiant software development environment to be manipulated.

Using the command line tools permits you to do the following:

- ▶ Develop a repeatable design environment and design flow that eliminates setup errors that are common in GUI design flows
- ▶ Create test and verification scripts that allow designs to be checked for correct implementation
- ▶ Run jobs on demand automatically without user interaction

The Radiant software command interpreter provides an environment for managing your designs that are more abstract and easier to work with than

using the core Radiant software engines. The Radiant software command interpreter does not prevent use of the underlying transformation tools. You can use either the Tcl commands described in this section or you can use the core engines described in the [Command Line Reference Guide](#).

Information about TCL features and flow are listed below:

- ▶ [Launching the Tcl Console](#)
- ▶ [Running Radiant Tcl](#)
  - ▶ [Log and Tcl Files](#)
  - ▶ [Lattice Implementation Directory](#)
  - ▶ [Attributes](#)
  - ▶ [Understanding Design Flows](#)
  - ▶ [Using Implementation Strategies and Options](#)
  - ▶ [Running Project Flow](#)
  - ▶ [Running Non-Project Flow](#)
  - ▶ [Switching From Project Flow to Non-Project Flow](#)
  - ▶ [Running Milestone Results in Non-Project Flow](#)
  - ▶ [Opening GUI in Non-Project Flow](#)
  - ▶ [Design Flow Examples](#)
- ▶ [Accessing Command Help and Command Options in the Tcl Console](#)
  - ▶ [Changes in the Interface](#)
- ▶ [Creating and Running Custom Tcl Scripts](#)
- ▶ [Running Tcl Scripts When Launching the Radiant Software](#)
- ▶ [Radiant Software Tool Tcl Command Syntax](#)
- ▶ [General Radiant Commands](#)
  - ▶ [Radiant Software Tcl Console Commands](#)
  - ▶ [System Tcl Commands](#)
  - ▶ [Device Tcl Commands](#)
  - ▶ [Message Control Tcl Commands](#)
- ▶ [Project Flow Commands](#)
  - ▶ [Radiant Software Project Tcl Commands](#)
- ▶ [Non-project Commands](#)
  - ▶ [Synthesis Tcl Command](#)
  - ▶ [Place & Route Tcl Commands](#)
  - ▶ [Physical Synthesis Tcl Commands](#)
- ▶ [Reveal Commands](#)
  - ▶ [Reveal Inserter Tcl Commands](#)
  - ▶ [Reveal Analyzer Tcl Commands](#)

- ▶ Power Calculator Tcl Commands
  - ▶ Power Calculator Tcl Commands
- ▶ Simulation Related Commands
  - ▶ Simulation Libraries Compilation Tcl Commands
- ▶ Timing and Physical Constraints Commands
  - ▶ Radiant Software Timing Constraints Tcl Commands
  - ▶ Radiant Software Physical Constraints Tcl Commands
- ▶ Radiantc TCL Commands
  - ▶ Bitstream Generation Tcl Commands
  - ▶ Design Tcl Commands
  - ▶ Device Tcl Commands
  - ▶ Technology Mapping Tcl Commands
  - ▶ Placement Tcl Commands
  - ▶ Routing Tcl Commands
  - ▶ Timing Analysis Tcl Commands
- ▶ Other Commands
  - ▶ Design Object Tcl Commands
  - ▶ Engineering Change Order Tcl Commands

### Additional References

If you are unfamiliar with the Tcl language you can get help by visiting the Tcl/tk web site at <https://www.tcl.tk>. If you already know how to use Tcl, see the Tcl Manual supplied with this software. For information on command line syntax for running core tools that appear as Radiant software processes, such as synthesis, map, par, backanno, and timing, see the [Command Line Reference Guide](#).



# Launching the Tcl Console

The Radiant software Tcl Console environment is made available for your use in multiple different ways. In order to take full advantage of the FPGA development process afforded by the Radiant software you must gain access to the Radiant Tcl Console user interface.

**On Windows** On Windows, you can interact with the Tcl Console by anyone of the following methods:

- ▶ To launch the Radiant software GUI from the Windows Start menu, choose **Start > Lattice Radiant Software (version\_number) > Radiant Software**.

After the Radiant software loads, you can click on the **Tcl Console** tab. With the **Tcl Console** tab active, you are able to start entering standard syntax TCL commands or the Radiant software-specific support commands.

- ▶ To launch the **Tcl Console** independently from the Radiant software GUI from the Windows Start menu choose **Start > Lattice Radiant Software (version\_number) > Tcl Console**.

A Windows command interpreter will be launched that automatically runs the **Tcl Console**.

- ▶ To run the interpreter from the command line, type the following:

```
c:/lsc/radiant/<version_number>/bin/nt64/radiantc
```

The Radiant **Tcl Console** is now available to run.

- ▶ To run the interpreter from a Windows PowerShell from the Windows Start menu choose **Start > Windows PowerShell > Windows PowerShell (x86)**.

A PowerShell interpreter window will open. At the command line prompt type the following:

```
c:/lsc/radiant/<version_number>/bin/nt64/radiantc
```

The Radiant **Tcl Console** is now available to run.

The Radiant **Tcl Console** also supports passing command line arguments to scripts, allowing you to execute a script with specific parameters directly from the command line. For example, you can run a script with arguments using the following command:

```
% radiantc commands.tcl arg_a arg_b arg_c
```

The Radiant **TCL Console** does not require any special argument handling inside the TCL file.

## Note

The arrangement and location of each of the programs in the Windows Start menu will differ depending on the version of Windows you are running.

---

**On Linux** On Linux operating systems, you can interact with the Tcl Console by one of the following methods:

- ▶ To launch the Radiant software GUI from the command line, type the following:

```
/usr/<user_name>/radiant/<version_number>/bin/lin64/radiant
```

The path provided assumes the default installation directory and that the Radiant software is installed. After the Radiant software loads you can click on the **Tcl Console** tab. With the **Tcl Console** tab active, you are able to start entering standard syntax Tcl commands or the Radiant software specific support commands.

- ▶ To launch the **Tcl Console** independently from the Radiant software GUI from the command line, type the following:

```
/usr/<user_name>/Radiant/<version_number>/bin/lin64/radiantc
```

The path provided assumes the default installation directory and that the Radiant software is installed, and that you have followed the Radiant software for Linux installation procedures. The Radiant **Tcl Console** is now ready to accept your input.

The advantage of running the **Tcl Console** from an independent command interpreter is the ability to directly pass the script you want to run to the Tcl interpreter. Another advantage is that you have full control over the Tk graphical environment, which allows you to create your own user interfaces.

## Running Radiant Tcl

This section describes the following features:

- ▶ How to run Radiant Tcl
- ▶ Using log/tcl files
- ▶ Accessing the Lattice run directory

Tcl supports the following command modes:

- ▶ **GUI Mode (radiant)** – you can use the **radiant** command to launch the GUI mode. Radiant's Tcl Console window is still accessible, however it currently only accepts project commands.
- ▶ **Pure interactive shell mode (radiantc)** – starts a pure interactive shell mode. If a tcl file is specified in the command line, the run is done in batch mode. Both project and non-project commands are supported by radiantc.
- ▶ **Interactive shell/GUI mode (radiantc -gui)** – starts as a shell mode. The **gui\_start** command can be used to launch GUI views. When GUI views are closed, it returns to shell mode.

## Log and Tcl Files

When using radiantc, the log message is automatically stored in the **radiantc.log.<pid>** file, and the tcl commands are kept in the **radiant.tcl.<pid>** file, where the <pid> is the process id for radiantc run. In the case the file “**radiantc.log.<pid>**” does exist, the file will be renamed to “**radiantc.log.<pid>.bak**”. We do the same check for “**radiant.tcl.<pid>**”

The log message from Radiant (GUI) run is still stored in the **automake.log** file as before.

With radiantc mode, you can do following:

- ▶ Use the **RAT\_LOG\_DIR** environment variable to specify the directory where you want to keep the log/tcl files.

If there is no environment variable, the log/tcl directory is set as *C:\Users\<User dir>\AppData\Roaming\LatticeSemi\DiamondNG\tcl* if you are using NT, and the current directory *.I* when using Linux.

- ▶ Specify the run name to be used as the prefix of log/tcl file names.

For example, if you run *radiantc -run mytest*, the log file will be named *mytest.log.<pid>* and the tcl file will be named *mytest.tcl.<pid>*.

## Valid Characters in File Name and Project Path

In file names and project paths, use only the valid characters below. Using unsupported characters result in errors.

- ▶ Alphabet (A - Z; a - z)
- ▶ Number (0 - 9)
- ▶ Underscore ( \_ )
- ▶ Minus ( - )
- ▶ Space ( )

---

### Notes:

1. Brackets [ ] in file names are acceptable in Windows but their use is not recommended.
  2. For Linux, using the following symbols in file names are acceptable but not recommended:
    - ▶ Vertical bar (|)
    - ▶ Backslash (\)
    - ▶ Greater than sign(>)
    - ▶ Question mark (?)
    - ▶ Less than sign (<)
    - ▶ Colon ( : )
    - ▶ Asterisk ( \* )
    - ▶ Quotation mark ( " )
- 

## Lattice Implementation Directory

In non-project flow, the lattice working directory **lattice\_workdir** keeps the intermediate files during the run. The directory is created under your implementation directory.

- ▶ Under *lattice\_workdir*, you can find map, plc, and rte subdirectories which keep the intermediate run results for technology map (map), placement (plc), and routing (rte).
- ▶ For example, if you want to find the placement log file *<file\_name>.par*, you can find it under the *plc* subdirectory.

## Attributes

In Radiant Tcl system, attributes are used for objects, such as system, design, or instance.

For example:

- ▶ *des\_set\_attribute* is used to set design attributes.
- ▶ *des\_list\_attribute* is used to list the current design attributes.

## Understanding Design Flows

Radiant Tcl supports both project and non-project flows.

**In project flow, you can do the following:**

- ▶ Create a new project or load a saved project from an existing project file.
- ▶ You can then add, delete, or list project files (i.e., RTL, constraint, and strategy setting files). During the whole project flow, you can save it into a project (.rdf) file any time.

**For non-project flow:**

- ▶ With two specific commands, Radiant Tcl may start a non-project flow from an existing project flow. The Radiant database (.udb) file can be read as input to begin the non-project flow, after which the design process can continue.

**There are four major differences between project and non-project flows:**

1. The project flow design is saved as disk files instead of being stored in memory. You can use different strategies to create different implementations for the same project. On the other hand, design in non-project flow is kept in memory and can be accessed or changed interactively using commands.

For example, you can use timing analysis commands to report timing results at different paths.

2. In project flow, you need to add project files. The time stamps of these files are checked for any new commands. If there are any changes in the project files, the flow will ask you to rerun the design at the right stages.

For example, if you change a post-synthesis constraint (.pdc) file, you need to rerun technology mapping. However, if you change any RTL files or the pre-synthesis constraint files, you need to rerun logic synthesis.

In non-project flow, the input file is a Radiant database (.udb) file, and the time stamp of such file is not checked during the design flow.

3. You cannot skip any design stage from the run commands in non-project flow.

For example, you need to run placement (plc\_run) before you run routing (rte\_run) in non-project flow. However, you can use one of the prj\_run

commands ([prj\\_run\\_bitstream](#), [prj\\_run\\_map](#), [prj\\_run\\_par](#), [prj\\_run\\_synthesis](#)) in project flow to run the design flow automatically from the current stage to the target stage.

4. Implementation strategies are used in project flow and implementation options in non-project flow.

Implementation strategy is a subset of implementation options.


## Using Implementation Strategies and Options

In Radiant, **strategies** are used to specify how to run specific tasks, such as logic synthesis, technology mapping, and placement and routing.


**To see the list of strategies in Radiant:**

- ▶ In the toolbar, click **Project > Active Strategy**.

The list of strategies appear.

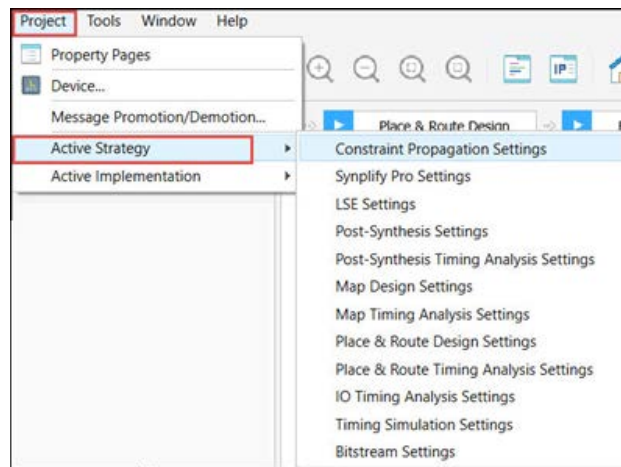

- ▶ For instance, if you click **Place & Route Design Settings** from the list, it redirects to the Place & Route Design section in the **Strategies** dialog box.

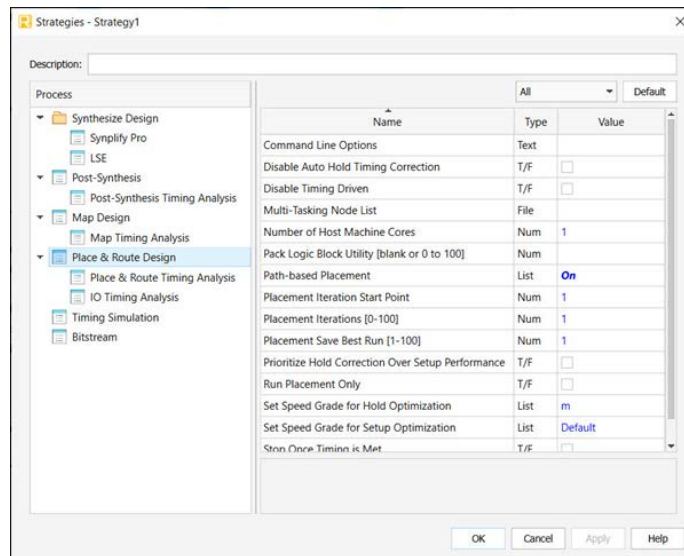

In TCL, **options** are used to specify how to run specific tasks.

- ▶ For example, you can use **par\_list\_option** after a design has been loaded to check the current placement and routing option setting, and use **par\_set\_option** to change them:

```
% par_list_option
PAR Options:
    command_line_options                :
    disable_auto_hold_timing_correction :
false
    disable_timing_driven                :
false
    multi_tasking_node_list               :
    number_of_host_machine_cores         : 1
    placement_iteration_start_point       : 1
    placement_iterations                  : 1
    placement_save_best_run               : 1
    prioritize_hold_correction_over_setup_performance :
false
    run_placement_only                   :
false
    set_speed_grade_for_hold_optimization : m
    set_speed_grade_for_setup_optimization :
default
    stop_once_timing_is_met              :
false
```



**Strategy and Option Guidelines:**

1. Both strategy and option are device-dependent. You can only change them after a device is selected.
2. You do not need to specify all options in the Radiant Strategy Settings. However, all strategies used in Radiant must be converted to options with the following rules:
  - ▶ If you are using options, change the space ( ) used in strategy to an underscore ( \_ ) to separate words.
  - ▶ In strategy, each word is capitalized. You need to change them to the lower case format if you are using options.
  - ▶ For example:
    - ▶ Strategy uses the following format: **Disable Auto Hold Timing Correction**
    - ▶ Option uses the following format: **disable\_auto\_hold\_timing\_correction**

## Running Project Flow

Running the project flow in Radiant Tcl is the same as the current process. You can use the Radiant software tools to add project files, run the design flow, and output specific timing reports at different design stages.

Most *prj\_<command\_name>* commands are designed for project flow run except **prj\_open\_milestone**. This command is used to switch from project flow to non-project flow.

### prj\_open\_milestone

Commands to open project milestone netlist files.

**Syntax**

```
prj_open_milestone -postsyn | -postmap | -postpar
```

**Arguments**

- ▶ **-postsyn**: Open post-syn logical netlist (optional).
- ▶ **-postmap**: Open post-map physical netlist (optional).
- ▶ **-postpar**: Open post-par physical netlist (optional). Option '-postsyn' '-postmap' and '-postpar' are mutually exclusive.

**Example**

```
prj_open_milestone -postsyn
prj_open_milestone -postmap
prj_open_milestone -postpar
```

**See Also**

- ▶ [“Running Project Flow” on page 1773](#)

## Running Non-Project Flow

You must load the design from a disk file in order to start a non-project flow. For instance, the following commands load a *mapped.ldb* file into memory, report the current design, and run placement.

```
des_read_ldb mydb_map.ldb
des_report
plc_run
```

## Switching From Project Flow to Non-Project Flow

In project flow, you can use **prj\_open\_milestone** to open the run result at a given design stage and switch to non-project flow.

For instance, you can see the **postsyn** run result after opening the *mydb\_syn.rdf* project by using the commands listed below.

The design is currently in memory, and you can report and save it as a Radiant database (.ldb) file.

```
prj_open mydb_syn.rdf
prj_open_milestone -postsyn
des_report
des_write_ldb -w mydb_syn.ldb
```

Using **syn\_run** instead of **prj\_run\_synthesis** for logic synthesis is another way to transition to a non-project flow from a project flow.

- ▶ When **syn\_run** is used, the tool will first execute logical synthesis using the designated vendor tool before loading the post-synthesis design into memory.
- ▶ After that, the flow switches to non-project flow, and you can use non-project commands to complete the rest of the design process.

```
prj_create -name mytest -dev "LIFCL-40-8BG400C" -performance
"8_High-Performance_1.0V" -impl impl_prj_flow -impl_dir
impl_prj_flow -synthesis synplify
prj_add_source ./source/001_register_simple.v
prj_add_source ./others/constraints.sdc
prj_add_source ./others/register_simple1.sty
syn_run
des_report
des_write_ldb -w mydb_syn.ldb
```

With one of the two methods described above, you can change from project flow to non-project flow. Once the design is in memory (i.e., in non-project flow mode), it is not advised to use project commands.

## Running Milestone Results in Non-Project Flow

In non-project flow, the current design is stored in memory, unlike in project flow which keeps previous designs at different milestones. To rerun a previous step due to constraint or option changes, you need to reload the previous milestone result and make a change, then rerun the command.

### Note

---

Milestone refers to processing tasks, which include synthesizing, mapping, placing, and routing a design.

---

To rerun *par\_run* with new *par* options, you need to do the following:

```
% par_run
% des_write_udb -w mydb_par.ldb
% des_reload_milestone -postmap <your_mapped_ldb>
% par_set_option (set your par run option)
% par_run
```

To add a new constraint as a post-synthesis constraint, reload the post-syn milestone as the constraints need to be processed through technology mapping.

```
% par_run
% des_write_udb -w mydb_par.ldb
% des_reload_milestone -postsyn <your_synthesized_ldb>
% ldc_set_location (set your constraint)
% map_run
% par_run
```

To modify timing constraints for logical synthesis, change your constraint file and restart the process from the beginning.

## Opening GUI in Non-Project Flow

In order to open Radiant GUI views in non-project flow, you must run **radiantc** with **-gui** option to enable the linking of the GUI libraries during the run. You can open a **post-par udb** and use **gui\_start** command to open GUI views.

```
>radiantc -gui
% des_read_udb <your_post_par.udb>
% gui_start
```

Certain GUI views require a post-synthesis netlist as the netlist view, which can be added by incrementally reloading the post-synthesis udb.

```
>radiantc -gui
% des_read_udb <your_post_par.udb>
% des_reload_milestone -inc -postsyn <your_synthesized_udb>
% gui_start
```

## Design Flow Examples

### 1. Running Pure-Project Flow

Tcl commands for pure-project run is shown in this use-case. To run a pure-project, add Register Transfer Level (RTL) files, constraint files then run the project using one of the `prj_run` commands ([prj\\_run\\_bitstream](#), [prj\\_run\\_map](#), [prj\\_run\\_par](#), [prj\\_run\\_synthesis](#)) and save the project files at different stages.

#### Note

Pure-project design flow is saved as disk file and not kept in memory. As a result, you cannot run any non-project commands in a project flow. For further information, refer to [Opening a Post-Synthesis Milestone](#).

Open your console and type the following commands to create, add, run and exit the program:

- ▶ To create a project, use `prj_create` command followed by choosing the right device and synthesis tool name:

```
prj_create -name mytest -dev "LIFCL-40-8BG400C" -
performance "8_High-Performance_1.0V" -impl impl_prj_flow
-impl_dir impl_prj_flow -synthesis synplify
```

- ▶ To add project files, use `prj_add_source` command followed by the path of the file you want to add:

```
prj_add_source ./source/001_register_simple.v
prj_add_source ./others/constraints.sdc
prj_add_source ./others/register_simple1.sty
```

- ▶ To save an updated project file, use `prj_save` command:

```
prj_save mydb_syn.rdf
prj_save new_test.rdf
```

```
prj_save mydb_map.rdf
prj_save mydb_par.rdf
```

- ▶ To run synthesis project files, use the [prj\\_run\\_synthesis](#) command.

```
prj_run_synthesis
```

- ▶ To end the program, quit the command to end the flow:

```
quit
```

## 2. Creating Project Files

This section illustrates how to create project files, add Register Transfer Level (RTL) file, and constraint files.

- ▶ To create a project, use `prj_create` command followed by choosing the right device and synthesis tool name:

```
prj_create -name mytest -dev "LIFCL-40-8BG400C" -
performance "8_High-Performance_1.0V" -impl impl_prj_flow
-impl_dir impl_prj_flow -synthesis synplify
```

- ▶ To add project files, use `prj_add_source` command followed by the file directory path you want to add:

```
prj_add_source ./source/001_register_simple.v
prj_add_source ./others/constraints.sdc
prj_add_source ./others/register_simple1.sty
```

- ▶ To switch from project flow to non-project flow, use the **syn\_run** command:

```
syn_run
```

Use **syn\_run** instead of **prj\_run\_synthesis** to change from project flow to non-project flow. After execution, the design is in memory and you can continue the rest of the flow with non-project commands.

### Note

It is not recommended to run the flow with any of the `prj_run` commands ([prj\\_run\\_synthesis](#), [prj\\_run\\_map](#), [prj\\_run\\_par](#), [prj\\_run\\_bitstream](#)) once switched to non-project flow.

- ▶ To run the design information, use `des_report` command:

```
des_report
```

- ▶ To run the map tool, use `map_run` command, followed by `des_write_ufdb -w` command to save the current design:

```
map_run
des_write_ufdb -w mydb_map.ufdb
```

- ▶ To run the placement tool and show the report placement information, use `plc_run` and `plc_report` commands followed by `des_write_udb -w` command to save the current design:

```
plc_run
plc_report
des_write_udb -w mydb_plc.udb
```

- ▶ To run the routing tool and show the routing result, use `rte_run` and `rte_report` commands followed by `des_write_udb -w` command to save the current design:

```
rte_run
rte_report
des_write_udb -w mydb_rte.udb
```

- ▶ To view the detailed report or summary timing, use the following command:

```
sta_report_timing -summary
```

- ▶ To generate bitsream file, use `bit_generate` command followed by `-w` command to force to overwrite the existing file:

```
bit_generate -w mydb_bit
```

- ▶ To end the program, quit the command to end the flow:

```
quit
```

### 3. Reading Post-Synthesis Design

This section shows you how to read in a design database and continue the design flow.

- ▶ To read the post-synthesis database, use `des_read_udb` command followed by the database file name. To view the report design information, use `des_report` command:

```
des_read_udb mydb_syn.udb
des_report
```

- ▶ To set design attributes, use `des_set_attribute` command followed by `-impl_dir` to implement name:

```
des_set_attribute -impl_dir impl_rdb_syn
```

- ▶ To run the map tool and to write the design as `.udb` file, use `map_run` command followed by `des_write_udb` and `overwrite` to save using `-w` command to completely run the design:

```
map_run
des_write_udb -w myrdbsyn_map.udb
```

- ▶ To run the placement tool and show the report placement information, use `plc_run` command and `plc_report` command followed by `des_write_udb -w` command to save the current design:

```
plc_run
plc_report
des_write_udb -w myrdbsyn_plc.ldb
```

- ▶ To run the routing tool and show the routing result, use `rte_run` and `rte_report` commands followed by `des_write_udb -w` command to save the current design:

```
rte_run
rte_report
des_write_udb -w myrdbsyn_rte.ldb
```

- ▶ To view the detailed report or summary timing, use `sta_report_timing -summary` command:

```
sta_report_timing -summary
```

- ▶ To generate bitstream file, use `bit_generate` command followed by `-w` command to force to overwrite the existing file:

```
bit_generate -w mydb_bit
```

- ▶ To end the program, quit the command to end the flow:

```
quit
```

#### 4. Reading the Post-Map UDB File

This section shows you how to read a post-map .ldb file and continue the design process.

- ▶ To read the post-map UDB file, use `des_read_udb` command followed by the database file name. In the next line, use `des_set_attribute` command followed by `-impl_dir` to define the directory where the project file is stored:

```
des_read_udb mydb_map.ldb
des_set_attribute -impl_dir impl_ldb_map
```

- ▶ To run the placement tool and show the report placement information, use `plc_run` and `plc_report` commands followed by `des_write_udb -w` command to save the current design:

```
plc_run
plc_report
des_write_udb -w myldbmap_plc.ldb
```

- ▶ To end the program, quit the command to end the flow:

```
quit
```

## 5. Reading and Routing the Post-Placement Design

This section describes the process of reading the post-placement database, routing, and saving the design.

- ▶ To read the post-synthesis database, use `des_read_udb` command followed by the database file name. Execute using `des_set_attribute` command followed by `-impl_dir` to define the directory where the project file is stored.

```
des_read_udb mydb_plc.ldb
des_set_attribute -impl_dir impl_rdb_plc
```

- ▶ To run the routing tool and show the routing result, use `rte_run` and `rte_report` commands followed by `des_write_udb -w` command to save the current design.

Use `sta_report_timing -summary` command to view the detailed report or timing summary and use `des_write_udb` command with `-w` command to overwrite or save the design.

```
rte_run
rte_report
sta_report_timing -summary
des_write_udb -w myrdbplc_rte.ldb
```

- ▶ To end the program, quit the command to end the flow.

```
quit
```

## 6. Opening a Post-Synthesis Milestone

This section shows how to open a post-synthesis milestone in a project, and load the run result in memory. When the design is in memory, you can continue to use non-project commands to continue the flow and access the design data.

- ▶ To open a project, use `prj_open` command followed by the file name.

```
prj_open mydb_syn.rdf
```

- ▶ To open a project milestone, use `prj_open_milestone` command followed by `-postsyn` to open the logical netlist.

```
prj_open_milestone -postsyn
```

- ▶ To run the map tool and write the design as a `.ldb` file, use `map_run` command followed by `des_write_udb` and save using `-w` command to run the design.

```
map_run
des_write_udb -w myprjsyn_map.ldb
```

- ▶ To end the program, quit the command to end the flow

```
quit
```



**See Also**

- ▶ [Launching the Tcl Console](#)
- ▶ [Running Radiant Tcl](#)
- ▶ [Accessing Command Help and Command Options in the Tcl Console](#)
- ▶ [Creating and Running Custom Tcl Scripts](#)
- ▶ [Running Tcl Scripts When Launching the Radiant Software](#)
- ▶ [Radiant Software Tool Tcl Command Syntax](#)
- ▶ [Tcl Manual](#)

## Accessing Command Help and Command Options in the Tcl Console

There are two ways to find all the Tcl command syntax help to generate all the tools in the Tcl console.

**To access command syntax help in the Tcl Console:**

1. In the prompt, type **help <tool\_\*keyword\*>** and press **Enter**:

```
% help {des_*instance*}
```

A list of valid command options appears in the Tcl Console.

2. In the Tcl Console, type the name of the command or function for more details on syntax and usage.

For example:

- ▶ `des_list_instance` is used to list design instances.
- ▶ `des_report_instance` is used to report instance information.

A list of valid arguments for that function appears.

```
% help des_report_instance
Usage information:
  Var/FlagName Type   Value Help
  -----
  (-help                gives this help)
  -file                 string ()   File name
  ?objects?             string ()   List instances.
```

**Note**

In interactive mode, you can use command **-help** to get the list of command information. However, most commands in the **-help** option are not true option, and the Tcl interpreter interprets command **-help** as a usage error, which prevents a script from finishing execution if it encounters this option. It is recommended to use **help {command}** as this works in both interactive and script settings.

## Changes in the Interface

The Radiant Tcl has the same Windows settings and appearance as the Radiant Tcl, with some GUI improvements.

- ▶ Running the **radiantc** replaces the standalone tools such as Map, PAR, and Bitgen for milestone runs for **Map Design, Place & Route**, and **Export Files** using specific Tcl files, which are stored in the implementation directory as `<prj>_<impl>_map/par/bit.tcl`.
- ▶ When you open the milestone run result, the **File > Open** menu displays the **Post-Synthesis Milestone, Post-Map Milestone**, and **Post-Par Milestone**, allowing you to perform non-project commands such as `des_report` in the new **radiantc** terminal.

### See Also

- ▶ [Launching the Tcl Console](#)
- ▶ [Running Radiant Tcl](#)
- ▶ [Accessing Command Help and Command Options in the Tcl Console](#)
- ▶ [Creating and Running Custom Tcl Scripts](#)
- ▶ [Running Tcl Scripts When Launching the Radiant Software](#)
- ▶ [Radiant Software Tool Tcl Command Syntax](#)
- ▶ [Tcl Manual](#)

## Creating and Running Custom Tcl Scripts

This topic describes how to easily create Tcl scripts using the Radiant software's user interface and manual methods. FPGA design using Tcl scripts provides some distinct advantages over using the graphical user interface's lists, views and menu commands. For example, Tcl scripts allow you to do the following:

- ▶ Set the tool environment to exactly the same state for every design run. This eliminates human errors caused by forgetting to manually set a critical build parameter from a drop-down menu.
- ▶ Manipulate intermediate files automatically, and consistently on every run. For example, .vm file errors can be corrected prior to performing additional netlist transformation operations.
- ▶ Run your script automatically by using job control software. This gives you the flexibility to run jobs at any time of day or night, taking advantage of idle cycles on your corporate computer system.

### Creating Tcl Scripts

There are a couple of different methods you can use to create the Radiant software Tcl scripts. This section will discuss each one and provide step-by-step instructions for you to get started Tcl scripting repetitious Radiant software commands or entire workflows.

One method you have available is to use your favorite text editor to enter a sequence of the Radiant software Tcl commands. The syntax of each the Radiant software Tcl commands is available in later topics in this portion of the Help. This method should only be used by very experienced Radiant software Tcl command line users.

The preferred method is to let the Radiant software GUI assist you in getting the correct syntax for each Tcl command. When you interact with the Radiant software user interface each time you launch a *scriptable* process and the corresponding Radiant software Tcl command is echoed to the Tcl Console. This makes it much simpler to get the correct command line syntax for each Radiant software command. Once you have the fundamental commands executed in the correct order, you can then add additional Tcl code to perform error checking, or customization steps.

#### To create a Tcl command script in the Radiant software:

1. Start the Radiant software design software and close any project that may be open.
2. In the Tcl Console execute the custom **reset** command. This clears the Tcl Console command history.
3. Use the Radiant software graphical user interface to start capturing the basic command sequence. The Tcl Console echos the commands in its window. Start by opening the project for which you wish to create the Tcl script. Then click on the processes in the Process bar to run them. For example, run these processes in their chronological order in the design flow:

- ▶ Synthesize Design
- ▶ Map Design
- ▶ Place & Route Design
- ▶ Export Files

4. In the Tcl Console window enter the command,

```
save_script <filename.ext>
```

The <filename.ext> is any file identifier that has no spaces and contains no special characters except underscores. For example, **myscript.tcl** or **design\_flow\_1.tcl** are acceptable save\_script values, but **my\$script** or **my script** are invalid. The <filename.ext> entry can be preceded with an absolute or relative path. Use the "/" (i.e. forward slash) character to delimit the path elements. If the path is not specified explicitly the script is saved in the current working directory. The current working directory can be determined by using the Tcl *pwd* command.

5. You can now use your favorite text editor to make any changes to the script you feel are necessary. Start your text editor, navigate to the directory the *save\_script* command saved the base script, and open the file.

**Note**

In most all cases, you will have to clean up the script you saved and remove any invalid arguments or any commands that cannot be performed in the Radiant software environment due to some conflict or exception. You will likely have to revisit this step later if after running your script you experience any run errors due to syntax errors or technology exceptions.

**Sample Radiant Software Tcl Script**

The following Radiant software Tcl script shows a simple script that opens a project, runs the entire design flow through the Place & Route process, then closes the project. A typical script will contain more tasks and will check for failure conditions. Use this simple example as a general guideline.

**Figure 1: Sample Radiant Software Script**

```
prj_archive -dir "C:/my_radiant/counter" -extract "C:/lsccl/radiant/1.1/examples/counter.zip"
prj_run_par
prj_close
```

**Running Tcl Scripts**

The Radiant software Tcl scripts are run exclusively from the Radiant Tcl Console. You can use either the Tcl Console integrated into the Radiant software UI, or by launching the stand-alone Tcl Console.

**To run a Tcl script in the Radiant software:**

1. Launch the Radiant software GUI, or the stand-alone Tcl Console.  
Open the Radiant software but do not open your project. If your project is open, choose **File > Close Project**.
2. If you are using the Radiant software main window, click the small arrow pane switch in the bottom of the Radiant software main window, and then click on the **Tcl Console tab** in the Output area at the bottom to open the console.
3. Use the Tcl *source* command to load and run your Tcl script. The *source* command requires, as it's only argument, the filename of the script you want to load and run. Prefix the script file name with any required relative or absolute path information. To run the example script shown in the previous section use:

```
source C:/lsccl/radiant/<version_number>/examples/counter/
myscript2.tcl
```

As long as there are no syntax errors or invalid arguments, the script will open the project, synthesize, map, and place-and-route the design. Once the design finishes it closes the project. If there are errors in the script, you will see the errors in red in the Tcl Console after you attempt to run it.

Go back to your script and correct the errors that prevented the script from running.

#### See Also

- ▶ [Launching the Tcl Console](#)
- ▶ [Running Radiant Tcl](#)
- ▶ [Accessing Command Help and Command Options in the Tcl Console](#)
- ▶ [Creating and Running Custom Tcl Scripts](#)
- ▶ [Running Tcl Scripts When Launching the Radiant Software](#)
- ▶ [Radiant Software Tool Tcl Command Syntax](#)
- ▶ [Tcl Manual](#)

## Running Tcl Scripts When Launching the Radiant Software

This topic describes how launch the Radiant software and automatically run Tcl scripts using a command line shell or the stand-alone Tcl console. Your Tcl script can be standard Tcl commands as well as the Radiant software-specific Tcl commands.

Refer to [Creating and Running Custom Tcl Scripts](#) for more information on creating custom Tcl scripts.

**To launch the Radiant software and run a Tcl script from a command line shell or the stand-alone Tcl console:**

- ▶ Enter the following command:

On Windows:

```
radiant.exe -t <tcl_path_file>
```

On Linux:

```
radiant -t <tcl_path_file>
```

**Sample Radiant software Tcl Script** The following Radiant software Tcl script shows a very simple script, running in Windows, that opens a project and runs the design flow through the MAP process. Use this simple example as a general guideline.

```
prj_open C:/test/iobasic_radiant/iol.rdf  
prj_run_map
```

The above example is saved in Windows as the file mytcl.tcl in the directory C:/test. By running the following command from either a DOS shell or the Tcl

console in Windows, the Radiant software GUI starts, the project io1.rdf opens, and the MAP process automatically runs.

```
radiant.exe -t c:/test/mytcl.tcl
```

### See Also

- ▶ [Launching the Tcl Console](#)
- ▶ [Running Radiant Tcl](#)
- ▶ [Accessing Command Help and Command Options in the Tcl Console](#)
- ▶ [Creating and Running Custom Tcl Scripts](#)
- ▶ [Running Tcl Scripts When Launching the Radiant Software](#)
- ▶ [Radiant Software Tool Tcl Command Syntax](#)
- ▶ [Tcl Manual](#)

## Radiant Software Tool Tcl Command Syntax

This Tcl Command Reference Guide introduces the syntax of each of the Radiant software tools and provides you with examples to help you construct your own commands and scripts.

The Radiant software tries to make it easy to develop Tcl scripts by mirroring the correct command syntax in the Tcl Console based on the actions performed by you in the GUI. This process works well for most designs, but there are times when a greater degree of control is required. More control over the build process is made available through additional command line switches. The additional switches may not be invoked by actions taken by you when using the GUI. The next sections provide additional information about the Tcl commands implemented in the Radiant software.

The Tcl commands are broken into major categories. The major categories are:

- ▶ [General Radiant Commands](#)
  - ▶ [Radiant Software Tcl Console Commands](#)
  - ▶ [System Tcl Commands](#)
  - ▶ [Device Tcl Commands](#)
  - ▶ [Message Control Tcl Commands](#)
- ▶ [Project Flow Commands](#)
  - ▶ [Radiant Software Project Tcl Commands](#)
- ▶ [Non-project Commands](#)
  - ▶ [Synthesis Tcl Command](#)
  - ▶ [Place & Route Tcl Commands](#)
  - ▶ [Physical Synthesis Tcl Commands](#)

- ▶ [Reveal Commands](#)
  - ▶ [Reveal Inserter Tcl Commands](#)
  - ▶ [Reveal Analyzer Tcl Commands](#)
- ▶ [Power Calculator Tcl Commands](#)
  - ▶ [Power Calculator Tcl Commands](#)
- ▶ [Simulation Related Commands](#)
  - ▶ [Simulation Libraries Compilation Tcl Commands](#)
- ▶ [Timing and Physical Constraints Commands](#)
  - ▶ [Radiant Software Timing Constraints Tcl Commands](#)
  - ▶ [Radiant Software Physical Constraints Tcl Commands](#)
- ▶ [Radiantc TCL Commands](#)
  - ▶ [Bitstream Generation Tcl Commands](#)
  - ▶ [Design Tcl Commands](#)
  - ▶ [Device Tcl Commands](#)
  - ▶ [Technology Mapping Tcl Commands](#)
  - ▶ [Placement Tcl Commands](#)
  - ▶ [Routing Tcl Commands](#)
  - ▶ [Timing Analysis Tcl Commands](#)
- ▶ [Other Commands](#)
  - ▶ [Design Object Tcl Commands](#)
  - ▶ [Engineering Change Order Tcl Commands](#)

## General Radiant Commands

### Radiant Software Tcl Console Commands

The Radiant software Tcl Console provides a small number of commands that allow you to perform some basic actions upon the Tcl Console Pane. The Radiant software Tcl Console commands differ from the other Tcl commands provided in the Radiant software. This dtc program's general Tcl Console commands do not use the *dtc\_* prefix in the command syntax as is the convention with other tools in the Radiant software.

#### Note

---

Tcl Command Log is always listed after the project is closed. You can find it in the Reports section under Misc Report > Tcl Command Log.

---

The following table provides a listing of all valid Radiant software Tcl Console-related commands.

**Table 23: Radiant Software Tcl Console Commands**

| Command            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>clear</b>       | Erase anything present in the Tcl Console pane and print the current <i>prompt</i> character in the upper left corner of the Tcl Console pane without erasing the command history.                                                                                                                                                                                                                                                                                                            |
| <b>history</b>     | <p>List the command history in the Tcl Console that you executed in the current session.</p> <p>Every command entered into the Tcl Console, either by the GUI, or by direct entry in the Tcl Console, is recorded so that it can be recalled at any time.</p> <p>The command history list is cleared when a project is <i>opened</i> or when the Tcl Console <i>reset</i> command is executed.</p>                                                                                            |
| <b>reset</b>       | <p>Clear the Tcl Console pane and erase all entries in the command line history.</p> <p><b>**This command is only used in the GUI Tcl console and not supported in the standalone Tcl console.</b></p>                                                                                                                                                                                                                                                                                        |
| <b>save_script</b> | <p>Save the contents of the command line history memory buffer into the script file specified.</p> <p>The script is, by default, stored into the current working directory. File paths using forward slashes used with an identifier are valid if using an absolute file path to an existing script folder.</p> <p>Usage: <code>save_script &lt;filename.ext&gt;</code></p> <p><b>**This command is only used in the GUI Tcl console and not supported in the standalone Tcl console.</b></p> |
| <b>set_prompt</b>  | <p>Set the default prompt character.</p> <p>The default prompt character in the Tcl Console is the “greater than” symbol or angle bracket (i.e., &gt;). You can change this prompt character to some other special character such as a dollar sign (\$) or number symbol (#) if you prefer.</p> <p>Usage: <code>set_prompt &lt;new_character&gt;</code></p> <p><b>**This command is only used in the GUI Tcl console and not supported in the standalone Tcl console.</b></p>                 |

### Radiant Software Tcl Console Command Examples

This section illustrates and describes a few samples of Radiant Tcl Console commands.



### Example 1

To save a script, use the `save_script` command in the Tcl Console window with a name or file path/name argument. In the first example command line, the file path is absolute, that is, it includes the entire path. Here you are saving “myscript.tcl” to the existing current working directory. The second example creates the same “myscript.tcl” file in the current working directory.

```
save_script C:/lsc/radiant/myproject/scripts/myscript.tcl
save_script myscript.tcl
```

See [Creating and Running Custom Tcl Scripts](#) for details on how to save and run scripts in the Radiant software.

### Example 2

The following `set_prompt` command reassigns the prompt symbol on the command line as a dollar sign (\$). The default is an angle bracket or “greater than” sign (>).

```
set_prompt $
```

### Example 3

The following `history` command will print all of the command history that was recorded in the current Tcl Console session.

```
history
```

## System Tcl Commands

The **sys** commands are used to show Radiant tool and system settings information. You can get these commands by using `help {sys_*}`.

### Radiant Software System Tcl Command Descriptions

The following table provides a listing of all valid Radiant software system-related Tcl command options and describes option functionality.

**Table 24: System Tcl Commands**

| Command                             | Description                     |
|-------------------------------------|---------------------------------|
| <a href="#">sys_install_path</a>    | Return Radiant executable path. |
| <a href="#">sys_install_version</a> | Return Radiant version.         |
| <a href="#">sys_list_attribute</a>  | List system attributes.         |
| <a href="#">sys_set_attribute</a>   | Set system attributes.          |

## **sys\_install\_path**

Return Radiant executable path

### **Syntax**

```
sys_install_path
```

### **Arguments**

### **Example**

```
sys_install_path
```

### **See Also**

```
sys_install_version
```

▶ [“System Tcl Commands” on page 1789](#)

## **sys\_install\_version**

Return Radiant version

### **Syntax**

```
sys_install_version
```

### **Arguments**

### **Example**

```
sys_install_version
```

### **See Also**

```
sys_install_path
```

▶ [“System Tcl Commands” on page 1789](#)

## **sys\_list\_attribute**

List system attributes.

### **Syntax**

```
sys_list_attribute
```

### **Arguments**

### Example

```
sys_list_attribute
```

### See Also

- ▶ [sys\\_set\\_attribute](#)
- ▶ [“System Tcl Commands” on page 1789](#)

## sys\_set\_attribute

Set system attributes.

### Syntax

```
sys_set_attribute [-echo <value>] [-reg <value>]  
[-gui <value>] [-msg <value>]
```

### Arguments

- ▶ **-echo <value>**: value must be: {on,off} Allows you to enable or disable the command summary line. (optional)
- ▶ **-reg <value>**: value must be: {on,off}. Allows you to output RAT\_REG\_RECORD\_ON or RAT\_REG\_RECORD\_OFF. (optional)
- ▶ **-gui <value>**: value must be: {on,off}. The run is called from gui if its value is on. (optional)
- ▶ **-msg <filename>**: Set message setting file to <filename>. (optional)

### Example

```
sys_set_attribute -echo on -reg off
```

### See Also

- ▶ [sys\\_list\\_attribute](#)
- ▶ [“System Tcl Commands” on page 1789](#)

## Device Tcl Commands

The **dev** commands are used re used to access or report device information. You can get these commands by using **help {dev\_\*}**.

The following table provides a listing of all valid Radiant software device-related Tcl command options and describes option functionality.

**Table 25: Device Tcl Commands**

| Command                              | Description             |
|--------------------------------------|-------------------------|
| <a href="#">dev_list_device</a>      | List device.            |
| <a href="#">dev_list_family</a>      | List family.            |
| <a href="#">dev_list_operation</a>   | List operation.         |
| <a href="#">dev_list_package</a>     | List package.           |
| <a href="#">dev_list_performance</a> | List performance grade. |

## dev\_list\_device

List device

### Syntax

```
dev_list_device -family <family> [-p <pattern>]
```

### Arguments

- ▶ **-family <family>**: Specify the device family name.
- ▶ **-p <pattern>**: Specify the device name. Wildcard is supported. If not specified, return all device names under given family. (optional)

### Example

```
dev_list_device -family LIFCL
dev_list_device -family LIFCL -p *17
```

### See Also

- ▶ [“Device Tcl Commands” on page 1791](#)

## dev\_list\_family

List family

### Syntax

```
dev_list_family [-p <pattern>]
```

### Arguments

- ▶ **-p <pattern>**: Specify the family name. Wild card is supported. If not specified, return all device family names. (optional)

### Example

```
dev_list_family  
dev_list_family -p LIF*
```

### See Also

- ▶ [“Device Tcl Commands” on page 1791](#)

## dev\_list\_operation

List operation

### Syntax

```
dev_list_operation -family <family> -device <device> -package  
<package> -performance <performance>
```

### Arguments

- ▶ **-family <family>**: Specify the device family name.
- ▶ **-device <device>**: Specify the device name.
- ▶ **-package <package>**: Specify the package name.
- ▶ **-performance <performance>**: Specify the performance grade.

### Example

```
dev_list_operation -family LIFCL -device LIFCL-17 -package  
CABGA256 -performance 9_High-Performance_1.0V
```

### See Also

- ▶ [“Device Tcl Commands” on page 1791](#)

## dev\_list\_package

List package

### Syntax

```
dev_list_package -family <family> -device <device>  
[-p <pattern>]
```

### Arguments

- ▶ **-family <family>**: Specify the device family name.
- ▶ **-device <device>**: Specify the device name.

- ▶ **-p <pattern>**: Specify the package name. Wild card is supported. If not specified, return all package names under given family & device. (optional)

### Example

```
dev_list_package -family LIFCL -device LIFCL-17
dev_list_package -family LIFCL -device LIFCL-17 -p *256
```

### See Also

- ▶ [“Device Tcl Commands” on page 1791](#)

## dev\_list\_performance

List performance grade

### Syntax

```
dev_list_performance -family <family> -device <device>
                    -package <package>
```

### Arguments

- ▶ **-family <family>**: Specify the device family name.
- ▶ **-device <device>**: Specify the device name.
- ▶ **-package <package>**: Specify the package name.

### Example

```
dev_list_performance -family LIFCL -device LIFCL-17
                    -package CABGA256
```

### See Also

- ▶ [“Device Tcl Commands” on page 1791](#)

## IP Version Update Tcl Commands

This section provides the IP upgrade version Tcl command syntax, command options, and usage examples.

### IP Version Update Command Descriptions

The following table provides a listing of all valid Radiant software IP version update-related Tcl command options and describes option functionality.

**Table 26: IP Version Update Commands**

| Command                              | Description                                                                    |
|--------------------------------------|--------------------------------------------------------------------------------|
| <a href="#">ip_catalog_install</a>   | Install an IP from local or from server.                                       |
| <a href="#">ip_catalog_list</a>      | List supported IPs in local.                                                   |
| <a href="#">ip_catalog_uninstall</a> | Uninstall an IP from local.                                                    |
| <a href="#">ip_upgrade</a>           | Update all .ipx resource files with the new IP version in the Radiant project. |

### ip\_catalog\_install

Install one IP from local ipk file or one IP from server.

#### Syntax

```
ip_catalog_install [-vlnv <IP vlnv>] [-file <ipk file name>]
```

#### Arguments

- ▶ **-vlnv:** IP's information which contains vendor library name and version, use tcl 'ip\_catalog\_list -server' to get it (optional).  
Format: 'vendor:library:name:version'.
- ▶ **-file:** Location of ipk file (optional).

#### Example

```
ip_catalog_install -vlnv
latticesemi.com:module:sin_cos_table:1.3.0
ip_catalog_install -file D:/ipResource/sin_cos_table.ipk
```

#### See Also

- ▶ [“ip\\_catalog\\_uninstall” on page 1789](#)

## ip\_catalog\_list

Return a list of IP, local IP contains the IP from Radiant install package, IP server and customer's packaged IP, server IP contains the IP in server. Only get local IP by default.

### Syntax

```
ip_catalog_list [-name <IP wild name>]  
[-library <IP wild library>] [-vendor <IP wild vendor>]  
[-version <IP wild version>] [-server] [-supported] [-installed]
```

### Arguments

- ▶ **-server:** Get IP list in server (optional).
- ▶ **-supported:** Only list supported local IPs (optional).
- ▶ **-installed:** Only list installed local IPs (optional).
- ▶ **-latest:** Only list latest version (optional).
- ▶ **-name <IP wild name>:** List IP with specified name (optional).
- ▶ **-library <IP wild library>:** List IP with specified library (optional).
- ▶ **-vendor <IP wild vendor>:** List IP with specified vendor (optional).
- ▶ **-version <IP wild version>:** List IP with specified version (optional).

### Example

```
ip_catalog_list -server -name I2C  
ip_catalog_list -installed
```

### See Also

- ▶ [“IP Version Update Tcl Commands” on page 1795](#)



## ip\_catalog\_uninstall

Uninstall one IP from local IPs, ip\_catalog\_list can list all installed local IPs.

### Syntax

```
ip_catalog_uninstall -vlnv <IP vlnv>
```

### Arguments

- ▶ **-vlnv**: IP's information which contains vendor library name and version, use tcl 'ip\_catalog\_list -installed' to get it.

Format: 'vendor:library:name:version'.

### Example

```
ip_catalog_uninstall -vlnv  
latticesemi.com:module:sin_cos_table:1.3.0
```

### See Also

- ▶ [“ip\\_catalog\\_install” on page 1787](#)

## ip\_upgrade

Upgrade and regenerate the IP (latest version) in a project.

### Syntax

```
ip_upgrade [-all] [-ipx <ipx file path>] [-force_update]
[-version <version number>]
```

### Arguments

- ▶ **-all:** Upgrade all IPs to the latest version that can be found locally (optional).
- ▶ **-ipx <ipx file path>:** Upgrade one IP to the latest version that can be found locally (optional).
- ▶ **-version <version number>:** Upgrade one IP to the specified version that can be found locally (optional).
- ▶ **-force\_update:** Upgrade the ipx file with latest version regardless of whether it is compatible or not, which may cause generation errors (optional).

### Example

```
ip_upgrade -ipx D:/radiant_design/counter/adder1.ipx -
force_update
ip_upgrade -ipx D:/radiant_design/counter/adder1.ipx -version
1.3.0
ip_upgrade -all -force_update
```

### See Also

- ▶ [“IP Version Update Tcl Commands” on page 1795](#)

## Message Control Tcl Commands

This section provides Message Control extended Tcl command syntax, command options, and usage examples.

### Message Control Tcl Command Descriptions

The following table provides a listing of all valid Radiant software message control-related Tcl command options and describes option functionality.

**Table 27: Message Control Tcl Commands**

| Command                           | Description                                                                                 |
|-----------------------------------|---------------------------------------------------------------------------------------------|
| <a href="#">msg_clean</a>         | Clean promoted, disabled and suppressed message(s) from the current project.                |
| <a href="#">msg_clean_setting</a> | Clean the setting of promoted, disabled and suppressed message(s) from the current project. |
| <a href="#">msg_demote</a>        | Reset message promotion type from the current project.                                      |
| <a href="#">msg_disable</a>       | Disable the message from the current project.                                               |
| <a href="#">msg_list_status</a>   | List all promoted, disabled or suppressed messages from the current project.                |
| <a href="#">msg_load</a>          | Load the setting of all promoted, disabled and suppressed messages from the file.           |
| <a href="#">msg_promote</a>       | Set message promotion type from the current project.                                        |
| <a href="#">msg_save</a>          | Save the setting of all promoted, disabled and suppressed messages to the file.             |
| <a href="#">msg_suppress</a>      | Suppress the message from the current project.                                              |

## msg\_clean

Commands to clean promoted, disabled and suppressed message(s) from the current project.

### Syntax

```
msg_clean <message Id>|-all
```

### Arguments

- ▶ **<message Id>**: This option specifies implementation name (optional).
- ▶ **-all**: Clean the setting of all promoted, disabled and suppressed messages.

### Example

```
msg_clean 1026001
msg_clean -all
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_clean\_setting

Commands to clean the setting of promoted, disabled and suppressed message(s) from the current project.

### Syntax

```
msg_clean_setting <message Id>|-warning|-info|-all
```

### Arguments

- ▶ **<message Id>**: This option specifies the message id.
- ▶ **-warning**: Clean the setting for warning messages.
- ▶ **-info**: Clean the setting for info messages.
- ▶ **-all**: Clean the setting for all the messages.

### Example

```
msg_clean_setting 1026001
msg_clean_setting -warning
msg_clean_setting -info
msg_clean_setting -all
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_demote

Commands to reset message promotion type from the current project.

### Syntax

```
msg_demote <message Id>
```

### Arguments

- ▶ **<message Id>**: This option specifies the message id.

### Example

```
msg_demote 1026001
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_disable

Commands to disable the message from the current project.

### Syntax

```
msg_disable <message Id>|-warning|-info
```

### Arguments

- ▶ **<message Id>**: This option specifies the message id.
- ▶ **-warning**: Disable all warning messages.
- ▶ **-info**: Disable all info messages.

### Example

```
msg_disable 1026001
msg_disable -warning
msg_disable -info
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_list\_status

Commands to list all promoted, disabled or suppressed messages from the current project.

### Syntax

```
msg_list_status [-promoted|-disabled|-suppressed]
```

### Arguments

- ▶ **-promoted**: List all promoted messages (optional).
- ▶ **-disabled**: List all disabled messages (optional).
- ▶ **-suppressed**: List all suppressed messages (optional).

### Example

```
msg_list_status
msg_list_status -promoted

msg_list_status -disabled
msg_list_status -suppressed
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_load

Commands to load the setting of all promoted, disabled and suppressed messages from the file, default is promote.xml.

### Syntax

```
msg_load [<message xml or pmt file>]
```

### Arguments

- ▶ **<message xml or pmt file>**: This option specifies the message xml or pmt file (optional).

### Example

```
msg_load
msg_load promote.xml
msg_load promote.pmt
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_promote

Commands to set message promotion type from the current project. Use msg\_save command after promoting a message to ensure the message promotion settings are saved.

### Syntax

```
msg_promote <message Id> [-type 0|1|2|3]
```

### Arguments

- ▶ **<message Id>**: This option specifies the message id.
- ▶ **-type 0|1|2|3**: This option the message promotion type, 0 is error, 1 is critical, 2 is warning, and 3 is info (optional).

### Example

```
msg_promote 1026001
msg_promote 1026001 -type 2
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_save

Commands to save the setting of all promoted, disabled and suppressed messages to the file, default is promote.xml.

### Syntax

```
msg_save [<message xml or pmt file>]
```

### Arguments

- ▶ **<message xml or pmt file>**: This option specifies the message xml or pmt file (optional).

### Example

```
msg_save
msg_save promote.xml
msg_save promote.pmt
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

## msg\_suppress

Commands to suppress the message from the current project, set maximum display count.

### Syntax

```
msg_suppress <message Id> -cnt 0|<count>
```

### Arguments

- ▶ **<message Id>**: This option specifies the message id.
- ▶ **-cnt 0|<count>**: This option specifies maximum display count, 0 is disabled, and 'count' means how many times the message will only display.

### Example

```
msg_suppress 1026001 -cnt 10
```

### See Also

- ▶ [“Message Control Tcl Commands” on page 1798](#)

# Project Flow Commands

The Radiant software Project Tcl Commands allow you to control the contents and settings applied to the tools, and source associated with your design. Projects can be opened, closed, and configured to a consistent state using the commands described in this section.

## Radiant Software Project Tcl Command Descriptions

The following table provides a listing of all valid Radiant software project-related Tcl command options and describes option functionality.

**Table 28: Radiant Software Project Tcl Commands**

| Command                                | Description                                                      |
|----------------------------------------|------------------------------------------------------------------|
| <a href="#">prj_activate_impl</a>      | Activate implementation in the current project.                  |
| <a href="#">prj_add_source</a>         | Add sources to the current project.                              |
| <a href="#">prj_archive</a>            | Archive the current project.                                     |
| <a href="#">prj_clean_impl</a>         | Clean up the implementation result files in the current project. |
| <a href="#">prj_clone_impl</a>         | Clone an existing implementation.                                |
| <a href="#">prj_close</a>              | Close the current project. Any unsaved changes are discarded.    |
| <a href="#">prj_copy_strategy</a>      | Create a new strategy by copying from an existing strategy.      |
| <a href="#">prj_create</a>             | Create a project.                                                |
| <a href="#">prj_create_impl</a>        | Create a new implementation in the current project.              |
| <a href="#">prj_create_strategy</a>    | Create a new strategy with default settings.                     |
| <a href="#">prj_device</a>             | List the device.                                                 |
| <a href="#">prj_disable_source</a>     | Disable the design sources from the current project.             |
| <a href="#">prj_enable_source</a>      | Enable the design sources from the current project.              |
| <a href="#">prj_get_impl_path</a>      | Return active or given implementation folder path.               |
| <a href="#">prj_get_strategy_value</a> | Get value of a strategy item.                                    |
| <a href="#">prj_import_strategy</a>    | Import an existing strategy file.                                |
| <a href="#">prj_list_source</a>        | List source files in current project.                            |
| <a href="#">prj_list_strategy</a>      | List value of strategy items.                                    |
| <a href="#">prj_open</a>               | Open a project file.                                             |
| <a href="#">prj_open_milestone</a>     | Open project milestone netlist files.                            |



**Table 28: Radiant Software Project Tcl Commands**

| Command                                | Description                                                                  |
|----------------------------------------|------------------------------------------------------------------------------|
| <a href="#">prj_remove_impl</a>        | Delete the specified implementation from the current project.                |
| <a href="#">prj_remove_source</a>      | Delete design source from the current project.                               |
| <a href="#">prj_remove_strategy</a>    | Delete an existing strategy.                                                 |
| <a href="#">prj_run_bitstream</a>      | Run bitstream process.                                                       |
| <a href="#">prj_run_map</a>            | Run map process.                                                             |
| <a href="#">prj_run_par</a>            | Run place & route process.                                                   |
| <a href="#">prj_run_synthesis</a>      | Run synthesis process.                                                       |
| <a href="#">prj_save</a>               | Save current project.                                                        |
| <a href="#">prj_saveas</a>             | Save the current project as a new project with specified name and directory. |
| <a href="#">prj_set_device</a>         | Set the device.                                                              |
| <a href="#">prj_set_impl_opt</a>       | List, set or remove implementation options in the current project.           |
| <a href="#">prj_set_opt</a>            | List, set or remove a project option.                                        |
| <a href="#">prj_set_postscript</a>     | List or set user Tcl script after running milestone.                         |
| <a href="#">prj_set_prescript</a>      | List or set user Tcl script before running milestone.                        |
| <a href="#">prj_set_reference_udb</a>  | Set reference UDB for incremental run or disable it.                         |
| <a href="#">prj_set_source_format</a>  | Set a source format.                                                         |
| <a href="#">prj_set_source_opt</a>     | List, set or remove a source option.                                         |
| <a href="#">prj_set_strategy</a>       | Associate the strategy with the specified implementation.                    |
| <a href="#">prj_set_strategy_value</a> | Set value to a strategy item.                                                |
| <a href="#">prj_set_top_module</a>     | Set top module in the current implementation.                                |

**This section displays the usage information of the commands:**

## **prj\_activate\_impl**

Activate implementation in the current project.

### **Syntax**

```
prj_activate_impl <impl name>
```

### **Arguments**

- ▶ **<impl name>**: Specify implementation name.

### Example

```
prj_activate_impl "myimpl"
```

### See also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_add\_source

Add sources to the current project

### Syntax

```
prj_add_source [-impl <implement name>]
[-simulate_only|-synthesis_only] [-work <VHDL lib name>]
[[ -opt <name=value>] ...] [-exclude] <src file>...
```

### Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **-simulate\_only|-synthesis\_only**: Indicate new added source can be simulation or synthesis only (optional).
- ▶ **-work <VHDL lib name>**: Indicate VHDL library name. Default library name is "work" (optional).
- ▶ **-opt <name=value>**: Specify one or multiple option value pair of source file (optional).
- ▶ **-exclude**: Indicate the source to be excluded from the project (optional).
- ▶ **<src file>**: Specify one or multiple source file paths.

### Example

- ▶ `prj_add_source -synthesis_only "D:/my_design/counter/source/count_attr.v"`
- ▶ `prj_add_source -work mywork D:/my_design/counter/source/my.vhd`

### See also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_archive

Archive the current project or extract the archive file.

**Syntax**

```
prj_archive [-includeAll] <archive_file>
: Archive the current project into the archive_file
prj_archive -extract -dir <destination directory>
<archive_file>
: Extract the archive file and load the project
```

**Arguments**

- ▶ **-includeAll:** Indicate to include all files under project folder into archive file (optional).
- ▶ **<archive\_file>:** Specify the archive file (.zip) path.
- ▶ **-extract:** Indicate to extract the specified archive file.
- ▶ **-dir <destination directory>:** Specify the destination directory to extract archive file. This directory should exist in disk.

**Example**

```
prj_archive -includeAll "D:/my_desgin/counter/counter.zip"
prj_archive -dir D:/my_design/newcounter -extract
D:/my_design/counter/counter.zip
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_clean\_impl

Clean up the implementation result files in the current project.

**Syntax**

```
prj_clean_impl [-impl <implement name>]
```

**Arguments**

- ▶ **-impl <implement name>:** (Optional) Specify implementation name. If not specified, use the default implementation.

**Example**

```
prj_clean_impl
prj_clean_impl -impl myimpl
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_clone\_impl

Clone an existing implementation.

### Syntax

```
prj_clone_impl <new impl name> [-dir <new impl directory>]  
[-copyRef] [-impl <original impl name>]
```

### Arguments

- ▶ **-name <new impl name>**: Specify the new implementation name.
- ▶ **-dir <new impl directory>**: Specify the new implementation directory (optional).
- ▶ **-copyRef**: Indicate to copy all source files from original to new implementation (optional).
- ▶ **-impl <original impl name>**: Specify the original implementation name. If not specified, use the default implementation (optional).

### Example

```
prj_clone_impl newimpl -copyRef -impl myimpl
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_close

Close the current open project.

### Syntax

```
prj_close
```

### Example

```
prj_close
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_copy\_strategy

Create a new strategy by copying from an existing strategy.

### Syntax

```
prj_copy_strategy -from <source strategy name> -name
<new strategy name> -file <strategy file name>
```

### Arguments

- ▶ **-from <source strategy name>**: Specify the source strategy name.
- ▶ **-name <new strategy name>**: Specify new strategy name.
- ▶ **-file <strategy file name>**: Specify strategy file (.sty) path. This file is used to save new strategy setting.

### Example

```
prj_copy_strategy -from Strategy1 -name mystrategy -file
d:/my_desgin/counter/mystrategy.sty
```

### See Also

- ▶ ["Radiant Software Project Tcl Commands" on page 1796](#)

## prj\_create

Create a new project.

### Syntax

```
prj_create -name <project name> [-dir <project directory>]
[-dev <device name>] [-performance <performance grade>]
[-impl <initial implementation name>] [-impl_dir <initial
implementation directory>] [-synthesis <synthesis tool name>]
```

### Arguments

- ▶ **-name <project name>**: Specify the project name.
- ▶ **-dir <project directory>**: Specify the project directory (optional).
- ▶ **-dev <device name>**: Specify the device part name.
- ▶ **-performance <performance grade>**: Specify the device performance grade.
- ▶ **-impl <initial implementation name>**: Initial implement name, default name is 'impl\_1' (optional).
- ▶ **-impl\_dir <initial implementation directory>**: Implement directory name, default directory name is same as name implementation name (optional).
- ▶ **-synthesis <synthesis tool name>**: Synthesis tool type. The valid synthesis name is "synplify" and "lse".

### Example

```
prj_create -name "counter" -impl "impl_1" -dev LIFCL-17-9BG256C
-performance "9_High-Performance_1.0V" -synthesis "synplify"
```

```
prj_create -name myproj -dev LIFCL-17-9BG256C -performance
"9_High-Performance_1.0V" -impl myimpl -impl_dir impldir -
synthesis lse
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_create\_impl

Create a new implementation in the current project.

### Syntax

```
prj_create_impl <new impl name> [-dir <implementation
directory>] [-strategy <default strategy name>]
[-synthesis <synthesis tool name>]
```

### Arguments

- ▶ **-name <new impl name>**: Specify the implementation name.
- ▶ **-dir <implementation directory>**: Specify the implementation directory. It's a subdirectory name under project path.
- ▶ **-strategy <default strategy name>**: Specify the strategy name (optional).
- ▶ **-synthesis <synthesis tool name>**: Synthesis tool type. The valid synthesis name is “synplify” and “lse”.

### Example

```
prj_create_impl myimpl -strategy Strategy1
prj_create_impl myimpl -dir myimpldir -synthesis "synplify"
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_create\_strategy

Create a new strategy with default setting

### Syntax

```
prj_create_strategy -name <new strategy name> -file
<strategy file name>
```

### Arguments

- ▶ **-name <new strategy name>**: Specify new strategy name.

- ▶ **-file <strategy file name>:** Specify strategy file (.sty) path. This file is used to save new strategy setting.

### Example

```
prj_create_strategy -name mystrategy -file
d:/my_desgin/counter/mystrategy.sty
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_device

List the device information of the current project

### Syntax

```
prj_device [-family|-device|-package|-performance|
-operation|-part]
```

### Arguments

- ▶ **-family:** Return the family name (optional).
- ▶ **-device:** Return the device name (optional).
- ▶ **-package:** Return the package name (optional).
- ▶ **-performance:** Return the performance grade (optional).
- ▶ **-operation:** Return the device operation (optional).
- ▶ **-part:** Return the device part.

### Example

```
prj_device -family -device
prj_device -part
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_disable\_source

Disable the design sources from the current project.

### Syntax

```
prj_disable_source [-impl <implement name>] <src file> ...
```

### Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **<src file>**: Specify one or multiple source files to be disabled.

### Example

```
prj_disable_source "D:/my_design/counter/source/count_attr.v"
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_enable\_source

Enable the design sources from the current project.

### Syntax

```
prj_enable_source [-impl <implement name>] <src file> ...
```

### Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **<src file>**: Specify one or multiple source files to be enabled.

### Example

```
prj_enable_source "D:/my_design/counter/source/count_attr.v"
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_get\_impl\_path

Return active or given implementation folder path

### Syntax

```
prj_get_impl_path [-impl <implement>]
```

### Arguments

- ▶ **-impl <implement name>**: Specify implementation name. If not specified, use the default implementation.



**Example:**

```
prj_get_impl_path
prj_get_impl_path -impl myimpl
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## **prj\_get\_strategy\_value**

Get the value of a strategy item.

**Syntax**

```
prj_get_strategy_value [-strategy <strategy name>]
<option name>
```

**Arguments**

- ▶ **-strategy <strategy name>**: Specify the strategy name. If not specified, use the default strategy (optional).
- ▶ **<option name>**: Specify the strategy option name.

**Example**

```
prj_get_strategy_value -strategy Strategy1 map_ignore_sdc_error
prj_get_strategy_value par_disable_autohldtiming
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## **prj\_import\_strategy**

Import an existing strategy file.

**Syntax**

```
prj_import_strategy -name <new strategy name> -file
<strategy file name>
```

**Arguments**

- ▶ **-name <new strategy name>**: Specify new strategy name.
- ▶ **-file <strategy file name>**: Specify import strategy (.sty) path.

**Example**

```
prj_import_strategy -name mystrategy -file d:/my_desgin/
counter/strategy1.sty
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_list\_source

List source files in current project.

### Syntax

```
prj_list_source [-o <output_file>]
```

### Arguments

- ▶ **-o <output\_file>**: Specify the output file name. If not specified, list source files in stdout (optional).

### Example

```
prj_list_source
prj_list_source -o D:/my_design/counter/source.txt
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_list\_strategy

List value of strategy items

### Syntax

```
prj_list_strategy [-strategy <strategy name>] <pattern>
```

### Arguments

- ▶ **-strategy <strategy name>**: Specify the strategy name. If not specified, use the default strategy (optional).
- ▶ **<pattern>**: Specify the strategy option name. Wildcard is supported.

### Example

```
prj_list_strategy -strategy Strategy1 map_*
prj_list_strategy par_*
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_open

Open a project file.

### Syntax

```
prj_open <project file>
```

### Arguments

- ▶ **<project name>**: Specify project file (.rdf) path.

### Example

```
prj_open "d:/my_desgin/counter/counter.rdf"
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_open\_milestone

Commands to open project milestone netlist files.

### Syntax

```
prj_open_milestone -postsyn | -postmap | -postpar
```

### Arguments

- ▶ **-postsyn**: Open post-syn logical netlist (optional).
- ▶ **-postmap**: Open post-map physical netlist (optional).
- ▶ **-postpar**: Open post-par physical netlist.

Option '-postsyn' '-postmap' and '-postpar' are mutually exclusive.

### Example

```
prj_open_milestone -postsyn  
prj_open_milestone -postmap  
prj_open_milestone -postpar
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_remove\_impl

Delete the specified implementation from the current project.

### Syntax

```
prj_remove_impl <impl name>
```

### Arguments

- ▶ **<impl name>**: Specify the implementation name.

### Example

```
prj_remove_impl "myimpl"
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_remove\_source

Delete design source from the current project.

### Syntax

```
prj_remove_source [-impl <implement name>] -all  
:Remove all the design sources in project  
prj_remove_source [-impl <implement name>] <src file> ...  
:Remove the specified sources from the current project
```

### Arguments

- ▶ **impl <implement name>**: Specify the implementation name. If not specified, use the default implementation.
- ▶ **-all**: Indicate to remove all sources from the current implementation.
- ▶ **<src file>**: Specify one or multiple source files to be removed. This option is mutually exclusive with "-all".

### Example

```
prj_remove_source -all  
prj_remove_source "D:/my_design/counter/source/count_attr.v"
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_remove\_strategy

Delete an existing strategy

### Syntax

```
prj_remove_strategy <strategy name>
```

### Arguments

- ▶ **<strategy name>**: Specify the strategy name to be removed.

### Example

```
prj_remove_strategy mystrategy
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_run\_bitstream

Run bitstream process.

### Syntax

```
prj_run_bitstream [-forceAll|forceOne]
```

### Arguments

- ▶ **-forceAll**: Indicate to force to run all tasks (optional).
- ▶ **-forceOne**: Indicate to force to run current task (optional).

### Example

```
prj_run_bitstream  
prj_run_bitstream -forceAll
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_run\_map

Run map process.

### Syntax

```
prj_run_map [-forceAll|forceOne]
```

**Arguments**

- ▶ **-forceAll**: Indicate to force to run all tasks (optional).
- ▶ **-forceOne**: Indicate to force to run current task (optional).

**Example:**

```
prj_run_map  
prj_run_map -forceAll
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

**prj\_run\_par**

Run place and route process.

**Syntax**

```
prj_run_par [-forceAll|forceOne]
```

**Arguments**

- ▶ **-forceAll**: Indicate to force to run all tasks (optional).
- ▶ **-forceOne**: Indicate to force to run current task (optional).

**Example**

```
prj_run_par  
prj_run_par -forceAll
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

**prj\_run\_synthesis**

Run synthesis process

**Syntax**

```
prj_run_synthesis [-forceAll|forceOne]
```

**Arguments**

- ▶ **-forceAll**: Indicate to force to run all tasks (optional).
- ▶ **-forceOne**: Indicate to force to run current task (optional).

**Example**

```
prj_run_synthesis
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

**prj\_save**

Save the current project.

**Syntax**

```
prj_save [<project file>]
```

**Arguments**

- ▶ **<project file>**: Specify the Radiant project file (.rdf) path to be saved. If not specified, save to current opening project file (optional).

**Example**

```
prj_save
prj_save d:/my_desgin/counter/mycount.rdf
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

**prj\_saveas**

Save the current project as a new project with specified name and directory and change current workaroud of the new project.

**Syntax**

```
prj_saveas -name <new project name>
-dir <new project directory> [-copy_gen]
```

**Arguments**

- ▶ **-name <new project name>**: Specify the new Radiant project name.
- ▶ **-dir <new project directory>**: Specify the new Radiant project file directory.
- ▶ **-copy\_gen**: Indicate to copy intermediate database files, report files, and other Radiant-generated files into a new project.

### Example

```
prj_saveas -name newcounter -dir
d:/my_desgin/newcounter -copy_gen
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_device

Set the device of current project.

### Syntax

```
prj_set_device [-family <family name>] [-device <device name>]
[-package <package name>] [-performance <performance grade>]
[-operation <operation>] [-part <part name>]
```

### Arguments

- ▶ **-family <family name>**: Specify the family name (optional).
- ▶ **-device <device name>**: Specify the device name (optional).
- ▶ **-package <package name>**: Specify the package name (optional).
- ▶ **-performance <performance grade>**: Specify the performance grade (optional).
- ▶ **-operation <operation>**: Specify the device operation (optional).
- ▶ **-part**: Specify the device part. If '-part' option is specified, other device options are ignored.

### Example:

```
prj_set_device -family LIFCL -device LIFCL-17 -package CABGA256
-performance 8_High-Performance_1.0V -operation COM
prj_set_device -part LIFCL-17-8BG256C
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_impl\_opt

List, set, or remove implementation options in the current project.

### Syntax

```
prj_set_impl_opt [-impl <implement name>]:
List all the options in the specified implementation
prj_set_impl_opt [-impl <implement name>] <option name> [option
value list]: List or set the implementation's option value
```



```
prj_set_impl_opt [-impl <implement name>] -append <option name>
<option value>: Append a value to the specified option value
prj_set_impl_opt [-impl <implement name>] -rem <option name>...
: Remove the the options in the implementation"
```

### Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation.
- ▶ **<option value>**: Specify the option value.
- ▶ **<option value list>**: Specify one or multiple option values. If not specified, it lists the option value of given option name.
- ▶ **-append <option name> <option value>**: Append the specified value to current option value (optional).
- ▶ **-rem <option name>**: Specify one or multiple option names to be removed.

### Example

```
# list all the options of the implementation
prj_set_impl_opt -impl impl_1
# set the option myoption value to "value1"
prj_set_impl_opt myoption value1
# list the option myoption value
prj_set_impl_opt myoption
# append "value2" to the option myoption
prj_set_impl_opt -append myoption value2
# remove the option
prj_set_impl_opt -rem myoption
```

### See Also

- ▶ ["Radiant Software Project Tcl Commands" on page 1796](#)

## prj\_set\_opt

List, set or remove a project option

### Syntax

```
prj_set_opt: List all the options in the current project
prj_set_opt <option name> [<option value list>]: List or
set the option value
prj_set_opt -append <option name> <option value>: Append
a value to the specified option value
prj_set_opt -rem <option name>: Remove the options of
the current project"
```

### Arguments

- ▶ **<option name>**: Specify the project option name to be listed, set or removed.
- ▶ **<option value>**: Specify the option value.
- ▶ **<option value list>**: Specify the one or multiple option values. If not specified, it lists the option value instead (optional).
- ▶ **-append <option name> <option value>**: Append the specified value to current option value (optional).
- ▶ **-rem <option name>**: Specify one or multiple option names to be removed.

### Example

```
# list all the options in the current project
prj_set_opt
# set the option myoption value to "value1"
prj_set_opt myoption value1
# list the option myoption value
prj_set_opt myoption
# append "value2" to the option myoption
prj_set_opt -append myoption value2
# remove the option
prj_set_opt -rem myoption
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_postscript

List or set user Tcl script after running the milestone.

### Syntax

```
prj_set_postscript [-impl <implement name>]
<milestone name> <script_file>
```

### Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **- <milestone name>**: Milestone name should be 'syn', 'map', 'par', 'export'.
- ▶ **<script\_file>**: User Tcl script file path.

### Example

```
prj_set_postscript map my_map.tcl
prj_set_postscript -impl myimpl par my_par.tcl
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

**prj\_set\_prescript**

List or set user Tcl script before running the milestone.

**Syntax**

```
prj_set_prescript [-impl <implement name>]
<milestone name> <script_file>
```

**Arguments**

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **- <milestone name>**: Milestone name should be 'syn', 'map', 'par', 'export'.
- ▶ **<script\_file>**: User Tcl script file path.

**Example**

```
prj_set_prescript map my_map.tcl
prj_set_prescript -impl myimpl par my_par.tcl
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

**prj\_set\_reference\_udb**

Set reference UDB for incremental run or disable it.

**Syntax**

```
prj_set_reference_udb {-clean | -lastrun | -postsyn <postsyn
udb> -postmap <postmap udb> -postpar <postpar udb> [-pdc <pdc>]}
```

**Arguments**

- ▶ **-clean**: Disable incremental run. This option is mutually exclusive with others.
- ▶ **-lastrun**: Incremental run based on previous run result. This option is mutually exclusive with others.
- ▶ **-postsyn <postsyn udb>**: Specify postsyn reference udb (.udb) file path. This option is mutually exclusive with '-clean' & '-lastrun'.
- ▶ **-postmap <postmap udb>**: Specify postmap reference udb (.udb) file path. This option is mutually exclusive with '-clean' & '-lastrun'.

- ▶ **-postpar <postsyn udb>**: Specify postpar reference udb (.udb) file path. This option is mutually exclusive with '-clean' & '-lastrun'.
- ▶ **-pdc <pdc>**: (Optional) Specify constraint file for map. This option is mutually exclusive with '-clean' & '-lastrun'.

### Example

```
prj_set_reference_udb -lastrun
prj_set_reference_udb -postsyn ref_udb/postsy.udb -postmap
ref_udb/postmap.udb -postpar ref_udb/postpar.udb -pdc ref_udb/
user.pdc
prj_set_reference_udb -clean
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_source\_format

Set a source format.

### Syntax

```
prj_set_source_format -src <source name>
[-impl <implement name>] <format>: Currently,
only Verilog or VHDL is supported"
```

### Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **-src <source name>**: Specify the source file path to be set.
- ▶ **<format>**: Indicate source file format. Only Verilog or VHDL is supported.

### Example

```
prj_set_source_format -src "D:/my_design/counter/source/
count_attr.v" Verilog
```

### See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_source\_opt

List, set, or remove a source option.

## Syntax

```
prj_set_source_opt -src <source name> [-impl <implement name>]
: List all the options in the specified source
prj_set_source_opt -src <source name> [-impl <implement name>]
<option name> [option value list]
: List or set the source's option value
prj_set_source_opt -src <source name> [-impl <implement name>]
-append <option name> <option value>
: Append a value to the specified option value
prj_set_source_opt -src <source name> [-impl <implement name>]
-rem <option name>...: Remove the options of the source
```

## Arguments

- ▶ **-src <source name>**: Specify the source file path to be set.
- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **<option name>**: Specify the option name.
- ▶ **<option value list>**: Specify the one or multiple option values. If not specified, it lists the option value instead (optional).
- ▶ **-append <option name> <option value>**: Append the specified value to current option value (optional).
- ▶ **-rem <option name>**: Specify one or multiple option names to be removed.

## Example

```
# list all the options of the source file
prj_set_source_opt -src "D:/my_design/counter/source/
count_attr.v"
# set the option myoption value to "value1"
prj_set_source_opt -src "D:/my_design/counter/source/
count_attr.v" myoption value1
# list the option myoption value
prj_set_source_opt -src "D:/my_design/counter/source/
count_attr.v" myoption
# append "value2" to the option myoption
prj_set_source_opt -src "D:/my_design/counter/source/
count_attr.v" -append myoption value2
# remove the option
prj_set_source_opt -src "D:/my_design/counter/source/
count_attr.v" -rem myoption
```

## See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_strategy

Associate the strategy with the specified implementation.

## Syntax

```
prj_set_strategy [-impl <implementation name>] <strategy name>
```

## Arguments

- ▶ **-impl <implement name>**: Specify the implementation name. If not specified, use the default implementation (optional).
- ▶ **<strategy name>**: Specify strategy name associated with implementation.

## Example

```
prj_set_strategy -impl myimpl mystrategy
```

## See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_strategy\_value

Set value to a strategy item

## Syntax

```
prj_set_strategy_value [-strategy <strategy name>] <option  
name=option value> ...
```

## Arguments

- ▶ **-strategy <strategy name>**: Specify the strategy name. If not specified, use the default strategy (optional).
- ▶ **<option name=option value>**: Specify one or multiple strategy option key value pair.

## Example

```
prj_set_strategy_value -strategy Strategy1  
map_ignore_sdc_error=True map_infer_gsr=True  
prj_set_strategy_value -strategy Strategy1  
par_disable_autohldtiming=True par_place_iterator=50
```

## See Also

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## prj\_set\_top\_module

Set top module in the current implementation.

**Syntax**

```
prj_set_top_module <top module>
```

**Arguments**

- ▶ **<top module>**: Specify new top module name.

**Example**

```
prj_set_top_module counter
```

**See Also**

- ▶ [“Radiant Software Project Tcl Commands” on page 1796](#)

## Non-project Commands

Non-project Tcl commands allow you to run individual tools and processes without creating or managing a full Radiant project. These commands are useful for quick, script-based operations such as compiling files, running synthesis or place-and-route on the fly, or generating outputs in standalone workflows. The following are key non-project Tcl commands.

- ▶ [Synthesis Tcl Command](#)
- ▶ [Place & Route Tcl Commands](#)
- ▶ [Physical Synthesis Tcl Commands](#)

## Synthesis Tcl Command

The **syn** command is used to run the synthesis process. You can change from project flow to a non-project flow by using the **syn\_run** command.

**Radiant Software Synthesis Tcl Command Description**

The following table provides a listing of all valid Radiant software synthesis-related Tcl command options and describes option functionality.

**Table 29: Synthesis Tcl Command**

| Command                 | Description         |
|-------------------------|---------------------|
| <a href="#">syn_run</a> | Run synthesis tool. |

## syn\_run

Run synthesis tool.

### Syntax

```
syn_run
```

### Arguments

### Example

```
syn_run
```

### See Also

► [“Synthesis Tcl Command” on page 1827](#)

## Place & Route Tcl Commands

The **par** commands are used to run the place & route process. You can run place & route results from project flow to a non-project flow by using the **par\_run** command.

### Radiant Software Place & Route Tcl Command Descriptions

The following table provides a listing of all valid Radiant software place & route-related Tcl command options and describes option functionality.

**Table 30: Place & Route Tcl Command**

| Command                         | Description                     |
|---------------------------------|---------------------------------|
| <a href="#">par_list_option</a> | List placement routing options. |
| <a href="#">par_run</a>         | Run placement routing.          |
| <a href="#">par_set_option</a>  | Set placement routing options.  |



## par\_list\_option

Lists placement and routing options.

### Syntax

```
par_list_option
```

### Example

```
par_list_option -optionA
```

### See also

► [“Place & Route Tcl Commands” on page 1828](#)

## par\_run

Runs placement and routing.

### Syntax

```
par_run
```

### Example

```
par_run
```

### See also

► [“Place & Route Tcl Commands” on page 1828](#)

## par\_set\_option

Sets placement and routing options.

### Syntax

```
par_set_option {<key> <value> ...}
```

### Example

```
par_set_option {number_of_host_machine_cores 8  
path_based_placement on}
```

### See also

► [“Place & Route Tcl Commands” on page 1828](#)

# Physical Synthesis Tcl Commands

The commands in this section are used to run and set physical synthesis options.

## Physical Synthesis Tcl Command Descriptions

The following table provides a listing of all valid Radiant software physical synthesis-related Tcl command options and describes option functionality.

**Table 31: Placement Tcl Commands**

| Command                             | Description                                     |
|-------------------------------------|-------------------------------------------------|
| <a href="#">plc_opt</a>             | Run post-placement physical synthesis.          |
| <a href="#">plc_opt_list_option</a> | List post-placement physical synthesis options. |
| <a href="#">plc_opt_set_option</a>  | Set post-placement physical synthesis.          |

## plc\_opt

Runs post-placement physical synthesis.

### Syntax

```
plc_opt
```

### Example

```
plc_opt
```

### See Also

- ▶ [“Physical Synthesis Tcl Commands” on page 1830](#)

## plc\_opt\_list\_option

Lists post-placement physical synthesis options.

### Syntax

```
plc_opt_list_option
```

### Example

```
plc_opt_list_option
```

### See Also

- ▶ [“Physical Synthesis Tcl Commands” on page 1830](#)

## plc\_opt\_set\_option

Sets post-placement physical synthesis options.

### Syntax

```
plc_opt_set_option {<key value> ... }
```

### Example

```
plc_list_option
plc_opt_set_option {sweet_spot_relocation 1
critical_instance_duplication 1}
```

### See Also

- ▶ [“Physical Synthesis Tcl Commands” on page 1830](#)

## Reveal Commands

Reveal provides a powerful set of Tcl commands that enable automated control of debug flows, from configuring analyzers to capturing and exporting trace data. These commands allow you to script common Reveal operations, integrate debug tasks into larger toolchains, and create repeatable workflows without relying on the graphical interface. The following sections describe the essential Tcl commands available in Reveal.

- ▶ [Reveal Inserter Tcl Commands](#)
- ▶ [Reveal Analyzer Tcl Commands](#)

## Reveal Inserter Tcl Commands

This section provides Reveal Inserter extended Tcl command syntax, command options, and usage examples.

### Reveal Inserter Tcl Command Descriptions

The following table provides a listing of all valid Radiant software Reveal Inserter-related Tcl command options and describes option functionality.

**Table 32: Reveal Inserter Tcl Commands**

| Command                            | Description                      |
|------------------------------------|----------------------------------|
| <a href="#">rvl_add_controller</a> | Add Controller core.             |
| <a href="#">rvl_add_core</a>       | Add Inserter core.               |
| <a href="#">rvl_add_te</a>         | Add Inserter trigger expression. |
| <a href="#">rvl_add_trace</a>      | Add Inserter trace signals.      |
| <a href="#">rvl_add_tu</a>         | Add Inserter trigger unit.       |

**Table 32: Reveal Inserter Tcl Commands**

| Command                            | Description                           |
|------------------------------------|---------------------------------------|
| <a href="#">rvl_close_project</a>  | Close Inserter project.               |
| <a href="#">rvl_del_controller</a> | Delete Controller core.               |
| <a href="#">rvl_del_core</a>       | Delete Inserter core.                 |
| <a href="#">rvl_del_te</a>         | Delete Inserter trigger expression.   |
| <a href="#">rvl_del_trace</a>      | Delete Inserter trace signal.         |
| <a href="#">rvl_del_tu</a>         | Delete inserter trigger unit.         |
| <a href="#">rvl_group_trace</a>    | Group Inserter trace signals.         |
| <a href="#">rvl_list_core</a>      | List Inserter core.                   |
| <a href="#">rvl_list_te</a>        | List Inserter trigger expression.     |
| <a href="#">rvl_list_trace</a>     | List inserter trace signals.          |
| <a href="#">rvl_list_tu</a>        | List Inserter trigger unit.           |
| <a href="#">rvl_move_trace</a>     | Move Inserter trace signals.          |
| <a href="#">rvl_new_project</a>    | Create inserter project.              |
| <a href="#">rvl_open_project</a>   | Open Inserter project.                |
| <a href="#">rvl_rename_core</a>    | Rename Inserter core.                 |
| <a href="#">rvl_rename_te</a>      | Rename Inserter trigger expression.   |
| <a href="#">rvl_rename_trace</a>   | Rename Inserter trace bus.            |
| <a href="#">rvl_rename_tu</a>      | Rename Inserter trigger unit.         |
| <a href="#">rvl_run_project</a>    | Run Inserter project.                 |
| <a href="#">rvl_save_project</a>   | Save Inserter project.                |
| <a href="#">rvl_set_controller</a> | List or set Controller options.       |
| <a href="#">rvl_set_core</a>       | Set Inserter core.                    |
| <a href="#">rvl_set_te</a>         | Set Inserter trigger expression.      |
| <a href="#">rvl_set_traceoptn</a>  | List or set Inserter trace options.   |
| <a href="#">rvl_set_trigoptn</a>   | List or set Inserter trigger options. |
| <a href="#">rvl_set_tu</a>         | Set Inserter trigger unit.            |
| <a href="#">rvl_ungroup_trace</a>  | Ungroup Inserter trace signals.       |

## rvl\_add\_controller

Command to add the Controller Core into current project.

### Syntax

```
rvl_add_controller
```

### Arguments

- ▶ **None**

### Example

```
rvl_add_controller
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_add\_core

Command to add a new core in current project.

### Syntax

```
rvl_add_core <core name>
```

### Arguments

- ▶ **<core name>**: Specify the core name.

### Example

```
rvl_add_core top_LA1
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_add\_te

Commands to add a new trigger expression to a debug core in current project.

### Syntax

```
rvl_add_te [-core <core name>] [-ram EBR|Slice] [-name <new TE  
name>] [-expression <expreesion string>]  
[-max_seq_depth <max depth>] [-max_event_count  
<max event count>]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-ram EBR|Slice**: Specify the RAM type (optional).
- ▶ **-name <new TE name>**: Specify the TE name (optional).

- ▶ **-expression <expression string>**: Set Expression. A default trigger expression name will be created if it is omitted in command.
- ▶ **-max\_seq\_depth <max depth>**: Set the Max Sequence Depth (optional).
- ▶ **-max\_event\_count <max event count>**: Set the Max Event Counter (optional).

### Example

```
rvl_add_te
rvl_add_te -name TENew -expression TU1 -core top_LA0
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_add\_trace

Commands to add signals in a debug core in current project.

### Syntax

```
rvl_add_trace [-core <core name>] [-insert_at <position>]
<signals list>
```

You can specify an existing trace signal/bus name or a position number in a trace bus as the inserting position.

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional)
- ▶ **-insert\_at <position>**: Specify the inserting position (optional)
- ▶ **<signals list>**: Specify signals.

### Example

```
rvl_add_trace -insert_at leds {clk2}
rvl_add_trace -insert_at leds {clkoe2 clkout1}
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_add\_tu

Commands to add a new trigger unit to a debug core in current project.

### Syntax

```
rvl_add_tu [-core <core name>] [-radix bin|oct|dec|hex]
[-name <new TU name>] <TU definition>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-radix bin|oct|dec|hex**: Specify the Radix (optional).
- ▶ **-name <new TU name>**: Specify the TU name (optional).
- ▶ **TU definition**: TU definition format: "{signal list} Operator Value" (optional).  
 Operator must be "==", "!=", ">", ">=", "<", "<=", ".RE."(rising edge),  
 ".FE."(falling edge) and ".SC."(serial compare).  
 A default trigger unit name will be created if it's omitted in command.

### Example

```
rvl_add_tu -radix bin
rvl_add_tu -radix bin -name
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_close\_project

Commands to close the current reveal insert project.

### Syntax

```
rvl_close_project [-force]
```

### Arguments

- ▶ **-force**: Force to close (optional).

### Example

```
rvl_close_project -force
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_del\_controller

Commands to remove the Controller Core from current project.

**Syntax**

```
rvl_del_controller
```

**Arguments**

- ▶ None

**Example**

```
rvl_del_controller
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

**rvl\_del\_core**

Commands to remove an existing core from current project.

**Syntax**

```
rvl_del_core <core name>
```

**Arguments**

- ▶ **<core name>**: Specify the core name.

**Example**

```
rvl_del_core top_LA1
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

**rvl\_del\_te**

Commands to delete an existing trigger expression in a debug core in current project.

**Syntax**

```
rvl_del_te [-core <core name>] [TE name]
```

**Arguments**

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-name <TE name>**: Specify the TE name (optional).



**Example**

```
rvl_del_te TE3
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

**rvl\_del\_trace**

Commands to delete trace signals in a debug core in current project

**Syntax**

```
rvl_del_trace [-core <core name>] <signals list>
```

**Arguments**

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **<signals list>**: Specify signals.

**Example:**

```
rvl_del_trace {clk2}
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

**rvl\_del\_tu**

Commands to delete an existing trigger unit in a debug core in current project.

**Syntax**

```
rvl_del_tu [-core <core name>] <TU name>
```

**Arguments**

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **<TU name>**: Specify the TU name (optional).

**Example**

```
rvl_del_tu tuNew
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_group\_trace

Commands to group specified trace signals in a debug core in current project into a bus.

### Syntax

```
rvl_group_trace [-core <core name>] -bus <bus name> <signals  
list>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-bus <bus name>**: Specify a bus name.
- ▶ **<signals list>**: Specify signals.

### Example

```
rvl_group_trace -bus BusNew {clkout1 clkoe2}
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_list\_core

Commands to list the default core in current project.

### Syntax

```
rvl_list_core
```

### Arguments

- ▶ **None**

### Example

```
rvl_list_core
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_list\_te

Commands to list all trigger expressions in a debug core in current project.

### Syntax

```
rvl_list_te [-core <core name>]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).

### Example

```
rvl_list_te
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_list\_trace

Commands to list all trace signals in a debug core in current project

### Syntax

```
rvl_list_trace [-core <core name>]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).

### Example

```
rvl_list_trace
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_list\_tu

Commands to list all trigger unit in a debug core in current project.

### Syntax

```
rvl_list_tu [-core <core name>]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).

### Example

```
rvl_list_tu
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## **rvl\_move\_trace**

Commands to move and rearrange the order of signals in a debug core in current project.

**Syntax**

```
rvl_move_trace [-core <core name>] [-move_to <position>]  
<signals list>
```

You can specify an existing trace signal/bus name or a position number in a trace bus as the new position.

**Arguments**

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-move\_to <position>**: Specify the new position (optional).
- ▶ **<signals list>**: Specify signals.

**Example**

```
rvl_move_trace -move_to clkoe2 {clkout1}
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## **rvl\_new\_project**

Commands to create a new Reveal Inserter project.

**Syntax**

```
rvl_new_project [-overwrite <new rvl file name>]  
[-stage presyn|postsyn|postpar]
```

**Arguments**

- ▶ **-overwrite <new rvl file name>**: Specify project name (optional).
- ▶ **-stage presyn|postsyn|postpar**: Specify the Debug Stage.

**Example**

```
rvl_new_project -overwrite newRvl -stage presyn  
rvl_new_project -stage presyn
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_open\_project

Commands to open a Reveal Inserter project file.

**Syntax**

```
rvl_open_project <reveal project file>
```

**Arguments**

- ▶ **<reveal project file>**: Specify the Reveal Inserter project file.

**Example**

```
rvl_open_project newRvl.rvl
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_rename\_core

Commands to rename an existing core in current project.

**Syntax**

```
rvl_rename_core <core name> <new name>
```

**Arguments**

- ▶ **<core name>**: Specify existing core name.
- ▶ **<new name>**: Specify the new core name.

**Example**

```
rvl_rename_core top_LA1 new_LA
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_rename\_te

Commands to rename an existing trigger expression in a debug core in current project.

### Syntax

```
rvl_rename_te [-core <core name>] <old name> <new name>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **<old name>**: Specify the old name.
- ▶ **<new name>**: Specify the new name.

### Example

```
rvl_rename_te TE2 TENew
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_rename\_trace

Commands to change the name of a trace bus in a debug core in current project.

### Syntax

```
rvl_rename_trace [-core <core name>] -bus <bus name> <new bus name>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-bus <bus name>**: Specify the existing bus.
- ▶ **<new bus name>**: Specify the new bus name.

### Example

```
rvl_rename_trace -bus leds newBus
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_rename\_tu

Commands to rename an existing trigger unit in a debug core in current project.

### Syntax

```
rvl_rename_tu [-core <core name>] <old name> <new name>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **<old name>**: Specify the old name.
- ▶ **<new name>**: Specify the new name.

### Example

```
rvl_rename_tu tul tul_new
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_run\_project

Commands to run inserting debug core task or DRC checking on the current reveal insert project.

### Syntax

```
rvl_run_project [-save] [-saveAs <file_name>] [-overwrite] [-drc] [-insert_core <core_name>]...
```

### Arguments

- ▶ **-save**: Save the project before run command (optional).
- ▶ **-saveAs**: Save as a different file before run command (optional).
- ▶ **-overwrite**: Overwrite the existing file if the saved as to file exists already.
- ▶ **-drc**: Run DRC checking only (optional).
- ▶ **-insert\_core <core\_name>**: Specify the core to be inserted.

All cores will be inserted if none is specified.

### Example

```
rvl_run_project
rvl_run_project -drc
rvl_run_project -save
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

**rvl\_save\_project**

Commands to save the current reveal insert project.

**Syntax**

```
rvl_save_project [-overwrite <reveal project file>]
```

**Arguments**

- ▶ **-overwrite <reveal project file>**: Specify project name (optional).

**Example**

```
rvl_save_project newRvl.rvl
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

**rvl\_set\_controller**

Commands to list or set options of Controller items in current project.

**Syntax**

```
rvl_set_controller [-item LED|Switch|Register|PLL1|PLL2|...]
                  [-set_opt [Insert=on|off] [Width=1|2|3|...|32]]
                  [-set_sig [SWn=signal] [LEDn=signal] [Clock=clk_signal]
                  [Clock_enable=en_signal]
                  [Wr_Rdn=wr_rdn_signal] [Address=addr_bus]
                  [WData=wdata_bus] [RData=rdata_bus]]
```

**Arguments**

- ▶ **-item LED|Switch|Register|PLL1|PLL2|...**: Specify item to be set (optional).
- ▶ **-set\_opt [Insert=on|off] [Width=1|2|3|...|32]**
  - ▶ **Insert=on|off**: Insert the item which specified by -item (optional).
  - ▶ **Width=1|2|3|...|32**: Set width for LED and Switch (optional).
- ▶ **-set\_sig [SWn=signal] [LEDn=signal] [Clock=clk\_signal] [Clock\_enable=en\_signal] [Wr\_Rdn=wr\_rdn\_signal] [Address=addr\_bus] [WData=wdata\_bus] [RData=rdata\_bus]**
  - ▶ **SWn=signal**: Specify the signal where n=1 to Width for Switch (optional).



- ▶ **LEDn=signal**: Specify the signal where n=1 to Width for LED (optional).
- ▶ **Clock=clk\_signal**: Specify the signal for Register (optional).
- ▶ **Clock\_enable=en\_signal**: Specify the signal for Clock\_enable of Register (optional).
- ▶ **Wr\_Rdn=wr\_rdn\_signal for Register**: Specify the signal for Wr\_Rdn of Register.
- ▶ **Address=addr\_bus**: Specify the Address for Wr\_Rdn of Register.
- ▶ **WData=wdata\_bus**: Specify the WData for Register (optional).
- ▶ **RData=rdata\_bus**: Specify the RData for Register (optional).

**Example**

```
rvl_set_controller -item PLL1 -set_opt {insert=on}  
rvl_set_controller -item Switch -del SW2  
rvl_set_controller -item Switch -set_sig {SW0=clkoe1}
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_set\_core

Commands to set a core as the default core in current project.

**Syntax**

```
rvl_set_core [<core name>]
```

**Arguments**

- ▶ **<core name>**: Specify the core name (optional).

**Example**

```
rvl_set_core
```

**See Also**

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_set\_te

Commands to change an existing trigger expression in a debug core in current project.

**Syntax**

```
rvl_set_te [-core <core name>] [-ram <EBR|Slice>]
[-expression <expression string>] [-max_seq_depth <max depth>]
[-max_event_count <max event count>] <TE name>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-ram <EBR|Slice>**: Specify the RAM type (optional).
- ▶ **-expression <expression string>**: Set Expression (optional).
- ▶ **-max\_seq\_depth <max depth>**: Set the Max Sequence Depth (optional).
- ▶ **-max\_event\_count <max event count>**: Set the Max Event Counter (optional).
- ▶ **-name <TE name>**: Specify the TE name (optional).

### Example

```
rvl_set_te -ram EBR TE
rvl_set_te -expression tul TE
rvl_set_te -max_seq_depth 8 TE
rvl_set_te -max_event_count 32 TE
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_set\_traceoptn

Commands to list or set trace options of a debug core in current project.

### Syntax

```
rvl_set_traceoptn [-core <core name>]
[SampleClk = <signal name>]
[SampleEnable = on|off]
[SampleEnableSig = <signal name>]
[SampleEnablePri = Active_Low|Active_High]
[BufferDepth = 16|32|...|65536]
[Implementation = EBR|DRAM]
[Timestamp = on|off]
[TimestampBits = <bits>]
[CaptureMode = single|multiple]
[MinimumSamplesPerTrigger = 8|16|32|64|128]
[IncludeTrigger = on|off]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **SampleClk = <signal name>**: Specify the Sample Clock (optional).
- ▶ **SampleEnable = on|off**: Enable the Sample (optional).

- ▶ **SampleEnableSig = <signal name>**: Specify the signal for Sample (optional). (Depends on whether SampleEnable is on.)
- ▶ **SampleEnablePri = Active\_Low|Active\_High**: Specify the mode of Sample (optional). (depend on SampleEnable is on)
- ▶ **BufferDepth = 16|32|...|65536**: Specify the Buffer Depth (optional).
- ▶ **Implementation = EBR|DRAM**: Specify the mode of Implementation (optional).
- ▶ **Timestamp = on|off**: Enable the Timestamp (optional).
- ▶ **TimestampBits = <bits>**: Specify the Bits of Timestamp, which must be in the range from (BufferDepth bits + 1) to 63 (optional). (depend on CaptureMode is multiple and BufferDepth)
- ▶ **CaptureMode = single|multiple**: Specify the Capture Mode (optional).
- ▶ **MinimumSamplesPerTrigger = 8|16|32|64|128**: Specify the minimum samples per trigger (optional). (depend on CaptureMode is multiple and BufferDepth)
- ▶ **IncludeTrigger = on|off**: Enable to include trigger signals in trace data (optional).

### Example

```
rvl_set_traceoptn
rvl_set_traceoptn CaptureMode=multiple
rvl_set_traceoptn MinimumSamplesPerTrigger=16
rvl_set_traceoptn SampleEnableSig=dn31
rvl_set_traceoptn TimestampBits=63
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_set\_trigoptn

Commands to list or set trigger options of a debug core in current project.

### Syntax

```
rvl_set_trigoptn [-core <core name>]
    [DefaultRadix = bin|oct|dec|hex]
    [EventCounter = on|off]
    [CounterValue = 2|4|8|16|...|65536]
    [TriggerOut = on|off]
    [OutNetType = IO|NET|BOTH]
    [OutNetName = <net name>]
    [OutNetPri = Active_Low|Active_High]
    [OutNetMPW = <pulse number>]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).

- ▶ **DefaultRadix = bin|oct|dec|hex**: Specify the default Radix (optional).
- ▶ **EventCounter = on|off**: Enable the Event Counter (optional).
- ▶ **CounterValue = 2|4|8|16|...|65536**: Specify the value of Counter (optional). (depend on EventCounter is on)
- ▶ **TriggerOut = on|off**: Enable the Trigger Out (optional).
- ▶ **OutNetType = IO|NET|BOTH**: Specify the Net Type (optional). (depend on TriggerOut is on)
- ▶ **OutNetName = <net name>**: Specify the Net Name (optional). (depend on TriggerOut is on)
- ▶ **OutNetPri = Active\_Low|Active\_High**: Specify the Polarity mode (optional). (depend on TriggerOut is on)
- ▶ **OutNetMPW = <pulse number>**: Specify the Net Type (optional). (depend on TriggerOut is on)

### Example

```
rvl_set_trigoptn
rvl_set_trigoptn TriggerOut=on
rvl_set_trigoptn OutNetMPW=1
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_set\_tu

Commands to set a trigger unit in a debug core in current project.

### Syntax

```
rvl_set_tu [-core <core name>] [-radix bin|oct|dec|hex]
-name <TU name> [-add_sig <signal list>] [-del_sig
<signal list>] [-set_sig <signal list>]
[-expr <TU definition>] [-op <operator>] [-val <value>]
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **-radix bin|oct|dec|hex**: Specify the Radix (optional).
- ▶ **-name <TU name>**: Specify the TU name (optional).
- ▶ **-add\_sig <signal list>**: Add signals (optional).
- ▶ **-del\_sig <signal list>**: Delete signals (optional).
- ▶ **-set\_sig <signal list>**: Set signals (optional).
- ▶ **-expr <TU definition>**: Define the TU Expression (optional). TU definition format: "{signal list} Operator Value"

- ▶ **-op <operator>**: Define the TU Operator (optional). Operator must be "=", "!=", ">", ">=", "<", "<=", ".RE."(rising edge), ".FE."(falling edge) and ".SC."(serial compare)
- ▶ **-val <value>**: Set value for Operator (optional).

### Example

```
rvl_set_tu -name fff -radix Oct
rvl_set_tu -name fff -op .RE.
rvl_set_tu -name fff -val 2
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

## rvl\_ungroup\_trace

Commands to ungroup trace signals in a trace bus in a debug core in current project.

### Syntax

```
rvl_ungroup_trace [-core <core name>] <bus name>
```

### Arguments

- ▶ **-core <core name>**: Specify a core name (optional).
- ▶ **<bus name>**: Specify a bus name.

### Example

```
rvl_ungroup_trace BusNew
```

### See Also

- ▶ [“Reveal Inserter Tcl Commands” on page 1831](#)

# Reveal Analyzer Tcl Commands

This section provides Reveal Analyzer extended Tcl command syntax, command options, and usage examples.

## Reveal Analyzer Tcl Command Descriptions

The following table provides a listing of all valid Radiant software Reveal Analyzer-related Tcl command options and describes option functionality.

**Table 33: Reveal Analyzer Tcl Commands**

| Command                              | Description                           |
|--------------------------------------|---------------------------------------|
| <a href="#">rva_add_token</a>        | Add Analyzer token.                   |
| <a href="#">rva_add_tokenset</a>     | Add Analyzer token set.               |
| <a href="#">rva_close_controller</a> | Close Controller connection.          |
| <a href="#">rva_close_project</a>    | Close Analyzer project.               |
| <a href="#">rva_del_token</a>        | Delete Analyzer token.                |
| <a href="#">rva_del_tokenset</a>     | Delete Analyzer token set.            |
| <a href="#">rva_export_project</a>   | Export Analyzer waveform.             |
| <a href="#">rva_export_tokenset</a>  | Export Analyzer token set.            |
| <a href="#">rva_get_trace</a>        | List Analyzer trace signals.          |
| <a href="#">rva_import_tokenset</a>  | Import Analyzer token set.            |
| <a href="#">rva_manualtrig</a>       | Manual Trigger to capture data.       |
| <a href="#">rva_new_project</a>      | Create Analyzer project.              |
| <a href="#">rva_open_controller</a>  | Open Controller connection.           |
| <a href="#">rva_open_project</a>     | Open Analyzer project file.           |
| <a href="#">rva_read_controller</a>  | Read data from 32-bit address in hex. |
| <a href="#">rva_rename_te</a>        | Rename Analyzer trigger expression.   |
| <a href="#">rva_rename_tu</a>        | Rename Analyzer trigger unit.         |
| <a href="#">rva_run</a>              | Run Analyzer project.                 |
| <a href="#">rva_run_controller</a>   | Run Controller command.               |
| <a href="#">rva_save_project</a>     | Save the current Analyzer project.    |
| <a href="#">rva_set_controller</a>   | Set Controller options.               |
| <a href="#">rva_set_core</a>         | Set Analyzer core.                    |
| <a href="#">rva_set_project</a>      | Set Analyzer options.                 |
| <a href="#">rvl_set_te</a>           | Set Analyzer trigger expression.      |

**Table 33: Reveal Analyzer Tcl Commands**

| Command                               | Description                                     |
|---------------------------------------|-------------------------------------------------|
| <a href="#">rva_set_token</a>         | Set Analyzer token.                             |
| <a href="#">rva_set_tokenset</a>      | Set Analyzer token set.                         |
| <a href="#">rva_set_trigoptn</a>      | Set Analyzer trigger options.                   |
| <a href="#">rva_set_tu</a>            | Set Analyzer trigger unit.                      |
| <a href="#">rva_stop</a>              | Stop Analyzer project without capturing data.   |
| <a href="#">rva_target_controller</a> | Set Controller core as target.                  |
| <a href="#">rva_write_controller</a>  | Write Controller data to 32-bit address in hex. |

## rva\_add\_token

Adds a token with new name and value in a specific token set.

### Syntax

```
rva_add_token <tokenset name> <name=value>
```

### See Also

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_add\_tokenset

Adds a token set.

### Syntax

```
rva_add_tokenset [-tokenset <tokenset name>]
[-bits <token bits>] [-token <name=value>]
```

### Arguments

- ▶ **tokenset**: Sets the token set name
- ▶ **-bits**: Sets the token set bits
- ▶ **-token**: Add extra token

If no arguments are specified, add a token set with default name and bits.

### See Also

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_close\_controller**

Closes Controller connection to Lattice device after read/write has finished.

### **Syntax**

```
rva_close_controller
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_close\_project**

Closes the current Reveal Analyzer project.

### **Syntax**

```
rva_close_project
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_del\_token**

Deletes a specific token in a token set.

### **Syntax**

```
rva_del_token <tokenset name> <token name>
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_del\_tokenset**

Deletes the specific token set.

### **Syntax**

```
rva_del_tokenset <tokenset name>
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)



## **rva\_export\_project**

Exports waveform in VCD or TEXT from the current Reveal Analyzer project.

### **Syntax**

```
rva_export_project <-vcd|-txt> <file name> [option]
```

### **Arguments**

- ▶ **-vcd:** <file name> [module <title>]
- ▶ **-txt:** <file name> [-siglist <signal list>]

By default, the module title is "<unknown>" and all signals are exported.

### **See Also**

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_export\_tokenset**

Exports all token set to a specific file.

### **Syntax**

```
rva_export_tokenset <file name>
```

### **See Also**

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_get\_trace**

Lists all trace signals in Analyzer core.

### **Syntax**

```
rva_get_trace
```

### **See Also**

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_import\_tokenset

Imports and merges all token set from a specific file.

### Syntax

```
rva_import_tokenset <file name>
```

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_manualtrig

Manually triggers Reveal Analyzer to capture data.

### Syntax

```
rva_manualtrig
```

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_new\_project

Creates a new Reveal Analyzer project.

### Syntax

```
rva_new_project -rva <file name> -rvl <file name> -dev <val> -  
cable <val> -port <val> [-xcf <file name>]
```

### Arguments

- ▶ **-rva**: Set the new rva file name
- ▶ **-rvl**: Set the associated rvl file name
- ▶ **-dev**: Set the device name
- ▶ **-cable**: Set type of cable as USB or USB2
- ▶ **-port**: Set logical port of cable as integer
- ▶ **-xcf**: Optional xcf file name for multiple device chain

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_open\_controller**

Open Controller connection to Lattice device before read/write began.

### **Syntax**

```
rva_open_controller
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_open\_project**

Opens Controller connection to Lattice device before read/write begins.

### **Syntax**

```
rva_open_project <rva file name>
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_read\_controller**

Reads data from 32bit address in hex.

### **Syntax**

```
rva_read_controller -addr <addr32>
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## **rva\_rename\_te**

Renames an existing trigger expression in a debug core in current project.

### **Syntax**

```
rva_rename_te <name> <new name>
```

### **See Also**

▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_rename\_tu

Renames an existing trigger unit in a debug core in the current project.

### Syntax

```
rva_rename_tu <name> <new name>
```

### See Also

► [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_run

Runs Reveal Analyzer until trigger condition to capture data.

### Syntax

```
rva_run
```

### See Also

► [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_run\_controller

Runs command for Virtual LED, Virtual Switch, User Memory, and Hard IP.

Runs command for User Control Register and User Status Register.

### Syntax

```
rva_run_controller -read_led|-read_switch|-write_switch  
<data>|-dump_memfile <mem_file>|-load_memfile <mem_file>|  
-read_ip <ipname>|-write_ip <ipname>|-eye_monitor <ipname>|  
-read_status <regname>|-read_control <regname>|-write_control  
<regname> -data <data>|-toggle_control <regname>|  
-dump_status <reg_file>|-dump_control <reg_file>|-load_control  
<reg_file>
```

### Arguments

- **read\_led**: Reads data from Virtual LED
- **read\_switch**: Reads data from Virtual Switch
- **write\_switch**: Writes data to Virtual Switch
- **dump\_memfile**: Dumps data from User Memory to mem\_file
- **load\_memfile**: Loads data from mem\_file to User Memory
- **read\_ip**: Reads data from Hard IP register of ipname
- **write\_ip**: Writes data to Hard IP register of ipname
- **eye\_monitor**: Runs Eye-Opening Monitor for PCS channel of ipname

- ▶ **read\_status**: Reads data from User Status Register of regname
- ▶ **read\_control**: Reads data from User Control Register of regname
- ▶ **write\_control**: Writes data to User Control Register of regname
- ▶ **toggle\_control**: Toggles data bit in User Control Register of regname
- ▶ **dump\_status**: Dumps data from User Status Register to reg\_file
- ▶ **dump\_control**: Dumps data from User Control Register to reg\_file

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_save\_project

Saves the current Reveal Analyzer project.

#### Syntax

```
rva_save_project [<new rva file name>]
```

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_controller

Sets the options for Controller core.

#### Syntax

```
rva_set_controller [-option <value>]
```

- ▶ **cable\_type**: Sets type of cable as USB or USB2.
- ▶ **cable\_port**: Sets logical port of cable as integer.

If no arguments are specified, return list of options and values.

```
rva_set_controller -hard_ip <ipname> [-option <value>]
```

- ▶ **hard\_ip**: Sets options of DPHY1, DPHY2, I2CFIFO1, SGMIIHDR1, SGMIIHDR2, PCIELL1, PCSCH1 to PCSCH8

If no option/value specified, then return list of options and values.

#### Arguments

- ▶ **DPHY1, DPHY2 options and values:**
  - ▶ **high\_speed\_select**: Sets value as "1.5Gbps and below", "2.5Gbps"
  - ▶ **bypass\_pll\_clock**: Sets value as Enabled, Disabled
  - ▶ **pll\_cn\_counter**: Sets value as integer from 0 to 31

- ▶ **pll\_cm\_counter**: Sets value as integer from 0 to 255
- ▶ **pll\_co\_counter**: Sets value as integer from 0 to 7
- ▶ **I2CFIFO1 options and values:**
  - ▶ **generic\_call\_response**: Sets value as Enabled, Disabled
  - ▶ **sda\_input\_delay**: Sets value as Enabled, Disabled
  - ▶ **sda\_output\_delay**: Sets value as Enabled, Disabled
  - ▶ **fifo\_mode\_select**: Sets value as "Register Mode", "FIFO Mode"
  - ▶ **fifo\_clock\_stretching**: Sets value as Enabled, Disabled
  - ▶ **fifo\_almost\_full\_value**: Sets value as integer from 0 to 31
  - ▶ **fifo\_sleep\_clock**: Sets value as Enabled, Disabled
  - ▶ **slave\_address\_match\_wakeup**: Sets value as Enabled, Disabled
  - ▶ **fifo\_almost\_full\_wakeup**: Sets value as Enabled, Disabled
  - ▶ **master\_read\_complete\_wakeup**: Sets value as Enabled, Disabled
- ▶ **SGMIICDR1, SGMIICDR2 options and values:**
  - ▶ **cdr\_loss\_of\_lock**: Sets value as "Lock=+/-1000ppm x2 Unlock=+/-1500ppm x2", "Lock=+/-2000ppm x2 Unlock=+/-2500ppm x2", "Lock=+/-4000ppm Unlock=+/-7000ppm", "Lock=+/-300ppm Unlock=+/-450ppm"
  - ▶ **loopback\_control**: Sets value as Disabled, "Bit Clock to IO", "Serial Data to IO"
- ▶ **PCIELL1 options and values:**
  - ▶ **swing\_control**: Sets value as full, reduced
- ▶ **PCSCH1 to PCSCH8 options and values:**
  - ▶ **tx\_differential\_amplitude**: Sets value as 1000mV, 900mV, 800mV, 700mV, 600mV, 500mV, 400mV, 300mV, 200mV, 100mV, 0mV
  - ▶ **tx\_output\_termination**: Sets value as "100 ohm", "150 ohm"
  - ▶ **tx\_postcursor\_ratio**: Sets value as integer from 0 to 63 of 128th
  - ▶ **tx\_precursor\_ratio**: Sets value as integer from 0 to 63 of 128th
  - ▶ **tx\_invert\_polarity**: Sets value as on, off
  - ▶ **rx\_input\_termination**: Set value as "100 ohm", "150 ohm"
  - ▶ **rx\_equalization**: Sets value as "RL2plus 8GT/s", "RL2plus 5GT/s", "RL2plus 2.5GT/s", "SS\_LMS 8GT/s", "SS\_LMS 5GT/s", "SS\_LMS 2.5GT/s"
  - ▶ **rx\_invert\_polarity**: Sets value as on, off
  - ▶ **loopback\_mode**: Set value as Disabled, "PMA Near-End Serial Loopback", "PMA Far-End Parallel Loopback", "8B/10B PCS Near-End Parallel Loopback", "8B/10B PCS Far-End Parallel Loopback", "64B/66B PCS Loopback Path A", "64B/66B PCS Loopback Path B", "64B/66B PCS Loopback Path C"
  - ▶ **reset\_tx\_mpcs**: Sets value as on, off

- ▶ **reset\_rx\_mpcs**: Sets value as on, off
- ▶ **reset\_tx\_pll**: Sets value as on, off
- ▶ **reset\_rx\_pll**: Sets value as on, off
- ▶ **force\_tx\_driver**: Sets value as on, off
- ▶ **force\_rx\_driver**: Sets value as on, off
- ▶ **eye\_quality**: Sets quality of eye diagram as high, normal, low

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_core

Sets a core as the default core in the current project.

#### Syntax

```
rva_set_core [-name <name>] [-run <on|off>]
```

#### Arguments

- ▶ **name**: Selects core. This is needed for other actions.
  - ▶ **run**: Turns the run option on or off for core.
- If no arguments are specified, return list of core.

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_project

Sets the current Reveal Analyzer project options.

#### Syntax

```
rva_set_project [-frequency <val>] [-period <val>] [-tckdelay  
<val>] [-cabletype <val>] [-cableport <val>]
```

#### Arguments

- ▶ **frequency**: Sets the frequency value for sample clock in MHz
- ▶ **period**: Sets the period value for sample clock in ns or ps
- ▶ **tckdelay**: Sets the TCK Divider Setting upto 30
- ▶ **cabletype**: Sets the type of cable. Values must be "LATTICE", "USB", "USB2"

- ▶ **cableport**: Sets the port number as integer  $\geq 0$

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_te

Changes an existing trigger expression in a debug core in current project.

#### Syntax

```
rva_set_te [-name <name>] [-expression <expression list>] [-enable <on|off>]
```

#### Arguments

- ▶ **name**: Selects TE. If no options are specified, return options and values for the selected TE.
- ▶ **expression**: Sets TE expression
- ▶ **enable**: Enables/disables TE  
If no arguments are specified, return list of TE.

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_token

Selects a specific token in a specific token set.

#### Syntax

```
rva_set_token <tokenset name> <token name> -name <new token name> -value <new token value>
```

#### Arguments

- ▶ **name**: Sets token name
- ▶ **value**: Sets token value

#### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)



## rva\_set\_tokenset

Selects a specific token set.

### Syntax

```
rva_set_tokenset <tokenset name> [-name <new token set name>]  
[-bits <new token bits>]
```

### Arguments

- ▶ **name:** Renames a token set
- ▶ **bits:** Sets number of bits in token

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_trigoptn

Sets trigger options of Analyzer core in the current project.

### Syntax

```
rva_set_trigoptn [-teall <AND|OR>] [-finalcounter <on|off>]  
[-finalcountervalue <val>] [-samples <val>]  
[-numtriggers <val>] [-position <pre|center|post|val>]
```

### Arguments

- ▶ **teall:** Sets AND ALL or OR ALL for all TE
  - ▶ **finalcounter:** Turns final trigger counter on/off
  - ▶ **finalcountervalue:** Sets final trigger counter value
  - ▶ **samples:** Sets number of samples to capture
  - ▶ **numtriggers:** Sets number of triggers to capture
  - ▶ **position:** Sets trigger position to pre-selected or user value
- If no arguments specified, then return list of options.

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_set\_tu

Sets a trigger unit in a debug core in current project.

### Syntax

```
rva_set_tu [-name <name>] [-operator {== | != | > | >= | < |  
<= | "rising edge" | "falling edge"}}] [-value <value>] [-radix  
{bin | oct | dec | hex | <token>}]
```

### Arguments

- ▶ **name:** Selects TU. If no options are specified, return options and value for the selected TU.
  - ▶ **operator:** Sets TU comparison operator
  - ▶ **value:** Sets TU value
  - ▶ **radix:** Sets TU radix
- If no arguments are specified, return list of TU.

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_stop

Stops Reveal Analyzer without capturing data.

### Syntax

```
rva_stop
```

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_target\_controller

Sets Controller core as target before read/write begins.

### Syntax

```
rva_target_controller
```

### See Also

- ▶ [“Reveal Analyzer Tcl Commands” on page 1850](#)

## rva\_write\_controller

Writes data to 32bit address in hex.

### Syntax

```
rva_write_controller -addr <addr32> -data <data>
```

### See Also

► [“Reveal Analyzer Tcl Commands” on page 1850](#)

## Power Calculator Tcl Commands

This section provides Power Calculator extended Tcl command syntax, command options, and usage examples.

### Power Calculator Tcl Command Descriptions

The following table provides a listing of all valid Radiant software Power Calculator-related Tcl command options and describes option functionality.

**Table 34: Power Calculator Tcl Commands**

| Command                              | Description                                          |
|--------------------------------------|------------------------------------------------------|
| <a href="#">pwc_add_inactiveimpl</a> | Add inactive implementation name.                    |
| <a href="#">pwc_add_ipblock</a>      | Add IP Block row.                                    |
| <a href="#">pwc_calculate</a>        | Run power calculation for current project.           |
| <a href="#">pwc_close_project</a>    | Close the current project.                           |
| <a href="#">pwc_gen_csvreport</a>    | Generate CSV report and write to file.               |
| <a href="#">pwc_gen_htmlreport</a>   | Generate HTML report and write to file.              |
| <a href="#">pwc_gen_report</a>       | Generate text report and write to file.              |
| <a href="#">pwc_new_project</a>      | Create a new project.                                |
| <a href="#">pwc_open_project</a>     | Open a project file.                                 |
| <a href="#">pwc_remove_ipblock</a>   | Remove IP Block row.                                 |
| <a href="#">pwc_save_project</a>     | Save the current project.                            |
| <a href="#">pwc_set_af</a>           | Set activity factor.                                 |
| <a href="#">pwc_set_afpervcd</a>     | Open vcd file and set frequency and activity factor. |
| <a href="#">pwc_set_ambienttemp</a>  | Set ambient temperature value.                       |
| <a href="#">pwc_set_device</a>       | Set device information.                              |
| <a href="#">pwc_set_estimation</a>   | Set estimated routing option.                        |
| <a href="#">pwc_set_freq</a>         | Set frequency.                                       |

**Table 34: Power Calculator Tcl Commands**

| Command                               | Description                                                  |
|---------------------------------------|--------------------------------------------------------------|
| <a href="#">pwc_set_ipblock</a>       | Set IP Block row.                                            |
| <a href="#">pwc_set_junctiontemp</a>  | Set junction temperature value.                              |
| <a href="#">pwc_set_powerscreen</a>   | Set power screen type.                                       |
| <a href="#">pwc_set_processtype</a>   | Set device power process type.                               |
| <a href="#">pwc_set_supply</a>        | Set multiplication factor and voltage of named power supply. |
| <a href="#">pwc_set_thetaja</a>       | Set thermal profile.                                         |
| <a href="#">pwc_set_userenteredtj</a> | Set user entered Tj value.                                   |

## pwc\_add\_inactiveimpl

Commands to add inactive implementation name.

### Syntax

```
pwc_add_inactiveimpl [<implementation name>]
```

### Arguments

- ▶ **<implementation name>**: This option specifies implementation name.

### Example

```
pwc_add_inactiveimpl impl1
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_add\_ipblock

Commands to add IP Block row.

### Syntax

```
pwc_add_ipblock -iptype <iptype name>
```

### Arguments

- ▶ **iptype <iptype name>**: This option specifies IP type.

### Example

```
pwc_add_ipblock -iptype Logic
```

**See Also**

▶ [“Power Calculator Tcl Commands” on page 1863](#)

**pwc\_calculate**

Commands to run power calculation for current project.

**Syntax**

```
pwc_calculate
```

**Example**

```
pwc_calculate
```

**See Also**

▶ [“Power Calculator Tcl Commands” on page 1863](#)

**pwc\_close\_project**

Commands to close the current project.

**Syntax**

```
pwc_close_project
```

**Example**

```
pwc_close_project
```

**See Also**

▶ [“Power Calculator Tcl Commands” on page 1863](#)

## **pwc\_gen\_csvreport**

Commands to generate CSV report and write to file.

### **Syntax**

```
pwc_gen_csvreport <report file>
```

### **Arguments**

- ▶ **<report file>**: This option specifies the report file name.

### **Example**

```
pwc_gen_csvreport test.csv
```

### **See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## **pwc\_gen\_htmlreport**

Commands to generate HTML report and write to file.

### **Syntax**

```
pwc_gen_htmlreport <report file>
```

### **Arguments**

- ▶ **<report file>**: This option specifies the report file name.

### **Example**

```
pwc_gen_htmlreport test.html
```

### **See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## **pwc\_gen\_report**

Commands to generate text report and write to file.

### **Syntax**

```
pwc_gen_report <report file>
```

### **Arguments**

- ▶ **<report file>**: This option specifies the report file name.

### **Example**

```
pwc_gen_report test.html
```

### **See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## **pwc\_new\_project**

Commands to create a new project.

### **Syntax**

```
pwc_new_project <project file>
```

### **Arguments**

- ▶ **<project file>**: This option specify new project file name.

### **Examples**

```
pwc_new_project test.pcf
```

### **See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_open\_project

Commands to open a project file.

### Syntax

```
pwc_open_project <project file>
```

### Arguments

- ▶ **<project file>**: This option specifies the project file name.

### Example

```
pwc_open_project test.pcf
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_remove\_ipblock

Commands to remove IP Block row.

### Syntax

```
pwc_remove_ipblock -iptype <iptype name> -matchkeys {<key1>  
<value1>}+
```

### Arguments

- ▶ **iptype <iptype name>**: This option specifies IP type.
- ▶ **matchkeys {<key1> <value1>}+**: This option specifies match keys.

### Example

```
pwc_remove_ipblock -iptype Logic -matchkeys Clk clk_1
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)



## pwc\_save\_project

Commands to save the current project.

### Syntax

```
pwc_save_project <project file>
```

### Arguments

- ▶ **<project\_file>**: This option specifies the project file name.

### Example

```
pwc_save_project test.pcf
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_af

Commands to set activity factor.

### Syntax

```
pwc_set_af <activity factor> [-keepClocksAF] | <activity factor>  
-iptype <iptype name> -clk <clock name>
```

### Arguments

- ▶ **<activity factor>**: This option specifies default activity factor.
- ▶ **-keepClocksAF**: This option specifies activity factor except clocks tab (optional).
- ▶ **-iptype <iptype name>**: This option is to set activity factor for given IP.
- ▶ **-clk <clock name>**: This option is to set activity factor for given IP clock name.

### Example

```
pwc_set_af 20  
pwc_set_af 30 -keepClocksAF  
pwc_set_af 40 -iptype Logic -clk clk_1
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_afpervcd

Commands to open vcd file and set frequency and activity factor.

### Syntax

```
pwc_set_afpervcd -vcd <vcd file> [-module <module name>]
```

### Arguments

- ▶ **-vcd <vcd file>**: This option specifies the vcd file name.
- ▶ **-module <module name>**: This option specifies the module name (optional).

### Example

```
pwc_set_afpervcd -vcf test.vcd  
pwc_set_afpervcd -vcf test.vcd -module abc
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_ambienttemp

Commands to set ambient temperature value.

### Syntax

```
pwc_set_ambienttemp <ambient temperature>
```

### Arguments

- ▶ **<ambient temperature>**: This option specifies implementation name (optional).

### Example

```
pwc_set_ambienttemp 30
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_device

Commands to set device information.

### Syntax

```
pwc_set_device -family <family name>|-device <device name>|-  
package <package name>|-speed <speed name>|-operating  
<operating name>|-part <part name>
```

### Arguments

- ▶ **-family <family name>**: This option specifies family name.
- ▶ **-device <device name>**: This option specifies device name.
- ▶ **-package <package name>**: This option specifies package name.
- ▶ **-speed <speed name>**: This option specifies speed name.
- ▶ **-operating <operating name>**: This option specifies operating name.
- ▶ **-part <part name>**: This option specifies part name.

### Example

```
pwc_set_device -family LIFCL  
pwc_set_device -device LIFCL-17  
pwc_set_device -package QFN72  
pwc_set_device -speed 8_Low-Power_1.0V  
pwc_set_device -operating Commercial  
pwc_set_device -part LIFCL-17-8SG72Cpwc_add_inactiveimpl impl1
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_estimation

Commands to set estimated routing option.

### Syntax

```
pwc_set_estimation <estimated routing option>
```

### Arguments

- ▶ **<estimated routing option>**: This option specifies estimated routing type.

### Example

```
pwc_set_estimation Low
```

**See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

**pwc\_set\_freq**

Commands to set frequency.

**Syntax**

```
pwc_set_freq <frequency>|<clock> <frequency>|-freq <frequency>
-usefreqtwr 0|1 -freqtwropt min|pref|trace
```

**Arguments**

- ▶ **<frequency>**: This option specifies default frequency.
- ▶ **<clock> <frequency>**: This option specifies clock frequency.
- ▶ **-freq <frequency>**: This option specifies frequency.
- ▶ **-usefreqtwr 0|1**: This option specifies if it is to set frequency by importing timing report or not.
- ▶ **-freqtwropt min|pref|trace**: This option specifies the selection for importing timing report.

**Example**

```
pwc_set_freq 100
pwc_set_freq clk_1 100
pwc_set_freq -freq 100 -usefreqtwr 1 -freqtwropt min
```

**See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

**pwc\_set\_ipblock**

Commands to set IP Block row.

**Syntax**

```
pwc_set_ipblock -iptype <iptype name> -matchkeys {<key1>
<value1>}+ -setkey <key> <value>
```

**Arguments**

- ▶ **-iptype <iptype name>**: This option specifies ip type.
- ▶ **-matchkeys {<key1> <value1>}+**: This option specifies match keys.
- ▶ **-setkey <key> <value>**: This option specifies key value.

**Example**

```
pwc_set_ipblock -iptype Logic -matchkeys Clk clk_1 -setkey LUT
5000
```

**See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

**pwc\_set\_junctiontemp**

Commands to set junction temperature value.

**Syntax**

```
pwc_set_junctiontemp <junction temperature>
```

**Arguments**

- ▶ **<junction temperature>**: This option specifies the junction temperature value.

**Example**

```
pwc_set_junctiontemp 60
```

**See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

**pwc\_set\_powerscreen**

Commands to set power screen type.

**Syntax**

```
pwc_set_powerscreen <power screen>
```

**Arguments**

- ▶ **<power screen>**: This option specifies power screen value.

**Example**

```
pwc_set_powerscreen P20
```

**See Also**

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_processtype

Commands to set device power process type.

### Syntax

```
pwc_set_processtype <process type>
```

### Arguments

- ▶ **<process type>** This option specifies process type.

### Example

```
pwc_set_processtype Typical
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_supply

Commands to set multiplication factor and voltage of named power supply.

### Syntax

```
pwc_set_supply -type <type> -voltage <voltage> -dpm <dpm>
```

### Arguments

- ▶ **-type <type>**: This option specifies supply type.
- ▶ **-voltage <voltage>**: This option specifies voltage value.
- ▶ **-dpm <dpm>**: This option specifies dpm value.

### Example

```
pwc_set_supply -type Vcc -voltage 0.8 -dpm 1.5
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_thetaja

Commands to set thermal profile.

### Syntax

```
pwc_set_thetaja <theta JA>|-board <board type> -heatsink
<heatsink value>|-board <board type> -heatsink <heatsink type>
-airflow <airflow type>
```

### Arguments

- ▶ **<theta JA>**: This option specifies user defined theta JA.
- ▶ **-board <board type>**: This option specifies board type.
- ▶ **-heatsink <heatsink value>**: This option specifies custom profile heat sink value.
- ▶ **-heatsink <heatsink type>**: This option specifies heat sink type.
- ▶ **-airflow <airflow type>**: This option specifies airflow type.

### Example

```
pwc_set_thetaja 20
pwc_set_thetaja -board Medium Board -heatsink 10
pwc_set_thetaja -board Medium Board -heatsink No Heat Sink -
airflow 0 LFM
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

## pwc\_set\_userenteredtj

Commands to set user entered Tj value.

### Syntax

```
pwc_set_userenteredtj 1|0
```

### Arguments

- ▶ **1**: This option specifies user entered Tj.
- ▶ **0**: This option specifies auto-computed Tj.

### Example

```
pwc_set_userenteredtj 1
```

### See Also

- ▶ [“Power Calculator Tcl Commands” on page 1863](#)

# Simulation Libraries Compilation Tcl Commands

This section provides Simulation Libraries Compilation extended Tcl command syntax and usage examples.

## Simulation Libraries Compilation Tcl Command Descriptions

The following table provides a listing of all valid Radiant software Simulation Libraries Compilation-related Tcl command options and describes option functionality.

### Note

Running `cmpl_libs` may take a long time and may cause the Radiant software to hang.

- ▶ It is recommended to run `cmpl_libs` using the Radiant Tcl Console (**Start Menu > Lattice Radiant Software > Accessories > TCL Console**).

or,

- ▶ Run `cmpl_libs.tcl` using the command line console. Refer to [Running cmpl\\_libs.tcl from the Command Line](#).

**Table 35: Simulation Libraries Compilation Tcl Command**

| Command                          | Description                                                      |
|----------------------------------|------------------------------------------------------------------|
| <code>cmpl_libs</code>           | Compile simulation library.                                      |
| <code>sim_generate_script</code> | Generate a simulation script for use with ModelSim or QuestaSim. |

This section displays the usage information of the commands:

## cmpl\_libs

The **-sim\_path** argument specifies the path to the simulation tool executable (binary) folder. This option is mandatory. Currently, only QuestaSim simulators from Mentor and Xcelium simulator from Cadence are supported.

### Note

- ▶ If you are a Windows user and prefer the `\` notation in the path, you must surround it with `{}`. And `""` or `{ }` will be needed if the path has spaces.
- ▶ To execute this script error free, Siemens Questa 2020.4 or a later version should be used for compilation.



The `-sim_vendor` argument specifies simulation vendor. This argument is optional. If you do not use this argument, Mentor is chosen by default, and the libraries are compiled for QuestaSim. If you are using QuestaSim choose `mentor` and Xcelium choose `cadence` for `-sim_vendor`.

The `-device` argument specifies the Lattice FPGA device to compile simulation libraries for. This argument is optional, and the default is to compile libraries for all the Lattice FPGA devices.

The `-target_path` argument specifies the target path, where you want the compiled libraries and `modelsim.ini` file to be located. This argument is optional, and the default target path is the current folder.

---

**Note**

- ▶ This argument is recommended if you did not change the current folder from the Radiant software startup (binary) folder, or if the current folder is write-protected.
  - ▶ If you are a Windows user and prefer the `\` notation in the path, you must surround it with `{}`. And `""` or `{ }` will be needed if the path has spaces.
- 

```
% ctpl_libs
Usage: ctpl_libs -sim_path <sim_path> [-sim_vendor
{siemens<default>|synopsys|cadence}] [-device
{iCE40UP|lifcl|lfcpx|lfcpx_rcs|lfd2nx|lfd2nx1|lfd2nx2|lfmxo5|
lfmxo5t|lfmxo5t1|lav_ate_es|lav_atg_es|lav_atx_es|lav_ate_b|ln2
_mh|ln2_ct|lav_ate|lav_atg|lav_atx|ut24c|ut24cp|all<default>}]
[-target_path <target_path>]
```

## sim\_generate\_script

The `sim_generate_script` command is used to generate the QuestaSim `qrun` argument (`.f`) template file from the current Radiant project settings, including RTL, test bench, and other files. If there is no open Radiant project, this command will fail to run.

This command does not support modifying the original file list of the Radiant project. Simulation Wizard does not call this command to generate the `qrun` argument file. If you want to modify simulation files, you can edit the `qrun` argument file manually.

---

**Note**

The `sim_generate_script` command does not launch QuestaSim as the Simulation Wizard. However, as long as QuestaSim executes the command correctly, it can generate any type of file as an extension of the script.

---

**Syntax**

```
sim_generate_script -top <top module> [-qrun <true|false>]
[-stage <rtl|postsyn|postroute|timing>] [-inst <instance name>]
[-debug] [-run <timesteps><time_units>|0]
[-t <multiplier><time_unit>] [-no_gui] [-w] -o <do file>
```

**Arguments**

- ▶ **-top:** top module for simulation.
- ▶ **-qrun:** invoke QuestaSim with Qrun (optional).
- ▶ **-stage:** valid types are 'rtl', 'postsyn', 'postroute', 'timing'. 'rtl' is default (optional).
- ▶ **-inst:** specify instance for the associated SDF file (optional).
- ▶ **-debug:** apply full debug mode to the simulator (optional).
- ▶ **-run:** specify the number of timesteps for the simulation to run (optional). valid <time\_unit> must be one of the fs, ps, ns, us, ms, sec. '0' means 'run -all'.
- ▶ **-t:** specify the simulator time resolution (optional). <multiplier> is optional. <time\_unit> must be one of the fs, ps, ns, us, ms, sec.
- ▶ **-no\_gui:** runs scripted batch simulations (optional).
- ▶ **-w:** allow to overwrite existed simulation do file or arguments file (optional).
- ▶ **-o:** specify simulation do file path or arguments file path.

**Example**

```
sim_generate_script -top test -run 0 -w -o test.f
sim_generate_script -top count -stage rtl -o count.f
```

**See Also**

- ▶ [“Simulation Libraries Compilation Tcl Commands” on page 1876](#)

**Simulation Libraries Compilation Tcl Command Example**

This section illustrates and describes a few examples of Simulation Libraries Compilation Tcl command.

**Example 1**

The following command will compile all the Lattice FPGA libraries for both Verilog and VHDL simulation, and place them under the folder specified by -target\_path. The path to QuestaSim is specified by -sim\_path.

```
cmpl_libs -sim_path C:/questasim64_10.4e/win64 -target_path c:/
mti_libs
```

# Timing and Physical Constraints Commands

## Radiant Software Timing Constraints Tcl Commands

The section describes the commands are used to set timing constraints.

### Radiant Software Timing Constraints Tcl Command Descriptions

The following table provides a listing of all valid Radiant software timing constraints-related Tcl command options and describes option functionality.

**Table 36: Radiant Software Timing Constraints Tcl Commands**

| Command                                 | Description                                 |
|-----------------------------------------|---------------------------------------------|
| <a href="#">create_clock</a>            | Create a named or virtual clock.            |
| <a href="#">create_generated_clock</a>  | Create a generated clock object.            |
| <a href="#">set_clock_groups</a>        | Set clock groups.                           |
| <a href="#">set_clock_latency</a>       | Define a clock's source or network latency. |
| <a href="#">set_clock_uncertainty</a>   | Set clock uncertainty.                      |
| <a href="#">set_false_path</a>          | Define false path.                          |
| <a href="#">set_input_delay</a>         | Set input delay on ports.                   |
| <a href="#">set_load</a>                | Set capacitance on ports.                   |
| <a href="#">set_max_delay</a>           | Specify maximum delay for timing paths.     |
| <a href="#">set_max_skew</a>            | Define maximum skew of path.                |
| <a href="#">set_min_delay</a>           | Specify minimum delay for timing paths.     |
| <a href="#">set_multicycle_path</a>     | Define multicycle path.                     |
| <a href="#">set_output_delay</a>        | Set output delay on ports.                  |
| <a href="#">set_hierarchy_separator</a> | Set or get hierarchy separator.             |

### create\_clock

Commands to create a new clock object and define its characteristics.

#### Syntax

```
create_clock -period <period_value> [-name <clock_name>]
           [-waveform {<value1 value2>}] [<source_object>] [-add]
```

## Arguments

- ▶ **-period period\_value**: This value specifies the clock period in nanoseconds. The value you specify is the minimum time over which the clock waveform repeats. The value specified for the period must be positive as the period of a clock must be greater than zero. The duty cycle of the clock is 50 percent.
- ▶ **-name clock\_name**: This name string specifies the name of the clock. If this parameter is not given, the name of the source object is used as the name of the clock (optional).
- ▶ **-waveform {value1 value2}**: These values are a list of edge values. Only two edges are supported. Floating values are accepted. Value1 must be less than value2, and the difference must be less than the clock period. Note that value1 must also be less than the clock period (optional).
- ▶ **-source\_object**: This value is the object on which the clock constraint is defined. The source object can be a port, pin or a net object in the design. If you specify a clock constraint on a source object that already has a clock, the new clock replaces the existing one (optional).
- ▶ **-add**: This option allows defining another clock on an object that already has a clock (optional).

## Example 1

The following example creates two clocks on ports CK1 and CK2 with a period of 6:

```
create_clock -name my_user_clock -period 6 [get_ports CK1]
create_clock -name my_other_user_clock -period 6
[get_ports CK2]
```

## Example 2

The following example creates a clock on port CK3 with a period of 7.1, and has two edges at 0 and 4.1:

```
create_clock -period 7.1 -waveform {0 4.1} [get_ports CK3]
```

## See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## create\_generated\_clock

Commands to create an internally generated clock object and define its characteristics.

### Syntax

```
create_generated_clock
```

```

[-name <clock_name>] -source <source_object>
[-edges {<value1 value2 value3>}]
[-edge_shift {<value1 value2 value3>}]
[-divide_by <factor>]
[-multiply_by <factor>]
[-duty_cycle <percent>]
[-invert]
[-add]
[-master_clock <clock>] <object_list>

```

## Arguments

- ▶ **-name clock\_name:** This name string specifies the name of the generated clock (optional).
- ▶ **-source source\_object:** This value is an object on which the source clock of the generated clock is defined. The source object can be a port, pin or a net object. The period of the generated clock is derived from the clock on the source object using the multiply and divide factors.
- ▶ **-edges {value1 value2 value3}:** These values are a list of three numbers which correspond to the edge of the source clock from which the generated clock has been obtained. This option cannot be used with '-divide\_by', '-multiply\_by' and '-duty\_cycle' (optional).
- ▶ **-edge\_shift {value1 value2 value3}:** These values are a list of three numbers that represents the amount of shift (optional).
- ▶ **-divide\_by factor:** This value specifies the frequency division factor. Default value is 1. The frequency of the generated clock is equal to the frequency of the source clock divided by this factor, if the multiply by factor is not specified (optional).
- ▶ **-multiply\_by factor:** This value specifies the frequency multiplication number to be used when finding the generated clock frequency. Default value is 1 (optional).
- ▶ **-duty\_cycle factor:** This value specifies the duty cycle in percentage of the clock period. The value can be floating point and ranges from 0 to 100. The default value is 50. This option cannot be used with '-divide\_by' (optional).
- ▶ **-invert:** This option inverts the clock edge (optional).
- ▶ **-add:** This option allows defining another clock on an object that already has a generated clock.
- ▶ **-master\_clock clock:** This value specifies the master clock for the generated clock object if there are multiple clocks found on the source object (optional).
- ▶ **-object\_list:** This value is a list of clock source pins, ports, or nets.

## Example 1

The following example creates a generated clock on pin pll1/CLKOP with a period twice as long as the period at the reference port CLK:

```
create_generated_clock -divide_by 2 -source
```

```
[get_ports CLK]
[get_pins pll1/CLKOP]
```

### Example 2

The following example creates a generated clock at the primary output of myPLL with a period three quarters of the period at the reference pin clk:

```
create_generated_clock -divide_by 3 -multiply_by 4 -source
[get_ports clk] [get_pins myPLL/CLK1]
```

### Example 3

The following example shows a clock with a duty cycle of 60 percent:

```
create_generated_clock -duty_cycle 60 -source
[get_ports clk] [get_pins myPLL/CLK1]
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_clock\_groups

Commands to specify clock groups that are mutually exclusive or asynchronous with each other in a design so that the paths between these clocks are not considered during timing analysis.

### Syntax

```
set_clock_groups (-logically_exclusive | -physically_exclusive
| -asynchronous) [-group <clock_objects>] [-group
<clock_objects>]
```

### Arguments

- ▶ **-logically\_exclusive:** This option specifies that clocks are mutually exclusive and will not reach the flip flops at the same time due to logic implementation (optional).
- ▶ **-physically\_exclusive:** This option specifies that clocks are mutually exclusive. Only one clock group is active at any given time (optional).
- ▶ **-asynchronous:** This option specifies that the clock groups are asynchronous to each other. Two clocks are asynchronous with respect to each other if they have no phase relationship at all. One option among '-logically\_exclusive', '-physically\_exclusive' and '-physically\_exclusive' is needed and they are mutually exclusive (optional).
- ▶ **-group clock\_objects:** This value specifies the clock objects in a group. At least one '-group' is needed. Each group of clocks is exclusive or asynchronous with the clocks which are specified in the other group. Specifying one group indicates that the clocks in this group are exclusive or asynchronous with all other clocks in the design including one clock which is created in the future (optional).

### Example 1

The following example specifies two clock ports (clka and clkb) are asynchronous to each other:

```

create_clock -period 10.000 -name clka_port [get_ports clka]
create_clock -period 10.000 -name clkb_port [get_ports clkb]
# Set clka_port and clkb_port to be mutually exclusive clocks.
set_clock_groups -asynchronous -group [get_clocks clka_port] -
group [get_clocks clkb_port]
# The previous line is equivalent to the following two
commands.
set_false_path -from [get_clocks clka_port] -to [get_clocks
clkb_port]
set_false_path -from [get_clocks clkb_port] -to [get_clocks
clka_port]

```

### Example 2

The following example specifies four clock constraints that won't be active at the same time:

```

create_clock -period 10.000 -name clka_port [get_ports clka]
create_clock -period 10.000 -name clkb_port [get_ports clkb]
create_clock -period 10.000 -name clkc_port [get_ports clkc]
set_clock_groups -logically_exclusive -group [get_clocks
{clka_port clkb_port}] -group [get_clocks clkc_port]

```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_clock\_latency

Commands to define a clock's source or network latency.

### Syntax

```

set_clock_latency [-rise] [-fall] [-early | -late] -source
<latency> <object_list>

```

### Arguments

- ▶ **-rise:** This option specifies the latency for the rising clock edge (optional).
- ▶ **-fall:** This option specifies the latency for the falling clock edge (optional).
- ▶ **-early|-late:** This option specifies how early|late the clock edge arrives. Option '-early' and '-late' are mutually exclusive (optional).
- ▶ **-source:** This option indicates the specified latency as a source latency.
- ▶ **<latency>:** This value specifies the value of latency.
- ▶ **object\_list>:** This value is a list of clocks. You can also use the keyword '[all\_clocks]' to include all clocks.

**Example**

In the following example, 3ns is in the destination clock of setup and source clock of hold; while 4ns is in source clock of setup and destination clock of hold.

```
set_clock_latency 3 -source -early [get_clocks clk1]
set_clock_latency 4 -source -late [all_clocks]
```

**See Also**

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

**set\_clock\_uncertainty**

Commands to indicate that the clock of interest has uncertainties in its period.

**Syntax**

```
set_clock_uncertainty [-setup] [-hold] [-from <clock>] [-to
<clock>] <uncertainty> [<clock_list>]
```

**Arguments**

- ▶ **-setup:** This option indicates the constraint for setup analysis (optional).
- ▶ **-hold:** This option indicates the constraint for hold analysis (optional).
- ▶ **-from clock:** This value specifies uncertainty source clock and the timer requires the 'from' option to be accompanied by a 'to' option (optional).
- ▶ **-to clock:** This value specifies uncertainty destination clock (optional).
- ▶ **<uncertainty>:** This value specifies the amount by which the clock period in uncertain.
- ▶ **<clock\_list>:** This value is a list of clocks. You can also use the keyword '[all\_clocks]' to include all clocks. One option between '-from' and 'clock\_list' is needed and they are mutually exclusive (optional).

**Examples**

The following two examples specify clock uncertainty, one with a from/to. The first constraint sets the uncertainty of clk1 to half a nanosecond and the second constraint sets the uncertainty to 400 picoseconds when a path is launched by clk2 and captured by clk3.

```
set_clock_uncertainty 0.5 [get_clocks clk1]
set_clock_uncertainty 0.4 -from [get_clocks clk2] -to
[get_clocks clk3]
```

**See Also**

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)



## set\_false\_path

Commands to identify paths that are considered false and excluded from timing analysis.

### Syntax

```
set_false_path
[-from <port_list|pin_list|instance_list|clock_list>]
[-to <port_list|pin_list|instance_list|clock_list>]
[-through <port_list|pin_list|instance_list|net_list>]
[-rise_from <clock_list>] [-rise_to <clock_list>]
[-fall_from <clock_list>] [-fall_to <clock_list>]
[-setup] [-hold]
```

### Arguments

- ▶ **-from port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path start points (optional).
- ▶ **-to port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path end points (optional).
- ▶ **-through object\_list:** This value is a list of through points which the paths should be blocked (optional).
- ▶ **-rise\_from|fall\_from clock\_list:** Same as '-from' but only applies to clock objects. Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.
- ▶ **-rise\_to|fall\_to object\_list clock\_list:** Same as '-to' but only applies to clock objects. Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive. At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.
- ▶ **-setup:** This option indicates to eliminate setup timing analysis for specified timing paths (optional).
- ▶ **-hold:** This option indicates to eliminate hold timing analysis for specified timing paths (optional).

### Example 1

The following example specifies all paths from clock pins of the registers in clock domain clk1 to data pins of a specific register in clock domain clk2 as false paths:

```
set_false_path -from [get_ports clk1] -to [get_cells reg_2]
```

### Example 2

The following example specifies all paths through the net UO/sigA as false:

```
set_false_path -through [get_nets UO/sigA]
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_input\_delay

Commands to define the arrival time of an input relative to a clock.

### Syntax

```
set_input_delay -clock <clock_object> [-clock_fall] [-max | -min] [-add_delay] <delay_value> <port_list>
```

### Arguments

- ▶ **-clock clock\_object:** This value specifies the clock reference to which the specified input delay is related.
- ▶ **-clock\_fall:** This option is a switch to specify the falling edge of clock to trigger (optional).
- ▶ **-max:** This option specifies that the delay value is the maximum delay (optional).
- ▶ **-min:** This option specifies that the delay value is the minimum delay. Option '-max' and '-min' are mutually exclusive (optional).
- ▶ **add\_delay:** This option is used to define more than one input delay on a given port (optional).
- ▶ **<delay\_value>:** This value specifies the arrival time in nanoseconds that represents the amount of time for which the signal is available at the specified input after a clock edge.
- ▶ **<port\_list>:** This value provides one or more input ports in the current design to which delay\_value is assigned. You can also use the keyword '[all\_inputs]' to include all input ports.

### Example 1

The following example sets an input delay of 1.2 ns for port data1 relative to the rising edge of CLK1:

```
set_input_delay 1.2 -clock [get_clocks CLK1] [get_ports data1]
set_input_delay 4.0 -clock [get_clocks vclk] -add_delay
[get_ports out2]
```

## Example 2

The following example sets an input delay of 1.2 ns minimum and 1.5 ns maximum for port data1 relative to the rising edge of CLK1:

```
set_input_delay 1.2 -min -clock [get_clocks CLK1]
[get_ports data1]
set_input_delay 1.5 -max -clock [get_clocks CLK1]
[get_ports data1]
```

## See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_load

Commands to set capacitance on ports.

### Syntax

```
set_load <capacitance> <objects>
```

### Arguments

- ▶ **<capacitance>**: This value specifies the load in capacitance in pF.
- ▶ **<objects>**: This value provides one or more output ports in the current design to which capacitance is assigned. You can also use the keyword '[all\_outputs]' to include all output ports.

## Example

The following example sets a capacitive load of 25 pF for output port OUT:

```
set_load 25 [get_ports {out}]
```

## See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_max\_delay

Commands to specifies the maximum delay for the timing paths.

### Syntax

```
set_max_delay
[-from <port_list|pin_list|instance_list|clock_list>]
[-to <port_list|pin_list|instance_list|clock_list>]
[-through <port_list|pin_list|instance_list|net_list>]
[-datapath_only]
[-rise_from <clock_list>]
[-rise_to <clock_list>]
[-fall_from <clock_list>]
[-fall_to <clock_list>] <delay_value>
```

### Arguments

- ▶ **-from port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path start points (optional).
- ▶ **-to port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path end points (optional).
- ▶ **-through object\_list:** This value specifies the timing path pass through points. The timing paths must go through these points (optional).
- ▶ **-rise\_from|fall\_from clock\_list:** Same as '-from' but only applies to clock objects. Option '-from', 'rise\_from' and 'fall\_from' are mutually exclusive.
- ▶ **-rise\_to|fall\_to clock\_list:** Same as '-to' but only applies to clock objects. Option '-to', 'rise\_to' and 'fall\_to' are mutually exclusive. At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.
- ▶ **-datapath\_only:** This option calculates the Clock-to-Q delay of the first flop, the total delay between the flops, and the setup time of the second flop (optional).
- ▶ **<delay\_value>:** This value specifies a floating point number in nanoseconds that represents the required maximum delay value for specified paths.

### Example

The following example sets a maximum delay by constraining all paths from ff1a:CLK to ff2e:D with a delay less than or equal to 5 ns:

```
set_max_delay
[-from <port_list|pin_list|instance_list|clock_list>]
[-to <port_list|pin_list|instance_list|clock_list>]
[-through <port_list|pin_list|instance_list|net_list>]
[-datapath_only]
[-rise_from <clock_list>]
[-rise_to <clock_list>]
[-fall_from <clock_list>]
[-fall_to <clock_list>] <delay_value>
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_max\_skew

Commands to define the max skew of a path.

### Syntax

```
set_max_skew <net_list|pin_list> <skew_value>
```

### Arguments

- ▶ **<net\_list|pin\_list>**: This value is a list of pins or nets.
- ▶ **<skew\_value>**: This value controls the delay to the various loads of the nket relative to each other.

### Example

The following example shows that the first constraint requires the maximum difference between the net delays of the loads on the net connected to pin “A” to be less than or equal to 250 picoseconds. The second constraint requires the difference between the net delays to the various loads of the net “ff1/Q\_c” to be less than or equal to 370 picoseconds:

```
set_max_skew [get_pins A] 0.25
set_max_skew [get_nets ff1/Q_c] 0.37
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_min\_delay

Commands to specify the minimum delay for the timing paths.

### Syntax

```
set_min_delay
[-from <port_list|pin_list|instance_list|clock_list>]
[-to <port_list|pin_list|instance_list|clock_list>]
[-through <port_list|pin_list|instance_list|net_list>]
[-rise_from <clock_list>]
[-rise_to <clock_list>]
[-fall_from <clock_list>]
[-fall_to <clock_list>]
<delay_value>
```

### Arguments

- ▶ **-from port\_list|pin\_list|instance\_list|clock\_list**: This value specifies the timing path start points (optional).

- ▶ **-to port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path end points (optional).
- ▶ **-through object\_list:** This value specifies the timing path pass through points. The timing paths must go through these points (optional).
- ▶ **-rise\_from|fall\_from clock\_list:** Same as '-from' but only applies to clock objects. Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.
- ▶ **-rise\_to|fall\_to object\_list:** Same as '-to' but only applies to clock objects. Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive. At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.
- ▶ **<delay\_value>:** This value specifies a floating point number in nanoseconds that represents the required minimum delay value for specified paths.

### Example

The following example sets a minimum delay by constraining all paths from ff1a:CLK to ff2e:D with a delay greater than or equal to 5 ns:

```
set_min_delay
-from [get_cells ff1a]
-to [get_cells ff2e] 5.0 set_min_delay
-from [get_pins ff1/Q]
-through [get_pins and1/B]
-to [get_pins ff2/D] 7.0
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_multicycle\_path

Commands to define a path that takes multiple clock cycles.

### Syntax

```
set_multicycle_path
[-from <port_list|pin_list|instance_list|clock_list>]
[-to <port_list|pin_list|instance_list|clock_list>]
[-through <port_list|pin_list|instance_list|net_list>]
[-rise_from <clock_list>] [-rise_to <clock_list>]
[-fall_from <clock_list>] [-fall_to <clock_list>]
[-setup | -hold] [-start | -end] <path_multiplier>
```

### Arguments

- ▶ **-from port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path start point (optional).
- ▶ **-to port\_list|pin\_list|instance\_list|clock\_list:** This value specifies the timing path end point (optional).

- ▶ **-through port\_list|pin\_list|instance\_list|net\_list:** This value specifies the timing path pass through point. The timing path must go through this object (optional).
- ▶ **-rise\_from|fall\_from clock\_list:** Same as '-from' but only applies to clock objects. Option '-from', 'rise\_from' and '-fall\_from' are mutually exclusive.
- ▶ **-rise\_to|fall\_to clock\_list:** Same as '-to' but only applies to clock objects. Option '-to', 'rise\_to' and '-fall\_to' are mutually exclusive. At least one option among '-from|-rise\_from|-fall\_from|-to|-rise\_to|-fall\_to|-through' is needed.
- ▶ **-setup:** This option set Setup multiplier (optional).
- ▶ **-hold:** This option set Hold multiplier. Option '-setup' and '-hold' are mutually exclusive (optional).
- ▶ **-start:** This option indicates that Multiplier measured against startpoint (optional).
- ▶ **-end:** This option indicates that Multiplier measured against endpoint. Option '-start' and '-end' are mutually exclusive (optional).
- ▶ **<path\_multiplier>:** This value specifies a value that represents the number of cycles.

### Example

The following example sets all paths between reg1 and reg2 to 3 cycles for setup check. Hold check is measured at the previous edge of the clock at reg2:

```
set_multicycle_path 3 -from [get_cells reg1] -to [get_cells reg2]
set_multicycle_path 3 -from [get_pins ff1/Q] -through [get_pins and1/B] -to [get_pins ff2/D]
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_output\_delay

Commands to define the output delay of an output relative to a clock.

### Syntax

```
set_output_delay -clock <clock_object> [-clock_fall]
[-max | -min] [-add_delay] <delay_value> <port_list>
```

### Arguments

- ▶ **-clock clock\_object:** This value specifies the clock reference to which the specified output delay is related.
- ▶ **-clock\_fall:** This option is a switch to specify the falling edge of clock to trigger (optional).

- ▶ **-max:** This option specifies that the delay value is the maximum delay (optional).
- ▶ **-min:** This option specifies that the delay value is the minimum delay. Option '-max' and '-min' are mutually exclusive (optional).
- ▶ **-add\_delay:** This option is used to define more than one output delay on a given port (optional).
- ▶ **<delay\_value>:** This value specifies the amount of time from a reference clock to a primary output port.
- ▶ **<port\_list>:** This value provides one or more output ports in the current design to which delay\_value is assigned. You can also use the keyword '[all\_outputs]' to include all output ports.

### Example 1

The following example sets an output delay of 1.2 ns for all outputs relative to CLK1

```
set_output_delay 1.2 -clock [get_clocks CLK1]
[get_ports OUT1]
set_output_delay 1.2 -clock [get_clocks CLK1]
[all_outputs]
```

### Example 2

The following example sets an output delay of 1.2 ns minimum and 1.5 ns maximum for port data1 relative to the rising edge of CLK1:

```
set_output_delay 1.2 -min -clock [get_clocks CLK1]
[get_ports data1]
set_output_delay 1.5 -max -clock [get_clocks CLK1]
[get_ports data1]
```

### See Also

- ▶ [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## set\_hierarchy\_separator

Commands to set or get hierarchy separator.

### Syntax

```
set_hierarchy_separator [<separator>]
```

### Arguments

- ▶ **separator:** This option specifies the separator which is going to be set as hierarchy separator (optional).

If no separator is specified, current separator is print out.



**Example 1**

The following example sets '/' (forward slash) as hierarchy separator:

```
set_hierarchy_separator /
```

**Example 2**

The following example gets the current hierarchy separator:

```
set_hierarchy_separator
```

**See Also**

► [“Radiant Software Timing Constraints Tcl Commands” on page 1879](#)

## Radiant Software Physical Constraints Tcl Commands

The **ldc** commands are used to set physical constraints.

**Radiant Software Physical Constraints Tcl Command Descriptions**

The following table provides a listing of all valid Radiant software physical constraints-related Tcl command options and describes option functionality.

**Table 37: Radiant Software Physical Constraints Tcl Commands**

| Command                                     | Description                                                   |
|---------------------------------------------|---------------------------------------------------------------|
| <a href="#">ldc_create_constraint_set</a>   | Create a new constraint set.                                  |
| <a href="#">ldc_create_group</a>            | Define a single identifier that refers to a group of objects. |
| <a href="#">ldc_create_macro</a>            | Define a macro.                                               |
| <a href="#">ldc_create_region</a>           | Define a rectangular area.                                    |
| <a href="#">ldc_create_vref</a>             | Define a voltage reference.                                   |
| <a href="#">ldc_current_constraint_set</a>  | Switch the constraint set by the name.                        |
| <a href="#">ldc_define_attribute</a>        | Define LSE attributes.                                        |
| <a href="#">ldc_define_global_attribute</a> | Define LSE global attributes.                                 |
| <a href="#">ldc_delete_constraint</a>       | Clear constraints by given IDs.                               |
| <a href="#">ldc_delete_constraint_set</a>   | Delete the constraint set by the name.                        |
| <a href="#">ldc_get_groups</a>              | Return group objects.                                         |
| <a href="#">ldc_list_constraint</a>         | List constraints from database.                               |
| <a href="#">ldc_list_constraint_sets</a>    | List all existing constraint sets.                            |
| <a href="#">ldc_prohibit</a>                | Prohibit site or region.                                      |

**Table 37: Radiant Software Physical Constraints Tcl Commands**

| Command                           | Description                                               |
|-----------------------------------|-----------------------------------------------------------|
| <a href="#">ldc_read</a>          | Read constraint file.                                     |
| <a href="#">ldc_set_attribute</a> | Set object attributes.                                    |
| <a href="#">ldc_set_location</a>  | Set object location.                                      |
| <a href="#">ldc_set_port</a>      | Set port constraint attributes.                           |
| <a href="#">ldc_set_sysconfig</a> | Set sysconfig attributes.                                 |
| <a href="#">ldc_set_vcc</a>       | Set the voltage and/or derate for the bank, core or dphy. |
| <a href="#">ldc_write</a>         | Write constraint file.                                    |

## ldc\_create\_constraint\_set

Commands to create a new constraint set.

### Syntax

```
ldc_create_constraint_set [-name_style logic ]
[-copy_from <copy_from_name>] <name>
```

### Arguments

- ▶ **-name\_style logic:** This value indicates that name style of new constraint set is logic. When this option is set, only constraint file with logical names can be loaded in this constraint set (optional).
- ▶ **-copy\_from copy\_from\_name:** This value specifies an existing constraint set from which the new set will copy constraints (optional).
- ▶ **name:** This name string specifies the name of the new constraint set.

### Example

The following example creates a new constraint set 'test' with name style 'logic':

```
ldc_create_constraint_set -name_style logic test
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_create\_group

Commands to define a single identifier that refers to a group of objects.

### Syntax

```
ldc_create_group -name <group_name>
[-bbox {height width}] <objects>
```

### Arguments

- ▶ **-name group\_name:** This value specifies the group name.
- ▶ **-bbox {height width}:** This value specifies the maximum number of rows (R) and columns (C), of the group's bounding box. This option is not applicable to port (optional).
- ▶ **object:** Objects named in the group, either port, instance, pin or net.

### Example

```
ldc_create_group -name group1 [get_ports {a*}]
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_create\_macro

Commands to define an instance in a design as a macro.

### Syntax

```
ldc_create_macro [-name <macro_name>]  
[-use_pio <ports_list>] <instance>
```

### Arguments

- ▶ **-name macro\_name:** This value specifies the macro name (optional).
- ▶ **-use\_pio ports\_list:** This value specifies macro ports that are directly connected outside of the design (optional).
- ▶ **instance:** The instance which is defined as a macro.

### Example

```
ldc_create_macro -name macro_top -use_pio {din*}  
[get_cells u_top]
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_create\_region

Commands to define a rectangular area.

### Syntax

```
ldc_create_region -name <region_name> (-anchor <anchor>|
    -site <site>) -width <width> -height <height>
    [-buffer_left <left>] [-buffer_right <right>]
    [-buffer_top <top>] [-buffer_bottom <bottom>]
    [-exclusive] [-routing_exclusive]
```

### Arguments

- ▶ **-name region\_name:** This value specifies the region name.
- ▶ **-anchor anchor:** This value specifies anchor.
- ▶ **-site site:** This value specifies the site name. Option '-anchor' and '-site' are mutually exclusive.
- ▶ **-width width:** This value specifies the width of the placement region in columns.
- ▶ **-height height:** This value specifies the height of the placement region in rows.
- ▶ **-buffer\_left left:** This value specifies the left buffer zone of the routing region (optional).
- ▶ **-buffer\_right right:** This value specifies the right buffer zone of the routing region (optional).
- ▶ **-buffer\_top top:** This value specifies the top buffer zone of the routing region (optional).
- ▶ **-buffer\_bottom bottom:** This value specifies the bottom buffer zone of the routing region. Options '-buffer\_left', '-buffer\_right', '-buffer\_top' and '-buffer\_bottom' are only for creating macro region. Without these options routing region is identical to placement region (optional).
- ▶ **-exclusive:** This option indicates that the current buffer cannot be used to place and route other logic during the Reuse stage (optional).
- ▶ **-routing\_exclusive:** This option indicates that the current buffer cannot be used to route other logic during the Reuse stage. Options '-exclusive' and '-routing\_exclusive' are only for creating macro region (optional).

### Example

```
ldc_create_region -name top_region -site R17C2D
-width 23 -height 39
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_create\_vref

Commands to define a voltage reference.

### Syntax

```
ldc_create_vref -name <vref_name> -site <site_name>
```

### Arguments

- ▶ **-name vref\_name:** This value specifies voltage reference name.
- ▶ **-site site\_name:** This value specifies PIO site of the target device.

### Example

```
ldc_create_vref -name VREF1_BANK_3 -site N21
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_current\_constraint\_set

Commands to switch the constraint set by the name.

### Syntax

```
ldc_current_constraint_set [<name>]
```

### Arguments

- ▶ **name:** This option specifies the constraint set which is going to be active. If no constraint set is specified, current active constraint set is print out (optional).

### Example 1

The following example switches the constraint set 'test' to be active:

```
ldc_current_constraint_set test
```

### Example 2

The following example gets the active constraint set:

```
ldc_current_constraint_set
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_define\_attribute

Commands to define LSE attribute.

### Syntax

```
ldc_define_attribute -attr <attr_name> -value  
<attr_value> -object_type <type> -object <objects>  
[-disable] [-comment <comment>]
```

### Arguments

- ▶ **-attr attr\_name:** This value indicates LSE attributes name, such as 'loc'.
- ▶ **-value attr\_value:** This value indicates LSE attribute value such as '2'.
- ▶ **-object\_type type:** This value indicates the type of object to which the attribute belongs, such as 'port'.
- ▶ **-object objects:** This value indicates the specific object to which the attribute applies, such as 'clk'.
- ▶ **-disable:** This option indicates that the command is disabled (optional).
- ▶ **-comment:** This option specifies comment of the command (optional).

### Example

```
ldc_define_attribute -attr loc -value 2 -object_type  
port -object {clk}
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_define\_global\_attribute

Commands to define global LSE attribute

### Syntax

```
ldc_define_global_attribute -attr <attr_name> -value  
    <attr_value> [-disable] [-comment <comment>]
```

### Arguments

- ▶ **-attr attr\_name:** This value indicates LSE attributes name, such as syn\_ramstyle'.
- ▶ **-value attr\_value:** This value indicates LSE attribute value such as 'registers'.
- ▶ **-disable:** This option indicates that the command is disabled (optional).
- ▶ **-comment:** This option specifies comment of the command (optional).

**Example**

```
ldc_define_global_attribute -attr syn_ramstyle  
-value registers
```

**See Also**

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

**ldc\_delete\_constraint**

Commands to clear constraints by given IDs.

**Syntax**

```
ldc_delete_constraint [-all] [<id>] [<id>...]
```

**Arguments**

- ▶ **-all**: This option indicates that the command will delete all constraints (optional).
- ▶ **-id**: This value specifies the id of constraint which is going to be deleted (optional).

**Example**

The following example deletes constraint with index 3:

```
ldc_delete_constraint 3
```

**See Also**

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

**ldc\_delete\_constraint\_set**

Commands to delete the constraint set by the name.

**Syntax**

```
ldc_delete_constraint_set <name>
```

**Arguments**

- ▶ **name**: This value specifies the name of the constraint set which is going to be deleted. Active constraint set can't be deleted.

### Example

The following example deletes constraint set 'test':  
`ldc_delete_constraint_set test`

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_get\_groups

Commands to return group objects.

### Syntax

```
ldc_get_groups [-regexp] [-nocase] [<patterns>]
```

### Arguments

- ▶ **-regexp:** This option indicates that patterns are full regular expressions (optional).
- ▶ **-nocase:** This option indicates that matching is case-insensitive (optional).
- ▶ **patterns:** This value specifies the patterns against which group names are matched. If no pattern is specified, set '\*' as default (optional).

### Example

```
ldc_get_groups -nocase -regexp group\[0-9]+\
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)



## ldc\_list\_constraint

Commands to list constraints from database.

### Syntax

```
ldc_list_constraint [-all|-a]
```

### Arguments

- ▶ **-all|-a**: This option indicates that the command will get all the constraints including disabled or incorrect constraints (optional).

### Example

The following example lists enabled and correct constraints from database:

```
ldc_list_constraint
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_list\_constraint\_sets

Commands to list all existing constraint sets.

### Syntax

```
ldc_list_constraint_sets
```

### Example

The following example lists all existing constraint sets in the current view:

```
ldc_list_constraint_sets
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_prohibit

Commands to prohibit the use of a site or all sites in a region.

### Syntax

```
ldc_prohibit (-site <site> | -region <region>)
```

### Arguments

- ▶ **-site site:** This value specifies site name.
- ▶ **-region region:** This value specifies region name. Option '-site' and '-region' are mutually exclusive.

### Example

```
ldc_prohibit -site AB  
ldc_prohibit -region regionA
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_read

Commands to read constraint file.

### Syntax

```
ldc_read <file>
```

### Arguments

- ▶ **file:** This value specifies the constraint file which is going to be read.

### Example

The following example reads constraint file test.sdc:

```
ldc_read test.sdc
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_set\_attribute

Commands to set constraint attributes to the objects.

### Syntax

```
ldc_set_attribute <key-value list> [objects]
```

### Arguments

- ▶ **key-value list:** This value is a list of constraint attributes.
- ▶ **objects:** This value specifies object(s), to which constraint attributes are set. If no object is specified, attributes are set to design (optional).

### Example

```
ldc_set_attribute GSR_NET=TRUE [get_nets {my_gsr}]
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_set\_location

Commands to set object location.

### Syntax

```
ldc_set_location [-site <site_name>] [-bank <bank_num>]  
                 [-region <region_name>] <object>
```

### Arguments

- ▶ **-site site\_name:** This value specifies name of the site to place object (optional).
- ▶ **-bank bank\_num:** This value specifies number of the bank to place object (optional).
- ▶ **-region region\_name:** This value specifies name of the user defined region to place object. One option among '-site', '-bank' and '-region' is needed and they are mutually exclusive (optional).
- ▶ **object:** Object to be located.

### Example

```
ldc_set_location -site U6 [get_ports clk]  
ldc_set_location -region region0 [ldc_get_groups {group1}]
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_set\_port

Commands to set port constraint attributes.

### Syntax

```
ldc_set_port (-iobuf [-vref <vref_name>]| -sso)
<key-value list> [ports]
```

### Arguments

- ▶ **-iobuf:** This option indicates that IOBUF attributes are set.
- ▶ **-vref vref\_name:** This value specifies voltage reference name. It must be bound to -iobuf (optional).
- ▶ **-sso:** This option indicates that SSO attributes are set. Option '-iobuf' and '-sso' are mutually exclusive.
- ▶ **key-value list:** This value is a list of attributes. Attributes must be enclosed with curly braces.
- ▶ **ports:** This value specifies ports to be set. If no port is specified, set constraint to all ports (optional).

### Example

```
ldc_create_vref -name VERF2 -site R11
ldc_set_port -iobuf -vref VERF2 {IO_TYPE=HSTL15_I
VREF=VREF2_LOAD} [get_ports clk_third]
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_set\_sysconfig

Commands to set sysconfig attributes.

### Syntax

```
ldc_set_sysconfig <key-value list>
```

### Arguments

- ▶ **key-value list:** This value is a list of SYSCONFIG attributes. Attributes must be enclosed with curly braces.

### Example

```
ldc_set_sysconfig {JTAG_PORT=ENABLE PROGRAMN_PORT=ENABLE
MCCLK_FREQ=56.2 DONE_OD=ON}
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_set\_vcc

Commands to set the voltage and/or derate for the bank, core or dphy.

### Syntax

```
ldc_set_vcc (-bank <bank_number>|-core|-dphy DPHY0/DPHY1)
            [-derate <derate>] [<voltage>]
```

### Arguments

- ▶ **-bank bank\_number:** This value specifies the bank to be set with voltage or voltage derating percent.
- ▶ **-core:** This option indicates that voltage or voltage derating percent is set to core.
- ▶ **-dphy DPHY0/DPHY1:** This option indicates that voltage or voltage derating percent is set to dphy. Value of option '-dphy' can only be 'DPHY0' or 'DPHY1'. Option '-bank', '-core' and '-dphy' are mutually exclusive.
- ▶ **-derate:** This value specifies voltage derating percent (optional).
- ▶ **voltage:** This value can be any compatible voltage supply to that bank or the core or dphy; for example, 2.5, 3.3. At least one option between '-derate' and 'voltage' is needed (optional).

### Example

```
ldc_set_vcc -bank 1 3.3
ldc_set_vcc -dphy DPHY0 -derate -3
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## ldc\_write

Commands to write constraint file.

### Syntax

```
ldc_write [-overwrite|w] [-sdc] [-exclude_sdc]
[-include_error] <file>
```

### Arguments

- ▶ **-overwrite|w:** This option indicates that the command will overwrite file of the same name (optional).
- ▶ **-sdc:** This option indicates that only SDC timing constraints and Synthesis attributes will be written to file (optional).
- ▶ **-exclude\_sdc:** This option indicates that SDC timing constraints and Synthesis attributes won't be written to file. Option '-sdc' and '-exclude\_sdc' are mutually exclusive (optional).
- ▶ **-include\_error:** This option indicates that incorrect constraints will also be written to file (optional).
- ▶ **file:** This value specifies the constraint file which is going to be written.

### Example

```
ldc_write -sdc -include_error test.sdc
```

### See Also

- ▶ [“Radiant Software Physical Constraints Tcl Commands” on page 1893](#)

## Radiantc TCL Commands

Radiant has two design flow modes: GUI and pure TCL mode. In pure TCL mode, you can use all TCL commands. However, in GUI mode (including the TCL section within it), Radiant oversees the project process and status without retaining the design in memory. Consequently, any TCL commands that require access to design data are unavailable. The list of these commands is provided below.

- ▶ [Bitstream Generation Tcl Commands](#)
- ▶ [Design Tcl Commands](#)
- ▶ [Device Tcl Commands](#)
- ▶ [Technology Mapping Tcl Commands](#)
- ▶ [Placement Tcl Commands](#)
- ▶ [Routing Tcl Commands](#)
- ▶ [Timing Analysis Tcl Commands](#)

# Bitstream Generation Tcl Commands

The **bit** command is used for bitstream generation.

## Bitstream Generation Tcl Command Descriptions

The following table provides a listing of all valid Radiant software bitstream generation-related Tcl command options and describes option functionality.

**Table 38: Bitstream Generation Tcl Commands**

| Command                         | Description                  |
|---------------------------------|------------------------------|
| <a href="#">bit_generate</a>    | Generate a bitstream file.   |
| <a href="#">bit_list_option</a> | List bit generation options. |
| <a href="#">bit_set_option</a>  | Set bit generation options.  |

## bit\_generate

Generate bitstream file.

### Syntax

```
bit_generate [-w] <filename>
```

### Arguments

- ▶ **-w**: Overwrite existing bitstream file if <filename> exists.
- ▶ **<filename>**: Specify output bitstream file. Do not include '.bit' as it is appended (required).

### Example

```
bit_generate -w mydesign
```

### See Also

- ▶ [“Bitstream Generation Tcl Commands” on page 1907](#)

## bit\_list\_option

List bitgen options.

### Syntax

```
bit_list_option
```

### Example

```
bit_list_option
```

**See Also**

► [“Bitstream Generation Tcl Commands” on page 1907](#)

**bit\_set\_option**

Set bitgen options.

**Syntax**

```
bit_set_option {<key> <value> ...}
```

**Example**

```
bit_list_option
bit_set_option {enable_early_io_wakeup true ip_evaluation
false}
```

**See Also**

► [“Bitstream Generation Tcl Commands” on page 1907](#)

**Design Tcl Commands**

The **des** commands are used to read or write the Radiant unified design database (.udb) file and list and report netlist objects such as instance, net, or port. You can get these commands by using **help {des\_\*}**.

The following table provides a listing of all valid Radiant software design-related Tcl command options and describes option functionality.

**Table 39: Design Tcl Commands**

| Command                            | Description                                                                                                      |
|------------------------------------|------------------------------------------------------------------------------------------------------------------|
| <a href="#">des_get_ram_cells</a>  | Retrieves memory cells in the design that are implemented as either distributed RAM (LUTRAM) or block RAM (EBR). |
| <a href="#">des_get_ram_style</a>  | Returns the memory style (LUTRAM or EBR) of a specified RAM cell in the design.                                  |
| <a href="#">des_get_util_data</a>  | Return the required data provided/used in device/design.                                                         |
| <a href="#">des_list_attribute</a> | List design attributes.                                                                                          |
| <a href="#">des_list_instance</a>  | List instance.                                                                                                   |
| <a href="#">des_list_net</a>       | List all nets.                                                                                                   |
| <a href="#">des_list_port</a>      | List port.                                                                                                       |



**Table 39: Design Tcl Commands**

|                                             |                                           |
|---------------------------------------------|-------------------------------------------|
| <code>des_list_reference_udb</code>         | List reference udb(s) for increment flow. |
| <code>des_read_udb</code>                   | Read in a .udb file.                      |
| <code>des_reload_milestone</code>           | Reload milestone result.                  |
| <code>des_report</code>                     | Report design info.                       |
| <code>des_report_flow_status</code>         | Report design flow status.                |
| <code>des_report_instance</code>            | Report instance information.              |
| <code>des_report_net</code>                 | Report a net.                             |
| <code>des_report_operating_condition</code> | Report operating condition.               |
| <code>des_report_port</code>                | Report port information.                  |
| <code>des_set_attribute</code>              | Set design attributes.                    |
| <code>des_set_operating_condition</code>    | Change operating condition.               |
| <code>des_set_reference_udb</code>          | Set reference udb(s) for increment flow.  |
| <code>des_write_udb</code>                  | Write the design into a .udb file.        |

## des\_get\_ram\_cells

Retrieves memory cells in the design that are implemented as either distributed RAM (LUTRAM) or block RAM (EBR).

### Syntax

```
des_get_ram_cells -ramstyle <lutram|ebr>
```

### Arguments

- ▶ **-ramstyle**: Specifies the memory implementation style to filter the results.

Valid values:

- lutram: Distributed RAM (also known as LUTRAM or DPRAM)
- ebr: Embedded Block RAM (also known as EBR)

### Example

```
des_get_ram_cells -ramstyle lutram
Retrieves all memory cells implemented using distributed RAM
(LUTRAM).
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_get\_ram\_style

Returns the memory style (LUTRAM or EBR) of a specified RAM cell in the design.

## Syntax

```
des_get_ram_style <cellname>
```

## Arguments

- ▶ **cellname:** The name of the memory cell whose implementation style is to be queried.

## Example

```
des_get_ram_style cellname
```

Returns the memory style (either 'lutram' for distributed RAM or 'ebr' for block RAM) of the specified cell.

## See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

# des\_get\_util\_data

Returns the required resource provided/used in device/design.

## Syntax

```
des_get_util_data [-device] [-lut] [-reg] [-slice] [-dpram]
[-ripplelogic] [-ebr] [-dsp] [-pio] [-pll] [-gsr] [-osc]
```

## Arguments

- ▶ **-device:** Returns the resource data provided in the device (optional).
- ▶ **-lut:** Returns number of LUTs (optional).
- ▶ **-reg:** Returns number of REGs (optional).
- ▶ **-slice:** Return number of Slices (optional).
- ▶ **-dpram:** Returns number of DPRAMs (optional).
- ▶ **-ripplelogic:** Return number of slices used in carry chains (optional).
- ▶ **-ebr:** Return number of EBRs (optional).
- ▶ **-dsp:** Return number of DSPs (optional).
- ▶ **-pio:** Return number of PIOs (optional).
- ▶ **-pll:** Return number of PLLs (optional).
- ▶ **-gsr:** Return number of GSRs (optional).
- ▶ **-osc:** Return number of oscillators (optional).

## Example

```
des_get_util_data -pio
```

Return # of PIO instances used in the design.

```
des_get_util_data -device -pio
```

Return the # of PIOs provides in the device.

If the return value is -1, it means that the selected data type is not available in the device, or the data type has not been supported.

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

**des\_list\_attribute**

Reports design attributes.

**Syntax**

```
des_list_attribute
```

**Example**

```
des_list_attribute
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

**des\_list\_instance**

Commands to list specified instances.

**Syntax**

```
des_list_instance [<instances>]
```

**Arguments**

- ▶ **<instances>**: Only lists instances that match the pattern specified in <instances> (optional). If no pattern is specified, all instances will be listed.

**Example**

```
des_list_instance *CWDATA_c*
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_list\_net

Commands to list specified nets.

### Syntax

```
des_list_net [-clock] [-fanout <n>] [-lsort <method>]
[-lsize <n>] [<nets>]
```

### Arguments

- ▶ **-clock**: Lists clock nets only (optional).
- ▶ **-fanout <n>**: Lists nets with # of fanouts  $\geq n$  (optional).
- ▶ **-lsort <method>**: Choose sorting method: 0 - id; 1 - all pins; 2 - clk pins; 3 - global control pins; 4 - normal pins (optional). Defaults to sorting by id.
- ▶ **-lsize <size>**: Limits the number of listed nets to size. Defaults to showing all nets (optional).
- ▶ **<nets>**: Only lists net names that match the pattern specified in <nets> (optional).

### Example

```
des_list_net -fanout 10 -lsort 2 -lsize 10 *D0*
```

This command lists the first 10 nets that start with D0, have a fanout of at least 10, sorted by clk pins first.

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_list\_port

Commands to list specified ports.

### Syntax

```
des_list_port [<ports>]
```

### Arguments

- ▶ **<ports>**: Only lists instances that match the pattern specified in <ports> (optional). If no pattern is specified, all ports will be listed.

### Example

```
des_list_port *CWDATA_c*
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

**des\_list\_reference\_udb**

Lists reference udb(s) for incremental flow, if there's any.

**Syntax**

```
des_list_reference_udb
```

**Example**

```
des_list_reference_udb
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

**des\_read\_udb**

Commands to read database from udb file.

**Syntax**

```
des_read_udb [-logview <logical udb file>]  
[-phyview <physical udb file>] [<udb file>]
```

**Arguments**

- ▶ **-logview <logical udb file>**: Specifies the logical udb file name (optional).
- ▶ **-phyview <physical udb file>**: Specifies the physical udb file name (optional).
- ▶ **<udb file>**: Specifies the udb file name (optional).  
  
-logview, -phyview, and <udb file> options are mutually exclusive.  
  
If either -logview, -phyview, or both are specified, you cannot specify a udb file.

**Example**

```
des_read_udb -logview logic.udb -phyview phy.udb  
des_read_udb post_par.udb
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_reload\_milestone

Reloads milestone result.

### Syntax

```
des_reload_milestone [-force] [-inc] [-postsyn|-postmap|  
-postplc|-postrte|-postpar] <udb_name>
```

### Arguments

- ▶ **-force**: Forcibly opens the milestone (optional).
- ▶ **-inc**: Loads the milestone result incrementally (optional).
- ▶ **-postsyn**: Opens a post-synthesis milestone (optional).
- ▶ **-postmap**: Opens a post-map milestone (optional).
- ▶ **-postplc**: Opens a post-placement milestone (optional).
- ▶ **-postrte**: Opens a post-routing milestone (optional).
- ▶ **-postpar**: Opens a post-par milestone (optional).
- ▶ **<udb\_name>**: Milestone udb to open (required).

### Example

```
des_reload_milestone -postsyn -inc mydb_syn.udb
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_report

Reports design information.

### Syntax

```
des_report
```

### Example

```
des_report
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_report\_flow\_status

Reports design flow status.

### Syntax

```
des_report_flow_status
```

### Example

```
des_report_flow_status
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_report\_instance

Commands to report specified instances.

### Syntax

```
des_report_instance [<instances>]
```

### Arguments

- ▶ **<instances>**: Only reports instances that match the pattern specified in <instances> (optional).

### Example

```
des_report_instance *CWDATA_c*
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_report\_net

Commands to report specified nets.

### Syntax

```
des_list_net [-file <filename>] [<nets>]
```

### Arguments

- ▶ **-file <filename>**: Outputs results into <filename> (optional).
- ▶ **<nets>**: Only reports nets that match the pattern specified in <nets> (optional).

**Example**

```
des_report_net -file mynet.txt *CWDATA_c*
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

**des\_report\_operating\_condition**

Reports operating condition information.

**Syntax**

```
des_report_operating_condition
```

**Example**

```
des_report_operating_condition
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)

**des\_report\_port**

Commands to report specified ports.

**Syntax**

```
des_report_port [<port>]
```

**Arguments**

- ▶ **<ports>**: Only reports ports that match the pattern specified in <ports> (optional). If no pattern is specified, all ports are reported.

**Example**

```
des_report_port *CWDATA_c*
```

**See Also**

- ▶ [“Design Tcl Commands” on page 1908](#)



## des\_set\_attribute

Changes design attributes.

### Syntax

```
des_set_attribute [-impl_dir <name>]
```

### Arguments

- ▶ **-impl\_dir <name>**: Sets implementation directory to <name> (optional). Defaults to current directory otherwise.

### Example

```
des_set_attribute -impl_dir impl_1
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_set\_operating\_condition

Changes operating condition of device.

### Syntax

```
des_set_operating_condition [-temperature <temp>]  
[-speed_grade <speed_grade>]
```

### Arguments

- ▶ **-temperature <temp>**: Set device temperature to <temp> degrees Celsius (optional). Defaults to -1.
- ▶ **-speed\_grade <speed\_grade>**: Sets device speed grade to specified setting <speed\_grade> (optional)

### Example

```
des_set_operating_condition -temp 100 -speed_grade 9_High-  
Performance_1.0V
```

Sets temperature to 100 Celcius with High Performance speed grade.

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_set\_reference\_udb

Sets reference udb(s) for incremental flow.

### Syntax

```
des_set_reference_udb [-postsyn <postsyn_udb>]  
[-postmap <postmap_udb>][-postpar <postpar_udb>]  
[-pdc <pdc_file>] [-clean]
```

### Arguments

- ▶ **-postsyn <postsyn\_udb>**: Set post-synthesis reference udb file to <postsyn\_udb> (optional).
- ▶ **-postmap <postmap\_udb>**: Set post-map reference udb file to <postmap\_udb> (optional).
- ▶ **-postpar <postpar\_udb>**: Set post-par reference udb file to <postpar\_udb> (optional).
- ▶ **-pdc <pdc\_file>**: Set reference pdc file to <pdc\_file> (optional).
- ▶ **-clean**: Reset all reference udb settings (optional).

### Example

```
des_set_reference_udb -postsyn mydb_syn.udb -postpar  
mydb_par.udb -pdc mypdc.pdc
```

Set post-synthesis reference udb to mydb\_syn.udb, post-par udb to mydb\_par.udb and pdc file to mypdc.pdc.

```
des_set_reference_udb -clean
```

Removes any reference udb settings.

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## des\_write\_udb

Commands to write udb database file.

### Syntax

```
des_write_udb [-w] [-logview] [-phyview] [<udb file>]
```

### Arguments

- ▶ **-w**: Overwrite existing file (optional).
- ▶ **-logview**: Output logical view (optional).
- ▶ **-phyview**: Output physical view (optional).

- ▶ **<udb file>**: This option specifies the udb file name (optional).  
-logview, -phyview, and <udb file> options are mutually exclusive.

### Example

```
des_write_udb -logview logic.udb -phyview phy.udb
des_write_udb -w post_par.udb
```

### See Also

- ▶ [“Design Tcl Commands” on page 1908](#)

## Device Tcl Commands

The **dev** commands are used re used to access or report device information. You can get these commands by using **help {dev\_\*}**.

The following table provides a listing of all valid Radiant software device-related Tcl command options and describes option functionality.

**Table 40: Device Tcl Commands**

| Command                    | Description             |
|----------------------------|-------------------------|
| <a href="#">dev_report</a> | Report the device info. |

### dev\_report

Report device information.

#### Syntax

```
dev_report
```

#### Arguments

### Example

```
dev_report
```

### See Also

- ▶ [“Device Tcl Commands” on page 1919](#)

# Technology Mapping Tcl Commands

The **map** commands are used to map or transfer a design from a logical view to a physical view.

## Radiant Software Technology Mapping Tcl Command Descriptions

The following table provides a listing of all valid Radiant software mapping-related Tcl command options and describes option functionality.

**Table 41: Technology Mapping Tcl Commands**

| Command                         | Description       |
|---------------------------------|-------------------|
| <a href="#">map_list_option</a> | List map options. |
| <a href="#">map_run</a>         | Run map tool.     |
| <a href="#">map_set_option</a>  | Set map options.  |

## map\_list\_option

List map options.

### Syntax

```
map_list_option
```

### Example

```
map_list_option
```

### See Also

► [“Technology Mapping Tcl Commands” on page 1920](#)

## map\_run

Run the map tool.

### Syntax

```
map_run
```

### Example

```
map_run
```

### See Also

► [“Technology Mapping Tcl Commands” on page 1920](#)

## map\_set\_option

Set the map options.

### Syntax

```
map_set_option {<key> <value> ...}
```

### Example

```
map_list_option
map_set_option {infer_gsr true pdc_file myfile.pdc}
```

### See Also

► [“Technology Mapping Tcl Commands” on page 1920](#)

## Placement Tcl Commands

The **plc** commands are used for automatic/interactive placement.

### Placement Tcl Command Descriptions

The following table provides a listing of all valid Radiant software placement-related Tcl command options and describes option functionality.

**Table 42: Placement Tcl Commands**

| Command                                      | Description                              |
|----------------------------------------------|------------------------------------------|
| <a href="#">plc_list_option</a>              | List placement options.                  |
| <a href="#">plc_output_instance_location</a> | Output instance locations in LDC format. |
| <a href="#">plc_report</a>                   | Report placement information.            |
| <a href="#">plc_run</a>                      | Run placement tool.                      |
| <a href="#">plc_set_option</a>               | Set placement options.                   |

## plc\_list\_option

Lists placement options.

### Syntax

```
plc_list_option
```

### Example

```
plc_list_option
```

**See Also**

- ▶ [“Placement Tcl Commands” on page 1921](#)

## plc\_output\_instance\_location

Outputs instance locations in LDC format.

**Syntax**

```
plc_output_instance_location [-all] [-pio] [-dsp] [-ebr] [-slice] [-all_constraint] -file <filename> [<pattern>]
```

**Arguments**

- ▶ **-all**: Selects all instance types to output (optional).
- ▶ **-pio**: Selects PIO instances to output (optional).
- ▶ **-dsp**: Select DSP instances to output (optional).
- ▶ **-ebr**: Select EBR instances to output (optional).
- ▶ **-slice**: Select slices to output (optional).
- ▶ **-all\_constraint**: Select all constraint instances to output (optional).
- ▶ **-file <filename>**: Specify output file to write to (required).
- ▶ **-<pattern>**: Only output instances that match <pattern> (optional).

**Example**

```
plc_output_instance_location -dsp -file newfile.ldc CW*
```

This example outputs DSP instances that start with CW into a new constraint file called **newfile.ldc**.

**See Also**

- ▶ [“Placement Tcl Commands” on page 1921](#)

## plc\_report

Reports placement information such as sites, comps, bounding box, and estimated wiring segments.

**Syntax**

```
plc_report
```

**Example**

```
plc_report
```

**See Also**

▶ [“Placement Tcl Commands” on page 1921](#)

**plc\_run**

Runs placement tool.

**Syntax**

```
plc_run
```

**Example**

```
plc_run
```

**See Also**

▶ [“Placement Tcl Commands” on page 1921](#)

**plc\_set\_option**

Sets placement options.

**Syntax**

```
plc_set_option {<key> <value> ...}
```

**Example**

```
plc_list_option  
plc_set_option {disable_timing_driven true path_based_placement  
on}
```

**See Also**

▶ [“Placement Tcl Commands” on page 1921](#)

## Routing Tcl Commands

The **rte** commands are used for automatic/interactive routing.

**Routing Tcl Command Descriptions**

The following table provides a listing of all valid Radiant software routing-related Tcl command options and describes option functionality.

**Table 43: Routing Tcl Commands**

| Command                         | Description             |
|---------------------------------|-------------------------|
| <a href="#">rte_list_option</a> | List routing options.   |
| <a href="#">rte_report</a>      | Report routing results. |
| <a href="#">rte_run</a>         | Run the routing tool.   |
| <a href="#">rte_set_option</a>  | Set routing options.    |

## **rte\_list\_option**

List routing options.

### **Syntax**

```
rte_list_option
```

### **Example**

```
rte_list_option
```

### **See Also**

▶ [“Routing Tcl Commands” on page 1923](#)

## **rte\_report**

Report routing results.

### **Syntax**

```
rte_report
```

### **Arguments**

▶ **-net**: Report the nets (optional).

### **Example**

```
rte_report
```

### **See Also**

▶ [“Routing Tcl Commands” on page 1923](#)



## rte\_run

Run the routing tool.

### Syntax

```
rte_run
```

### Example

```
rte_run
```

### See Also

► [“Routing Tcl Commands” on page 1923](#)

## rte\_set\_option

Set routing options.

### Syntax

```
rte_set_option {<key value> ... }
```

### Example

```
rte_list_option  
rte_set_option {disable_timing_driven true}
```

### See Also

[“Routing Tcl Commands” on page 1923](#)

## Timing Analysis Tcl Commands

The **sta** commands are used to run timing analysis interactively, with two major categories, namely **sta\_get** and **sta\_report**. The **sta\_get** command returns the value, which can be used in other sta commands or printed out to the standard output. The **sta\_report** command sends the information to the standard output.

You can get these commands by using **help {sta\_\*}**.

For a complete discussion on interactive static timing analysis using the TCL commands, refer to the [FPGA-AN-02091, Interactive Timing Analysis Using TCL in Lattice Radiant Design Software](#) application note.

As an added reference, you may also refer to the [FPGA-AN-02059, Lattice Radiant Timing Constraints Methodology](#) application note, which provides guidelines and best practices for defining and managing timing constraints in Radiant.

The following table provides a listing of all valid Radiant software timing analysis-related Tcl command options and describes option functionality.

**Table 44: Timing Analysis Tcl Commands**

| Command                                  | Description                                                     |
|------------------------------------------|-----------------------------------------------------------------|
| <a href="#">sta_get_clocks</a>           | Get a list of clocks that satisfy the name.                     |
| <a href="#">sta_get_coverage</a>         | Get the timing coverage for connections.                        |
| <a href="#">sta_get_info</a>             | Get information about a clock or a terminal (port/pin).         |
| <a href="#">sta_get_paths</a>            | Collect detailed paths for query.                               |
| <a href="#">sta_get_slack</a>            | Get the total negative, worst or terminal slack for the design. |
| <a href="#">sta_get_terms</a>            | Get a list of ports and pins that satisfy the name.             |
| <a href="#">sta_path_info</a>            | Extract data from a given path.                                 |
| <a href="#">sta_report_clocks</a>        | Report on a clock or clocks.                                    |
| <a href="#">sta_report_constraints</a>   | List timing constraints.                                        |
| <a href="#">sta_report_timing</a>        | Report detailed or summary timing.                              |
| <a href="#">sta_report_unconstrained</a> | List unconstrained ports, pins, or nets.                        |
| <a href="#">rte_set_option</a>           | Change the style of the timing report.                          |

#### Note

- ▶ To prevent errors, use `des_read_udb` command first to read the PAR UDB before performing timing analysis.
- ▶ If you do not change the default PAR Timing Strategy (Speed Grade for Hold Analysis) and the Junction Temperature value in Device Constraint Editor, there may be differences between the Radiant GUI and the TCL results.
- ▶ In the Radiant GUI Timing Analysis report, the Hold Analysis of STA uses Speed Grade "m" and minimum temperature for the operating condition (for example, 0 °C for commercial and –40 °C for industrial). In the TCL timing analysis, on the other hand, the Hold Analysis of STA uses the speed grade of the device and the maximum temperature for the operating condition (for example, 85 °C for commercial and 100 °C for industrial).

## sta\_get\_clocks

Commands to list requested clocks.

### Syntax

```
sta_get_clocks [<name>]
```

### Arguments

- ▶ **<name>:** Only list clock names that match the pattern specified in <name> (Required)

### Example

```
sta_get_clocks clk *
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_get\_coverage

Commands to list specified instances.

### Syntax

```
sta_get_coverage
```

### Example

```
sta_get_coverage
```

**See Also**

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

**sta\_get\_info**

Commands to get information about clocks or terminals.

**Syntax**

```
sta_get_info [-clock <clock name>] [-waveform]
[-period] [-duty_cycle] [-terminal <terminal name>]
[-isclockpin] [-isinput] [-isoutput] [-net] [-cell]
[-termClocks]
```

**Arguments**

- ▶ **-clock <clock name>**: Name of clock whose info is requested <clock name> (optional)
- ▶ **-waveform**: requests waveform of clock (optional)
- ▶ **-period**: period of clock will be returned (optional)
- ▶ **-duty\_cycle**: duty cycle will be returned (optional)
- ▶ **-terminal <terminal name>**: Only report on terminal that match the pattern specified in <terminal name> (optional)
- ▶ **-isclockpin**: Returns true if the terminal is a clock pin (optional)
- ▶ **-isinput**: Returns true if the terminal is an input (optional)
- ▶ **-isoutput**: Returns true if the terminal is an output (optional)
- ▶ **-net**: Net connected to terminal (optional)
- ▶ **-cell**: Parent cell of terminal (optional)
- ▶ **-termClocks**: User defined clocks that arrive at the terminal

Option -clock is mutually exclusive with options -terminal, -isclockpin, -isinput, -isoutput, -net, -cell, and -termClocks.

Option -terminal is mutually exclusive with options -waveform, -period, and -duty\_cycle. (optional)

**Example**

```
sta_get_info -clock clk1 -duty_cycle
sta_get_info -terminal abc/LSR -net
```

**See Also**

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_get\_paths

Change operating condition of device.

### Syntax

```
sta_get_paths [-n <number>] [-endpoints]
[-from <ports/pins>]
[-from_clock <clocks>] [to <ports/pins>]
[-to_clock <clocks>] [-hold] [-summary]
```

### Arguments

- ▶ **-n <number>**: The total number of paths reported is up to <number> paths (optional)
- ▶ **-endpoints**: Report the endpoints only (optional)
- ▶ **-from <ports/pins>**: The from pins of the report are given by <ports/pins> (optional)
- ▶ **-from\_clock <clocks>**: The launch clock of the report are given by <ports/pins> (optional)
- ▶ **-to <ports/pins>**: The to pins of the report are given by <ports/pins> (optional)
- ▶ **-to\_clock <clocks>**: The latch clocks of the report are given by <ports/pins> (optional)
- ▶ **-hold**: Report hold timing paths (optional)
- ▶ **-summary**: Report setup and hold timing errors and total negative slack at the current speed grade (optional)

### Example

```
sta_get_paths -n 5 -from abcd/Q0
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_get\_slack

Command to report slack of design or terminal.

### Syntax

```
sta_get_slack [-tns] [-worst] [-hold] [-terminal <terminal>]
```

### Arguments

- ▶ **-tns**: Get the total negative slack of the design (optional)
- ▶ **-worst**: Get the worst slack of the design (optional)
- ▶ **-hold**: Get the hold slack (optional)

- ▶ **-terminal <terminal>**: Get the slack of the terminal specified by <terminal> (optional)  
Option -terminal is mutually exclusive with the options -tns and -worst

### Example

```
sta_get_slack -terminal abcd/e -hold
sta_get_slack -tns
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_get\_terms

Command to get a list of terms.

### Syntax

```
sta_get_terms [-ports | -pins] [<name of ports or pins>]
```

### Arguments

- ▶ **-ports**: The name represents ports (optional)
- ▶ **-pins**: The name represents pins (optional)
- ▶ **<name>**: name or ports or pins. Option -ports and -pins are mutually exclusive. (required)

### Example

```
sta_get_terms *
sta_get_terms -ports *
sta_get_terms -pins */LSR
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_path\_info

Get information on a given path.

### Syntax

```
sta_path_info [-path <path>] [-slack] [-constraint]
[-skew] [-launch_clock] [-latch_clock] [-levels]
```

### Arguments

- ▶ **-path**: A path object obtained with sta\_get\_paths. (required)

- ▶ **-slack:** Return the slack of the path. (optional)
- ▶ **-constraint:** Returns the value of the constraint that must be met for the given path (optional).
- ▶ **-skew:** Returns the clock skew (optional).
- ▶ **-launch\_clock:** Return the clock launching the data at the start point (optional).
- ▶ **-latch\_clock:** Return the clock capturing the data at the endpoint (optional).
- ▶ **-levels:** Return number of logic levels (optional).

### Example

```
sta_path_info
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_report\_clocks

Report design clocks.

### Syntax

```
sta_report_clocks [-clocks <clocks>] [-file <file name>] [-app]
```

### Arguments

- ▶ **-clocks <clocks>:** Report clocks that are indicated by <clocks> (optional)
- ▶ **-file <file name>:** Name of file that report is to be redirected to (optional)
- ▶ **-app:** Append report to end of file (optional)

### Example

```
sta_report_clocks -clocks cl* -file abc -app
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_report\_constraints

Command to list timing constraints.

### Syntax

```
sta_report_constraints [-file <file name>] [-app]
```

### Arguments

- ▶ **-file <file name>**: Name of file that report is to be redirected to <file name> (optional)
- ▶ **-app**: Append the report to an existing file (optional)

### Example

```
sta_report_constraints
sta_report_constraints -file abc -app
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_report\_timing

Change operating condition of device.

### Syntax

```
sta_report_timing [-n <number>] [-endpoints]
[-from <ports/pins>] [-from_clock <clocks>]
[to <ports/pins>] [-to_clock <clocks>] [-hold]
[-summary] [-file <file name>] [-app]
```

### Arguments

- ▶ **-n <number>**: The total number of paths reported is up to <number> paths (optional).
- ▶ **-endpoints**: Report the endpoints only (optional)
- ▶ **-from <ports/pins>**: The from pins of the report are given by <ports/pins> (optional)
- ▶ **-from\_clock <clocks>**: The launch clock of the report are given by <ports/pins> (optional)
- ▶ **-to <ports/pins>**: The pins of the report are given by <ports/pins> (optional)
- ▶ **-to\_clock <clocks>**: The latch clocks of the report are given by <ports/pins> (optional)
- ▶ **-hold**: Report hold timing paths (optional)
- ▶ **-summary**: Report setup and hold timing errors and total negative slack at the current speed grade (optional)



- ▶ **-file <file name>**: Redirect the report to the file <file name> (optional)
- ▶ **-app**: Append report to the end of the file (optional)

### Example

```
sta_report_timing -n 5 -from abcd/Q0
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## sta\_report\_unconstrained

Command to report unconstrained terminals.

### Syntax

```
sta_report_unconstrained [-n <number>] [-start] [-end]  
[-io] [-clock_nets] [-file <file name>] [-app]
```

### Arguments

- ▶ **-n <number>**: Report up to the number specified in <number> (optional)
- ▶ **-start**: Report unconstrained timing start point pins (optional)
- ▶ **-end**: Report unconstrained timing endpoint pins (optional)
- ▶ **-io**: Report unconstrained IOs (optional)
- ▶ **-clock\_nets**: Report clock nets without a clock definition (optional)
- ▶ **-file**: File to which the report is redirected (optional)
- ▶ **-app**: Append report at the end of the file (optional)

### Example

```
sta_report_unconstrained -file abc -start -app  
sta_report_unconstrained
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

# Other Commands

## Design Object Tcl Commands

Design objects can be referred to in the SDC as a single object, or as a collection of objects. Single objects must be referred to as a collection of a single object. The current implementation of the SDC commands allows only single objects in the collection. The exception to this are the `all_*` commands.

The `get_info` commands are used for constraints to return a single object, or a collection of objects. You can get this command by using `help {get_*}`.

### Radiant Software Design Object Tcl Command Descriptions

The following table provides a listing of all valid Radiant software design object-related Tcl command options and describes option functionality.

In the example below, *<target name>* is a regular expression that matches one object only.

## Clock Object

| SDC Collection          | Description                                        |
|-------------------------|----------------------------------------------------|
| <code>get_clocks</code> | Return clock objects.                              |
| <code>all_clocks</code> | Return a list of all clocks in the current design. |

This section displays the usage information of the commands:

### get\_clocks

```
% help get_clocks
get_clocks - Commands to get clocks
Usage:
    get_clocks [-regexp] [-nocase] <patterns>
```

### all\_clocks

```
% help all_clocks
all_clocks - Commands to get a list of all clocks in the
current design
Usage:
    all_clocks
```

## Radiant Software Clock Object Tcl Commands Example

This section illustrates and describes a few samples of Radiant clock object Tcl commands.

### Example 1

*<target name>* is the name of the clock. Clock is either given a name or gets its name from the port/net on which it is defined.

```
get_clocks <target name>
[get_clocks clock_fast]

[all_clocks]
```

## Port Object

| SDC Collection                | Description                                              |
|-------------------------------|----------------------------------------------------------|
| <a href="#">get_port_info</a> | Return port object information.                          |
| <a href="#">get_ports</a>     | Return port objects.                                     |
| <a href="#">all_inputs</a>    | Return a list of all input ports in the current design.  |
| <a href="#">all_outputs</a>   | Return a list of all output ports in the current design. |

## get\_port\_info

Commands to return port info.

### Syntax

```
get_port_info [-name] [-is_inout] [-is_input] [-is_output]
<port_object>
```

### Arguments

- ▶ **-name:** This option indicates that the command will output the name of the specified port (optional).
- ▶ **-is\_inout:** This option indicates that the command will output if the specified port is an inout port (optional).

- ▶ **-is\_input:** This option indicates that the command will output if the specified port is an input port (optional).
- ▶ **-is\_output:** This option indicates that the command will output if the specified port is an output port (optional).
- ▶ **port\_object:** This value specifies one port object whose information will be output.

### Example

The following example outputs whether port 'seg\_out[0]' is an output port:

```
get_port_info -is_output [get_ports {seg_out[0]}]
```

### See Also

- ▶ [“Port Object” on page 1935](#)

## get\_ports

Commands to get a list of ports in the current design.

### Syntax

```
get_ports [-regexp] [-nocase] [<patterns>]
```

### Arguments

- ▶ **-regexp:** This option indicates that patterns are full regular expressions (optional).
- ▶ **-nocase:** This option indicates that matching is case-insensitive (optional).
- ▶ **patterns:** This value specifies the patterns against which net names are matched (optional). If no pattern is specified, set '\*' as default.

### Example

```
get_ports -nocase -regexp clk\[0-9\]+
```

### See Also

- ▶ [“Port Object” on page 1935](#)

## all\_inputs

Commands to get a list of all input ports in the current design.

### Syntax

```
all_inputs
```

**Example**

The following example returns all input ports in the current design:

```
all_inputs
```

**See Also**

► [“Port Object” on page 1935](#)

**all\_outputs**

Commands to get a list of all output ports in the current design.

**Syntax**

```
all_outputs
```

**Example**

The following example returns all output ports in the current design:

```
all_outputs
```

**See Also**

► [“Port Object” on page 1935](#)

**Cell Object**

| SDC Collection                | Description              |
|-------------------------------|--------------------------|
| <a href="#">get_cell_info</a> | Return cell information. |
| <a href="#">get_cells</a>     | Return instance objects. |

This section displays the usage information of the commands:

**get\_cell\_info**

```
% help get_cell_info
get_cell_info - Commands to return cell info
Usage:
    get_cell_info [-name] [-inpins] [-outpins] [-pins]
    <cell_object>
```

## get\_cells

```
% help get_cells
get_cells - Commands to get instances
Usage:
    get_cells [-hierarchical] [-regexp] [-nocase] [-of_objects
<objects>] <patterns>
```

### Radiant Software Cell Object Tcl Commands Example

This section illustrates and describes a few samples of Radiant cell object Tcl commands.

#### Example 1

The command returns collection of a design instance that matches *<target name>*.

```
[get_cells <target name>]
[get_cells {reg6 reg7}]
```

## Net Object

| SDC Collection               | Description             |
|------------------------------|-------------------------|
| <a href="#">get_net_info</a> | Return net information. |
| <a href="#">get_nets</a>     | Return net objects.     |

## get\_net\_info

Commands to return net info.

### Syntax

```
get_net_info [-name] [-pin] <net_object>
```

### Arguments

- ▶ **-name:** This option indicates that the command will output the name of the specified net (optional).
- ▶ **-pin:** This option indicates that the command will list pin names of specified net (optional).
- ▶ **net\_object:** This value specifies one net object whose information will be listed.

### Example

The following example lists pin names of net 'CLK':

```
get_net_info -pin [get_nets CLK]
```

### See Also

- ▶ [“Net Object” on page 1938](#)

## get\_nets

Commands to get a list of nets in the current design.

### Syntax

```
get_nets [-hierarchical] [-regexp] [-nocase] [-of_objects  
<objects>] [<patterns>]
```

### Arguments

- ▶ **-hierarchical:** This option indicates that the command will get nets from all levels of the design hierarchy (optional). Without this argument, the command will only get nets from the top of the design hierarchy.
- ▶ **-regexp:** This option indicates that patterns are full regular expressions (optional).
- ▶ **-nocase:** This option indicates that matching is case-insensitive (optional).
- ▶ **-of\_objects objects:** This option indicates that the command will get nets of these objects (PINs or INSTANCES) (optional). When this argument is effective, other arguments will not work.
- ▶ **patterns:** This value specifies the patterns against which net names are matched (optional). If no pattern is specified, set '\*' as default.

### Example

```
get_nets -hierarchical -nocase -regexp clk\[0-9]+  
get_nets -of_objects [get_pins {i*/*}]
```

### See Also

- ▶ [“Net Object” on page 1938](#)

## Pin Object

| SDC Collection               | Description             |
|------------------------------|-------------------------|
| <a href="#">get_pin_info</a> | Return pin objects.     |
| <a href="#">get_pins</a>     | Return pin information. |

### get\_pin\_info

Commands to return pin info.

#### Syntax

```
get_pin_info [-name] [-is_clock] [-is_input] [-is_output]
[-net] [-parent_cell] <pin_object>
```

#### Arguments

- ▶ **-name:** This option indicates that the command will output the name of the specified pin (optional).
- ▶ **-is\_clock:** This option indicates that the command will output if the specified pin is a clock pin (optional).
- ▶ **-is\_input:** This option indicates that the command will output if the specified pin is an input pin (optional).
- ▶ **-is\_output:** This option indicates that the command will output if the specified pin is an output pin (optional).
- ▶ **-net:** This option indicates that the command will output the net name of the specified pin (optional).
- ▶ **-parent\_cell:** This option indicates that the command will output the instance name of the specified pin (optional).
- ▶ **pin\_object:** This value specifies one pin object whose information will be output.

#### Example

The following example outputs instance name of pin 'fifo\_inst/state\_0':

```
get_pin_info -parent_cell [get_pins fifo_inst/state_0]
```

#### See Also

- ▶ [“Pin Object” on page 1940](#)

### get\_pins

Commands to get a list of pins in the current design.



## Syntax

```
get_pins [-hierarchical] [-regexp] [-nocase]  
[-of_objects <objects>] [<patterns>]
```

## Arguments

- ▶ **-hierarchical:** This option indicates that the command will get pins from all levels of the design hierarchy. Without this argument, the command will only get pins from the top of the design hierarchy (optional).
- ▶ **-regexp:** This option indicates that patterns are full regular expressions (optional).
- ▶ **-nocase:** This option indicates that matching is case-insensitive (optional).
- ▶ **-of\_objects objects:** This option indicates that the command will get pins of these objects (NETs or INSTANCES). When this argument is effective, other arguments won't work (optional).
- ▶ **patterns:** This value specifies the patterns against which net names are matched. If no pattern is specified, set '\*' as default (optional).

## Example

```
get_pins -hierarchical -nocase -regexp clk\[0-9]+  
get_pins -of_objects [get_nets {clk*}]
```

## See Also

- ▶ [“Pin Object” on page 1940](#)

## Wildcard Support

Multiple wildcard (\*) is supported. In addition, the wildcard should be at the end or beginning of the object name string. For example:

ab\* matches abc, ab, abdefg, etc.

\*bc matches abc, bbc, debc, etc.

---

## Note

1. Wildcard \* can be used in any position of object name such as a\*, \*b, a\*b etc.
  2. Wildcard \* cannot cross hierarchical separator /. For example get\_cells sub1/\* only returns sub1/sub2 and does not return sub1/sub2/sub1 or sub1/sub2/sub1/sub2.
  3. When -hierarchical is set, it will search all levels of the design hierarchy starting at the current instance.
-

# Engineering Change Order Tcl Commands

This section provides Engineering Change Order (ECO) extended Tcl command syntax, command options, and usage examples.

## ECO Tcl Command Descriptions

The following table provides a listing of all valid Radiant software ECO-related Tcl command options and describes option functionality.

**Table 45: ECO Tcl Commands**

| Command                           | Description                    |
|-----------------------------------|--------------------------------|
| <a href="#">eco_config_block</a>  | Config general IP.             |
| <a href="#">eco_config_memory</a> | Update memory initial value.   |
| <a href="#">eco_config_sysio</a>  | Config sysio setting.          |
| <a href="#">eco_save_design</a>   | Save design in memory to disk. |

## eco\_config\_block

Configures general IP.

### Syntax

```
eco_config_block -comp <comp_name> (<key=value>)..
```

### Arguments

- ▶ **-comp <comp\_name>**: Specifies the IP instance name.
- ▶ **(<key=value>)...**: Specifies attribute key and value.

### Example

```
eco_config_ip -comp DPHY1 {"Speed Select"="2.5Gbps"}
```

### See Also

- ▶ [“Engineering Change Order Tcl Commands” on page 1942](#)

## eco\_config\_memory

Updates memory initial value.

### Syntax

```
eco_config_memory -mem_id <memory_id> (-init_file <mem_file> -
format HEX|BIN|ADDR) | -all_0 | -all_1
```

### Arguments

- ▶ **-mem\_id**: Specifies the memory ID.
- ▶ **-init\_file**: Specifies the memory file path.
- ▶ **-format**: Specifies memory file format. The valid format is HEX, BIN or ADDR.
- ▶ **-all\_0**: Config memory all data to zero.
- ▶ **-all\_1**: Config memory all data to 1. Option '-init\_file' '-all\_0' and '-all\_1' are mutually exclusive.

### Example

```
eco_config_memory -mem_id {top} -all_0
eco_config_memory -mem_id {ram_dq} -all_1
eco_config_mem -mem_id {mem} -init_file {D:/mem/init_hex.mem} -
format HEX
eco_config_memory -mem_id
{large_ram_inst.lscclram_inst.genblk1.LRAM_0.LRAM_0.LRAM_inst}
-init_file {D:/memory/lram_eco/mem.bin} -format BIN
```

### See Also

- ▶ [“Engineering Change Order Tcl Commands” on page 1942](#)

## eco\_config\_sysio

Config sysio setting.

### Syntax

```
eco_config_sysio -comp <comp_name> (<key=value>)...
```

### Arguments

- ▶ **-comp <comp\_name>**: Specifies the instance name.
- ▶ **(<key=value>)...**: Specifies one or more sysio key and value settings.

**Example**

```
eco_config_sysio -comp {c[0]}  
{diffdrive=NA;diffresistor=OFF;diff_invert=NA;drive=8;  
early_io=ON;glitchfilter=OFF;hysteresis=NA;opendrain=OFF;  
pullmode=NONE;slewrates=LOW;termination=OFF;vref=OFF}  
eco_config_sysio -comp {c[1]}  
{diffdrive=NA;diffresistor=OFF;diff_invert=NA;drive=50RS}
```

**See Also**

- ▶ [“Engineering Change Order Tcl Commands” on page 1942](#)

**eco\_save\_design**

Saves current design to disk.

**Syntax**

```
eco_save_design [-udb <udb_file>]
```

**Arguments**

- ▶ **-udb <udb\_file>**: Specifies the output udb file (optional).

**Example**

```
eco_save_design -udb eco.udb  
eco_save_design
```

**See Also**

- ▶ [“Engineering Change Order Tcl Commands” on page 1942](#)

## sta\_set\_option

Commands to read database from udb file.

### Syntax

```
sta_set_option [-name <logical or physical>] [-worst_delay]
```

### Arguments

- ▶ **-name <logical or physical>**: This option controls the name used in reports (optional)
- ▶ **-worst\_delay**: This option activates mixed temperature delay data (optional)

### Example

```
sta_set_option -name physical  
sta_set_option -worst_delay
```

### See Also

- ▶ [“Timing Analysis Tcl Commands” on page 1925](#)

## Revision History

The following table gives the revision history for this document.

| Date       | Version                                     | Description                                                 |
|------------|---------------------------------------------|-------------------------------------------------------------|
| 04/06/2026 | 2025.2.1                                    | Updates for Radiant 2025.2.1 software.                      |
| 12/11/2025 | 2025.2                                      | Updates for Radiant 2025.2 software.                        |
| 10/10/2025 | 2025.1.1                                    | Updates for Radiant 2025.1.1 software.                      |
| 06/26/2025 | 2025.1                                      | Updates for Radiant 2025.1 software.                        |
| 03/31/2025 | 2024.2.1                                    | Updates for Radiant 2024.2.1 software.                      |
| 12/20/2024 | 2024.2                                      | Updates for Radiant 2024.2 software.                        |
| 09/23/2024 | 2024.1.1                                    | Updates for Radiant 2024.1.1 software.                      |
| 06/28/2024 | 2024.1                                      | Updates for Radiant 2024.1 software.                        |
| 03/29/2024 | 2023.2.1                                    | Updates for Radiant 2023.2.1 software.                      |
| 11/27/2023 | 2023.2                                      | Updates for Radiant 2023.2 software.                        |
| 06/26/2023 | 2023.1                                      | Updates for Radiant 2023.1 software.                        |
| 03/13/2023 | 2022.1.1                                    | Updates for Radiant 2022.1.1 software.                      |
| 11/28/2022 | 2022.1                                      | Updates for Radiant 2022.1 software.                        |
| 06/23/2022 | 3.2                                         | Updates for Radiant 3.2 software.                           |
| 05/23/2022 | 3.1.1<br>MachXO5<br>-NX<br>Device<br>Update | Updates for Lattice Radiant 3.1.1 MachXO5-NX Device Update. |
| 03/17/2022 | 3.1.1                                       | Updates for Radiant 3.1.1 software.                         |
| 12/13/2021 | 3.1                                         | Updates for Radiant 3.1 software.                           |

| Date       | Version | Description                           |
|------------|---------|---------------------------------------|
| 06/14/2021 | 3.0     | Updates for Radiant 3.0 software.     |
| 03/31/2021 | 2.2.1   | Updates for Radiant 2.2.1 software.   |
| 11/05/2020 | 2.2     | Updates for Radiant 2.2 software.     |
| 06/12/2020 | 2.1     | Updates for Radiant 2.1 software.     |
| 02/25/2020 | 2.0 SP1 | Updates for Radiant 2.0 SP1 software. |
| 12/04/2019 | 2.0     | Updates for Radiant 2.0 software.     |
| 03/29/2019 | 1.1     | Updates for Radiant 1.1 software.     |
| 02/13/2018 | 1.0     | Initial Release.                      |