



PCB Layout Recommendations for BGA Packages

Technical Note

FPGA-TN-02024-5.7

September 2026

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS, with all faults, and all associated risk is the responsibility entirely of the Buyer. The information provided herein is for informational purposes only and may contain technical inaccuracies or omissions, and may be otherwise rendered inaccurate for many reasons, and Lattice assumes no obligation to update or otherwise correct or revise this information. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. LATTICE PRODUCTS AND SERVICES ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS, OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING ANY APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, BUYER MUST TAKE PRUDENT STEPS TO PROTECT AGAINST PRODUCT AND SERVICE FAILURES, INCLUDING PROVIDING APPROPRIATE REDUNDANCIES, FAIL-SAFE FEATURES, AND/OR SHUT-DOWN MECHANISMS. LATTICE EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Contents

Contents.....	3
Figures.....	5
Tables.....	7
Abbreviations in This Document	8
1. Introduction.....	9
2. Lattice BGA Package Types	10
3. BGA Board Layout Recommendations.....	11
4. BGA Breakout and Routing Examples	15
4.1. caBGA Breakout Examples	17
4.1.1. 121-Ball caBGA Breakout Example	17
4.1.2. 196-Ball caBGA Breakout Example	18
4.1.3. 256-Ball caBGA Breakout Example (MachXO).....	19
4.1.4. 256-Ball caBGA Breakout Example (MachXO3).....	21
4.1.5. 332-Ball caBGA Breakout Example	22
4.1.6. 324-Ball caBGA Breakout Example	23
4.1.7. 381-Ball caBGA Breakout and Routing Example	24
4.1.8. 400-Ball caBGA Breakout Example	25
4.1.9. 484-Ball caBGA Breakout Example	26
4.1.10. 554-Ball caBGA Breakout and Routing Example	27
4.1.11. 756-Ball caBGA Breakout and Routing Example	28
4.2. csBGA Breakout and Routing Examples	29
4.2.1. 64-Ball csBGA Breakout and Routing Example.....	29
4.2.2. 100-Ball csBGA Breakout and Routing Examples	30
4.2.3. 132-Ball csBGA Breakout Examples	31
4.2.4. 144-Ball csBGA Breakout Examples	32
4.2.5. 328-Ball csBGA Breakout and Routing Example.....	34
4.3. ckfBGA/ctfBGA Breakout Example	35
4.3.1. 80-Ball ckfBGA/ctfBGA Breakout Example.....	35
4.4. csfBGA Breakout Examples	36
4.4.1. 81-Ball csfBGA Breakout Example	36
4.4.2. 121-Ball csfBGA Breakout Example	37
4.4.3. 256-Ball csfBGA Breakout Example	38
4.4.4. 285-Ball csfBGA Breakout and Routing Example.....	39
4.4.5. 289-Ball csBGA Breakout Example	40
4.4.6. 324-Ball csfBGA Breakout Example	41
4.5. fcBGA Breakout Example	42
4.5.1. 672-Ball fcBGA Breakout Example	42
4.5.2. 676-Ball fcBGA Breakout Example	43
4.5.3. 1156-Ball fcBGA Breakout Example	44
4.6. FOWLP BGA Breakout Example.....	45
4.6.1. 256-Ball FOWLP Breakout Example	45
4.6.2. 410-FOWLP Breakout Example.....	46
4.7. ftBGA Breakout Example	47
4.7.1. 237-Ball ftBGA Breakout Example	47
4.8. ucBGA Breakout and Routing Examples	48
4.8.1. 64-Ball ucBGA Breakout and Routing Example	48
4.8.2. 64-Ball ucfBGA Breakout and Routing Example	49
4.9. WLCSP Breakout Examples	50
4.9.1. 16-Bump WLCSP Breakout Example	50
4.9.2. 25-Bump WLCSP Breakout and Routing Example 1	51
4.9.3. 25-Bump WLCSP Breakout and Routing Example 2	52

4.9.4.	30-Ball WLCSP Breakout and Routing Example 1	53
4.9.5.	30-Ball WLCSP Breakout and Routing Example 2	54
4.9.6.	36-Bump WLCSP Breakout Example 1	55
4.9.7.	36-Bump WLCSP Breakout Example 2	56
4.9.8.	36-Bump WLCSP Breakout Example 3	57
4.9.9.	36-Bump WLCSP Breakout Example 4	58
4.9.10.	49-Bump WLCSP Breakout Example 1	59
4.9.11.	49-Bump WLCSP Breakout Example 2	60
4.9.12.	72-Bump WLCSP Breakout Example	61
4.9.13.	81-Bump WLCSP Breakout Example 1	62
4.9.14.	81-Bump WLCSP Breakout Example 2	63
4.10.	ICE40 ucBGA Fully-/Partially-Populated Ball Grid Array	64
4.10.1.	36-ball ucBGA Fully-Populated Ball-Grid Array, All 25 User I/O	64
4.10.2.	36-ball ucBGA Fully-Populated Ball-Grid Array, All 27 User I/O	65
4.10.3.	49-ball ucBGA Fully-Populated Ball-Grid Array, All 35 User I/O	66
4.10.4.	81-ball ucBGA Fully-Populated Ball-Grid Array - Four Layers, 48 User I/O	67
4.10.5.	81-ball ucBGA Fully-Populated Ball-Grid Array - Six Layers, All 63 User I/O	68
4.10.6.	121-ball ucBGA Fully-Populated Ball-Grid Array - Four Layers, 57 User I/O	69
4.10.7.	121-ball ucBGA Fully-Populated Ball-Grid Array - Six Layers, All 95 User I/O	70
4.10.8.	225-ball ucBGA Fully-Populated Ball-Grid Array - Ten Layers, All 178 User I/O	71
4.10.9.	225-ball ucBGA Fully-Populated Ball-Grid Array - Eight Layers, 153 User I/O	73
4.10.10.	225-ball ucBGA Fully-Populated Ball-Grid Array – Six Layers, 100 User I/O	75
4.10.11.	81-ball csBGA Fully Populated Ball-Grid Array	76
4.10.12.	121-ball csBGA Fully Populated Ball-Grid Array (Option 1)	77
4.10.13.	121-ball csBGA Fully Populated Ball-Grid Array (Option 2)	78
4.10.14.	132-ball csBGA Partially-Populated Ball-Grid Array – Six Layer, Non-Solder Mask Defined (NSMD), 4 mil Traces	79
4.10.15.	132-ball csBGA Partially-Populated Ball-Grid Array – Four Layer, Non-Solder Mask Defined (NSMD), 3 mil Traces	80
4.10.16.	256-ball caBGA Fully-Populated Ball-Grid Array – Six Layers, All 206 User I/O	81
5.	PCB Fabrication Cost and Design Rule Considerations	82
6.	HDI Stackup	83
7.	Advantages and Disadvantages of BGA Packaging	84
8.	BGA Package Test and Assembly	85
8.1.	Back-Drilling or Top-Drilling PCBs to Remove Via Stubs	88
9.	PCB Design Support	91
10.	Use at Your Own Risk	92
	Reference	93
	Technical Support Assistance	94
	Revision History	95

Figures

Figure 3.1. Device/Package (NSMD)	14
Figure 3.2. Device/Package (SMD)	14
Figure 3.3. PCB (NSMD)	14
Figure 3.4. PCB (SMD)	14
Figure 4.1. BGA Breakout Routing Terms	15
Figure 4.2. CAM Artwork Screen Shots 121-Ball caBGA	17
Figure 4.3. CAM Artwork Screen Shots 196-Ball caBGA	18
Figure 4.4. CAM Artwork Screen Shots, Example #1, 256-Ball caBGA	19
Figure 4.5. CAM Artwork Screen Shots, Example #2, 256-Ball caBGA	20
Figure 4.6. Layout Screen Shots, 256-Ball caBGA, 0.80 mm Pitch	21
Figure 4.7. CAM Artwork Screen Shots, 332-Ball caBGA	22
Figure 4.8. Layout Screen Shots, 324-Ball caBGA, 0.80 mm Pitch	23
Figure 4.9. CAM Artwork Screen Shots, 381-Ball caBGA	24
Figure 4.10. Layout Screen Shots, 400-Ball caBGA, 0.80 mm Pitch	25
Figure 4.11. Layout Screen Shots, 484-Ball caBGA, 0.80 mm Pitch	26
Figure 4.12. Layout Screen Shots, CAM Artwork Screen Shots, 554-Ball caBGA	27
Figure 4.13. CAM Artwork Screen Shots, 756-Ball caBGA	28
Figure 4.14. CAM Artwork Screen Shots 64-Ball csBGA	29
Figure 4.15. CAM Artwork Screen Shots, Example #1, 100-Ball csBGA	30
Figure 4.16. CAM Artwork Screen Shots, Example #2, 100-Ball csBGA	30
Figure 4.17. CAM Artwork Screen Shots, Example #1, 132-Ball csBGA	31
Figure 4.18. CAM Artwork Screen Shots, Example #2, 132-Ball csBGA	31
Figure 4.19. CAM Artwork Screen Shots, Example #1, 144-Ball csBGA	32
Figure 4.20. CAM Artwork Screen Shots, Example #2, 144-Ball csBGA	33
Figure 4.21. CAM Artwork Screen Shots, 328-Ball csBGA	34
Figure 4.22. Layout Screen Shots, 80-Ball ctfBGA, 0.65 mm Pitch	35
Figure 4.23. Layout Screen Shots, 81-Ball csfBGA, 0.50 mm Pitch	36
Figure 4.24. Layout Screen Shots, 121-Ball csfBGA, 0.50 mm Pitch	37
Figure 4.25. Layout Screen Shots, 256-Ball csfBGA, 0.50 mm Pitch	38
Figure 4.26. CAM Artwork Screen Shots, 285-Ball csfBGA	39
Figure 4.27. Layout Screen Shots, 289-Ball csfBGA, 0.50 mm Pitch	40
Figure 4.28. Layout Screen Shots, 324-Ball csfBGA, 0.50 mm Pitch	41
Figure 4.29. Layout Screen Shots, 672-Ball fcBGA, 1.00 mm Pitch	42
Figure 4.30. Layout Screen Shots, 676-Ball fcBGA, 1.00 mm Pitch	43
Figure 4.31. Layout Screen Shots, 1156-Ball fcBGA, 1.00 mm Pitch	44
Figure 4.32. Layout Screen Shots, 256-Ball FOWLP, 0.50 mm Pitch	45
Figure 4.33. Layout Screen Shots, 410-Ball FOWLP, 0.50 mm Pitch	46
Figure 4.34. Layout Screen Shots, 237-Ball ftBGA, 1.00 mm Pitch	47
Figure 4.35. CAM Artwork Screen Shots 64-Ball ucBGA	48
Figure 4.36. Layout Screen Shots, 64-Ball ucfBGA, 0.4 mm Pitch	49
Figure 4.37. CAM Artwork Screen Shots for iCE40LP Device, 16-Bump WLCSP	50
Figure 4.38. CAM Artwork Screen Shots, Example #1 25-Bump WLCSP, 0.35 mm Pitch	51
Figure 4.39. CAM Artwork Screen Shots, Example #2 25-Bump WLCSP, 0.4 mm Pitch	52
Figure 4.40. Layout Screen Shots, 30-Ball WLCSP, 0.40 mm Pitch	53
Figure 4.41. Drawing Screen Shot, 30-Ball WLCSP, 0.40 mm Pitch	54
Figure 4.42. Layout Screen Shots, Example #1 36-Bump WLCSP, 0.40 mm Pitch	55
Figure 4.43. Layout Screen Shots, Example # 2 36-Bump WLCSP, 0.40 mm Pitch	56
Figure 4.44. Layout Screen Shots, Example # 3 36-Bump WLCSP, 0.40 mm Pitch	57
Figure 4.45. Layout Screen Shots, Example # 4 36-Bump WLCSP, 0.40 mm Pitch	58
Figure 4.46. Layout Screen Shots, Example #1 49-Bump WLCSP, 0.40 mm Pitch	59
Figure 4.47. Layout Screen Shots, Example #2 49-Bump WLCSP, 0.40 mm Pitch	60

Figure 4.48. Layout Screen Shots, Example 72-Bump WLCSP, 0.40 mm Pitch	61
Figure 4.49. Layout Screen Shots, Example #1 81-Bump WLCSP, 0.40 mm Pitch	62
Figure 4.50. Layout Screen Shots, Example #2 81-Bump WLCSP, 0.40 mm Pitch	63
Figure 4.51. Four-Layer Example Shown for 36-ball ucBGA	64
Figure 4.52. One-Layer Example Shown for 36-ball ucBGA.....	65
Figure 4.53. Four-Layer Example Shown for 49-ball ucBGA	66
Figure 4.54. Four-Layer 81-ball ucBGA	67
Figure 4.55. Six-Layer 81-ball ucBGA	68
Figure 4.56. Four-Layer 121-ball ucBGA	69
Figure 4.57. Six-Layer 121-ball ucBGA.....	70
Figure 4.58. Ten-Layer 225-ball ucBGA	72
Figure 4.59. Eight-Layer 225-ball ucBGA	74
Figure 4.60. Six-Layer 225-ball ucBGA.....	75
Figure 4.61. Four-Layer 81-ball csBGA	76
Figure 4.62. Four-Layer 121-ball csBGA (Option 1).....	77
Figure 4.63. Six-Layer 121-ball csBGA (Option 2).....	78
Figure 4.64. Six-Layer 132-ball csBGA, Relaxed Design Rule	79
Figure 4.65. Four-Layer 132-ball csBGA.....	80
Figure 4.66. Six-Layer 256-ball caBGA	81
Figure 6.1. Stackup Example	83
Figure 6.2. HDI Stackup with Staggered Micro Vias	83
Figure 7.1. Misalignment of BGA Balls vs. QPF Leads	84
Figure 8.1. Example of How Defects May Appear in an X-Ray Image.....	85
Figure 8.2. X-Ray Inspection Plot of ispMACH 4000ZE 144-Ball csBGA*	85
Figure 8.3. BGA Cross-Section.....	86
Figure 8.4. Cross-Section of Micro Vias	86
Figure 8.5. Edge View Camera Inspection	87
Figure 8.6. Via Stub from Layer 3 to Layer Bottom	88
Figure 8.7. DDR4_HP6_DQ8 S-Parameters	89
Figure 8.8. DDR4_HP6_DQ8 with Back-Drill	89
Figure 8.9. DDR4_HP6_DQ8 with Back-Drill and No Dropout	90

Tables

Table 2.1. Lattice BGA Package Types	10
Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening.....	11
Table 3.2. PCB SMD/NSMD Pad Recommendations ¹	12
Table 4.1. Package Layout Example Summary.....	16
Table 4.2. iCE40 Package Layout Example Summary	16
Table 4.3. 30-ball ucBGA, 1-Layer Layout Dimensions.....	54
Table 4.4. 36-ball ucBGA, Four-Layer Layout Dimensions.....	64
Table 4.5. 36-ball ucBGA, 1-Layer Layout Dimensions.....	65
Table 4.6. 49-ball ucBGA, Four-Layer Layout Dimensions.....	66
Table 4.7. 81-ball ucBGA, Four-Layer Layout Dimensions.....	67
Table 4.8. 81-ball ucBGA, Six-Layer Layout Dimensions	68
Table 4.9. 121-ball ucBGA, Four-Layer Layout Dimensions.....	69
Table 4.10. 121-ball ucBGA, Six-Layer Layout Dimensions.....	70
Table 4.11. 225-ball ucBGA, Ten-Layer Layout Dimensions	71
Table 4.12. 225-ball ucBGA, Eight-Layer Layout Dimensions	73
Table 4.13. 225-ball ucBGA, Six-Layer Layout Dimensions.....	75
Table 4.14. 81-ball csBGA, Four-Layer Layout Dimensions	76
Table 4.15. 121-ball csBGA, Six-Layer Layout Dimensions (Option 1)	77
Table 4.16. 121-ball csBGA, Six-Layer Layout Dimensions (Option 2)	78
Table 4.17. 132-ball csBGA, Six-Layer Layout Dimensions, Relaxed Design Rule.....	79
Table 4.18. 132-ball csBGA, Four-Layer Layout Dimensions	80
Table 4.19. 256-ball caBGA, Six-Layer Layout Dimensions.....	81

Abbreviations in This Document

A list of abbreviations used in this document.

Abbreviations	Definition
BBG	Wirebond BGA (0.8 mm Pitch)
BGA	Ball Grid Array
caBGA	Chip Array BGA
ckfBGA	Chip-Scale Flip-Chip BGA (7.00 mm × 7.00 mm)
csBGA	Chip-Scale BGA
csfBGA	Chip-Scale Flip-Chip BGA
fcBGA	Flip Chip BGA
FOWLP	Fan Out Wafer Level Package
FPGA	Field-Programmable Gate Array
fpBGA	Fine Pitch BGA
ftBGA	Thin BGA
GAL	Generic Array Logic
IPC	Association Connecting Electronics Industries
NSMD	Non-Solder Mask Defined
PBGA	Plastic BGA
PCB	Printed circuit board
PQFP	Plastic Quad Flat Pack
SBGA	Super BGA
SMD	Solder Mask Defined
TQFP	Thin Quad Flat Pack
ucBGA	Ultra Chip Scale BGA
WLCSP	Wafer Level Chip Scale Package

1. Introduction

It is important to understand how Ball Grid Array (BGA) packages with higher pin count and smaller pitch are affected by various board layout techniques. This document provides a brief overview of PCB layout considerations when working with BGA packages. It outlines some of the most common problems and provides tips for avoiding them at the design stage. A key challenge of adopting fine-pitch (0.8 mm or less) BGA packages is the design of a route fanout pattern that maximizes I/O utilization while minimizing fabrication cost. This technical note provides PCB design examples from Lattice Semiconductor.

For more information and design examples, visit the [Development Boards and Kits](#) page on the Lattice Semiconductor website.

2. Lattice BGA Package Types

Table 2.1. Lattice BGA Package Types

Package Type	Description
caBGA	<i>Chip Array BGA</i> – Plastic BGA with 0.8 mm solder ball pitch. Die up configuration.
csBGA	<i>Chip Scale BGA</i> – Plastic BGA with 0.5 mm solder ball pitch. Die up configuration.
csfBGA	<i>Chip Scale Flip-Chip BGA</i> – Plastic chip scale BGA with 0.5 mm solder ball pitch.
fcBGA	<i>Flip-Chip BGA</i> with 1.0 mm solder ball pitch. Die down configuration.
FOWLP	<i>Fan Out Wafer Level Package</i> – Saw-singulated package with 0.5 mm ball pitch built onto a silicon device with a redistribution layer. Die down configuration.
fpBGA	<i>Fine Pitch BGA</i> – Plastic BGA with 1.0 mm solder ball pitch. Die up configuration.
ftBGA	<i>Fine Pitch Thin BGA</i> – Thin plastic BGA with 1.0 mm solder ball pitch. Die up configuration.
PBGA	<i>Plastic BGA</i> with 1.27 mm solder ball pitch. Die up configuration.
SBGA	<i>Super BGA</i> – Similar to PBGA, but with an integrated heatsink plate. This package has 1.27 mm solder ball pitch and die down configuration. SBGA packages offer enhanced thermal dissipation capability.
ucBGA	<i>Ultra Chip BGA</i> – Saw-singulated plastic ball grid array package with 0.4 mm ball pitch.
WLCSP	<i>Wafer-Level Chip Scale Package</i> – Saw-singulated package with 0.35 mm and 0.4 mm ball pitch built onto a silicon device. Die down configuration.

3. BGA Board Layout Recommendations

To evenly balance the stress in the solder joints, Lattice recommends that PCB solder pads match the corresponding package solder pad type.

Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening

	Package Solder Pad Type	Package BGA Substrate Solder Mask Opening or WLCSP UBM Diameter (mm)	Package BGA Pad Opening (mm)
0.35 mm Ball Pitch			
16, 25 WLCSP	UBM	0.200	—
36 WLCSP ¹	UBM	0.200	—
0.40 mm Ball Pitch			
25 WLCSP	UBM	0.250	—
30 WLCSP	UBM	0.260	—
36 WLCSP ³	UBM	0.200	—
36 WLCSP ² , 81 WLCSP	UBM	0.230	—
49 WLCSP	UBM	0.235	—
72 WLCSP	UBM	0.240	—
36, 49 ucBGA	SMD (Figure 3.2)	0.200	—
64, 81, 121, 132, 225 ucBGA	SMD (Figure 3.2)	0.220	—
0.50 mm Ball Pitch			
56, 132, 328 csBGA	SMD (Figure 3.2)	0.300	—
64, 81, 100, 121, 144, 196, 284 csBGA	SMD (Figure 3.2)	0.250	—
84 WLCSP	UBM	0.240	—
84 WLCSP ⁶	UBM	0.280	—
132 csBGA ¹	SMD (Figure 3.2)	0.300	—
184 csBGA	SMD (Figure 3.2)	0.275	—
289 csBGA	SMD (Figure 3.2)	0.275	—
121, 285 csfBGA	SMD (Figure 3.2)	0.250	—
256, 324 csfBGA	SMD (Figure 3.2)	0.300	—
256, 410 ⁷ ASG/FOWLP	UBM	0.280	—
0.65 mm Ball Pitch			
69 WLCSP	UBM	0.280	—
80 ckfBGA	SMD (Figure 3.2)	0.300	—
80 ctfBGA	SMD (Figure 3.2)	0.250	—
104 CTG/fcCSP	SMD (Figure 3.2)	0.300	—
0.80 mm Ball Pitch			
100, 196, 256, 324, 332, 400, 484 BBG/caBGA	SMD (Figure 3.2)	0.400	—
121 BBG/caBGA	SMD (Figure 3.2)	0.350	—
484 CBG/fcCSP	SMD (Figure 3.2)	0.400	—
381, 554, 756 BBG/caBGA	SMD (Figure 3.2)	0.300	—
1.00 mm Ball Pitch			
256 ftBGA	SMD (Figure 3.2)	0.450	—
237, 324 ftBGA	SMD (Figure 3.2)	0.450	—
100, 144, 208, 256, 388, 484, 672, 676, 900, 1152, fpBGA	SMD (Figure 3.2)	0.450	—
672 ⁴ , 676 ⁵ , 1156 ⁵ fcBGA	SMD (Figure 3.2)	0.480	—
1020, 1152, 1704 Organic fcBGA	SMD (Figure 3.2)	0.450	—

	Package Solder Pad Type	Package BGA Substrate Solder Mask Opening or WLCSP UBM Diameter (mm)	Package BGA Pad Opening (mm)
1.27 mm Ball Pitch			
272 PBGA	SMD (Figure 3.2)	0.600	—
388 PBGA	SMD (Figure 3.2)	0.630	—
256, 352 SBGA	SMD (Figure 3.2)	0.580	—

Notes:

1. iCE40™
2. MachXO2™, MachXO3™, and MachXO4™
3. CrossLink™
4. CertusPro™-NX
5. Lattice Avant™
6. For a specific customer only.
7. Certus™-N2

Table 3.2. PCB SMD/NSMD Pad Recommendations¹

	Optimum PCB SMD Solder Mask Opening (mm) Figure 3.4	Optimum PCB NSMD Solder Land Diameter (mm) Figure 3.3
0.35 mm Ball Pitch		
16, 25 WLCSP	0.200	0.180 ⁵
36 WLCSP ²	0.200	0.180 ⁵
0.40 mm Ball Pitch		
25 WLCSP	0.250	0.205 ⁵
30 WLCSP	0.260	0.215 ⁵
36 WLCSP ⁴	0.200	0.180 ⁵
36 WLCSP ³ , 81 WLCSP	0.230	0.185 ⁵
49 WLCSP	0.235	0.190 ⁵
72 WLCSP	0.240	0.195
36, 49 ucBGA	0.200 ⁵	0.180
64, 81, 121, 132, 225 ucBGA	0.220 ⁵	0.180
0.50 mm Ball Pitch		
56, 132, 328 csBGA	0.300 ⁵	0.260
64, 81, 100, 121, 144, 196, 284 csBGA	0.250 ⁵	0.205
84 WLCSP	0.240	0.195
84 WLCSP ⁷	0.280	0.240
132 csBGA ²	0.300 ⁵	0.260
184 csBGA	0.275	0.235
289 csBGA	0.275	0.235
121, 285 csfBGA	0.250 ⁵	0.205
256, 324 csfBGA	0.300 ⁵	0.260
256, 410 ⁹ ASG/FOWLP	0.280	0.240
0.65 mm Ball Pitch		
69 WLCSP	0.280	0.240
80 ckfBGA	0.300 ⁵	0.260
80 ctfBGA	0.250 ⁵	0.205
104 CTG/fcCSP	0.300	0.260

	Optimum PCB SMD Solder Mask Opening (mm) Figure 3.4	Optimum PCB NSMD Solder Land Diameter (mm) Figure 3.3
0.80 mm Ball Pitch		
100, 196, 256, 324, 332, 400, 484 BBG/caBGA	0.400 ⁵	0.360
121 BBG/caBGA	0.350 ⁵	0.310
484 CBG/fcCSP	0.400	0.360
381, 554, 756 BBG/caBGA	0.300 ⁵	0.260
1.00 mm Ball Pitch		
256, 237, 324 ftBGA	0.450	0.410
100, 144, 208, 256, 388, 484, 672, 676, 900, 1152 fpBGA	0.450 ⁵	0.410
672 ⁸ , 676 ⁶ , 1156 ⁶ fcBGA	0.480 ⁵	0.440
1020, 1152, 1704 Organic fcBGA	0.450 ⁵	0.410
1.27 mm Ball Pitch		
272 PBGA	0.600 ⁵	0.560
388 PBGA	0.630 ⁵	0.590
256, 352 SBGA	0.580 ⁵	0.540

Notes:

1. These Lattice recommended PCB design values result in optimum Board Level Reliability (BLR) performance for each corresponding package. Designers who use PCB design values that deviate from these recommendations should understand that the BLR performance may be reduced.
2. iCE40
3. MachXO2, MachXO3, and MachXO4
4. CrossLink
5. Recommended value based on package solder pad type (refer to [BGA Board Layout Recommendations](#) section)
6. Lattice Avant
7. For a specific customer only.
8. CertusPro-NX
9. Certus-N2

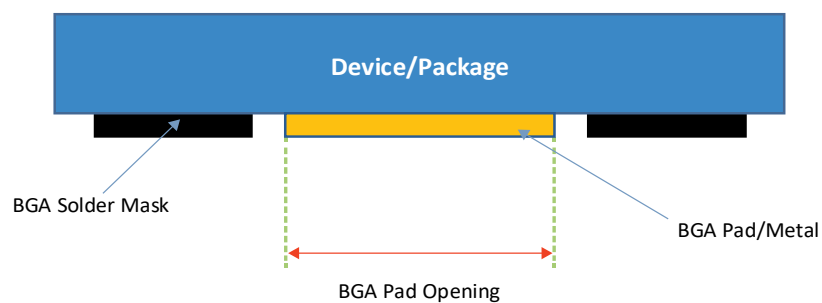


Figure 3.1. Device/Package (NSMD)

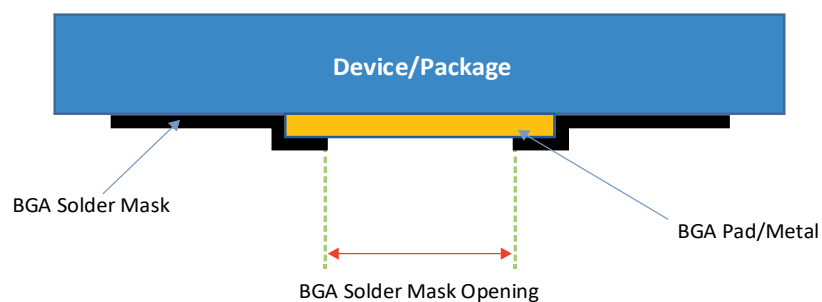


Figure 3.2. Device/Package (SMD)

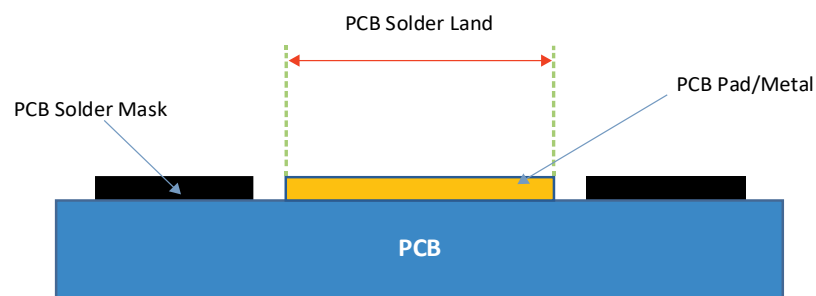


Figure 3.3. PCB (NSMD)

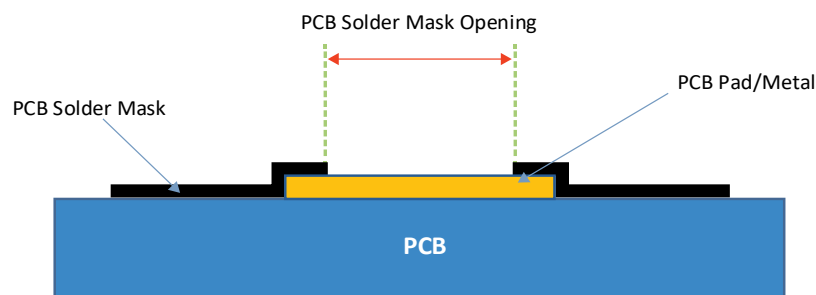


Figure 3.4. PCB (SMD)

4. BGA Breakout and Routing Examples

Lattice provides several resources and different design implementations that show BGA breakout and routing of various fine-pitch BGA packages. Different stackup and layer counts are also used to show a range of design rules and fabrication costs. It is important to consult with your board fabrication and assembly houses as to the most economical and reliable process for your application.

Currently there is a wide choice of BGAs from Lattice, with many devices offered in multiple packages and pitches of BGA densities as well as non-BGA options such as TQFP, QFN and others. The BGA pitch or *center to center* ball dimensions include 1.00 mm BGAs, space-saving 0.5 mm pitch chip scale BGA and 0.4 mm pitch ultra chip scale BGA packages. Fine pitch packages offer advantages and disadvantages alike. Finer pitch means that the trace and space limits are adjusted down to match the BGA. Many times, a design can get away with small traces underneath the BGA then fan out with a slightly larger trace width. The PCB fabrication facility is aware of your design objectives and checks for the smallest trace dimensions supported. Smaller traces take more time to inspect, check and align, and so on. Etching needs to be closely monitored when trace and space rules reach their lower limit.

The combination of fanout traces, escape vias, and escape traces that allow routing out from under the BGA pin array to the perimeter of the device are collectively referred to as the *BGA breakout*. The fanout pattern arranges the breakout via, layer, and stackup to maximize the number of I/O that can be routed. Fanout patterns are an important consideration for devices over 800 pins and can follow polar (north/south/east/west) or layer-biased directions. (Source: BGA Breakouts and Routing, Charles Pfeil, Mentor Graphics).

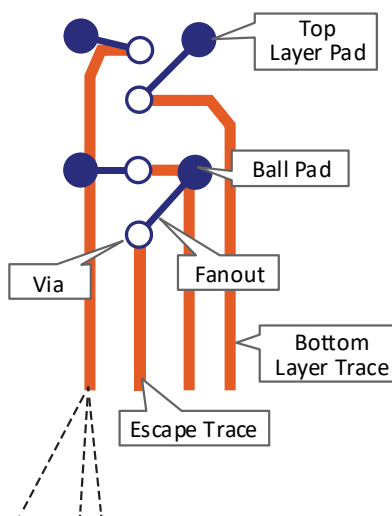


Figure 4.1. BGA Breakout Routing Terms

Lattice provides BGA breakout and routing examples for various fine pitch packages (www.latticesemi.com/en/Products/DevelopmentBoardsAndKits). Each package example is built to comply with IPC7351 (www.ipc.org) specifications and nomenclature conventions. Some examples include different layout options depending on design and cost goals. For example, the 256-ball chip array BGA (BN256/BG256) examples demonstrate a design with fully utilized I/O, fine trace width and pitch, on a 6-layer PCB stackup and a less expensive design with relaxed design rules, and fewer I/O pads routed, on a 4-layer PCB stackup.

Table 4.1. Package Layout Example Summary

Package	Example #	Pitch (mm)	Signal/Power Layers	Trace/Width Space (mm)	Ball Pad (mm)	Ball Mask (mm)	Via Pad (mm)	Via Drill (mm)
MN64/MG64	1	0.5	6	0.100/0.100	0.23	0.33	0.30	0.125
UMN64/UMG64	1	0.4	6	0.100/0.100	0.18	0.28	0.25	0.10
MN100	1	0.5	4	0.085/0.085	0.23	0.38	0.45	0.20
	2	0.5	4	0.100/0.100	0.23	0.38	0.45	0.20
MN132/MG132	1	0.5	4	0.085/0.085	0.23	0.38	0.40	0.15
	2	0.5	4	0.100/0.100	0.23	0.38	0.40	0.15
MN144	1	0.5	6	0.100/0.100	0.23	0.33	0.30	0.125
	2	0.5	4	0.100/0.100	0.23	0.38	0.30	0.125
BN256/BG256	1	0.8	6	0.100/0.100	0.35	0.50	0.40	0.125
	2	0.8	4	0.100/0.100	0.35	0.50	0.40	0.1500
M328/MG328	1	0.5	6	0.070/0.070	0.25	0.40	0.25	0.12

Table 4.2. iCE40 Package Layout Example Summary

Package	Pitch (mm)	iCE40 Family Offering	Max. I/O	SMD/NSMD	Total Layers	Signal Layers	Solder Pad Size (mm)	Solder Mask (mm)	Via Drill (mil)	Via Size (mil)	Trace Width (mil)	Trace Space (mil)
NSMD	—	—	—	—	—	—	—	—	—	—	—	—
CM36	0.4	LP	25	NSMD	4	2	0.20	0.34	5	10	5	3.5
CM49	0.4	LP	35	NSMD	4	2	0.20	0.34	5	10	5	3.5
CM81	0.4	LP	63	NSMD	6	4	0.20	0.34	5	10	5	3.5
CM81	0.4	LP	48	SMD	4	2	0.20	0.20	5	10	5	3.5
CM121	0.4	LP	95	NSMD	6	4	0.20	0.34	5	10	5	3.5
CM121	0.4	LP	—	SMD	4	2	0.20	0.20	5	10	5	3.5
CM225	0.4	LP, HX	178	NSMD	10	6	0.20	0.34	5	10	5	3.5
CM225	0.4	LP, HX	153	SMD	8	4	0.20	0.20	5	10	5	3.5
CM225	0.4	LP, HX	100	SMD	6	2	0.20	0.20	5	10	5	3.5
CB81	0.5	LP	62	—	—	—	—	—	—	—	—	—
CB121	0.5	LP	93	—	—	—	—	—	—	—	—	—
CB132	0.5	HX	95	NSMD	6	4	0.254	0.4064	6	12	4	4
CB132	0.5	HX	—	NSMD	4	2	0.254	0.4064	5	10	3	3
CT256	0.8	HX	206	NSMD	6	4	0.32	0.47	9	18	4.5	4.25

For mechanical dimension details on packages, see the Lattice [Package Diagrams \(FPGA-DS-02053\)](#) document.

In order to show how some of the routing challenges are solved, examples are provided for fine-pitch BGA packages from the MachXO and the ispMACH 4000ZE families. Principles for these apply to other Lattice BGA packaged products.

For iCE40 product family, all the examples assume that each I/O bank and the SPI bank each uses a different I/O voltage. In the layout examples for a reduced number of layers, all the mandatory pins connections are routed out, including connections such as the VPP_2V5 and the SPI connections. The PLL pins are also routed out on the packages that support PLLs.

Free Cadence® Allegro® Physical Viewer

If you do not have a PCB board design software package but would like to view the files, download and install the free [Cadence Allegro Physical Viewer](#) software available from Cadence Design Systems, Inc.

4.1. caBGA Breakout Examples

4.1.1. 121-Ball caBGA Breakout Example

This breakout places an ICE40HX8K in a 9×9 mm, 0.8 mm pitch, 121-ball caBGA package in a 4-layer stackup with maximum I/O utilization. This example utilizes a 0.127 mm trace width/space, escape via pad of 0.350 mm and via drill of 0.200 mm. Two metal layers are set as reference planes.

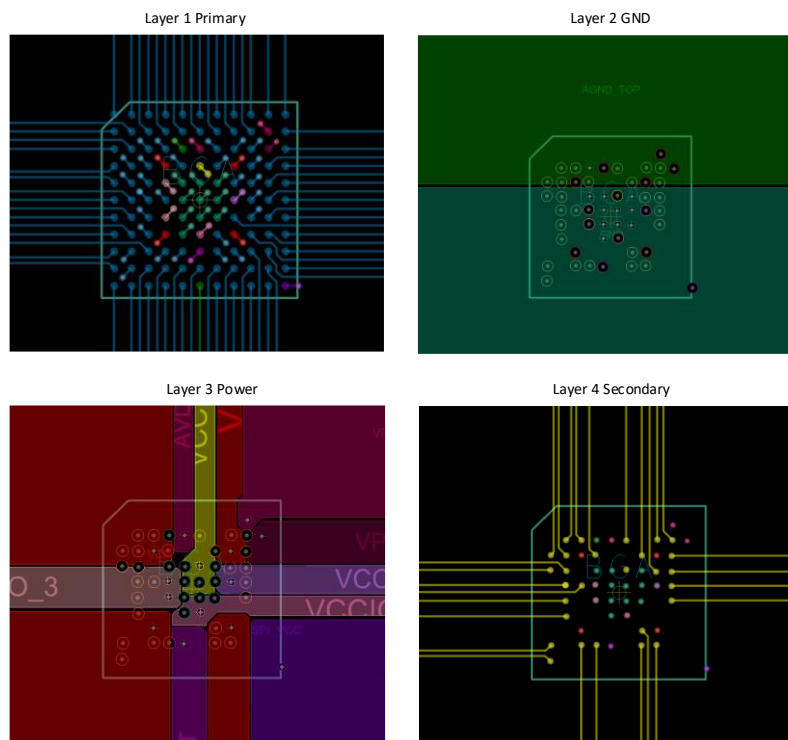


Figure 4.2. CAM Artwork Screen Shots 121-Ball caBGA

4.1.2. 196-Ball caBGA Breakout Example

This breakout uses a Certus-NX in a 12 × 12 mm, 0.80 mm pitch, 196-ball caBGA package (LFD2NX-40-BG196) in a 6-layer stackup with maximum I/O. This example utilizes a 0.10 mm trace width/space and 0.25 mm via drill. Two internal layers are used as reference planes.

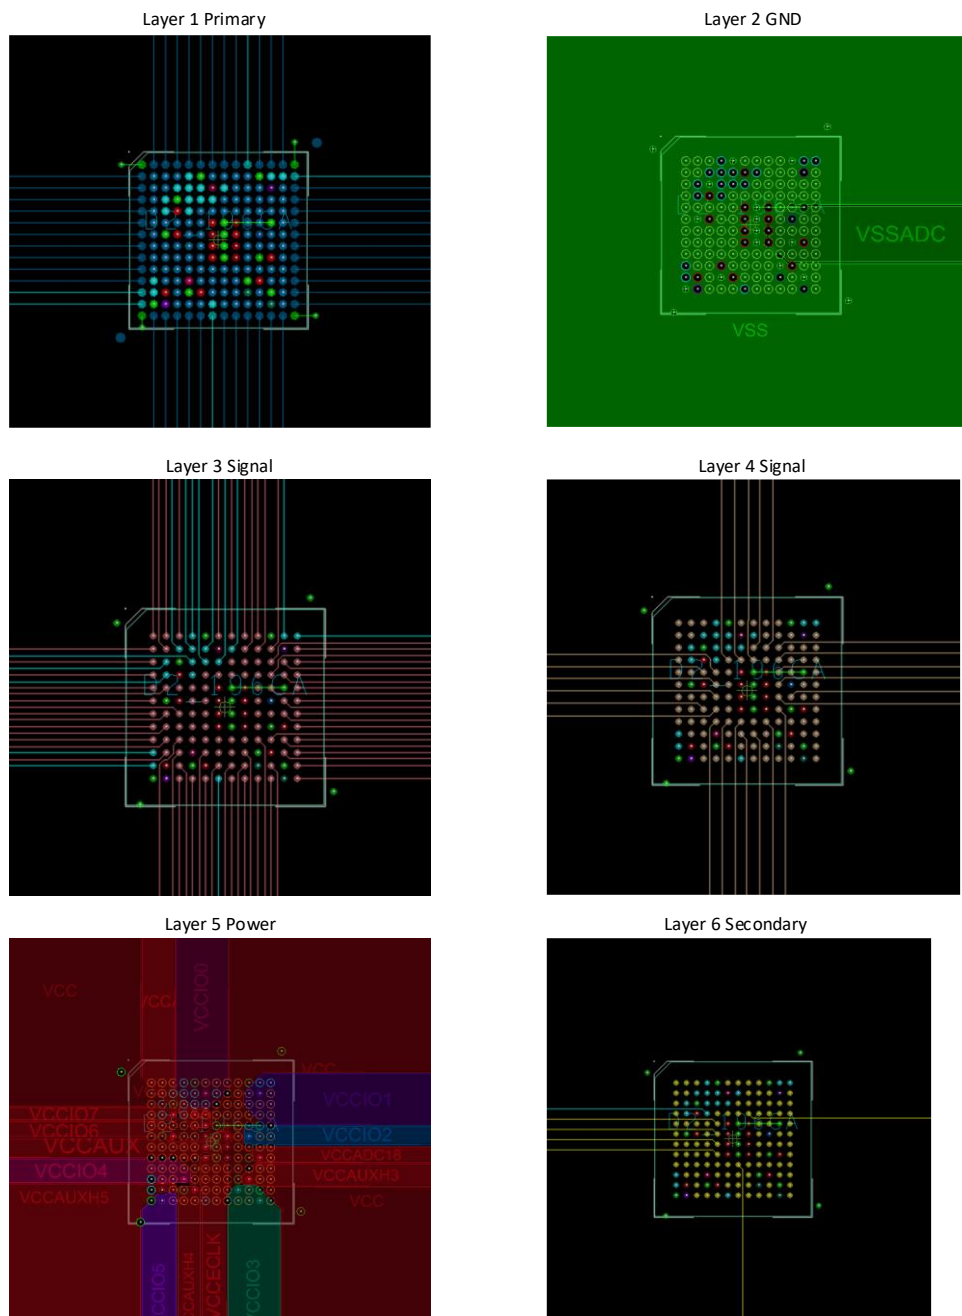


Figure 4.3. CAM Artwork Screen Shots 196-Ball caBGA

This BGA breakout and routing example places a MachXO PLD in a 14 × 14 mm, 0.8 mm pitch, 256-ball caBGA package (LCMXO2280-B256/BN256) into two fabrication scenarios. One for a 6-layer stackup with maximum I/O utilization and a 4-layer with about 10% fewer I/O. The 6-layer design (Example #1), demonstrates the best use of mechanically drill blind vias to place caps near power pins to minimize layers.


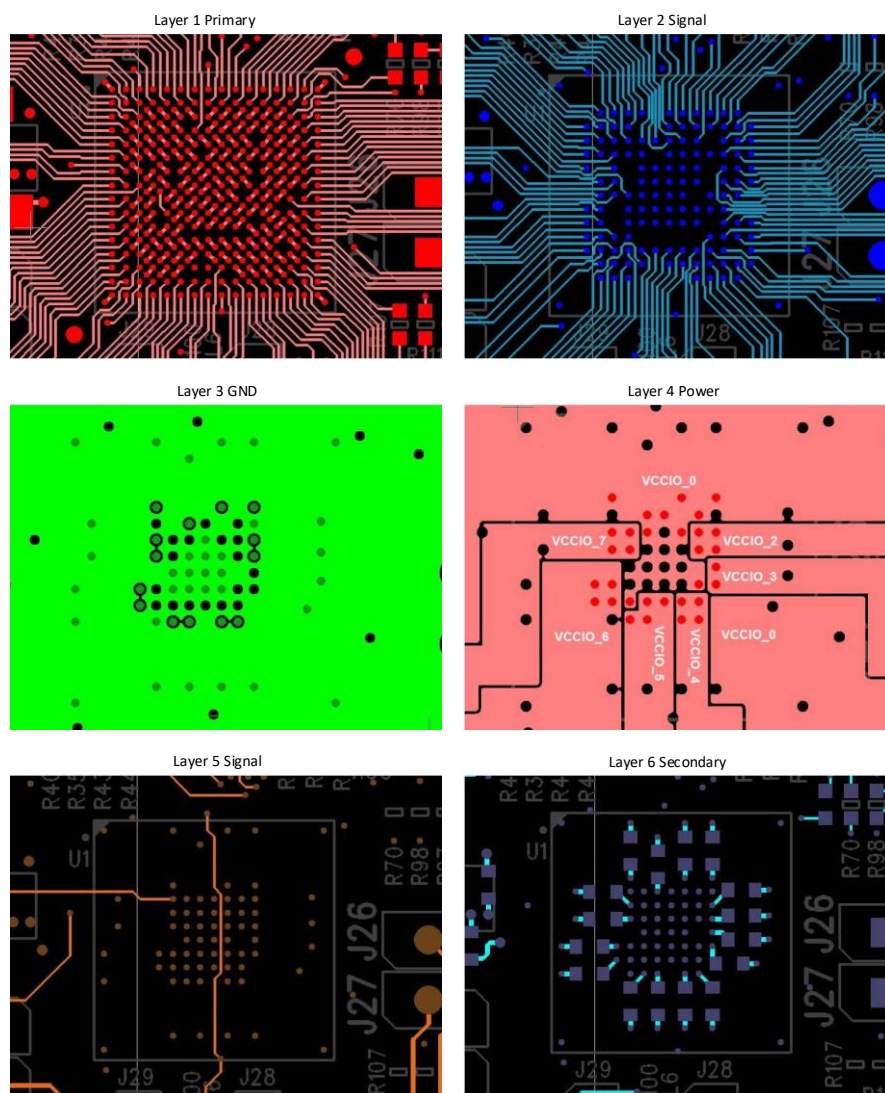


Figure 4.4. CAM Artwork Screen Shots, Example #1, 256-Ball caBGA

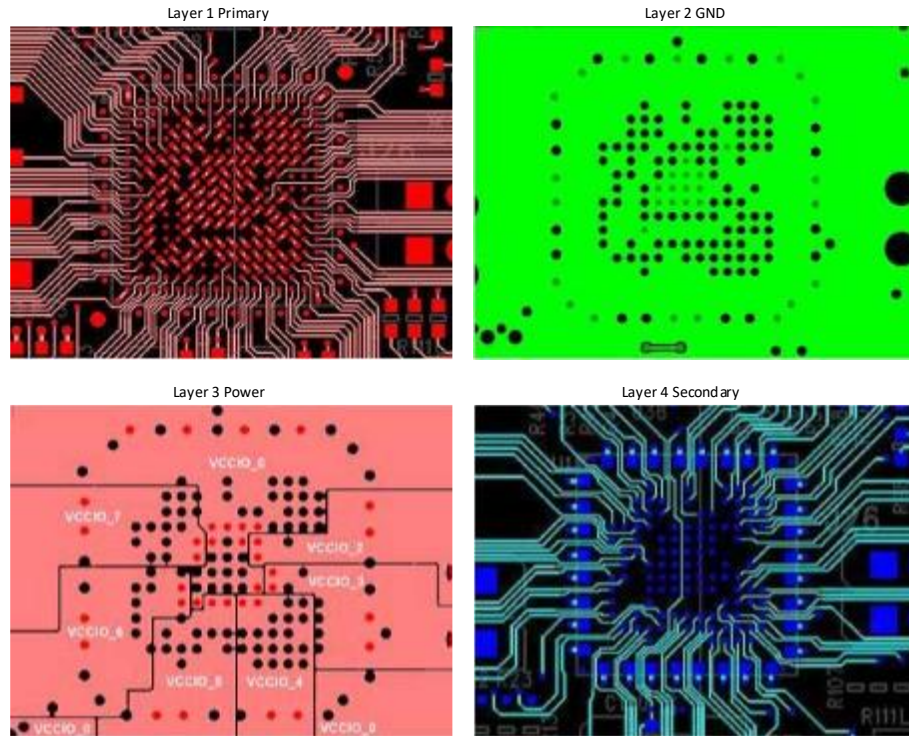

4.1.4. 256-Ball caBGA Breakout Example (MachXO3)

This breakout uses a MachXO3 PLD in a 14 × 14 mm, 0.80 mm pitch, 256-ball caBGA package (MXO3L-6900-BC256) in a 6-layer stackup with maximum I/O. This example utilizes a 0.10 mm trace width/space and 0.25 mm via drill. Two internal layers are used as reference planes. VCC is tied to a plane while VCCIOs are routed and have decoupling capacitors at secondary layer.

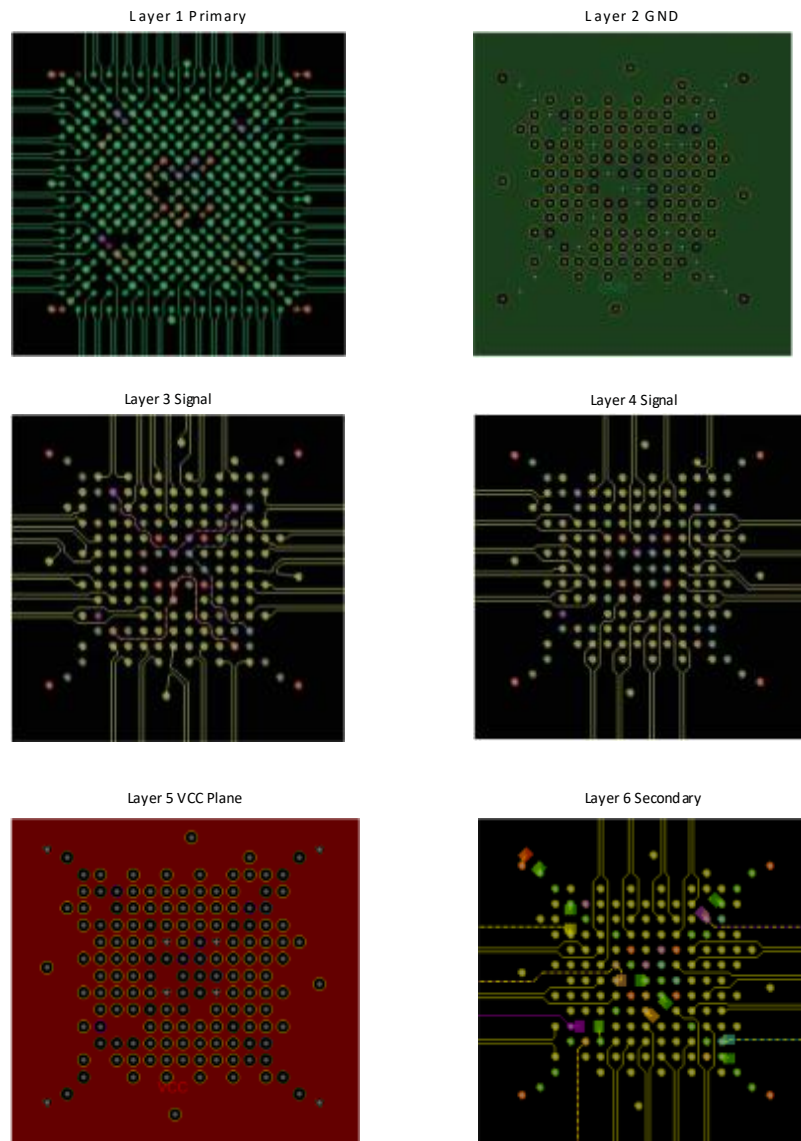


Figure 4.6. Layout Screen Shots, 256-Ball caBGA, 0.80 mm Pitch

4.1.5. 332-Ball caBGA Breakout Example

This BGA breakout and routing example places a MachXO2 PLD in a 17×17 mm, 0.8 mm pitch, 332-ball caBGA package (MXO2-332-BG332) in 4-layer routing with maximum I/O utilization. This example utilizes a 0.09 mm trace width and space and 0.18 mm escape via drill. Layers have been set to use as reference planes for high speed signal traces.

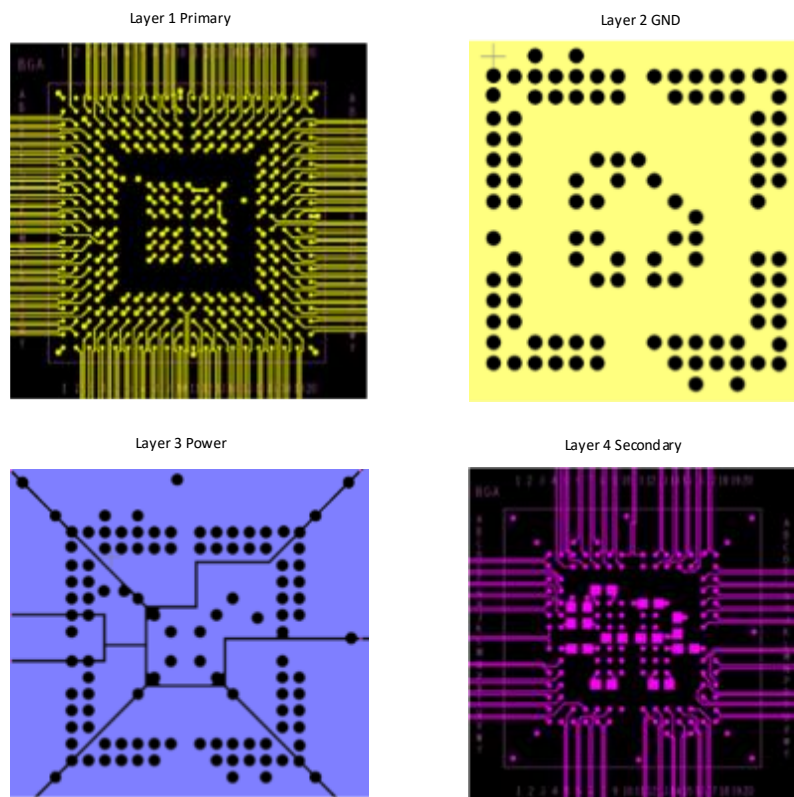


Figure 4.7. CAM Artwork Screen Shots, 332-Ball caBGA

4.1.6. 324-Ball caBGA Breakout Example

This breakout uses a MachXO3 PLD in a 15 × 15 mm, 0.80 mm pitch, 324-ball caBGA package (MXO3L-6900-BC324) in a 6-layer stackup with maximum I/O. This example utilizes a 0.10 mm trace width/space and 0.25 mm via drill. Two internal layers are used as reference planes. VCC is tied to a plane while VCCIOs are routed and have decoupling capacitors at secondary layer.

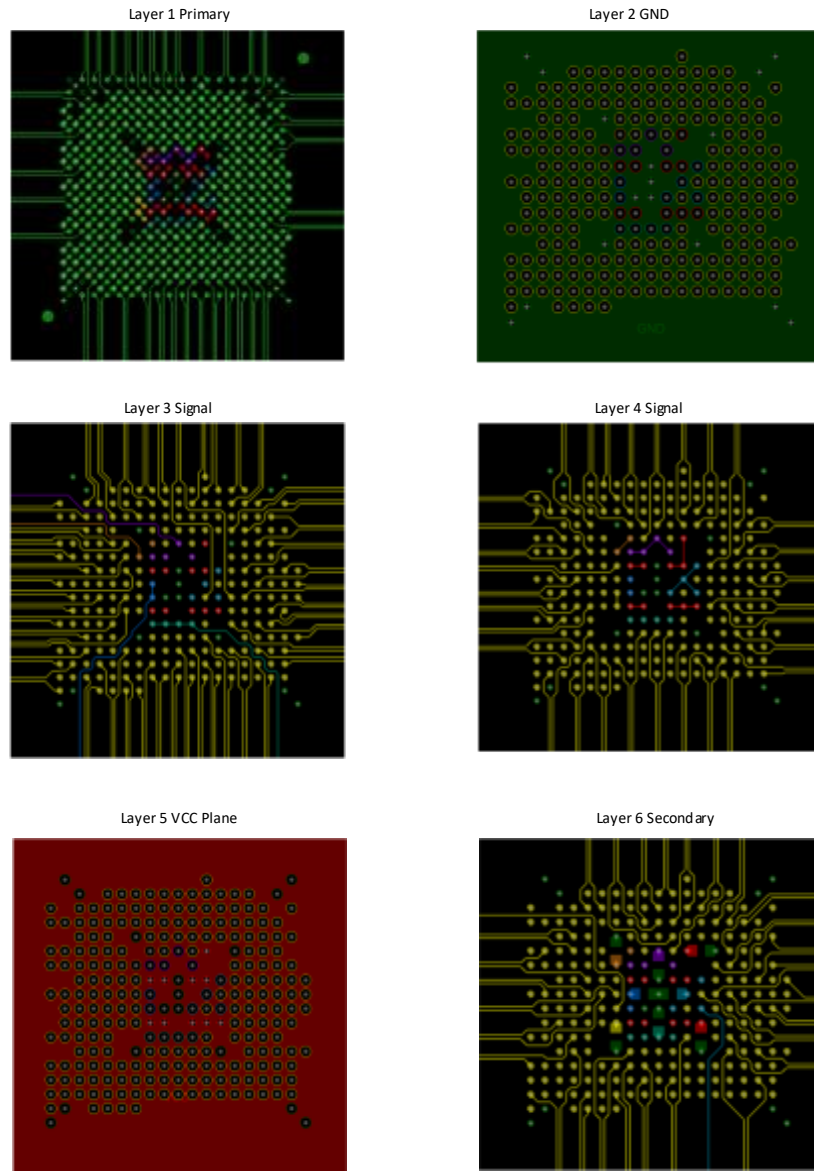


Figure 4.8. Layout Screen Shots, 324-Ball caBGA, 0.80 mm Pitch

4.1.7. 381-Ball caBGA Breakout and Routing Example

This example places an ECP5™ FPGA in a 17 × 17 mm, 0.8 mm pitch, 381-ball caBGA package (LF5UM-85FMG381) in a 4-layer stackup with maximum I/O utilization. This example utilizes 4-mil traces and 7-mil via drills for BGA escape routing. Two internal layers are used as reference planes.

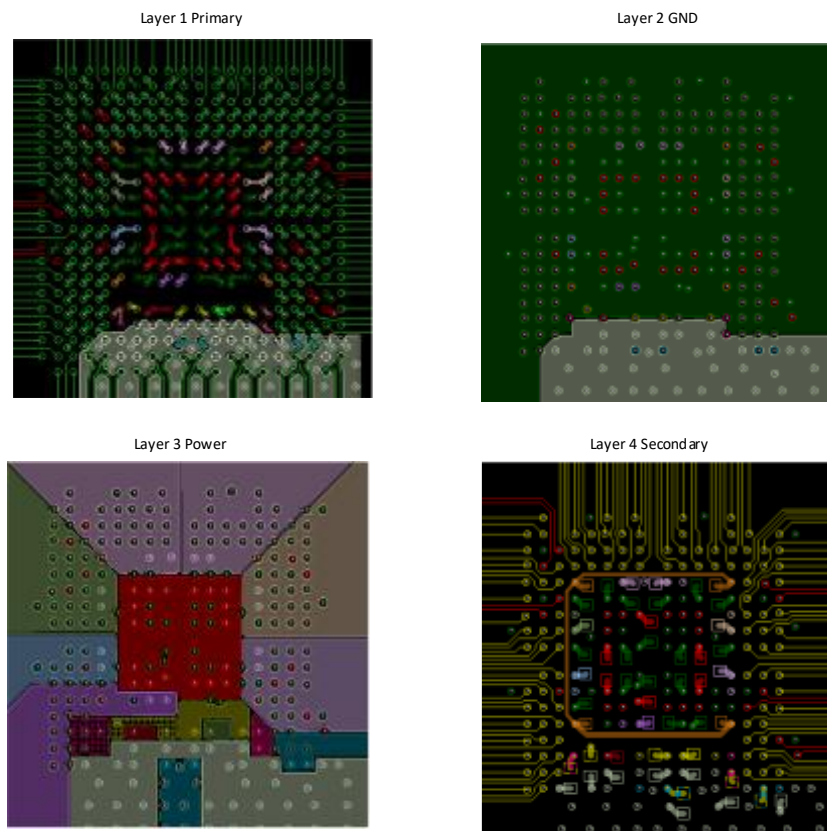


Figure 4.9. CAM Artwork Screen Shots, 381-Ball caBGA

4.1.8. 400-Ball caBGA Breakout Example

This breakout uses a MachXO3 PLD in a 17×17 mm, 0.80 mm pitch, 400-ball caBGA package (MXO3L-6900-BC400) in a 6-layer stackup with maximum I/O. This example utilizes a 0.10 mm trace width/space and 0.25 mm via drill. Two internal layers are used as reference planes. VCC is tied to a plane while VCCIOs are routed and have decoupling capacitors at secondary layer.

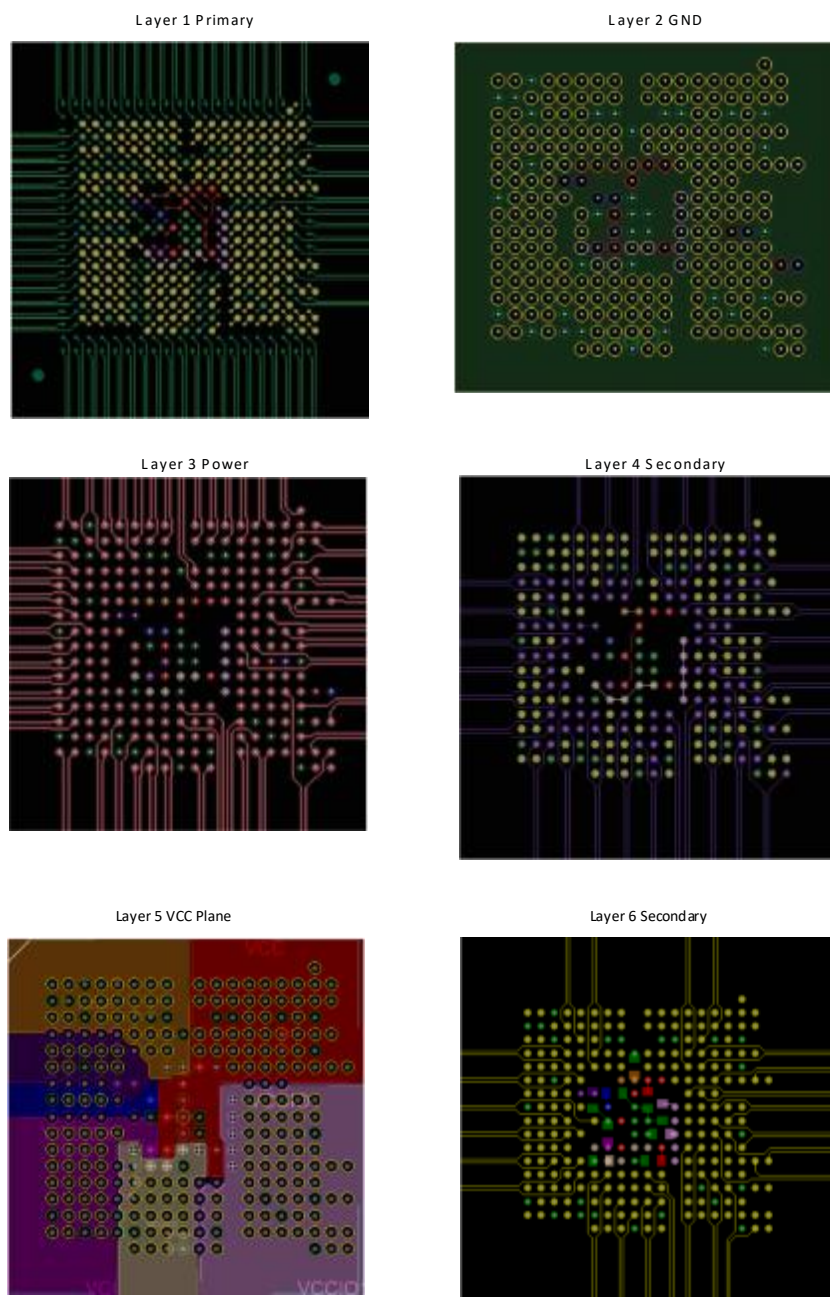


Figure 4.10. Layout Screen Shots, 400-Ball caBGA, 0.80 mm Pitch

4.1.9. 484-Ball caBGA Breakout Example

This breakout uses a MachXO3L 9400C in a 19 × 19 mm, 0.8 mm pitch, 484-ball caBGA package (MXO3L-9400CBCG484) in a 6-layer routing. All vias are to be non-conductive epoxy filled. Flat surface at top land. This example utilizes a 0.100 mm trace width/space, escape via pad of 0.450 mm and via drill of 0.254 mm. Three metal layers are set as reference planes.

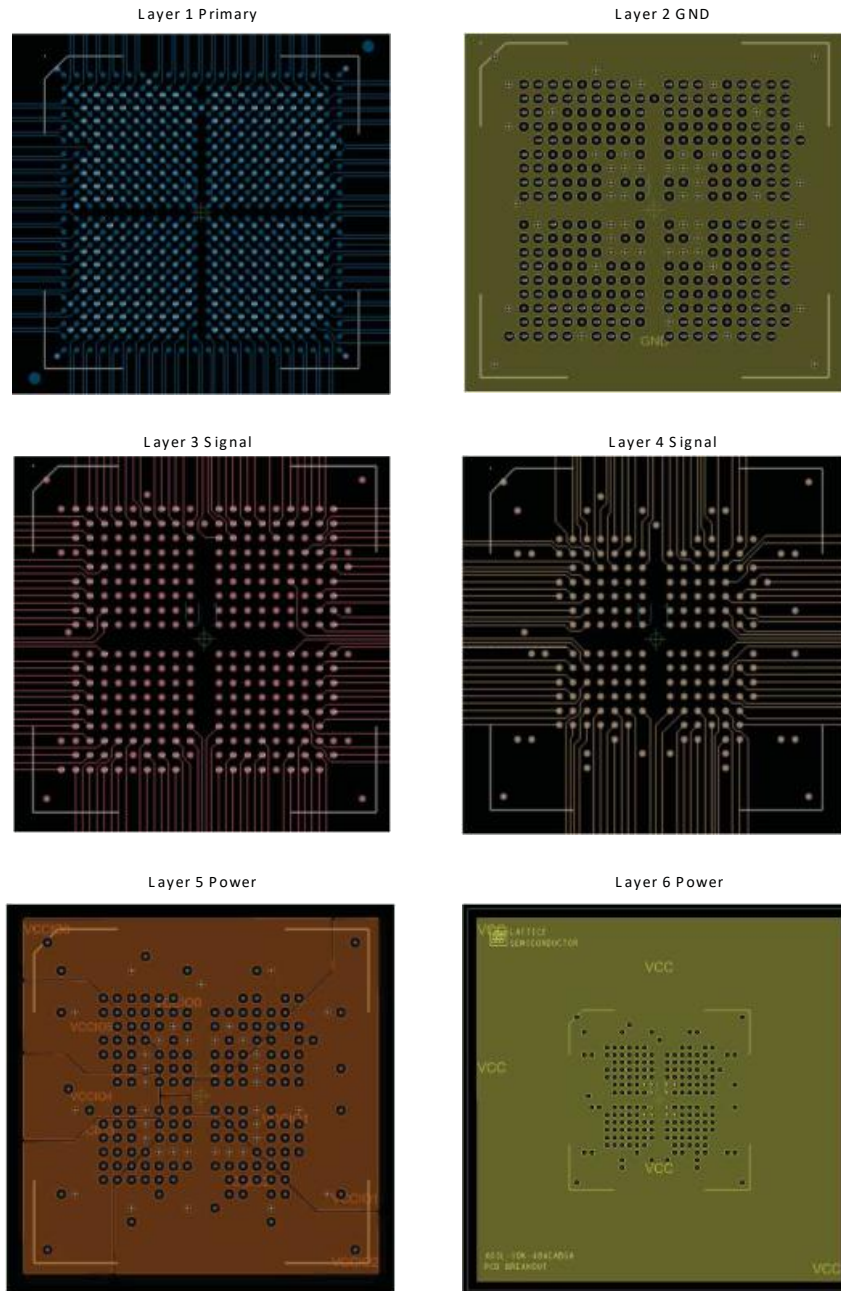


Figure 4.11. Layout Screen Shots, 484-Ball caBGA, 0.80 mm Pitch

4.1.10. 554-Ball caBGA Breakout and Routing Example

This example places an ECP5 FPGA in a 23 x 23 mm, 0.8 mm pitch, 554-ball caBGA package (LFE5UM-85FMG554) in a 4-layer stackup with maximum I/O utilization. This example utilizes 4-mil traces and 7-mil via drills for BGA escape routing. Two internal layers are used as reference planes.

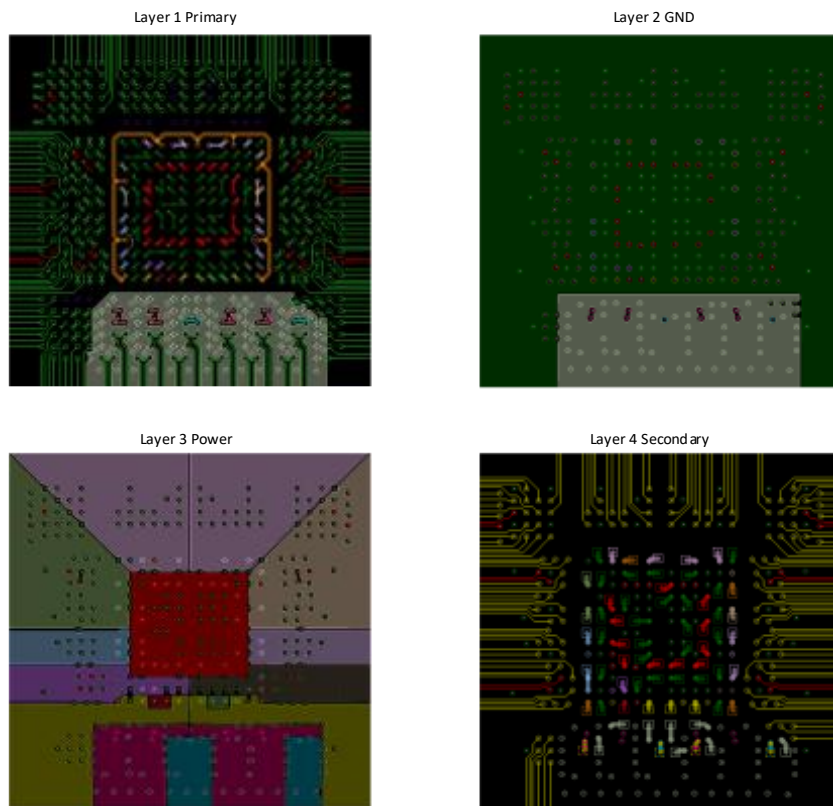


Figure 4.12. Layout Screen Shots, CAM Artwork Screen Shots, 554-Ball caBGA

4.1.11. 756-Ball caBGA Breakout and Routing Example

This example places an ECP5 FPGA in a 27×27 mm, 0.8 mm pitch, 756-ball caBGA package (LFE5U-85FMG756) in a 4-layer stackup with maximum I/O utilization. This example utilizes 4-mil traces and 7-mil via drills for BGA escape routing. Two internal layers are used as reference planes.

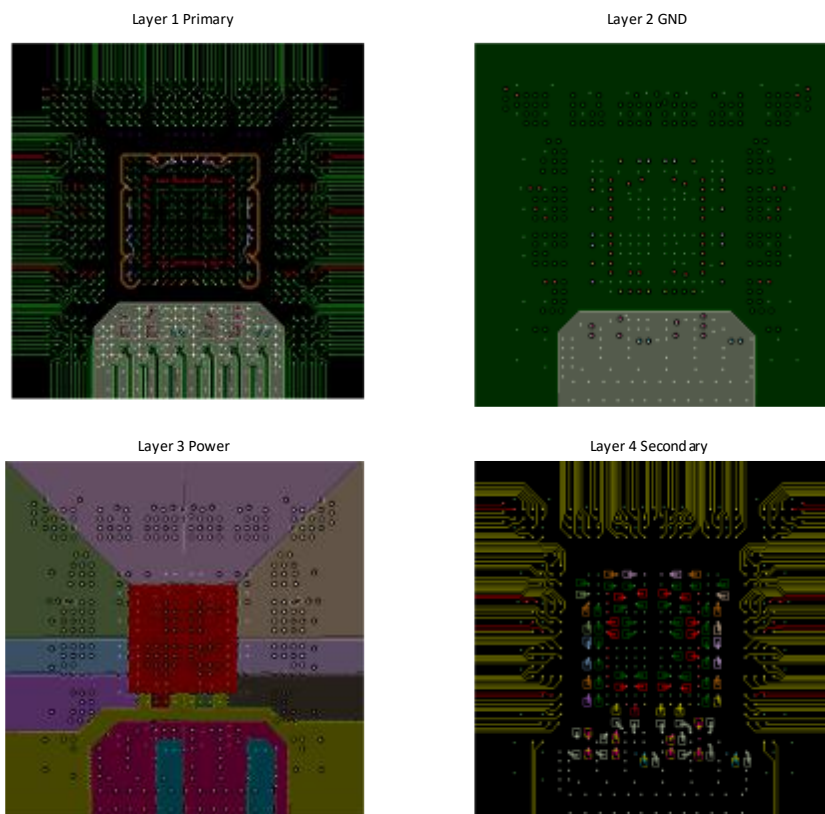


Figure 4.13. CAM Artwork Screen Shots, 756-Ball caBGA

4.2. csBGA Breakout and Routing Examples

4.2.1. 64-Ball csBGA Breakout and Routing Example

This example places an ispMACH 4000ZE CPLD in a 5×5 mm, 0.5 mm pitch, 64-ball csBGA package (LC4064ZE-MN64) in a 6-layer stackup with maximum I/O utilization.

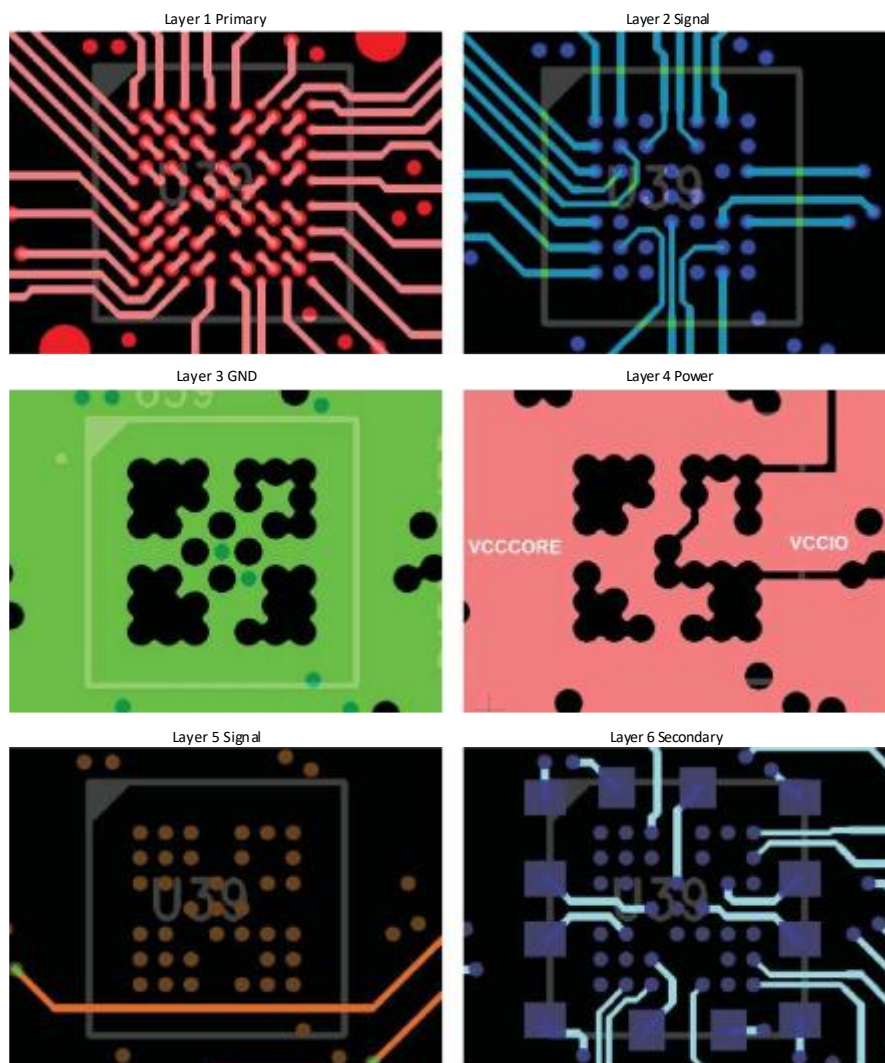


Figure 4.14. CAM Artwork Screen Shots 64-Ball csBGA

4.2.2. 100-Ball csBGA Breakout and Routing Examples

These examples place a MachXO PLD in a 8×8 mm, 0.5 mm pitch, 100-ball csBGA package (LCMXO640- M132/MN132) into two fabrication scenarios. Both examples utilize a 4-layer stackup. The first example uses 0.085 mm trace and 0.085 mm space design rules for maximum I/O accessibility; while the second example uses 0.100 mm trace and 0.100 mm space design rules and provides 15% less I/O.

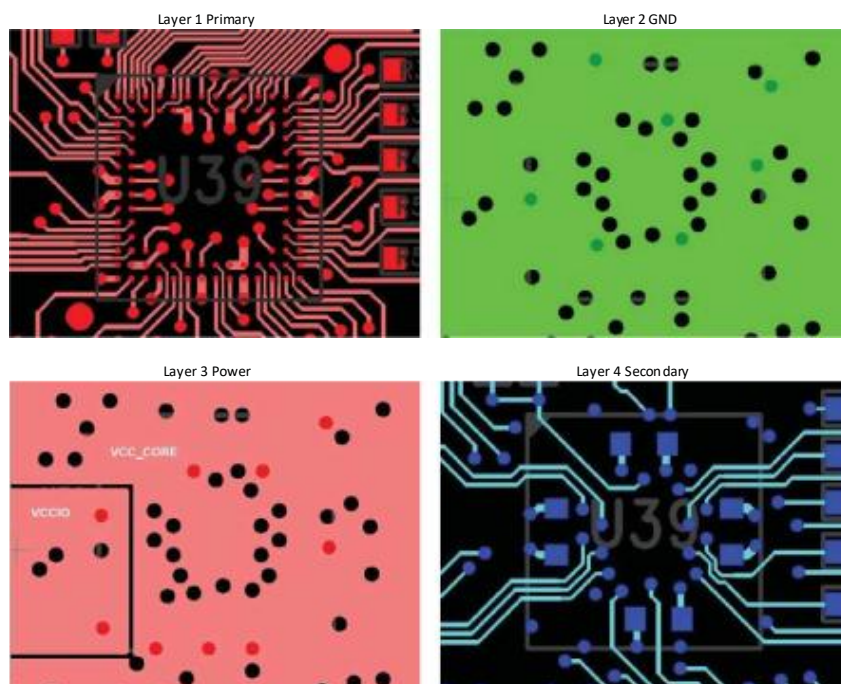


Figure 4.15. CAM Artwork Screen Shots, Example #1, 100-Ball csBGA

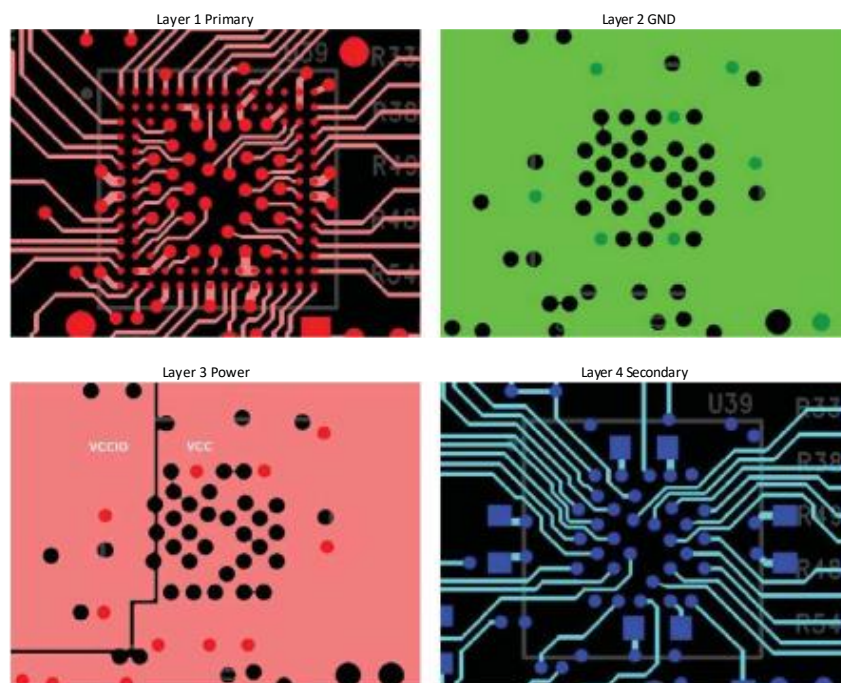


Figure 4.16. CAM Artwork Screen Shots, Example #2, 100-Ball csBGA

4.2.3. 132-Ball csBGA Breakout Examples

These examples place a MachXO PLD in a 8×8 mm, 0.5 mm pitch, 132-ball csBGA package (LCMXO640- M132/MN132) into two fabrication scenarios. Both examples utilize a 4-layer stackup. The first example uses 0.085 mm trace and 0.085 mm space design rules for maximum I/O accessibility; while the second example uses 0.100 mm trace and 0.100 mm space design rules and provides 15% less I/O.

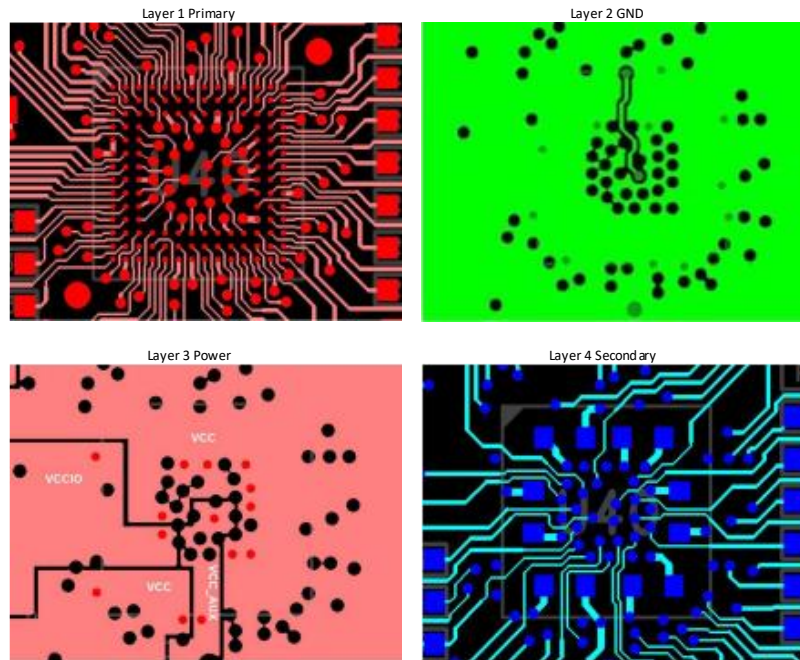


Figure 4.17. CAM Artwork Screen Shots, Example #1, 132-Ball csBGA

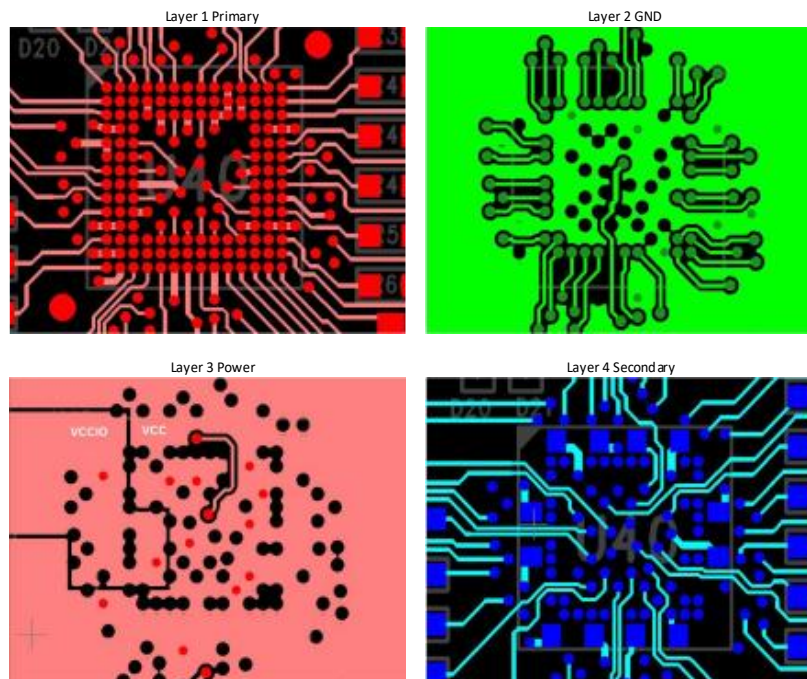


Figure 4.18. CAM Artwork Screen Shots, Example #2, 132-Ball csBGA

4.2.4. 144-Ball csBGA Breakout Examples

These examples place an ispMACH 4000ZE in a 7×7 mm, 0.5 mm pitch, 144-ball csBGA package (LC4256ZE-MN144) into two fabrication scenarios. One for a 6-layer stackup with maximum I/O utilization and a 4-layer with about 5% fewer I/O. The 6-layer (Example #1) design avoids uses of micro vias and takes advantage of removed pads on inner layers to route all pins out to 6 layers with good layer structure for high-speed signal integrity.

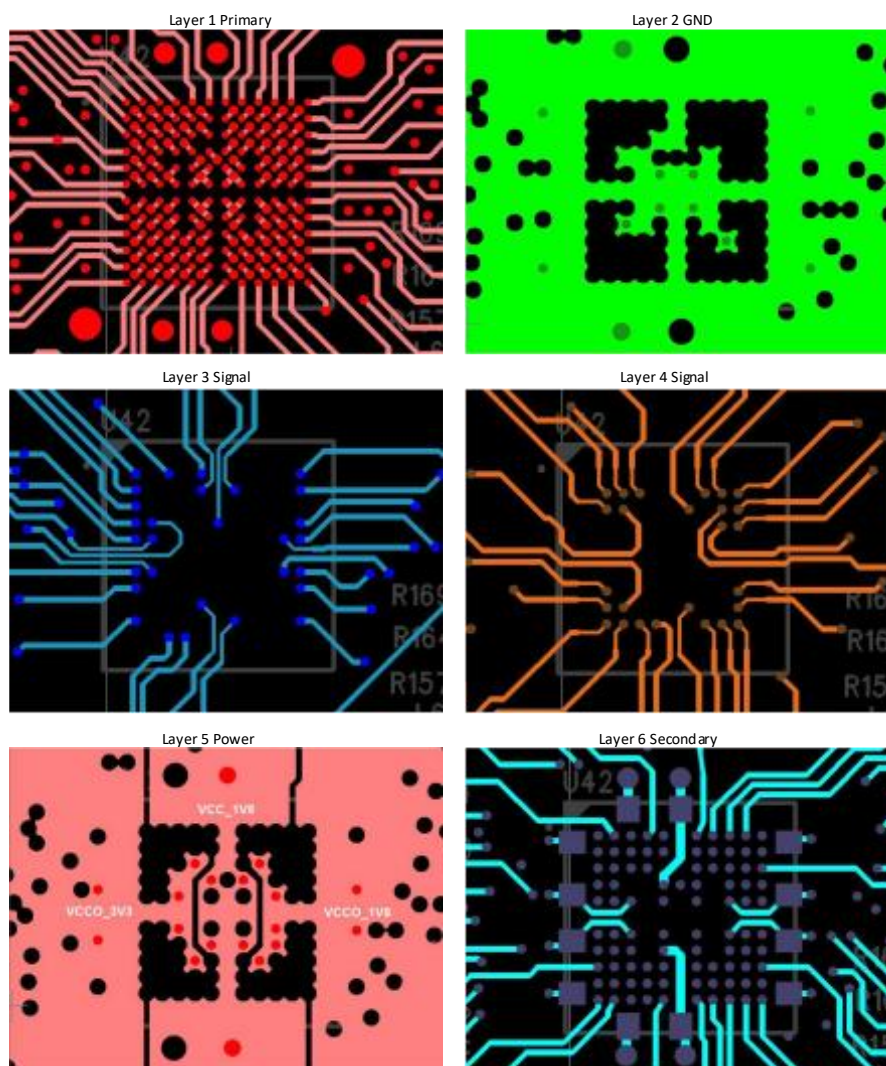


Figure 4.19. CAM Artwork Screen Shots, Example #1, 144-Ball csBGA

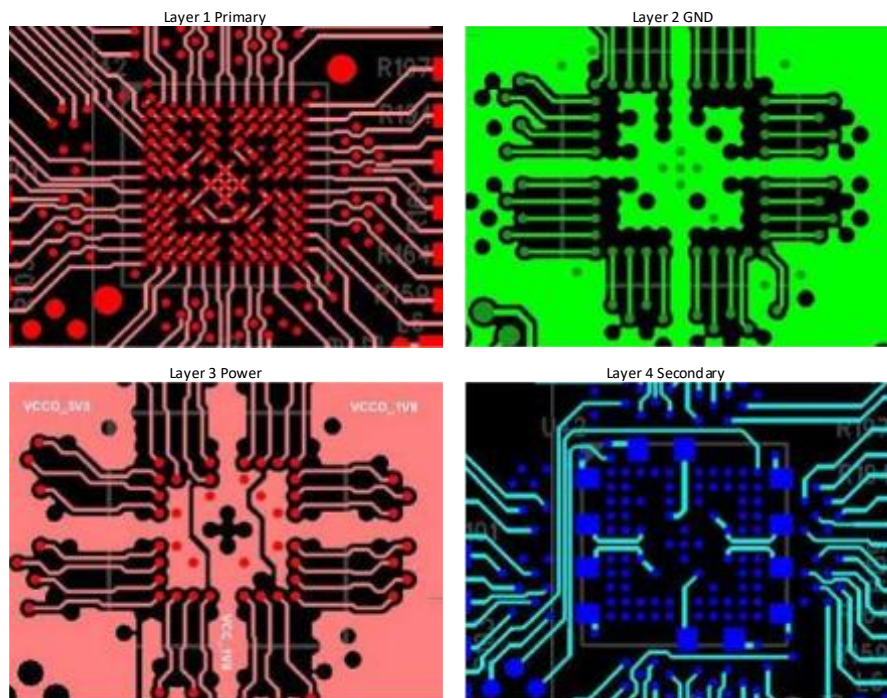


Figure 4.20. CAM Artwork Screen Shots, Example #2, 144-Ball csBGA

4.2.5. 328-Ball csBGA Breakout and Routing Example

This example places a LatticeECP3-17 FPGA in a 10 × 10 mm, 0.5 mm pitch, 328-ball csBGA package (LFE3-17EA-MG328) in a 6-layer stackup with maximum I/O utilization. This example utilizes a 3-mil trace neck down and 5-mil via for BGA escape routing. Layers have been set to use as reference planes for high-speed signal traces.

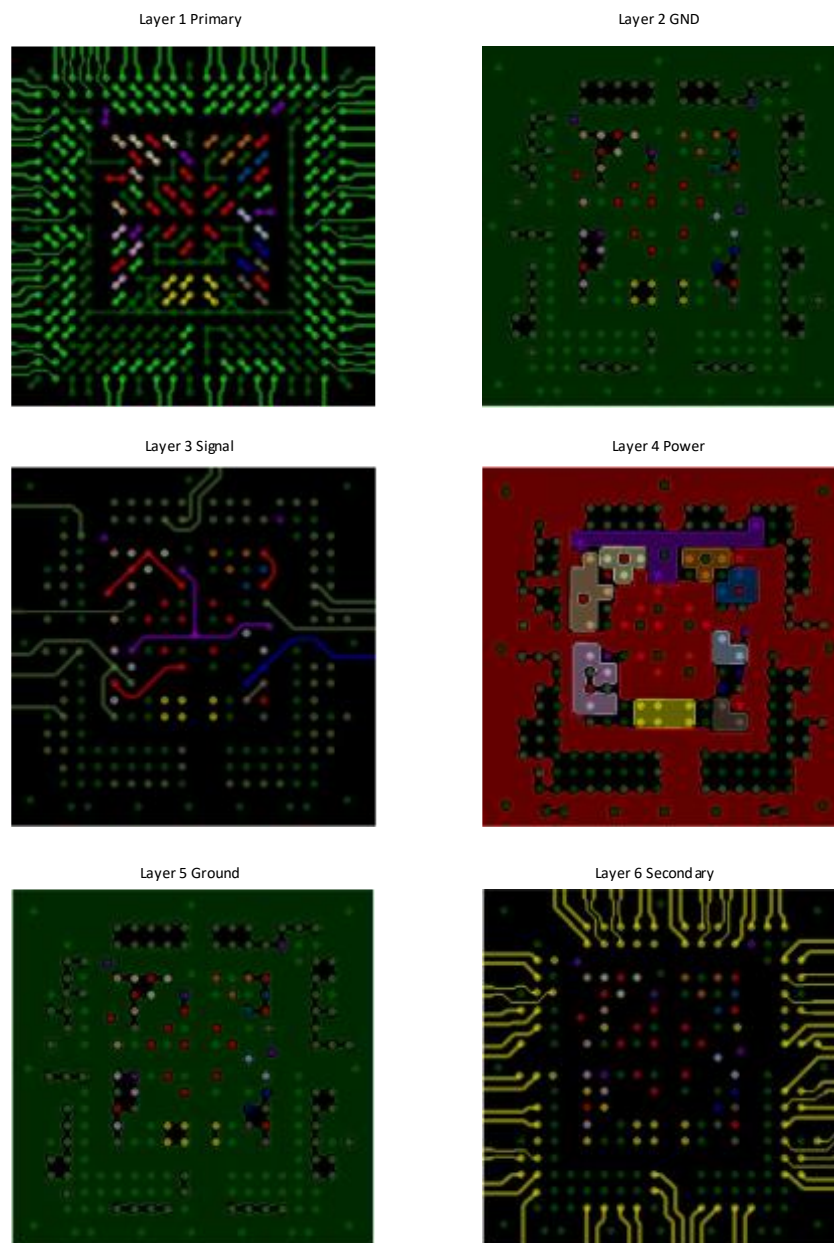


Figure 4.21. CAM Artwork Screen Shots, 328-Ball csBGA

4.3. ckfBGA/ctfBGA Breakout Example

4.3.1. 80-Ball ckfBGA/ctfBGA Breakout Example

This breakout uses an LIF-MD6000 PLD in a 7.0×7.0 mm (ckfBGA) and 6.5×6.5 mm (ctfBGA), 0.65 mm pitch, 80-ball ckfBGA/ctfBGA package (LIF-MD6000-6JMG80) in a 4-layer routing using via-in-pad technology. All vias are to be non-conductive epoxy filled. Flat surface at top land. This example utilizes a 0.127 mm trace width/space, escape via pad of 0.400 mm and via drill of 0.150 mm. Two internal layers are set as reference planes.

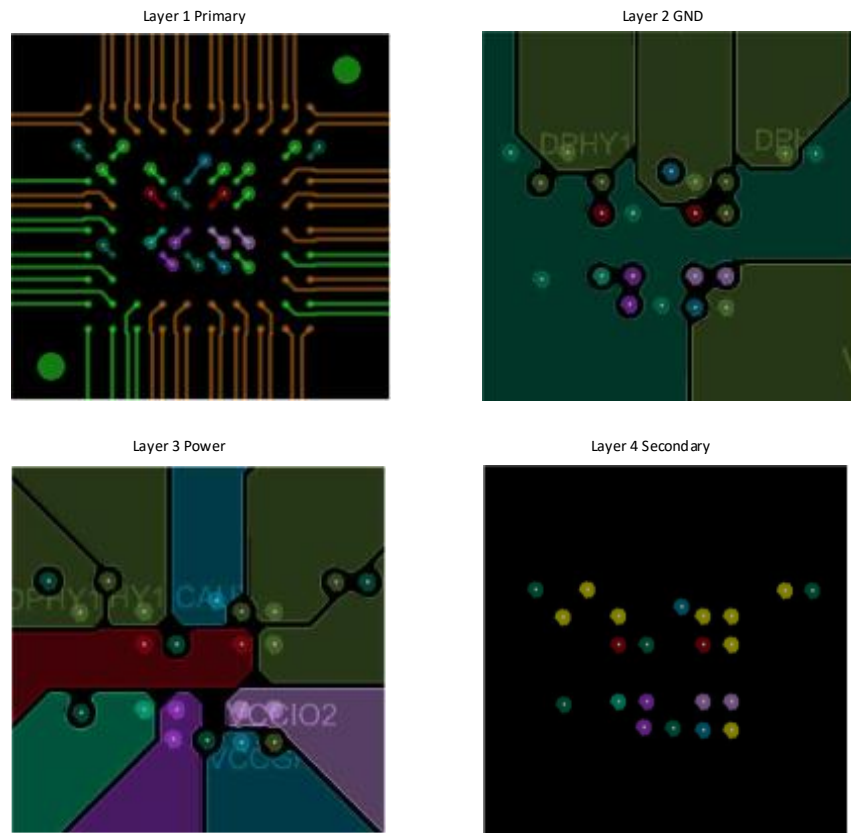


Figure 4.22. Layout Screen Shots, 80-Ball ctfBGA, 0.65 mm Pitch

4.4. csfBGA Breakout Examples

4.4.1. 81-Ball csfBGA Breakout Example

This breakout uses an LIF-MD6000 PLD in a 4.5×4.5 mm, 0.5 mm pitch, 81-ball csfBGA package (LIF-MD6000-6FMG81) in a 4-layer routing using via-in-pad technology. All vias are to be non-conductive epoxy filled. Flat surface at top land. This example utilizes a 0.076 mm trace width/space, escape via pad of 0.254 mm and via drill of 0.102 mm. Two internal layers are set as reference planes.

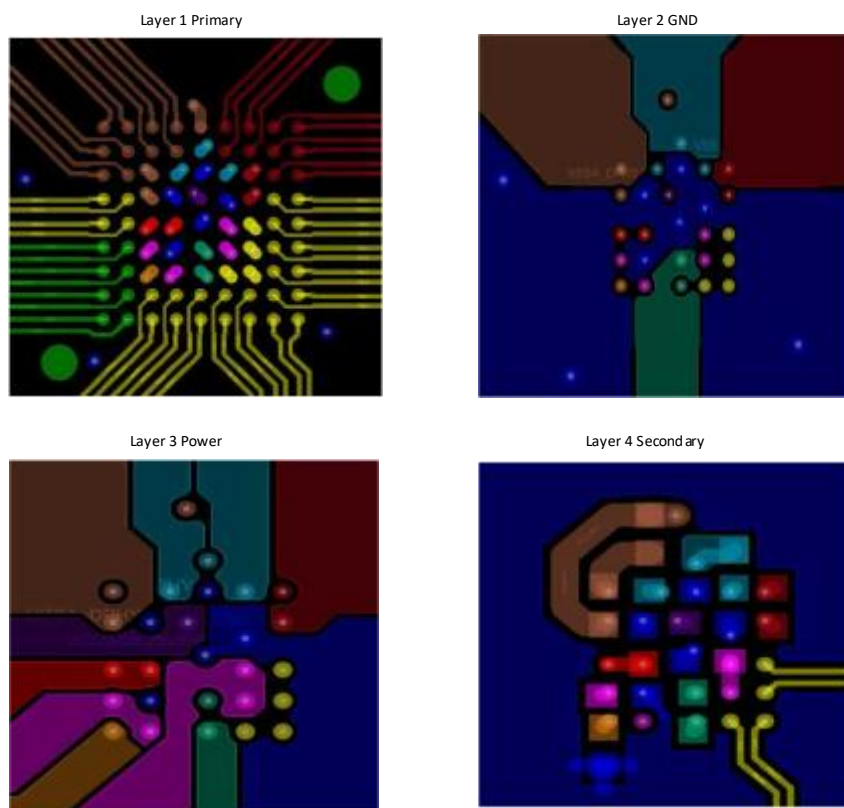


Figure 4.23. Layout Screen Shots, 81-Ball csfBGA, 0.50 mm Pitch

4.4.2. 121-Ball csfBGA Breakout Example

This breakout uses an MachXO3 PLD in a 6×6 mm, 0.50 mm pitch, 121-ball csfBGA package (MXO3L-6900-MG121) in a 6-layer stackup with maximum I/O. This example utilizes a through microvia technology of 0.10 mm via drill. Trace width/space used is 0.10 mm. Two internal layers are used as reference planes for GND and PWR.

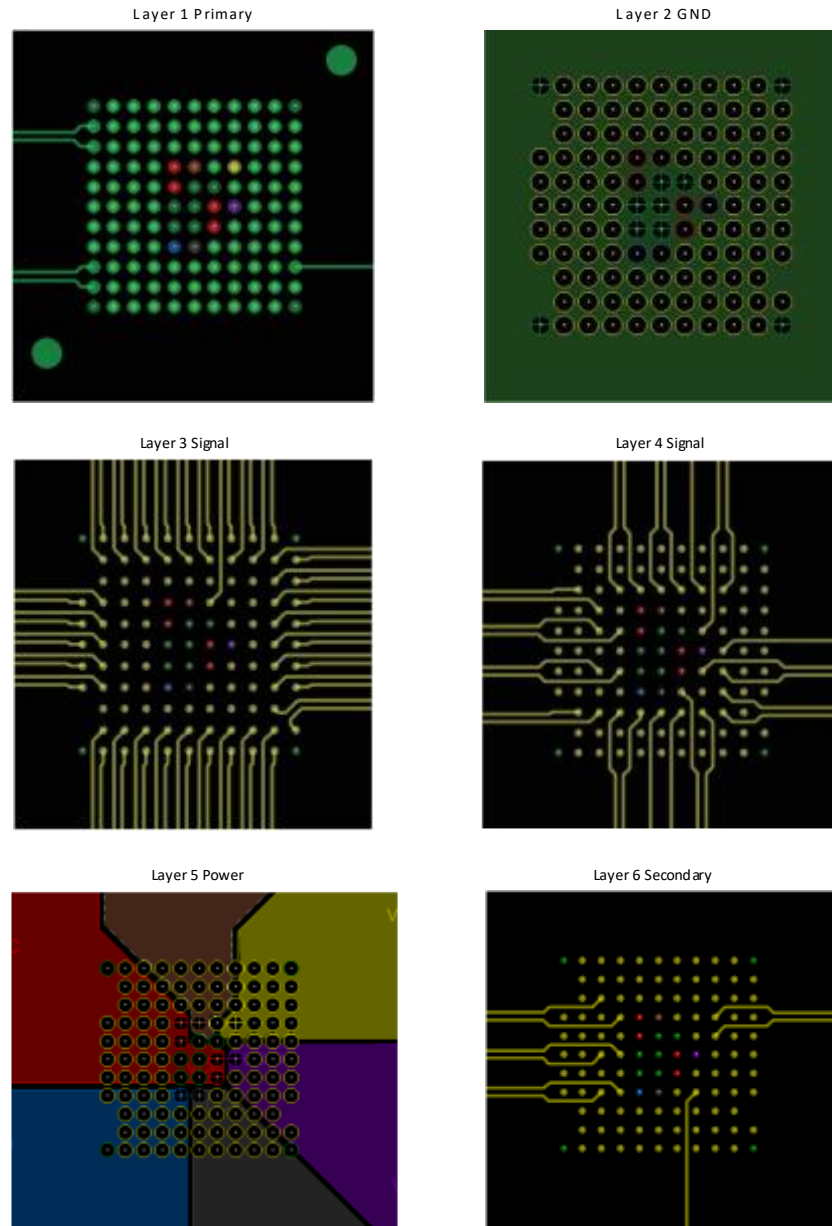


Figure 4.24. Layout Screen Shots, 121-Ball csfBGA, 0.50 mm Pitch

4.4.3. 256-Ball csfBGA Breakout Example

This breakout uses a MachXO3 PLD in a 9×9 mm, 0.50 mm pitch, 256-ball csfBGA package (MXO3L-6900-MG256) in a 6-layer stackup with maximum I/O. This example utilizes a blind microvia technology of 0.10 mm via drill. Trace width/space used is 0.10 mm. Two internal layers are used as reference planes for GND and PWR.

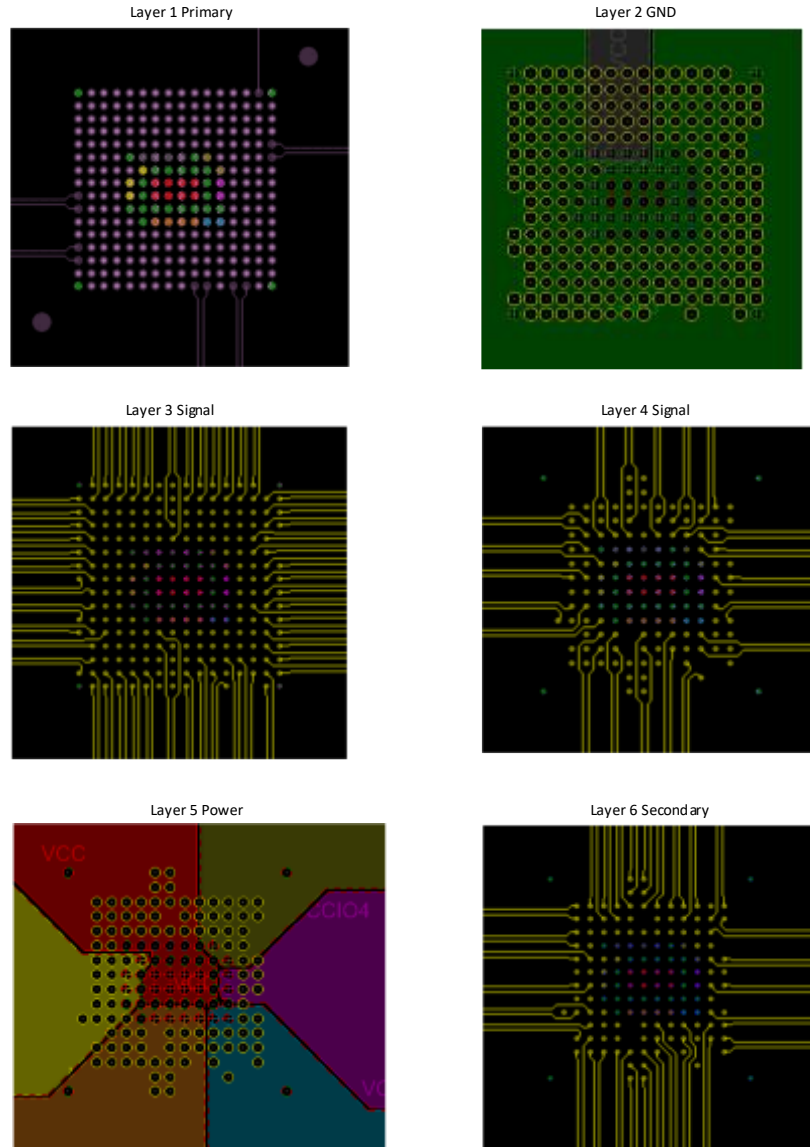


Figure 4.25. Layout Screen Shots, 256-Ball csfBGA, 0.50 mm Pitch

4.4.4. 285-Ball csfBGA Breakout and Routing Example

This example places an ECP5 FPGA in a 10 × 10 mm, 0.5 mm pitch, 285-ball csfBGA package (LFE5UM-25F-MG285) in a 4-layer stackup with maximum I/O utilization. This example utilizes 4-mil traces and 4-mil via drills for BGA escape routing. Two internal layers are used as reference planes. Blind and buried vias are not necessary in this example. Decoupling 0402 capacitors are placed at secondary layer for VCC and VCCIOs.

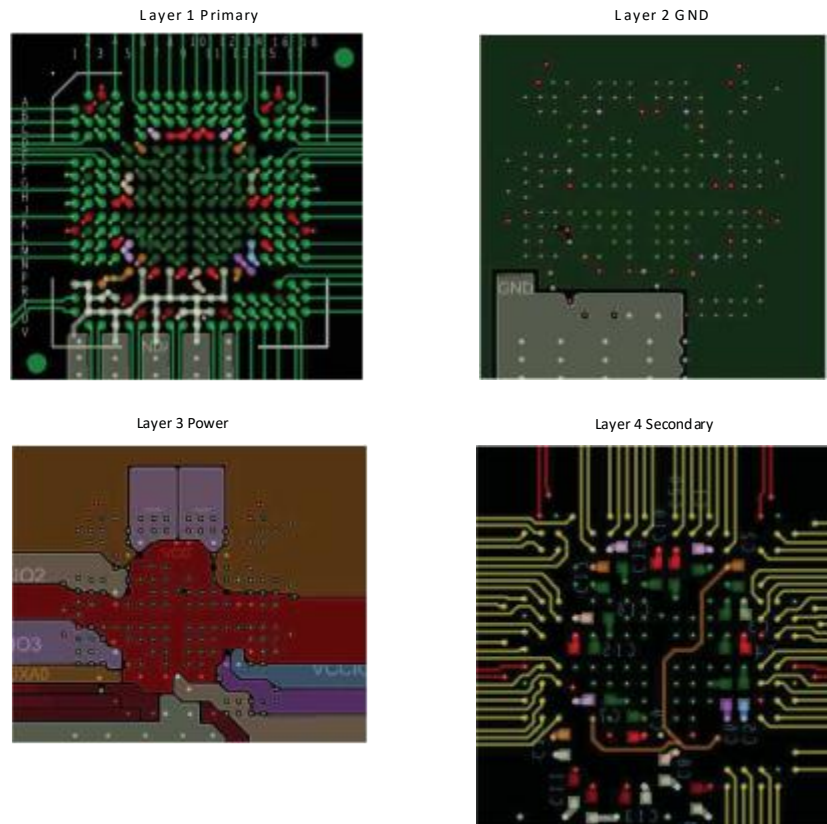


Figure 4.26. CAM Artwork Screen Shots, 285-Ball csfBGA

4.4.5. 289-Ball csBGA Breakout Example

This breakout uses a CrossLink-NX in a 9.5 × 9.5 mm, 0.50 mm pitch, 289-ball csBGA package (JE5D30-BGA289) in a 6-layer stackup with maximum I/O. This example utilizes a 0.10 mm trace width/space and 0.20 mm via drill. Two internal layers are used as reference planes for GND and PWR.

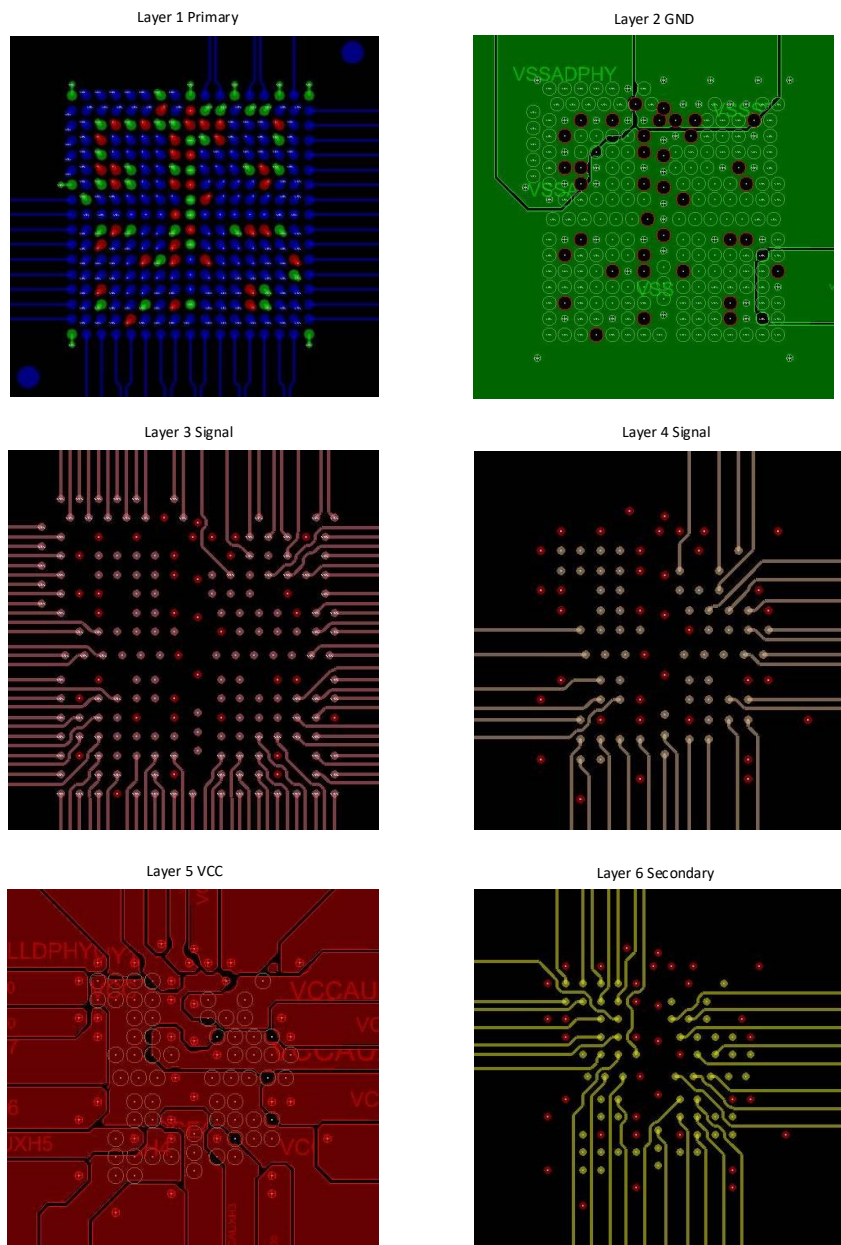


Figure 4.27. Layout Screen Shots, 289-Ball csfBGA, 0.50 mm Pitch

4.4.6. 324-Ball csfBGA Breakout Example

This breakout uses a MachXO3 PLD in a 10 × 10 mm, 0.50 mm pitch, 324-ball csfBGA package (MXO3L-6900-MG324) in a 6-layer stackup with maximum I/O. This example utilizes a blind microvia technology of 0.10 mm via drill. Trace width/space used is 0.10 mm. Two internal layers are used as reference planes for GND and PWR.

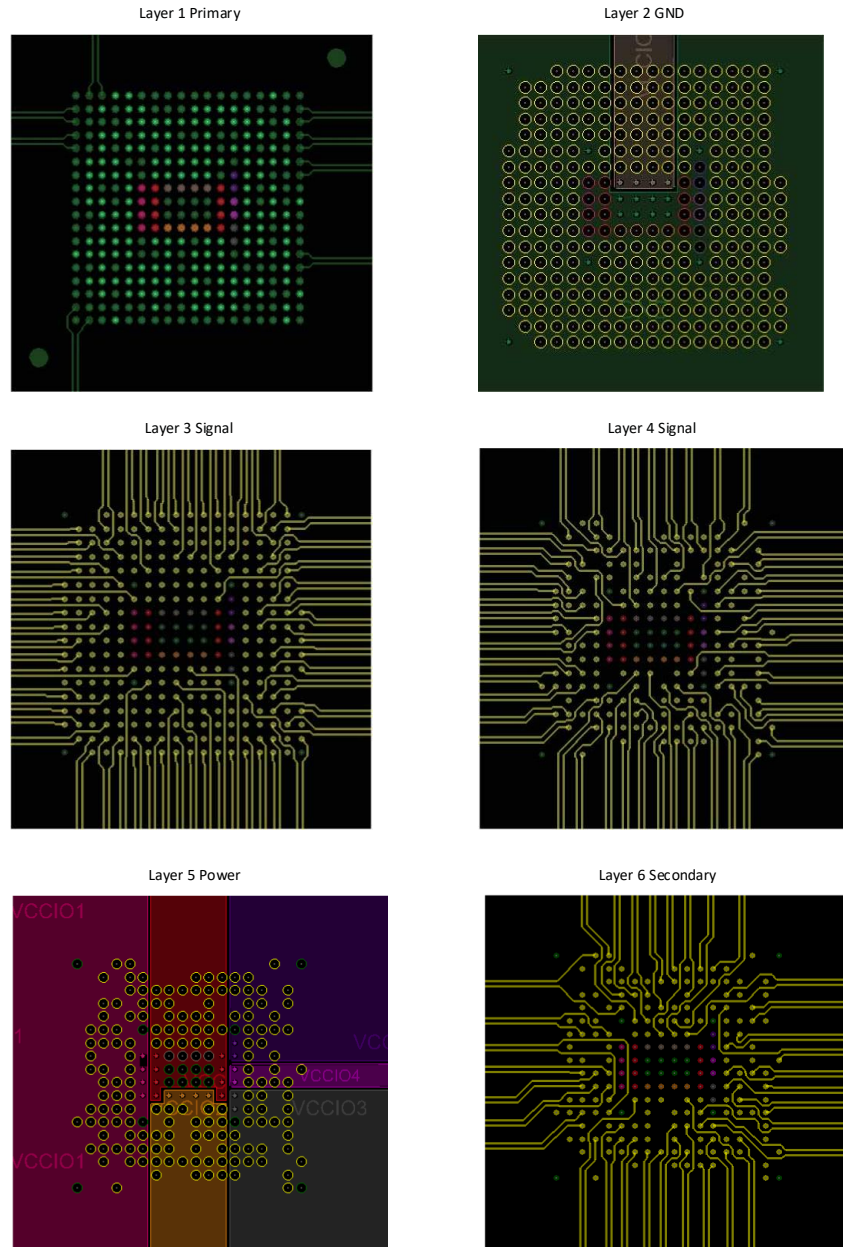


Figure 4.28. Layout Screen Shots, 324-Ball csfBGA, 0.50 mm Pitch

4.5. fcBGA Breakout Example

4.5.1. 672-Ball fcBGA Breakout Example

This breakout uses a CertusPro-NX in a 27×27 mm, 1.00 mm pitch, 672-ball FCBGA package (LFCPNX-100-LFG672) in a 6-layer stackup with maximum I/O. This example utilizes a 0.101 mm trace width/space; via pad size is 0.20 mm with 0.10 mm via drill. Two internal layers are used as reference planes for GND and PWR.

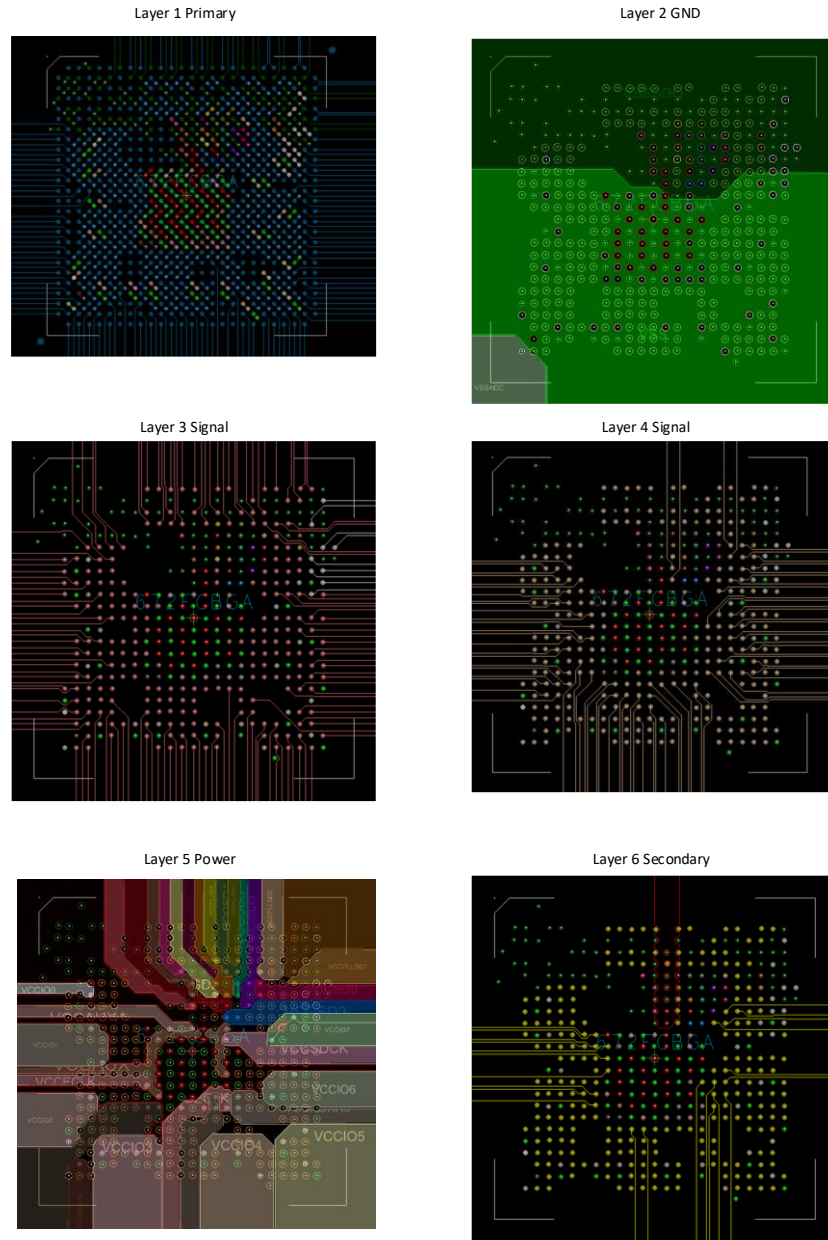


Figure 4.29. Layout Screen Shots, 672-Ball fcBGA, 1.00 mm Pitch

This breakout uses an Avant in a 27 × 27 mm, 1.00 mm pitch, 676-ball FCBGA package (LAV-AT-E70-LFG676) in a 6-layer stackup with maximum I/O. This example utilizes a 0.101 mm trace width/space; via pad size is 0.20 mm with 0.10 via drill. Two internal layers are used as reference planes for GND and PWR.

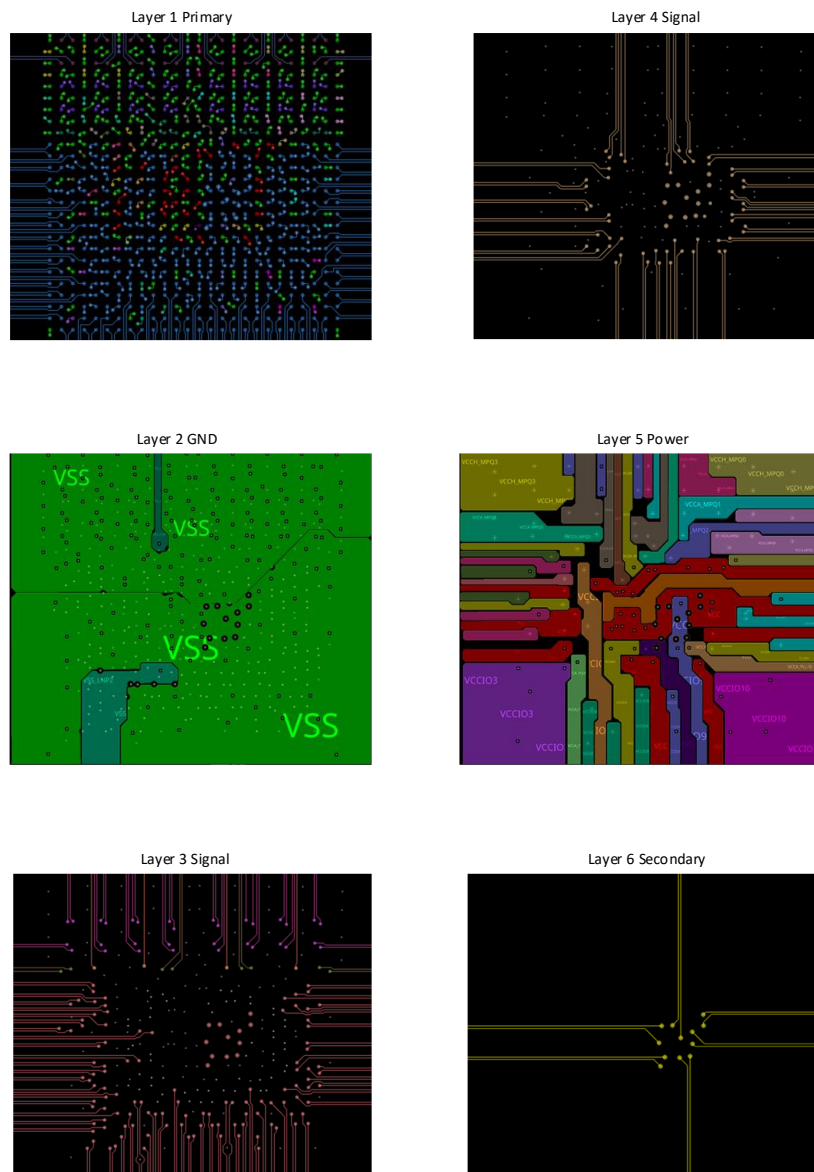


Figure 4.30. Layout Screen Shots, 676-Ball fcBGA, 1.00 mm Pitch

4.5.3. 1156-Ball fcBGA Breakout Example

This breakout uses Avant in a 35 × 35 mm, 1.00 mm pitch, 1156-ball FCBGA package in a 6-layer stackup with maximum I/O. This example utilizes a 0.127 mm trace width/space; via pad size is 0.35 mm with 0.20 via drill. Two internal layers are used as reference planes for GND and PWR.

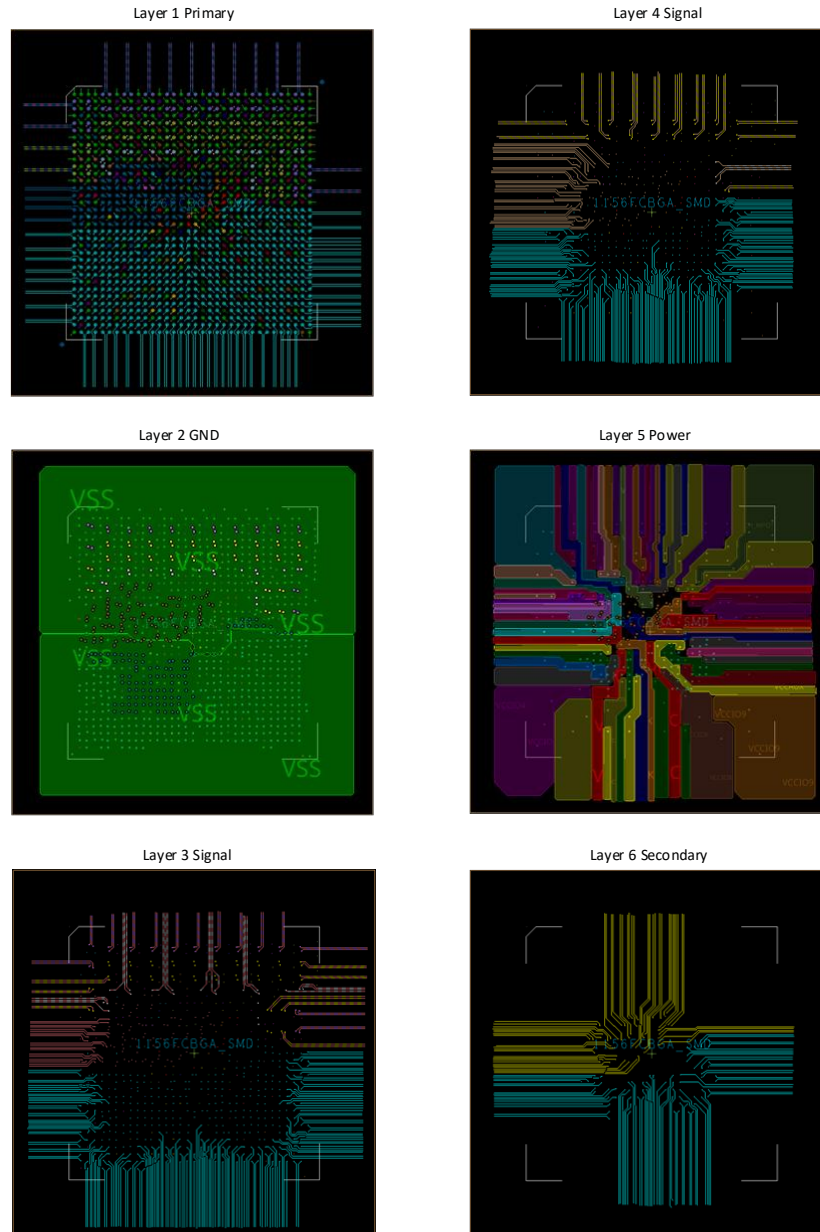


Figure 4.31. Layout Screen Shots, 1156-Ball fcBGA, 1.00 mm Pitch

4.6. FOWLP BGA Breakout Example

4.6.1. 256-Ball FOWLP Breakout Example

This breakout uses a CertusPro-NX in a 9×9 mm, 0.50 mm pitch, 256-ball fan-out WLCSP package (LFCPNX-100-ASG256) in a 6-layer stackup with maximum I/O. This example utilizes a 0.10 mm trace width/space; via pad size is 0.20 mm with 0.10 mm via drill. Two internal layers are used as reference planes for GND and PWR.

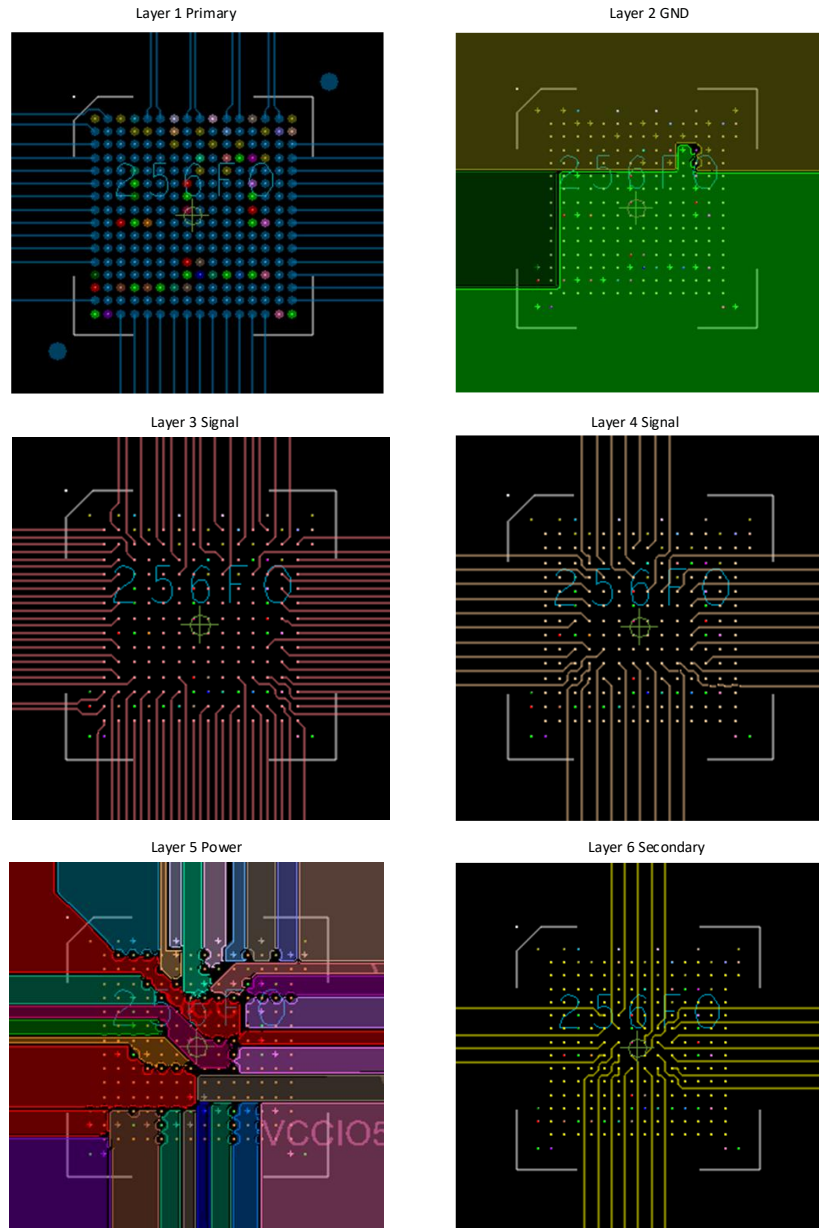


Figure 4.32. Layout Screen Shots, 256-Ball FOWLP, 0.50 mm Pitch

4.6.2. 410-FOWLP Breakout Example

This breakout example uses an Avant FPGA in a 9 x 11 mm, 0.50 mm pitch, 410-ball fan-out WLCSP package (LAV-AT-E/G/X30 ASG410 package) in a 6-layer stackup with a maximum I/O. This example utilizes a 0.076 mm trace width/space; stacked uVia in pad design; pad size is 0.250 mm with a 0.125 mm uVia. Two internal layers are used as reference planes for GND and PWR.

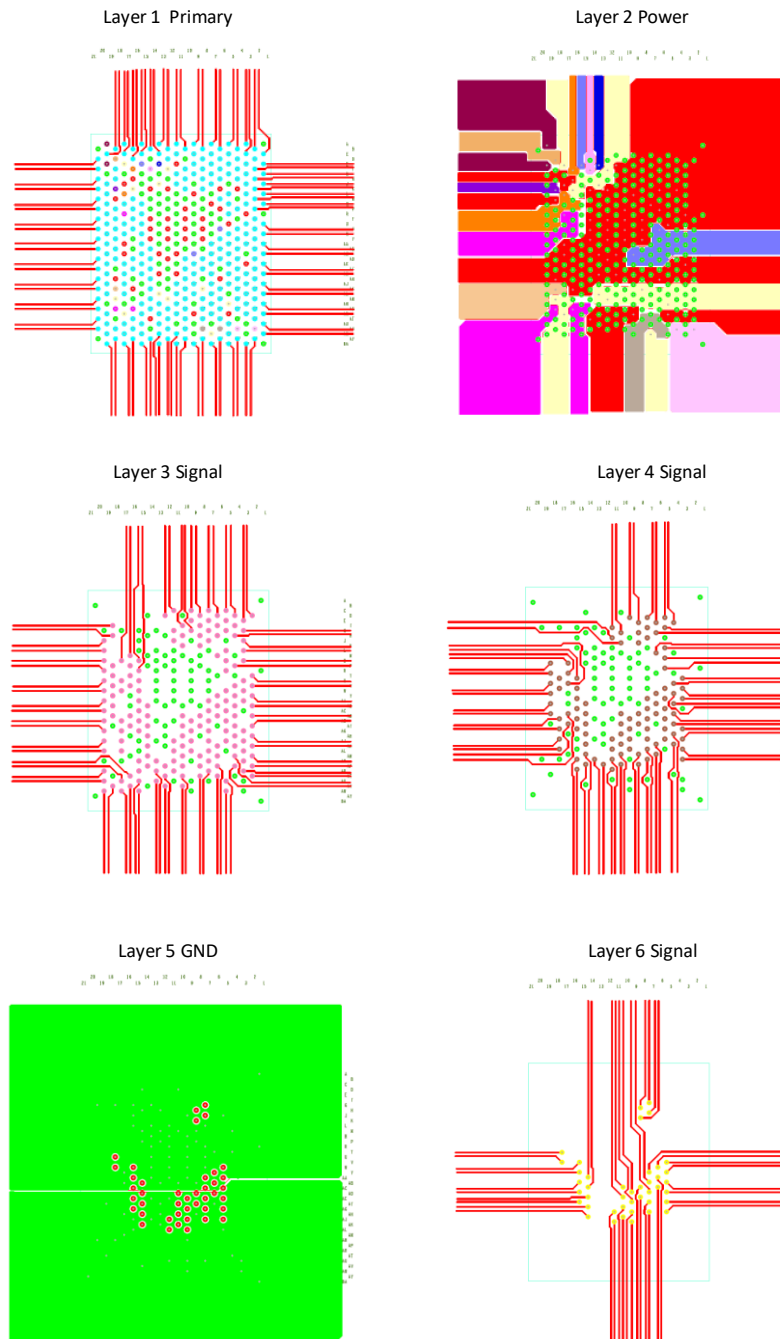


Figure 4.33. Layout Screen Shots, 410-Ball FOWLP, 0.50 mm Pitch

4.7. ftBGA Breakout Example

4.7.1. 237-Ball ftBGA Breakout Example

This breakout uses an LPTM21 PLD in a 17×17 mm, 1.00 mm pitch, 237-ball ftBGA package (LPTM21-237ftBGA) in a 4-layer stackup with maximum I/O. This example utilizes a 0.254 mm trace width/space; via pad size is 0.45 mm with 0.25 via drill. Two internal layers are used as reference planes for GND and PWR.

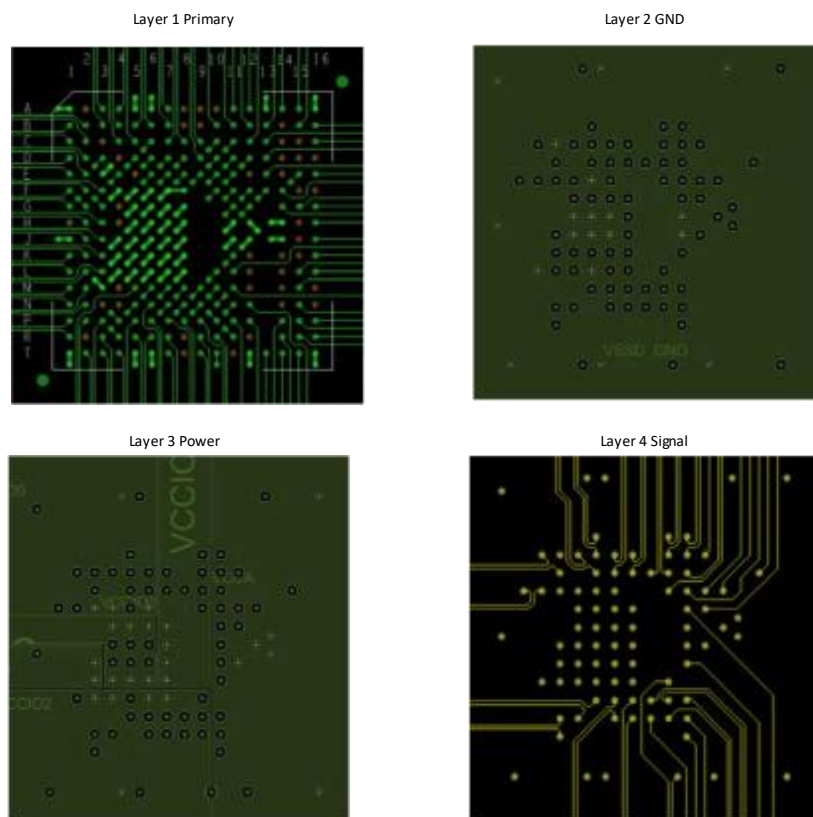


Figure 4.34. Layout Screen Shots, 237-Ball ftBGA, 1.00 mm Pitch

4.8. ucBGA Breakout and Routing Examples

4.8.1. 64-Ball ucBGA Breakout and Routing Example

This example places an ispMACH 4000ZE CPLD in a 4 × 4 mm, 0.4 mm pitch, 64-ball ucBGA package (LC4064ZE-UMN64) in a 6-layer stackup with maximum I/O utilization. This example demonstrates a modified dogbone fanout technique to get access to all pins yet limiting number of layers and via schedules, while setting up layers to use reference planes for high-speed signal traces.

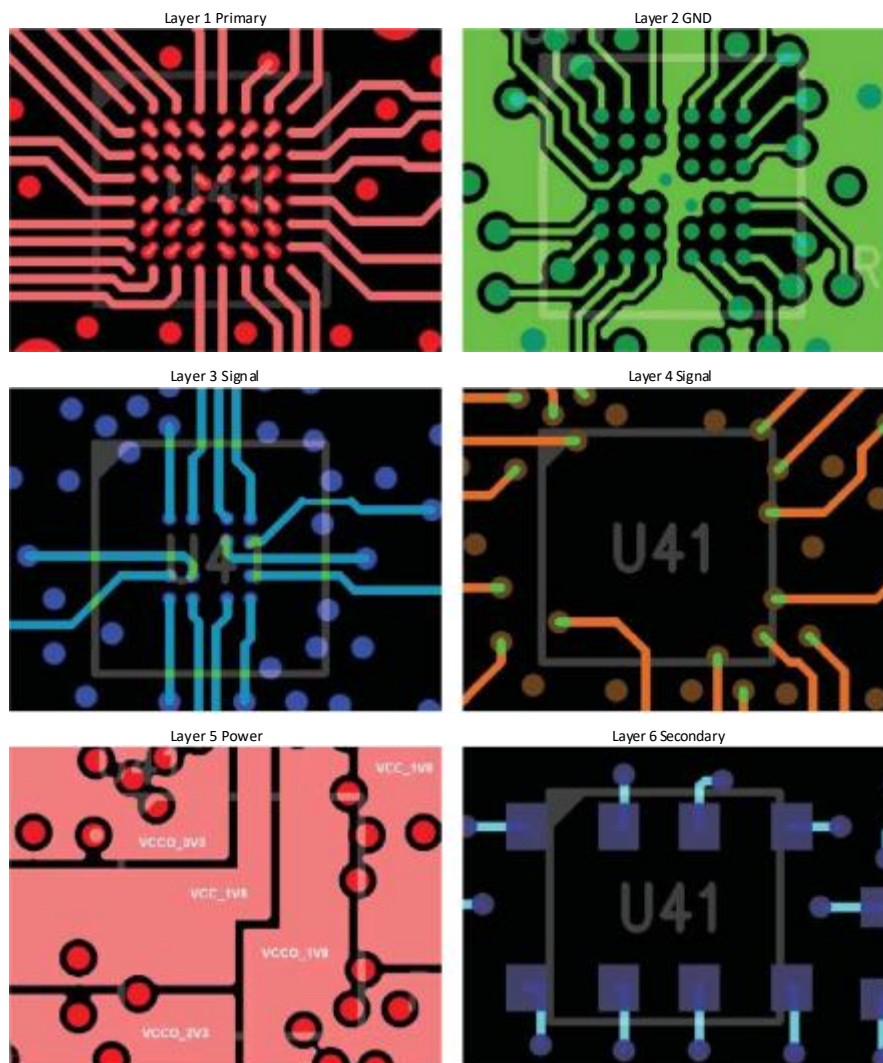


Figure 4.35. CAM Artwork Screen Shots 64-Ball ucBGA

4.8.2. 64-Ball ucfBGA Breakout and Routing Example

This breakout uses an LIF-MD6000 CrossLink PLD in a 3.5×3.5 mm, 0.4 mm pitch, 64-ball ucfBGA package (LIF-MD6000-6UFG64) in a 6-layer routing using via-in-pad technology. All vias are to be non-conductive epoxy filled. Flat surface at top land. This example utilizes a 0.127/0.089 mm trace width/space, escape via pad of 0.254 mm and via drill of 0.127 mm.

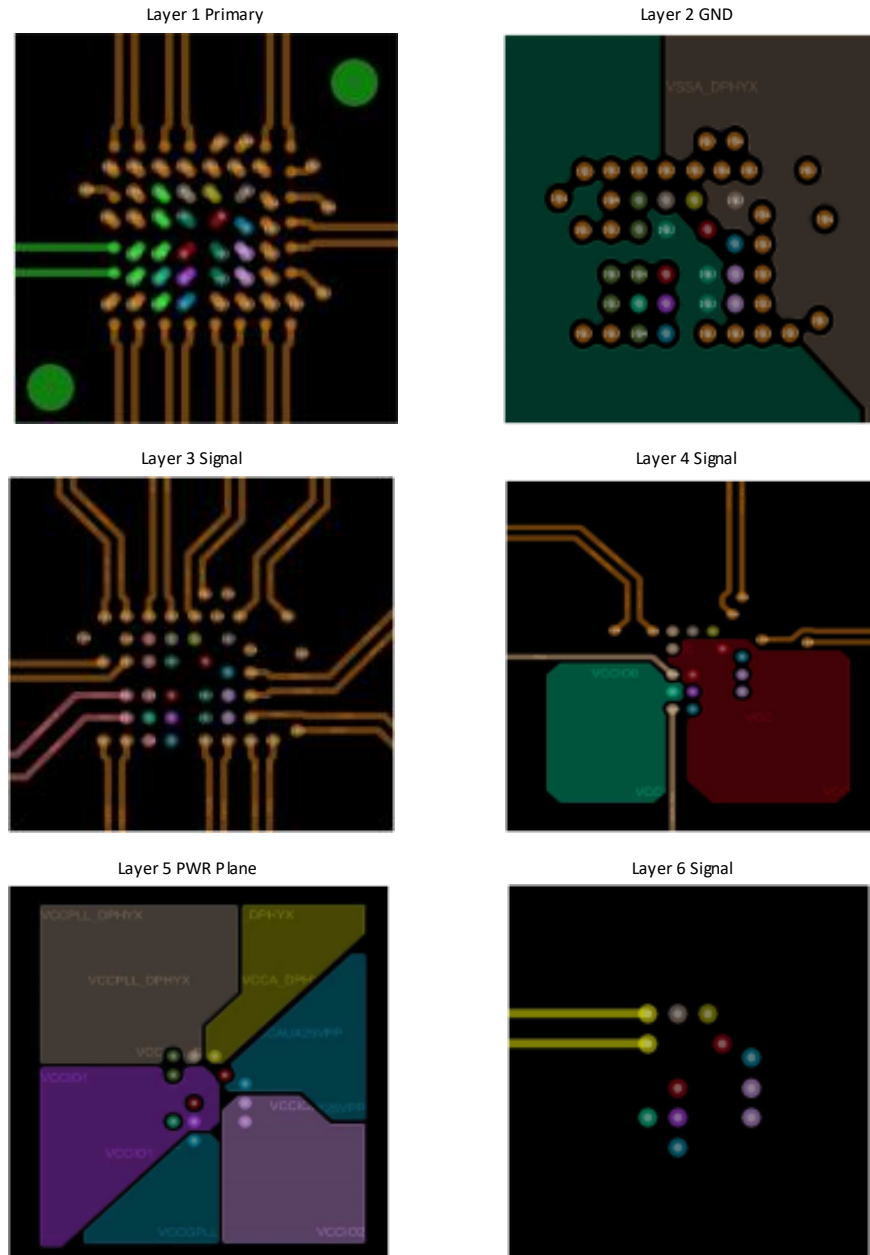


Figure 4.36. Layout Screen Shots, 64-Ball ucfBGA, 0.4 mm Pitch

4.9. WLCSP Breakout Examples

4.9.1. 16-Bump WLCSP Breakout Example

This WLCSP breakout example uses an iCE40LP device in a 1.40×1.48 mm, 0.35 mm pitch, 16-bump WLCSP package (iCE40LPXX-SWG16) in a 4-layer routing using via-in-pad technology. Four via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a 0.10 mm trace width/space, escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as reference planes.

The above recommendations for trace width/space, via drill and pad are also applicable to iCE40 UltraLite device (1.409×1.409 mm, 0.35 mm pitch, 16-Bump WLCSP package, iCE40ULXX-SWG16).

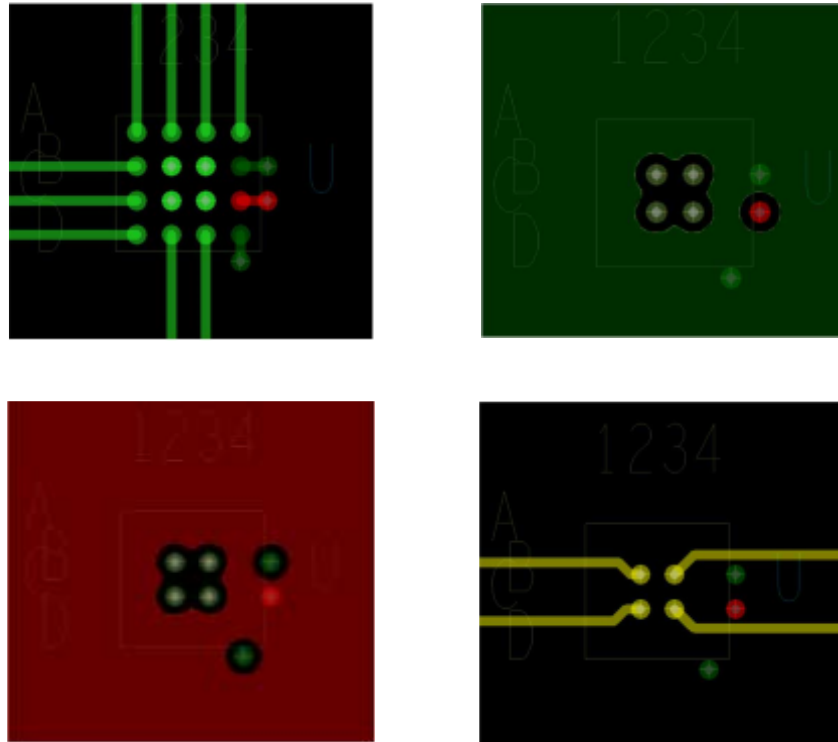


Figure 4.37. CAM Artwork Screen Shots for iCE40LP Device, 16-Bump WLCSP

4.9.2. 25-Bump WLCSP Breakout and Routing Example 1

These WLCSP breakout and routing examples use two different package pitches. Example #1 uses an iCE40LM4K PLD in a 1.7×1.7 mm, 0.35 mm pitch, 25-bump WLCSP package (iCE40LM4K-SWG25) in a 4-layer routing using via-in-pad technology. Nine via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a 0.10 mm trace width/space, neck trace width and space of 0.05 mm. Escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as reference planes.

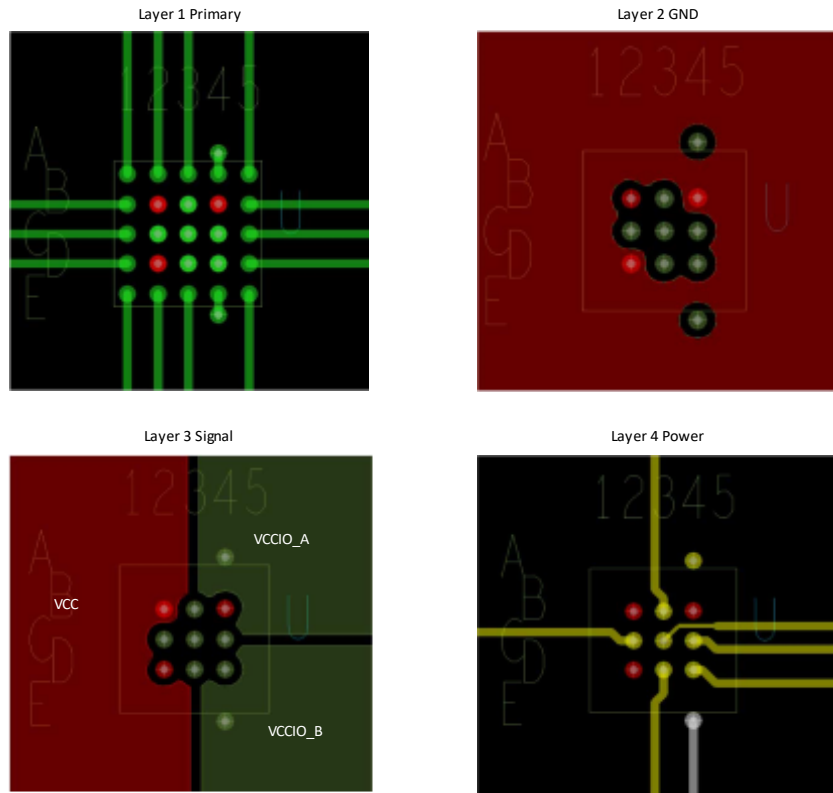


Figure 4.38. CAM Artwork Screen Shots, Example #1 25-Bump WLCSP, 0.35 mm Pitch

4.9.3. 25-Bump WLCSP Breakout and Routing Example 2

Example #2 uses a MachXO2 PLD in a 2.5×2.5 mm, 0.40 mm pitch, 25-bump WLCSP package (ICE40LM4KSWG25) in a 4-layer routing using via-in-pad technology. All eleven via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a 0.12 mm trace width/space, escape via land of 0.25 mm and via drill of 0.12 mm. Two internal layers are set as reference planes.

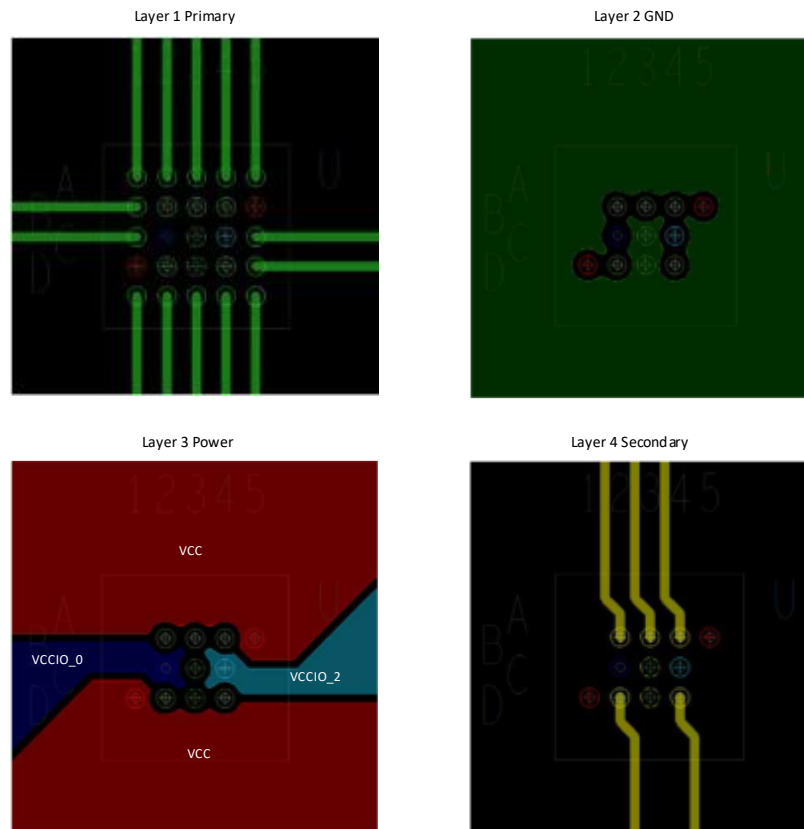


Figure 4.39. CAM Artwork Screen Shots, Example #2 25-Bump WLCSP, 0.4 mm Pitch

4.9.4. 30-Ball WLCSP Breakout and Routing Example 1

This breakout uses an iCE40UP5K PLD in a 2.11×2.537 mm, 0.40 mm pitch, 30-ball WLCSP package (iCE40UP5K-UWG30) in a 4-layer routing using via-in-pad technology. Seventeen vias are to be non-conductive epoxy filled and planarized. This example utilizes a 0.100 mm trace width/space, escape via pad of 0.200 mm and via drill of 0.100 mm. Two internal layers are set as reference planes.

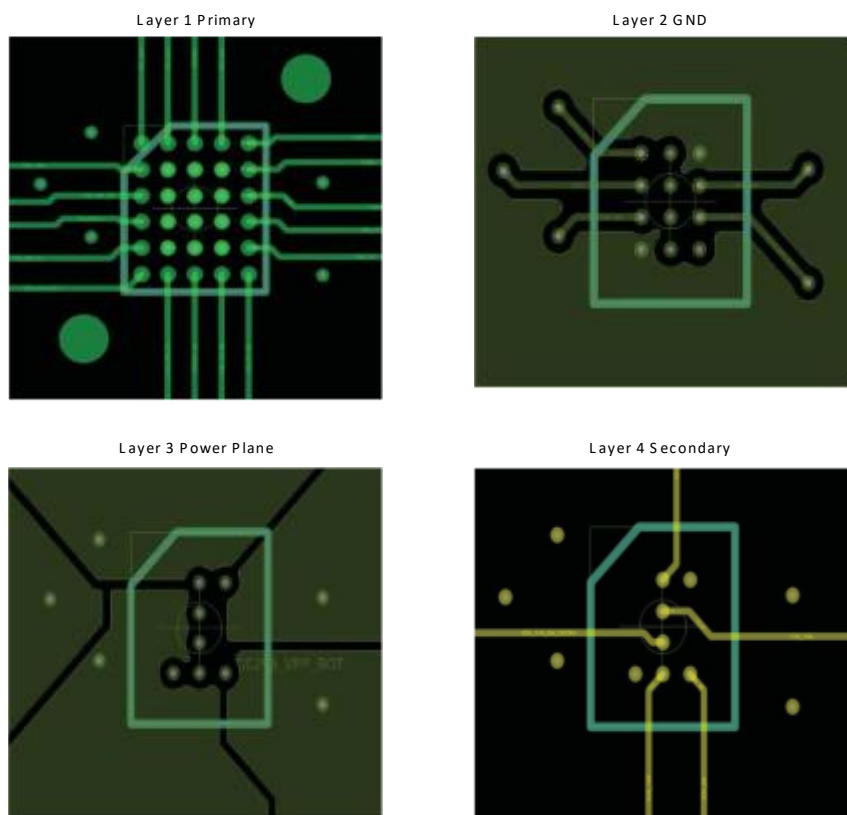


Figure 4.40. Layout Screen Shots, 30-Ball WLCSP, 0.40 mm Pitch

4.9.5. 30-Ball WLCSP Breakout and Routing Example 2

This breakout uses an iCE40UP PLD in a 2.11×2.537 mm, 0.40 mm pitch, 30-ball WLCSP package in a 1-layer routing without using any via-in-pad technology. This example utilizes a space/etch/space of 2.6/2.6/2.6 mil or 2.5/2.9/2.5 mil.

Table 4.3. 30-ball ucBGA, 1-Layer Layout Dimensions

Standard	Dimension	
Layers	1	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.30 mm	11.81 mils
Trace Width	0.0660 mm	2.6 mils
Trace Spacing	0.0660 mm	2.6 mils

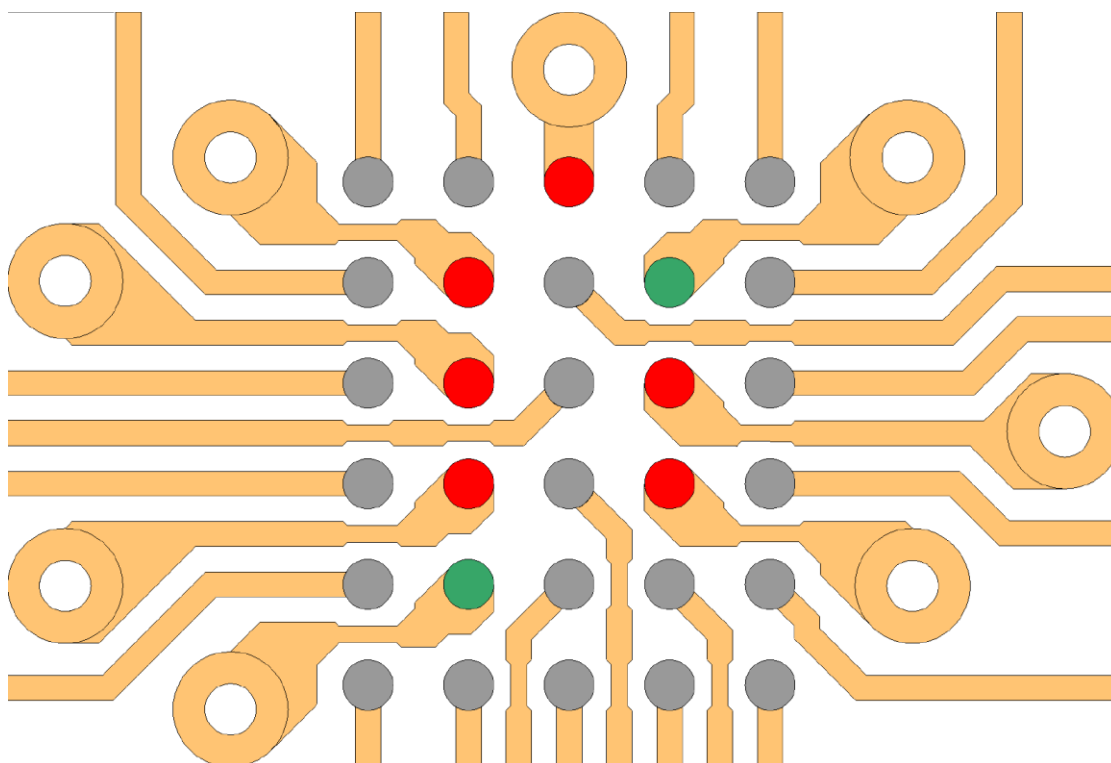


Figure 4.41. Drawing Screen Shot, 30-Ball WLCSP, 0.40 mm Pitch

4.9.6. 36-Bump WLCSP Breakout Example 1

This breakout uses a MachXO3 PLD in a 2.487×2.541 mm, 0.40 mm pitch, 36-bump WLCSP package (MXO3L-1300E-UWG36) with two different routing options. Example1: in a 4-layer routing using through microvia technology. Twenty-five via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a 0.07 mm trace width and 0.05 mm space, escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as signal layer and a reference plane.

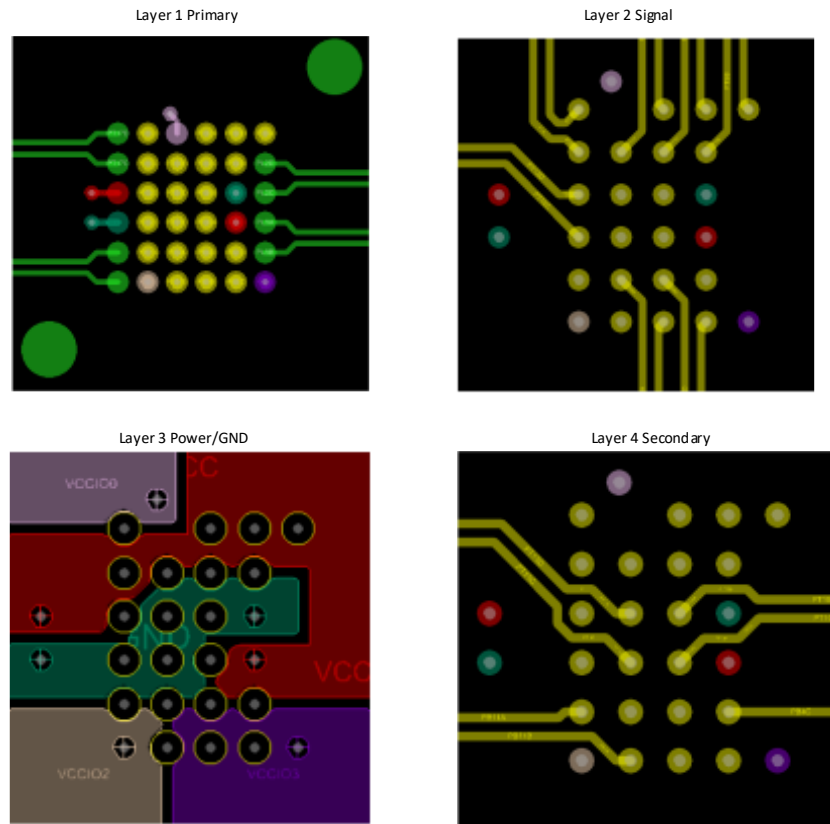


Figure 4.42. Layout Screen Shots, Example #1 36-Bump WLCSP, 0.40 mm Pitch

4.9.7. 36-Bump WLCSP Breakout Example 2

Example 2 is also in a 4-layer routing using blind vias, microvia technology. Twenty-three via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a 0.10 mm trace width/space and neck down width/space of 0.07 mm. Escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as signal layer and a reference plane.

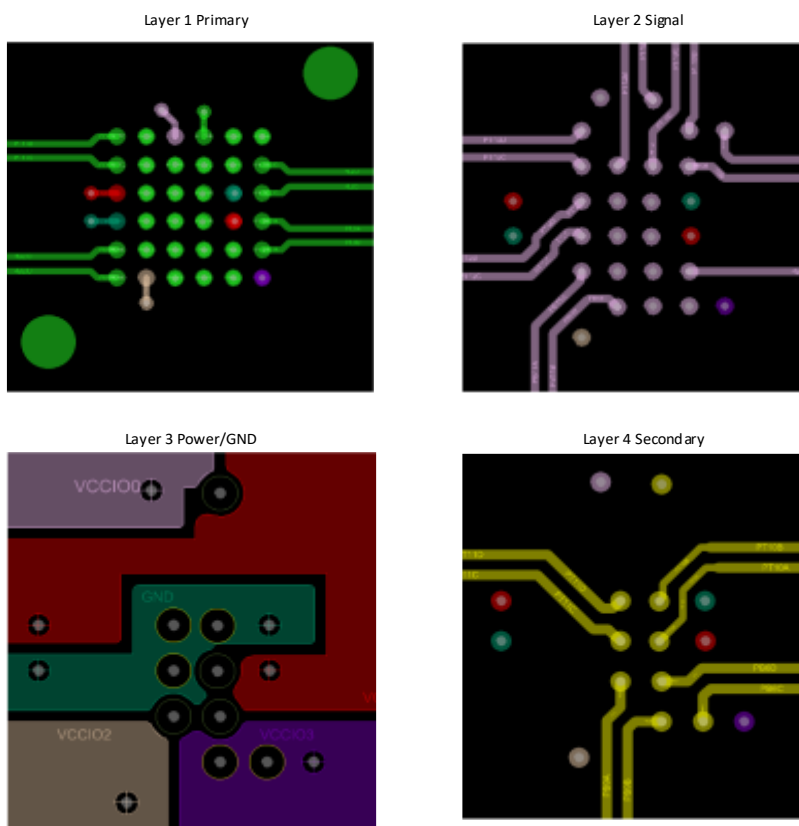


Figure 4.43. Layout Screen Shots, Example # 2 36-Bump WLCSP, 0.40 mm Pitch

4.9.8. 36-Bump WLCSP Breakout Example 3

This breakout uses an iCE40 Ultra PLD in a 2.06×2.06 mm, 0.35 mm pitch, 36-bump WLCSP package (ICE5LP4K-SWG36) in a 4-layer routing using via-in-pad technology. Sixteen via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a 0.10 mm trace width/space (neck down trace width of 0.08 mm), escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as reference planes.

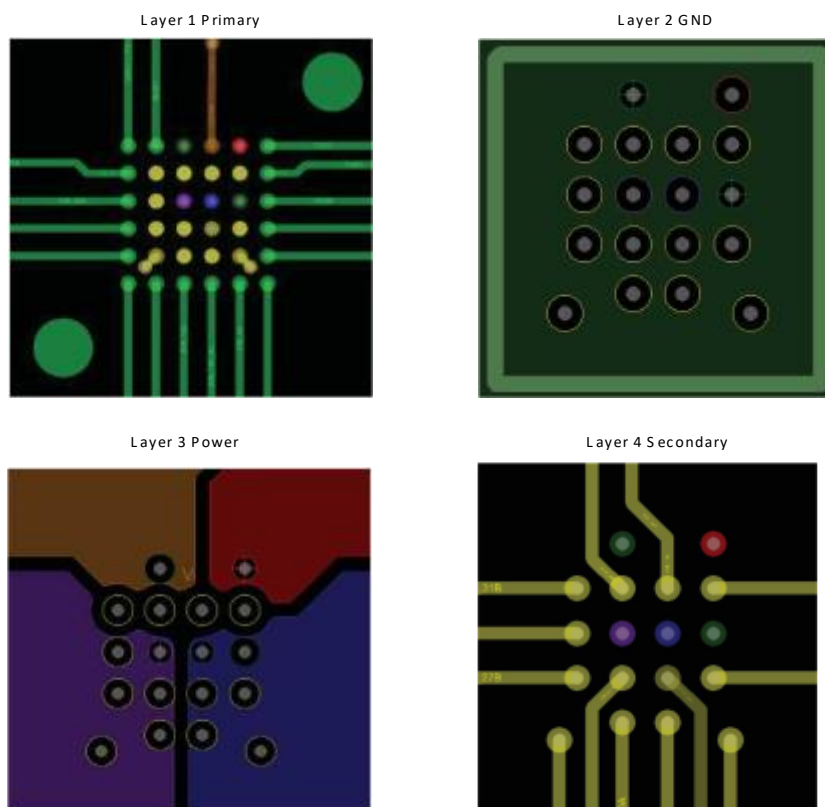


Figure 4.44. Layout Screen Shots, Example # 3 36-Bump WLCSP, 0.40 mm Pitch

4.9.9. 36-Bump WLCSP Breakout Example 4

This breakout uses an LIF-MD6000 PLD in a 2.51×2.51 mm, 0.4 mm pitch, 36-bump WLCSP package (LIFMD6000-6UWG36) in a 4-layer routing using via-in-pad technology. All vias are to be non-conductive epoxy filled. Flat surface at top land. This example utilizes a 0.063/0.043 mm trace width/space, escape via pad of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as reference planes.

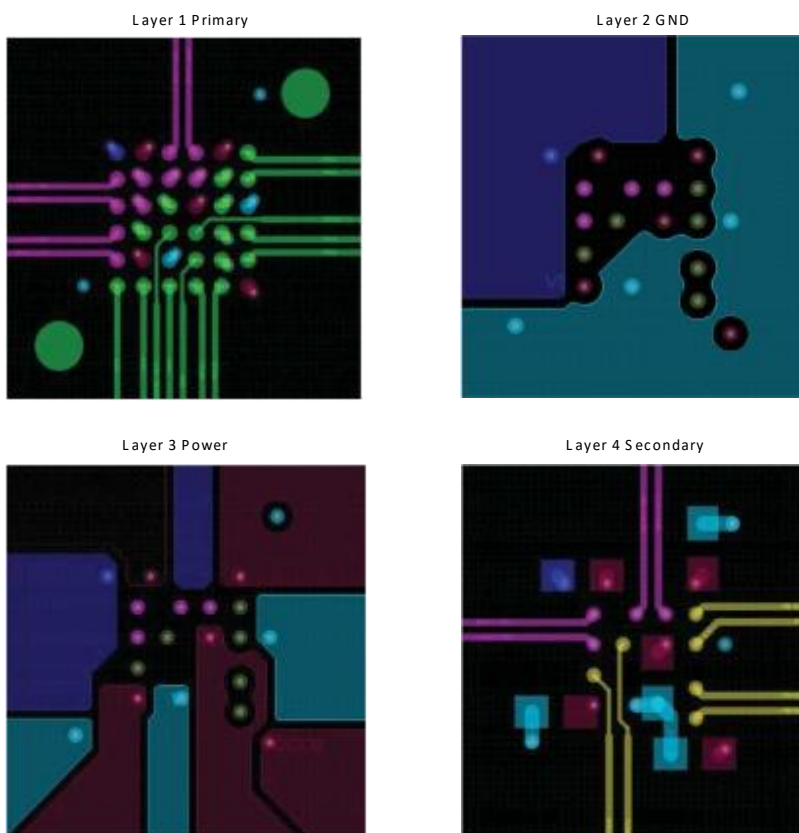


Figure 4.45. Layout Screen Shots, Example # 4 36-Bump WLCSP, 0.40 mm Pitch

4.9.10. 49-Bump WLCSP Breakout Example 1

This breakout uses a MachXO3 PLD in a 3.106 × 3.185 mm, 0.40 mm pitch, 49-bump WLCSP package (MXO3L-2100E-UWG49) with two different routing options. Example1: in a 4-layer routing using through microvia technology. Twenty-five via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a BGA land of 0.30 mm, 0.07 mm trace width and 0.05 mm space, escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as signal layer and a reference plane.

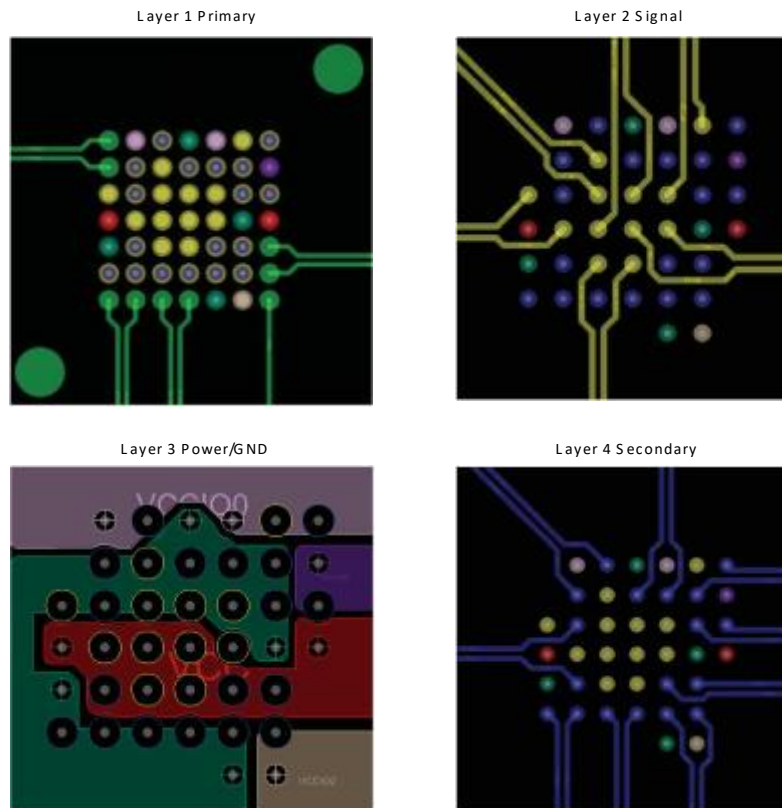


Figure 4.46. Layout Screen Shots, Example #1 49-Bump WLCSP, 0.40 mm Pitch

4.9.11. 49-Bump WLCSP Breakout Example 2

Example 2 is also in a 4-layer routing using blind vias, microvia technology. Twenty-three via-in-pads are to be nonconductive epoxy filled and planarized. This example utilizes a BGA land of 0.25 mm, 0.10 mm trace width/space and neck down width/space of 0.07 mm. Escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as signal layer and a reference plane.

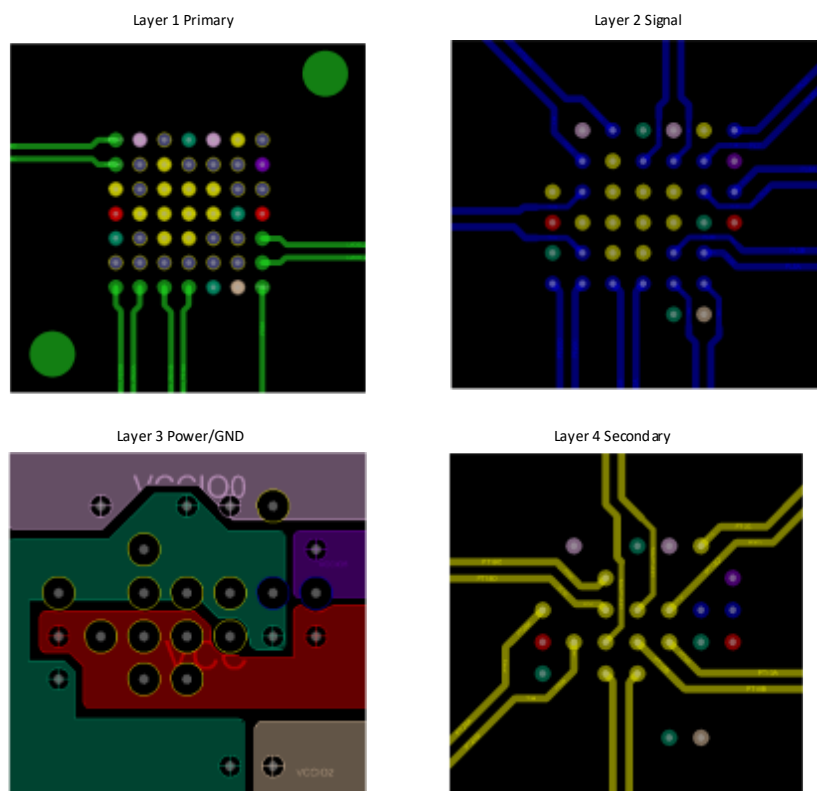


Figure 4.47. Layout Screen Shots, Example #2 49-Bump WLCSP, 0.40 mm Pitch

4.9.12. 72-Bump WLCSP Breakout Example

This breakout uses a CrossLink-NX in a 4.125×3.807 mm, 0.40 mm pitch, 72-bump WLCSP package (LIFCL-17-UWG72) in a 4-layer routing using via-in-pad technology. Fifty-seven vias are to be non-conductive epoxy filled and planarized. This example utilizes a 0.076 mm trace width and 0.050 mm space, escape via pad of 0.200 mm and via drill of 0.100 mm. Two internal layers are set as reference planes.

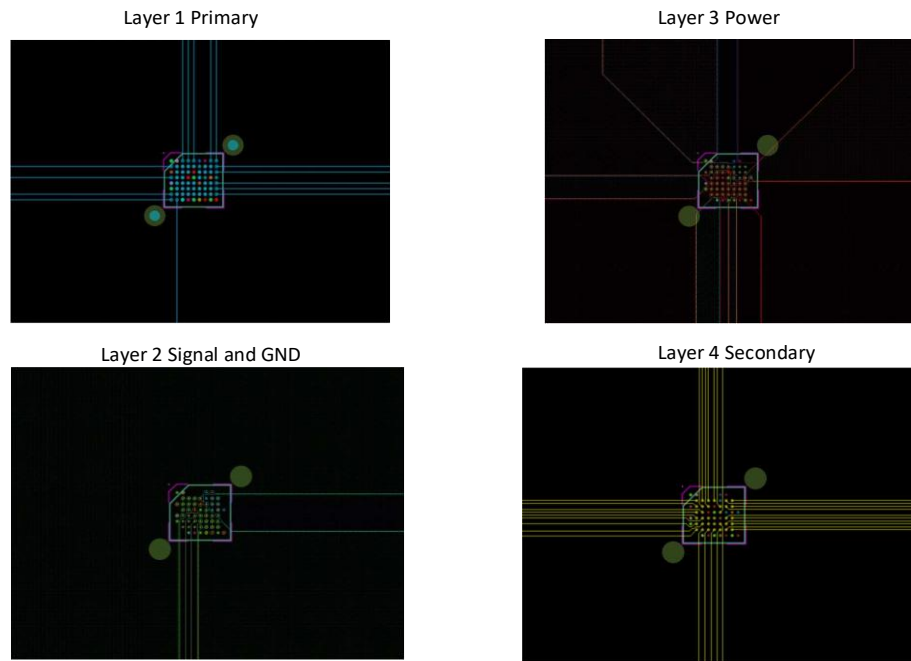


Figure 4.48. Layout Screen Shots, Example 72-Bump WLCSP, 0.40 mm Pitch

4.9.13. 81-Bump WLCSP Breakout Example 1

This breakout uses a MachXO3 PLD in a 3.797 × 3.693 mm, 0.40 mm pitch, 81-bump WLCSP package (MXO3L-2100E-UWG81) with two different routing options. Example1: in a 4-layer routing using through microvia technology. Twenty-five via-in-pads are to be non-conductive epoxy filled and planarized. This example utilizes a BGA land of 0.30 mm, 0.07 mm trace width and 0.05 space, escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as signal layer and a reference plane.

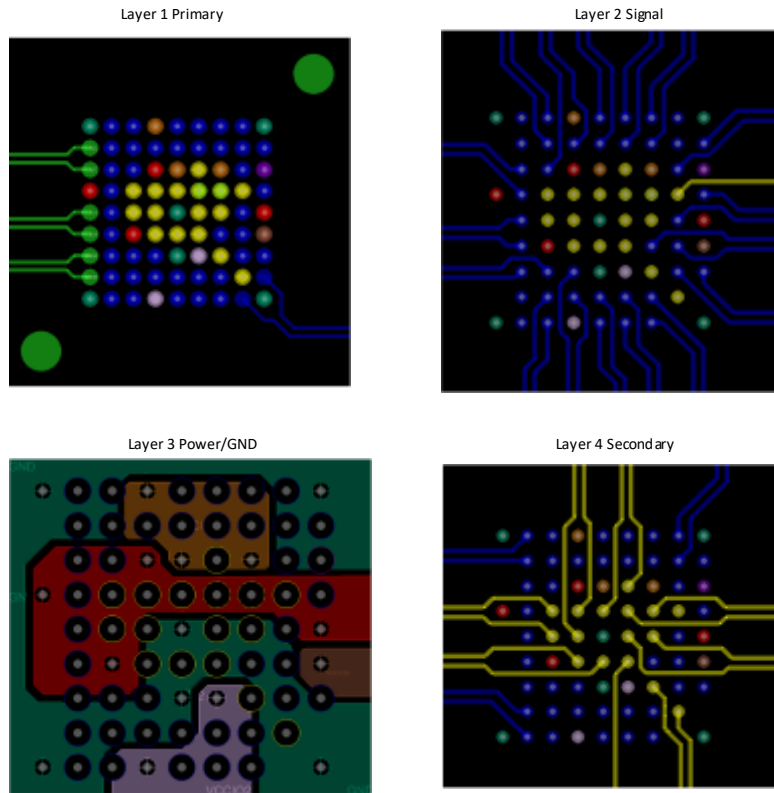


Figure 4.49. Layout Screen Shots, Example #1 81-Bump WLCSP, 0.40 mm Pitch

4.9.14. 81-Bump WLCSP Breakout Example 2

Example 2 is also in a 4-layer routing using blind vias, microvia technology. Twenty-three via-in-pads are to be nonconductive epoxy filled and planarized. This example utilizes a BGA land of 0.25 mm, 0.10 mm trace width/space and neckdown width/space of 0.07 mm. Escape via land of 0.20 mm and via drill of 0.10 mm. Two internal layers are set as signal layer and a reference plane.

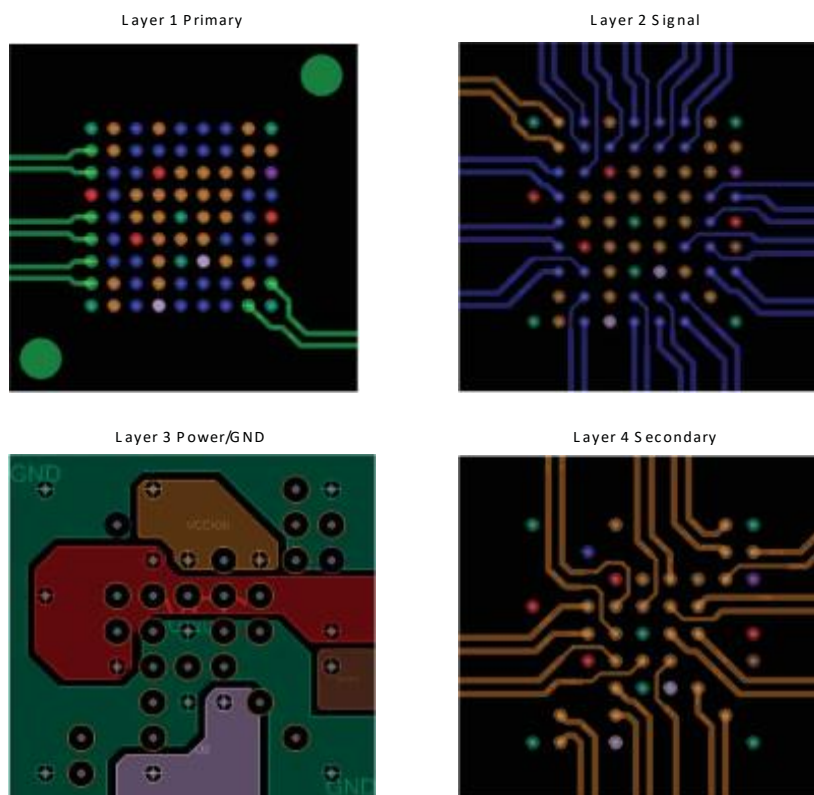


Figure 4.50. Layout Screen Shots, Example #2 81-Bump WLCSP, 0.40 mm Pitch

4.10. iCE40 ucBGA Fully-/Partially-Populated Ball Grid Array

4.10.1. 36-ball ucBGA Fully-Populated Ball-Grid Array, All 25 User I/O

The 36-ball ucBGA package is a 2.5 x 2.5 mm, fully-populated array of 0.4 mm solder balls.

Table 4.4. 36-ball ucBGA, Four-Layer Layout Dimensions

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.34 mm	13.39 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

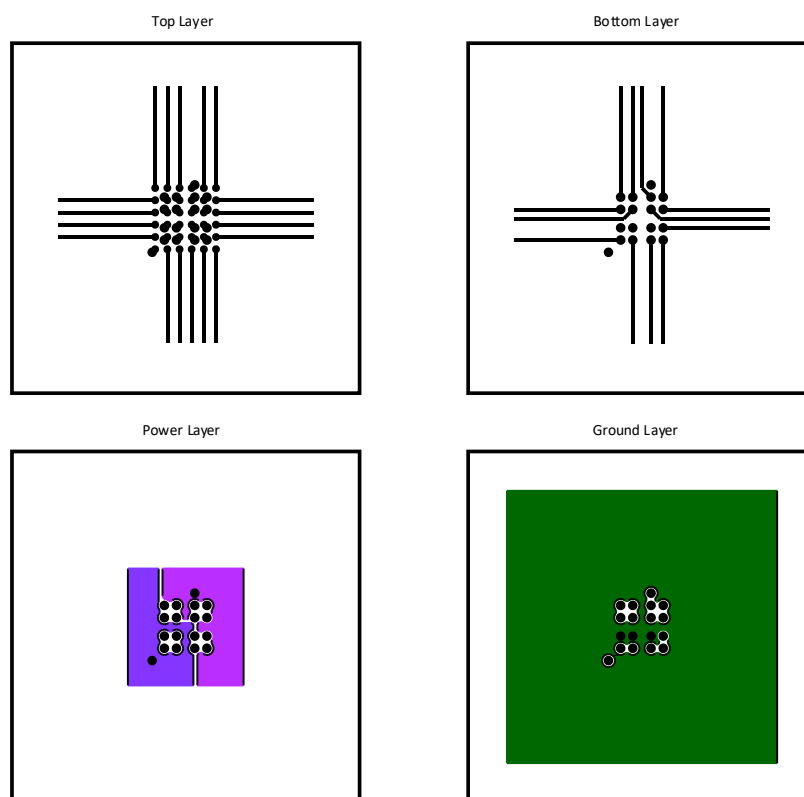


Figure 4.51. Four-Layer Example Shown for 36-ball ucBGA

4.10.2. 36-ball ucBGA Fully-Populated Ball-Grid Array, All 27 User I/O

The 36-ball ucBGA package is a 2.5 x 2.5 mm, fully-populated array of 0.4 mm solder balls. This example utilizes a space/etch/space of 2.6/2.6/2.6 mil or 2.5/2.9/2.5 mil.

Table 4.5. 36-ball ucBGA, 1-Layer Layout Dimensions

Standard	Dimension	
Layers	1	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.30 mm	11.81 mils
Trace Width	0.0660 mm	2.6 mils
Trace Spacing	0.0660 mm	2.6 mils

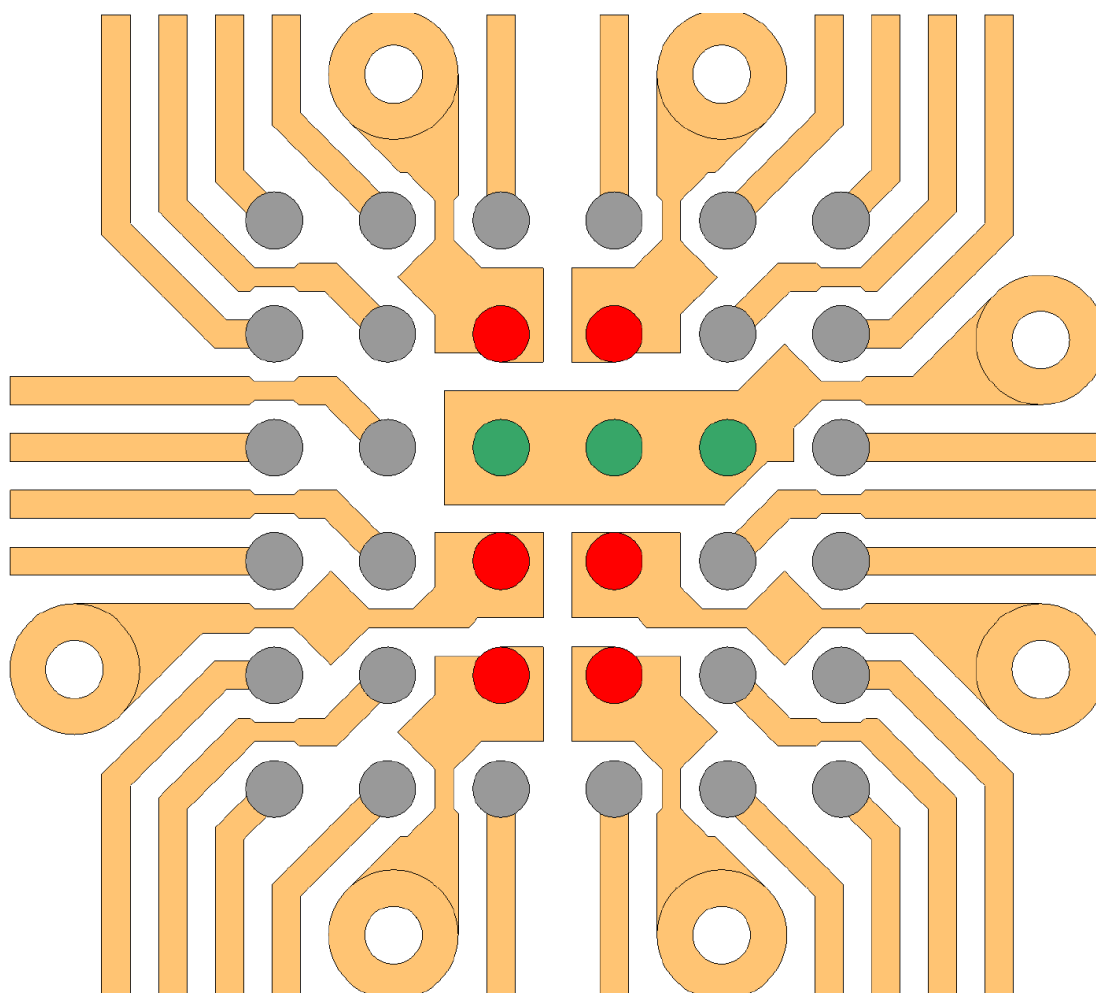


Figure 4.52. One-Layer Example Shown for 36-ball ucBGA

4.10.3. 49-ball ucBGA Fully-Populated Ball-Grid Array, All 35 User I/O

The 49-ball ucBGA package is a 3 x 3 mm, fully-populated array of 0.4 mm solder balls.

Table 4.6. 49-ball ucBGA, Four-Layer Layout Dimensions

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.34 mm	13.39 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

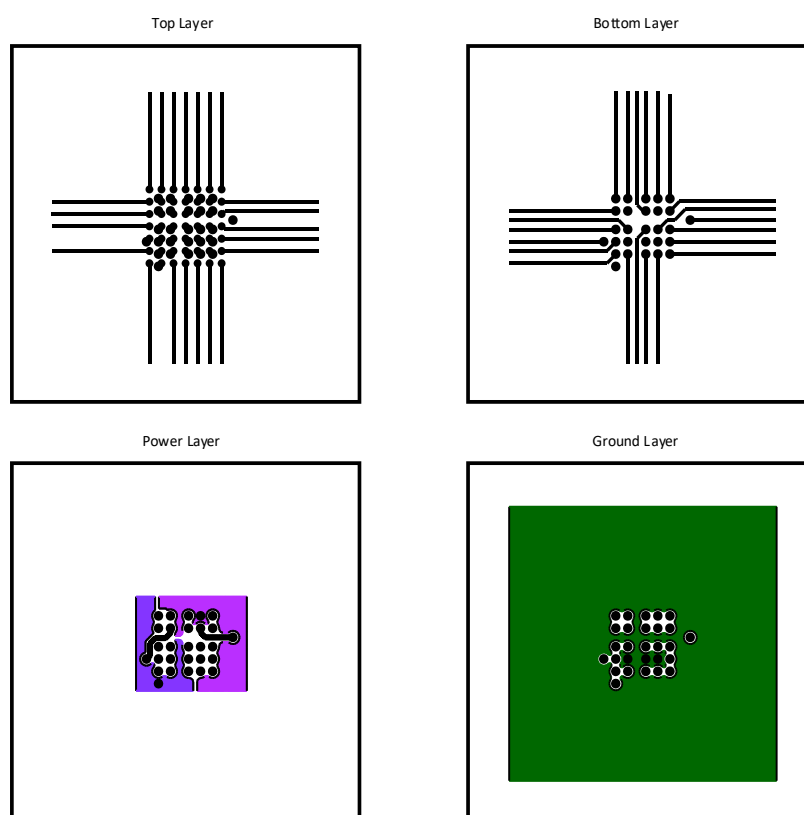


Figure 4.53. Four-Layer Example Shown for 49-ball ucBGA

4.10.4. 81-ball ucBGA Fully-Populated Ball-Grid Array - Four Layers, 48 User I/O

The 81-ball ucBGA package is a 4.0 x 4.0 mm, fully-populated array of 0.4 mm solder balls. This layout option uses just four total layers but still provides 48 user I/O, 15 less than the six-layer option. This option provides 13 more I/O than the CM49 but still uses just four PCB layers.

Table 4.7. 81-ball ucBGA, Four-Layer Layout Dimensions

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.20 mm	7.87 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

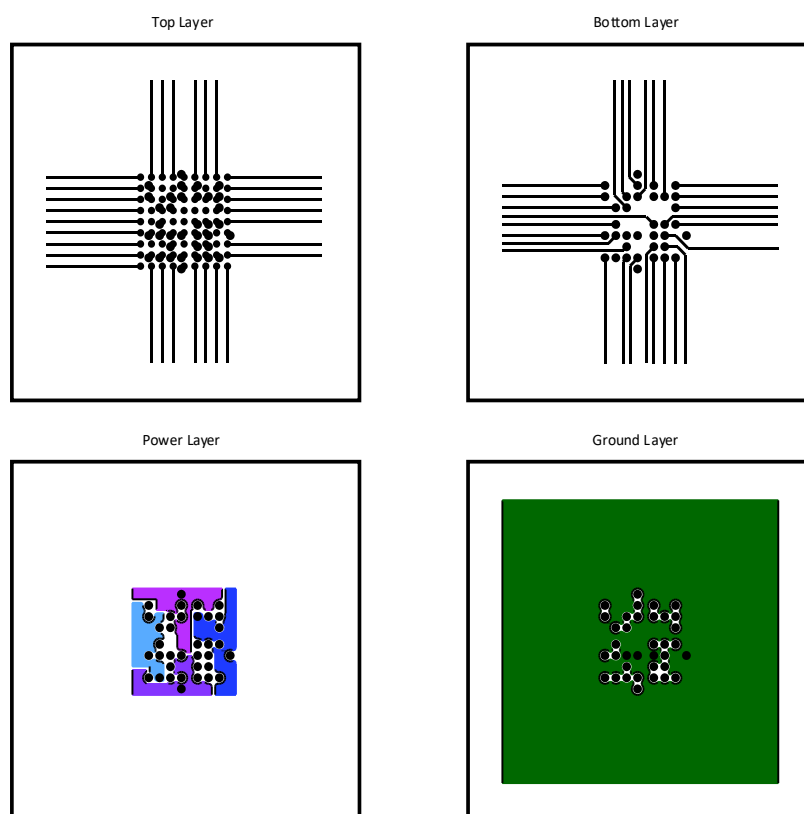


Figure 4.54. Four-Layer 81-ball ucBGA

4.10.5. 81-ball ucBGA Fully-Populated Ball-Grid Array - Six Layers, All 63 User I/O

The 81-ball ucBGA package is a 4.0 x 4.0 mm, fully-populated array of 0.4 mm solder balls.

Table 4.8. 81-ball ucBGA, Six-Layer Layout Dimensions

Standard	Dimension	
Layers	6	
BGA Solder Pad Size	0.20 mm	7.847 mils
BGA Pad Solder Mask	0.34 mm	13.39 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

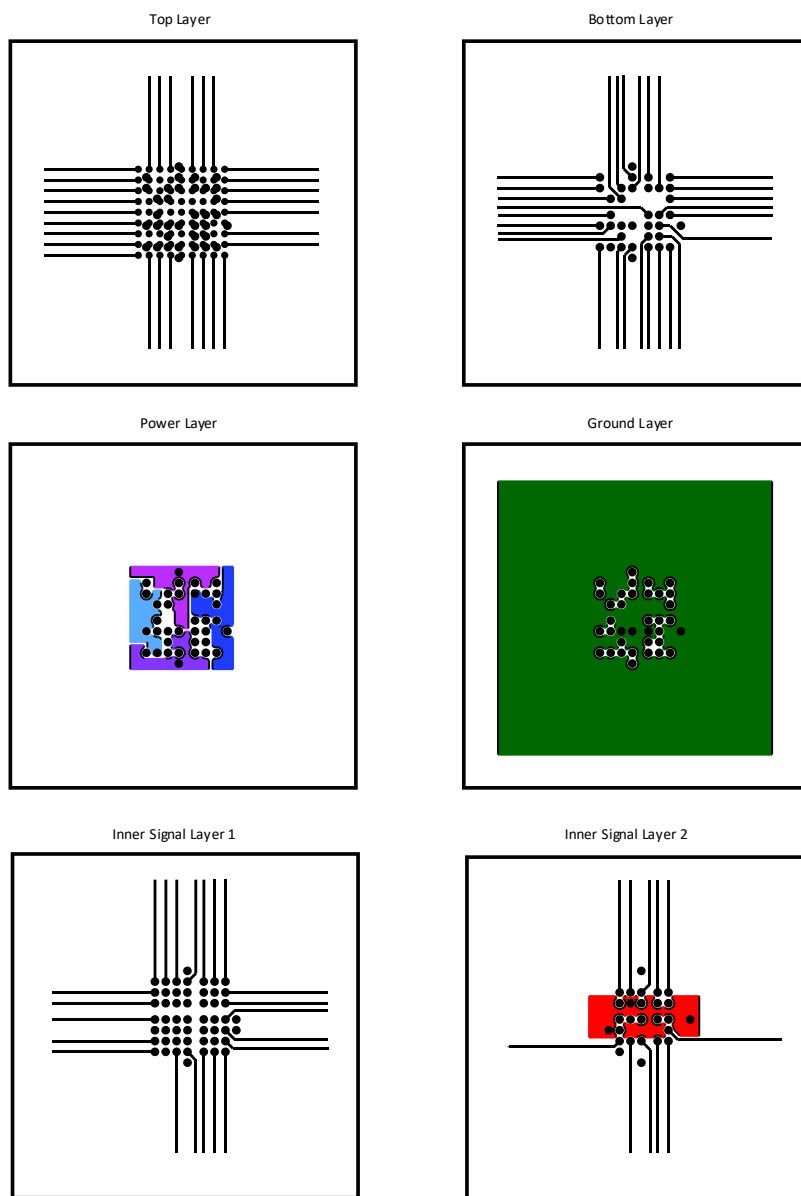


Figure 4.55. Six-Layer 81-ball ucBGA

4.10.6. 121-ball ucBGA Fully-Populated Ball-Grid Array - Four Layers, 57 User I/O

The 121-ball ucBGA package is a 5.0 × 5.0 mm, fully-populated array of 0.4 mm solder balls. This layout option uses just four total layers but still provides 57 user I/O, 38 less than the six-layer option.

Table 4.9. 121-ball ucBGA, Four-Layer Layout Dimensions

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.20 mm	7.87 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

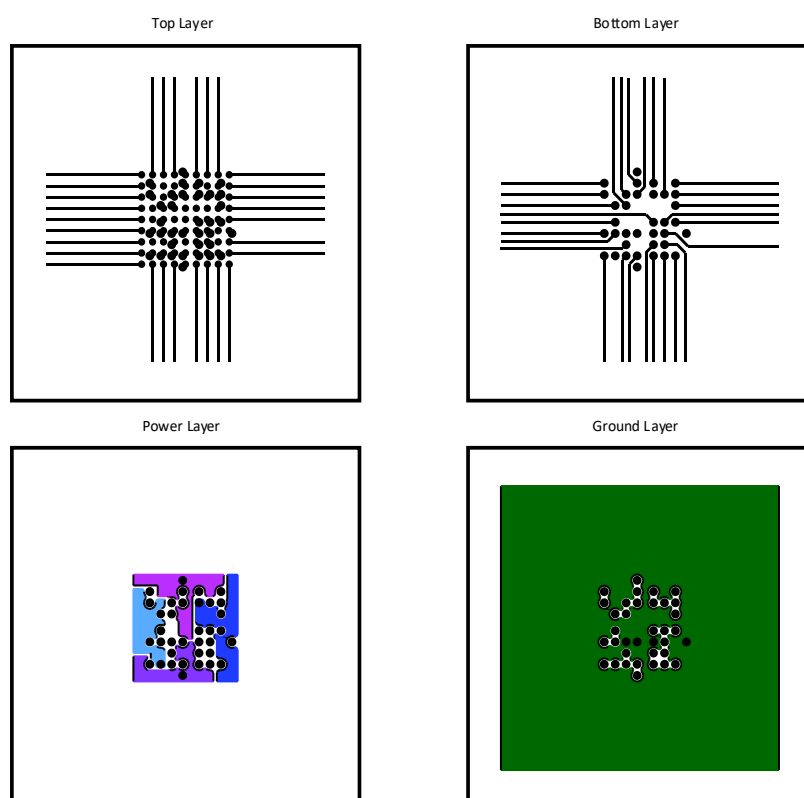


Figure 4.56. Four-Layer 121-ball ucBGA

4.10.7. 121-ball ucBGA Fully-Populated Ball-Grid Array - Six Layers, All 95 User I/O

The 121-ball ucBGA package is a 5.0 × 5.0 mm, fully-populated array of 0.4 mm solder balls.

Table 4.10. 121-ball ucBGA, Six-Layer Layout Dimensions

Standard	Dimension	
Layers	6	
BGA Solder Pad Size	0.20 mm	7.847 mils
BGA Pad Solder Mask	0.34 mm	13.39 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

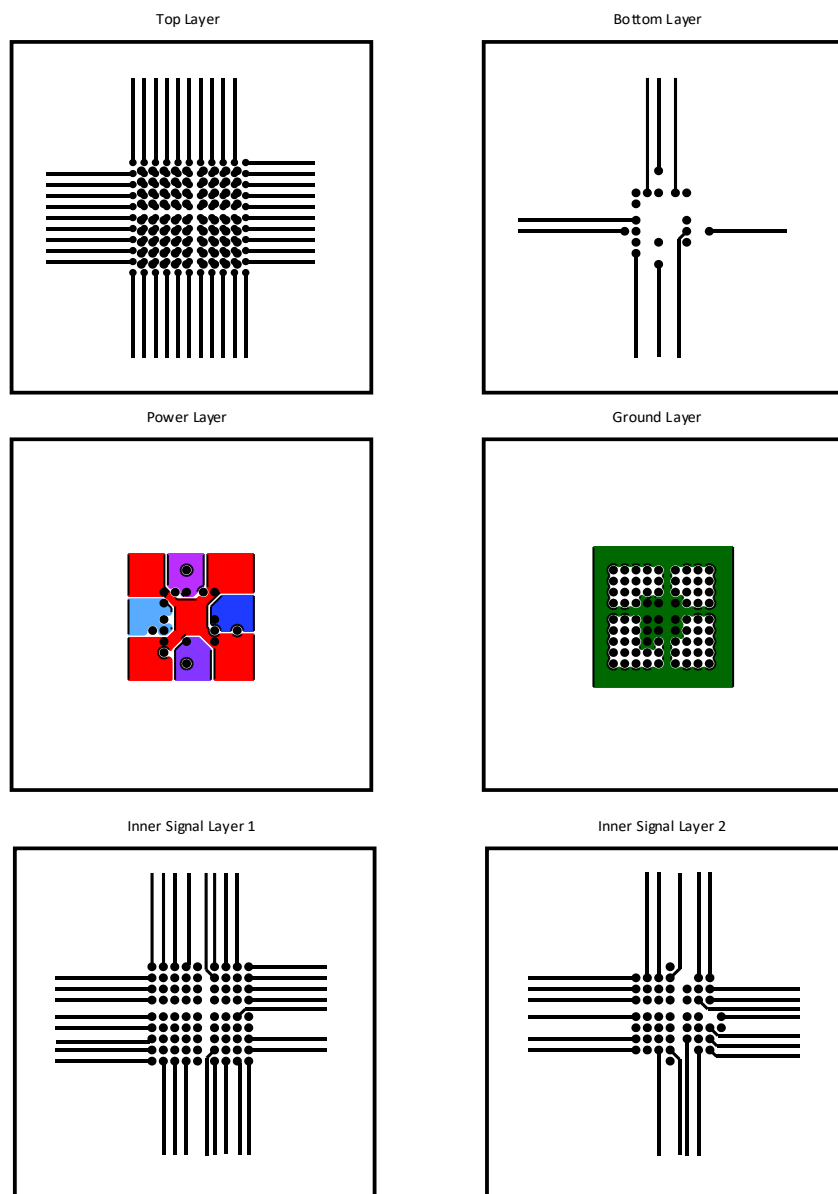



Figure 4.57. Six-Layer 121-ball ucBGA

4.10.8. 225-ball ucBGA Fully-Populated Ball-Grid Array - Ten Layers, All 178 User I/O

The 225-ball ucBGA package is a 7 x 7 mm, fully-populated array of 0.4 mm solder balls.

Table 4.11. 225-ball ucBGA, Ten-Layer Layout Dimensions

Standard	Dimension	
Layers	10	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.34 mm	13.39 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

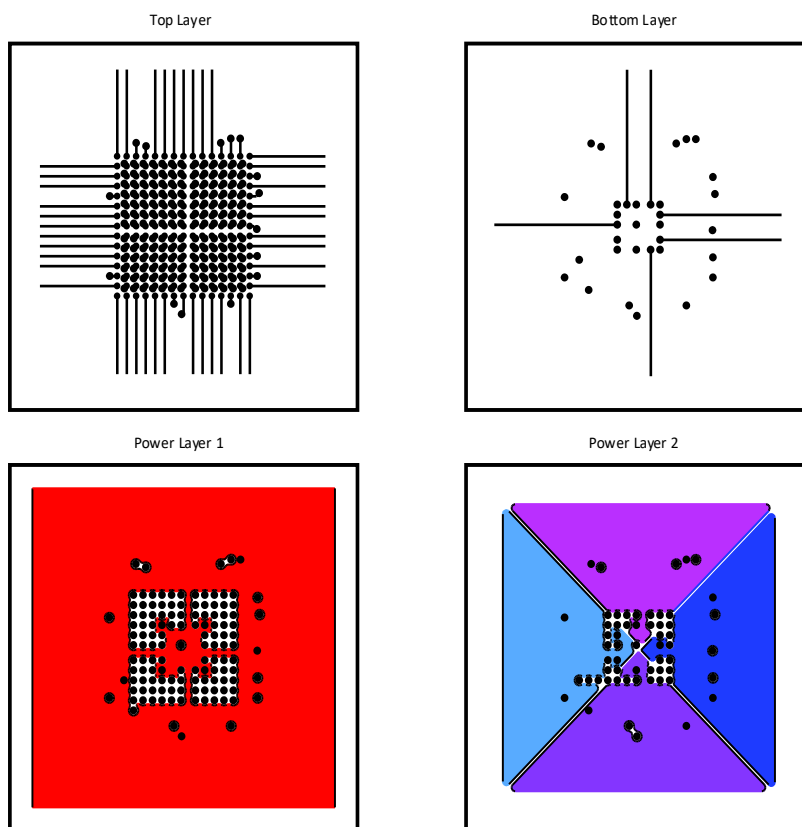

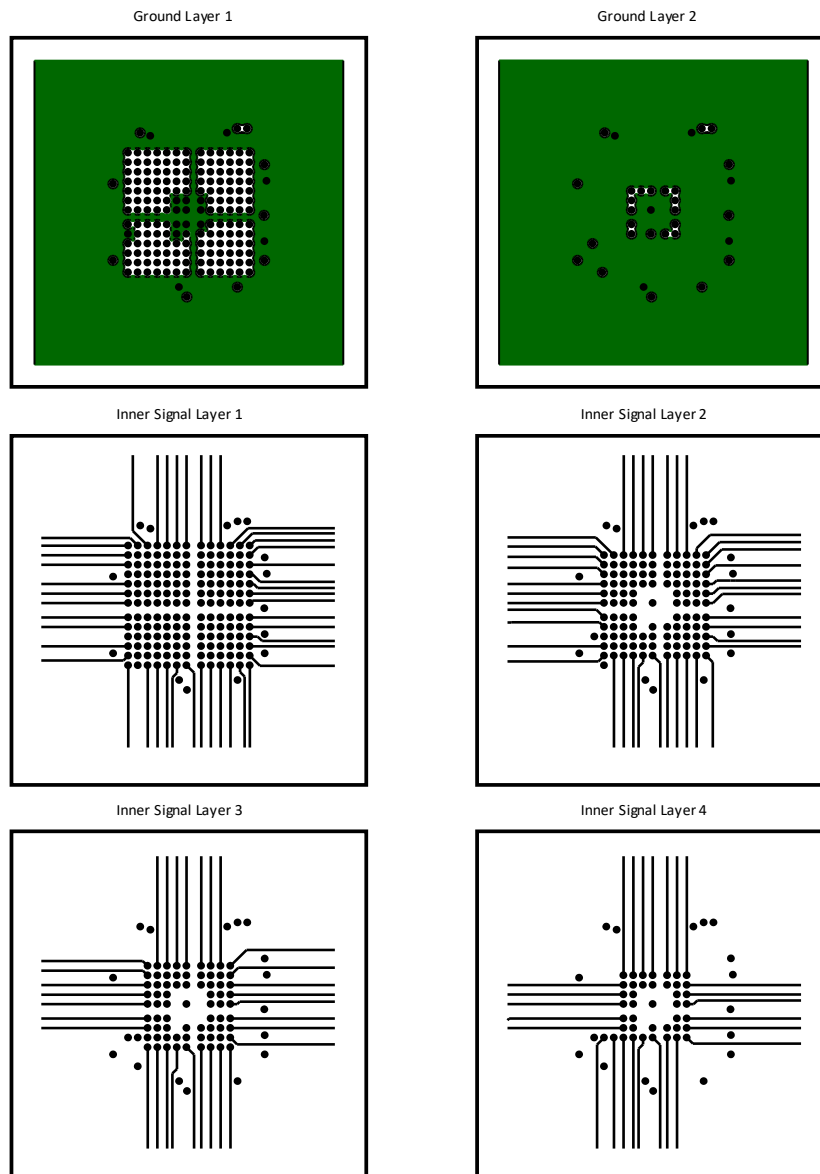



Figure 4.58. Ten-Layer 225-ball ucBGA

4.10.9. 225-ball ucBGA Fully-Populated Ball-Grid Array - Eight Layers, 153 User I/O

The 225-ball ucBGA package is a 7 x 7 mm, fully-populated array of 0.4 mm solder balls. This layout option uses just eight total layers but still provides 153 user I/O, 25 less PIOs than the ten-layer option. The primary advantage of this layout over the full I/O layout is that it eliminates two layers.

Table 4.12. 225-ball ucBGA, Eight-Layer Layout Dimensions

Standard	Dimension	
Layers	10	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.20 mm	7.87 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

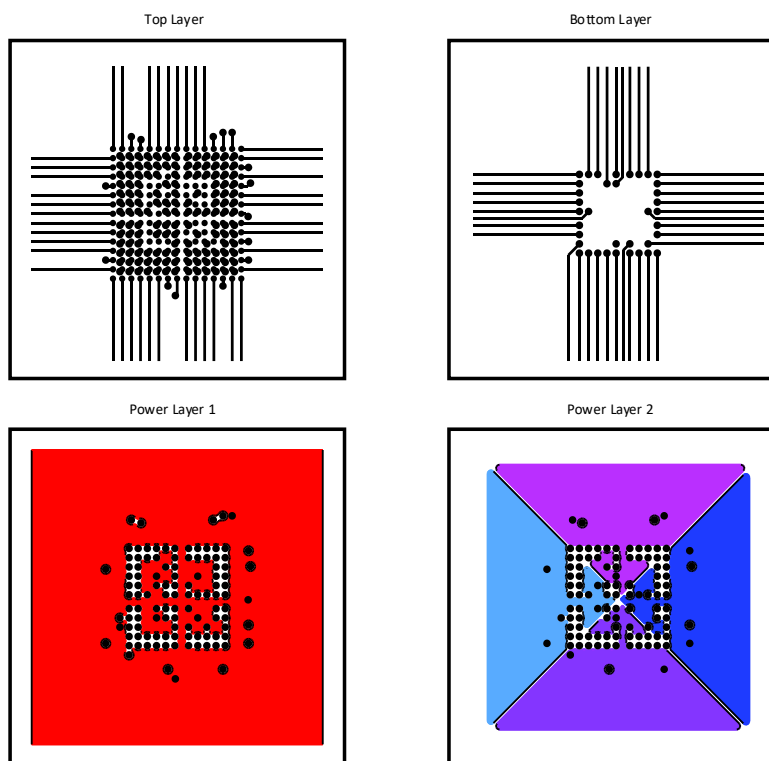

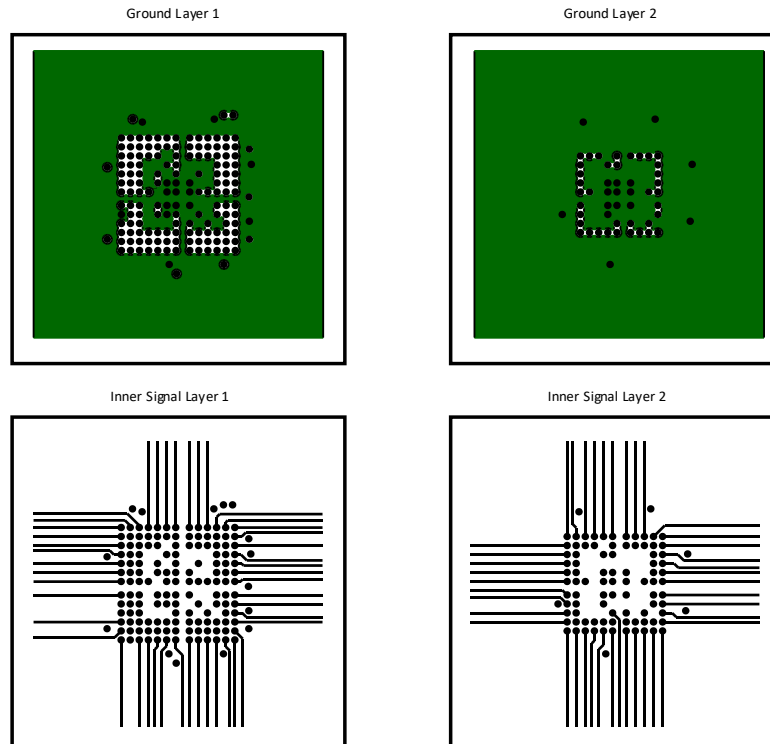


Figure 4.59. Eight-Layer 225-ball ucBGA

4.10.10. 225-ball ucBGA Fully-Populated Ball-Grid Array – Six Layers, 100 User I/O

The 225-ball ucBGA package is a 7 x 7 mm, fully populated array of 0.4 mm solder balls. This layout option uses just six total layers but still provides 100 user I/O, 78 less than the ten-layer option. This layout is marginally useful. It allows the iCE40HX8K device to use the 7 x 7 mm 225-ball ucBGA package, but uses just six PCB layers. The 8 x 8 mm CB132 package provides 95 user I/O but provides 95 user I/O pins.

Table 4.13. 225-ball ucBGA, Six-Layer Layout Dimensions

Standard	Dimension	
Layers	6	
BGA Solder Pad Size	0.20 mm	7.87 mils
BGA Pad Solder Mask	0.20 mm	7.87 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

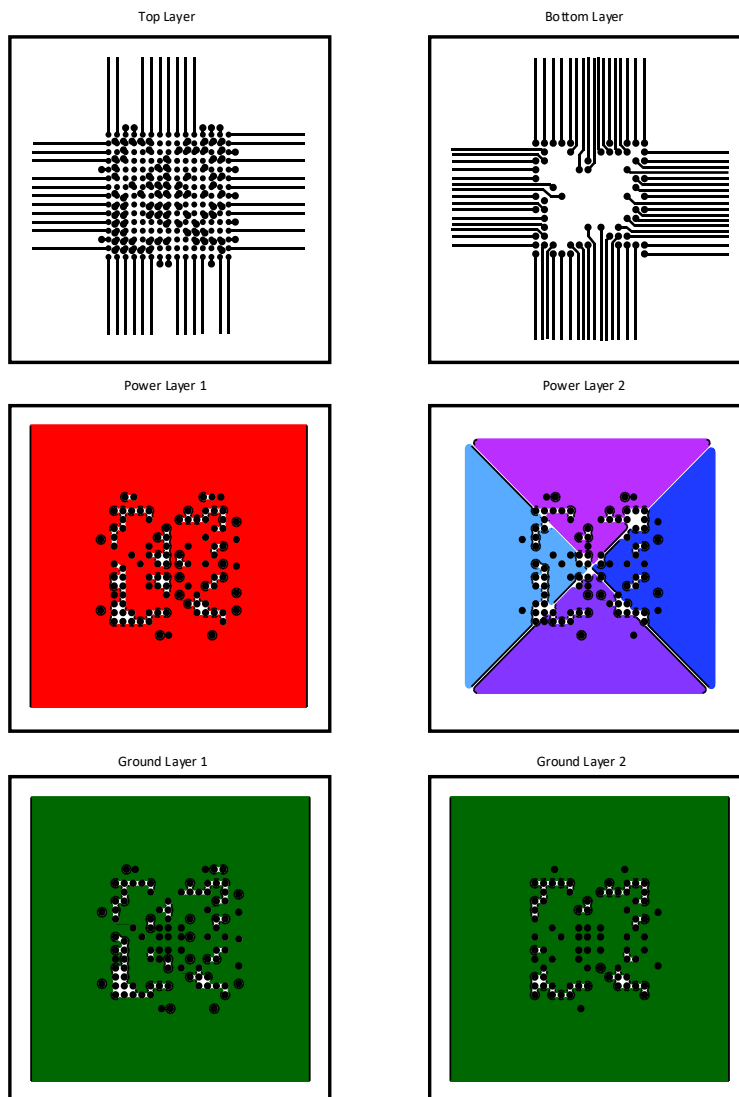


Figure 4.60. Six-Layer 225-ball ucBGA

4.10.11. 81-ball csBGA Fully Populated Ball-Grid Array

The 81-ball csBGA package is a 5.0×5.0 mm, fully populated array of 0.5 mm solder balls. The layout example here uses non solder mask defined (NSMD) design rules similar to other fully populated ball-grid arrays.

Table 4.14. 81-ball csBGA, Four-Layer Layout Dimensions

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.847 mils
BGA Pad Solder Mask	0.30 mm	11.811 mils
BGA Via Size (Drill)	0.1524 mm	6 mils
BGA Via Size (Pad)	0.3048 mm	12 mils
Trace Width	0.1016 mm	4 mils
Trace Spacing	0.0889 mm	3.5 mils

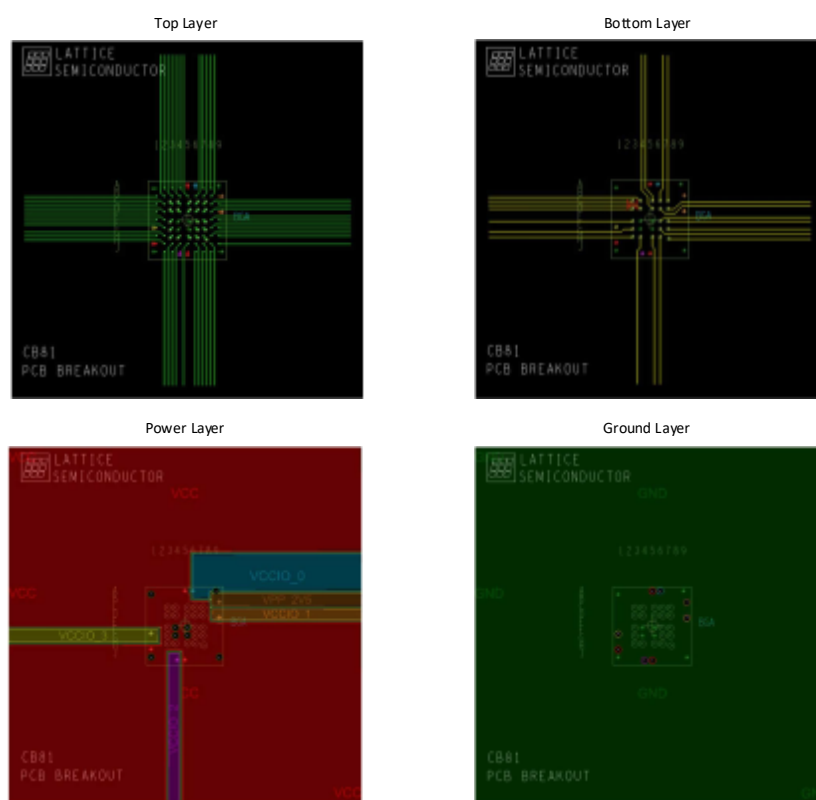


Figure 4.61. Four-Layer 81-ball csBGA

4.10.12. 121-ball csBGA Fully Populated Ball-Grid Array (Option 1)

The 121-ball csBGA package is a 6.0 x 6.0 mm, fully populated array of 0.5 mm solder balls. The layout example here uses non solder mask defined (NSMD) design rules similar to other fully populated ball-grid arrays.

Table 4.15. 121-ball csBGA, Six-Layer Layout Dimensions (Option 1)

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.847 mils
BGA Pad Solder Mask	0.30 mm	11.811 mils
BGA Via Size (Drill)	0.20 mm	8 mils
BGA Via Size (Pad)	0.20 mm	8 mils
Trace Width	0.10 mm	4 mils
Trace Spacing	0.076 mm	3 mils

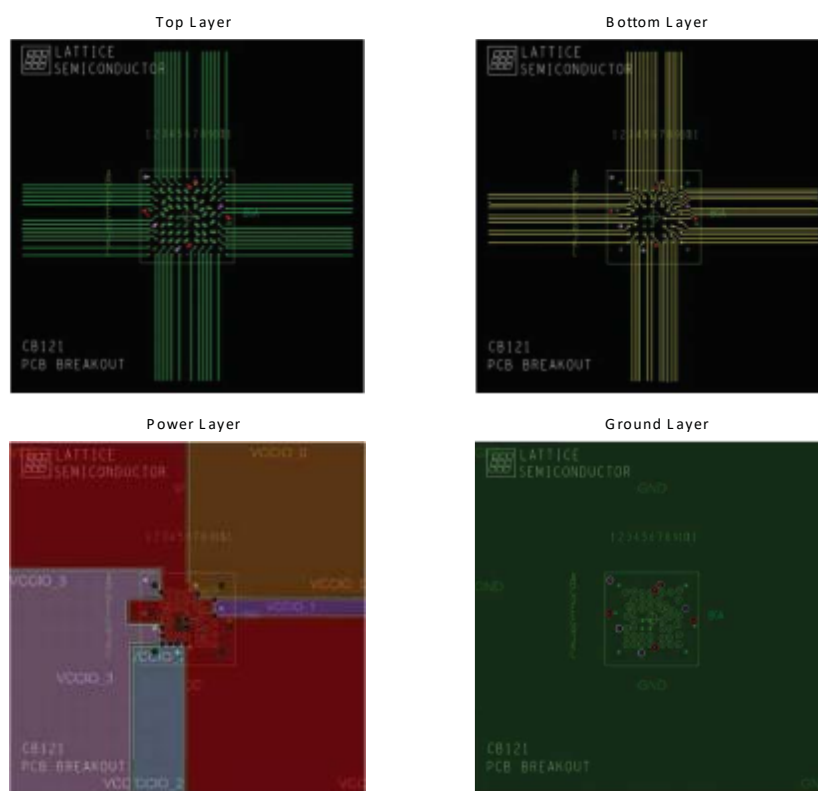


Figure 4.62. Four-Layer 121-ball csBGA (Option 1)

4.10.13. 121-ball csBGA Fully Populated Ball-Grid Array (Option 2)

The 121-ball csBGA package is a 6.0 × 6.0 mm, fully populated array of 0.5 mm solder balls. The layout example here uses non solder mask defined (NSMD) design rules similar to other fully populated ball-grid arrays.

Table 4.16. 121-ball csBGA, Six-Layer Layout Dimensions (Option 2)

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.20 mm	7.847 mils
BGA Pad Solder Mask	0.30 mm	11.811 mils
BGA Via Size (Drill)	0.20 mm	8 mils
BGA Via Size (Pad)	0.20 mm	8 mils
Trace Width	0.10 mm	4 mils
Trace Spacing	0.076 mm	3 mils

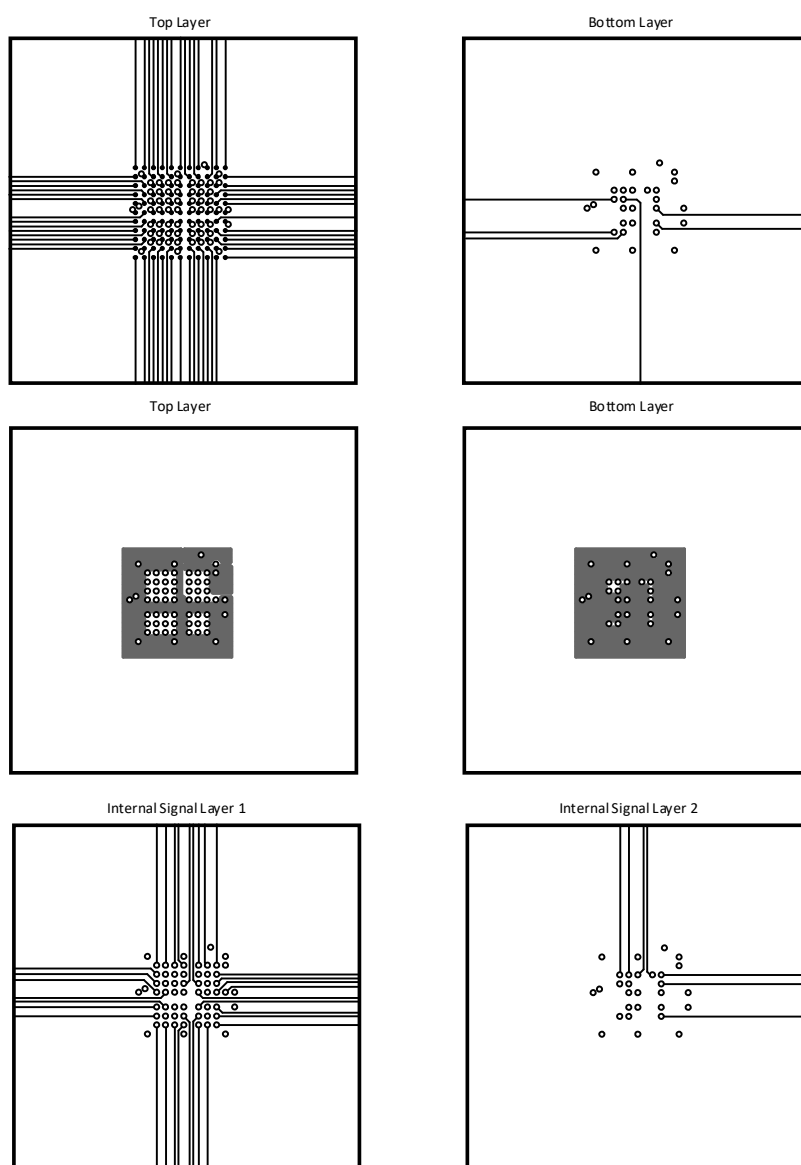


Figure 4.63. Six-Layer 121-ball csBGA (Option 2)

4.10.14. 132-ball csBGA Partially-Populated Ball-Grid Array – Six Layer, Non-Solder Mask Defined (NSMD), 4 mil Traces

The 132-ball csBGA package is chip-scale package with a partially populated, 8.0 × 8.0 mm ball-grid array of 0.5 mm solder balls.

Table 4.17. 132-ball csBGA, Six-Layer Layout Dimensions, Relaxed Design Rule

Standard	Dimension	
Layers	6	
BGA Solder Pad Size	0.254 mm	10 mils
BGA Pad Solder Mask	0.4064 mm	16 mils
BGA Via Size (Drill)	0.1524 mm	6 mils
BGA Via Size (Pad)	0.3048 mm	12 mils
Trace Width	0.1016 mm	4 mils
Trace Spacing	0.1016 mm	4 mils

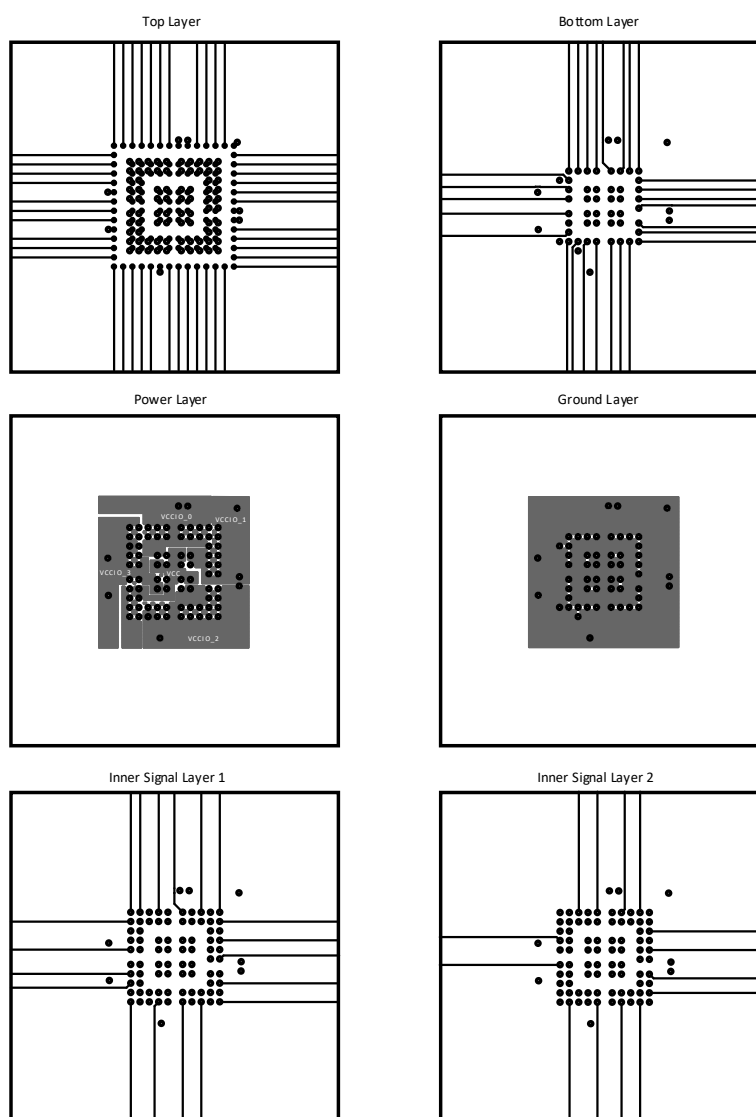


Figure 4.64. Six-Layer 132-ball csBGA, Relaxed Design Rule

4.10.15. 132-ball csBGA Partially-Populated Ball-Grid Array – Four Layer, Non-Solder Mask Defined (NSMD), 3 mil Traces

The 132-ball csBGA package is chip-scale package with a partially populated, 8.0 × 8.0 mm ball-grid array of 0.5 mm solder balls.

Table 4.18. 132-ball csBGA, Four-Layer Layout Dimensions

Standard	Dimension	
Layers	4	
BGA Solder Pad Size	0.254 mm	10 mils
BGA Pad Solder Mask	0.4064 mm	16 mils
BGA Via Size (Drill)	0.127 mm	5 mils
BGA Via Size (Pad)	0.254 mm	10 mils
Trace Width	0.0762 mm	3 mils
Trace Spacing	0.0762 mm	3 mils

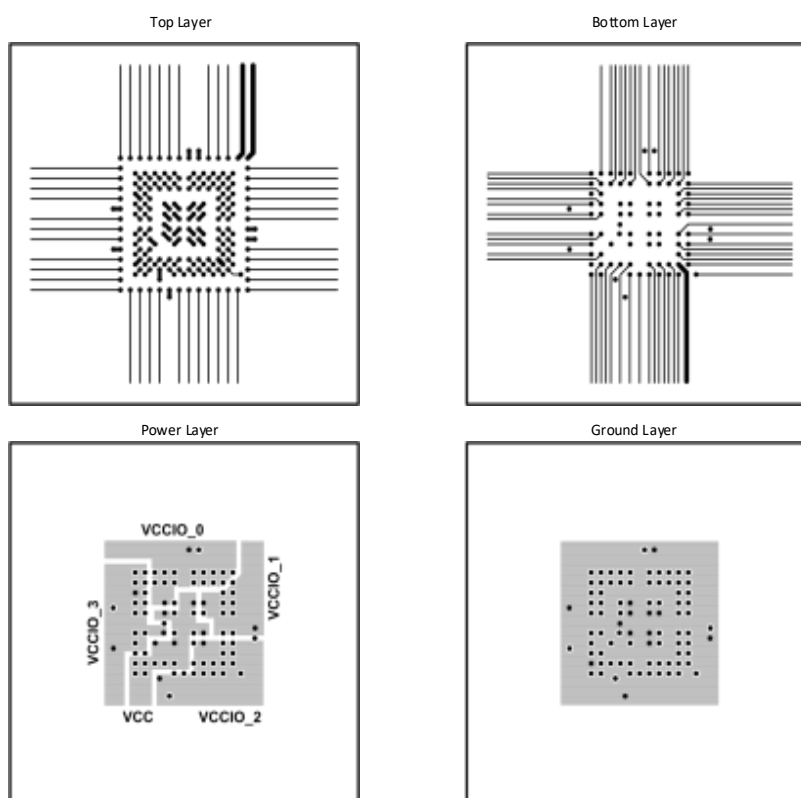


Figure 4.65. Four-Layer 132-ball csBGA

4.10.16. 256-ball caBGA Fully-Populated Ball-Grid Array – Six Layers, All 206 User I/O

The 256-ball caBGA package is a 14 × 14 mm, fully populated array of 0.8 mm solder balls.

Table 4.19. 256-ball caBGA, Six-Layer Layout Dimensions

Standard	Dimension	
Layers	6	
BGA Solder Pad Size	0.20 mm	7.847 mils
BGA Pad Solder Mask	0.34 mm	13.39 mils
BGA Via Size (Drill)	0.1270 mm	5 mils
BGA Via Size (Pad)	0.2540 mm	10 mils
Trace Width	0.1270 mm	5 mils
Trace Spacing	0.0889 mm	3.5 mils

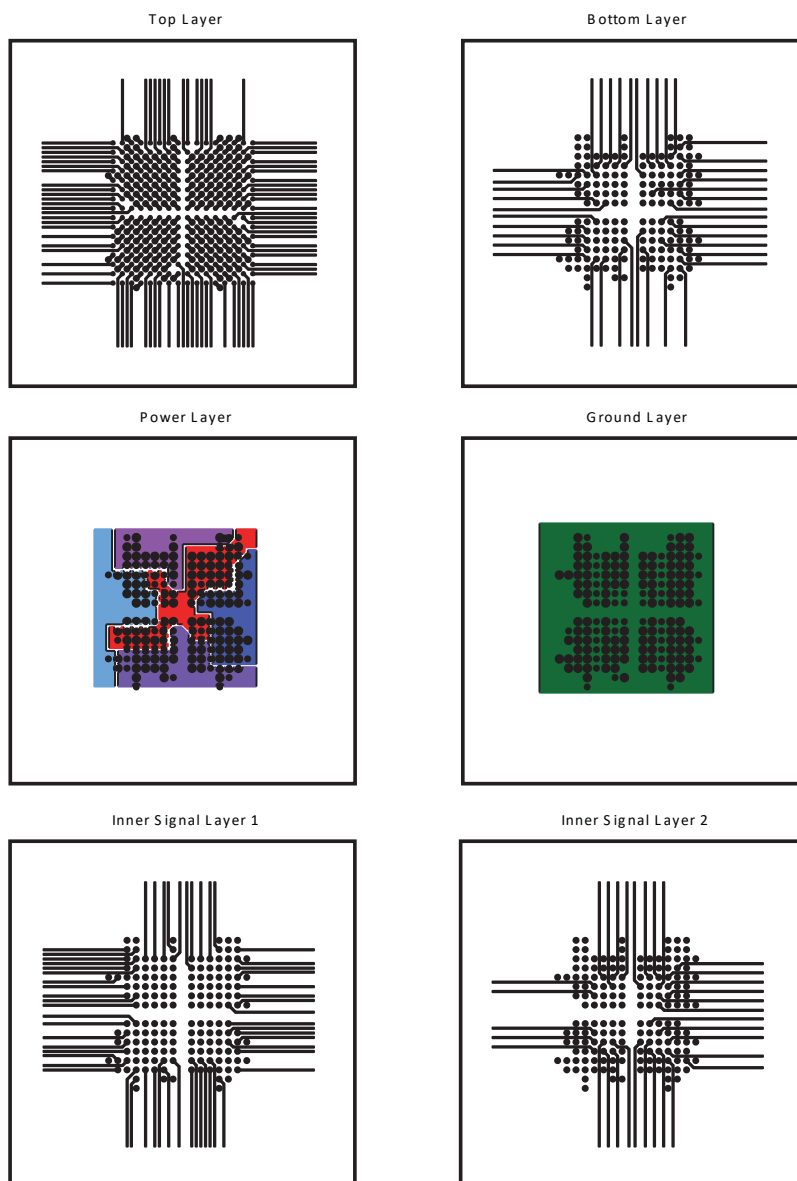


Figure 4.66. Six-Layer 256-ball caBGA

5. PCB Fabrication Cost and Design Rule Considerations

PCB fabrication cost is a key consideration for many electronics products. By reviewing the IC device package ball density and pitch, I/O signal requirements of your application, and the manufacturing constraints of your PCB fabrication facility you can weigh the trade-offs between design decisions.

Choosing the best package for your application involves answering a few questions:

- What is the driving factor in the application? The smallest possible form factor or a low PCB cost?
- How many I/O signals does the application require?
- What PCB layer stackup provides the best I/O density within budget?
- What layout design rules does the printed-circuit board (PCB) vendor support?
- How many PCB layers does the budget allow?

As the ball pitch becomes smaller with each new BGA generation, new PCB fabrication techniques and signal via type have been developed to handle the complexities. These include micro vias, laser vias, filled vias, buried and blind vias, even buried and plated-over vias. Complex boards use a combination of most of these.

Stackup types, ordered by cost, high-to-low include:

- High-Density Interconnect (HDI) build up with micro vias
- Laminated with blind and buried vias
- Laminated with through vias

6. HDI Stackup

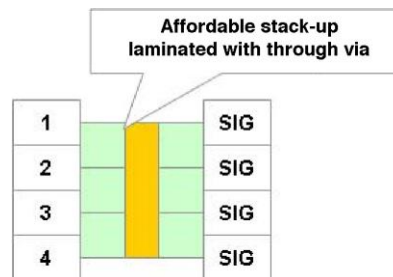


Figure 6.1. Stackup Example

HDI is a *sandwich* with older-style larger geometry in the middle with fully drilled through holes and then a stack of fine geometry of blind, buried or mixed via, laminated both on the top and bottom of the middle stackup. The laminated layers are thinner than traditional layers and allow finer drilling technology. Staggered micro vias allow vias within close tolerance or connected to a BGA pad to go down to the next layer or more to route away for escape routing or underneath the BGA device for further interconnect. HDI type interconnect is used on complex boards and takes extra steps in the processing flow due to special drilling, plating a lamination. It is a mix of older technology mixed with newer technology that results in a board that is highly routable.

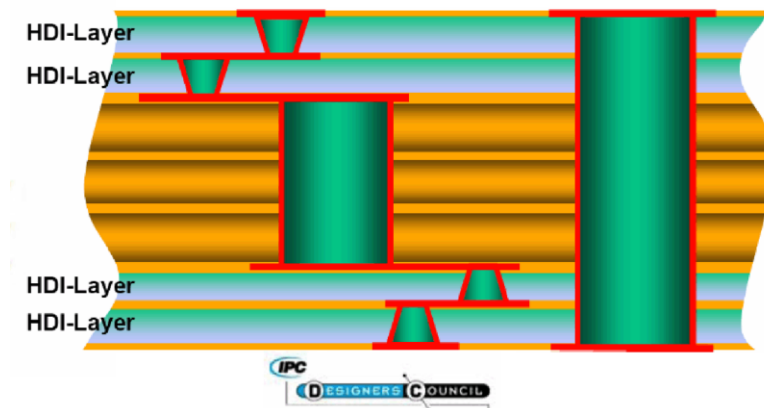


Figure 6.2. HDI Stackup with Staggered Micro Vias

7. Advantages and Disadvantages of BGA Packaging

As pin counts increase and board space becomes more valuable, it is important to place as many circuits per square inch as possible. BGAs offer the best I/O density for a given PCB area. Lattice offers a range of packages from a 4 × 4 mm 64-ball csBGA to a 33 × 33 mm 1704-ball fcBGA.

One of the greatest advantages of BGA packaging is that it can be supported with existing placement and assembly equipment. BGAs also offer significantly more misalignment tolerance and less susceptibility to co-planarity issues. Even if the solder paste is misaligned or the device is slightly offset, the BGA self-centers during the reflow process. This is due to the surface tension of the solder and flux in its molten state pulling each ball into the center of the pad.

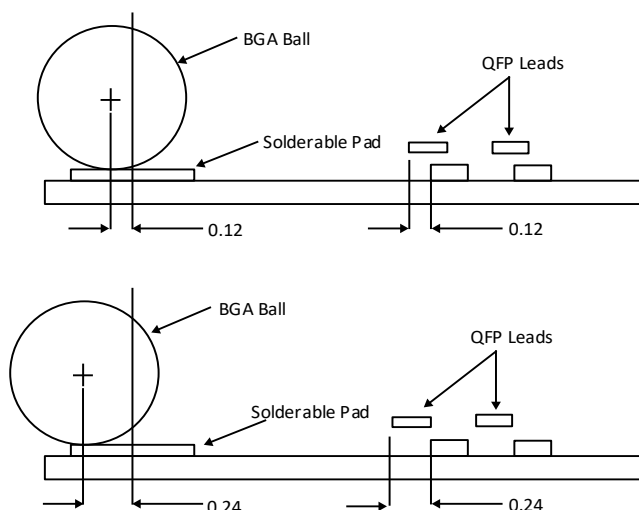


Figure 7.1. Misalignment of BGA Balls vs. QFP Leads

Controlling the oven re-flow profile is one of the most important assembly parameters for consistent and reliable BGA placement. Profiles are typically tested on a pre-run. One or two panels are run to dial in the process, then visual and X-ray inspection equipment are used for verification.

BGA packages present numerous benefits previously unobtainable in surface mount packaging technology. BGAs provide higher pin counts in a much smaller area than was previously possible. No longer is the package design limited to connections along the periphery on the outside quadrants of the package edge like a PQFP or TQFP outline. Fully populated ball grid arrays with pitches as small as 0.4 mm are available.

Some BGA devices are arranged with de-populated interconnect near or around the center. These are dependent on the die size and number of pins. The area void of interconnect in the middle of the array has some advantages, it can be used for escape routing vias or tying directly to the ground or power planes.

Although the packages can be quite complex and densely populated, all of these packages receive strict quality and reliability testing and are widely accepted today by designers and PCB fabrication/assembly houses. All of this is due to advances in equipment and technology that have allowed a smooth transition into the assembly flow.

8. BGA Package Test and Assembly

How can a pad/ball/pin be tested that cannot be seen? All connections are hidden under the substrate at the ball interconnect, making it impossible to directly probe or test. To address this limitation, Lattice programmable devices provide JTAG, BSCAN, and boundary scan cells that allow electronic test and continuity of each pin with a boundary scan tester. This can be embedded into the system itself or driven externally from a high-speed test head. The boundary scan can test the pins or board for simple continuity tests or full functional test by shifting in test patterns through the JTAG port.

For debug or prototype boards it may be necessary to place test points, open vias, or pads to have access to a given set of pins in order to drive, over-drive or observe a given set of signals. These can be very small, as many pogo pin type probes are extremely small and can handle GHz range DC frequency. Zero-ohm resistors are also commonly used in first-run boards as a way to gain access to a pad or pin.

After assembly, BGA solder point quality and integrity is visually inspected with X-ray technology as part of the fabrication process. A special X-ray machine can look through the plastic package, substrate and silicon to directly view the BGA solder balls, vias, traces and pads.

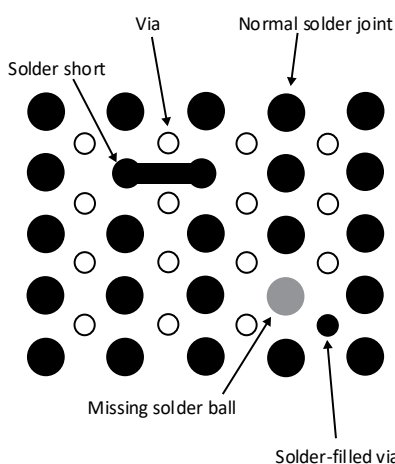


Figure 8.1. Example of How Defects May Appear in an X-Ray Image

The X-ray image in Figure 8.2 shows proper alignment; no voids or defects are noted. Balls, vias and traces are visible.

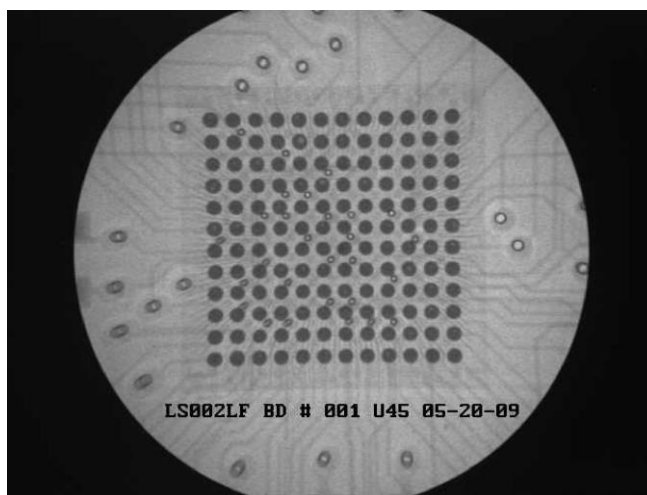


Figure 8.2. X-Ray Inspection Plot of ispMACH 4000ZE 144-Ball csBGA*

***Note:** Photo Courtesy of CEM, Ltd., www.cemltd.com

PCB cross-sectioning is another method used to verify BGA and PCB quality and reliability. After a new process has been developed or changed or when qualifying a new vendor, it is a good practice to get physical information from the vendor on their BGA reflow. When trace/space and drill or laser tolerances are nearing their limits, board yield can be as low as 50% for the bare board fab. Cross-sections give you a good idea if the process is correct but do not guarantee each batch or each board design behaves the same way due to layout dimensions, thermal issues, flux/paste and alignment, etc.

Figure 8.3 shows a BGA cross-section that uses a non-soldermask over bare copper-defined pad. (NSMD) pad.

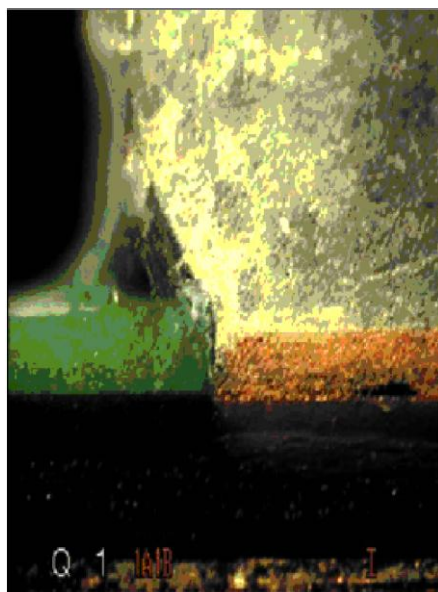


Figure 8.3. BGA Cross-Section

Figure 8.4 shows *offset* micro via stack routing between layers.

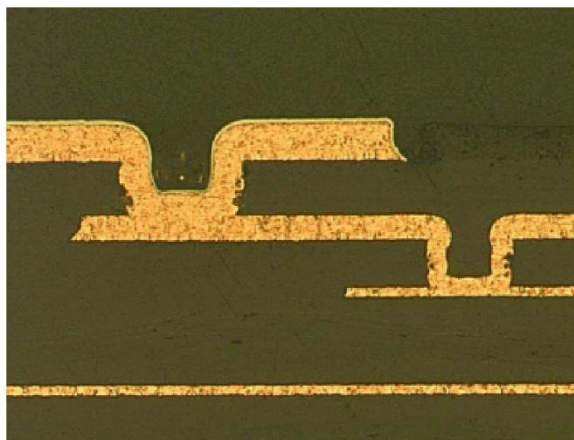


Figure 8.4. Cross-Section of Micro Vias

High-resolution video cameras are used for edge inspection to verify ball seating, distortion, solder wetting, flow, contaminants, and so on. Figure 8.5 is a video view of a side/edge shot looking at BGA balls soldered down to the ispMACH 4000ZE Pico Evaluation Board (www.latticesemi.com/4000ze-pico-kit), an FR4 4-layer PCB.



Figure 8.5. Edge View Camera Inspection

In the photo samples above, trained technicians and computer camera recognition equipment are used for inspection of the X-ray results, looking for voids, shorts, missing connections, contaminants, alignment or other gross failure mechanisms. For example, in [Figure 8.5](#), the BGA ball connections appear to be squashed downward, with mild distortion, insuring that proper oven profile temperatures were achieved.

These technologies help in the successful placement and long-term use of BGAs in the industry's latest products. Further advancements have been made in material content to conform to environmental issues, toxic materials and recycling. Another issue that relates to board design is the physical silkscreen logos and information related to recycling, lead content, and other hazardous waste components; strict adherence must be paid to these requirements. Although a documentation and silkscreen issue, it can become a challenge to fit this information on the board in some cases due to component population and must be accounted for in overall board real estate.

8.1. Back-Drilling or Top-Drilling PCBs to Remove Via Stubs

When you have thru vias on PCBs that connect between layers, you will often have via stubs. Figure 8.6 shows a cross section of a via stub.

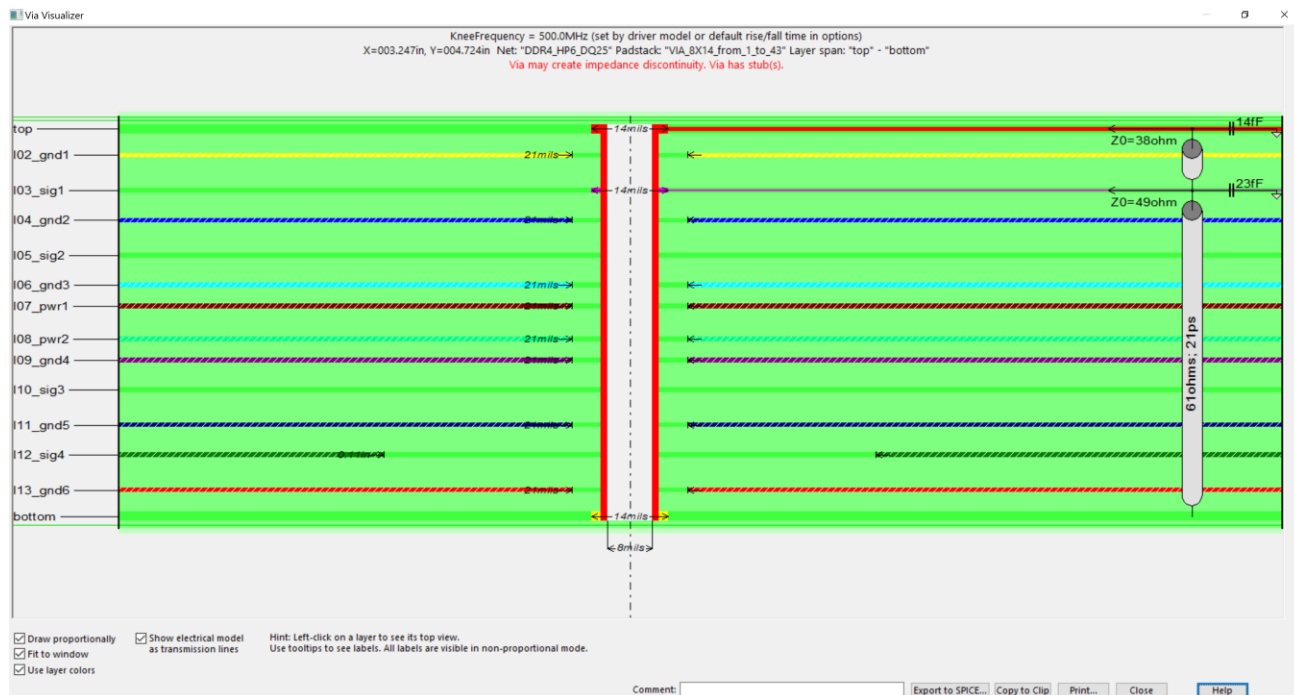


Figure 8.6. Via Stub from Layer 3 to Layer Bottom

Figure 8.6 shows a via stub from layer 3 to layer bottom. These are big causes of poor signal integrity with reflections.

With the via stub in Figure 8.6, there is a need for back drilling the via to improve signal integrity when the signal is running faster than 500 MHz. When you look at the S-Parameters for these signals, there is degradation in the S21 as seen in Figure 8.7.



Via Visualizer

KneeFrequency = 500.0MHz (set by driver model or default rise/fall time in options)
 X=003.326in, Y=004.567in Net: "DDR4_HP6_DQ8" Padstack: "VIA_8X14_from_1_to_43" Layer span: "top" - "i04_gnd2"
 Via has stub(s).

top
 i02_gnd1
 i03_sig1
 i04_gnd2
 i05_sig2
 i06_gnd3
 i07_pwr1
 i08_pwr2
 i09_gnd4
 i10_sig3
 i11_gnd5
 i12_sig4
 i13_gnd6
 bottom

Round pad 14mils
 Round pad 14mils
 Finished diameter 8mils
 Backdrilling diameter 14mils

Z0=38ohm
 Z0=49ohm
 14fF
 23fF

☒ Draw proportionally
☒ Fit to window
☒ Use layer colors
☒ Show electrical model as transmission lines
 Hint: Left-click on a layer to see its top view.
 Use tooltips to see labels. All labels are visible in non-proportional mode.

Comment:
 Export to SPICE... Copy to Clip Print... Close Help

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal. All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

The improved S-Parameters are shown in [Figure 8.9](#).

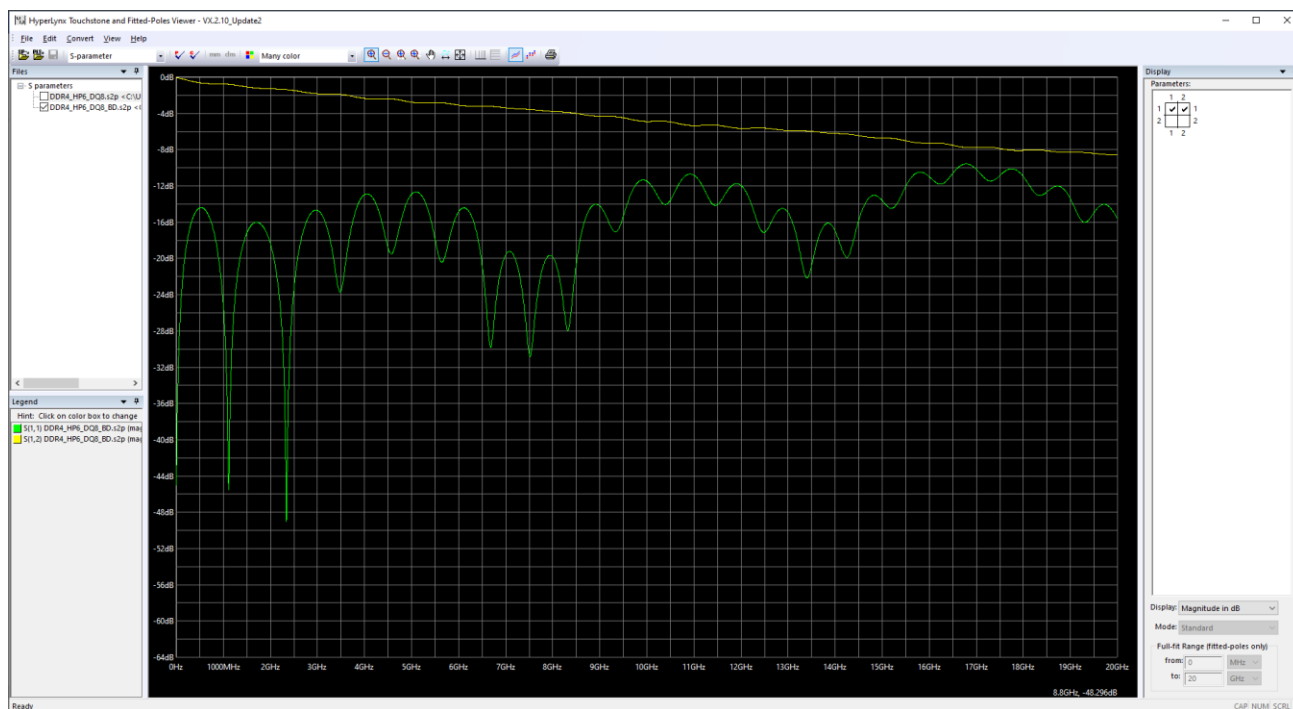


Figure 8.9. DDR4_HP6_DQ8 with Back-Drill and No Dropout

[Figure 8.9](#) shows the DDR4_HP6_DQ8 S-Parameters with back-drill, no dropout in S21 insertion loss with a lower S11 Return Loss.

As the speed of the DDR4 and serial SerDes go above 2400 Mt/s and 10.135 Gbps, these stubs can reduce signal integrity to the point where Eye is closed, but with back-drilling, Eye can open up with lower drive strength.

9. PCB Design Support

Lattice provides a collection of PCB design resources at www.latticesemi.com/en/Products/DevelopmentBoardsAndKits including schematic libraries, PCB CAM viewers, technical notes, and BGA breakout and routing examples.

10. Use at Your Own Risk

Successful printed circuit manufacturing requires frequent communication with the printed circuit assembly house during design and layout. The examples shown here may or may not produce a successful or manufacturable design at your selected assembly house. Review your iCE40 layout with your PCB assembly house before committing to a production run.

Reference

For more information, refer to:

- [Package Diagram \(FPGA-DS-02053\)](#)
- [Avant Package Diagram \(FPGA-DS-02123\)](#)
- [Lattice Nexus 2 Package Diagram \(FPGA-DS-02124\)](#)
- [MachXO4 Package Diagram \(FPGA-DS-02128\)](#)
- [Solder Reflow Guide for Surface Mount Devices \(FPGA-TN-02041\)](#)
- [Lattice Insights](#) for Lattice Semiconductor training courses and learning plans

Technical Support Assistance

Submit a technical support case via www.latticesemi.com/techsupport.

For frequently asked questions, refer to the Lattice Answer Database at www.latticesemi.com/Support/AnswerDatabase.

Revision History

Revision 5.7, September 2026

Section	Change Summary
All	Minor editorial fixes.
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. <ul style="list-style-type: none"> Updated column title from <i>Package BGA Solder Mask Opening – Diameter (mm)</i> to <i>Package BGA Substrate Solder Mask Opening or WLCSP UBM Diameter (mm)</i>. Replaced the package solder pad type for all WLCSP and FOWLP packages to <i>UMB</i>, updated the corresponding <i>Package BGA Substrate Solder Mask Opening or WLCSP UBM Diameter (mm)</i> values and updated the corresponding <i>Package BGA Pad Opening (mm)</i> values. Removed previous note <i>MachXO</i>, <i>MachXO2</i>, and <i>MachXO3</i> and replaced by <i>MachXO2</i>, <i>MachXO3</i>, and <i>MachXO4</i>. Simplified the 256 ftBGA packages. Removed <i>option 1, 2, 3, and 4</i>. Removed the following notes in this table when 256ftBGA package was simplified. <ul style="list-style-type: none"> ispMACH 4000, MachXO, and LatticeXP2 LatticeECP3 and MachXO2 MachXO3D Updated Table 3.2. PCB SMD/NSMD Pad Recommendations¹. <ul style="list-style-type: none"> Updated the values in the Optimum PCB NSMD Solder Land Diameter (mm) column. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> values for all WLCSP and FOWLP packages. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>ucBGA (64, 81, 121, 132, and 225)</i> under the <i>0.40 mm ball pitch</i>. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>csBGA (56, 132, and 328)</i> under the <i>0.50 mm ball pitch</i>. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>132 csBGA (iCE40)</i> under the <i>0.50 mm ball pitch</i>. Added <i>184 csBGA</i> in this table under the <i>0.50 mm ball pitch</i>. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>289 csBGA</i> and <i>csfBGA (121, 285, 256, 324)</i> under the <i>0.50 mm ball pitch</i>. Updated the 69 WLCSP SMD value from <i>0.300 mm</i> to <i>0.280 mm</i> and NSMD value from <i>0.300 mm</i> to <i>0.240 mm</i>. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>80 ctfBGA</i> under the <i>0.65 mm ball pitch</i>. Updated the 484 CBG/fcCSP NSMD value from <i>0.375 mm</i> to <i>0.340 mm</i>. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>caBGA (121, 381, 554, and 756)</i> under the <i>0.80 mm ball pitch</i>. Updated the corresponding <i>Optimum PCB SMD Solder Mask Opening (mm)</i> value for <i>fcBGA (1020, 1152, and 1704)</i> under the <i>1.00 mm ball pitch</i>. Removed previous note <i>MachXO</i>, <i>MachXO2</i>, and <i>MachXO3</i> and replaced by <i>MachXO2</i>, <i>MachXO3</i>, and <i>MachXO4</i>. Removed the following notes in this table when 256ftBGA package was simplified. <ul style="list-style-type: none"> ispMACH 4000, MachXO, and LatticeXP2 (refer to Package Diagrams – FPGA-DS-02053) LatticeECP3 and MachXO2 (refer to Package Diagrams – FPGA-DS-02053) MachXO3D
BGA Breakout and Routing Examples	Updated the via pad diameter of the 484-Ball caBGA package from <i>0.400 mm</i> to <i>0.450 mm</i> .
References	Added this section.

Revision 5.6, December 2024

Section	Change Summary
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. <ul style="list-style-type: none"> Added note 9 - <i>MachXO3D</i> Added note 10 - <i>Certus-N2</i> Updated Table 3.2. PCB SMD/NSMD Pad Recommendations¹. <ul style="list-style-type: none"> 484 CBG/fcCSP – updated the Optimum PCB NSMD Solder Land Diameter from 0.400 mm to 0.375 mm. Added note 12 - <i>Certus-N2</i>

Revision 5.5, October 2024

Section	Change Summary
Abbreviations in This Document	Changed <i>Acronyms</i> to <i>Abbreviations</i> .
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. <ul style="list-style-type: none"> Updated 256 FOWLP to 256, 410 ASG.FOWLP. Added 484 CBG/fcCSP package. Updated Table 3.2. PCB SMD/NSMD Pad Recommendations¹. <ul style="list-style-type: none"> Updated the Optimum PCB NSMD Solder Land Diameter value of 132 csBGA (Option 2) from NA to 0.240 mm. Updated 256 FOWLP to 256, 410 ASG/FOWLP. <ul style="list-style-type: none"> Updated the Optimum PCB SMD Solder Mask Opening from 0.300 to 0.330 mm. Updated the Optimum PCB NSMD Solder Land Diameter from 0.300 to 0.280 mm. Added 484 CBG/fcCSP package.
BGA Breakout and Routing Example	Added the 410-FOWLP Breakout Example.

Revision 5.4, July 2024

Section	Change Summary
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Updated the 30-Ball WLCSP Breakout and Routing to Example 1 subsection. Added the 30-Ball WLCSP Breakout and Routing Example 2 subsection. Updated the subsection title from Fully/Partially-Populated Ball Grid Array to iCE40 ucBGA Fully/Partially-Populated Ball Grid Array. <ul style="list-style-type: none"> Replaced all CM36/CM36A with 36-ball ucBGA in the 36-ball ucBGA Fully-Populated Ball-Grid Array, All 25 User I/O subsection. Updated the package dimensions from 6 x 6 mm to 2.5 x 2.5 mm in the 36-ball ucBGA Fully-Populated Ball-Grid Array, All 25 User I/O subsection. Added the 36-ball ucBGA Fully-Populated Ball-Grid Array, All 27 User I/O subsection. Replaced all CM49 with 49-ball ucBGA in the 49-ball ucBGA Fully-Populated Ball-Grid Array, All 35 User I/O subsection. Updated the package dimensions from 7 x 7 mm to 3.0 x 3.0 mm in the 49-ball ucBGA Fully-Populated Ball-Grid Array, All 35 User I/O subsection. Replaced all CM81 with 81-ball ucBGA in the 81-ball ucBGA Fully-Populated Ball-Grid Array – Four-Layers, 48 User I/O subsection and in the 81-ball ucBGA Fully-Populated Ball-Grid Array – Six-Layers, All 63 User I/O subsection. Updated the package dimensions from 9 x 9 mm to 4.0 x 4.0 mm in the 81-ball ucBGA Fully-Populated Ball-Grid Array – Four-Layers, 48 User I/O subsection and in the 81-ball ucBGA Fully-Populated Ball-Grid Array – Six-Layers, All 63 User I/O subsection. Replaced all CM121 with 121-ball ucBGA in the 121-ball ucBGA Fully-Populated Ball-Grid Array – Four-Layers, 57 User I/O subsection and in the 121-ball ucBGA Fully-Populated Ball-Grid Array – Six-Layers, All 95 User I/O subsection. Updated the package dimensions from 11 x 11 mm to 5.0 x 5.0 mm in the 121-ball

Section	Change Summary
	<p>ucBGA Fully-Populated Ball-Grid Array – Four-Layers, 57 User I/O subsection and in the 121-ball ucBGA Fully-Populated Ball-Grid Array – Six-Layers, All 95 User I/O subsection.</p> <ul style="list-style-type: none"> Replaced all CM225 with 225-ball ucBGA in the 225-ball ucBGA Fully-Populated Ball-Grid Array – Ten-Layers, All 178 User I/O subsection, 225-ball ucBGA Fully-Populated Ball-Grid Array – Eight-Layers, All 153 User I/O subsection and in the 225-ball ucBGA Fully-Populated Ball-Grid Array – Six-Layers, 100 User I/O subsection. Updated the package dimensions from 15 x 15 mm to 7.0 x 7.0 mm in the 225-ball ucBGA Fully-Populated Ball-Grid Array – Ten-Layers, All 178 User I/O subsection, 225-ball ucBGA Fully-Populated Ball-Grid Array – Eight-Layers, All 153 User I/O subsection and in the 225-ball ucBGA Fully-Populated Ball-Grid Array – Six-Layers, 100 User I/O subsection. Replaced all CB81 with 81-ball csBGA in the 81-ball csBGA Fully-Populated Ball-Grid Array subsection. Updated the package dimensions from 9 x 9 mm to 5.0 x 5.0 mm in the 81-ball csBGA Fully-Populated Ball-Grid Array subsection. Replaced all CB121 with 121-ball csBGA in the 121-ball csBGA Fully-Populated Ball-Grid Array (Option 1) subsection and in the 121-ball csBGA Fully-Populated Ball-Grid Array (Option 2) subsection. Updated the package dimensions from 11 x 11 mm to 6.0 x 6.0 mm in the 121-ball csBGA Fully-Populated Ball-Grid Array (Option 1) subsection and in the 121-ball csBGA Fully-Populated Ball-Grid Array (Option 2) subsection. Replaced all C132 with 132-ball csBGA in the 132-ball csBGA Partially-Populated Ball-Grid Array – Six Layer, Non Solder Mask Defined (NSMD), 4 mil Traces subsection and in the 132-ball csBGA Partially-Populated Ball-Grid Array – Four Layer, Non Solder Mask Defined (NSMD), 3 mil Traces subsection. Updated the package dimensions from 14 x 14 mm to 8.0 x 8.0 mm in the 132-ball csBGA Partially-Populated Ball-Grid Array – Six Layer, Non Solder Mask Defined (NSMD), 4 mil Traces subsection and in the 132-ball csBGA Partially-Populated Ball-Grid Array – Four Layer, Non Solder Mask Defined (NSMD), 3 mil Traces subsection. Replaced all CT256 with 256-ball caBGA in the 256-ball caBGA Fully-Populated Ball-Grid Array – Six Layers, All 206 User I/O subsection. Updated the package dimensions from 16 x 16 mm to 14 x 14 mm in the 256-ball caBGA Fully-Populated Ball-Grid Array – Six Layers, All 206 User I/O subsection.

Revision 5.3, December 2023

Section	Change Summary
All	Avant™-AT-G and Avant™-AT-X public release.
Disclaimer	Updated this section.
BGA Board Layout Recommendations	Added Avant 676 fcBGA package in Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening and Table 3.2. PCB SMD/NSMD Pad Recommendations1.
BGA Breakout and Routing Examples	Added Figure 4.30. Layout Screen Shots, 676-Ball fcBGA, 1.00 mm Pitch.

Revision 5.2, September 2023

Section	Change Summary
Acronyms in This Document	Changed FOWLCSP to FOWLP in the Acronyms in This Document table.
Lattice BGA Package Types	Changed FOWLCSP to FOWLP in Table 2.1. Lattice BGA Package Types.

Section	Change Summary
BGA Board Layout Recommendations	<p>In Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening:</p> <ul style="list-style-type: none"> Updated the 84 WLCSP package. <ul style="list-style-type: none"> Changed Package Solder Pad Type from <i>SMD (Figure 3.2)</i> to <i>NSMD (Figure 3.1)</i>. Changed Package BGA Solder Mask Opening – Diameter (mm) from 0.240 to “—” Changed Package BGA Pad Opening (mm) from “—” to 0.240. Added the 84 WLCSP (Option 1) under 0.50 mm Ball Pitch. Updated the 256 FOWLP package. (Changed 256 FOWLCSP to 256 FOWLP.) <ul style="list-style-type: none"> Changed Package Solder Pad Type from <i>SMD (Figure 3.2)</i> to <i>NSMD (Figure 3.1)</i>. Changed Package BGA Solder Mask Opening – Diameter (mm) from 0.280 to “—” Changed Package BGA Pad Opening (mm) from “—” to 0.280. Added the 69 WLCSP under 0.65 mm Ball Pitch. Added the 104 CTG/fcCSP under 0.65 mm Ball Pitch. Added footnote 8. <p>In Table 3.2. PCB SMD/NSMD Pad Recommendations:</p> <ul style="list-style-type: none"> Updated the 72 WLCSP package. Changed Optimum PCB SMD Solder Mask Opening (mm) from 0.270 to 0.250. Updated the 84 WLCSP package. <ul style="list-style-type: none"> Changed the Optimum PCB SMD Solder Mask Opening (mm) from 0.250 to 0.290. Changed the Optimum PCB NSMD Solder Land Diameter (mm) from 0.200 to 0.240. Added the 84 WLCSP (Option 1) under 0.50 mm Ball Pitch. Updated the 256 FOWLP package. (Changed 256 FOWLCSP to 256 FOWLP.) <ul style="list-style-type: none"> Changed the Optimum PCB NSMD Solder Land Diameter (mm) from 0.250 to 0.300. Added the 69 WLCSP under 0.65 mm Ball Pitch. Added the 104 CTG/fcCSP under 0.65 mm Ball Pitch. Added footnote 9.
BGA Breakout and Routing Examples	Changed FOWLCSP to FOWLP. The section and subsection headings are modified to FOWLP BGA Breakout Example and 256-Ball FOWLP Breakout Example.

Revision 5.1, November 2022

Section	Change Summary
All	Avant-E public release.
BGA Board Layout Recommendations	Added Avant 1156 fcBGA package in Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening and Table 3.2. PCB SMD/NSMD Pad Recommendations.
BGA Breakout and Routing Examples	Added 1156-Ball fcBGA Breakout Example.

Revision 5.0, August 2022

Section	Change Summary
BGA Breakout and Routing Examples	Updated Trace Space to 0.100 mm for MN100 Package in Table 4.1. Package Layout Example Summary.

Revision 4.9, July 2022

Section	Change Summary
Disclaimers	Updated list.
Lattice BGA Package Types	Reordered list.
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. Added 84 WLCSP under 0.50 mm Ball Pitch.

Section	Change Summary
	<ul style="list-style-type: none"> Added BBG under 0.80 mm Ball Pitch. Updated Table 3.2. PCB SMD/NSMD Pad Recommendations¹. Added 84 WLCSP under 0.50 mm Ball Pitch. Corrected PCB NSMD values for 289 csBGA, 285 csfBGA, and 121, 256, 324 csfBGA. Added BBG under 0.80 mm Ball Pitch.
BGA Package Test and Assembly	Added Back-Drilling or Top-Drilling PCBs to Remove Via Stubs section.
All	<ul style="list-style-type: none"> Corrected Board layer callouts and mis-spellings. Minor changes in style and formatting.

Revision 4.8, October 2021

Section	Change Summary
BGA Board Layout Recommendations	Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. Under 0.80 mm Ball Pitch, modified the 121 caBGA Solder Mask Opening.
BGA Breakout and Routing Examples	Added 121-Ball caBGA BGA Breakout Example.

Revision 4.7, September 2021

Section	Change Summary
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. Added 80 ckfBGA Under 0.65 mm Ball Pitch and updated 80 ctfBGA diameter. Added 324 caBGA under 0.80 mm Ball Pitch. Updated Table 3.2. PCB SMD/NSMD Pad Recommendations¹. Added 80 ckfBGA under 0.65 mm Ball Pitch. Added 324 caBGA under 0.80 mm Ball Pitch.
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Changed heading to ckfBGA/ctfBGA BGA Breakout Example and sub-heading to 80-Ball ckfBGA/ctfBGA BGA Breakout Example. Indicated specific packages for 7.0 × 7.0 mm and 6.5 × 6.5 mm.

Revision 4.6, August 2021

Section	Change Summary
Acronyms in This Document	Added FOWLP.
Introduction	Fixed the link to the Development Boards and Kits web page.
Lattice BGA Package Types	Added FOWLP.
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. Added 672 fcBGA package under 1.00 mm Ball Pitch. Also combined 100 fpBGA with similar package types. Added 256 FOWLP package. Added 256 FOWLP to Table 3.2. PCB SMD/NSMD Pad Recommendations¹.
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Added 672-Ball fcBGA Breakout Example. Added 256-Ball FOWLP Breakout Example. Fixed the link to the Development Boards and Kits web page.
PCB Design Support	Fixed the link to the Development Boards and Kits web page.

Revision 4.5, June 2021

Section	Change Summary
BGA Board Layout Recommendations	Added 196 caBGA package to: <ul style="list-style-type: none"> Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. Table 3.2. PCB SMD/NSMD Pad Recommendations¹.
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Added 196-Ball caBGA BGA Breakout Example. Reordered subsections.

Revision 4.4, October 2020

Section	Change Summary
BGA Board Layout Recommendations	Added 72 WLCSP package to: <ul style="list-style-type: none"> Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening. Table 3.2. PCB SMD/NSMD Pad Recommendations¹.
BGA Breakout and Routing Examples	Added 72-Bump WLCSP Breakout Example.

Revision 4.3, May 2020

Section	Change Summary
BGA Board Layout Recommendations	Added 289 csBGA package to: <ul style="list-style-type: none"> Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening Table 3.2. PCB SMD/NSMD Pad Recommendations¹
BGA Breakout and Routing Examples	Added 289-Ball csBGA BGA Breakout Example.

Revision 4.2, August 2019

Section	Change Summary
All	<ul style="list-style-type: none"> Added Disclaimers section. Fixed broken links. Minor editorial changes.

Revision 4.1, March 2019

Section	Change Summary
All	Updated last page of the document.
BGA Breakout and Routing Examples	Added body size 7.0 × 7.0 mm in 80-Ball ctfBGA BGA Breakout Example section.

Revision 4.0, November 2018

Section	Change Summary
All	<ul style="list-style-type: none"> Changed document number from TN1074 to FPGA-TN-02024. Updated document template.
Lattice BGA Package Types	Moved this section.
BGA Board Layout Recommendations	General update
Revision History	Updated format.

Revision 3.9, March 2017

Section	Change Summary
BGA Board Layout Recommendations	Revised Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. Added 484 caBGA under 0.8 mm Ball Pitch.
484-Ball caBGA BGA Breakout Example	Added this section.

Revision 3.8, January 2017

Section	Change Summary
BGA Board Layout Recommendations	Revised Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. <ul style="list-style-type: none"> Added 121 caBGA and 30 WLCSP under 0.4 mm Ball Pitch. Added 400 caBGA under 0.8 mm Ball Pitch.
30-Ball WLCSP Breakout and Routing Example	Updated this section.

Revision 3.7, September 2016

Section	Change Summary
BGA Board Layout Recommendations	Revised Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. <ul style="list-style-type: none"> Changed Nominal BGA Package Solder Pad Diameter (mm) values of 0.35 mm Ball Pitch 16, 25, 36 WLCSP and 0.4 mm Ball Pitch 25 WLCSP and 36, 49, 81 WLCSP. Added 0.65 mm Ball Pitch. Added (Option 1) to 0.8 mm Ball Pitch 100, 256, 332 caBGA. Added footnote 5.

Revision 3.6, May 2016

Section	Change Summary
64-Ball ucfBGA BGA Breakout and Routing Example	Added this section.

Revision 3.5, April 2016

Section	Change Summary
BGA Breakout and Routing Examples	Added the following sections: <ul style="list-style-type: none"> 80-Ball ctfBGA BGA Breakout Example 81-Ball csfBGA BGA Breakout Example 36-Bump WLCSP Breakout Example 4

Revision 3.4, September 2016

Section	Change Summary
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Added statement on capacitors at secondary layer. Updated Figure 4.26. CAM Artwork Screen Shots, 285-Ball csfBGA.
Technical Support Assistance	Updated this section.

Revision 3.3, February 2015

Section	Change Summary
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. Added 237 ftBGA package.

Section	Change Summary
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Added 237-Ball ftBGA BGA Breakout Example section. Added breakout information for the CM36A package of the iCE40 Ultra device. Added CM36A package to section heading. Added CM36A package to introduction. Added CM36A package to Table 5 caption. Updated Figure 40 caption to Four-Layer Example Shown for CM36.

Revision 3.2, January 2015

Section	Change Summary
16-Bump WLCSP Breakout Example	Added information on iCE40 UltraLite device...

Revision 3.1, October 2014

Section	Change Summary
BGA Board Layout Recommendations	Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. Removed 20 WLCSP.
20-Bump WLCSP Breakout Example	Removed this section.

Revision 3.0, September 2014

Section	Change Summary
BGA Board Layout Recommendations	Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. Updated Figure 3.1. Device/Package (NSMD).
BGA Breakout and Routing Examples	<p>Added the following sections:</p> <ul style="list-style-type: none"> 121-Ball csfBGA BGA Breakout Example 256-Ball csfBGA BGA Breakout Example 324-Ball csfBGA BGA Breakout Example 256-Ball caBGA BGA Breakout Example 324-Ball caBGA BGA Breakout Example 400-Ball caBGA BGA Breakout Example 36-Bump WLCSP Breakout Example 1 36-Bump WLCSP Breakout Example 2 49-Bump WLCSP Breakout Example 1 49-Bump WLCSP Breakout Example 2 81-Bump WLCSP Breakout Example 1 81-Bump WLCSP Breakout Example 2 <p>Updated 36-Bump WLCSP Breakout Example 3 section title.</p>

Revision 2.9, June 2014

Section	Change Summary
BGA Breakout and Routing Examples	<p>Added the following sections:</p> <ul style="list-style-type: none"> 20-Bump WLCSP Breakout Example 36-Bump WLCSP Breakout Example

Revision 2.8, April 2014

Section	Change Summary
BGA Board Layout Recommendations	Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. Added 0.5 mm ball pitch (285 csfBGA) and 8 mm ball pitch (756, 554,381 caBGA) packages. Updated Table 3.2. Added csfBGA package type.
BGA Breakout and Routing Examples	Added the following sections: <ul style="list-style-type: none"> 285-Ball csfBGA BGA Breakout and Routing Example 381-Ball caBGA BGA Breakout and Routing Example 554-Ball caBGA BGA Breakout and Routing Example 756-Ball caBGA BGA Breakout and Routing Example

Revision 2.7, February 2014

Section	Change Summary
BGA Board Layout Recommendations	Added Figure 3.1. Device/Package (NSMD).
BGA Breakout and Routing Examples	<ul style="list-style-type: none"> Updated Table 4.2. iCE40 Package Layout Example Summary. Changed "Pad Size" to "Solder Pad Size". Fixed typographical error (Via). Changed "BGA Pad Size" to "BGA Solder Pad Size" in various sections. Updated Figure 4.50. Four-Layer CB81. Updated Table 4.13. CB121, Six-Layer Layout Dimensions (Option 1). Updated Figure 4.51. Six-Layer CB121 (Option 1). Deleted Internal Signal Layer and Inner Signal Layer 2.

Revision 2.6, September 2013

Section	Change Summary
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening to include 25 wlcs and 1 6 wlcs package options in 0.35 mm ball pitch. Updated Table 3.2 to include 0.35 mm ball pitch for WLCSP package type.
BGA Breakout and Routing Examples	Added the following sections: <ul style="list-style-type: none"> 332-Ball caBGA BGA Breakout Example 30-Ball WLCSP Breakout and Routing Example Layout Screen Shots, 30-Ball WLCSP, 0.40 mm Pitch 25-Bump WLCSP Breakout and Routing Example 1 16-Bump WLCSP Breakout Example
Technical Support Assistance	Updated this section.

Revision 2.5, February 2013

Section	Change Summary
All	Included iCE40 product series.
BGA Board Layout Recommendations	Updated to include 184csBGA in Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening.

Revision 2.4, November 2012

Section	Change Summary
BGA Breakout and Routing Examples	Updated to include 328-Ball csBGA BGA Breakout and Routing Example.

Revision 2.3, August 2012

Section	Change Summary
BGA Breakout and Routing Examples	Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening for iCE40 device support.

Revision 2.2, November 2012

Section	Change Summary
All	Updated document with new corporate logo.

Revision 2.1, October 2011

Section	Change Summary
BGA Breakout and Routing Examples	Replaced reference to 6-layer example with description of two 4-layer examples for 100-ball and 132-ball csBGA.

Revision 2.0, October 2011

Section	Change Summary
BGA Board Layout Recommendations	<ul style="list-style-type: none"> Updated BGA Board Layout Recommendations text section. Updated Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening. Added WLCSP to Table 3.1. Lattice Package SMD/NSMD Solder Pad Opening.

Revision 1.9, October 2011

Section	Change Summary
BGA Board Layout Recommendations	Added 64 csBGA to 0.5 mm pitch column to Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening.

Revision 1.8, August 2010

Section	Change Summary
BGA Board Layout Recommendations	<p>Updated Table 3.1. Lattice BGA Package SMD/NSMD Pad Opening.</p> <ul style="list-style-type: none"> Specified nominal Solder Mask Opening for each Lattice BGA package Clarified recommended Solder Mask Opening and Solder Pad Diameters Added cautionary note.

Revision 1.7, March 2010

Section	Change Summary
Lattice BGA Package Types/ BGA Board Layout Recommendations	Replaced Lattice BGA Naming Conventions table with Lattice BGA Package Types table and SMD/NSMD Pad Recommendations table.

Revision 1.6, February 2010

Section	Change Summary
All	Edits to most sections and additional links and graphics added for each example.

Revision 1.5, May 2009

Section	Change Summary
Lattice BGA Package Types	Updated BGA Package Types table for 0.4 mm pitch ucBGA package.
BGA Board Layout Recommendations	Updated BGA Board Layout Recommendations table.

Revision 1.4, March 2008

Section	Change Summary
BGA Breakout and Routing Examples	Revised recommended Solder Mask Defined and Non Solder Mask Defined PCB solder pad dimensions to match industry standards.

Revision 1.3, September 2006

Section	Change Summary
Lattice BGA Package Types	Reformatted section in tabular format.
BGA Board Layout Recommendations	Added note to table.

Revision 1.2, June 2006

Section	Change Summary
All	Removed NSMD content.

Revision 1.1, November 2005

Section	Change Summary
All	Updated figures.

Revision 1.0, January 2005

Section	Change Summary
All	Initial release.



www.latticesemi.com