

# Lattice Radiant Software 1.1 Installation Guide for Windows



April 12, 2019

---

## Copyright

Copyright © 2019 Lattice Semiconductor Corporation. All rights reserved. This document may not, in whole or part, be reproduced, modified, distributed, or publicly displayed without prior written consent from Lattice Semiconductor Corporation (“Lattice”).

## Trademarks

All Lattice trademarks are as listed at [www.latticesemi.com/legal](http://www.latticesemi.com/legal). Synopsys and Synplify Pro are trademarks of Synopsys, Inc. Aldec and Active-HDL are trademarks of Aldec, Inc. All other trademarks are the property of their respective owners.

## Disclaimers

NO WARRANTIES: THE INFORMATION PROVIDED IN THIS DOCUMENT IS “AS IS” WITHOUT ANY EXPRESS OR IMPLIED WARRANTY OF ANY KIND INCLUDING WARRANTIES OF ACCURACY, COMPLETENESS, MERCHANTABILITY, NONINFRINGEMENT OF INTELLECTUAL PROPERTY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL LATTICE OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THE INFORMATION PROVIDED IN THIS DOCUMENT, EVEN IF LATTICE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS PROHIBIT THE EXCLUSION OR LIMITATION OF CERTAIN LIABILITY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Lattice may make changes to these materials, specifications, or information, or to the products described herein, at any time without notice. Lattice makes no commitment to update this documentation. Lattice reserves the right to discontinue any product or service without notice and assumes no obligation to correct any errors contained herein or to advise any user of this document of any correction if such be made. Lattice recommends its customers obtain the latest version of the relevant information to establish that the information being relied upon is current and before ordering any products.

---

## Type Conventions Used in This Document

Convention	Meaning or Use
<b>Bold</b>	Items in the user interface that you select or click. Text that you type into the user interface.
<i>&lt;Italic&gt;</i>	Variables in commands, code syntax, and path names.
<b>Ctrl+L</b>	Press the two keys at the same time.
<code>Courier</code>	Code examples. Messages, reports, and prompts from the software.
<code>...</code>	Omitted material in a line of code.
<code>.</code> <code>.</code> <code>.</code>	Omitted lines in code and report examples.
[ ]	Optional items in syntax descriptions. In bus specifications, the brackets are required.
( )	Grouped items in syntax descriptions.
{ }	Repeatable items in syntax descriptions.
	A choice between items in syntax descriptions.

# Contents

<b>Lattice Radiant Software 1.1 Installation Guide for Windows</b>	<b>6</b>
System Requirements	6
Contacting Technical Support	7
Installing Radiant Software for Windows	8
Software Product Options	8
Installation Procedure	9
Licensing for Radiant Software and Stand-Alone Power Estimator	11
Optional Floating License Setup	12
Editing the License File	13
License Server Setup	13
Windows License Server Setup for Active-HDL Lattice Edition	14
Floating License Configuration	15
Setting up Floating License on Linux	16
Troubleshooting Licensing Problems	16
Running Multiple Versions of Lattice Software	17
Running Radiant Software	17
Running Radiant Software Locally	17
Running Radiant Software using Windows Remote Desktop	17
Finding the Installation History	18
Updating Lattice Radiant Software	18
Running Radiant Software from the Command Line	21
Running Stand-Alone Radiant Tcl Console	21
Installing Stand-Alone Radiant Programmer	22
Install and Uninstall Cable Drivers	23
Starting Stand-Alone Radiant Programmer	24
Starting Stand-Alone Deployment Tool	24
Starting Stand-Alone Download Debugger	24
Starting Stand-Alone Programming File Utility	25
Installing Stand-Alone Radiant Reveal Logic Analyzer	25
Starting Stand-Alone Reveal Logic Analyzer	26

Installing Stand-Alone Power Estimator	26
Starting Stand-Alone Power Estimator	27
Downloading and Installing Soft IP	27
Troubleshooting	27
When All Else Fails	28
<b>Revision History</b>	<b>30</b>

# Lattice Radiant Software 1.1 Installation Guide for Windows

This document provides installation instructions for Lattice Radiant™ Software for Windows.

Radiant software supports iCE40 UltraPlus™.

## Note

---

The available devices vary depending on the type of license.

---

Radiant software is available in a 64-bit version. The 64-bit version of Radiant software is optimized to run on Windows 64-bit systems. Radiant software must be running on Windows 64-bit systems.

## System Requirements

The following are the basic system requirements for Radiant software on Windows:

- ▶ Intel Pentium or Pentium-compatible PC
- ▶ 64-bit OS
- ▶ Windows 7, Windows 8 and 8.1, or Windows 10
- ▶ Approximately 2 GB free disk space
- ▶ Computer Memory Requirement: 2 GB Minimum, 3GB Recommended

- ▶ Network adapter and network connectivity

**Note**

---

A node-locked license is based on the physical (hard-coded) address provided by the network adapter. Network connectivity is not necessarily required for a node-locked license. In the absence of a network connection, you can install the NWLink IPX/SPX protocol to force the recognition of your NIC card ID (see “Licensing for Radiant Software and Stand-Alone Power Estimator” on page 11).

A floating license requires access to the license server, so both a network adapter and connectivity are required.

---

- ▶ 1024 X 768 graphics display
- ▶ Microsoft-compatible mouse and mouse driver
- ▶ A Web browser with Javascript capability
- ▶ Adobe Acrobat Reader 5.0 or later
- ▶ A CPU with the SSE3 instruction set to run the Aldec Active-HDL Lattice Edition simulator
- ▶ Microsoft Internet Explorer 8 or higher if using the included Aldec Active-HDL Lattice Edition simulator

## Contacting Technical Support

**FAQs** The first place to look. The [Answer Database](#) provides solutions to questions that many of our customers have already asked. Lattice Applications Engineers are continuously adding to the Database.

To access the Answer Database, go to [www.latticesemi.com](http://www.latticesemi.com) > **Support** > **Answer Database**.

**Telephone Support Hotline** Receive direct technical support for all Lattice products by calling Lattice Applications from 5:30 a.m. to 6 p.m. Pacific Time.

- ▶ For USA & Canada: 1-800-LATTICE (528-8423)
- ▶ For other locations: +1 503 268 8001

In Asia, call Lattice Applications from 8:30 a.m. to 5:30 p.m. Beijing Time (CST), +0800 UTC. Chinese and English language only.

- ▶ For Asia: +86 21 52989090

**E-mail Support**

- ▶ [techsupport@latticesemi.com](mailto:techsupport@latticesemi.com)

**For Local Support** Contact your nearest [Lattice Sales Office](#).

# Installing Radiant Software for Windows

The following sections describe product options and installation instructions for Radiant software for Windows.

## Software Product Options

Table 1 shows the product options for the installation of Radiant software for Windows.

**Table 1: Radiant Design Tools Installation Options**

Product Option	Description
Radiant software for Windows	Installs the Radiant software design tools for all Lattice Semiconductor FPGA designs. Table 2 lists the tools included in this option.
FPGAs	Installs the FPGA design environment.
Active-HDL Lattice Edition	Installs Aldec® Active-HDL™ Lattice Edition simulation tool. A license for Active-HDL is included.
Programmer Drivers	Installs drivers for the Radiant Programmer tool, which loads FPGAs with the designs.

Table 2 shows the tools included in the Radiant software for Windows option.

**Table 2: Tools Included in the Radiant Software for Windows Option**

Tool	Description
Project Management Tools	Includes the Reports view, and the Security Setting tool to enable you to create and maintain the project, keep track of the stages in the design implementation process, review reports, and compare different implementations of the project.
Design Entry Tools	Include Source Editor and Device Constraint Editor, which offer VHDL, Verilog, schematic, and mixed-mode design entry support and design structure check..
Design Simulation Tools	Include Simulation Wizard and Active-HDL Lattice Edition for performing functional simulation for the projects and creating the test stimulus files.
Design Constraints Application Tools	Include Floorplan View, Physical View, and Netlist Analyzer to enable you to set constraints for implementing the design.
Design Implementation Tools	Include Synplify Pro for Lattice, Lattice Synthesis Engine (LSE), Clear Tool Memory, Map, Place & Route, and Bit Generation to ease the design implementation process.
Analyzing Static Timing, Power Consumption, and Signal Integrity Tools	Include Timing Analysis View and Power Calculator to enable you to estimate the design performance, experiment with different configurations, and to calculate power consumption.
Programming the FPGA Tool	Include Programmer, Deployment Tool, Download Debugger, and Programming File Utility tools to let you program the FPGAs.

**Table 2: Tools Included in the Radiant Software for Windows Option (Continued)**

Tool	Description
Testing and Debugging On-chip Tools	Includes Reveal Inserter and Reveal Analyzer to let you complete the final stage of developing a design: testing in the actual FPGA, either on a test board or in your system.
HTML Help and User Documentation	Includes complete instructions for designing with Radiant software design tools and third-party tools. Also provides user manuals, tutorials, example design projects, and access to technical documentation from the Lattice Semiconductor Web site.
Tcl/Tk Scripting Tool	Enables you to automate Radiant software design processing.


## Installation Procedure

Radiant software is available for download from the Lattice Radiant Downloads & Licensing web page located at <http://www.latticesemi.com/latticeradiant>. Click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account. Follow the product download instructions and uncompress the software.

### To install the Lattice Semiconductor Radiant software for Windows:

1. Close all applications before starting Radiant software installation.
2. Double-click on the Radiant software installer you downloaded to launch the installation process.
3. The Welcome To Lattice Radiant Software 1.1 Setup dialog box opens.
4. Click **Next** to select Installation Folder.
5. The default destination folder is C:\lsc\radiant\1.1. Click **Browse** to change the drive or destination folder.
6. Click **Next** to open the Product Options dialog box.
7. Select the Radiant software components that you want to install by selecting or clearing each of the listed options. If you have purchased third-party synthesis and simulation tools directly from the third-party vendors, you can clear the **Active-HDL Lattice Edition** product options.  
  
The FPGAs product option has additional options for selecting the Lattice FPGA devices that you want to install. To set the additional options, select **FPGAs** and click the device.
8. Click **Next** to open the License Agreement dialog box.

Figure 1: Select Components

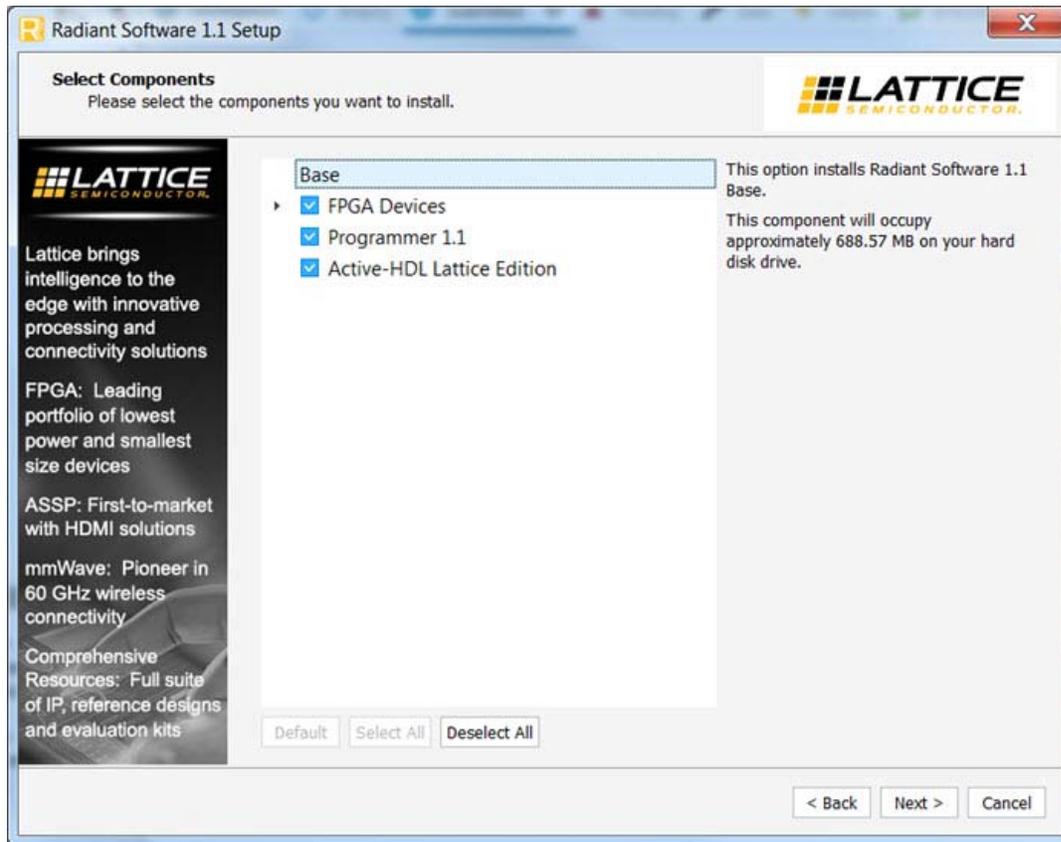

9. Read the license agreement. If you agree, click **I accept the license** to open the Start Menu shortcuts dialog box.
10. Click **Next** to open the Select Program Folder dialog box. The default name of the program group is **Lattice Radiant Software 1.1**. If you want to change the name, change it in the Program Folder text box.
11. Click **Next** to display the Ready to Install dialog box. Review the current settings: the destination folder and components selected. If everything is correct, select **Install** to start the installation.
12. In the Installation Wizard Complete dialog box, read the confirmation note and click **Finish**.

#### Note

Do not close the installation window. The window automatically closes once the installation is completed.

13. If you never install any Lattice Software before, FlexNet License Finder dialog box will pop up to ask you for the license. Select the desired license option and click **Next** to complete the license installation

**Figure 2: Flex License Finder**

## Licensing for Radiant Software and Stand-Alone Power Estimator

When installation is complete, you will need to use the Lattice website to apply a license to your Radiant software.

### Note

The available devices for Radiant software can vary, depending on the type of license.

The license you received is based on the identification of your network interface card (NIC). The NIC ID or equivalent is the 12-character hexadecimal physical address. License your software early to avoid any down time.

You can also get the NIC via an alternate network interface, such as a wireless interface.

### To obtain a license file for your Radiant software:

1. Go to Lattice Semiconductor Software Licensing page:  
[www.latticesemi.com/licensing](http://www.latticesemi.com/licensing)
2. Select **Lattice Radiant Software**.
3. Follow the on-screen instructions.

## Optional Floating License Setup

To enable a floating license, you must have a license server set up on a Windows or Linux server to monitor your Radiant software license. Each client PC must have the LM\_LICENSE\_FILE variable set to point to the license file on the server.

### Note

Radiant software uses the following network communication ports (TCP/IP socket ports):

- ▶ Port 80 – This is the standard HTTP web access port. Radiant software uses this port in the following cases:
  - ▶ When the Lattice Radiant software has updates from the Lattice web site:
  - ▶ IP or reference designs are downloaded from the Lattice web site:
  - ▶ When message ID's are sent.
- ▶ Port 7788 – This is the port used by the Radiant software to check the floating license between the software and license server. This port is configurable by changing the license files.

Before you start the server setup, ensure that TCP/IP is installed and that the client machines can communicate with the server by name. At the prompt in a Command Prompt window, type the following:

```
ping <hostname>
```

Table 3 lists the files used for license management for 64-bit systems. The files are located at:

```
<Radiant_install_path>\ispfpga\bin\nt64
```

**Table 3: License Management Files**

Filename	Version	Description
lmgrd.exe	11.13.1.3	The license server program.
lmutil.exe	11.13.1.3	FLEXlm utility for diagnosing, reporting, and controlling licensing.
lmttools.exe	11.13.1.3	Program that sets up the server for floating licenses.
lattice.exe	11.13.1.3	The Lattice Semiconductor licensing daemon.

### Note

Users of the ispLEVER 7.0 or older software must bring down the previous license daemon and start the new license daemon.

## Editing the License File

After obtaining a floating license from Lattice Semiconductor, you must edit the license file to specify the server name and the paths to the Lattice daemon. An example of a floating license file is shown below.

```
SERVER nodename 001143D94535 7788
DAEMON lattice daemon_path
FEATURE LSC_ADVANCED lattice 8.0 01-jan-9999 100 EE7E589FBD53 \
  VENDOR_STRING="ispLEVER Advanced"
FEATURE LSC_BASE lattice 8.0 01-jan-9999 100 F901F7E7F4F1 \
  VENDOR_STRING="ispLEVER Base"
FEATURE LSC_RADIANT lattice 10.0 01-jan-9999 100 6D8288983379 \
  VENDOR_STRING=LSC_RADIANT
FEATURE LSC_OBSOLETE_DEVICE lattice 10.0 01-jan-9999 100 7D131CCD0F18 \
  VENDOR_STRING=LSC_OBSOLETE_DEVICE
```

### Note

The “\” followed by a carriage return indicates a line continuation.

### To edit the license file:

1. Edit the `SERVER` line by replacing `nodename` with the host name of the server for which you requested your license.dat file. You may also need to change the PORT NUMBER (7788).
2. Edit the `DAEMON lattice` line by replacing `daemon_path` with the path to the lattice daemon, for example:

```
C:\lsc\radiant\1.1\isfpfga\bin\nt64\lattice.exe
```

When you are editing these lines, make sure that they are typed exactly as you received them.

## License Server Setup

### To set up your license manager as a system service:

1. Copy the license file (license.dat) to `<Radiant_install_path>\license\license.dat`.
2. Double-click the `<Radiant_install_path>\isfpfga\bin\nt64\lmtools.exe` file to open the LMTOOLS dialog box.

### Note

Windows 7 users may need to right click on LMTOOLS.exe and select **Run as Administrator**.

3. Choose the **Config Services** tab in the LMTOOLS dialog box.
4. Change Service Name to **Lattice FLEXIm Service 1**.
5. Browse and set `lmgrd.exe` to `<install_path>\isfpfga\bin\nt64\lmgrd.exe`.
6. Browse and set the license file to `<install_path>\license\license.dat`.

7. Browse and set the debug log file to `<install_path>\license\lattice.log`.
8. Click **Save Service**.
9. Select the **Start/Stop/Reread** tab.
10. Click **Start Server**.
11. Select the **Config Services** tab.
12. Select **View Log** to view the lattice.log file. Check to see if there are any problems starting the license server. If there are no problems, close the log file.
13. Choose **Start > All Programs > Lattice Radiant Software 1.1** to verify license checkout (this will be reflected in the lattice.log file). Close Radiant.
14. Choose the **Start/Stop/Reread** tab in the LMTOOLS dialog box.
15. Select **Stop Server**.
16. Select the **Config Services** tab. Select **Use Services** and **Start Server at Power-Up**.
17. Click **Save Service**, and then select **File > Exit**.
18. Restart the Windows server system.
19. Start the Radiant software again to verify that the license server is running as a service.

## Windows License Server Setup for Active-HDL Lattice Edition

If you want to use a floating license on a Windows system to run the Active-HDL Lattice Edition software, you must have a USB FLEXid keylock dongle and a separate license file (aldec\_license.dat) for Active-HDL Lattice Edition installed.

The steps below show you how to install the dongle driver and set up a Windows floating license server for Active-HDL Lattice Edition.

1. Obtain the USB FLEXid keylock dongle and the Active-HDL Lattice Edition license file (aldec\_license.dat) from Lattice Semiconductor.
2. Install the driver files for the USB FLEXid keylock dongle by running the executable in the zip file that matches your FLEXid version (9 or 10) and your system (x64 for 64-bit systems), located at `<Radiant_install_path>\active-hd\license\drivers`. See `<Radiant_install_path>\active-hd\license\drivers\fnpdig.pdf` for additional instructions.
3. Plug in the USB FLEXid keylock dongle to the PC that runs the license server.
4. Download the Aldec license daemon package from `ftp://reguser:reguser@ftp.aldec.com/daemons/12.2/aldec_windows_floating_license.zip`.

5. Unpack the zip archive to a directory where you want to install the license server.
6. Copy the license file (aldec\_license.dat) to the directory where you unpacked the server.
7. Modify the license file (aldec\_license.dat) as follows.
  - ▶ Modify the SERVER line to reflect the nodename of your PC:
 

```
SERVER nodename FLEXID=9-xxxxxxxx 27000
SERVER myservername FLEXID=9-xxxxxxxx 27000
```
  - ▶ (Optional) Modify the VENDOR line to specify the vendor daemon path:
 

```
VENDOR ALDEC path_to_aldec
```

If the license file is in the local directory, you may remove the path parameter:

```
VENDOR ALDEC
```
8. Start the license server by running **startlicense.bat**.
9. Start the Active-HDL Lattice Edition software.
 

The Active-HDL License dialog box appears. Click **Run license information**. The Diagnose License dialog box then appears.
10. Confirm that the installation directory for Active-HDL is accurate and click **Next**. The Diagnose (License File) dialog box appears.
11. Specify the location of the license server using the syntax: `<TCP-port>@host_computer_name (27000@myservername)`. Click **Refresh**. Then click **Next**.
12. Click **Finish**.
13. Restart the Active-HDL Lattice Edition software.

## Floating License Configuration

In this configuration, Radiant software is installed on your license server (for license manager utilities and daemons) and on each client that uses Radiant software. This configuration gives the best run-time performance.

After you receive your floating license and ensure that the license manager is running, install the Radiant software locally on each client that will use the floating license.

Set your system variable LM\_LICENSE\_FILE to point to TCP/IP\_PORT@hostname

## Setting up Floating License on Linux

You can also put the Radiant software license on a Linux machine. Then each client (Windows or Linux) points to the license file on the Linux machine. In this case, you need to set the environment variable `LM_LICENSE_FILE` value to `License_Port_number@linux_host_name`. Or, have the `LM_LICENSE_FILE` value set to the path to a license file on the client that is set up with the `SERVER` name of the `linux_host_name` and `License_Port_number`.

## Troubleshooting Licensing Problems

If you encounter problems with your license, refer to Table 4 for common FLEXlm error messages and possible causes or solutions.

**Table 4: FLEXlm Error Messages**

FLEXlm Error Message	Possible Causes or Solutions
Invalid parameter [-42, 252]	<ul style="list-style-type: none"> <li>▶ The <code>LM_LICENSE_FILE</code> variable has not been set properly.</li> <li>▶ The license file is invalid.</li> <li>▶ An invalid feature is specified in the license file.</li> </ul>
Invalid parameter [-42, 252:10061] Winsock error code	<ul style="list-style-type: none"> <li>▶ You have a floating license, and the license daemon has not been started at the Windows NT server.</li> <li>▶ The network connection between the server and the client has not been established.</li> </ul>
Invalid parameter [-12, 122] Invalid returned data from license server	The node name of the Windows NT server does not match the one in your floating license file.
Invalid parameter [-5, 222] No such feature exists	The feature could not be found in the license file.
! License Check Failed	You either have a node-locked license or you do not have a license file. Contact Lattice Semiconductor Technical Support for a valid floating license file.

If you encounter any software-related problems, review the following common troubleshooting scenarios before calling Lattice Semiconductor Technical Support:

- ▶ Ensure that your environment variable settings are set correctly, including the **TEMP** user variable.
- ▶ For Windows, your system should contain the following environment settings:

```
SET LM_LICENSE_FILE=<install_path>\license\license.dat
```

You can verify these settings by accessing the **System Properties** dialog box from your Windows system. Select the **Advanced** tab and the **Environment Variables** section.

If Radiant software still does not run after you have installed your new license file and confirmed that your environment variables are correct, gather the following items:

- ▶ A screen capture showing the error message
- ▶ A text file that contains a listing of the environment setup for your PC. From an Command Prompt window, issue the **set > env.txt** command.
- ▶ Your license.dat file

Combine these items in a zip file and e-mail it to [techsupport@latticesemi.com](mailto:techsupport@latticesemi.com). Include an explanation of the problem.

## Running Multiple Versions of Lattice Software

Radiant software enables you to run FPGA designs on platforms on which Radiant and previous Diamond/ iCE are installed. You can run current and previous versions.

## Running Radiant Software

After the software and license configuration have been installed, you can invoke Radiant software.

### Running Radiant Software Locally

If you have installed Radiant software on your local machine:

- ▶ In Windows 7, choose **Start > All Programs > Lattice Radiant Software 1.1 > Radiant Software**.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Software 1.1 > Radiant Software**.

The Radiant software main window is invoked.

### Running Radiant Software using Windows Remote Desktop

You can also install Radiant software on a shared disk, installation procedure of which is exactly the same as that for the local installation. After the license file setup, you can access the shared disk from the Windows Explorer and then invoke Radiant software from that installation directory by double-clicking `<boot_drive>:\<Radiant_install_directory>\bin\nt64\pnmain.exe`

When the installation is finished, make sure to set the LM\_LICENSE\_FILE environment variable to be the location of your license file. When you use a

client-server setup, it is recommended that you use a floating license. Then set `LM_LICENSE_FILE=7788@nodename`. Confirm that it works by selecting and compiling one of the examples on the client.

## Finding the Installation History

The Radiant software records a log of the installation history, which you can find from the Radiant software main window.

### To view the installation history:

1. Open the Radiant software main window.

Select **Help > About Lattice Radiant Software**. See the Installation History tab.


## Updating Lattice Radiant Software

After you have registered and licensed your installation, check the Lattice Semiconductor Web site for new software updates, device support, and enhancements. Make sure that you have the latest software by checking for updates regularly.

### To activate UPDATE:

1. To enable automatically check for software update when Radiant software is launched, if you don't see Update window pops up. In Start page do as follows:
  - ▶ Select the **Startup** tab of the Options dialog box in Tools, click "Automatically check for software update when Lattice Radiant Software launches" and choose how often it will check.

**Figure 3: Startup Tab of the Options Dialog Box**

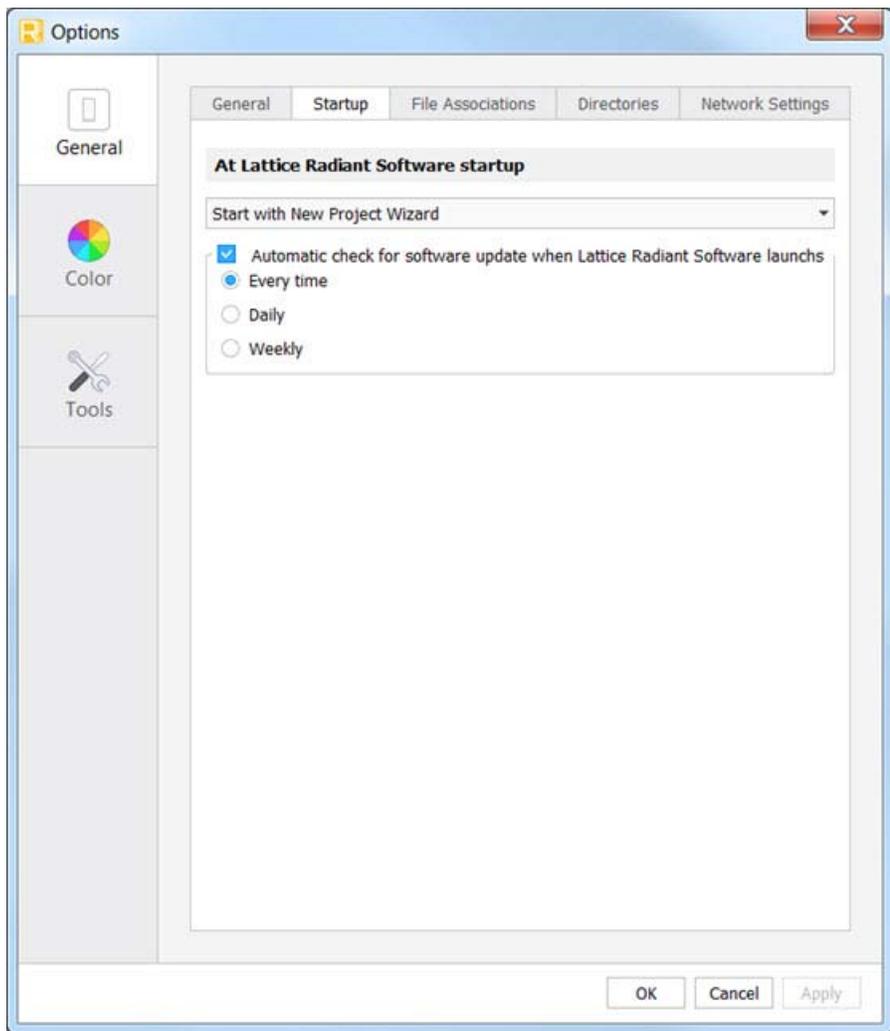


When Radiant software is launched, it will connect to the Internet automatically to check for updates.

## Changing the Network Setting

To enable automatic checking, you must indicate how your computer accesses the Internet.

### To change the Internet connection settings:

1. Select the **Network Setting** tab of the Options dialog box in Tools.

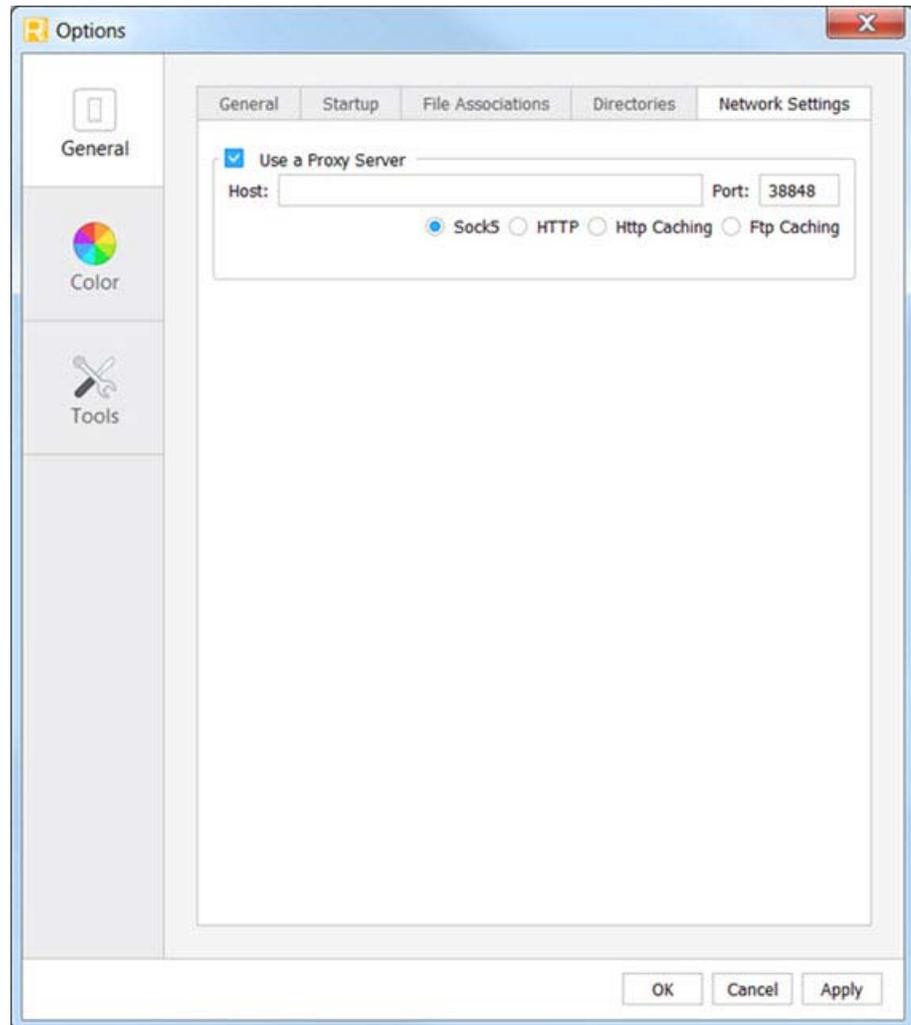**Figure 4: Network Settings Tab of the Options Dialog Box**

2. Select the **Use a Proxy Server** option if you must go through a proxy server before connecting to the Internet. The proxy server prevents outsiders from breaking into your organization's private network. Ask your system administrator for the URL address and port assignment. This option is turned on by default.

If you use direct Internet access, do not select the **Use a Proxy Server** option on this tab.

## Installing Updates

When you use the Auto Check feature, UPDATE notifies you whenever an update version of Radiant software becomes available. You receive notification when you open the Radiant software main window.

**To check and install the recommended update:**

- ▶ Launch Radiant software and the UPDATE software goes online to check for an update. If one is available, the Radiant software update version will be displayed in the **Available update versions** field.
- ▶ Click **Download** to save the update to a directory and install it later.
- ▶ Click **Install** to download and install the selected update version (as the version number specified in the **Available update versions** field) right away.

**To install a downloaded update:**

1. Close all Radiant tools.
2. Go to the location where you saved the update version.

Double-click the update file and follow the on-screen instructions.

## Running Radiant Software from the Command Line

There are two ways to run the Radiant software from the command line: through Radiant Tcl Console or by running executable files directly.

### Running Stand-Alone Radiant Tcl Console

Radiant software development environment includes Radiant Tcl Console, which allows you to run scripts for automating common tasks. Radiant Tcl Console is also available outside of the user interface in order to run custom scripts. To launch the stand-alone Radiant Tcl Console, enter the following on a command line:

```
% <install_path>/bin/nt64/pnmainc
```

You can run Power Calculator by running:

```
% <install_path>/bin/nt64/pwcmain
```

These commands configure the environment allowing all of the underlying design tools to be run. Refer to the online Help for more information about the command line.

# Installing Stand-Alone Radiant Programmer

Programmer is included in the Radiant software installation and consists of six tools:

- ▶ Radiant Programmer
- ▶ Deployment Tool
- ▶ Download Debugger
- ▶ Programming File Utility
- ▶ Install & Uninstall Cable Drivers

If you want to use Programmer, Deployment Tool, Download Debugger, or Programming File Utility without installing Radiant software, you can install the stand-alone Programmer.

The stand-alone Programmer is available in 64-bit versions.

Follow the product download instructions and uncompress the software. For more information on how to download stand-alone Programmer, go to <http://www.latticesemi.com/Latticeradiant> and click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account.

To install the stand-alone Programmer:

1. Close all applications before starting installation.
2. Double-click on the Programmer installer you downloaded to launch the installation process.
3. The Welcome To Lattice Radiant Programmer setup dialog box opens.
4. The default destination folder is C:\lsc\programmer\1.1. Click **Browse** to change the drive or destination folder.
5. Click **Next**. The default name of the program group is **Lattice Radiant Programmer 1.1**. If you want to change the name, change it in the Program Folder text box.
6. Click **Next** to open the Select Components dialog box.
7. Click **Next** to open the License Agreement dialog box.
8. Read the license agreement. If you agree, click **I accept the license**. then click **Next** to open the Start Menu shortcuts dialog box.
9. The default shortcuts name is "Lattice Radiant Programmer 1.1". Type a new name in the text box if you wish to change it.
10. Click **Next** to start installing the selected components
11. In the InstallShield Wizard Complete dialog box, read the note and click **Finish**.

## Install and Uninstall Cable Drivers

### To start the Install & Uninstall Cable Drivers:

- ▶ In Windows 7, choose **Programs > Lattice Radiant Programmer 1.1 > Install & Uninstall Cable Drivers** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Programmer 1.1 > Install & Uninstall Cable Drivers**

Parallel port or USB drivers are required to program Lattice devices using the Lattice download cables. To install the drivers, you must have administrative privileges.

Two drivers installation options are available in the Drivers Install/Uninstall dialog box.

**Figure 5:** Driver Installation Options



- ▶ **Parallel port driver** – Supports device programming through the parallel port of your PC. The driver can be installed on Windows 7, Windows 8/8.1, and Windows 10. **USB port driver** – Supports device programming through the USB port of your PC. The driver can be installed on Windows 7, Windows 8/8.1, and Windows 10. This is for the HW-USBN-2A USB cable.
- ▶ **FTDI USB driver** – This supports Lattice HW-USBN-2B USB cable and Lattice evaluation boards with FTDI (Future Technology Devices International) USB host chip. The driver does not support Windows 2000 and earlier operating systems.

### Note

The first time the FTDI driver is installed, the Windows operating system may report that Windows can't verify the publisher of this driver software. Select "Install this driver software anyway." This warning will not occur on subsequent installations.

1. In the Drivers Install/Uninstall dialog box (Figure 5), select the desired driver and click **Install**.
2. When prompted, verify the USB cable is plugged in and click **Yes**.

3. In the Installation Wizard Complete dialog box, and click **OK**.

**Note**

---

Do not close the installation window. The window automatically closes once the installation is completed.

---

## Starting Stand-Alone Radiant Programmer

**To start the stand-alone Radiant Programmer:**

- ▶ In Windows 7, choose **Programs > Lattice Radiant Programmer 1.1 > Radiant Programmer** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Programmer 1.1 > Radiant Programmer**.

## Starting Stand-Alone Deployment Tool

**To start the stand-alone Deployment Tool:**

- ▶ In Windows 7, choose **Programs > Lattice Radiant Programmer 1.1 > Deployment Tool** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Programmer 1.1 > Deployment Tool**.

## Starting Stand-Alone Download Debugger

**To start the stand-alone Download Debugger:**

- ▶ In Windows 7, choose **Programs > Lattice Radiant Programmer 1.1 > Download Debugger** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Programs > Lattice Radiant Programmer 1.1 > Download Debugger**.

## Starting Stand-Alone Programming File Utility

### To start the stand-alone Programming File Utility:

- ▶ In Windows 7, choose **Programs > Lattice Radiant Programmer 1.1 > Programming File Utility** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Programmer 1.1 > Programming File Utility**.

## Installing Stand-Alone Radiant Reveal Logic Analyzer

Radiant Reveal Logic Analyzer is included in the Radiant software installation. If you want to use the tool without installing Radiant software, first download it from the Lattice Semiconductor Web site.

Radiant Reveal Logic Analyzer is available in 64-bit versions.

For more information on how to download stand-alone Radiant Reveal Logic Analyzer, go to <http://www.latticesemi.com/Latticeradiant> and click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account.

### To install the stand-alone Radiant Reveal Logic Analyzer:

1. Close all applications before starting installation.
2. Double-click on the Radiant Reveal installer you downloaded earlier to launch the installation process.
3. The Welcome To Lattice Radiant Reveal setup dialog box opens.
4. Click **Next** to open the Installation Folder dialog box.
5. The default destination folder is C:\lsc\reveal\1.1. Click **Browse** to change the drive or destination folder.
6. Click **Next** to open the Select Components dialog box.
7. Click **Next** to open the License Agreement dialog box.
8. Read the license agreement. If you agree, click **I accept the license**. then click **Next** to open the Start Menu shortcuts dialog box.
9. The default shortcuts name is Lattice Radiant Reveal 1.1. Type a new name in the text box if you want to change it.
10. Click **Install** to begin installing the selected components to the selected folder.
11. In the Installation Wizard Complete dialog box, read the note and click **Finish**.

## Starting Stand-Alone Reveal Logic Analyzer

To start the stand-alone Reveal Logic Analyzer:

- ▶ In Windows 7, choose **Programs > Lattice Radiant Reveal 1.1 > Reveal Logic Analyzer** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Reveal 1.1 > Reveal Logic Analyzer**.

## Installing Stand-Alone Power Estimator

Power Calculator is included in the Radiant software installation. If you want to use the tool without installing Radiant software, you can install the stand-alone Power Estimator, available for download from the Lattice Semiconductor Web site.

Power Estimator is available in 64-bit versions.

For more information on how to download stand-alone Power Estimator, go to <http://www.latticesemi.com/Latticeradiant> and click the **Downloads** tab. Some documents and downloads are not visible to anonymous visitors. To view all items, please log in to your Lattice account.

**To install the stand-alone Power Estimator:**

1. Close all applications before starting installation.
2. Double-click on the Power Estimator installer you downloaded to launch the installation process.
3. The Welcome To Lattice Radiant Power Estimator setup dialog box opens.
4. Click **Next** to Installation Folder dialog box.
5. The default destination folder is C:\lsc\powerestimator\1.1. Click **Browse** to change the drive or destination folder.
6. Click **Next** to open the Select Components dialog box.
7. Click **Next** to open the License Agreement dialog box.
8. Read the license agreement. If you agree, click **I accept the license**.
9. Click **Next** to open the Start Menu shortcuts dialog box. The default name of the program group is **Lattice Radiant Power Estimator 1.1**. If you want to change the name, change it in the Program Folder text box.
10. Click **Next** to start installing the selected components.
11. In the Install Wizard Complete dialog box, read the note and click **Finish**.

## Starting Stand-Alone Power Estimator

- ▶ In Windows 7, choose **Programs > Lattice Radiant Power Estimator 1.1 > Radiant Power Estimator** from the Windows Start menu.
- ▶ In Windows 8/8.1 or Windows 10, choose **Apps > Lattice Radiant Power Estimator 1.1 > Radiant Power Estimator**.

### Note

The stand-alone Power Estimator requires a license. See “Licensing for Radiant Software and Stand-Alone Power Estimator” on page 11.

## Downloading and Installing Soft IP

Soft IP can be downloaded from the Lattice website. Use the **Install a User IP** feature of IP Catalog to install a Soft IP.

### To download and install a Soft IP:

1. Using a web browser, download the Soft IP installer from the Lattice website.
2. In the Radiant IP Catalog, click on the **Install a User IP**  button.
3. In the **Select user IP package file to install** dialog box, browse to the Radiant Software IP Package (.ipk) file, and click **Open**.
  - ▶ The Soft IP will be installed into a folder in the user’s personal directory. For example: `C:/Users/<username>/RadiantIPLocal/<IP_name>`.
  - ▶ The Soft IP will be added into the IP Catalog.

## Troubleshooting

If you encounter any software-related problems after installing Radiant, review the following common troubleshooting scenarios before calling Lattice Semiconductor Technical Support:

- ▶ Ensure that your environment variable settings are set correctly, including the TEMP user variable.
- ▶ You should also have the following system environment setting pointing to the license file:

```
SET LM_LICENSE_FILE=<Lattice_license_path>\license.dat
```

If you have multiple installations of Lattice software, this variable may have multiple paths in it. If there are problems, you may need to manually edit the variable.

You can verify these settings by accessing the System Properties dialog box from your Windows system. Select the Advanced tab from that dialog box and go to the “Environment Variables” section.

- ▶ If you have problems with the display, ensure that your system video display is set to a screen resolution of 1024 x 768 or more and that your video display is set to use 256 or more screen colors.
- ▶ Opening the online Help may be interrupted by one of the following messages on the Internet Explorer Information Bar:
  - ▶ “To help protect your security, Internet Explorer has restricted this file from showing active content that could access your computer. Click here for options...”
  - ▶ “To help protect your security, Internet Explorer has restricted this file from running scripts or ActiveX controls that could access your computer. Click here for options...”
  - ▶ “To help protect your security, Internet Explorer has restricted this webpage from running scripts or ActiveX controls that could access your computer. Click here for options...”

This can happen if you have Internet Explorer as your default browser.

To see the Help, click on the Information Bar and choose **Allow Blocked Content**. A dialog box with an expanded warning opens. Click **Yes**.

To avoid these warnings, either use a different browser or turn off the warning for active content in Internet Explorer.

---

**Note**

Doing either of these means that when you open any Web page that is resident on your computer—not just Radiant software Help—the page will automatically run any active content that it has. While active content is common and can be very useful, malicious content can damage your files. Be sure you trust the software on your computer.

---

*To turn off the warning:*

1. In the Internet Explorer, choose **Tools > Internet Options**.
2. Click the **Advanced** tab.
3. Under Security, select **Allow active content to run in files on My Computer**.
4. Click **OK**.

## When All Else Fails

If the Radiant software still does not run after you have installed your new license file and confirmed that your environment variables are correct, gather the following items:

- ▶ A screen capture showing the error message.
- ▶ A text file that contains a listing of the environment setup for your PC. From a Command Prompt window, issue the **set > env.txt** command.
- ▶ Your license.dat file.

Put these items into a zip file and e-mail it to [techsupport@latticesemi.com](mailto:techsupport@latticesemi.com), including an explanation of the problem.

## Revision History

The following table gives the revision history for this document.

Date	Version	Description
02/13/2018	1.0	Initial Release.
04/12/2019	1.1	<ul style="list-style-type: none"><li>▶ Updates for Radiant software 1.1</li><li>▶ Add Stand-Alone Radiant Power Estimator.</li><li>▶ Update hypertext.</li></ul>