Voltage Temperature Monitor IP

IP Version: v1.2.1

User Guide

FPGA-IPUG-02322-1.1

October 2026

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS, with all faults, and all associated risk is the responsibility entirely of the Buyer. The information provided herein is for informational purposes only and may contain technical inaccuracies or omissions, and may be otherwise rendered inaccurate for many reasons, and Lattice assumes no obligation to update or otherwise correct or revise this information. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. LATTICE PRODUCTS AND SERVICES ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS, OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING ANY APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, BUYER MUST TAKE PRUDENT STEPS TO PROTECT AGAINST PRODUCT AND SERVICE FAILURES, INCLUDING PROVIDING APPROPRIATE REDUNDANCIES, FAIL-SAFE FEATURES, AND/OR SHUT-DOWN MECHANISMS. LATTICE EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Inclusive Language

This document was created consistent with Lattice Semiconductor’s inclusive language policy. In some cases, the language in underlying tools and other items may not yet have been updated. Please refer to Lattice’s inclusive language FAQ 6878 for a cross reference of terms. Note in some cases such as register names and state names it has been necessary to continue to utilize older terminology for compatibility.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Contents

Contents 3
Abbreviations in This Document 5
1. Introduction 6
1.1. Overview of the IP 6
1.2. Quick Facts 6
1.3. IP Support Summary 6
1.4. Features 6
1.5. Licensing and Ordering Information 7
1.6. Naming Conventions 7
1.6.1. Nomenclature 7
1.6.2. Signal Names 7
2. Functional Description 8
2.1. IP Architecture Overview 8
2.2. Clocking 8
2.2.1. Clocking Overview 8
2.3. Reset 8
2.3.1. Reset Overview 8
2.4. Sensor Data 8
2.5. Alarms 9
3. IP Parameter Description 11
4. Signal Description 12
5. Designing with the IP 14
5.1. Generating and Instantiating the IP 14
5.1.1. Generated Files and File Structure 16
5.2. Design Implementation 17
5.3. Timing and Physical Constraint 17
6. Known Issues 18
Appendix A. Resource Utilization 19
References 20
Technical Support Assistance 21
Revision History 22

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Figures

Figure 2.1. VTM IP Block Diagram 8
Figure 2.2. Sensor Signals 9
Figure 2.3. Alarm Signals 10
Figure 5.1. Module/IP Block Wizard 14
Figure 5.2. IP Configuration 15
Figure 5.3. Check Generated Result 16
Figure 6.1. synthesis.log in impl_1 Folder 18

Tables

Table 1.1. Summary of the Voltage Temperature Monitor IP 6
Table 1.2. VTM IP Support Readiness 6
Table 2.1. Sensor Data Sample Rates and Format 9
Table 2.2. Sensor Accuracy and Resolution 9
Table 3.1. General Attributes 11
Table 4.1. I/O Port List 12
Table 5.1. Generated File List 16
Table A.1. Resource Utilization 19

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Abbreviations in This Document

A list of abbreviations used in this document.

Abbreviation	Definition
ASIC	Application-Specific Integrated Circuit
CPU	Central Processing Unit
EBR	Embedded Block RAM
FIFO	First In First Out
FPGA	Field Programmable Gate Array
HDL	Hardware Description Language
HPIO	High Performance I/O
IP	Intellectual Property
LUT	Look-Up Table
PDC	Physical Design Constraint
RISC-V	Reduced Instruction Set Computer-V (Five)
RTL	Register Transfer Level
VTM	Voltage Temperature Monitor

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

1. Introduction

This document provides technical information about the Voltage Temperature Monitor (VTM) IP that is supported in Lattice Mach™-N2, Lattice Certus™-N2, and Lattice Avant™ FPGA devices. The document aims to provide information essential for IP and system developers regarding verification, software for integration, testing, and validation. The document covers design specification from Register Transfer Level (RTL) up to IP packaging, IP generation, and integration with the Lattice Radiant™ software.

1.1. Overview of the IP

The Lattice Semiconductor VTM IP is designed to monitor on-die temperatures and voltages.

1.2. Quick Facts

Table 1.1. Summary of the Voltage Temperature Monitor IP

IP Requirements	Supported Devices	Lattice Mach-N2, Lattice Certus-N2 (except LN2-CT-20ES)[2], Lattice Avant-AT-E (LAV-AT-E30, LAV-AT-E50, and LAV-AT-E70), Lattice Avant-AT-G (LAV-AT-G30, LAV-AT-G50, and LAV-AT-G70), and Lattice Avant-AT-X (LAV-AT-X30, LAV-AT-X50, and LAV-AT-X70)
	IP Changes[1]	Refer to the Voltage Temperature Monitor IP Release Notes (FPGA-RN-02114).
Resource Utilization	Supported User Interface	No supported protocol interface
	Resources	Refer to Appendix A. Resource Utilization.
Design Tool Support	Lattice Implementation	IP v1.2.1 – Lattice Radiant Software 2026.1.1, Lattice Propel™ Builder 2026.1.1
	Synthesis	Synopsys® Synplify Pro®
	Simulation	QuestaSim

Note:

1. In some instances, the IP may be updated without changes to the user guide. This user guide may reflect an earlier IP version but remains fully compatible with the later IP version. Refer to the IP Release Notes for the latest updates.
2. The VTM IP does not support the LN2-CT-20ES device, but it does support the LN2-CT-20ES1 device.

1.3. IP Support Summary

Table 1.2. VTM IP Support Readiness

Device Family	IP	Radiant Timing Model
Lattice Mach-N2	VTM	Preliminary
Lattice Certus-N2 (except LN2-CT-20ES)	VTM	Preliminary
Lattice Avant-AT-E (LAV-AT-E30, LAV-AT-E50, and LAV-AT-E70)	VTM	Preliminary
Lattice Avant-AT-G (LAV-AT-G30, LAV-AT-G50, and LAV-AT-G70)		
Lattice Avant-AT-X (LAV-AT-X30, LAV-AT-X50, and LAV-AT-X70)		

1.4. Features

Key features of the VTM IP include:

- Up to six on-die temperature sensors
- Two on-die voltage sensors for power-supply voltages
- Static enable or disable of each individual sensor
- Sensor updates at fixed sample rates
- Temperature and voltage alarms
  Each sensor supports configurable upper and lower threshold values with hysteresis.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

1.5. Licensing and Ordering Information

The VTM IP is provided at no additional cost with the Lattice Radiant software.

1.6. Naming Conventions

1.6.1. Nomenclature

The nomenclature used in this document is based on Verilog HDL.

1.6.2. Signal Names

- *_n* are active-low signals, asserted when the value is logic 0.
- *_i* are input signals.
- *_o* are output signals.
- *_io* are bi-directional input/output signals.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

2. Functional Description

2.1. IP Architecture Overview

The VTM IP contains separate interfaces for monitoring current sensor values and detecting and clearing alarms. Each sensor is named for the supply rail it monitors or the die region in which it is physically placed. The two voltage sensors, VCC and VCCAUX, monitor the core VCC and auxiliary VCCAUX supply rails, respectively. The six temperature sensors are identified by location: TEMP_SYSCONFIG is placed in the sysCONFIG region adjacent to the Security Engine, while TEMP_IO3, TEMP_IO8, TEMP_IO9, TEMP_IO10, and TEMP_IO11 are placed in I/O banks 3, 8, 9, 10, and 11 within the HPIO sectors to monitor the temperature local to those banks. The IOn suffix denotes the number of the I/O bank in which the corresponding sensor is located.

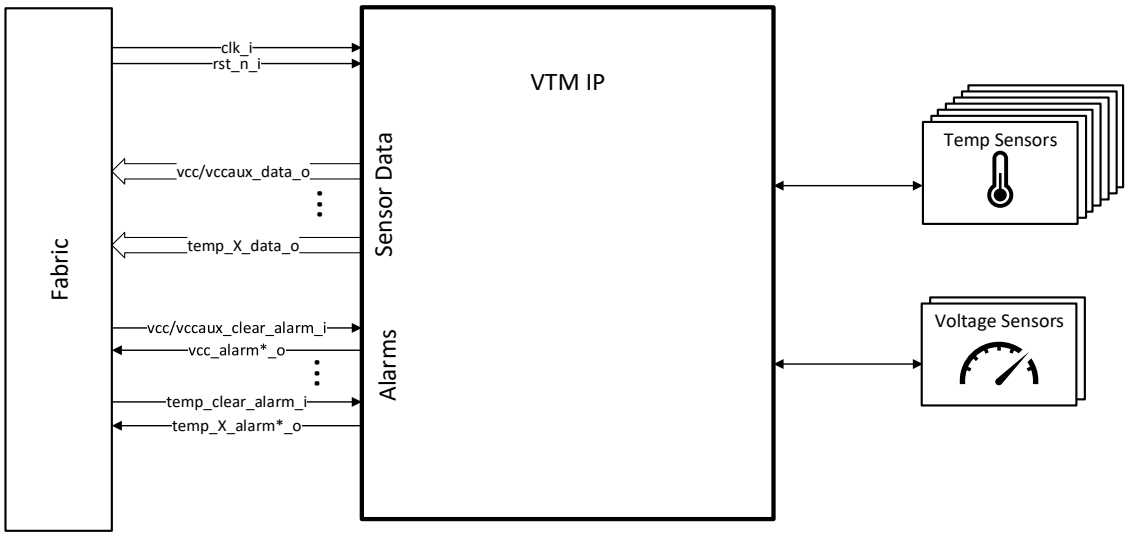


Figure 2.1. VTM IP Block Diagram

2.2. Clocking

2.2.1. Clocking Overview

The VTM IP uses a single clock domain (clk_i). The frequency of this clock is provided by the corresponding parameter to the IP for sensor update frequency calculations.

2.3. Reset

2.3.1. Reset Overview

The VTM IP uses a single reset domain. rst_n_i is an active-low asynchronous reset input. Reset assertion is asynchronous, while reset release occurs on the next rising edge of clk_i. Reset synchronization and distribution are expected to be handled at the system level outside this IP.

2.4. Sensor Data

The VTM IP sensors are available to you through the sensor data ports. The update rate of the sensor is consistent to allow fixed-time filters on the sensor values. The sensor data is a fixed-point binary value as described below.

If a sensor is disabled in the IP parameters, its output ports are removed from the RTL module interface.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Each sensor has a set of output ports, such as xxx_valid_o, xxx_update_o, and xxx_data_o[11:0]. When the FPGA is configured, each sensor's xxx_valid_o signal is deasserted for an initialization period and then asserted while the output data is valid. If an internal fault is detected, then xxx_valid_o deasserts. After the initialization period, each sensor's output data is updated periodically and the xxx_update_o signal pulses for one clock cycle when the data is updated. This can be used to write the data into a FIFO or trigger an interrupt in a soft CPU, for example.

Sensor xxx_data_o[11:0] output data is two's complement fixed-point binary. The upper bit is a sign bit, followed by integer bits, followed by fractional bits. For example, the VCC output value uses Q2.9 format, which means 1 sign, 2 integer bits, and 9 fractional bits. In this format, the binary value `001001100000` represents 1.1875 V, and breaks down like this:

`0 01 001100000 -> 0` sign, `01` int, `001100000` fraction.

The `0` sign bit means positive, `01` int is 2^0 which equals 1, and `001100000` fraction is $2^{-3} + 2^{-4}$, or 0.1875.

A negative value example is `111110010000`, which represents –0.21875 V.

Negate (2's complement) `111110010000` to get the positive number `= (1)00001110000`

`(1)00001110000 -> 1` sign bit means negative, `00` int, `001110000` fraction = $2^{-3} + 2^{-4} + 2^{-5}$ = 0.21875.

The formats and resolution of each sensor output type are shown in Table 2.1 and Table 2.2.

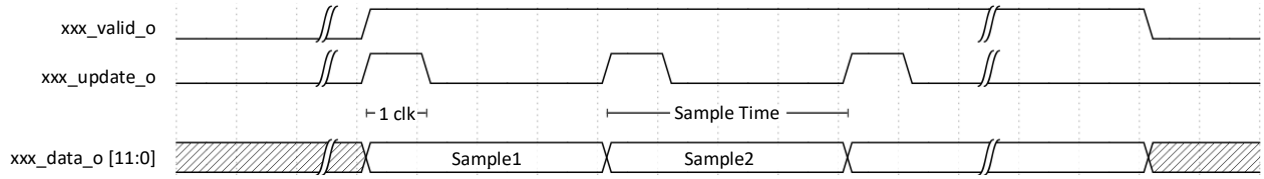


Figure 2.2. Sensor Signals

Table 2.1. Sensor Data Sample Rates and Format

Sensor	Sample Time	Sample Frequency	Output Format
VCC	333 µs	3 kHz	Q2.9: 1 sign, 2 integer, 9 fractional bits
VCCAUX	333 µs	3 kHz	Q2.9: 1 sign, 2 integer, 9 fractional bits
TEMP_X	10 ms	100 Hz	Q8.3: 1 sign, 8 integer, 3 fractional bits

The accuracy of the voltage and temperature sensors is determined by the hardware capabilities. Some of this accuracy is compromised during the conversion between data formats. To minimize this loss, higher sampling and output resolutions are used. See Table 2.2.

Table 2.2. Sensor Accuracy and Resolution

Sensor	Sensor Accuracy	Sample Resolution	Output Resolution
VCC	14 mV	6 mV	2 mV
VCCAUX	28 mV	12 mV	4 mV
TEMP_X	3.0 °C	0.9 °C	0.125 °C

2.5. Alarms

Alarm outputs are asserted when an alarm triggers and stay asserted until you pulse the xxx_clear_alarm_i port for one clock cycle (Figure 2.3).

Alarms are set by crossing the threshold specified by xxx_ALARM_HIGH/LOW parameters. The xxx_ALARM_HIGH parameter specifies the upper-level voltage or temperature at which an alarm signals. The xxx_ALARM_LOW parameter specifies the lower-level voltage or temperature at which an alarm signals.

The alarms also include a hysteresis parameter to determine when the alarm can be triggered again. If a HIGH alarm is triggered, it is not retriggered until the level drops below the alarm level by the amount given by the HIGH hysteresis value. If the LOW alarm is triggered, it is not retriggered until the level rises above the alarm level by the amount given

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

by the LOW hysteresis value. For example, if VCC_ALARM_HIGH is 1.0 V and VCC_HYSTERESIS_HIGH is 0.1 V, then the alarm triggers when VCC rises above 1.0 V and does not trigger again until the VCC level drops below 0.9 V and then rises above 1.0 V again. Note that the output xxx_alarm_high_o is only cleared due to xxx_clear_alarm_i, and not due to values of the sensor level.

By default, the hysteresis value is ±0.1 V offset from the ALARM level for voltages and ±6 °C offset from the ALARM level for temperature. This default can be overridden by xxx_HYSTERESIS_HIGH or xxx_HYSTERESIS_LOW parameters.

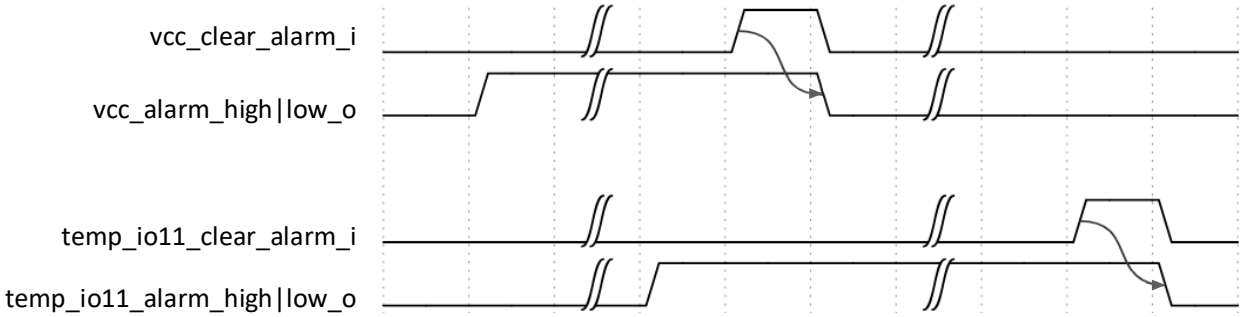


Figure 2.3. Alarm Signals

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

3. IP Parameter Description

The IP attributes shown in Table 3.1 are available to configure the IP for your use case.

Table 3.1. General Attributes

Attribute	Value	Default	Note
ALARM_SUPPORT	Enabled, Disabled	Disabled	Disabling this attribute removes the alarm port.
CLK_FREQUENCY	50–200 MHz	50 MHz	This attribute is used to calculate the timing of sensor samples.
MONITOR_VCC	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_VCCAUX	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_TEMP_SYSCONFIG	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_TEMP_IO3	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_TEMP_IO8	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_TEMP_IO9	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_TEMP_IO10	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
MONITOR_TEMP_IO11	Enabled, Disabled	Enabled	Disabling this attribute removes the related sensor port.
VCC_HYSTERESIS_LOW	0.05 V, 0.1 V, 0.2 V, 0.5 V	0.1 V	Hysteresis steps up for VCC low alarm.
VCC_HYSTERESIS_HIGH	0.05 V, 0.1 V, 0.2 V, 0.5 V	0.1 V	Hysteresis steps down for VCC high alarm.
VCCAUX_HYSTERESIS_HIGH	0.1 V, 0.2 V, 0.4 V, 1.0 V	0.1 V	Hysteresis steps down for VCCAUX high alarm.
VCCAUX_HYSTERESIS_LOW	0.1 V, 0.2 V, 0.4 V, 1.0 V	0.1 V	Hysteresis steps up for VCCAUX low alarm.
TEMP_HYSTERESIS_HIGH	2 °C, 4 °C, 6 °C, 10 °C	6 °C	Hysteresis steps down for temperature high alarms.
TEMP_HYSTERESIS_LOW	2 °C, 4 °C, 6 °C, 10 °C	6 °C	Hysteresis steps up for temperature low alarms.
VCC_ALARM_HIGH	–0.1 to 1.0 V	0.1 V	Unused if ALARM_SUPPORT is disabled.
VCC_ALARM_LOW	–0.1 to 1.0 V	0.1 V	Unused if ALARM_SUPPORT is disabled.
VCCAUX_ALARM_HIGH	–0.2 to 2.0 V	0.1 V	Unused if ALARM_SUPPORT is disabled.
VCCAUX_ALARM_LOW	–0.2 to 2.0 V	0.1 V	Unused if ALARM_SUPPORT is disabled.
TEMP_SYSCONFIG_ALARM_HIGH	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_SYSCONFIG_ALARM_LOW	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO3_ALARM_HIGH	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO3_ALARM_LOW	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO8_ALARM_HIGH	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO8_ALARM_LOW	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO9_ALARM_HIGH	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO9_ALARM_LOW	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO10_ALARM_HIGH	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO10_ALARM_LOW	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO11_ALARM_HIGH	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.
TEMP_IO11_ALARM_LOW	–40.0 to 125.0 °C	6 °C	Unused if ALARM_SUPPORT is disabled.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

4. Signal Description

This section describes the VTM IP ports.

Table 4.1. I/O Port List

Port	Width	Direction	Description
Clock and Reset			
clk_i	1	input	System clock, 50 to 200 MHz
rst_n_i	1	input	System asynchronous reset, active low
Sensor Data			
vcc_valid_o	1	output	VCC sensor data valid
vcc_update_o	1	output	VCC sensor data updated
vcc_data_o	12	output	VCC sensor data
vccaux_valid_o	1	output	VCCAUX sensor data valid
vccaux_update_o	1	output	VCCAUX sensor data updated
vccaux_data_o	12	output	VCCAUX sensor data
temp_sysconfig_valid_o	1	output	TEMP_SYSCONFIG sensor data valid
temp_sysconfig_update_o	1	output	TEMP_SYSCONFIG sensor data updated
temp_sysconfig_data_o	12	output	TEMP_SYSCONFIG sensor data
temp_io3_valid_o	1	output	TEMP_IO3 sensor data valid
temp_io3_update_o	1	output	TEMP_IO3 sensor data updated
temp_io3_data_o	12	output	TEMP_IO3 sensor data
temp_io8_valid_o	1	output	TEMP_IO8 sensor data valid
temp_io8_update_o	1	output	TEMP_IO8 sensor data updated
temp_io8_data_o	12	output	TEMP_IO8 sensor data
temp_io9_valid_o	1	output	TEMP_IO9 sensor data valid
temp_io9_update_o	1	output	TEMP_IO9 sensor data updated
temp_io9_data_o	12	output	TEMP_IO9 sensor data
temp_io10_valid_o	1	output	TEMP_IO10 sensor data valid
temp_io10_update_o	1	output	TEMP_IO10 sensor data updated
temp_io10_data_o	12	output	TEMP_IO10 sensor data
temp_io11_valid_o	1	output	TEMP_IO11 sensor data valid
temp_io11_update_o	1	output	TEMP_IO11 sensor data updated
temp_io11_data_o	12	output	TEMP_IO11 sensor data
Alarms (the ports are removed if ALARM_SUPPORT == DISABLED)			
vcc_clear_alarm_i	1	input	Clear VCC alarm
vcc_alarm_high_o	1	output	VCC high alarm
vcc_alarm_low_o	1	output	VCC low alarm
vccaux_clear_alarm_i	1	input	Clear VCCAUX alarm
vccaux_alarm_high_o	1	output	VCCAUX high alarm
vccaux_alarm_low_o	1	output	VCCAUX low alarm
temp_sysconfig_clear_alarm_i	1	input	Clear TEMP_SYSCONFIG alarm
temp_sysconfig_alarm_high_o	1	output	TEMP_SYSCONFIG high alarm
temp_sysconfig_alarm_low_o	1	output	TEMP_SYSCONFIG low alarm
temp_io3_clear_alarm_i	1	input	Clear TEMP_IO3 alarm
temp_io3_alarm_high_o	1	output	TEMP_IO3 high alarm
temp_io3_alarm_low_o	1	output	TEMP_IO3 low alarm
temp_io8_clear_alarm_i	1	input	Clear TEMP_IO8 alarm
temp_io8_alarm_high_o	1	output	TEMP_IO8 high alarm
temp_io8_alarm_low_o	1	output	TEMP_IO8 low alarm

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Port	Width	Direction	Description
temp_io9_clear_alarm_i	1	input	Clear TEMP_IO9 alarm
temp_io9_alarm_high_o	1	output	TEMP_IO9 high alarm
temp_io9_alarm_low_o	1	output	TEMP_IO9 low alarm
temp_io10_clear_alarm_i	1	input	Clear TEMP_IO10 alarm
temp_io10_alarm_high_o	1	output	TEMP_IO10 high alarm
temp_io10_alarm_low_o	1	output	TEMP_IO10 low alarm
temp_io11_clear_alarm_i	1	input	Clear TEMP_IO11 alarm
temp_io11_alarm_high_o	1	output	TEMP_IO11 high alarm
temp_io11_alarm_low_o	1	output	TEMP_IO11 low alarm

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

5. Designing with the IP

This section describes how to generate the IP using the Lattice Radiant software and how to run simulation and synthesis. For more details on the Lattice Radiant software, refer to the Lattice Radiant Software User Guide.

5.1. Generating and Instantiating the IP

You can use the Lattice Radiant software to generate IP modules and integrate them into a device architecture. The steps below describe how to generate the VTM IP in the Lattice Radiant software.

To generate the VTM IP:

1. Create a new Lattice Radiant software project or open an existing project.
2. In the **IP Catalog** tab, double-click **Voltage Temperature Monitor** under the **Architecture_Modules** category. The **Module/IP Block Wizard** opens, as shown in Figure 5.1. Enter values in the **Component name** and the **Create in** fields and click **Next**.

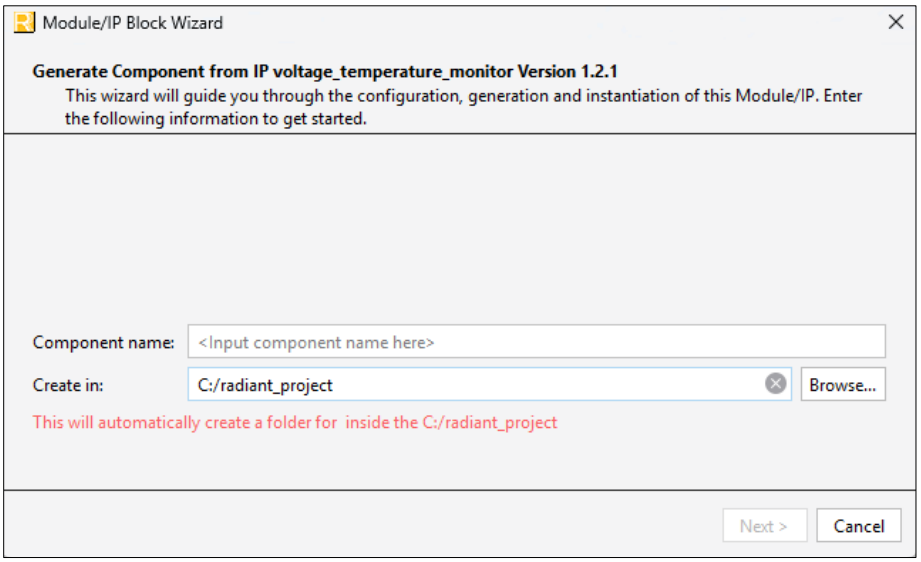


Figure 5.1. Module/IP Block Wizard

3. In the next **Module/IP Block Wizard** window, customize the selected VTM IP using drop-down lists and check boxes. Figure 5.2 shows an example configuration of the VTM IP. For details on the configuration options, refer to the IP Parameter Description section.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

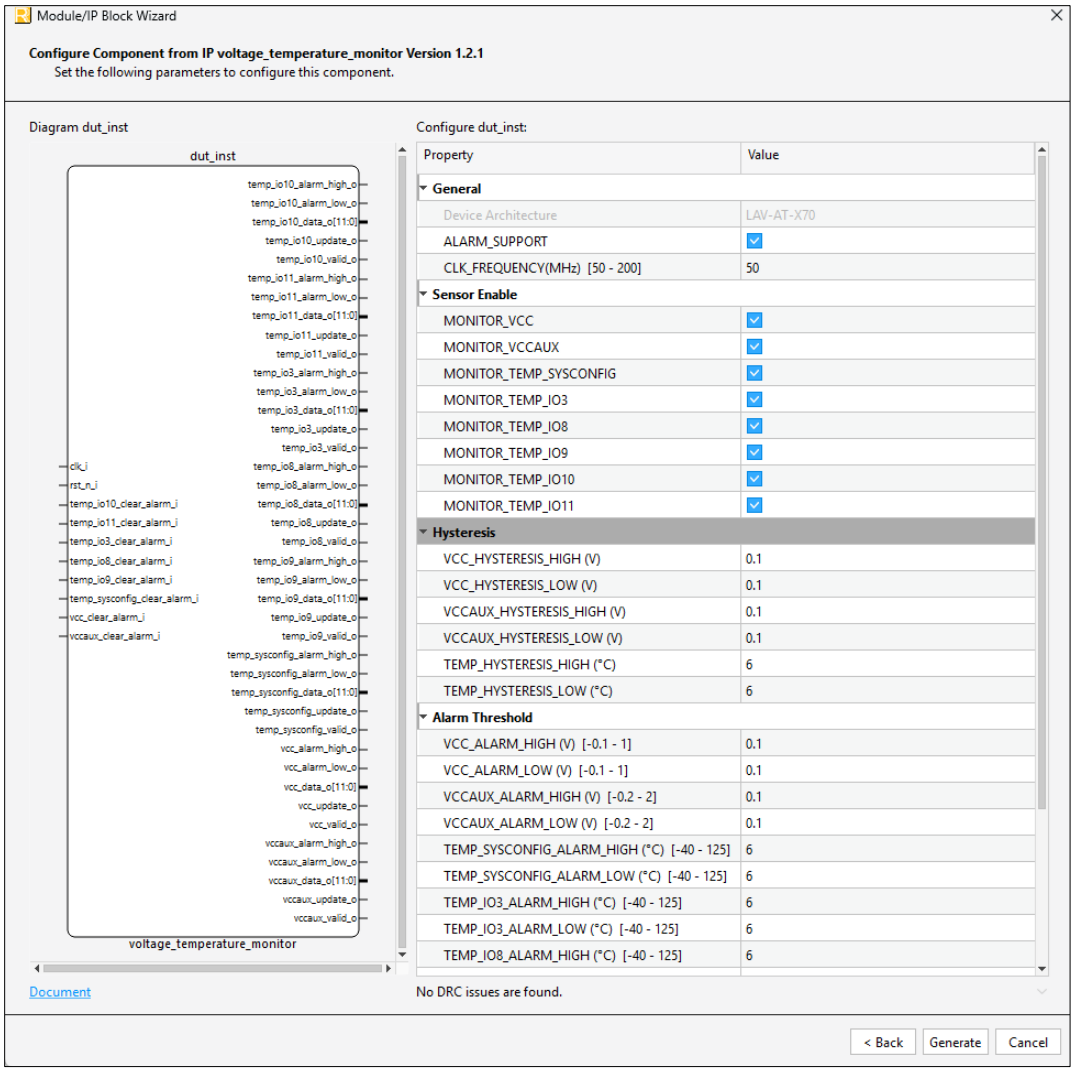


Figure 5.2. IP Configuration

4. Click **Generate**. The **Check Generated Result** dialog box opens, showing design block messages and results (Figure 5.3).

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

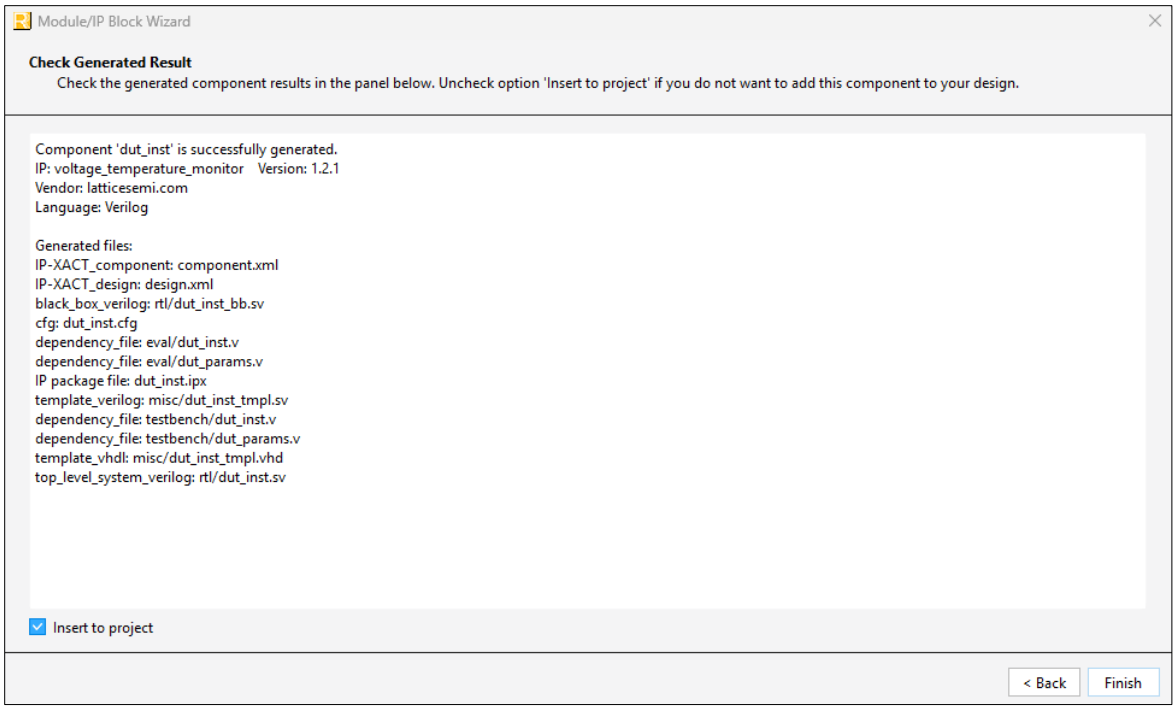


Figure 5.3. Check Generated Result

5. Click **Finish**. All the generated files are placed under the directory paths in the **Create in** and the **Component name** fields shown in Figure 5.1.

5.1.1. Generated Files and File Structure

The generated VTM IP package includes the closed-box (<Component name>_bb.v) and instance templates (<Component name>_tmpl.v/vhd) that can be used to instantiate the IP in a top-level design. An example RTL top-level reference source file (<Component name>.v) that can be used as an instantiation template for the module is also provided. You may also use this top-level reference as the starting template for the top-level of your complete design. The generated files are listed in Table 5.1.

Table 5.1. Generated File List

File	Description
<Component name>.ipx	This file contains the information on the files associated with the generated IP.
<Component name>.cfg	This file contains the parameter values used in IP configuration.
component.xml	Contains the ipxact: component information of the IP.
design.xml	Documents the configuration parameters of the IP in the IP-XACT 2014 format.
rtl/<Component name>.v	This file provides an example RTL top file that instantiates the module.
rtl/<Component name>_bb.v	This file provides the synthesis closed-box.
misc/<Component name>_tmpl.v misc/<Component name>_tmpl.vhd	These files provide instance templates for the module.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

5.2. Design Implementation

Completing your design includes additional steps to specify analog properties, pin assignments, and timing and physical constraints. You can add and edit the constraints using the Device Constraint Editor or by manually creating a Physical Design Constraint (PDC) file.

Post-synthesis constraint files (.pdc) include both timing and non-timing constraint .pdc source files for storing logical timing or physical constraints. Constraints that are added using the Device Constraint Editor are saved to the active .pdc file. The active post-synthesis design constraint file is then used as input for post-synthesis processes.

Refer to the relevant sections in the Lattice Radiant Software User Guide for more information on how to create or edit constraints and how to use the Device Constraint Editor.

5.3. Timing and Physical Constraint

The following line is the minimum constraint requirement of the IP to be added to the .pdc file to generate a 100 MHz clock source for the IP:

```
create_clock -name {clk_i} -period 10 [get_ports clk_i]
```

For the LN2-MH-20ES1 device, an additional constraint is needed to generate the bitstream:

```
ldc_set_sysconfig {CONFIGURATION=CFGUFM}
```

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

6. Known Issues

- The RISC-V core reads the VCC or VCCAUX voltage sensor approximately once every 797 µs. If the sensor refreshes faster than the RISC-V core can read it, the RISC-V core can catch a reading mid-update and briefly see a value that trips the high and low voltage alarms at the same time.
  There is also a secondary effect. When this situation occurs, the vcc_clear_alarm_i or vccaux_clear_alarm_i signal does not take effect on the next update. So the alarm stays stuck and does not clear.
  To prevent both problems, use the following procedure:
  a. After issuing the alarm vcc_clear_alarm_i or vccaux_clear_alarm_i command, wait for the next two updates.
  b. If vcc_data_o or vccaux_data_o differs from its value at the time the alarm is cleared, you must clear the alarm again.
- In the Lattice Radiant software flow, a place-and-route error may occur if the reginit.bin file is missing. To resolve this issue, ensure that reginit.bin is placed in the impl_1 folder (Figure 6.1) or the corresponding implementation folder used by your project.

```
ERROR <35901012> - synthesis: ../vtm_hw/rtl/vtm_hw.sv(12349): cannot open file reginit.bin. VERI-1012
```

Figure 6.1. synthesis.log in impl_1 Folder

The content of reginit.bin is shown below.

```
00000000000000000000000000000000
00000000000000000000000000000000
00000000000000000000000000000000
```

Appendix A. Resource Utilization

Table A.1 shows a sample resource utilization of the VTM IP on a LAV-AT-X70-1LFG676C device.

Table A.1. Resource Utilization

IP Configuration	LUTs	Registers	EBR	ASIC Component	Target Device	Synthesis Tool
Default	2,385	1,857	10	1	LAV-AT-X70-1LFG676C	Synplify Pro

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

References

- Lattice Mach-N2 Family Devices web page
- Lattice Certus-N2 Family Devices web page
- Lattice Avant-E Family Devices web page
- Lattice Avant-G Family Devices web page
- Lattice Avant-X Family Devices web page
- Voltage Temperature Monitor IP Release Notes (FPGA-RN-02114)
- Lattice Radiant FPGA design software
- Lattice Propel Design Environment web page
- Lattice Radiant Timing Constraints Methodology (FPGA-AN-02059)
- Lattice Insights for Lattice Semiconductor training courses and learning plans

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Technical Support Assistance

Submit a technical support case through www.latticesemi.com/techsupport.

For frequently asked questions, please refer to the Lattice Answer Database at www.latticesemi.com/Support/AnswerDatabase.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Revision History

Note: In some instances, the IP may be updated without changes to the user guide. The user guide may reflect an earlier IP version but remains fully compatible with the later IP version. Refer to the IP Release Notes for the latest updates.

Revision 1.1, IP v1.2.1, October 2026

Section	Change Summary

Introduction	• In Table 1.1. Summary of the Voltage Temperature Monitor IP:
	  • added *Lattice Mach-N2* to Supported Devices;
	  • specified supported Lattice Avant-AT-E devices (LAV-AT-E30, LAV-AT-E50, and LAV-AT-E70), Lattice Avant-AT-G devices (*LAV-AT-G30*, *LAV-AT-G50*, and *LAV-AT-G70*), and Lattice Avant-AT-X devices (*LAV-AT-X30*, *LAV-AT-X50*, and *LAV-AT-X70*);
	  • for Lattice Implementation, updated the VTM IP version from *v1.2.0* to *v1.2.1*, Lattice Radiant Software version from *2026.1* to *2026.1.1*, and Lattice Propel Builder version from *2026.1* to *2026.1.1*;
	  • changed Supported User Interface from *N/A* to *No supported protocol interface*;
	  • added the following table note, *The VTM IP does not support the LN2-CT-20ES device, but it does support the LN2-CT-20ES1 device*.
	• In Table 1.2. VTM IP Support Readiness:
	  • added *Lattice Mach-N2* to Device Family;
	  • specified supported Lattice Avant-AT-E devices (LAV-AT-E30, LAV-AT-E50, and LAV-AT-E70), Lattice Avant-AT-G devices (*LAV-AT-G30*, *LAV-AT-G50*, and *LAV-AT-G70*), and Lattice Avant-AT-X devices (*LAV-AT-X30*, *LAV-AT-X50*, and *LAV-AT-X70*).

Functional Description	• Added the following paragraph to the IP Architecture Overview section: *Each sensor is named for the supply rail it monitors or the die region in which it is physically placed. The two voltage sensors, VCC and VCCAUX, monitor the core VCC and auxiliary VCCAUX supply rails, respectively. The six temperature sensors are identified by location: TEMP_SYSCONFIG is placed in the sysCONFIG region adjacent to the Security Engine, while TEMP_IO3, TEMP_IO8, TEMP_IO9, TEMP_IO10, and TEMP_IO11 are placed in I/O banks 3, 8, 9, 10, and 11 within the HPIO sectors to monitor the temperature local to those banks. The IOn suffix denotes the number of the I/O bank in which the corresponding sensor is located.* • In the Reset Overview section, updated the description of reset assertion and release behavior.
IP Parameter Description	In Table 3.1. General Attributes: • added the Default column; • updated the value ranges of the following attributes to the current values: VCCAUX_HYSTERESIS_HIGH, VCCAUX_HYSTERESIS_LOW, VCC_ALARM_HIGH, VCC_ALARM_LOW, VCCAUX_ALARM_HIGH, VCCAUX_ALARM_LOW, TEMP_SYSCONFIG_ALARM_HIGH, TEMP_SYSCONFIG_ALARM_LOW, TEMP_IO3_ALARM_HIGH, TEMP_IO3_ALARM_LOW, TEMP_IO8_ALARM_HIGH, TEMP_IO8_ALARM_LOW, TEMP_IO9_ALARM_HIGH, TEMP_IO9_ALARM_LOW, TEMP_IO10_ALARM_HIGH,

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.

Section	Change Summary
	TEMP_IO10_ALARM_LOW, TEMP_IO11_ALARM_HIGH, TEMP_IO11_ALARM_LOW; • removed default value descriptions from the Note column for the following attributes: VCC_HYSTERESIS_LOW, VCC_HYSTERESIS_HIGH, VCCAUX_HYSTERESIS_HIGH, VCCAUX_HYSTERESIS_LOW, TEMP_HYSTERESIS_HIGH, TEMP_HYSTERESIS_LOW.
Designing with the IP	• Updated Figure 5.1. Module/IP Block Wizard, Figure 5.2. IP Configuration, and Figure 5.3. Check Generated Result. • In the Timing and Physical Constraint section, added the following statement: *For the LN2-MH-20ES1 device, an additional constraint is needed to generate the bitstream: ldc_set_sysconfig {CONFIGURATION=CFGUFM}.*
Known Issues	Added this section.
References	Updated this section.

Revision 1.0, IP v1.2.0, June 2026

Section	Change Summary
All	Initial release.

© 2026 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal.
All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.



www.latticesemi.com